
Installation & Operating Instructions

#Robinhood ironing centre

Maintenance & Warranty

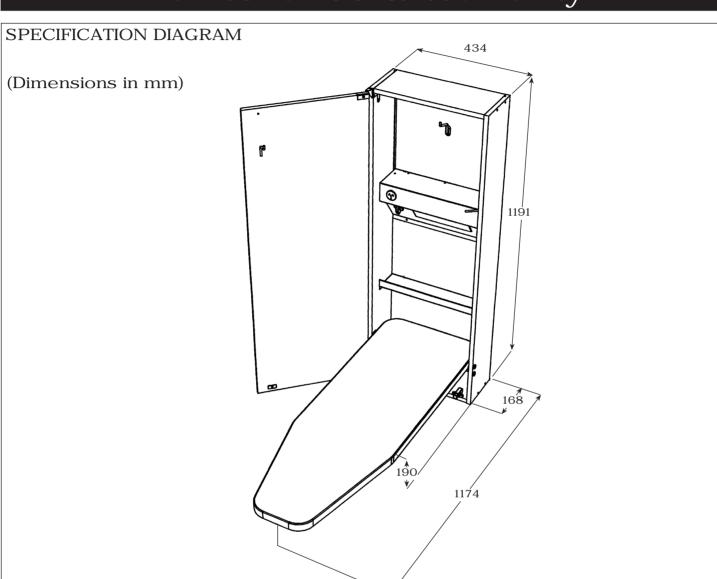

PLEASE READ THE ENTIRE INSTRUCTION BEFORE INSTALLING THE IRONING CENTRE

Robinson Industries Ltd, P O Box 51201, Pakuranga, Auckland, New Zealand Ph (09)273 9988, Fax (09) 273 9987
FREEPHONE 0800 760 667 • FREEFAX 0800 276 246
www.robinhood.co.nz

FOR SERVICE OR ADVICE IN AUSTRALIA CONTACT Robinhood Pty Ltd A.C.N. 079 616 550 Unit 3, 5 Faigh Street, Mulgrave, Victoria 3170. Tel 1800 648 556 Fax 1800 628 577

For details of your nearest Service Agent please contact:

Victoria, J.A. Appliances Tel (03) 9384 1077 Fax (03) 9384 1088 New South Wales, All General Whitegoods Service Tel (02) 9756 1511 Fax (02) 9756 1091 Queensland, Graham Belby Electrical Service Pty Ltd Tel (07) 3279 2888 Fax (07) 3279 2874 South Australia, Ivesons Electrical Tel (08) 8297 2033 Fax (08) 8297 7881 Western Australia, J.H. Wilberforce Tel (08) 9340 6222 Fax (08) 9340 6262 Tasmania, BSH Electrical Tel (03) 6231 0255 Fax (03) 6334 1044

Installation Instructions


Step 1

Preliminary Instructions

Ascertain from the user the DESIRED HEIGHT of the Ironing Board when in the opened position. We recommend an ironing surface height of 830mm above the floor for an average adult. To obtain this surface height, the bottom external edge of the cabinet must be 640mm above the floor.

Step 2

Mounting Options

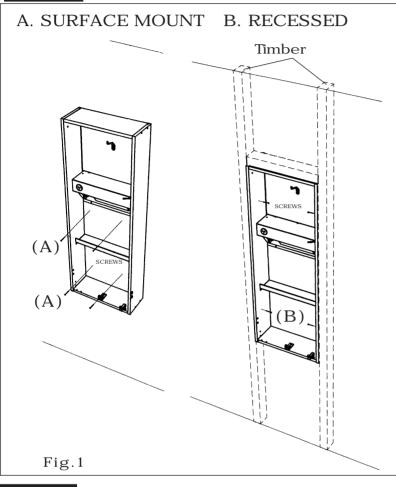

The ROBINHOOD Ironing Centre can be mounted in two ways (Fig1) a) Surface Mount - make sure solid timber studs or mounting points are in a suitable position for the mounting of the Ironing Centre. Drill and fasten through the back of the wooden panel only to the Mounting Points (A) with the 4 screws supplied (it may be necessary to purchase different length screws for correct fitting, or use wall anchors if unit is to be mounted to a solid wall).

b) Recessed Mount - cut the opening in wall by reference to the Specification Diagram, allowing for the cut out when being inserted into the wall. Make sure solid timber studs or mounting points are positioned flush with each side of the wall cut out opening, drill and fasten through the sides of the cabinet into the solid studs (B) with the 4 screws supplied. To seal gaps between opening of wall and cabinet, use skirting available from your local hardware store

NOTE: It is important that the Ironing Centre be installed vertically in the wall, check with a spirit level on the front and side faces of the unit.)

Step 3

Connecting the Centre to Electric Power


The Ironing Centre's 3 pin plug and lead can be easily plugged into the nearest wall socket, or can be hard wired by an electrician.

Step 4

Ironing Centre Assembly Instructions

NOTE: DOOR MAY BE HINGED TO LEFT OR RIGHT SIDE OF CABINET (Depending on user's preference)

ALL ILLUSTRATIONS SHOWN ARE FOR LEFT SIDE HINGING

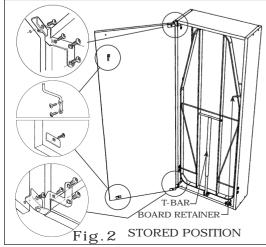


Locate and fix hinge brackets to cabinet with 2 large screws provided.


Fix magnetic door catch to the bottom of the cabinet on the opposite side to the door hinges (Fig. 3) with the screws provided into the pre drilled holes.

Fix door to top and bottom brackets as shown, (Fig.2) with screws provided into pre-drilled holes. To ensure door alignment, adjust top or bottom hinges. Lock hinges in place with 3rd screw provided.

Fix door hook in desired position using 10mm long self tapping screws provided. Check that hook is clear of ironing board in closed position.

Fix magnetic catch plate to bottom of door with countersunk screw provided into pre-drilled hole. Check for correct function and adjust door catch if necessary.

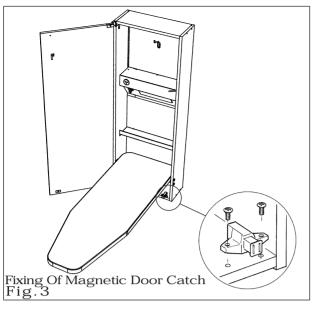

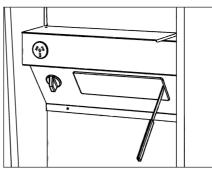


Lamp Replacement

- 1) Disconnect Ironing Centre from power supply. (Ensure the power is switched off)
- 2)Insert small screwdriver or slim knife as shown, ease catch to side and slip out diffuser.
- 3) Replace lamp (40 watt max.)
- 4) Slide diffuser back into aperture and "click" into place. (Turn power back on)

Operating Instructions

Opening Ironing Step 1

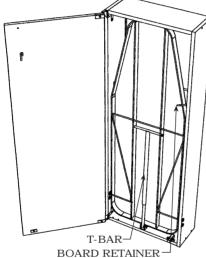

To open Ironing Board, lift retainer and pull down as shown in diagrams.

To store Ironing Board, follow the steps in reverse order.

Tilting angle of board can be adjusted by turning the T-Bar clockwise or anticlockwise

To switch power on to

the socket, rotate the knob in a clockwise direction to the time required for the operation. To switch off power to the socket rotate the timer in a anticlockwise direction until the bell sounds.



Step 2

Stored

Ironing Centre Features
The Ironing Centre's 3 pin plug and lead can be easily plugged into the nearest wall socket, or can be hard wired by an electrician.

Robinhood Ironing Centre Electrical

- One piece full size board
- Auto timer and built in light
- Built in power outlet
- Magnetic door catch
- Heat resistant shelf for iron storage
- Utility shelf for spray bottle storage
- Right or left hand opening door
- Foam underlay and heat resistant cover Board level adjustable
- 230/240 volt outlet and 40 watt light
- Surface or recess mountable
- Board level adjustable

Robinhood Ironing Centre - Manual

- One piece full size board
- Foam underlay and heat resistant cover
- Magnetic door catch
- Utility shelf for spray bottle storage
- Right or left opening door
- Heat resistant shelf for ironing storage
- Surface or recess mountable

Maintenance

YOUR IRONING CENTRE BOARD IS NOW FITTED WITH A HEAT RESISTANT COVER. TO AVOID DAMAGE TO THE MATERIAL

PLEASE DO NOT WASH THE COVER

The laminated surface of the unit may be wiped clean with non abrasive with household cleaner.

WARNING

1) Do not place EXCESSIVE WEIGHT (weight should not exceed 15kg) on the Ironing Board when opened as it is designed to accept normal ironing use only.

2) Iron not to exceed 1340 Watt.

- 3) Allow iron to cool down before storing in the cabinet.
- 4) Empty water reservoir and turn off steam action prior to storing iron on the hook.

5) Turn power off when not in use.

- 6) Do not remove the board retainer
- 7) The appliance is supplied with an approved power cable which must not be changed. If the supplied cord of this equipment is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.
- 8) Upon installation, ensure that the socket outlet to which the Ironing Centre is connected remains easily accessible.

<u>Warranty</u>

The Ironing Centre and its components are guaranteed against manufacturing defects and faulty materials for a period of 12 months from date of original purchase. Should any fault in manufacture or materials be found, the purchaser should immediately communicate with the nearest Robinhood supplier or agency. In the event of any defect being disclosed in any part manufactured or supplied by the Manufacturer, the Manufacturer will repair free of charge such defective part subject only to the conditions of guarantee set out below. This product guarantee is made between the Manufacturer and all owners of the goods, provided only that when making a claim within the guarantee period, the present owner does produce this guarantee card and the purchase invoice.

Conditions of all guarantees
1. This product guarantee only applies to the parts and components as installed in the Ironing Centre. The guarantee becomes invalid if such parts or components are removed and used in any other products or for any other purposes.

2. Upon examination, the Manufacturer or his agent must see that the defect has not been caused by misuse, wear and tear, dirt, fire or accident damage.

3. The Manufacturer is not liable for labour or for any loss or expense arising from a breakdown of any parts or for any consequential damages, direct or indirect or for any repairs made or attempted to be made, without the written sanction of the Manufacturer. Distributors or employees are not authorised to give any warranty or make any representation whatsoever, verbal or otherwise, other than those contained in the above guarantee, purchasers should note that registration numbers should not be removed or defaced.

NOTE: A charge can be made for a serviceman's visit if it is found that the Ironing Centre is functioning correctly. This charge even applies during the warranty period.

- 4. When making claim within the guarantee period, the owner must contact a Robinhood Supplier or Agent and have the attached guarantee record duly completed together with the original purchase invoice for inspection by our serviceman when he calls.
- 5. To abide by the guarantee please complete this section below and keep it with your purchase invoice.

GUARANTEE RECORD OF ROBINHOOD IRONING CENTRE

Name of Purchaser		
Address		
Date of Purchase	Model No.	Serial No
Date Stamp:		
Name of Supplier		
Address		
Invoice No.		