

Automatic Snooze Function

1. While the alarm is sounding, press the SNZ button to activate the 'snooze' function. The 'Bell' symbol flashes to confirm this.
2. This then moves the alarm back by 8 minutes and the alarm will restart when 8 minutes have elapsed. The 'snooze' function can be interrupted by pressing 'MODE' or the Up/Down arrows or repeated up to a few times.


Temperature Display

1. Press the 'Down' arrow to select a reading in either Celsius or Fahrenheit.

Warning Indicators

1. 'O-Ld' is displayed when the weight exceeds the scale capacity which is 3000g / 105.8 fl.oz / 6lb: 9.8oz / 3000ml. Remove the load immediately to prevent damage to the scale.
2. Batteries should be replaced when the clock display dims or the battery symbol appears on the scale readout. When the batteries are completely exhausted, the scale display will show 'LO' and then shutdown. Always use fresh, new, good quality alkaline batteries, making sure the positive (+) and negative (-) terminals are correctly positioned when installed.

Use as a Display Clock

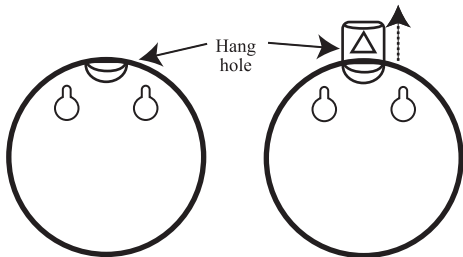

1. The scale may be mounted or hung and used as a decorative wall clock and is fitted with 2 'keyhole' slots and a hang hole for this purpose.
2. To use the hang hole, wedge your thumbnail in the recess at the top and slide the hang hole tab out.

Caring for your Scale

1. Clean the scale with a slightly damp cloth. Do not use a corrosive cleaner.
2. The scale is not waterproof. Do not immerse directly into water.
3. Do not attempt to dismantle the scale. It does not contain parts that may be repaired by the user.
4. Do not subject the scale to extreme temperatures.
5. Remove the batteries if the scale is not being used for a long period of time.

Specifications

Model 1330
Capacity: 3000g / 105.8 fl.oz / 6lb: 9.8oz / 3000ml
Graduation: 1g / 0.1 fl.oz / 0.1oz / 1ml
Tare weigh function
Measures water volume in ml or fl.oz
Clock with alarm
Humidity reading
Room temperature display (Fahrenheit/ Celsius)
Tempered glass platform
Touch sensors
Auto Off
LCD with backlight on weight display only
Battery: 3 x AAA Alkaline
Features 2 keyhole slots and 1 hang hole for mounting or hanging

Made in China for
Proper Housewares
A division of
SUPERTEX INDUSTRIES PTY LTD
- a wholly-owned Australian
company
ABN 85 003 833 029

For further information -
website: www.supertex.com.au
Email:
customerservice@supertex.com.au
Telephone: (02) 8756 3000
Facsimile: (02) 9748 6622



N2853



proPERT[®]
3kg glass
digital
kitchen scale

In your home since 1920

Model 1330

Name: Clock Scale




Operating Instructions


OPERATING INSTRUCTIONS

Please read the instructions carefully to ensure the correct operation of the scale.

1. Purchase three AAA Alkaline batteries. After removing the battery compartment cover on the bottom of the scale, insert the batteries, making sure the positive (+) and negative (-) terminals are correctly positioned. Replace the battery compartment cover and turn the scale the correct way up.

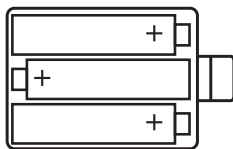


SCALE DISPLAY

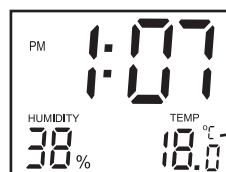

Celsius or Fahrenheit

Tare function (Touch screen)

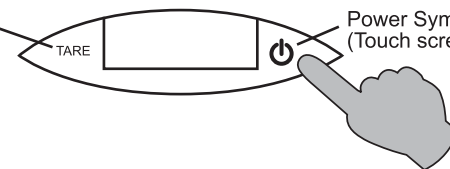

Power Symbol (Touch screen)

FUNCTION BUTTONS (Located under the Scale)



Normal Weighing


1. Place the scale on a hard, level surface. If you intend using a bowl, place it on the platform first before turning the scale on.
2. Touch the 'Power' symbol to enter weighing mode. The scale displays 'HI' and then '0', indicating it is ready for use. Always ensure that the scale is 'zeroed' before weighing.
3. The scale measures in grams or pounds and ounces or millilitres or fluid ounces. To change the unit measure, press the 'Power' symbol **when 'HI' is showing**
4. When the scale is 'zeroed', place the item to be weighed on it.
5. The scale displays the weight and if left idle, will automatically turn off

Tare Function

This scale allows the separate weighing of items as each item is added. No need to remove the items off the platform or empty the bowl!

1. After weighing the first item, press 'TARE' to 'zero' the scale
2. With the first item still on the platform, or in the bowl or container, add the second item. The readout will now show the weight of the second item only.
3. Repeat these steps if you have additional items to weigh. The total combined weight of the items must not exceed the capacity of the scale, which is 3000g / 7lb / 105.8 fl. oz / 3000ml
4. The total weight of the items on the scale, (including the container or bowl if using one), can be obtained by pressing 'TARE' again and then removing all items from the scale. The total weight will be displayed as a minus figure.
5. If left idle, the weight screen will turn off automatically

To measure Water

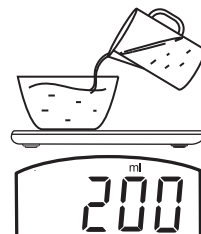

1. Place the container or jug on the scale before switching it on.
2. Press the 'Power' symbol to turn it on and select either 'ml' or 'fl.oz'
3. The scale is ready for use when it is 'zeroed'
4. Begin pouring water into the container, checking the display at the same time. Stop when the volume reaches your need.
5. Tare feature functions as above

Setting the Clock

1. Press and hold 'MODE' for 3 secs until the hour digit flashes.
2. Press the Up/Down arrows for digit increments or decrements, to set the hour, then press 'MODE' to lock it in.
3. Press 'MODE' again to set the minutes.

4. Press the Up/Down arrows for digit increments or decrements, to set the minutes, then press 'MODE' to lock it in.

Note: To select '12/24' hour format, press and hold the 'Up' arrow for 3 seconds.

Calendar - Date Setting

1. Press 'MODE' once to show the date.
2. Then press and hold 'MODE' again for 3 seconds until the year digits flash.
3. Press the Up/Down arrows for digit increments or decrements to set the year, then press 'MODE' to lock it in.
4. The month flashes.
5. Press the Up/Down arrows for digit increments or decrements, to set the month, then press 'MODE' to lock it in.
6. The date flashes.
7. Press the Up/Down arrows for digit increments or decrements, to set the date, then press 'MODE' to lock it in.
8. After a few seconds, the display returns to clock mode.

Setting the Alarm

1. Press 'MODE' twice to enter alarm settings
2. Press and hold 'MODE' for 3 secs until the hour digit flashes.
3. Press the Up/Down arrows for digit increments or decrements, to set the hour, then press 'MODE' to lock it in.
4. Press 'MODE' again to set the minutes.
5. Press the Up/Down arrows for digit increments or decrements, to set the minutes, then press 'MODE' to lock it in.
6. Press 'MODE' again to return to current time, otherwise the display automatically reverts to clock in 10 seconds.
7. To activate the alarm, briefly press the 'Up' arrow once. The 'Bell' symbol will confirm this.
8. The alarm will sound at the pre-set time everyday until de-activated.
9. To deactivate the alarm, press the 'Up' arrow once.

Note: To silence the alarm, press any button at the back. Otherwise, the alarm will sound for 2 minutes. When the alarm sounds, the volume will get increasingly louder.