



OPERATING INSTRUCTIONS

CD MP3 PLAYER



Please read the owner's manual carefully before using the unit.

Keep these instructions and retain this booklet for future reference

Welcome!

Thank you for purchasing our company's multimedia player!

To operate the unit correctly, please read the owner's manual carefully before using the unit. Keep these instructions and retain this booklet for future reference.

Specification:

AM / FM Receiver;

CD Player;

30 Stations Auto Memory Store;

Super Electronic Anti-Shock;

LCD Wide Screen Display;

AUX Audio Input Play;

Electronic Volume Control;

Location of the Control



- 1.Reset Button
- 2.Power On-off / Volume Increase / Decrease Button
- 3.CD Disc Slot-in
- 4.LCD Display
- 5.Remote Control Window
- 6.Disc Eject Button
- 7.Mode Switch Button
- 8.Audio Mode
- 9.Mute Button
- 10.Scan Button
11. Stereo / Mono Channel Button
12. Station Auto Store / Select Button
13. Auto Memory Store 1 / Play (Pause)
14. Auto Memory Store 2 / Scan Play
15. Auto Memory Store 3 / Repeat Play
16. Auto Memory Store 4 / Random Play
17. Auto Memory Store 5 / Decade -
18. Auto Memory Store 6 / Decade +
19. LOUD Button
20. Display Button
- 21.Audio Input
22. Station Adjust / Music Select Button
23. Bands Switch Button

Basic Operation

1. Volume Increase / Decrease Button

Right-and-left circumrotate to increase or decrease the volume. During audio mode and menu setting mode, right-and-left circumrotate to select.

2. Power On-off Button

Press and hold power button to turn off the unit. (Press any button to turn on the unit except disc eject button).

3. Mode Switch Button

Press this button for a short time to switch the modes:



4. Station Adjust Button

* During radio mode, press this button for a short time to select the stations upward or downward, and press it for a longer time to select the stations automatically.

5. Disc Eject Button

Press this button for a short time to eject the disc.

6. Audio Mode / Menu Setting Button

* Press this button for a short time to switch the modes of audio in the following order:

VOL —▶ BAS —▶ TRE —▶ BAL —▶ VOL


7. Station Auto Store / Select Button

During radio mode, press this button for a short time to enter the 5 seconds scan, and press it for a longer time to enter the station auto store and select

8. 1~6 Button

* During radio mode, press this button for a short time to select the stored frequency, and press it for a longer time to store the frequency of stations.

* During CD mode:

 **||** : press this button for a short time to pause and press it for a longer time to return to the first song.

INT: press this button to browse the first 10 seconds of each song.

RPT: press this button to repeat the current song.

RDM: press this button to enter random play.

9. Stereo / Mono Channel Button

During FM mode, press this button to select stereo or mono channel

10. Scan Button

During radio mode, press this button to search the stations. Once station is found, it will scan for 5 seconds and then continue to search.

11. LOUD Button

Press the button to turn on the LOUD.

12. Mute Button

 
The button is mute on-off button. (Press mode button, band button or volume button to delete the mute mode)

13. Display Button

press the button to DISP: Time → Frequency

14. Bands Switch Button

During radio mode, press the button to switch bands:



15. D- button

When CD playback, press this button to skip 10 tracks upward.

16. D+ button

When CD playback, press this button to skip 10 tracks downward.

Simple Trouble Shooting Guide

Please read the check sheet first before check-up. If there is still some problem after checking, please contact the local distributor for help.

Problems	Cause	Solution
No power	no startup	If power is appropriately fixed up on the accessory, please put switching on "ACC".
	Fuse is burnt out	Change a fuse (Note: in same specification)
Disc can't be loaded or ejected	A CD disc is loaded in the mechanism	Remove the CD disc in the mechanism, and insert a new disc
	The disc inverts	Insert the disc with label paper face upward
	Disc is dirty or defective	Clean the disc or change a new one
	The temperature in the car is too high	Let the temperature in the car down to normal state
	Cooling	Stop using it for an hour and then test again
Voice flashes	The assembled angle is over 30	Adjust the angle to less than 30
	CD disc is dirty or defective	Clean the disc or change a new disc
No radio working	The broadcasting signal is too weak	Choose a station with strong signal

Specifications:

1.FM tuning:

Frequency range: 87.5-108MHz

Medium Frequency: 10.7MHz

Sensitivity: 3uV

2.AM tuning:

Frequency range: 522-1620KHz

Medium Frequency: 450KHz

Sensitivity: 40dB

3.CD MP3 Play

System: audio system

Disc available: CD/CD-R/CD-RW/MP3

Frequency response: 20-100KHz ≤ 5dB

10-20KHz ≤ 5dB

4.Common

Work Voltage: 13.8V DC

Current Consumption: 5A

Output Power: 50W × 2

Wiring diagram

