

# Panasonic®

## Operating Instructions Air Conditioner

### Model No.

#### Indoor Unit

CS-E7LKR  
CS-E9LKR  
CS-E12LKR  
CS-E15LKR  
CS-E18LKR  
CS-E21LKR  
CS-E24LKR  
CS-E28LKR

#### Outdoor Unit

CU-E7LKR  
CU-E9LKR  
CU-E12LKR  
CU-E15LKR  
CU-E18LKR  
CU-E21LKR  
CU-E24LKR  
CU-E28LKR



Before operating the unit, read these operating instructions thoroughly and keep them for future reference.



**QUICK GUIDE**

© Panasonic HA Air-Conditioning (M) Sdn. Bhd. 2010.  
Unauthorized copying and distribution is a violation  
of law.

F567536

Thank you for purchasing  
Panasonic Air Conditioner

## TABLE OF CONTENTS

**SAFETY PRECAUTIONS**  
2-3

**INFORMATION**  
3

**REMOTE CONTROL**  
4-5

**INDOOR UNIT**  
6

**TROUBLESHOOTING**  
7

**QUICK GUIDE**  
BACK COVER

### NOTE

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without notice for future improvement.

### OPERATION CONDITION

Use this air conditioner under the following temperature range

Temperature (°C)		Indoor	
		*DBT	*WBT
COOLING	Max.	32	23
	Min.	16	11
HEATING	Max.	30	-
	Min.	16	-

Temperature (°C)		Outdoor	
		*DBT	*WBT
COOLING	Max.	46	26
	Min.	16	11
HEATING	Max.	24	18
	Min.	-15	-16

\*DBT: Dry bulb temperature

\*WBT: Wet bulb temperature

# SAFETY PRECAUTIONS

To prevent personal injury, injury to others, or property damage, please comply with the following.  
Incorrect operation due to failure to follow instructions below may cause harm or damage, the seriousness of which is classified as below:



**WARNING** This sign warns of death or serious injury.



**CAUTION** This sign warns of injury or damage to property.

The instructions to be followed are classified by the following symbols:



This symbol denotes an action that is **PROHIBITED**.



These symbols denote an actions that is **COMPULSORY**.



**WARNING**

### INDOOR UNIT AND OUTDOOR UNIT



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please consult authorized dealer or specialist to repair, install, remove and reinstall the unit. Improper installation and handling will cause leakage, electric shock or fire.



Do not install the unit in a potentially explosive or flammable atmosphere. Failure to do so could result in fire.

Do not insert your fingers or other objects into the air conditioner indoor or outdoor unit, rotating parts may cause injury.

 


Do not touch the outdoor unit during lightning, it may cause electric shock.

### REMOTE CONTROL



Do not allow infants and small children to play with the remote control to prevent them from accidentally swallowing the batteries.

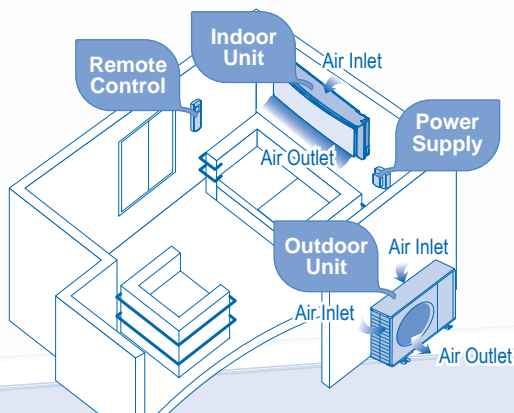



## WARNING

### POWER SUPPLY



Do not use modified cord, joint cord, extension cord or unspecified cord to prevent overheating and fire.



Do not share the same power outlet with other equipment to prevent overheating and fire.

Do not operate with wet hands to prevent electric shock.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

It is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD) to prevent electric shock or fire.



This equipment must be earthed to prevent electrical shock or fire.



Prevent electric shock by switching off the power supply when:

- Before cleaning or servicing.
- Extended non-use.
- Abnormally strong lightning activity.



Stop using the product when any abnormality/failure occurs and disconnect the power plug or turn off the power switch and breaker.  
(Risk of smoke/fire/electric shock)

Examples of abnormality/failure

- The ELCB trips frequently.
- Burning smell is observed.
- Abnormal noise or vibration of the unit is observed.
- Water leaks from the indoor unit.
- Power cord or plug becomes abnormally hot.
- Fan speed cannot be controlled.
- The unit stops running immediately even if it is switched on for operation.
- The fan does not stop even if the operation is stopped.

Contact immediately your local dealer for maintenance/repair.



## CAUTION

### INDOOR UNIT AND OUTDOOR UNIT



Do not wash the indoor unit with water, benzene, thinner or scouring powder.

Do not use for other purpose such as preservation of food.

Do not use any combustible equipment in front of the airflow outlet to avoid propagation fire.

Do not expose yourself directly to cold air for a long period.

Do not sit or step on the unit, you may fall down accidentally.



Do not touch the sharp aluminium fin, sharp parts may cause injury.



Do not switch ON the indoor unit when waxing the floor. After waxing, aerate the room properly before operating the unit.

Do not install the unit in oily and smoky areas.



Ensure drainage pipe is connected properly. Otherwise, leakage may occur.

Aerate the room regularly.

After long period of use, make sure the installation rack is not deteriorate to prevent the unit from falling down.

### REMOTE CONTROL



Do not use rechargeable (Ni-Cd) batteries. It may damage the remote control.



Remove the batteries if the unit is not going to be used for a long period of time.

New batteries of the same type must be inserted following the polarity stated to prevent malfunction of the remote control.

## INFORMATION

### FOR SEASONAL INSPECTION AFTER EXTENDED NON-USE

- Checking of remote control batteries.
- No obstruction at air inlet and air outlet vents.
- Use Auto OFF/ON button to select Cooling/Heating operation, after 15 minutes of operation, it is normal to have the following temperature difference between air inlet and air outlet vents:  
Cooling:  $\geq 8^{\circ}\text{C}$       Heating:  $\geq 14^{\circ}\text{C}$

### FOR EXTENDED NON-USE

 
- Activate Heat mode for 2-3 hours as an alternative to remove moisture left in the internal parts thoroughly to prevent mould growth.
- Turn off the power supply.
- Remove the remote control batteries.

### NON SERVICEABLE CRITERIAS

TURN OFF POWER SUPPLY then please consult authorized dealer under the following conditions:

- Abnormal noise during operation.
- Water/foreign particles have entered the remote control.
- Water leaks from Indoor unit.
- Circuit breaker switches off frequently.
- Power cord becomes unnaturally warm.
- Switches or buttons are not functioning properly.

# REMOTE CONTROL

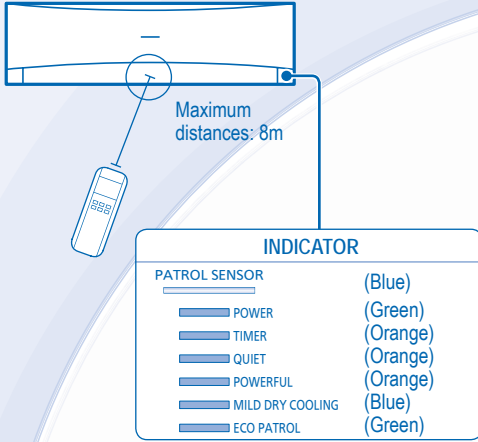

## Press the remote control's button

### 1 TO TURN ON OR OFF THE UNIT



- Please be aware of the OFF indication on the remote control display to prevent the unit from starting/stopping improperly.

### 2 TO SET TEMPERATURE

- Selection range: 16°C ~ 30°C.
- Operating the unit within the recommended temperature could induce energy saving.  
HEAT mode : 20°C ~ 24°C.  
COOL mode : 26°C ~ 28°C.  
DRY mode : 1°C ~ 2°C lower than room temperature.

### 3 TO SELECT OPERATION MODE

**AUTO mode** - For your convenience

- During operation mode selection the power indicator blinks.
- Unit selects operation mode every 30 minutes according to temperature setting, outdoor and room temperature.

**HEAT mode** - To enjoy warm air

- Unit takes a while to warm up. The power indicator blinks during this operation.

**COOL mode** - To enjoy cool air

- Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

**DRY mode** - To dehumidify the environment

- Unit operates at low fan speed to give a gentle cooling operation.

### 4 TO SELECT FAN SPEED (5 OPTIONS)



- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.


### 5 TO ADJUST VERTICAL AIRFLOW DIRECTION (5 OPTIONS)



- Keeps the room ventilated.
- In COOL/DRY mode, if AUTO is set, the louver swing up/down automatically.
- In HEAT mode, if AUTO is set, the louver fix at predetermined position.


### 6 TO ADJUST AIRFLOW DIRECTION (5 OPTIONS)

 (PAGE 5)



- Keeps the room ventilated.
- In COOL/DRY mode, if AUTO is set, the louver swing left/right and up/down automatically.
- In HEAT mode, if AUTO is set, the horizontal louver fix at predetermined position. The vertical louver swing left/right after the temperature rises.

## Remote Control display

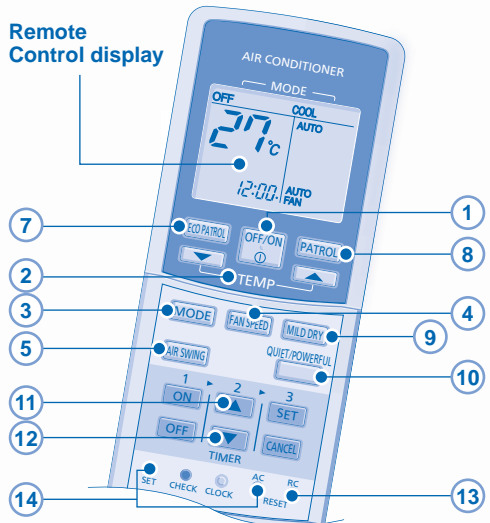 

E7LKR, E9LKR, E12LKR, E15LKR

**7 TO MONITOR HUMAN PRESENCE & ACTIVITY FOR ENERGY SAVING**  ECO PATROL

ECO PATROL → ECO 1 → ECO 2 → ECO OFF

Heat Source & Movement	Low	High	None
Set Temperature			+3°C +2°C
		-1°C	COOL/ DRY Mode
			HEAT Mode
			-2°C -3°C
Set Fan Speed		*+1 tap	*≤ Medium Fan

- ECO 1 - To optimize comfort and energy saving.
- ECO 2 - To maximize energy saving.
- \* Applicable during COOL/DRY Mode only.

**8 TO MONITOR AIR QUALITY** 

- Detects air quality; e-ion operation activates when air quality is at dirty level.
- Can be activated even when the unit is turned off.
- Patrol starts automatically with the unit switched on with



**9 TO IMPROVE HUMIDITY AND MOISTURE LEVEL** 

- This operation reduces air dryness and provides you with a comfortable living environment during COOL mode only.
- When vertical airflow direction is set to AUTO, it stops at lower position to avoid cold air contact. However, you can adjust the louver direction manually.

**10 TO SWITCH BETWEEN QUIET & POWERFUL**

 
QUIET/POWERFUL → QUIET → POWERFUL → NORMAL

**TO ENJOY QUIET OPERATION** 

- This operation reduces airflow noises.

**TO REACH TEMPERATURE QUICKLY** 

- This operation will stop automatically after 4 hours.

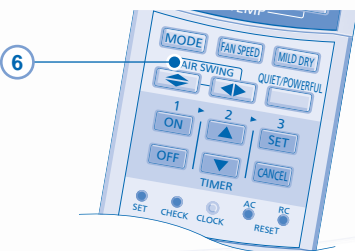

**11** Press and hold for 5 seconds to dim or restore the unit's indicator brightness.

**12** Press and hold for approximately 10 seconds to show temperature setting in °C or °F.

**13** Press to restore the remote control's default setting.

**14** Not used in normal operations.

**NOTES**

QUIET/POWERFUL



- Can be activated in all modes and can be cancelled by pressing the respective button again.


QUIET/POWERFUL



- Cannot be selected at the same time.
- Cannot be activated during "MILD DRY COOLING" operation is activated.

**TO SET THE TIMER**

- 2 sets of ON and OFF timers are available to turn ON or OFF the unit at different preset time.
- Complete below procedures to set each timer:

1 ON	→ ⓪1 → ⓪2 → Cancel	2 ▲	 3 SET
OFF	→ ⓪1 → ⓪2 → Cancel	▼	
Select ON or OFF timer		Set the time	Confirm

- Example of application at living room:  
Morning: ON ⓪1 at 07:00 (Wake up)  
OFF ⓪1 at 08:00 (Out for work)  
Evening: ON ⓪2 at 17:00 (Back home)  
OFF ⓪2 at 22:00 (Sleep)
- To cancel ON or OFF timer, press **ON** or **OFF** to select respective ⓪1 or ⓪2 then press **CANCEL**.
- If timer is cancelled manually or due to power failure, you can restore the timer again by pressing **ON** or **OFF** to select respective ⓪1 or ⓪2 then press **SET**.
- Upcoming timer will be displayed and will be activated in sequence.
- When ON Timer is set, the unit may start earlier (up to 35 minutes) before the actual set time in order to achieve the desired temperature on time.
- Timer operation is based on the clock set in the remote control and repeats daily once set. For clock setting, please refer to Remote Control Preparation at back cover.

# INDOOR UNIT



## CAUTION

 
- Switch off the power supply before cleaning.
- Do not touch the aluminium fin, sharp parts may cause injury.

## CLEANING INSTRUCTIONS

- Do not use benzene, thinner or scouring powder.
- Use only soap (≈ pH7) or neutral household detergent.
- Do not use water hotter than 40°C.

## HINT

- To ensure optimal performance of the unit, cleaning maintenance has to be carried out at regular intervals. Dirty unit may cause malfunction and you may see error code "H99". Please consult authorized dealer.

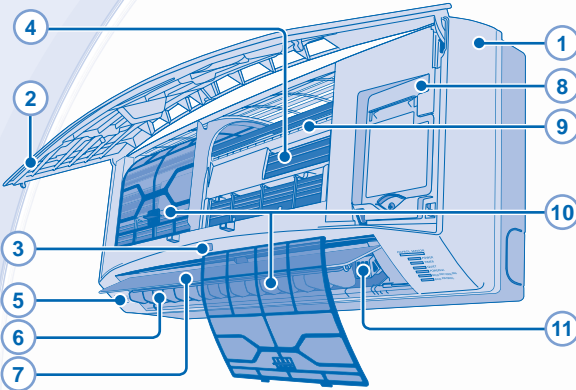

## 9, 10, 11 e-ion AIR PURIFYING SYSTEM



- Do not touch during operation

## 5 ECO PATROL SENSOR



- Do not hit or violently press the sensor or poke it with a sharp object. This can lead to damage and malfunction.
- Do not place large objects near the sensor and keep away heating units or humidifiers from the sensor's detection area. This may lead to sensor malfunction.

## 1 INDOOR UNIT

- Wipe the unit gently with a soft, dry cloth.

## 2 FRONT PANEL

### Remove Front Panel

- Raise and pull to remove the front panel.
- Wash gently and dry.

### Close Front Panel



- Press down both ends of the front panel to close it securely.

## 3 REMOTE CONTROL RECEIVER

## 4 ALUMINIUM FIN

## 5 ECO PATROL SENSOR

## 6 HORIZONTAL AIRFLOW DIRECTION LOUVER

E7LKR, E9LKR, E12LKR, E15LKR

- Manually adjustable.



E18LKR, E21LKR, E24LKR, E28LKR

- Do not adjust by hand.

## 7 VERTICAL AIRFLOW DIRECTION LOUVER

- Do not adjust by hand.

## 8 AUTO OFF/ON BUTTON

- Use when remote control is misplaced or a malfunction occurs.

Action	Mode
Press once.	Auto
Press and hold until 1 beep is heard, then release.	Cooling
Press and hold until 1 beep is heard, then release.	Heating
Press again until 2 beeps, then release.	
Press the button to turn off.	

## 9 e-ion CHARGING WIRE

## 10 e-ion FILTERS

- Clean the filters regularly.
- Wash/rinse the filters gently with water to avoid damage to the filter surface.
- Dry the filters thoroughly under the shade, away from fire or direct sunlight.
- Replace any damaged filters.

## 11 ACTIVE e-ion GENERATOR

Clean with dry cotton bud.

- Active e-ion generator cleaning is recommended every 6 months.



# TROUBLESHOOTING

The following symptoms do not indicate malfunction.

SYMPTOM	CAUSE
Mist emerges from indoor unit.	▶ Condensation effect due to cooling process.
Water flowing sound during operation.	▶ Refrigerant flow inside the unit.
The room has a peculiar odour.	▶ This may be due to damp smell emitted by the wall, carpet, furniture or clothing.
Indoor fan stops occasionally during automatic fan speed setting.	▶ This helps to remove the surrounding odours.
Operation is delayed a few minutes after restart.	▶ The delay is a protection to the unit's compressor.
Outdoor unit emits water/steam.	▶ Condensation or evaporation occurs on pipes.
Timer indicator is always on.	▶ The timer setting repeats daily once set.
Power indicator blinks during HEAT mode with no warm air supply (and louver is closed).	▶ The unit is in defrost mode (and AIR SWING is set to AUTO).
Indoor fan stops occasionally during heating operation.	▶ To avoid unintended cooling effect.
Power indicator blinks before the unit is switched on.	▶ This is a preliminary step in preparation for the operation when the ON timer has been set.
Cracking sound during operation.	▶ Changes of temperature cause the expansion/contraction of the unit.

Check the following before calling for servicing.

SYMPTOM	CHECK
Heating/Cooling operation is not working efficiently.	▶ Set the temperature correctly. ▶ Close all doors and windows. ▶ Clean or replace the filters. ▶ Clear any obstruction at the air inlet and air outlet vents.
Noisy during operation.	▶ Check if the unit has been installed at an incline. ▶ Close the front panel properly.
Remote control does not work. (Display is dim or transmission signal is weak.)	▶ Insert the batteries correctly. ▶ Replace weak batteries.
The unit does not work.	▶ Check if the circuit breaker is tripped. ▶ Check if timers have been set.
The unit does not receive the signal from the remote control.	▶ Make sure the receiver not obstructed. ▶ Certain fluorescent lights may interfere with signal transmitter. Please consult authorized dealer.
PATROL operation does not work.	▶ Press and hold <b>PATROL</b> for 15 seconds until beep sound is heard, press <b>PATROL</b> again.
Patrol sensor indicator on the indoor unit is blinking.	▶ Press <b>PATROL</b> twice. If the patrol sensor indicator still blinking, please consult authorized dealer.

 
## Notes on "ECO PATROL SENSOR"

- Sensor may not detect moving objects further than 7m away or beyond detection angle.
- Sensor sensitivity is influenced by indoor unit location, movement speed, temperature range, etc.
- The sensor may mistakenly detects pets, sunlight, certain lighting, fluttering curtains and light reflection as human being.

The unit stops and the timer indicator blinks.

Use remote control to retrieve error code.

- 1 Press for 5 seconds.
- 2 Press until you hear beep sound, then write down the error code.
- 3 Press for 5 seconds to quit checking.
- 4 Turn the unit off and reveal the error code to authorized dealer.


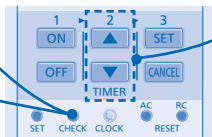


Note:

- For certain errors, you may restart the unit for limited operation with 4 beeps during operation starts.

# QUICK GUIDE

  
## Remote Control Preparation

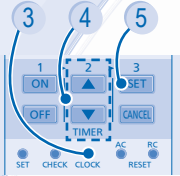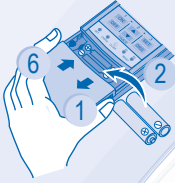

- 1 Press and pull out
- 2 Insert AAA or R03 batteries (can be used ~ 1 year)
- 3 Press CLOCK
- 4 Set time
- 5 Confirm
- 6 Close the cover

### 1
 
#### MODE



Select the desired mode.

### 2

 
#### OFF/ON

Start/stop the operation.

### 3

#### TEMP

Select the desired temperature.

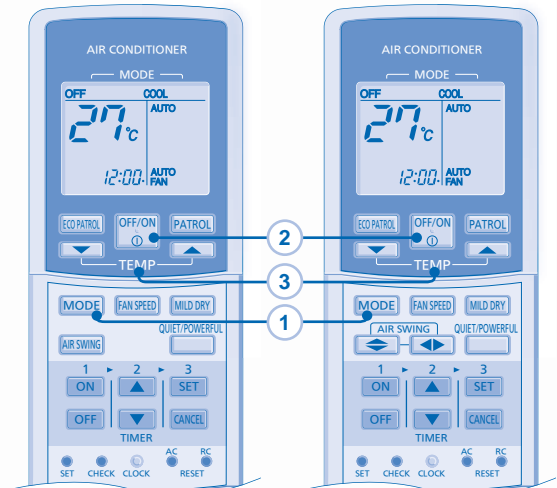

**E7LKR, E9LKR,  
M12LKR, E15LKR**

**E18LKR, E21LKR,  
E24LKR, E28LKR**

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Note for the battery symbol (bottom two symbol examples):



Pb

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

**Panasonic Corporation**

Website: <http://panasonic.net/>