




INSTALLATION MANUAL


CONSOLE KIT FOR SEELEY INTERNATIONAL
BRAEMAR ECO-SUPERSTAR SH18, SH25 & WF25 HEATERS

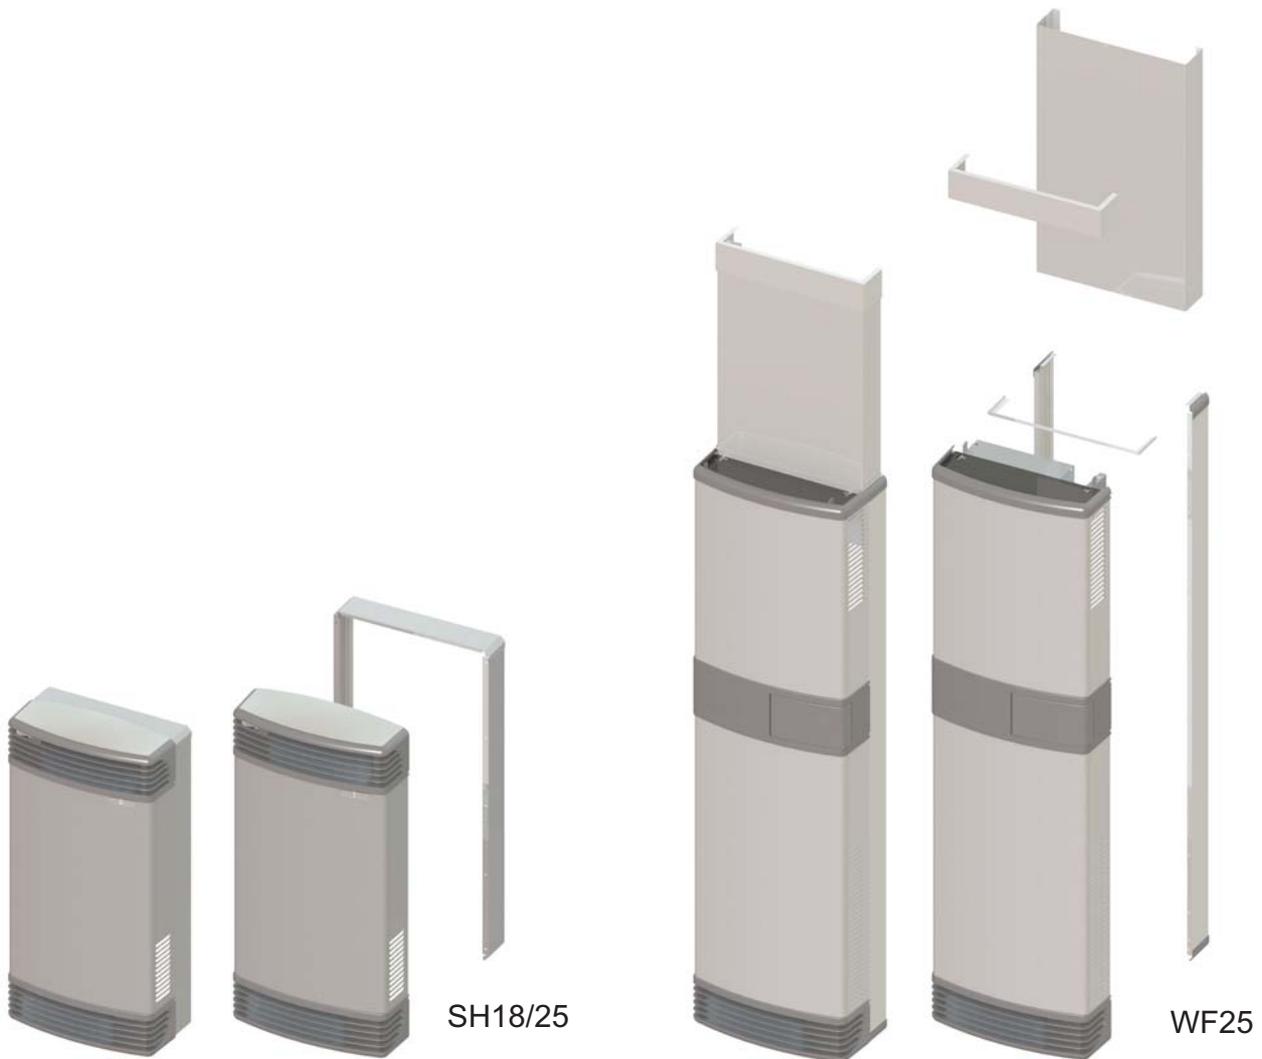


SH18/25

Attach console top panel to side panels

1. Use the supplied rivets (two on each side) to fix both console side plates to the console top plate. Ensure the side panels are fixed to the inside of the top panel

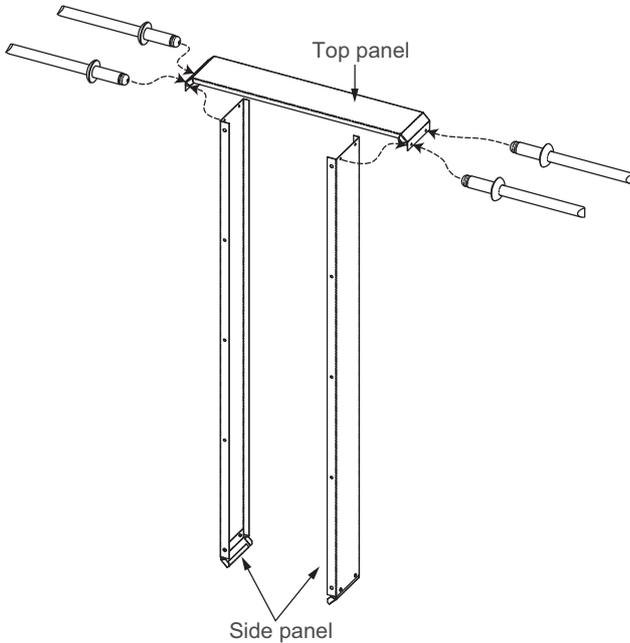**Attach console panels to heater front cover**


2. Using the supplied screws, attach the console extension to the front cover as shown.

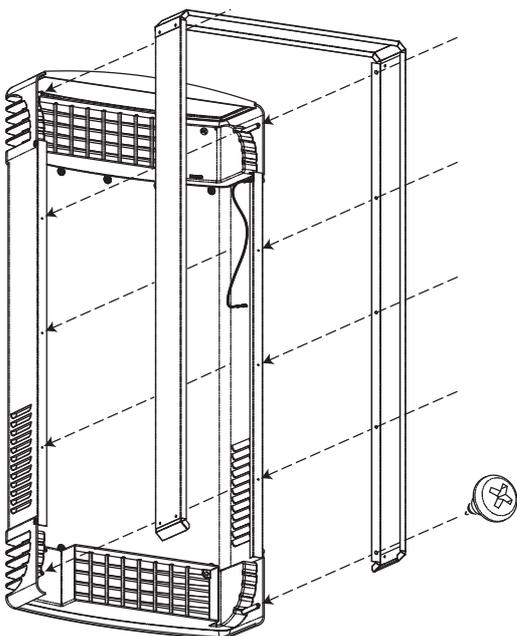

WF25



Attach console sides to heater front cover

1. Using the supplied screws, attach the console extension to the front cover as shown.

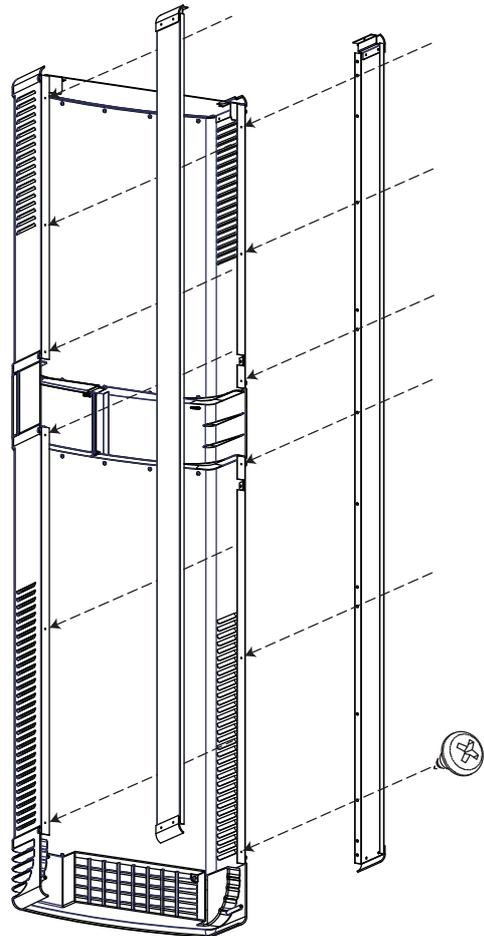

Fitting front cover

1. Connect earth lead from heater cover to body of heater.
2. Connect control loom (multi coloured ribbon cable) to main PCB on electrical mount panel - connection is labelled "FRONT PANEL". The loom will fit in only the correct position.
3. Locate lower grille section on outlet spigot at bottom of heater - ensure that plastic spigot fits around sheetmetal spigot at top and bottom and both sides. Guide the top grille section onto the top cover retaining bracket and ensure that cover fits flush against the wall surface.
4. Fit 4 screws to secure front cover to body of heater.

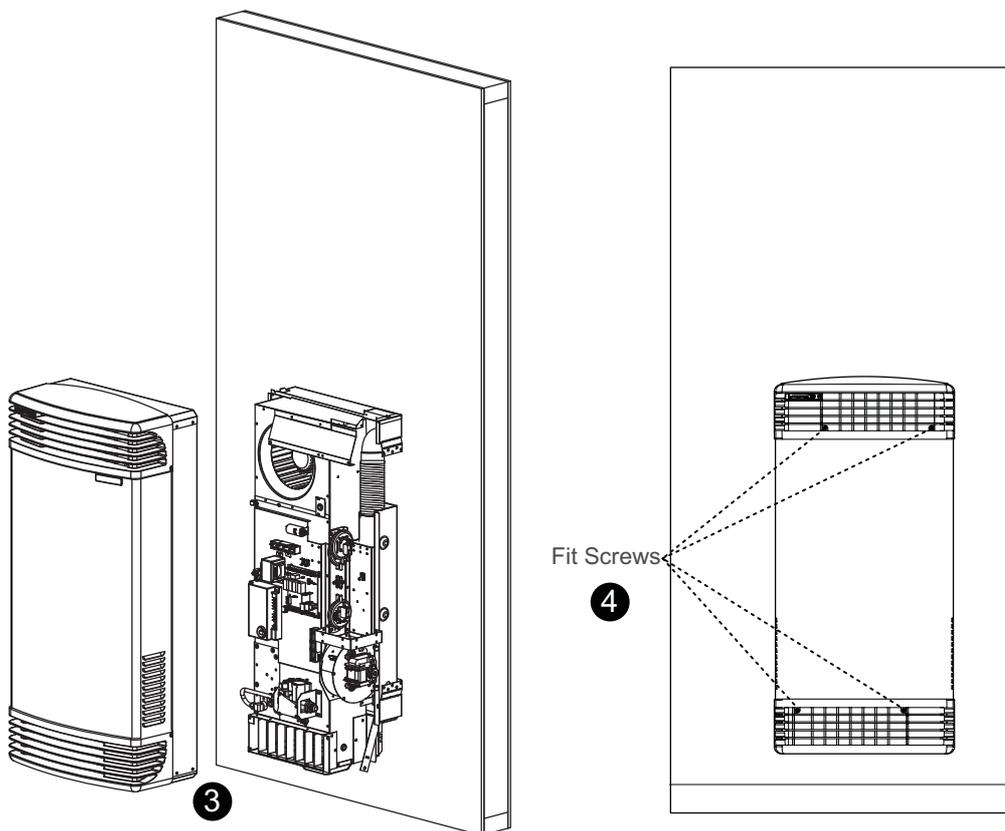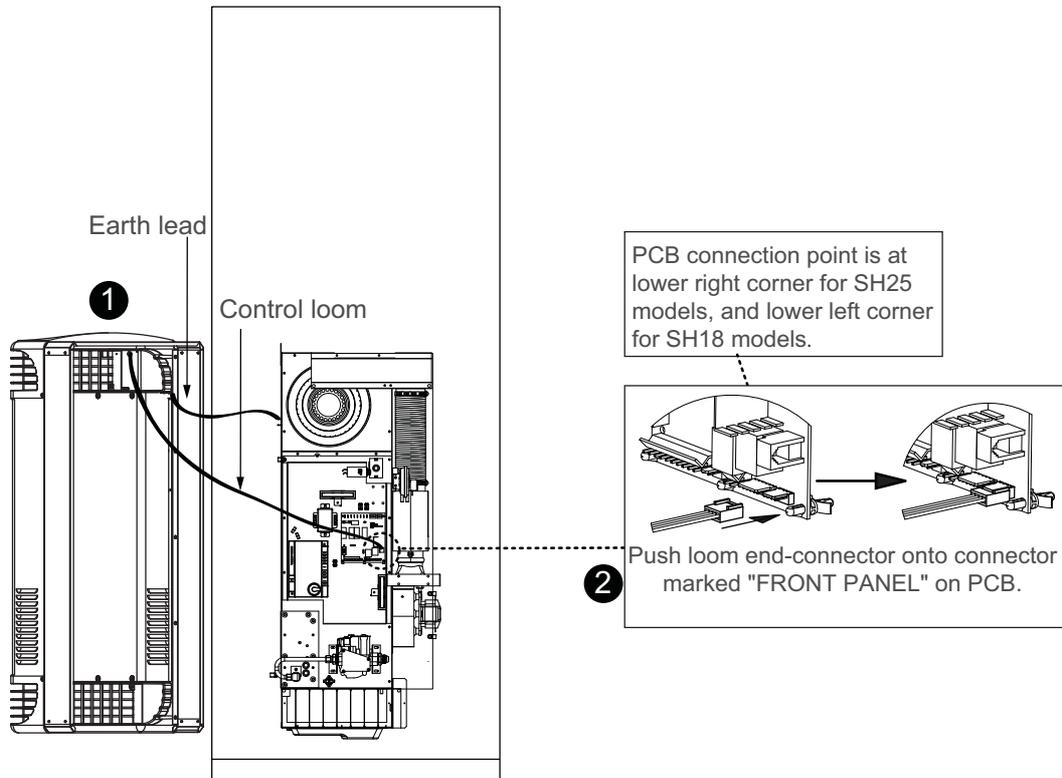


Fitting front covers

1. Move locating tab to front holes on pre installed top mounting bracket.
2. Connect earth lead from heater cover to body of heater
3. Locate slots in top of cover over locating tabs on top mounting bracket.
4. Locate lower grille section on outlet spigot at bottom of heater.


If cover is not flush against wall surface adjust locating tabs.

5. Fit 2 screws to secure front cover to body of heater.

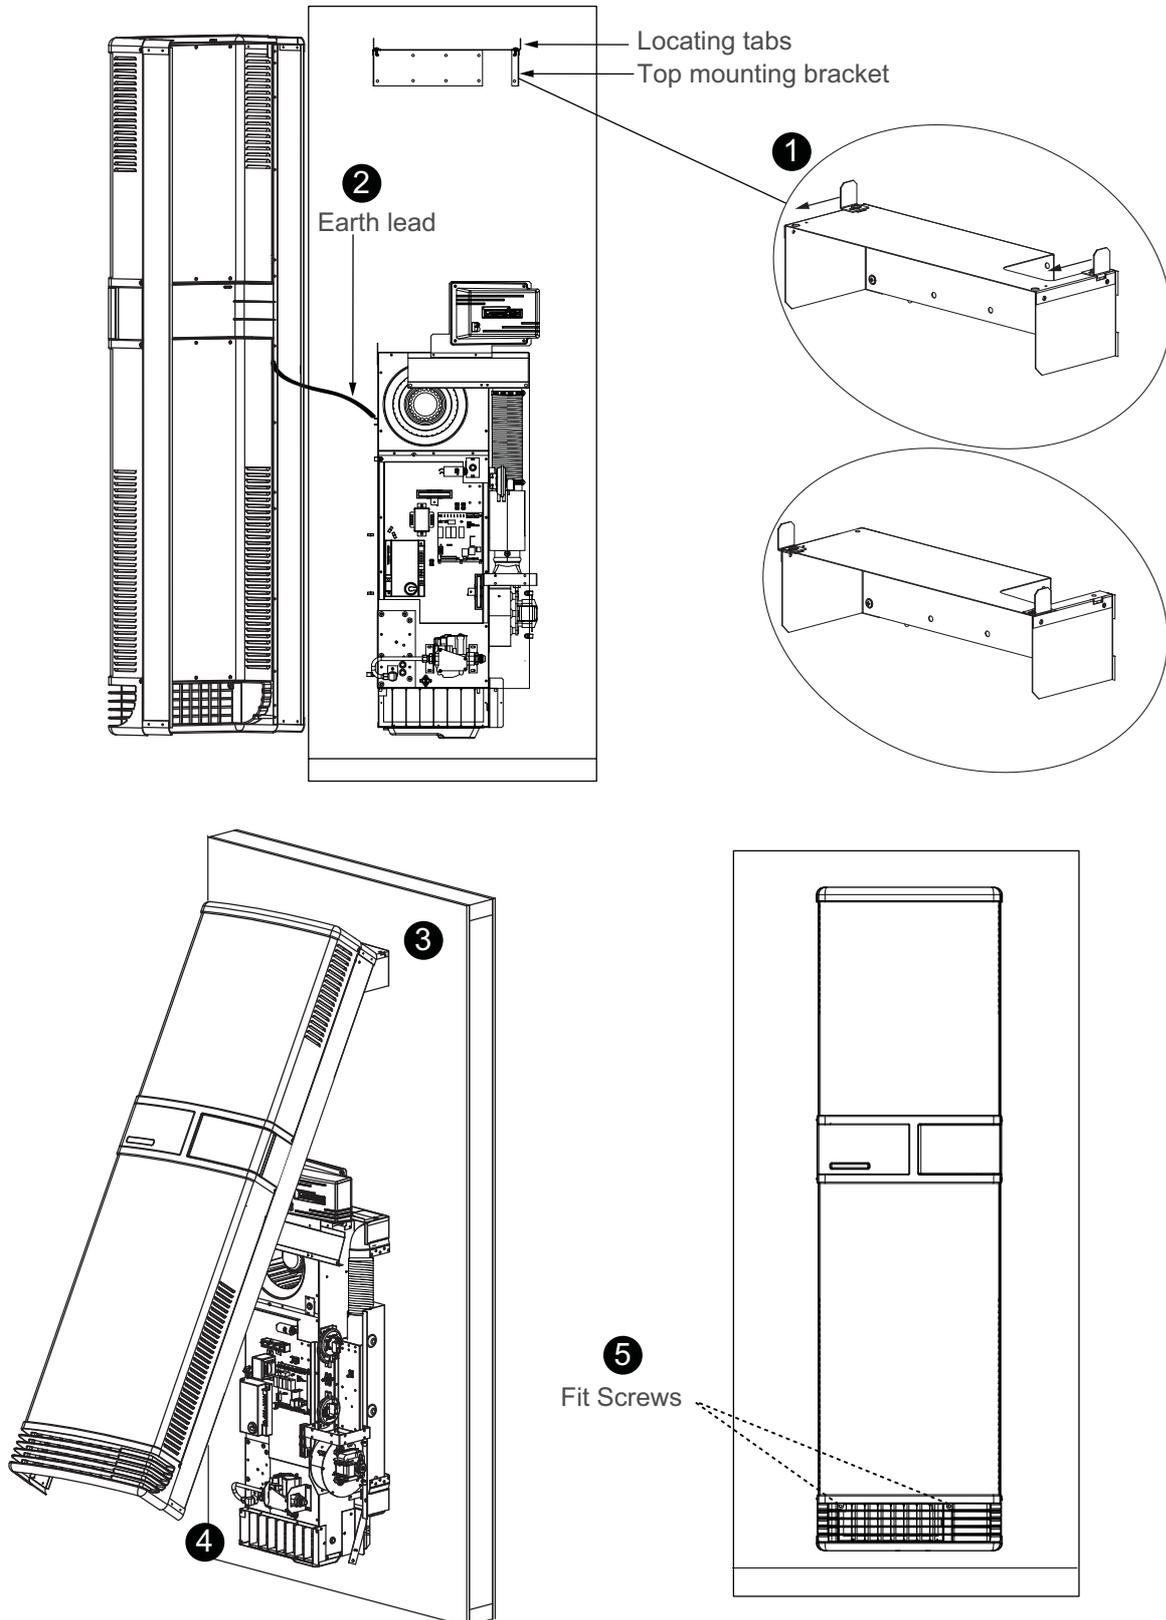

Install ceiling trim frame

1. Install the ceiling trim frame between the cut-out (as per flue kit installation instructions) in the cornice with the back edge against the wall and the top edge against the ceiling.
2. Fix in place by screwing from below into ceiling using toggle bolts or wood screws supplied.
3. Attach the flue cover bottom support bracket to the top of the front cover using 2 screws supplied in kit.
4. Fit the front cover to heater as described on page 3.
5. Cut the flue cover to length to suit the ceiling height. Calculate the length required as shown below
6. Slide cut end of flue cover into ceiling trim frame. Push bottom of flue cover in towards wall, spring lower sides out to clear heater cover. Lower flue cover into lower support bracket on top of heater cover.

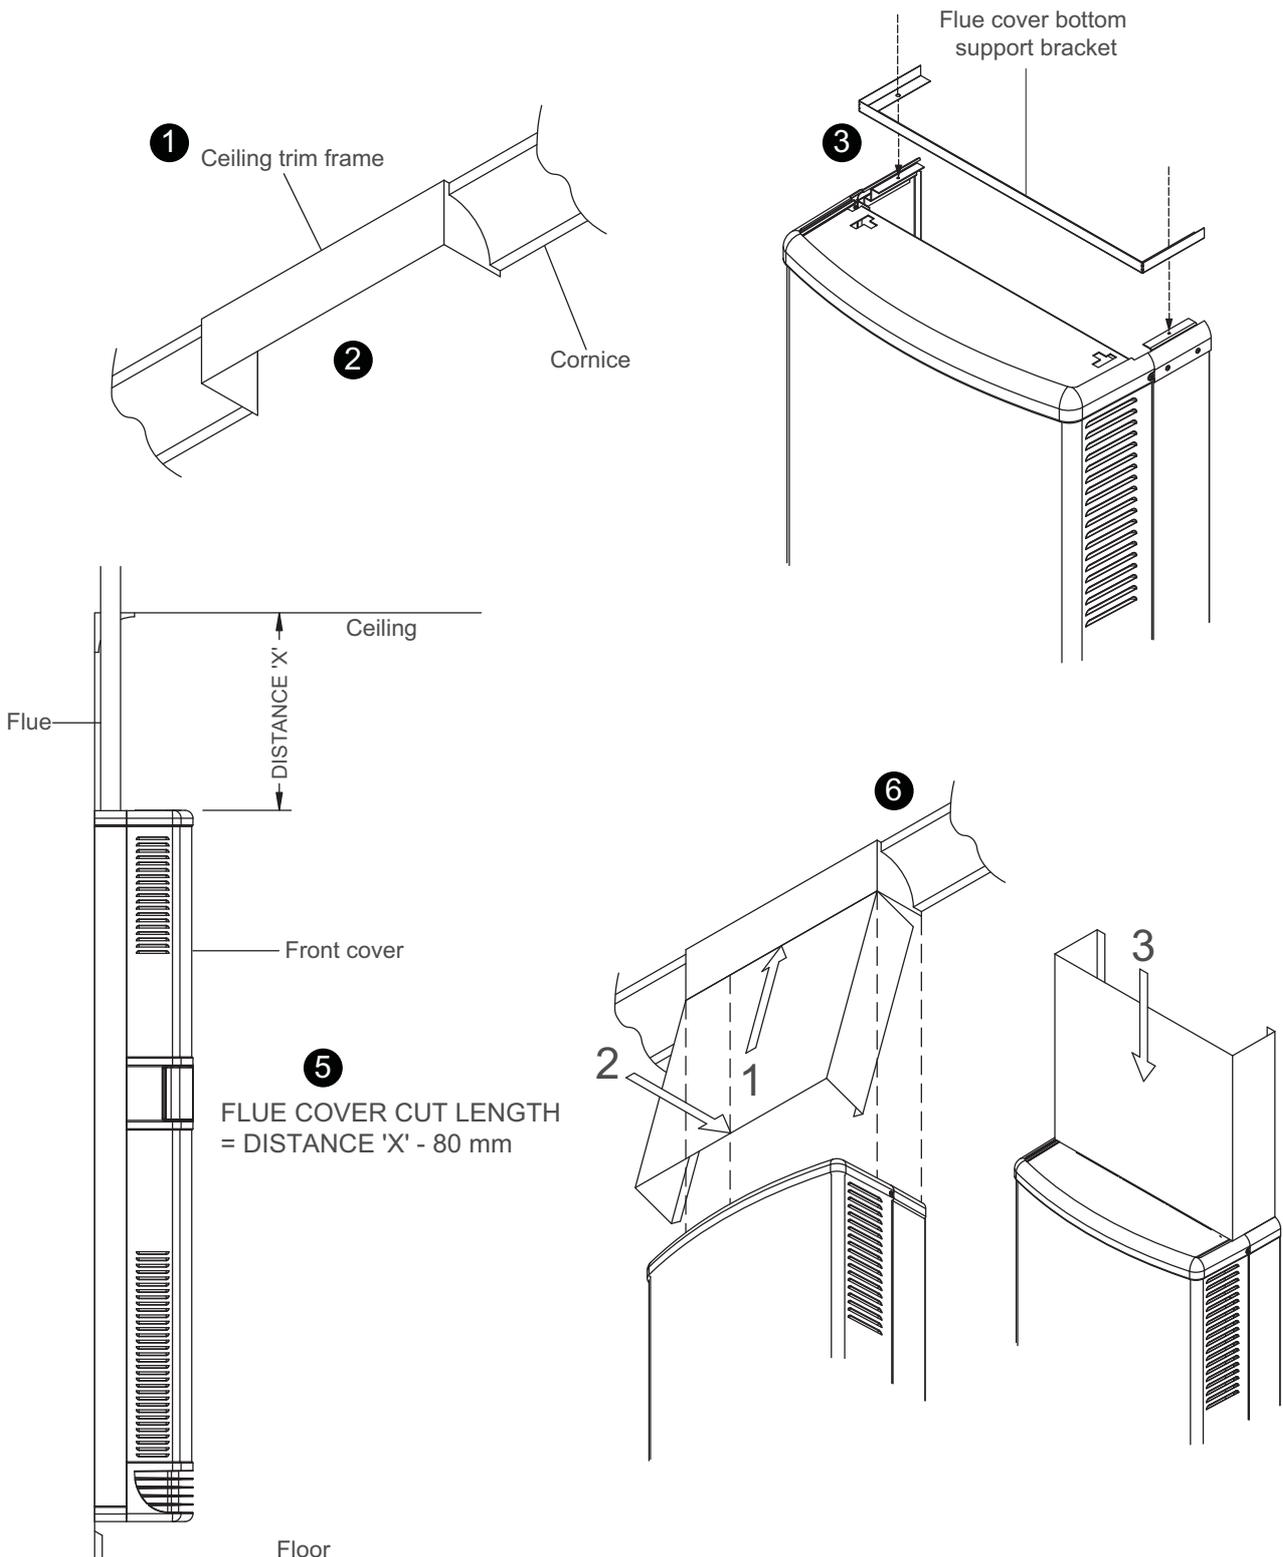



Warranty Service
Australia 1-300-650-644
seeleyinternational.com

It is the policy of Seeley International to introduce continual product improvement. Accordingly, specifications are subject to change without notice. Please consult with your dealer to confirm the specifications of the model selected.

Braemar[®]
HEATING & COOLING