

# kogan

EZINAV G6 GPS

## USER MANUAL

For help using GPS navigation software please download the "Navigation Software User Manual from: [www.kogan.com.au/manuals/](http://www.kogan.com.au/manuals/)



## Contents

### Welcome 1

<b>Chapter I Initial Setup</b> .....	<b>2</b>
1.1 Appearance.....	2
1.2 Power Supply & Charging.....	2
1.3 Basic Use.....	3
1.4 System Main Interface and Major Functions.....	5
<b>Chapter II GPS</b> .....	<b>7</b>
2.1 Map.....	7
2.2 Navigation.....	7
2.3 Reception.....	7
<b>Chapter III Media</b> .....	<b>8</b>
3.1 Music Player.....	8
3.2 Video Player.....	11
3.3 Photo Browser.....	12
3.4 E-book Reader.....	15
<b>Chapter IV Bluetooth</b> .....	<b>19</b>
4.1 Pair.....	19
4.2 Making a Call.....	20
4.3 Answering a Call.....	22
4.4 Dial Record.....	23
4.5 Redial.....	23
4.6 Setting.....	24
4.7 Paired Device List.....	25
4.8 Search Bluetooth Device.....	26
4.9 Phonebook.....	26
<b>Chapter V Games</b> .....	<b>28</b>
5.1 Othello.....	28
5.2 DuiDuiPeng.....	28
5.3 Russia Block.....	29
<b>Chapter VI Tools</b> .....	<b>30</b>
6.1 Calculator.....	30

6.2 Unit..... 30

**Chapter VII Setting..... 32**

7.1 Summary ..... 32

7.2 Volume ..... 33

7.3 Backlight ..... 34

7.4 Language ..... 34

7.5 Date& Time ..... 35

7.6 Calibration..... 35

7.7 FM Transmitter..... 36

7.8 USB setting ..... 37

7.9 Restoring the Factory Setting ..... 39

7.10 System Info..... 40

**Chapter VIII GPS Info ..... 41**

**Chapter IX Troubleshooting ..... 42**

## Welcome

Thanks for purchasing the Kogan G6 GPS. It is featured with navigation function, Bluetooth, audio & video play, photo browsing and e-book reading functions.

- ✓ SiRF Atlas- IV CPU with high performance and low power consumption
- ✓ Friendly user interface for simple operation
- ✓ Power management for longer and more stable operation
- ✓ Data transmission with computer via Mini USB
- ✓ Quality reception, accurate positioning and satisfactory navigation service
- ✓ Leisure friend with audio/video/amusement functions

You may use the GPS navigator anytime anywhere, for example while driving, walking or cycling.

Let its navigation and amusement functions enrich your life and work!

To realize the functions of the Kogan G6 GPS and to understand the operation details, please read the manual carefully.

You may see the following supplemental information in the manual.

[Note]: Explanation of relevant subjects

[Relevant Information]: Extra information of relevant subjects

[Attention]: Precautions or warnings of relevant subjects. Please pay attention to this information and follow the instructions to avoid devastating influence on yourself and others.

[\*]: Optional function

This manual is applicable only the Kogan G6 GPS.

## Chapter I Initial Setup

This chapter introduces the appearance, components and basic operations of the Kogan G6 GPS.

### 1.1 Appearance

The product picture below is subject to the material object.



SN	Component	Explanation
1	Power key	Powering on/ off and sleep mode
2	Slot	
3	Indicator light	Indicating the operating state of external power supply
4	Earphone jack	Connected with the stereophone
5	Micro SD card slot	
6	Micro USB port	Communicating with PC via Micro USB cable and used as the charging port
7	Speaker	
8	Reset key	Tap to restart the system


### 1.2 Power Supply & Charging

Charge the GPS navigator fully with the charger before first use.

## 1.2.1 Power Supply

The Kogan G6 GPS can be powered by the built-in battery or external power supply.

When the GPS navigator is unconnected to the charger, it is powered by the Li-polymer battery.

The battery capacity icon  in the system main interface shows current residual battery capacity.

When the GPS navigator is connected to the charger, it is powered by external power and the battery is charged.

[Attention] The GPS navigator adopts internal non-removable Li-polymer battery. To avoid battery rupture, explosion, release of hazardous substance or burn, do not unpack, pierce, strike on or discard the battery in fire or water.

## 1.2.2 Charging by C Charger

Plug the USB terminal of the C charger into the USB port of the GPS navigator and the other to the power socket to supply power and charge the GPS navigator.

[Note] The charging indicator light is red during charging. Do not unplug the charge until the battery is fully charged and the indicator light turns green. Please charge the GPS navigator when the battery is low or used up.

## 1.2.3 Charging by Car Charger

Plug one terminal of the car charger into the USB port of the GPS navigator and the other to the charging port to supply power and charge the GPS navigator.

[Note] To avoid damage due to current surge, plug in the car charger after the automobile is started.

## 1.3 Basic Use

### 1.3.1 Powering on/off & Sleep

 
#### 1.3.1.1 Powering on

Press the power key of the GPS navigator and let go after at least two seconds to power it on.

[Note] Great humidity fluctuation may lead to short circuit of the GPS navigator. Power on the navigator after it has accommodated to new environment.

### 1.3.1.2. Powering off & Sleep

Press the power key and let go after at least two seconds to power off the GPS navigator. The following interface will be prompted. If **Sleep** is selected, the navigator will automatically resume the state before entering sleep mode when it is powered again.

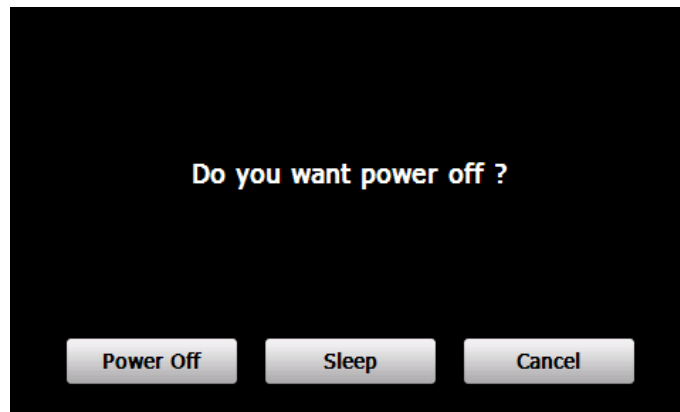

### 1.3.2 Restarting the System

When the system does not response, press the reset key on the back of the GPS navigator to restart the system.

[Relevant Information] The following situations might lead to no response of the system.

1. Delay or pause in interface switching;
2. Failure of function activation with overlong execution;
3. Failure to power on/off the GPS navigator by pressing the power key.

[Note] Restarting the system by pressing the reset key will result in loss of unsaved data. Please backup your data regularly.

### 1.3.3 Fixing the GPS Navigator with Mounting Kit


The mounting kit is composed of a back splint and a bracket. To use the GPS navigator in an automobile, fix it on the dashboard under the front windshield.

[Note] Do not place the GPS navigator in positions obstructing the driver's vision. Do not place it without fixing it or in the place of air bag or the area after the air bag is inflated.

 
## 1.4 System Main Interface and Major Functions

Long press the power key on the top side of the GPS navigator to enter the system main interface as follows:



Press  at the bottom of the interface to view the next page as follows:



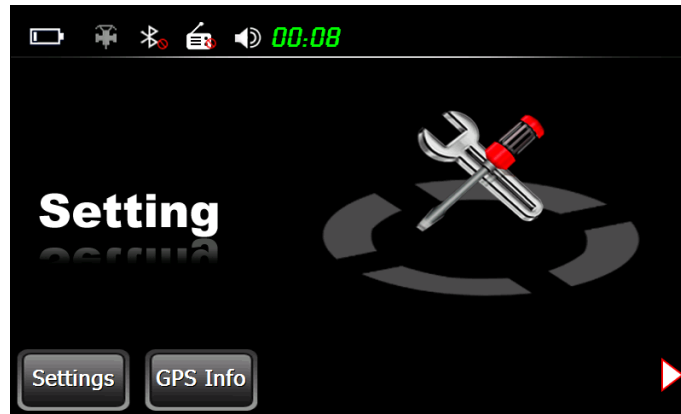

The main functions are listed as follows.

Function	Explanation
GPS	Tap to enable navigation function
Music player	WMA9 and WAV files supported; Random, sequence and cycle play supported
Video player	WMV, ASF and AVI files supported; Adjustment of playing progress, pause and full-screen play supported
Photo browser	JPG, GIF, BMP and PNG files supported; Photo rotation, zoom in/out and auto play supported
E-book	.txt files reading supporting page selection
Bluetooth	Enable wireless connection between the GPS navigator and a Bluetooth mobile phone
Games	Othello, DuiDuiPeng, Russia Block
Tools	Calculator and Unit
Setting	Volume, backlight, language, date& time, calibration, FM transmitter and system info
GPS Info	Display GPS signal state, reset GPS signal

## Chapter II GPS

Various navigation mapping applications can be installed in the GPS navigator, such as CARELAND and RITU intelligent navigation systems, which position the navigator via the satellite receiver and display it on the map. Set a destination, and the system will automatically work out the best path to help the user reach the destination safely and quickly.

### 2.1 Map

Due to transportation development, inconformity between products and real traffic information will occur a period after product release. Please drive according to road condition and abide by traffic regulations.

### 2.2 Navigation

Navigation paths are for reference only, and the user may decide whether to follow them.

### 2.3 Reception

High and crowded structures (such as inside of tunnels, space between high buildings, underground car parks and under viaducts), weather change or satellite signals turnoff may influence signal reception, resulting in positioning failure, inaccurate positioning, navigation failure or system function abnormality.

With stereoscopic maps, instant animation, voice prompt and text prompt of the navigation system, you will appreciate its unique charm and enjoy a great trip.

Different navigation maps may have different operation methods. Please follow instructions of corresponding navigation mapping applications.

## Chapter III Media

The Media function includes the music player, video player, photo browser and e-book reader.

### 3.1 Music Player


This section introduces the usage of the music player.

 
#### 3.1.1 Features

The music player supports WMA9 and WAV files and also supports selection of play sequence.

Copy audio files to a folder in your memory card before using the player.





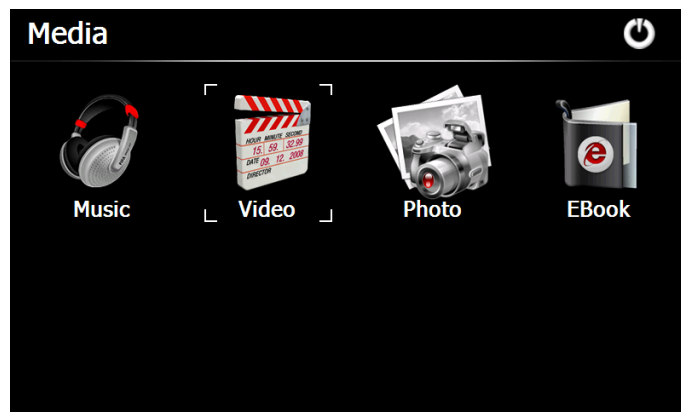






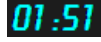

#### 3.1.2 Interface and Operation

Tap  in the system main interface to enter the Media interface as follows:

 



Tap  to enter the Music Play interface as follows:



Icon	Name	Explanation
	Close	Close the music player.
	Minimize	Minimize the music player and return to the Media interface.
	Play	Continue playing the paused/ stopped music.
	Pause	Make the music being played pause.
	Stop	Stop the music being played.
	Set play sequence	Select sequence, random or cycle play.
	Previous	Play the previous music.
	Next	Play the next music.
	Volume	Drag it leftward to turn down or rightward to turn up the volume.
	Progress	Drag it leftward or rightward to play from a previous or future moment.
	Music list	Enter it to select music to play.
	Time	Display the run time.
	Equalizer	Enter the equalizer.

Tap  in the Music Play interface to enter the Music list as follows:

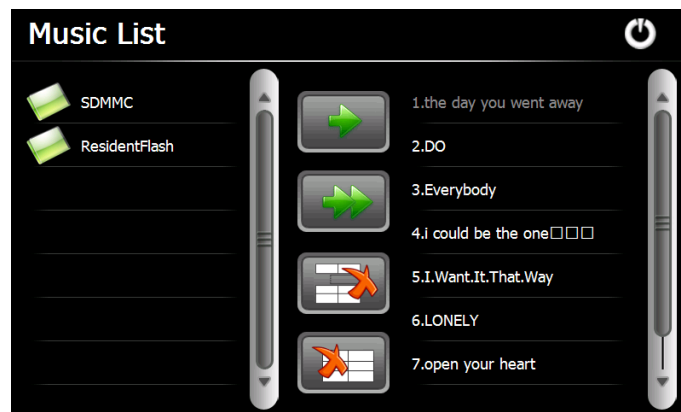

Icon	Name	Explanation
	Close	Close the Music List.



Scroll bar Drag it upward/ downward to view all music.



Add one Add a piece of music on the left list to the play list on the right.




Add all Add all the music on the left list to the play list on the right.

 





Delete one Select one piece of music in the play list and tap the icon to delete it.



 
Delete all Delete all the music in the play list.

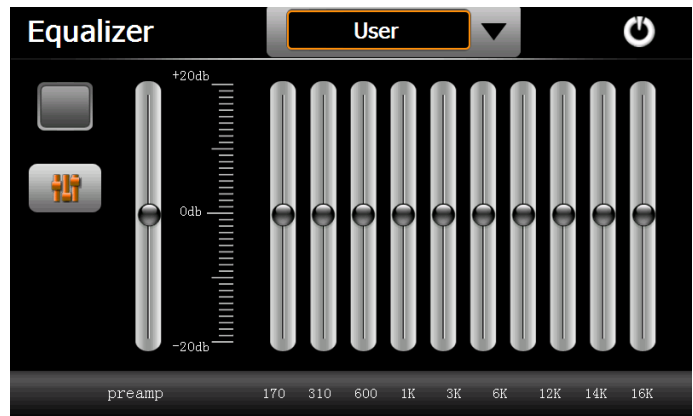Tap  in the Music Play interface to enter the Equalizer Setting interface as follows:



Tick in  on the upper left of the above interface, and then tap  to select a music type or “User” from the drop-down menu. The music types include Pop, Rock, Metal, Dance, Electronic, Country, Jazz, Oldies, Blues, Nostalgia, Opera and speech. If “User” is selected, you may drag the slider at will to set the equalizer. After setting, tap  to save and return to the Music Play interface.

Note: If your memory card contains corresponding. Irc files for the music being played, and then lyrics will be played at the right side of the Music Play interface. Double tap the lyrics area to view the lyrics in full screen as shown below. Under full screen mode, double tap the screen to return to normal-sized interface.

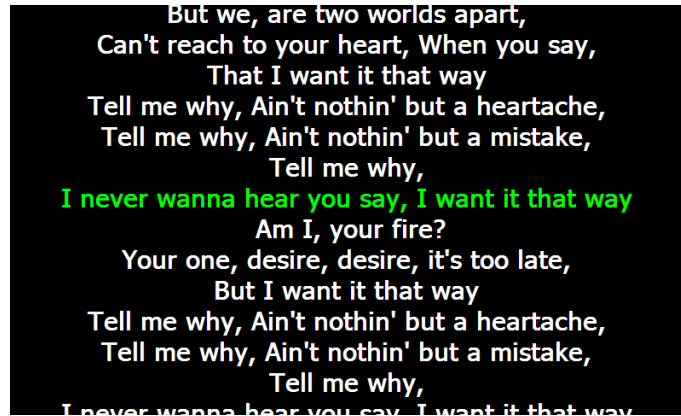

## 3.2 Video Player


This section introduces the usage of the video player.

 
### 3.2.1 Features



The video player supports WMV, ASF and AVI files, full-screen play, progress selection and file selection.



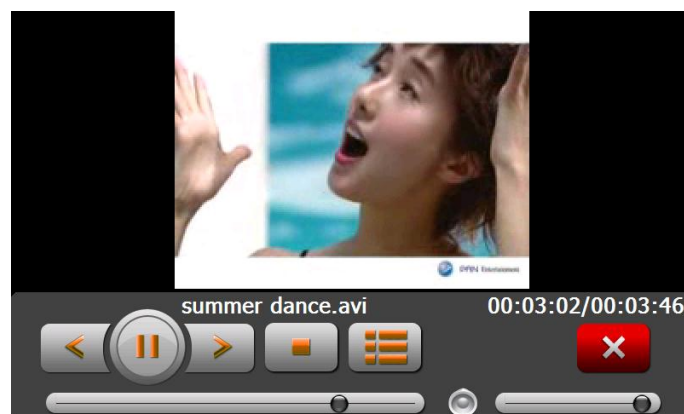


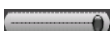
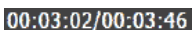
Copy video files to a folder in your memory card before using the player.


### 3.2.2 Interface and Operation

 
Tap  in the Media interface to enter the video player interface as follows:






Icon	Name	Explanation
	Close	Close the video player.
	Previous film	Play the previous film.

	Play	Continue playing the paused/ stopped music.
	Next film	Play the next film.
	Stop	Stop the film being played.
	Video folder	Enter it to select a film to play.
	Progress	Drag the sliding block leftward to play from a previous moment or rightward coming moment.
	Volume	Drag it leftward to turn down or rightward to turn up the volume.
	Time	Display the play time and the music duration.

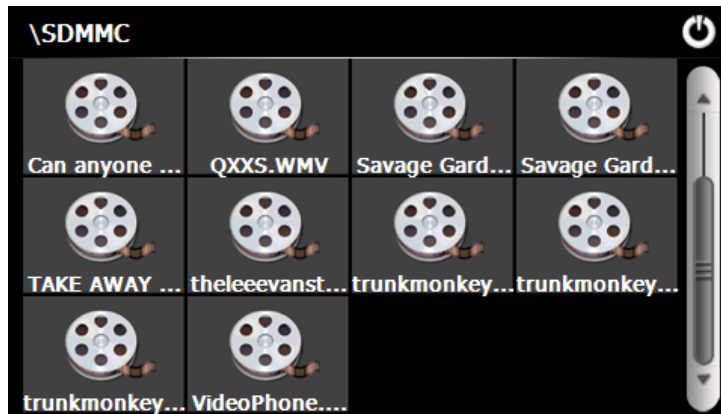Tap  in the Video Player interface to enter the video folder as follows:

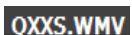

Icon	Name	Explanation
	Close	Close the video folder.
	Scroll bar	Drag the sliding block upward/ downward to view all the files inside the folder.
	Film name & format	Film name and its format

Select a video file from the above video folder interface and then tap on it to start the video playing.

### 3.3 Photo Browser


This section introduces the usage of the photo browser.

 
### 3.3.1 Features







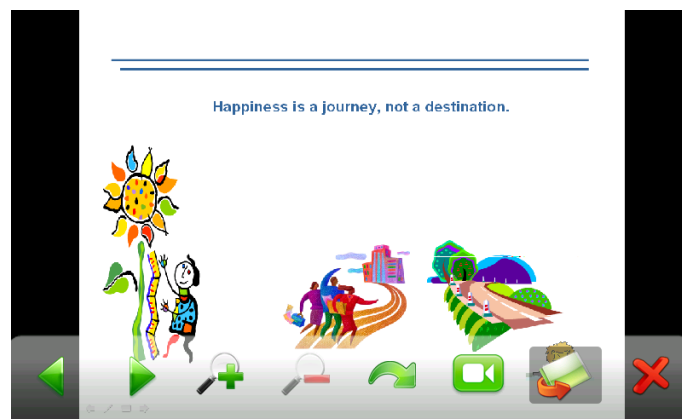

The photo browser supports JPG, GIF, BMP and PNG files, photo rotation, zoom in/ out and auto play.

Copy photos to a folder in your memory card before using the browser.


### 3.3.2 Interface and Operation

 
Tap  in the Media interface to enter the photo browser interface as follows.






Icon	Name	Explanation
	Previous	View the preview photo in the folder.
	Next	View the next photo in the folder.
	Zoom in	Scale up current photo.
	Zoom out	Scale down current photo.
	Rotate	Rotate current photo 90°clockwise.
	Auto play	Cycle play all the photos in the folder from current photo.
	Folder	Enter the photo folder to select a photo.
	Close	Close the browser and return to the Media interface.

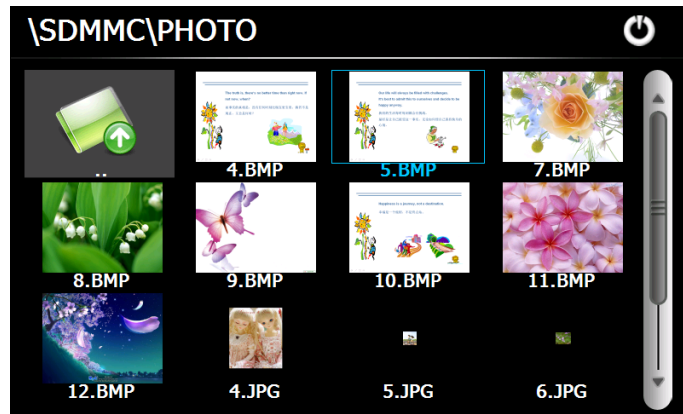


Tap  in the browser interface to enter the photo folder as follows:

 


Icon	Name	Explanation
	Close	Close the current folder.
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block to view all the photos.

In the above interface, double tap on the screen to display photos in full screen:



Tap  to enter auto play interface as shown below. Drag the slider at the bottom of the screen to regulate play speed (1-10 seconds), and then tap on the screen to hide the slide (or the slide will be hidden automatically); tap on the screen to show the slide. Double tap on the screen to stop playing and return to the browsing interface.

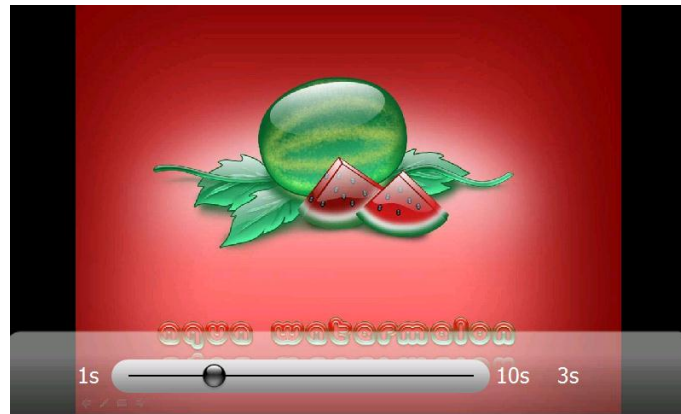

### 3.4 E-book Reader


This section introduces the usage of the E-book reader.

 
#### 3.4.1 Features



The reader supports TXT files, page turn and folder selection.





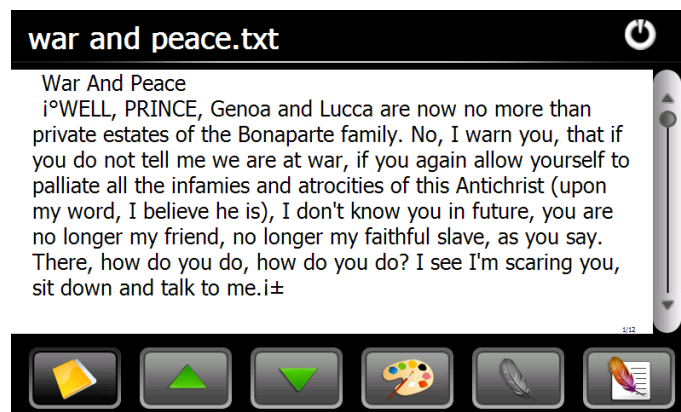


 
Copy .txt files to a folder in your memory card before using the browser.

#### 3.4.2 Interface and Operation

Tap  in the Media interface to enter the reader interface as follows.



Icon	Name	Explanation
	File name& format	Current file name and format
	Close	Close the reader.

	Scroll bar	Drag the sliding block upward/ downward to view all content of the e-book.
	Folder	Enter the e-book folder to select an e-book to read.
	Previous	Read the previous page.
	Next	Read the next page.
	Setting	Select a text theme, font, word size and bold type.
	New bookmark	Select partial text and tap the icon to create a bookmark.
	Bookmark list	Enter the bookmark list to select or delete a bookmark.
	Page/ total pages	Current page/ total pages


In the above interface, double tap the screen to enter to the full screen reading mode as follows:


forefathers not only spoke but thought, and with those slow, patronising intonations peculiar to a man of importance who has grown old in court society. He went up to Anna Pavlovna, kissed her hand, presenting her with a view of his perfumed, shining bald head, and complacently settled himself on the sofa.

First of all, tell me how you are, dear friend. Relieve a friend's anxiety, he said, with no change of his voice and tone, in which indifference, and even irony, was perceptible through the veil of courtesy and sympathy.








How can one be well when one is in moral suffering? How can one help being worried in these times, if one has any feeling? You'll spend the whole evening with me, I hope?


In the full mode reading interface, tap the upper part of the page to read the previous page, while

 
tap on the lower part of the page to read the next page; tap  to quit.

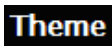



Tap  in the e-book reader interface to enter the setting interface as follows:



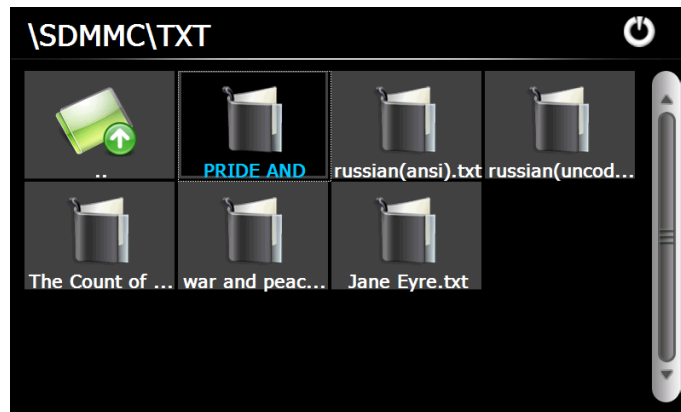

Icon	Name	Explanation
	Close	Exit the setting interface.
	Save	Save the setting.
	Theme	Tap  to select a theme for the e-book.
	Font	Tap  to select a font for the e-book.
	Bold	Tap to enable bold type. Tap it again to cancel.

 
Tap  in the e-book reader interface to enter the e-book folder as follows.





Icon	Name	Explanation
	Close	Close current folder
	Return	Return to the previous folder.
	Scroll bar	Drag the sliding block upward/ downward to view all TXT files.
 Jane Eyre.txt	File name& format	The file name and format.

To create a bookmark, locate a page by tapping  or  or dragging the scroll bar in the reader interface and drag to select text content. Tap  when it is on. Tap OK to finish.

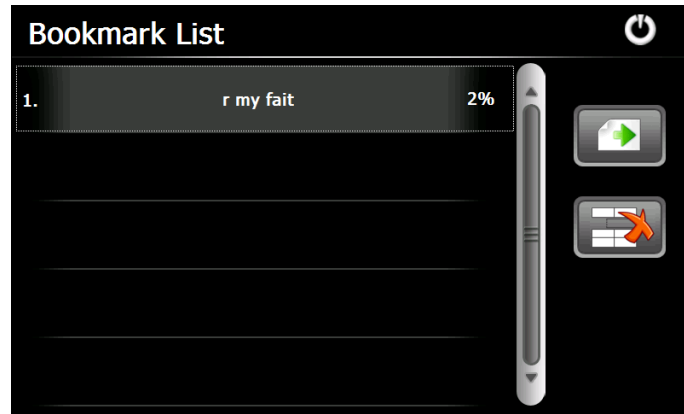

Tap  to view created bookmarks in the interface of Bookmark List shown as below.

 


Drag the scroll bar and select a bookmark on the left list. Tap  to go to the page with the bookmark or tap  to delete the bookmark.

## Chapter IV Bluetooth


This function realizes wireless connection between the GPS navigator and a Bluetooth mobile phone for making and answering calls. Before using this function, make sure that Bluetooth function of the cell phone has been enabled.

 
Tap  in the system main interface to enter the Bluetooth Interface as follows. To quit the interface, tap the icon .

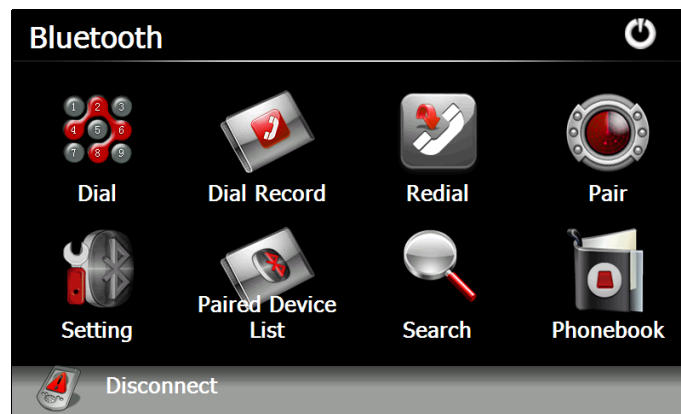

 
### 4.1 Pair

Pair the navigator and a mobile phone while setting up connection between them for the first time.


Tap  in the Bluetooth interface to enter the following interface.

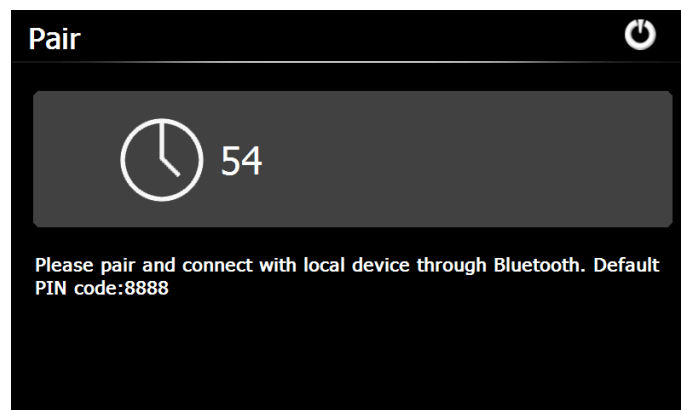 


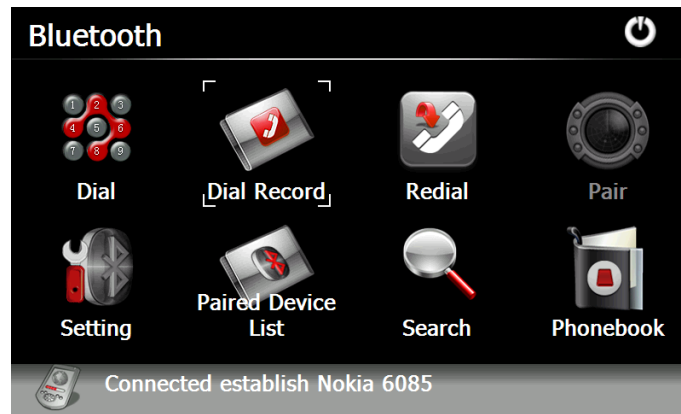


Meanwhile, press the icon “Search audio device” or similar one on the mobile phone. After the mobile phone finds and display the name of the navigator (i.e. PND), tap “Connect” and input the default PIN code: 8888. After pairing, the following interface will be displayed with connection situation and mobile phone name on the bottom.




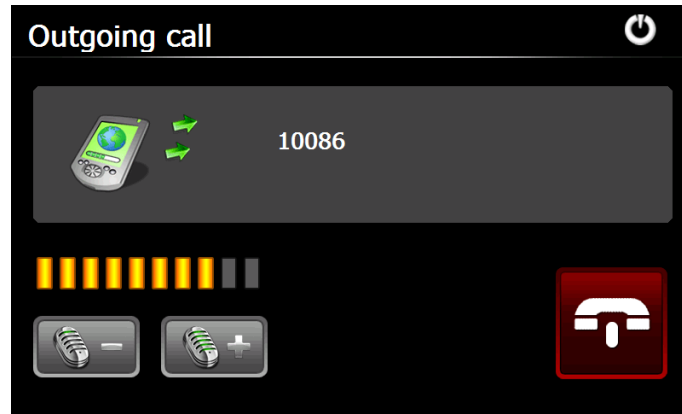 
## 4.2 Making a Call

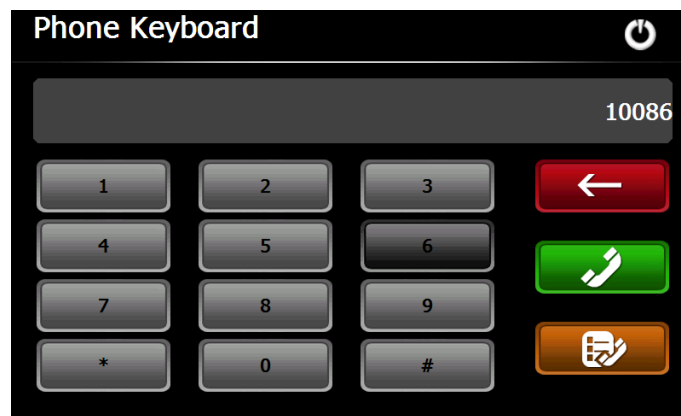


Tap  on the Bluetooth interface to enter the keypad interface as follows.



 
Icon	Name	Explanation
	Backspace	Delete the last input number or sign
	Dial	Dial the input number
	Call records	Check the answered call records, outgoing call records and missed call records





To make a call, input the number to call and tap  as shown below.

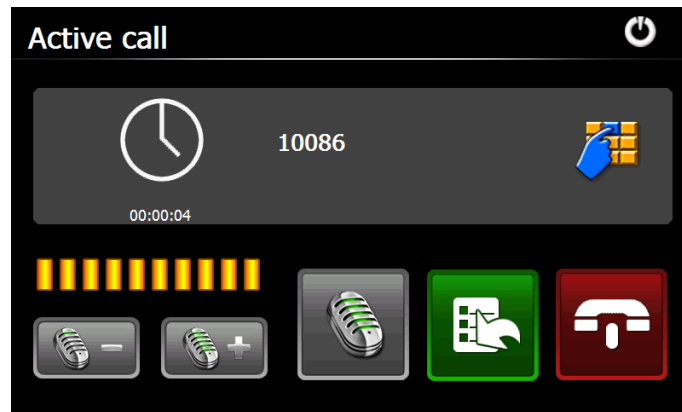


Icon	Name	Explanation
	Volume down	Reduce the volume
	Volume up	Increase the volume
	Hang off	End the call


After the call is put through, the following interface will be displayed.





Icon	Name	Explanation
	Volume down	Reduce the volume
	Volume up	Increase the volume
	Keypad	Open the keypad as shown in the following interface
	Microphone	Tap to stop audio input, and tap it again to resume audio input.



	Voice switch	Tap to switch the voice from the navigator to the mobile phone; to switch the voice back to the navigator, you may tap the “hands free” or similar icon on the mobile phone.
---	--------------	--

 
	Hang off	Hang off the call
---	----------	-------------------




To input numbers or other content during a call, tap  in the above interface to display the keypad as shown below. To hide the keypad, tap the icon  again.



### 4.3 Answering a Call

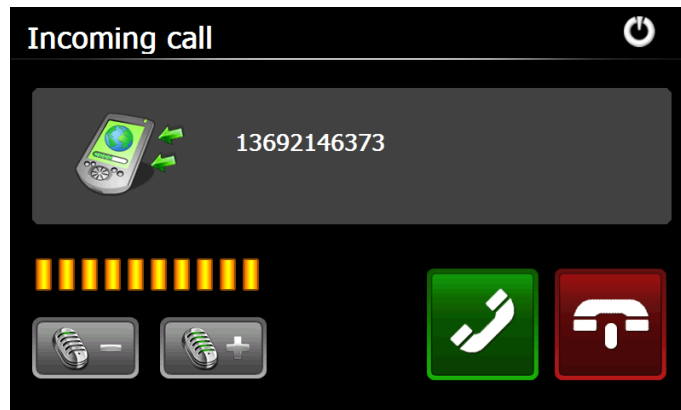When there is an incoming call, the following interface will be displayed.




Icon	Name	Explanation
	Volume down	Reduce the volume
	Volume up	Increase the volume
	Answer	Answer the call

 








Reject

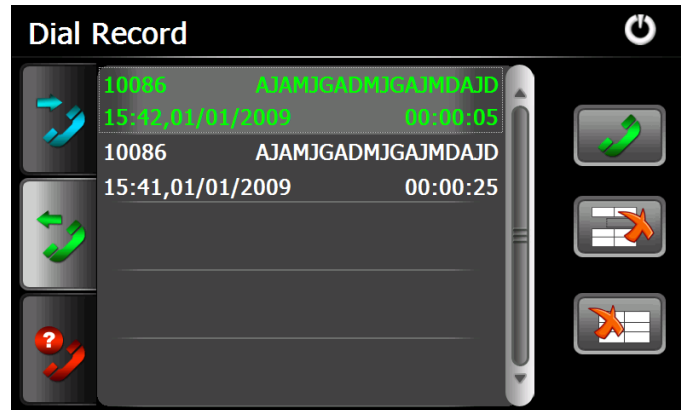Reject the incoming call


#### 4.4 Dial Record

Tap  in the Bluetooth interface to enter the call records interface as shown below.




Icon	Name	Explanation
	Incoming call records	Tap it to view the list of incoming call numbers.
	Outgoing call records	Tap it to view the list of called numbers.
	Failed call records	Tap it to view the list of failed calls.
	Generate	Select a number in the list and tap this icon to generate a call.
	Delete one	Select a number in the list and tap this icon to delete it.
	Delete all	Select all the numbers in the list and tap this icon to delete it.

 
#### 4.5 Redial







Tap  in the Bluetooth interface to redial the latest dialed number and display the call interface.

Refer to 4.2 Making a Call for detailed operation.

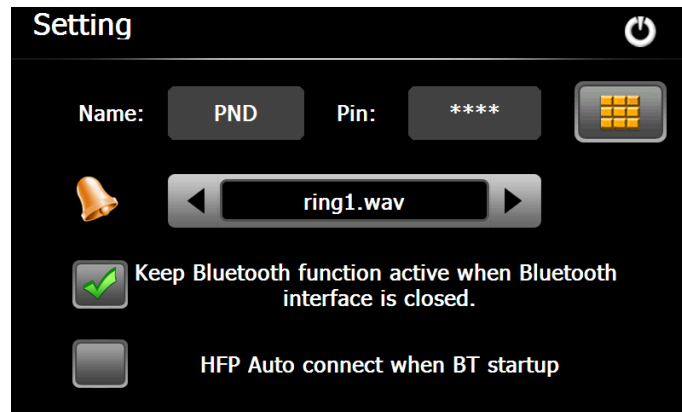
## 4.6 Setting

 
Tap  in the Bluetooth interface to enter the setting interface as shown below.



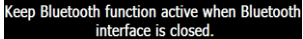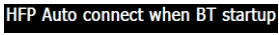


Icon	Name	Explanation
<b>Name:</b>	Name	The device's display name in the Bluetooth transmission process.
<b>Pin:</b>	Pin code	Tap  to set a pin code for the connection between the PND and mobile phone.
	Ring	Tap  /  to select a ring tone.
	(Optional)	If this item is selected, Bluetooth function remains enabled when the Bluetooth interface is closed. Otherwise, Bluetooth function will be disabled.
	(Optional)	If this item is selected, the system will generate auto hands-free profile between the navigator and the mobile phone when Bluetooth is restarted.


### 4.6.1 Modify Bluetooth Pin Code

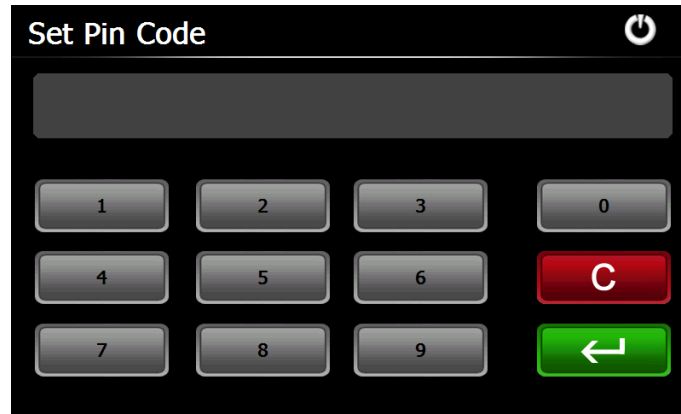To modify the Bluetooth PIN code, tap  in the above interface to enter the following interface.






Input a new PIN code, tap  to return to the setting interface and tap  to finish. To cancel the modification, tap  to return to the setting interface and tap it again to quit.


#### 4.7 Paired Device List

In the Bluetooth interface, tap the icon  to enter the Paired Device List interface as follows.






Icon	Name	Explanation
	Profile list	Select a paired device from the list on the left and tap this icon to view the profile list
	Delete one	Select a paired device and tap this icon to delete the device.
	Disconnect	Select a paired device and tap this icon to disconnect the navigator from the device.


## 4.8 Search Bluetooth Device

 
Tap  in the Bluetooth interface to enter the Search Bluetooth Device interface for auto Bluetooth device search and display as shown below.






Icon	Name	Explanation
	Search/Stop	search for Bluetooth devices; tap it again to stop search
	Pair	After selecting a Bluetooth device, tap the icon to pair the navigator and the mobile phone. The default PIN code “8888” Shall be input. After connection, the Profile List of the device will be displayed. Refer to 4.7 Pair Device List.
	Pair device list	Tap to enter the Pair device list. Refer to 4.7 Pair Device List.

## 4.9 Phonebook

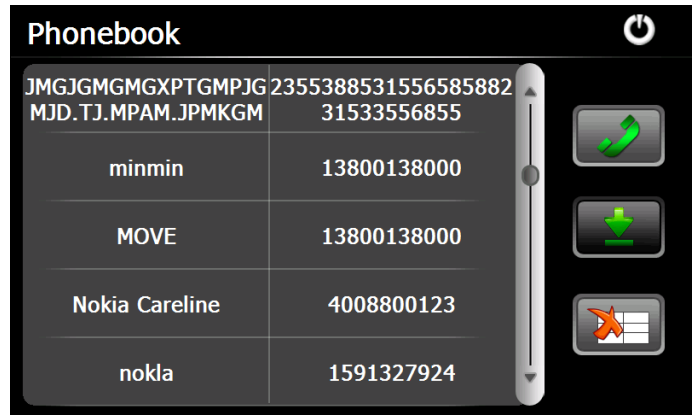
Tap  in the Bluetooth interface to enter the Phonebook interface as shown below.




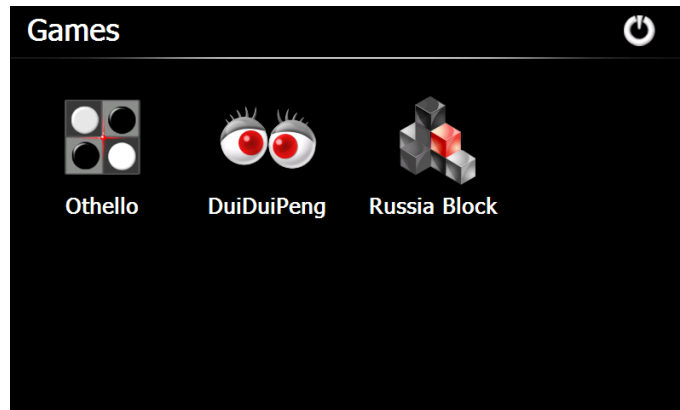 
Icon	Name	Explanation
	Download	Download the phonebook of the mobile phone to the PND.
	Dial	Select a number from the phonebook and tap this icon to generate a call.
	Delete	Select a number from the phonebook and tap this icon to delete it.

## Chapter V Games


This chapter introduces the usage of Games.

Tap  in the system main interface to enter the games interface as shown as below. Tap

 to exit.




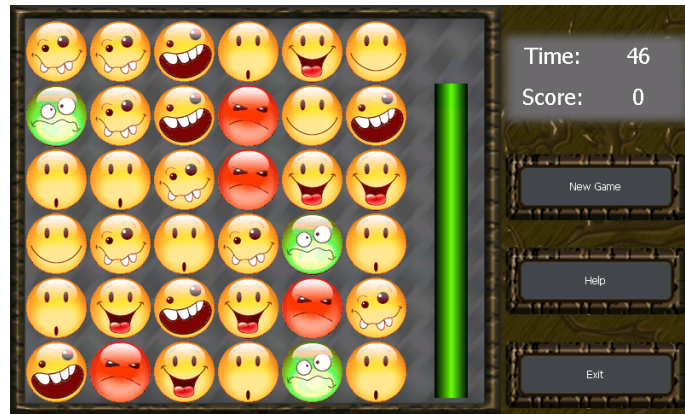 
### 5.1 Othello

Tap  in the Games interface to enter the interface as follows.




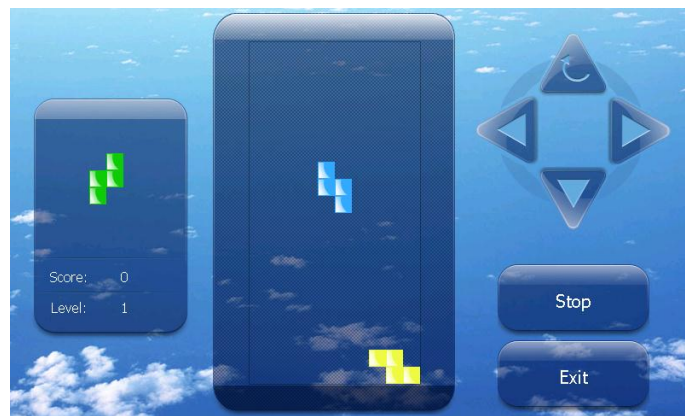 
### 5.2 DuiDuiPeng

Tap  in the Games interface to enter the interface as follows.



### 5.3 Russia Block

 

Tap  in the Games interface to enter the interface as follows.

 




## Chapter VI Tools

The tools include Calculator and Unit conversion.

Tap  in the system main interface to enter the tools interface as follows. Tap  to exit.

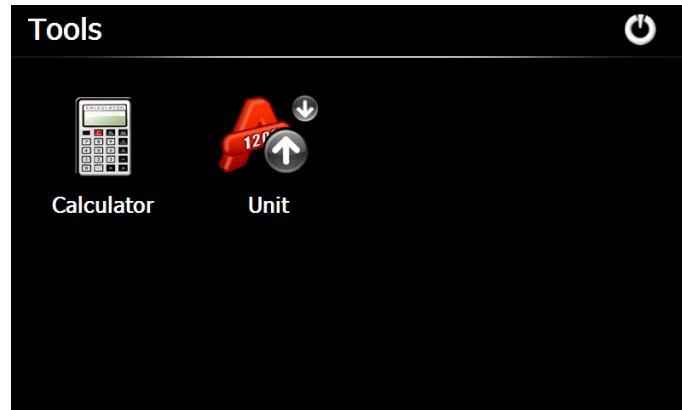


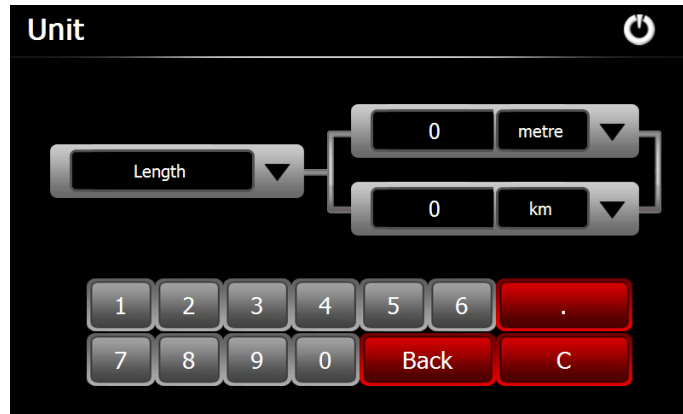 
### 6.1 Calculator

Tap  in the Tools interface to enter the calculator interface as follows:



### 6.2 Unit


Tap  in the Tools interface to enter the unit converter interface as follows:

 



## Chapter VII Setting

 
### 7.1 Summary

This chapter introduces the setting of the GPS navigator.

Tap  in the system main interface to enter the setting interface as follows to set volume, backlight, language, date & time, calibration, factory Reset, system info, USB and navigation path.

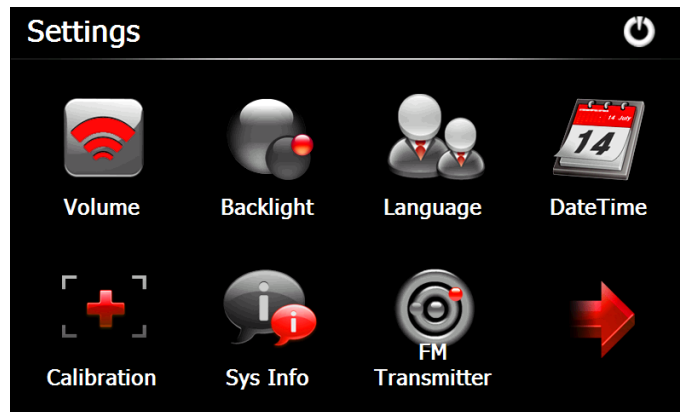


Tap the icon  to view the rest items of system settings as follows:

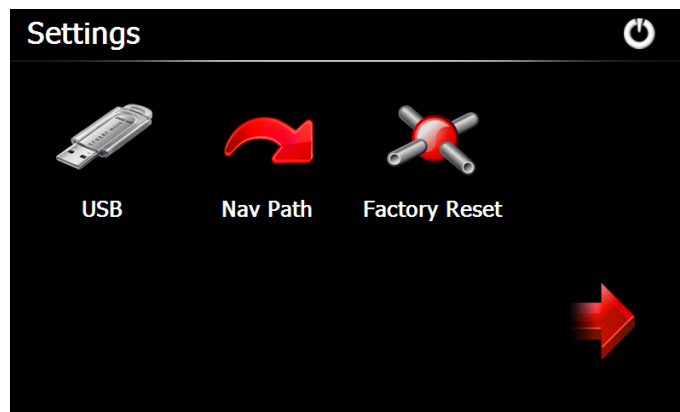 






 

Function	Explanation
Volume	Adjust the speaker volume; enable/ disable sounds for tap; Set startup music.
Backlight	Adjust the brightness of touch screen backlight; Set the interval of auto backlight off under power supply.
Language	Select a system language.

Date & Time	Set the system date, time, and time zone.
Calibration	Calibrate the screen when position deviation occurs.
System info	Display system information including ROM version, software version, OEM version, platform ID and device ID.
FM Transmitter	Transmits audio signals of the navigator to the radio set via frequency modulation.
USB setting	Set the data transmission mode between the navigator and computer.
Navigation path	Select a navigation path for the navigator.
Factory Reset	Reset the factory default settings.

## 7.2 Volume

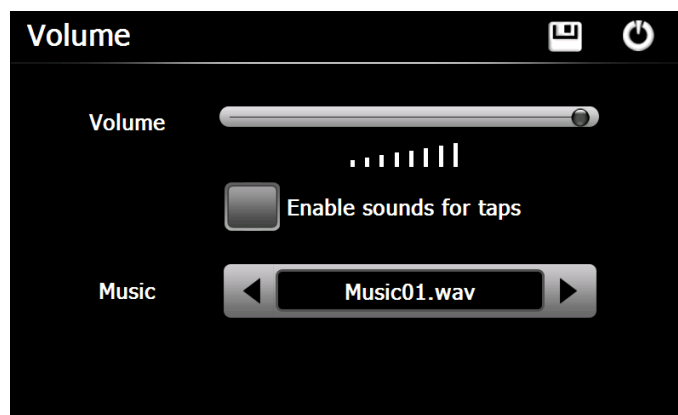Tap  in the setting interface to enter the volume setting interface as shown below.

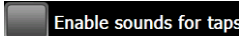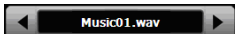 


 
	Close	Exit the volume setting.
	Volume	Ten volume grades (from mute to maximum) available. Tap to decrease the volume by grade.
	Sounds for taps	Tap it to enable the function. Tap it again to disable the function.
	Power-on music	Tap  or  to select power-on music or disable it.

### 7.3 Backlight

Backlight setting includes backlight brightness adjustment and latency of backlight off.



Tap  in the setting interface to enter the backlight setting interface as follows.

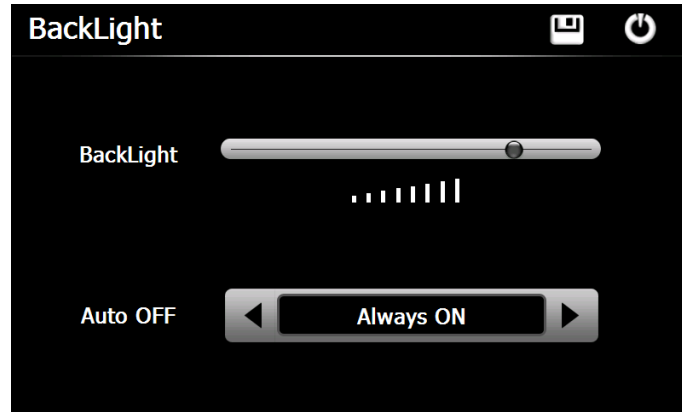

 
Close

Exit the backlight setting.


 


Backlight

Drag leftward to turn down or rightward to turn up the backlight.




Auto off




Auto backlight shutoff after service stop for a period. The options are always On, 10s, 30s, 1m, 2m and 3m. Tap  or  to view the options in cycle or select one.

### 7.4 Language




Tap  to enter in the setting interface to enter the language setting interface as follows.



 
Tap  or  to select a system language and tap  to save the selection.

## 7.5 Date & Time





Tap  to enter in the setting interface to enter the language setting interface as follows.

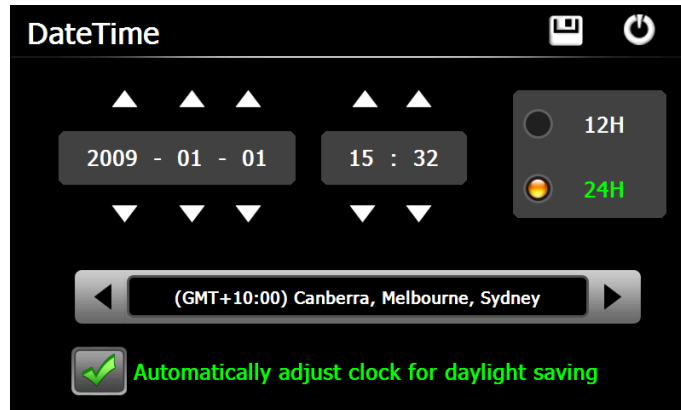Date & Time setting includes system date setting, time setting and time zone setting.





### 7.5.1 Setting the system date and time

In the above interface, tap  or  to set the year, month, day, hour and minute.

 
[Note]: Time format options are 12-hour and 24-hour. You may select one of them.

 
### 7.5.2 Setting the system time zone

In the above interface, tap  or  to select a time zone. For example, select “(GMT+10:00) Canberra, Melbourne, Sydney” for Australia.

 
## 7.6 Calibration



Tap  in the setting interface to prompt the calibration dialog as follows.

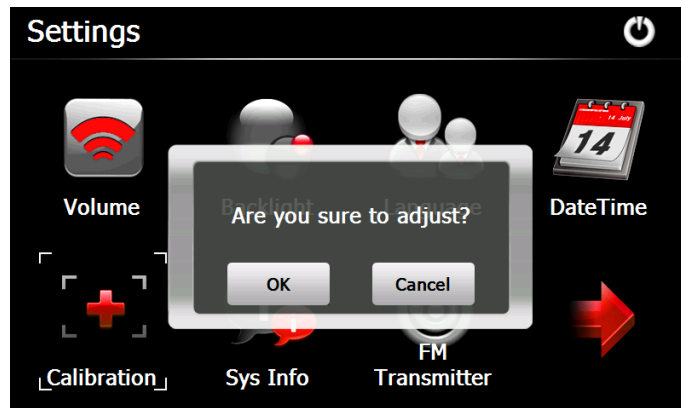


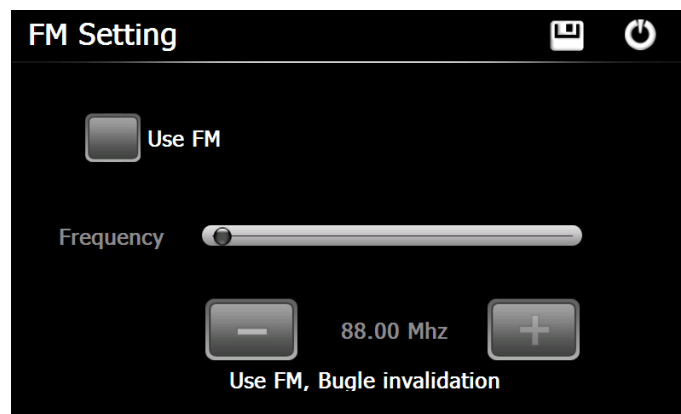 
Tap **OK** to execute calibration or **Cancel** to cancel calibration and go back to the setting interface.  
 Tap **OK**, and the following calibration interface is prompted. Click the center of cross cursor with the touch pen and the cursor shifts from the center, upper left, lower left, upper right and lower right to finish the calibration and the interface will be closed automatically to go back to the setting interface.

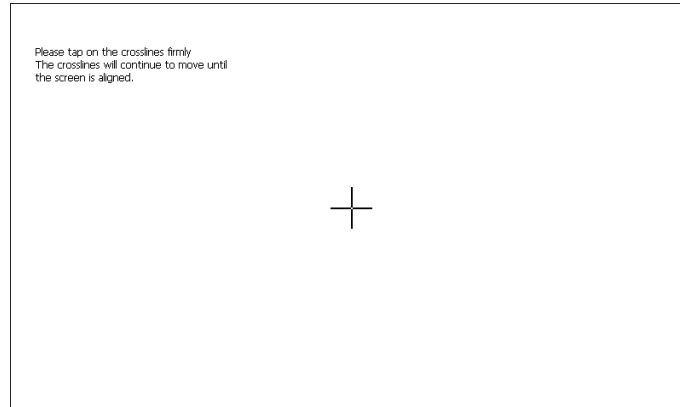




## 7.7 FM Transmitter

FM transmitter realizes transmission of audio signals of the GPS navigator to radio sets. Adjust the emission frequency of the GPS navigator the same as that of the receiving frequency of the radio, and sounds of the navigator will be output by the amplifier system of the radio sets.



Tap  in the setting interface to enter FM Setting interface as follows.



	Close	Exit the FM Setting.
	Save	Save current setting.
	Use FM	Tick in the box to enable FM function.



Frequency


Drag the slide block rightward (or tap ) to increase the frequency and leftward (or tap ) to reduce the frequency. The frequency range is 88.00 Mhz-108.00 Mhz.

 
## 7.8 USB setting

Connect the GPS navigator to PC via the MINI USB port to transmit data, or back up data from the navigator data to PC.

The GPS navigator provides MASS STORAGE and MS STORAGE modes. Select one in the USB setting.

### 7.8.1 MASS STORAGE

1. Have the GPS navigator in operation status and the SD card plugged in the slot;
2. Tap  in the setting interface to enter USB Option as follows.

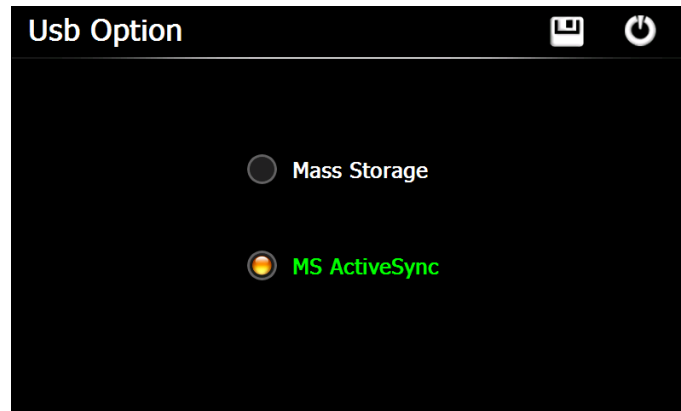


Select MASS STORAGE and tap  to save it.

3. Connect the MINI USB terminal of the USB cord to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC. Then, the computer will recognize the navigator and prompt the following interface.




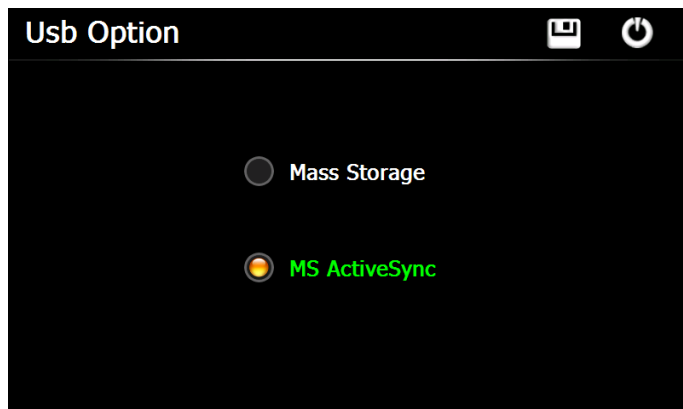 



To disconnect the navigator from PC and enter charging mode, you may tap .

5. After communication, unplug the MINI USB cable.

### 7.8.2 MS ACTIVESYNC

1. Tap  in the setting interface to enter USB Option as follows.



Select MASS ACTIVESYNC and tap  to save the setting.

2. Install the application Mobile Device in a drive of PC. Then the following icon will appear in the drive selection.



3. Connect the MINI USB terminal of the USB cable to the MINI USB port of the GPS navigator and the standard USB terminal to the USB Host port of PC.

4. After the PC finds new hardware, double click the Mobile Device drive in the selection area to enter the memory of GPS navigator for data transmission.

5. After transmission, unplug the USB cable.

[Attention] For data safety, please back up your system data in external storage. Our company has


no responsibility for lost or damage of system data.

[Note] If MASS STORAGE is selected while the GPS navigator is connected with PC, other operations will be suspended.

[Attention] The following operations will stop suspend the communication of the system and PC and unsaved data will be lost.

1. Unplugging the MINI USB cable;
2. Powering off the GPS navigator;
3. Resetting the system;
4. Tap the on close button on the top right.

## 7.9 Restoring the Factory Setting


Tap  in the setting interface to restore the factory setting. The following dialog will be prompted.

 
Chapter VII Setting



Tap OK to restore the default setting or Cancel to return to the setting interface.


## 7.10 System Info

 
Tap  in the setting interface to view the system information as follows.

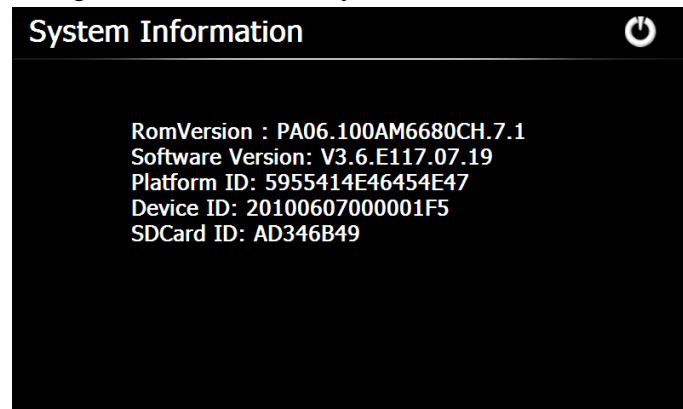


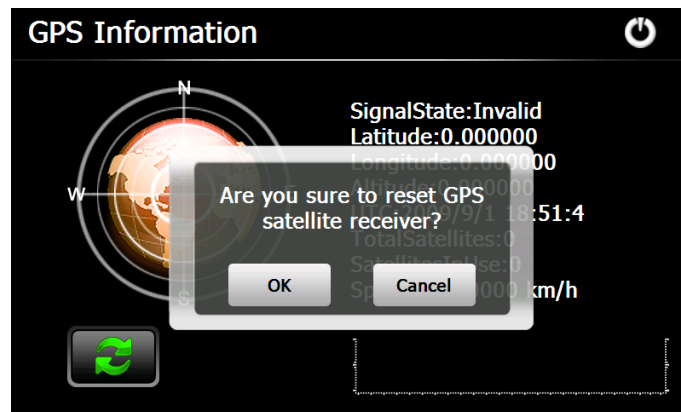 
The system information interface display information on hardware version, software version, platform identity, device identity and SD card identity.

## Chapter VIII GPS Info

Tap  on the system main interface to view the GPS information as shown below.

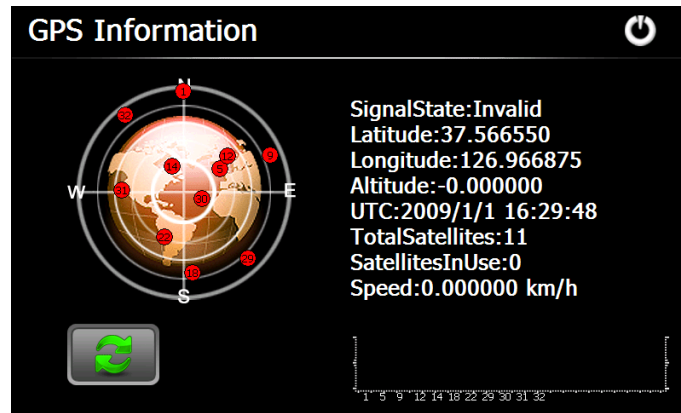

To reset the GPS satellite receiver, tap  to prompt a dialog as below.



Tap OK to reset the GPS satellite or tap Cancel to exit.

## Chapter IX Troubleshooting

Please carry out the following operations in case of abnormal operation of the GPS navigator. For further problems, please contact our customer service center.

Fault	Reason	Solution
Startup failure	Low battery	Supply external power and charge the battery.
	System down	Reset the GPS navigator.
Sudden power cut	Low battery	Supply external power and charge the battery.
No/ vague display	Low backlight	Turn up the backlight.
	Backlight off	Tap the screen with the touch pan.
Incorrect tapping response	Touch screen not calibrated	Recalibrate the screen.
No sounds	Low volume	Turn up the volume.
	Poor contact of earphone	Connect the earphone.
Communication with PC	Poor USB connection	Connect the USB cable.
GPS signals reception failure	Poor GPS signal	About 3 minutes are needed for low intensity of local GPS satellite signal.
Loss of map data	Accidental deletion	Contact your agent or distributor. Input a new password after recovering the GPS data.