## **Printer Installation Guide**




### Printing Method Direct therma 220mm/sec Printing Speed 203.2 DPI Dot Density (DPI) 0.125\*0.125 mm Dot Pitch (mm) Effective Printing Width 74mm, 588dots Unidirectional with friction feed Printing Direction Character/Line (14\*28) 42 columns Font B (10\*20) 58 columns Type Thermal paper Width 79.5mm (±0.5mm) Thickness 0.07mm Roll diameter 83 Ø mm TPH Life Reliability 100km MCBF 60,000,000 lines Character/Set Alphanumeric character Extended graphic 128 x 35 page EAN-8, EAN-13, CODE39, CODE93, CODE128, ITF, UPC-A, UPC-E, CODABAR Barcode ESC/POS command compatible TM-T88III Emulation Windows / OPOS Driver Interface Serial / Parallel / USB / Ethernet / USB+Serial combo 24 VDC / 2.5A Power 4 Kbyte Data Buffer Cutting Life 1.000,000 cuts Cutting method Partial cut Operation 0~40°C Temperature -20~60°C

\* 1) Printing speed may be slower depending on the data transmission speed and the control commands.

\* 2) The above values are calculated under printing low with recommended paper at normal temperature. The values may vary with environment temperature, printing level, etc.

## Unpacking

After unpacking the box, make sure all items shown below are in the box.

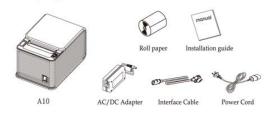


### Features

- · High performance CPU (ARM 9, 32bit)
- · Ultra fast printing speed to 220mm/sec
- · Specially designed font provides high readability. (1 Byte: 14 x 28dot / 2 Byte: 28 x 28dot)
- · High resolution to 203dpi
- · Support various interface (RS232C/Parallel/USB/Ethernet)
- · Support unicode, 34 type of character set
- · Available Extension Melody or Extension Voice
- · Windows, OPOS drivers
- · Compatible with EPSON or STAR cash drawer by Dip switch setting.

## Connecting the cables

- 1. Make sure the printer and the host computer are turned off
- 2. Connect the power cord to the adapter, and then connect the adapter to the printer.
- 3. Check the interface at the rear side of the printer and connect the interface connector
- 4. Connect drawer kick\_out cable to the drawer kick\_out connector on the printer.

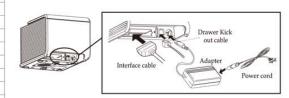


# Installing the paper roll



- 1. Press the cover open button to open the
- Remove any used paper roll core, and insert the new paper roll as shown on
- 3. Pull out some paper and close the cover.

When closing the cover, press down on the center of the cover to ensure the paper is in

### Control Panel

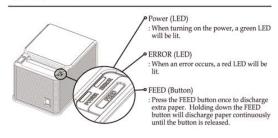

## Paper JAM



- 1. When the paper is jammed with cutter, stop printing.
- 2. Open the top cover and remove the jammed paper.
- 3. In case the top cover is stuck, repeat power on and off several times.
- 4. If the top cover is still struck, remove the cutter cover as shown on picture 1. using flat screwdriver
- 5. You will see the roller as shown on picture 2. Please keep moving the roller into (\$\sqrt{}\$) direction until the jammed paper is released.
- 6. After the jammed paper is removed, turn back on the printer.

13

No	Language	Code Page	Default Setting : English						
			SW2-6	SW2-5	SW2-4	SW2-3	SW2-2	SW2-	
1	USA, Standard Europe	CP-437	OFF	OFF	OFF	OFF	OFF	OFF	
2	Japanese	Katakana	OFF	OFF	OFF	OFF	OFF	ON	
3	Multilingual	CP-850	OFF	OFF	OFF	OFF	ON	OFF	
4	Portuguese	CP-860	OFF	OFF	OFF	OFF	ON	ON	
5	Canadian-French	CP-863	OFF	OFF	OFF	ON	OFF	OFF	
6	Nordic	CP-865	OFF	OFF	OFF	ON	OFF	ON	
7	Latin I	CP-1252	OFF	OFF	OFF	ON	ON	OFF	
8	Cyrillic Russian	CP-866	OFF	OFF	OFF	ON	ON	ON	
9	Latin II	CP-852	OFF	OFF	ON	OFF	OFF	OFF	
10	Euro	CP-858	OFF	OFF	ON	OFF	OFF	ON	
11		Thai-42	OFF	OFF	ON	OFF	ON	OFF	
12	Thailand character	Thai-11	OFF	OFF	ON	OFF	ON	ON	

OFF ON

No Sound

Internal Buzzer

Extension Melody

Extension Voice

LOW

NORMAL

NORMAL

HIGH

SOUND

Print Density

SW1-5

OFF

ON

SW1-7

OFF

ON

OFF

ON

ON

NO

SOUND

LOW

OFF

OFF

SW1-8

OFF

OFF

ON

ON

### Thai-16 OFF OFF ON ON OFF 15 Thailand character Thai-18 OFF OFF ON ON OFF ON CP-874 OFF OFF ON ON ON ON 17 Greek CP-737 OFF ON OFF OFF OFF OFF CP-775 OFF ON OFF OFF 19 Cyrillic CP-855 OFF ON OFF OFF ON OFF ON OFF ON 20 Turkish CP-857 OFF OFF 21 Icelandic CP-861 OFF ON OFF ON OFF OFF CP-862 OFF ON OFF ON OFF ON 22 Hebrew 23 Arabic CP-864 OFF ON OFF ON ON OFF 24 Greek II CP-869 OFF ON OFF ON ON 25 Cyrillic CP-1251 OFF ON ON OFF 26 Greek ON CP-1253 OFF ON OFF OFF 27 Turkish CP-1254 OFF ON ON OFF ON OFF 28 Hebrew CP-1255 OFF ON ON OFF ON ON CP-1256 ON ON OFF Arabic OFF ON OFF 30 Baltic CP-1257 OFF ON ON OFF OFF CP-1258 OFF ON ON ON ON Traditional 32 CP-950 ON ON ON OFF Chinese Big5 Simplified CP-936 ON ON ON ON OFF Chinese GBK 34 Japanese Shift-JIS CP-932 ON ON ON ON ON 35 Korean CP-949 ON ON ON ON

## Self Test

- 1. Make sure the paper roll is installed properly.
- 2. While holding down the FEED button, turn on the printer to begin self test.
- 3. The self test prints out the current ROM version and DIP switch settings.
- 4. Release the FEED button when self test is finished.
- 5. The printer is ready to receive data as soon as it completes the self-test.

## **DIP Switch Tables**

Make sure that power off when changing DIP switch setting.

No	Fuction		Default					
1	R5232-C Transmission Speed		SW1-3	SW1-2	SW1-1			
		2400BPS	OFF	OFF	OFF			
		4800BPS	OFF	OFF	ON			
		9600BPS	OFF	ON	OFF	9600BPS		
		19200BPS	OFF	ON	ON	7000010		
		38400BPS	ON	OFF	OFF	1		
		57600BPS	ON	OFF	ON			
		115200BPS	ON	ON	OFF			
2	RS232-C (Handshaking)		SW1-4			DTR/DSR		
		DTR/DSR	OFF					
		XON/XOFF	ON					