


# Advanced Enviro-Septic<sup>™</sup> (AES) Wastewater System Design & Installation Manual

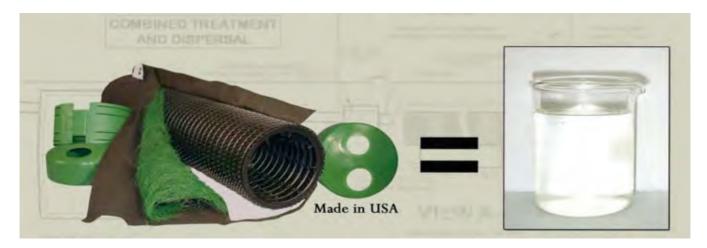

The onsite wastewater system sweeping the industry





### (AES) - Advanced Enviro-Septic Systems Design and Installation Manual

#### Preview 2011 RJC


Purpose	The purpose of this manual is to provide guidance in the design of septic leaching systems using the Presby Environmental, Inc. products.	
Presby Environmental, Inc., standards	All systems using Advanced Enviro-Septic® products must be a installed in compliance with the procedures and specifications d manual.	0
State uvcpf ctf u''	Advanced Enviro-Septic <sup>®</sup> when used as directed meets all the subsurface disposal of wastewater.	tandards for
In this manual	This manual contains the following subjects.	
	Section	Page
	A – Introduction	2
	B – Definitions of Terms	4
	C – Design Criteria	7
	D – Installation, Handling, and Storage Guidelines	8
	E – Sand and Fill Requirements	11
	F – Single Level System Configurations	12
	G – Multi-Level <sup>TM</sup> System Configurations	25
	H – Non-Conventional System Configurations	30
	I – Pump System Requirements	32
	J – Venting Requirements	33
	K – Bottom Drain Requirements	35
	L – Simple-Septic <sup>®</sup> Leaching Systems	36
	M – System Rejuvenation and Expansion	37
Use of attachment required	This manual requires the use of an attachment specific to your S Province in order to properly design and install Advanced Envir	0
Technical support	Action Tanks Industries, provides technical support to all indivi Environmental products. For questions about products or the in this manual, please contact us at 07-54424242	<b>u v</b>

#### Section A Introduction

Background	Liquid that exits from a septic tank (effluent) contains suspended solids that can cause other types of septic systems to fail prematurely. Solids can overload bacteria, cut off aeration required for bacterial activity, and/or seal the underlying soil.
Our unique system components	<ul> <li>The Advanced Enviro-Septic<sup>®</sup> System is a product consisting of three components.</li> <li>1. A corrugated, perforated, high-density plastic pipe with a unique series of ridges on the peak of each corrugation and plastic "skimmers" extending into the pipe's interior.</li> <li>2. A thick mat of randomly oriented plastic fibers surrounding the pipe.</li> <li>3. A special non-woven geo-textile plastic fabric around the mat of fibers.</li> </ul>
What our system does	By utilizing simple, yet effective, natural processes the Advanced Enviro- Septic® System treats septic tank effluent in a manner that prevents solids from entering surrounding soils, increases system aeration, and provides a greater bacterial area (mat) than traditional systems.
Why our system excels	The Advanced Enviro-Septic® System retains solids in its pipe and provides multiple bacterial surfaces to treat effluent prior to its contact with the soil. The continual cycling of effluent (the rising and falling of liquid inside the pipe) enhances bacterial growth. No other leaching system design offers this functionality. Our systems excel because they are more efficient, last longer, and have a minimal environmental impact.
System advantages	<ul> <li>Here's a brief list of the advantages of The Advanced Enviro-Septic® System .</li> <li>Costs less than traditional installation products and materials</li> <li>Requires a smaller area</li> <li>Eliminates "septic mounds" through sloping system installations</li> <li>Adapts to difficult sites</li> <li>Requires less fill</li> <li>Installs more easily and quickly than traditional systems</li> <li>Eliminates the need for expensive washed stone</li> <li>Adapts easily to both commercial and residential sites</li> <li>Uses a protected receiving surface</li> <li>Increases system performance and longevity</li> <li>Tests environmentally safer than conventional systems</li> <li>Recharges groundwater more safely than conventional systems</li> </ul>

#### Introduction, Continued

**What it looks** Here's a cross sectional diagram of Advanced Enviro-Septic® System<sup>®</sup> pipe. like

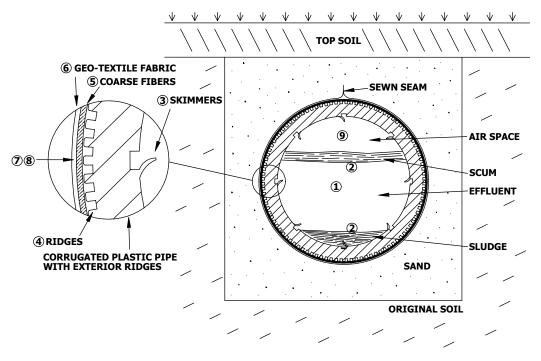

#### How it works

These are the basic stages that take effect in the Advanced  $\ensuremath{\mathsf{Enviro-Septic}}\xspace{\mathbb{R}}$  System

#### What Happens

1	Warm effluent enters the pipe and is cooled to ground temperature.
2	Suspended solids separate from the cooled liquid effluent.
3 '""""	"Skimmers further capture grease and suspended solids from the "effluent as it exits through perforations in the pipe.
4	Pipe ridges allow the effluent to flow uninterrupted around the circumference of the pipe and aid in cooling.
5	A mat of random, coarse fibers separates more suspended solids from the effluent.
6	Effluent passes into the geo-textile fabric and grows a protected bacterial surface.
7	Sand wicks the liquid from the geo-textile fabric and enables air to transfer to the bacterial surface.
8	Fabric and fibers provide a large bacterial surface to break down solids.
9	An ample air supply and fluctuating liquid levels increase bacterial efficiency.

#### Section B Definitions of Terms

Introduction	As you read through the information in this manual, you will encounter common terms, terms that are common to our industry, and terms that are unique to Advanced Enviro-Septic <sup>®</sup> (AES) systems. While alternative definitions 'ku'o c{ "gzkuv"y section defines these terms as they are used in this manual.
List of terms	<ul> <li>Here's a list of the terms defined in this section.</li> <li>Basic system</li> <li>Bottom drain</li> <li>Center-to-center spacing</li> <li>Combination system</li> <li>Coupling</li> <li>Design flow</li> <li>D-box</li> <li>Differential venting</li> <li>Distribution box</li> <li>Distribution box</li> </ul>
	<ul> <li>Distribution box manifold</li> <li>Double offset adapter</li> <li>Drain sump</li> <li>Drop connection</li> <li>End cap</li> <li>Enviro-Septic<sup>®</sup> pipe</li> <li>Equalizer<sup>TM</sup></li> <li>##LPD</li> <li>High and Low Oxygen Demand Vent (ODV)</li> <li>High flow</li> <li>Level system</li> <li>Line</li> <li>Low flow</li> <li>Multi-Level<sup>TM</sup> system</li> <li>Offset adapter</li> <li>Raised connection</li> <li>Section</li> <li>Serial distribution</li> <li>Simple-Septic<sup>®</sup> pipe</li> <li>Sloping system</li> </ul>
Basic system	A is a system consisting of one section of Advanced Enviro-Septic <sup>®</sup> pipe.
Bottom drain	A <u>bottom drain</u> is a pipe connecting the end of a line to a drain sump.

## Definitions of Terms, Continued

Center-to-center spacing	<u>Center-to-center spacing</u> is the horizontal distance from the center of one line to the center of the adjacent line.
Combination system	A <u>combination system</u> is a system incorporating two or more sections of Enviro-Septic <sup>®</sup> pipe, each section receiving effluent from a distribution box.
Coupling	A <u>coupling</u> is a fitting that joins two pieces of Advanced Enviro-Septic <sup>®</sup> pipe.
D-Box	<u>D-Box</u> is an abbreviation for distribution box.
Design flow	Design flow is the determined LPD flow as dictated by State and/or local code or rule.
Differential venting	Differential venting is a method of venting an Advanced Enviro-Septic <sup>®</sup> system utilizing high and low vents.(Oxygen Demand port)
Distribution box	A <u>distribution box</u> is a device used to divide and/or control effluent flow.
Distribution box manifold	A <u>distribution box manifold</u> is a method of joining any number of distribution box outlets to a single pipe.
Double offset adapter	A <u>double offset adapter</u> is an end cap with two offset holes.
Drain sump	A <u>drain sump</u> is a watertight chamber connected to the end of a bottom drain line.
Drop connection	A <u>drop connection</u> is a PVC pipe arrangement used to connect different levels of Advanced Enviro-Septic <sup>®</sup> pipe used in Multi-Level <sup>TM</sup> systems.
End cap	An <u>end cap</u> is a solid cap used to seal the end of an Advanced Enviro-Septic <sup>®</sup> pipe.
Enviro-Septic <sup>®</sup> pipe	An <u>Advanced Enviro-Septic</u> <sup>®</sup> pipe is a single unit of pipe, 3m in length with an outside diameter of 300mm and a storage capacity of approximately 220 litres.
Equalizer <sup>tm</sup>	An <u>Equalizer</u> <sup>TM</sup> is a plastic insert installed in the outlet lines of a distribution box to provide more equal effluent distribution to each outlet.
LPD	<u>LPD</u> is an abbreviation for litres per day. <i>Continued</i>

## Definitions of Terms, Continued

High and low vents *QFX+	High and low *QFX+'vents are pipes used in differential venting.
High flow	<u>High flow</u> is the minimum "design flow" requiring combination or distribution box system designs.
Level system	A <u>level system</u> is a system in which lines of Advanced Enviro-Septic <sup>®</sup> are installed at the same elevation.
Line	A <u>line</u> is a number of Advanced Enviro-Septic <sup>®</sup> pipes connected by couplings with an offset adapter on the inlet end and an offset adapter or end cap on the opposite end.
Low flow	Low flow is any "design flow" lower than "high flow."
Multi-Level <sup>TM</sup> system	A <u>Multi-Level<sup>TM</sup> system</u> is a patented system consisting of at least two levels of Advanced Enviro-Septic <sup>®</sup> pipe separated by sand.
Offset adapter	An <u>offset adapter</u> is an end cap fitted with a 100mm offset hole at the 12 o'clock position.
Presby Maze <sup>®</sup>	A <u>Presby Maze</u> <sup>®</sup> is a plastic unit that traps suspended solids and pre-treats septic tank effluent inside a septic tank.
Raised connection	A <u>raised connection</u> is a PVC pipe arrangement used to connect lines of Advanced Enviro-Septic <sup>®</sup> pipe to maintain the correct liquid level inside each line.
Section	A <u>section</u> is a group of Advanced Enviro-Septic <sup>®</sup> lines in serial distribution receiving effluent from a distribution box in a combination system.
Serial distribution	A <u>serial distribution</u> is a group of Advanced Enviro-Septic <sup>®</sup> lines* connected with a raised and/or drop connection.
	*See "line" in this section.
Simple-Septic <sup>®</sup> pipe	A <u>Simple-Septic<sup>®</sup> pipe</u> is a product identical to Advanced Enviro-Septic <sup>®</sup> with the exception of the thick mat of randomly orientated plastic fibers between the corrugated plastic pipe and the geo-textile fabric.
Sloping system	A <u>sloping system</u> is a system in which lines of Advanced Enviro-Septic <sup>®</sup> are installed atdifferent elevations.

### Section C Design Criteria

Introduction	This page discusses general design criteria.
Line orientation	Advanced Enviro-Septic <sup>®</sup> lines must be laid level and should run parallel to contours (perpendicular to sloping terrain) if possible.
Longer lines preferable	In general, fewer long lines are preferable to a greater number of short lines. Longer lines provide more efficient settling of solids. In addition, longer more narrow systems reduce the potential for ground water mounding.
Minimum/maxi- mum line lengths	To maintain efficient effluent cycling, the minimum length of an Advanced Enviro-Septic <sup>®</sup> line should be 9m and the maximum length 30m. In some instances site conditions may require shorter or longer lengths.
	<u>Reference</u> : See Section H, "Non-Conventional System Configurations."
3 meter increments work best	It is easier for the installer if systems are designed in 3m increments since Advanced Enviro-Septic <sup>®</sup> pipe is 3m in length. However, the pipe is easily cut to any length necessary with a sharp knife.
Line elevations	For sloping systems it is helpful to provide elevations on the design for each line of the system.
Septic tank and D-Box elevations	The outlet of a septic tank or D-Box must be set at least 50mm above the highest inlet of the Advanced Enviro-Septic <sup>®</sup> line.
Depth and types of cover	While most installations should avoid a cover depth of more than 450mm, some conditions will require exceeding this limit. In particular, Advanced Enviro-Septic <sup>®</sup> systems with paved cover and/or vehicular traffic require a <u>minimum</u> of 450mm of cover along with appropriate venting.
	Reference: See Section J, "Venting Requirements."
Provide notes for homeowners	Designers should add homeowner notes to their designs regarding system use and maintenance. Notes should include topics such as abusive substances, additives, constant discharge, etc. Suggested tank pumping and inspection schedules would also be beneficial.
See State requirements	Local and State jurisdictions may require additional design specifications.

#### Section D Installation, Handling, and Storage Guidelines

Introduction	This page contains guidelines that must be observed while installing, handling, and storing Enviro-Septic <sup>®</sup> products.
Site preparation	<ul> <li>Here are some site preparation guidelines.</li> <li>Remove topsoil, roots, and organic matter under the required sand area of a proposed system, including the slope extensions of raised systems.</li> <li>Maintain the existing characteristics of the underlying soil as much as possible.</li> <li>Add the sand fill on the same day that the leach area is excavated.</li> <li>Do not allow water to run into or over the system during construction.</li> <li>Do not work wet or frozen soils.</li> <li>Do not smear or compact soils while preparing site.</li> </ul>
	<u>Note</u> : It is not necessary for the leach area to be smooth when the site is prepared.
System components	Here's a picture of the Enviro-Septic <sup>®</sup> components.




<u>Contamination Note</u>: Keep mud, grease, oil, etc., from all system components. Avoid dragging pipe through wet or muddy areas.


#### Installation, Handling, and Storage Guidelines, Continued

## Use raised connections

Raised connections consist of offset adapters, 100mm PVC pipe and pipe elbows. They enable greater liquid storage capacity and increase the bacterial surfaces being developed. Use raised connections to connect lines of Enviro-Septic<sup>®</sup> pipe. Here is a diagram along with some installation notes.

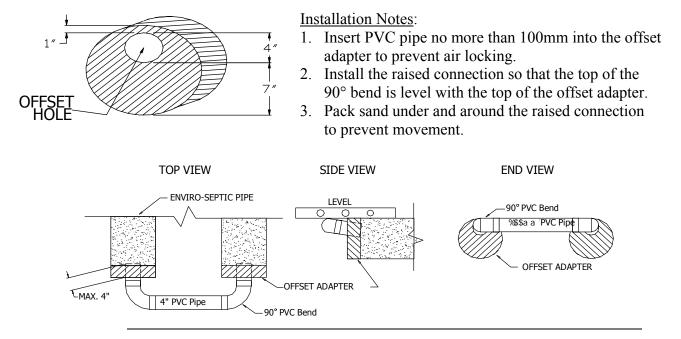

Line spacers While sand may be used to keep pipe in place while covering, simple tools may also be constructed for this purpose. Here are two examples. One is made from rebar, the other from wood.

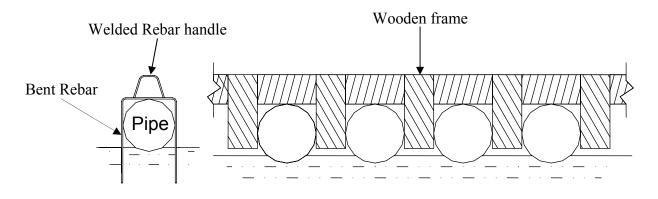

Caution: Remove all tools used as line spacers before final covering.

## Installation, Handling, and Storage Guidelines, Continued

Minimize machine movement to avoid soil compaction and destruction of the soil structure under and around the system. Be especially careful not to compact soil on the down slope side of the system.
Spread a minimum of 150mm of system sand over the pipe. Spread the remaining fill. Final grading should shed water away from the system.
Note: A tracked vehicle may be used to spread the system sand and topsoil as long as it maintains at least 300mm of cover over the pipe.
Protect the site from erosion by proper grading, mulching, seeding, and control of runoff.
The outer fabric of the Advanced Enviro-Septic <sup>®</sup> pipe is ultra-violet stabilized. However, the protection breaks down after a period of time in direct sunlight. To preventdamage to the fabric, cover the pipe with an opaque tarp.
Store pipe on high and dry areas to prevent surface water and soil from entering the pipes or contaminating the fabric prior to installation.

### Section E Sand and Fill Requirements

Introduction	This page describes the sand and fill requirements for the Advanced Enviro-Septic <sup>®</sup> Leaching System.
System sand	<u>All configurations</u> of Advanced Enviro-Septic <sup>®</sup> require a minimum of 6" of system sand surrounding the circumference of the pipe. This sand, typically gravelly coarse sand, must adhere to the following percentage and quality restrictions.
	Percentage Restrictions35% or less of the total sand may be gravel.40%-90% of the total sand is to be coarse and very coarse sand.Gravel Quality RestrictionsNo gravel is to exceed ¾" in diameter.No gravel is smaller than 2mm/.0787" in diameter.Coarse Sand Quality RestrictionsNo coarse sand is smaller than 0.5mm/.0196" in diameter.Fines Quality RestrictionsNo more than 2% of the total sand may pass through a 75 µm sieve.
	ASTM Standard: C-33 (concrete sand) meets the above requirements.
Sand fill and clean fill	Sand fill is the material used to surround the system sand. <u>Note</u> : System sand may also be used as sand fill. Clean fill is the material used to complete the system.
Raised system fill extensions	Raised systems require fill extensions. <u>Reference</u> : See "Raised systems fill extensions" in your State attachment.
Perimeter sand requirements	Systems sloping 10% or less require the system sand and sand fill area to extend a minimum of 300mm around the perimeter of the Enviro-Septic <sup>®</sup> pipe.
	Systems sloping greater than 10% require the system sand and sand fill area to extend a minimum of 300mm on three sides and 1.2m beyond the Enviro-Septic <sup>®</sup> pipe on the down-slope side.


### Section F Single Level System Configurations


IntroductionAdvanced Enviro-Septic <sup>®</sup> systems may be designed in a variety of unusual shapes such as curved, trapezoidal, or L-shaped to provide optimum design flexibility to address the challenges of each site. Reference: See Section H, "Non-Conventional System Configurations."Low flow systemsLow flow systems may use any of the configurations described in this section. Reference: See "Low Flow" In your State attachment.High flow systemsHigh flow systems must be designed as combination systems or distribution box systems. Reference: See "High Flow" In your State attachment.Sloping systemsThe percentage of slope refers to the slope of the Advanced Enviro-Septic <sup>®</sup> system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more there on environ the server to the submer service of the super server to the server to the super server to the super server to the server
Low flow systems       Low flow systems may use any of the configurations described in this section.         Reference:       See "Low Flow" In your State attachment.         High flow systems       High flow systems must be designed as combination systems or distribution box systems.         Reference:       See "High Flow" In your State attachment.         Sloping systems       The percentage of slope refers to the slope of the Advanced Enviro-Septie <sup>®</sup> system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more
systems       Reference:       See "Low Flow" In your State attachment.         High flow systems       High flow systems must be designed as combination systems or distribution box systems.         Reference:       See "High Flow" In your State attachment.         Sloping systems       The percentage of slope refers to the slope of the Advanced Enviro-Septic <sup>®</sup> system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more
systems       box systems.         Reference:       See "High Flow" In your State attachment.         Sloping systems       The percentage of slope refers to the slope of the Advanced Enviro-Septic <sup>®</sup> system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more
<b>Sloping systems</b> The percentage of slope refers to the slope of the Advanced Enviro-Septic <sup>®</sup> system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more
system, notthe existing terrain. The slope of the system and the existing terrain are not required to be equal. A sloping system can be designed with more
than one distinct slope and/or center-to-center pipe spacing in the same system. Maximum slope percentages are governed by jurisdiction specifications.
<u>Reference</u> : See the "Single Level Quick Reference Guide" in your State attachment.
Line orientation Enviro-Septic <sup>®</sup> lines must be laid level and should run parallel to contours (perpendicular to sloping terrain) if possible.
<ul> <li>Velocity reduction/</li> <li>Equalizer<sup>TM</sup></li> <li>If piping from the septic tank to Advanced Enviro-Septic<sup>®</sup> is excessively steep, a velocity reducer at the system inlet is necessary. A distribution box with a baffle or an inlet tee may be an adequate velocity reducer.</li> <li><u>Note</u>: An Equalizer<sup>TM</sup> is limited to a maximum of 38ltr /minute in gravity systems and 76litres/minute in pumped systems.</li> </ul>
In this section This section contains the following subjects.
Subject Page
Basic Serial Systems – Level In-Ground, Level Raised, In- 13
Ground Sloping, and Raised Sloping
Distribution Box Systems – Level In-Ground, Level Raised,16In-Ground Sloping, and Raised Sloping16
Combination Systems – Level In-Ground, Level Raised, In- Ground Sloping, and Raised Sloping
Trench Systems – Basic Serial and Distribution Box24

 
#### Basic Serial Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping

Introduction	This page shows basic serial distribution systems in level in-ground, level raised, in-ground sloping, and raised sloping configurations.	
Definition	A <u>basic serial system</u> is a series of lines of Advanced Enviro-Septic <sup>®</sup> connected by raised connections.	
Serial diagram	Here's a top view of lines of pipe in a serial configuration.	
	ENVIRO-SEPTIC PIPE OFFSET ADAPTER	

Level in-ground Here are end and top views of a level in-ground system.

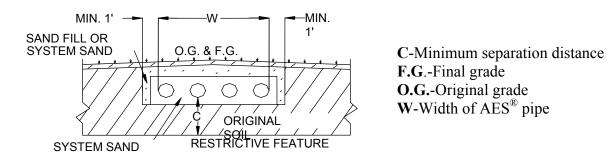

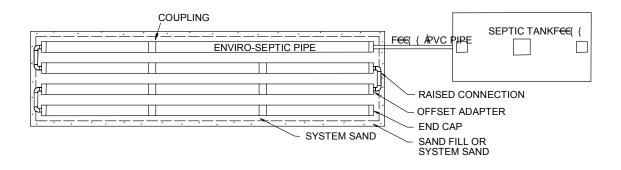



#### Basic Serial Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued


Here are end and side views of a level raised system.

 
A-Center-to-center pipe spacing C-Minimum separation distance F.G.-Final grade L-Length of Enviro-Septic<sup>®</sup> pipe O.G.-Original grade W-Width of Enviro-Septic<sup>®</sup> pipe

Note: Tank location may vary.

Level Raised


In-ground Here are end and top views of an in-ground sloping system. This system has a slope greater than 10%.

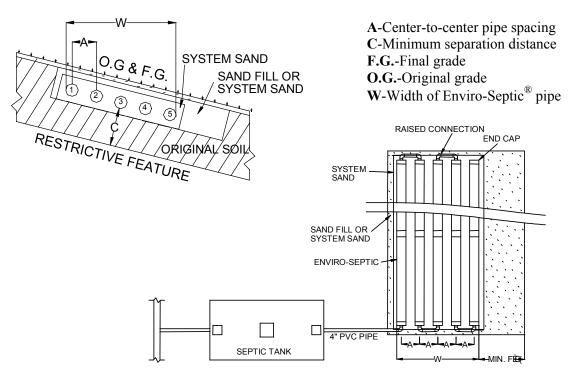



#### Basic Serial Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued

**Raised sloping** Here are top/side and end views of a raised sloping system. This system has a slope greater than 10%.

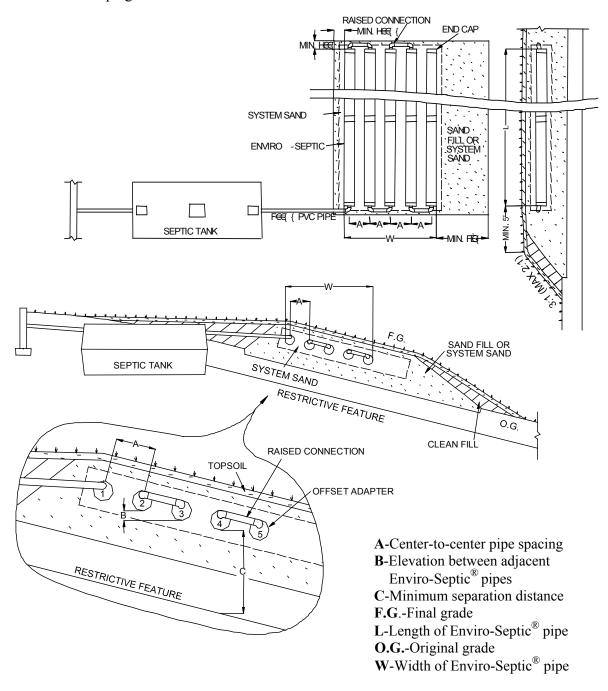

Note: Tank location may vary.


#### Distribution Box Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping

Introduction	This page shows distribution box systems in level in-ground, level raised, in- ground sloping, and raised sloping configurations.
Definition	A <u>distribution box system</u> is a number of system lines of equal length, each supplied evenly with effluent through a distribution box.
Equalizer™ required	<ul> <li>All distribution boxes that divide effluent flow in pump or gravity systems require an Equalizer<sup>™</sup> or its equivalent in their outlets.</li> <li><u>Note</u>: To prevent movement, be sure distribution boxes are placed on a stable soil base or concrete pad.</li> </ul>
Loading	Each line of a distribution box system has a maximum LPD limit. <u>Reference</u> : See "Loading Limits" in your State attachment.
D-Box diagram	Here's a top view of lines of pipe in a D-Box configuration. D-BOX SYSTEM (4 LINES)
	D-BOX
D-Box manifold	This D-Box top view shows a pipe manifold design. F€€{ { PVC PIPE D-BOX OUT NOUT NOUT N

UNUSED OUTLET


<u>Note</u>: Utilizing every other outlet will provide room for required piping and allow for easier installation

**D-Box pipe drop** This side view shows the minimum drop from a D-Box to a line of pipe.

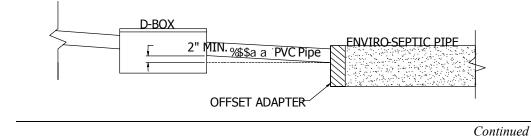

OUT


#### Distribution Box Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued

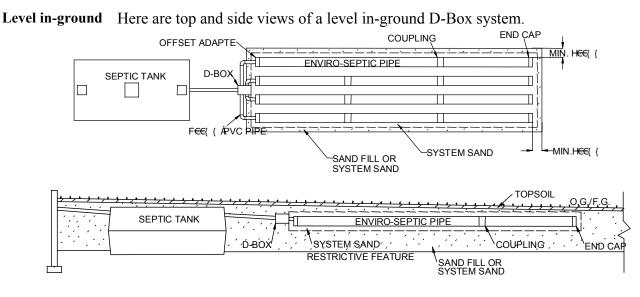


Note: Tank location may vary.



 Here are end and side views of a level raised D-Box system.

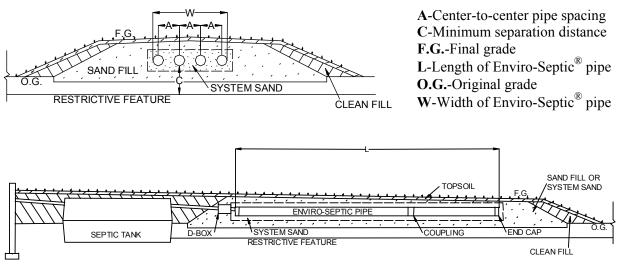





#### Distribution Box Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued


Level raised (continued)

 Here is a top view of a level raised D-Box system.

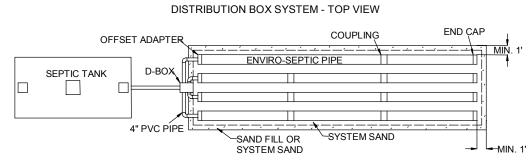




In-ground Here are end and side views of an in-ground sloping D-Box system. sloping

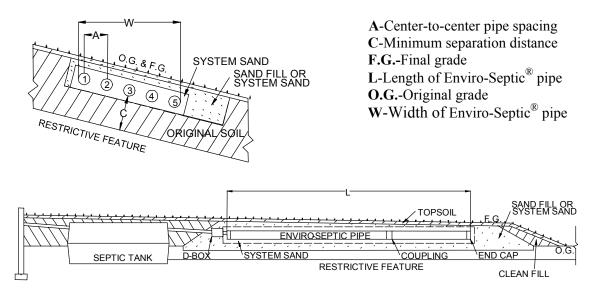

Note: Tank location may vary.

#### Distribution Box Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued

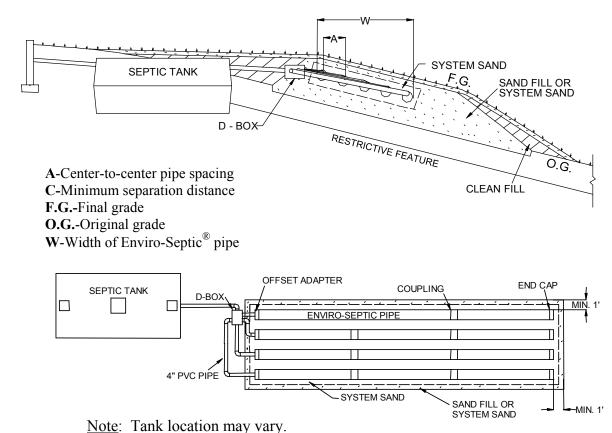


**Raised sloping** Here are end and top views of a raised sloping D-Box system.


#### Combination Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping


Introduction	This page shows combination systems in level in-ground, level raised, in- ground sloping, and raised sloping configurations.
Definition	A <u>combination system</u> is a system of two or more sections (lines of pipe connected in serial distribution) of pipe being supplied effluent evenly through a distribution box.
Loading	Each section of a distribution box system has a maximum LPD limit. <u>Reference</u> : See "Loading Limits" in your State attachment.

Level in-ground Here are end and top views of a level in-ground combination system.

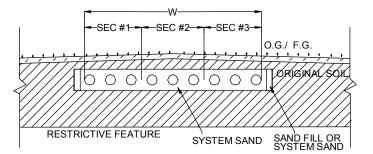


 **F.G.**-Final grade **O.G.**-Original grade **W**-Width of Enviro-Septic<sup>®</sup> pipe

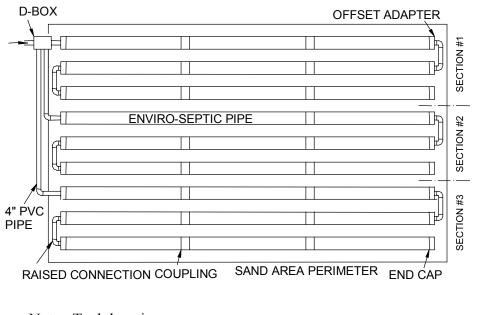




#### Combination Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued

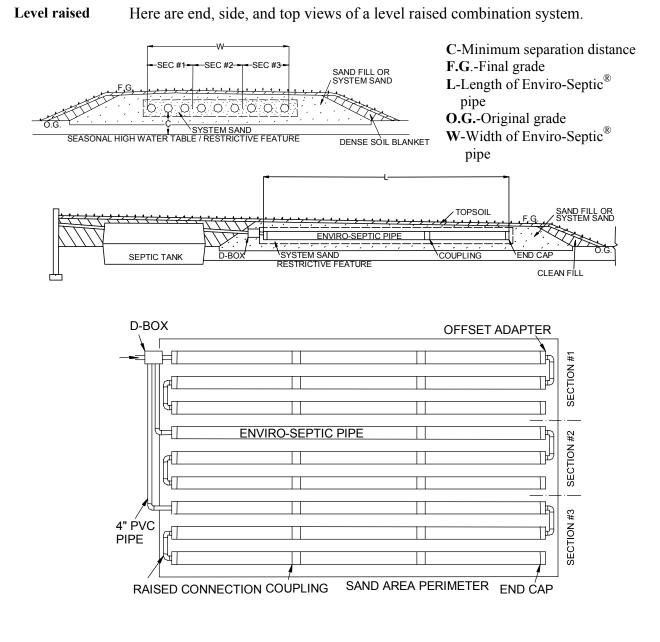

Note: Tank location may vary.

#### Combination Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued


**In-ground** Here are end and top views of an in-ground sloping combination system.

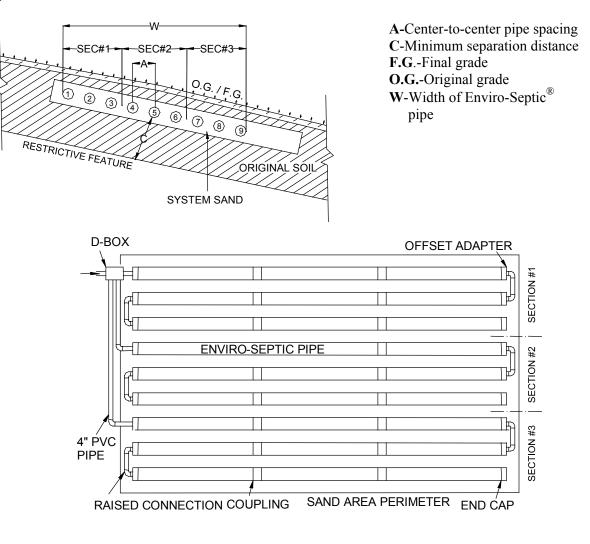

Note: Tank location may vary.

#### Combination Systems – Level In-Ground, Level Raised, In-Ground Sloping, and Raised Sloping, Continued

**Raised sloping** Here are end and top views of a raised sloping combination system.

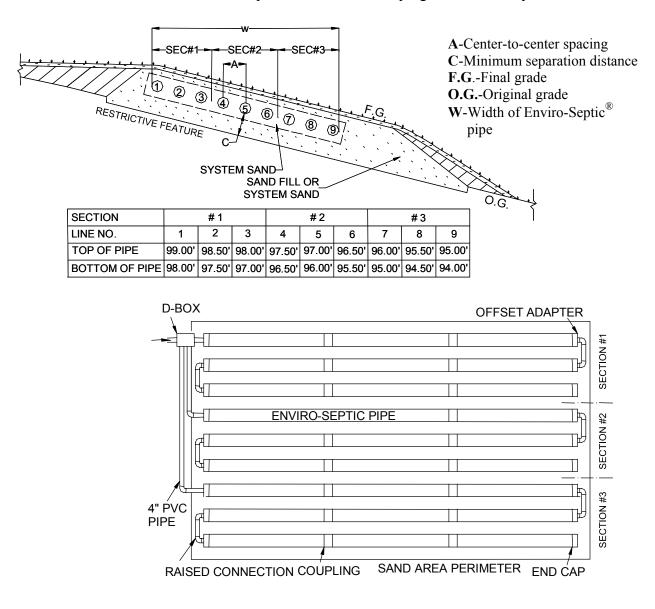

Note: Tank location may vary.

## Trench Systems – Basic Serial and Distribution Box

Introduction	This page shows trench systems in basic serial and distribution box configurations.	
Definition	A <u>trench system</u> is a line or lines of Advanced Enviro-Septic <sup>®</sup> pipe connected in serial or distribution box systems.	
Level or sloping terrain	Advanced Enviro-Septic <sup>®</sup> pipe may be installed in trench systems on level or sloping terrain. Advanced Enviro-Septic <sup>®</sup> pipes in trench configurations must be surrounded by a minimum of 150mm of system sand.	
	<u>Reference</u> : See "Trench system spacing" and "Sand fill and clean fill requirements" in your State attachment.	
<b>Basic serial</b>	Here's a top view of two lines of pipe in a basic serial trench configuration.	
-	RAISED CONNECTION	
D-Box	Here's a top view of two lines of pipe in a D-Box trench configuration.	
	END CAP	

OFFSET ADAPTER COUPLING

	Section G Multi-Level <sup>™</sup> System Configurations
Preview	
Introduction	Multi-Level <sup>TM</sup> systems are well suited to irregular shapes and/or difficult sites. By offering nearly two times the bacterial surface in the same footprint of ground, Multi-Level <sup>TM</sup> systems provide a cost effective solution for problem sites. Multi-Level <sup>TM</sup> systems are usually used on small lots or for systems that generate abnormally strong wastewater.
	Reference: See Section H, "Non-Conventional System Configurations."
Limited information	The diagrams provided in this section regarding Multi-Level <sup>TM</sup> systems are general in nature and not intended to represent all of the information required to design or install a Multi-Level <sup>TM</sup> system.
Design/install certification required	Designers and installers <u>must</u> be certified by Presby Environmental, Inc., (P.E.I.) or Chankar Environmental (C.E) to design or install a Multi-Level <sup>TM</sup> system.
	Once certified, P.E.I. is available to aid throughout the entire design and installation process.
	Non-certified exception: Non-certified designs and installations may be acceptable if performed under the direct supervision of P.E.I. or (C.E) its representatives.
Use limitations	Certain soil types or percolation rates may limit using Multi-Level <sup>TM</sup> installations.
Linear footage	Different states require specific considerations.
Pipe spacing	Each level of a Multi-Level <sup>TM</sup> system has the same center-to-center pipe spacing.
	The upper level is offset by $\frac{1}{2}$ the center-to-center spacing so the Advanced Enviro-Septic <sup>®</sup> pipe of one level lines up with the center of the sand area between the pipes of the other level.
	The bottom of the upper level pipe is separated from the top of the lower level pipe by a minimum of 150mm of system sand.


## Multi-Level<sup>™</sup> System Configurations, Continued

Line orientation	Advanced Enviro-Septic <sup>®</sup> lines must be laid level and should ru (perpendicular to sloping terrain) if possible.	In parallel to contours
Sloping systems	The percentage of slope refers to the slope of the Advanced Enviro-Sep not the existing terrain. The slope of the Advanced Enviro-Sep existing terrain are not required to be equal. A sloping system more than one distinct slope and/or center-to-center pipe spacin system. Maximum slope percentages are governed by jurisdict specifications.	ptic <sup>®</sup> system and the can be designed with ag in the same
Velocity reduction/ Equalizer <sup>TM</sup> consideration	If piping from the septic tank to Advanced Enviro-Septic <sup>®</sup> is ex a velocity reducer at the system inlet is necessary. A distribution or an inlet tee may be an adequate velocity reducer. <u>Note</u> : An Equalizer <sup>TM</sup> is limited to a maximum of 38 litres/mini- systems and 76 litres/minute in pumped systems.	on box with a baffle
Loading	Each line of a distribution box system has a maximum LPD lim	nit.
Venting	All Multi-Level <sup>TM</sup> systems must be vented in a manner that allows air to pass through each line of Advanced Enviro-Septic <sup>®</sup> pipe.	
In this section	This section contains the following subjects.	
	Subject	Page
	Drop Connections	27
	Basic Multi-Level <sup>TM</sup> Systems	28
	Combination Multi-Level <sup>TM</sup> Systems	29

#### **Drop Connections**


**Introduction** Drop connections are unique to Multi-Level<sup>TM</sup> installations.

**Drop connection** A drop connection is a piece of 100mm PVC pipe connecting two levels of Advanced Enviro-Septic<sup>®</sup> pipe. The diagrams below show drop connections in two different configurations.

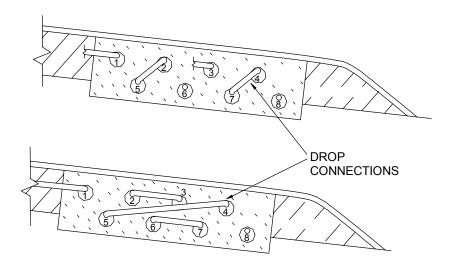


<u>Caution</u>: Ensure that drop connections in sloping systems have a minimum drop of 50mm between the upper and lower levels.

### Basic Multi-Level<sup>™</sup> Systems

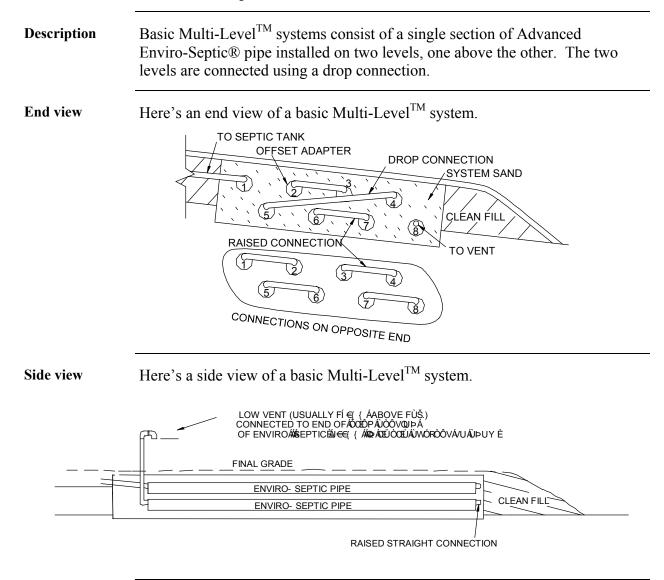


### Combination Multi-Level<sup>™</sup> Systems

- **Description** Combination Multi-Level<sup>TM</sup> systems consist of two or more sections of Advanced Enviro-Septic<sup>®</sup> pipe installed on two levels. The sections may be installed one above the other (layered) or on alternating levels. Each section receives effluent through a distribution box and, where installed on alternating levels, are connected using drop connections.
- Layered system Here are end and side views of a layered (one section over the other) Multi-Level<sup>TM</sup> system.

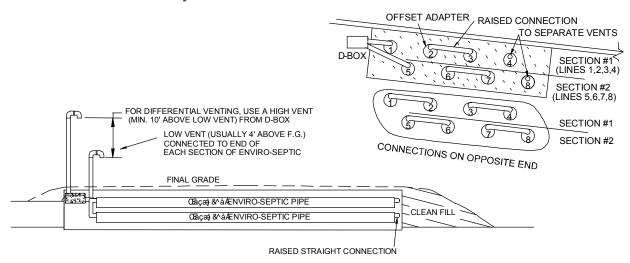


**Alternating level** Here are end and side views of a Multi-Level<sup>TM</sup> system using alternating levels for each section of Advanced Enviro-Septic<sup>®</sup> pipe.

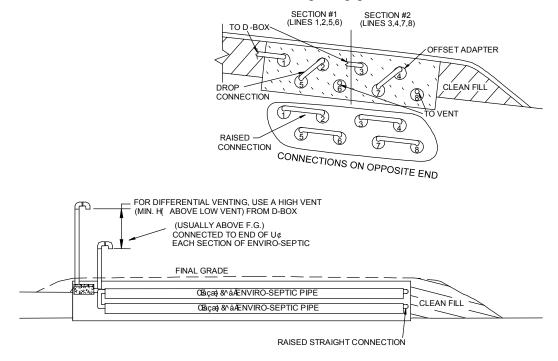

### Section H Non-Conventional System Configurations

Introduction	Non-conventional system configurations may accommodate greater than 30m system lengths and shorter than 10m line lengths. They may also take irregular shapes to accommodate site constraints.
Total linear feet requirement	Each section of a system must have the same minimum linear length. A section may exceed the minimum linear length. Lines within a section may vary in length to accommodate site constraints.
Line length exceptions	Proper line loading and cycling requires line lengths to be at least 10m long but no longer than 30m. Non-conventional system configurations allow this rule to be set aside while still guaranteeing proper line loading and cycling.
	Here are some examples using offset adapters and distribution boxes.

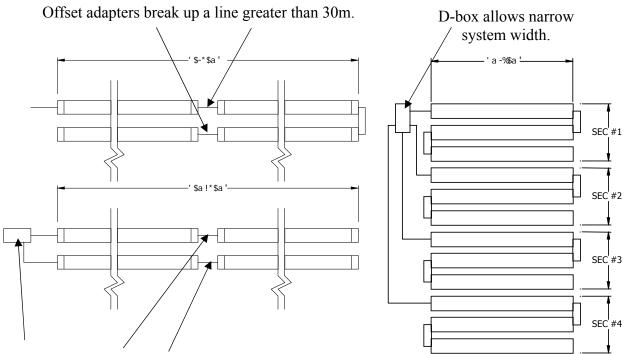


D-box and offset adapters break up a line greater than 30m'.

### Non-Conventional Configurations, Continued


Curves


Curved configurations work well around objects, setbacks, and slopes.

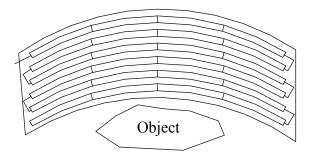

Note: Multiple curves can also be used.

 
Angles Angled configurations generally have one or more specific bends. Lines are angled by bending pipes or through the use of offset adapters.

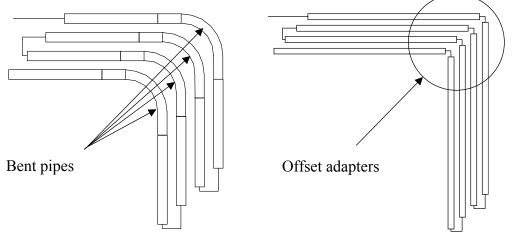



Trapezoids

This system is trapezoidal to fit a particular slope or terrain feature.

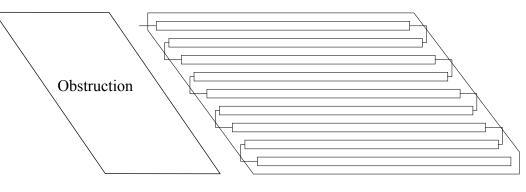


### Section I Pump System Requirements

Introduction	Pump systems typically supply effluent to Advanced Enviro-Septic <sup>®</sup> pipe using a pressured line and a distribution box as a velocity reducer when site conditions do not permit a gravity system.
Differential venting	All pump systems must use differential venting. <u>Reference</u> : See Section J, "Venting Requirements."
Velocity control	It is important to control the rate at which effluent enters Advanced Enviro-Septic <sup>®</sup> pipe. Excessive effluent velocity can disrupt solids that settle in the Advanced Enviro-Septic®pipes.
Velocity reduction	Never pump effluent directly into Advanced Enviro-Septic <sup>®</sup> pipes. Install a velocity reducer prior to the Advanced Enviro-Septic <sup>®</sup> pipe. An appropriately sized box or tank is typically installed as a velocity reducer. If the design already incorporates a distribution box to divide effluent flow, an additional distribution box may not be necessary. Pressurized lines must discharge into a velocity reducer with a baffle, or be
	fitted with a 90-degree bend or tee fitting.
Pipe length per pumped gallon	Every 9ltrs of effluent pumped per cycle requires a minimum of 300mm of Advanced Enviro-Septic <sup>®</sup> pipe.
Basic System LPM Limit	A maximum of 150LPM is permitted for basic systems.
LPM per Equalizer <sup>™</sup> limit	An Equalizer <sup>TM</sup> used in a pump system is limited to a maximum of 76 litres per minute.
Section or line LPM limit	Each line of a distribution box system or section of a combination system is limited to a maximum of 76 Litres / minite.


#### Section J Venting Requirements

General rule	Oxygen Demand Vents (ODV) to ensure air is drawn completely through each line orsection of Advanced Enviro-Septic <sup>®</sup> pipe.	
When to vent	Oxygen is required if systems are pumped, under more than 450mm of cover, or installed under parking areas, roads, or surface features that restrict air passage through the soil.	
	One 100mm (ODV) is required for every 300m of pipe. If necessary, a single 150mm (ODV) opening may be installed in place of a maximum of three 100mm vent openings.	
	All Multi-Level <sup>TM</sup> systems require venting.	
(ODV) locations	Advanced Enviro-Septic <sup>®</sup> systems can be vented in three locations.	
	1. Through an unused distribution box outlet.	
	<ol> <li>Through a tee installed in the PVC pipe near the inlet of the Advanced</li> </ol>	
	Enviro-Septic® pipe.	
	3. Through an offset adapter installed at the end of a section or line.	
Differential venting	Differential venting is the use of high and (ODV) in a system. High vents are connected to the distribution box and (ODV) are connected to the	
, enting	opposite end of the system. This arrangement enhances the circulation of air	
	throughout the entire system.	

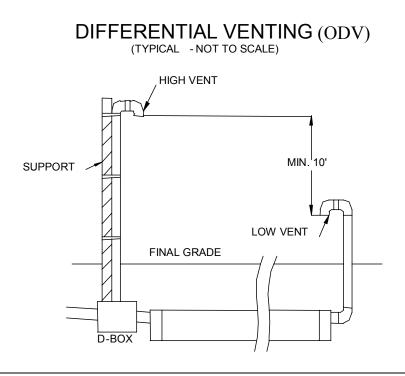

#### Venting Requirements, Continued

**(ODV) manifolds** A (ODV) manifold can be incorporated to connect the ends of a number of sections or lines of Enviro-Septic<sup>®</sup> pipe to a single vent opening.

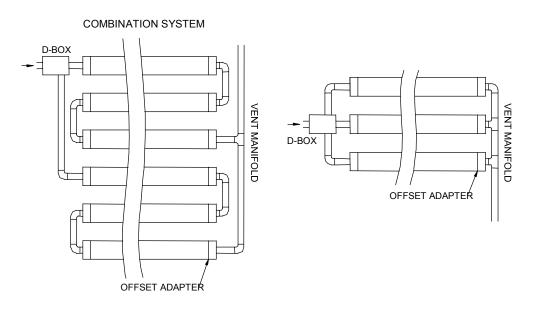

(ODV) piping(ODV) piping should slope downward toward the system to prevent moistureslopefrom collecting in the piping and blocking air passage.

#### AES Oxygen Demand Inlet




#### **AES System Label**

MODEL NUMBER 160-3-DESIGN FLOW DATE OF INSTALLATION: SERVICE AGENT/LICENSED PLUMBER 040306

#### Section K Bottom Drain Requirements

Purpose	Bottom drains aid in the rejuvenation of overloaded or abused systems.	
Requirements	Bottom drains lead to drain sumps. Here are some drain requirements.	
	<ul> <li>The top of the drain sump should be a minimum of 12" above the top of the highest Enviro-Septic<sup>®</sup> pipe.</li> <li>The bottom drain inlet must be a minimum of 18" above the drain sump floor.</li> <li>Level systems may use single drain sumps.</li> <li>Sloping systems may require multiple drain sumps.</li> <li>All bottom drain connections and drain sumps must be sealed.</li> </ul>	
Double offset adapter	Most bottom drains use double offset adapters.	
	OFFSET HOLES	

**End view** Here's an end view of a combination Multi-Level<sup>TM</sup> system with a bottom drain and drain sump.

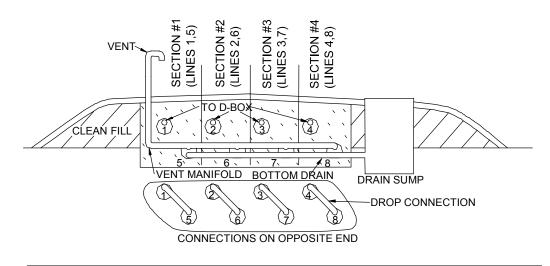

### Section M System Rejuvenation and Expansion

Introduction	This section covers procedures for rejuvenating failing systems and explains how to expand existing systems.	
Definition: failing system	System failures, almost without exception, are related to the conversion of bacteria from an aerobic to an anaerobic state. Flooding, improper venting, alteration or improper depth of soil, sudden use changes, introduction of chemicals or medicines, and a variety of other conditions can contribute to this phenomenon.	
Rejuvenating failing systems	Failing systems need to be returned from an anaerobic to an aerobic state. Most systems can be put back on line and not require costly removal and replacement by using the following procedure.	
	<ol> <li>Determine the problem causing system failure and repair.</li> <li>Drain the system by pumping out the sump of a bottom drain or by excavating one end of all the lines and removing the end cap or offset adapter.</li> <li>Drain the lines.</li> <li>If foreign matter has entered the system, flush the pipes.</li> <li>Safeguard the open excavation.</li> <li>Guarantee a passage of air through the system.</li> <li>Allow all lines to dry for a minimum of 72 hours.</li> <li>Re-assemble the system to its original design configuration.</li> </ol>	
System expansion	Advanced Enviro-Septic® System are easily expanded by adding equal lengths of pipe toeach line of the original design or by adding additional equal sections. <u>Note</u> : All system expansions need to meet State and/or local regulations.	
Re-usable pipe	Advanced Enviro-Septic <sup>®</sup> components are not biodegradable and may be reused. In cases of improper installation it may be possible to excavate, clean, and reinstall all system components.	
System replacement	If system components require replacement, simply remove the existing pipe and contaminated sand and replace with new pipe and sand.	

The information in this manual is subject to change without notice. Your suggestions and comments are welcome. Please contact us at

Action Tanks Industries 14-16 Action St Noosaville Qld 4565 Phone: 07-54424242 Fax: 07-54424240 Website: www.Actiontanks.com.au

Enviro-Septic<sup>®</sup> U.S. Patent Nos. 6,461,078; 5,954,451; 6,290,429 with other patents pending. Canadian Patent Nos. 2185087; 2187126 with other patents pending. Simple-Septic<sup>®</sup> U.S. Patent No. 5,606,786. Presby Maze<sup>®</sup> U.S. Patent No. 5,429,752.


Enviro-Septic<sup>®</sup>, Simple-Septic<sup>®</sup>, and Presby Maze<sup>®</sup> are registered trademarks of Presby Environmental Inc. Multi-Level<sup>™</sup>, is a trademark of Presby Environmental, Inc.

© 2003 Presby Environmental, Inc. All rights reserved. Publication date: April 2003.

© 2003 Presby Environmental, Inc. All rights reserved. Publication date: April 2003.

# ENVIRO--SEPTIC<sup>®</sup> LEACHING SYSTEM

**Nine Steps of pretreatment:** Enviro-Septic treats effluent more efficiently to provide longer system life and to protect our environment

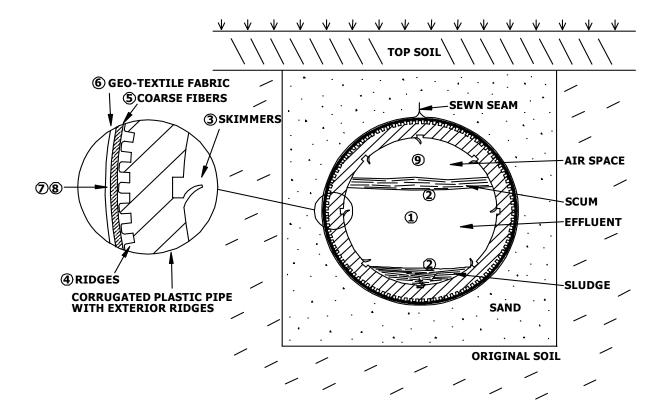

- **Stage 1:** Warm effluent enters the pipe and is cooled to ground temperature.
- Stage 2: Suspended solids separate from the cooled liquid effluent.
- **Stage 3**: Skimmers further capture grease and suspended solids from the exiting effluent.
- **Stage 4**: Pipe ridges allow the effluent to flow uninterrupted around the circumference of the pipe and aid in cooling.
- **Stage 5**: A Mat of coarse random fibers separates more suspended solids from the effluent.
- **Stage 6**: Effluent passes into the geo-textile fabric and grows a protected bacterial surface.
- **Stage 7**: Sand wicks liquid from the geo-textile fabric and enables air to transfer to the bacterial surface.
- Stage 8: The fabric and fibers provide a large bacterial surface to break down solids.
- Stage 9: An ample air supply and fluctuating liquid levels increase bacterial efficiency.