

Mobile Rack

**For Removable Docking Modules with 3.5"/2.5" HDD
or Optional for zip™/SuperDisk™ LS-120/MO/TR-4 Tape
or ATA Flash Memory Reader**



**Model VP-10LS
Model VP-10LSF
Model VP-10K
Model VP-10KF
Model VP-10KP
Model VP-10KPF
Model VP-15**

Installation Manual

ViPOWER
We are your DataBridge™
<http://www.vipower.com>

Table of Contents

- 1-1 Introduction 1
 - Features 2
 - Unpacking Your Mobile Rack 2
 - IDE Basics 2
- 2-1 Hardware Installation 3
 - Mobile Rack Components 3
 - Installing Mobile Rack Docking Case 4
 - Mounting a Drive in the Drive Case 4
- 3-1 Using the Mobile Rack 8
 - Non Hot-Swapping Models 8
 - Hot-Swapping Models 9

PROPRIETARY NOTICE

ViPowerER Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. ViPowerER Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the written consent of ViPowerER Inc. The information contained in this document is subject to change without notice.

IBM is a registered trademark and PC, AT are trademarks of International Business Machines Corporation. Windows and Windows NT are registered trademarks of Microsoft Corporation. All other trademarks belong to their respective owners.

Patent: USA: 5694290
Taiwan: 126661 & 129379
Germany Nr. 297 15 551.2 & Nr. 297 22 974.5
Japan: 3047936 & 3050489
China: ZL 97 2 03156.1
Patent Pending: U.K, France, Korea

© Copyright 1998 by ViPowerER, Inc.

This manual will guide you through the installation of the VP-10LS and VP-10K Series Mobile Rack Removable Docking Modules.

Mobile Rack Models:

- VP-10LS** IDE interface, Latch-lock/Slide Switch
- VP-10LSF** IDE interface, Latch-lock/Slide Switch with Cooling Fan
- VP-10K** IDE interface, Key-lock
- VP-10KF** IDE interface, Key-lock with Cooling Fan
- VP-10KP** IDE interface, Key-lock Power Switch
- VP-10KPF** IDE interface, Key-lock Power Switch with Cooling Fan
- VP-15** IDE interface, Drive Case

Model Number Code Descriptions for Ordering Information:

VP-10LS(F)

1 2 3 4 5 6

- 1** ViPower
- 2** Interface Type **1** = IDE, **2** = SCSI, **3** = Wide SCSI
- 3** Body **2** = Out-Frame, **5** = In-Tray Box, **0** = Frame + Tray
- 4** Lock Type **L** = Latch-lock, **K** = Key-lock
- 5** Power Switch **S** = Latch Switch, **P** = Power IC Switch
- 6** Cooling Fan **F** = Fan

NOTE

Although there are certain feature differences between the Mobile Rack models, the installation for all models is the same. For instructions on how to use your Mobile Rack, please refer to the section that applies to your Mobile Rack model.

1-1 Introduction

Congratulations on your purchase of a Mobile Rack Removable Docking Module. The Mobile Rack is the perfect solution for data backup and transporting data between computers. It enables portability of 3.5-inch/2.5-inch IDE and ATAPI devices such as hard disk, SuperDisk™ LS-120, MO, TR-4 tape, zip™ drives and ATA flash memory readers.

The Mobile Rack is form-fitted for a standard PC/AT 5.25" half-height bay. Its drive case can accept most half-height 3.5" and 2.5" drives (with separately purchased adapter cables). Not being limited by memory size, you can install any capacity drive.

Features

- Compatible with tower or desktop PC, external subsystem & RAID system cases
- Enables portable use of hard disk, LS-120, MO, TR-4 tape, zip and other IDE and ATAPI devices
- Drive bay module for mounting a 1.0-inch height, 3.5-inch or 2.5-inch IDE or ATAPI device in a 5.25-inch drive bay
- Supports fixed 3.5-inch hard disk drives and 2.5-inch hard disk drives (requires 2.5-inch drive adapter cable)
- Convenient pull-out handle
- Safety lock feature
- Power on/off feature (Models VP-10KP, VP-10KPF and VP10LS, VP-10LSF)
- LED indicators for power and drive activity
- Built-in cooling fan (Models VP-10LSF, VP-10KF and VP-10KPF only)
- Drive case is interchangeable between all models
- Fully compatible with MS-DOS, Windows® 3.11/95/98/NT, OS/2 Warp
- Dimensions: 8.4" (D) x 5.8" (W) x 1.6" (H)

Unpacking Your Mobile Rack

Before installing the Mobile Rack, verify that the following items are included in the carton. If any parts are damaged or missing, please contact your local dealer or sales representative immediately.

1. One Mobile Rack Removable Docking Module
2. Eight mounting screws
3. One user's guide

IDE Basics

IDE is an acronym for Integrated Device (Drive) Electronics and is sometimes referred to as an ATA (AT Attachment) interface. It is the most commonly used interface for hard disk drives installed on personal computers. Other devices like CD-ROM, tape, optical drives, and so on have adapted a variation called ATAPI (ATA Packet Interface) and can be intermixed with standard IDE drives because they use the same cabling and electrical interface.

Most systems today have two IDE channel connectors that are typically referred to as primary and secondary ports. Each IDE port can have a maximum of two devices that must be uniquely identified, typically by the setting of a jumper as a 'master' or 'slave' device.

2-1 Hardware Installation

 
The Mobile Rack Docking Module is designed to install in any PC/AT or Pentium-class computer that has an available 5.25-inch half-height drivebay. General instructions for installing the Mobile Rack are given since the design of computer cases varies. Refer to your computer's manual whenever in doubt.

Mobile Rack Components


The Mobile Rack is comprised of two components:

Docking Case [VP-12 (L)(S)(F)(K)(P)]


Drive Case (VP-15)

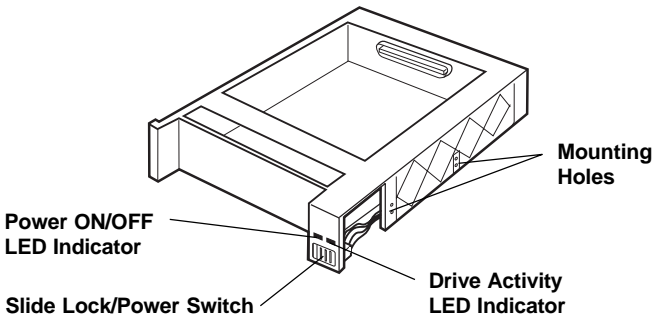

 Latch Lock Model Mobile Rack Docking Case

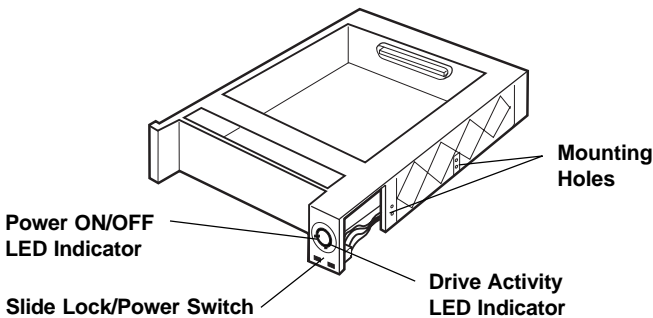


Key Lock Model Mobile Rack Docking Case

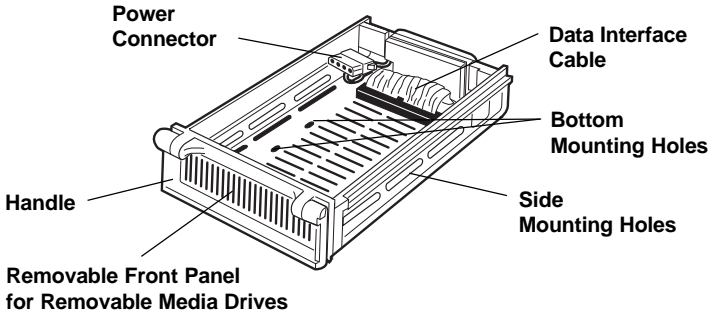 

Mobile Rack Drive Case VP-15 (with cover removed)


Installing the Mobile Rack Docking Case

 1. Turn OFF the power to your computer and any other connected peripheral devices. Follow the precautions for static electricity discharge:
 - Discharge any static electricity build up in your body by touching a grounded metal surface such as the computer case, if plugged in.
 - During installation procedures, avoid any contact with internal parts.
2. Unplug the power cord from the back of the computer.
3. Remove your computer's cover.
4. Remove the computer's front cover plate from the 5.25-inch drive bay you plan to install your Mobile Rack into.
5. Remove (separate) the Mobile Rack drive case from the docking case by lifting the handle and pulling it out.
6. Slide the docking case into the 5.25-inch drive bay.

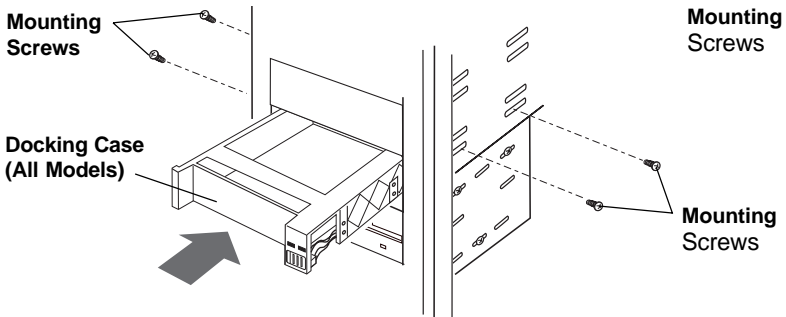

Install the Mobile Rack Docking Case into the Drive Bay

 - Attach an existing IDE 40-pin data cable from the system motherboard to the 40-pin connector on the back of the docking case. Most connectors are keyed for proper insertion. If there is no key, orient the cable so the pin-1 colored stripe edge is closest to the power connector.
- Attach an available 4-pin power cable from the system's power supply to the 4-pin connector on the back of the docking case. The power connector is 'D' shaped to ensure proper orientation when making the connection.

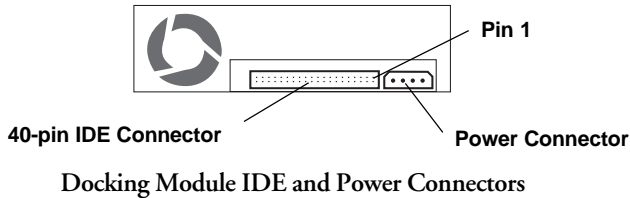


- Replace the computer's cover and reconnect the power and other external cabling.

Mounting a Drive in the Drive Case (VP-15)


Proceed with the following steps to install a 3.5-inch drive device in the Mobile Rack drive case. (Note: a special adapter kit is required in order to install a 2.5-inch drive.)

 - Remove the Mobile Rack drive case cover by sliding it towards the back of the unit.

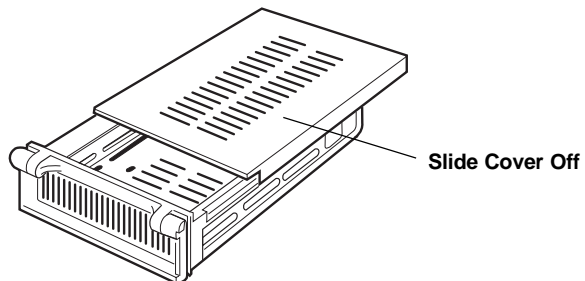

Remove the Drive Case Cover

 2. If you plan to install a drive that features removable media such as a zip, TR-4 tape, MO, LS-120 drive, or ATA Flash memory reader, carefully punch out the center part of the front panel.

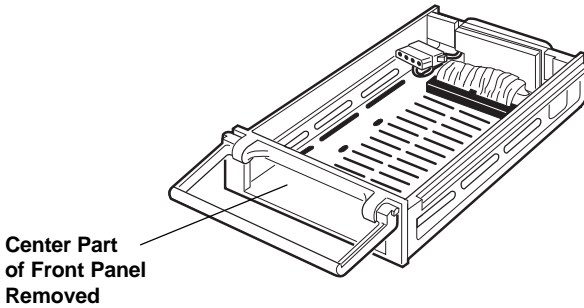

Remove Front Panel for Removable Media Drives

 
IMPORTANT

3. If you are installing a new hard drive into the Mobile Rack, you may need to configure the drive before you install it. Refer to the drive manufacturer's documentation and configure the drive as 'Master', 'Cable Select', or 'Slave' depending on the configuration of your computer. After you complete this installation, you may also need to re-configure the computer's BIOS Setup to make the drive functional in the system.

4. The drive case's 40-pin IDE cable supports 3.5-inch drives. Attach the power and IDE cables from the Mobile Rack drive case to the drive. The power connector is 'D' shaped to correctly orient the connector. The colored stripe on the IDE cable should be closest to the power connector.


To install a 2.5-inch drive, you must purchase a '44-pin to 40-pin' connector adapter from your local computer dealer.

5. Carefully position the drive inside the drive case.

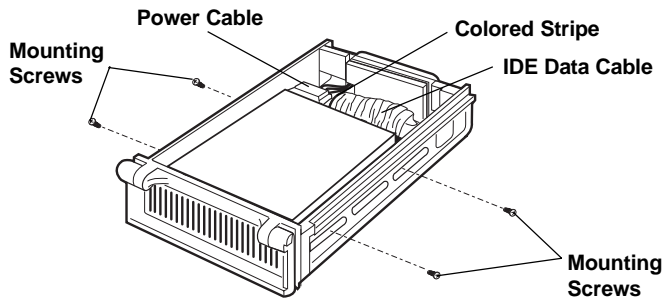

Install the Drive in Drive Case

 6. Secure the drive in place using the supplied mounting screws. Use the mounting holes on the sides or bottom, depending on the design of the drive.
7. Slide the drive case cover back on. The hardware installation is complete. Your Mobile Rack drive case is ready to use.

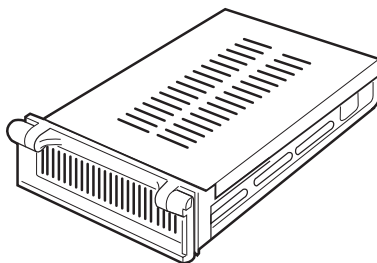

Mobile Rack Drive Case Ready for Use

 
3-1 Using the Mobile Rack

Non Hot-Swapping Models (Models VP-10K, VP-10KF)

Key-lock models VP-10K and VP-10KF do not support hot-swapping. Your computer must be POWERED OFF when the drive is inserted or removed. Once installed, the removable drive can be used like any other drive.


To insert the Mobile Rack drive case:

1. Make sure the computer is OFF.
2. Insert the Mobile Rack drive case (with drive installed) into the installed Mobile Rack docking case and push firmly until the drive is seated.
3. Insert the key and turn key to the *right* to lock.
4. Turn your computer ON. The LED on the Mobile Rack should light after a slight delay. The installed Mobile Rack device is ready to use.

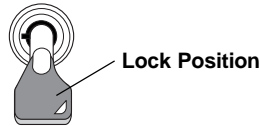

To remove the Mobile Rack drive case:

 1. Turn your computer OFF.
2. Insert the key and turn key to the *left* to unlock.
3. Gently pull on the Mobile Rack handle to slide the drive case out.

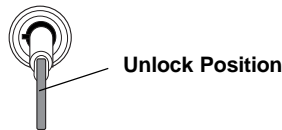

WARNING

- DO NOT remove the drive case while the drive is working. Damage to data may result.
- The Key-Lock keyswitch must be in the Lock position when in use. This prevents removal while working.
- Always turn the system power OFF before removing or inserting the drive case.

Hot-Swapping Models

(Models VP-10LS, VP-10LSF, VP-10KP, VP-10KPF)

Latch-Lock models VP-10LS and VP-10LSF, and Key/Power Lock models VP-10KP and VP-10KPF support hot-swapping. The power to your computer can be ON when the drive is inserted or removed. Use the Latch-Lock switch or Key/Power Lock keyswitch to turn power to the drive ON after inserting it, and OFF before removing it.

To insert the Mobile Rack drive case:

1. Insert the Mobile Rack drive case (with drive installed) into the installed Mobile Rack docking case and push firmly until the drive is seated.
2. For models VP-10LS/VP-10LSF, slide the latch-lock *left*, to the **lock** position. For models VP-10KP/VP-10KPF, insert the key and turn key to the *right* to **lock**. The LED on the Mobile Rack should light after a slight delay. The installed Mobile Rack device is ready to use.



To remove the Mobile Rack drive case:

1. For models VP-10LS/VP-10LSF, slide the latch-lock *right*, to the **unlock** position. For models VP-10KP/VP-10KPF, insert the key and turn key to the *left* to **unlock**. Note that the power LED on the Mobile Rack should now be OFF.
2. Gently pull on the Mobile Rack handle to slide the drive case out.





Printed on recycled paper.