


INSTALLATION MANUAL

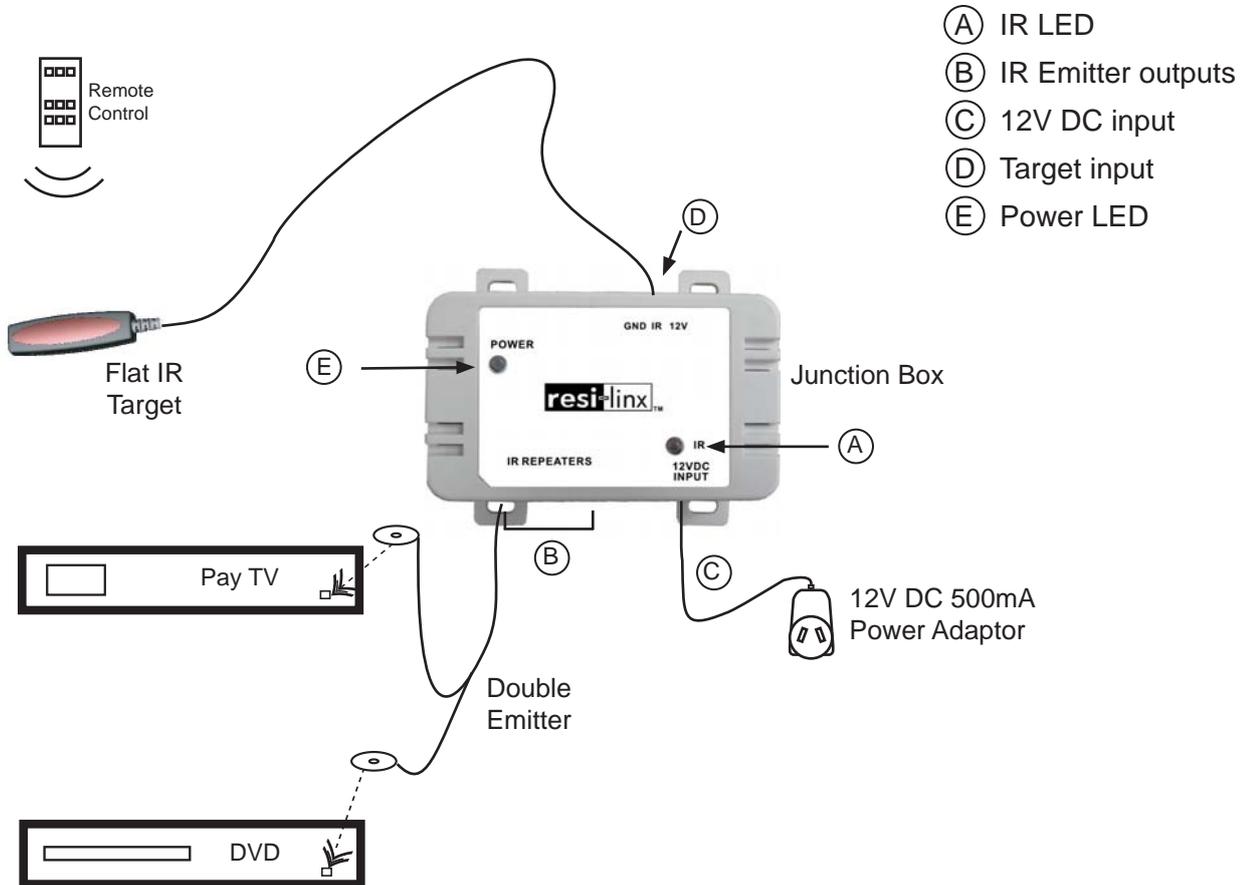

Hardware Connection

1. Connect IR Emitter to the output on the side of the Junction Box (B). Place the emitter head 10mm to either side of the IR receiver on the Audio/Video source (depending on environmental conditions).
Additional IR Emitters RL-IR700 / RL-IR800 can be purchased if required.
2. Connect Flat IR Target green connector directly into target input on Junction Box (D).
3. Connect the 12V DC 500mA power pack to the power input on the Junction Box (C). Check the green LED (E) is illuminated.
4. Place the target in a position to receive IR commands. LED indicator on both IR Target, and Junction Box (A) illuminate briefly upon receipt of IR command.

Target Wiring	
White stripe	12V+
Centre	IR
Black	GND

Frequency Range	20-200kHz
Power Input	12V DC 500mA Switch Mode
Maximum Target reception distance	Up to 8 metres
Target cable length	1.8 metres

(Refer to www.resi-linx.com for further information).

WARRANTY

VComm Pty Ltd states that the warrant that the customer can rely on is that provided by the manufacturer. In the event of any warranty claim please contact us and we will forward it to the manufacturer. The manufacturer will then determine the extent of their liability. This expressly negates, to the extent possible by Australian law, any warranty reliance on VCOMM Pty Ltd.

Vcomm Pty Ltd
ACN: 091 281 524
ABN: 99 091 281 524