

Operating Instructions



Waterproof Wifi Camera

Please read this manual thoroughly before operating the unit, and keep it for further reference.

Contents

1. Product Overview	2
1.1 Product Description	2
1.2 Specification	2
2. Application Instructions	3
2.1 Android system	3
2.1.1 Installation	3
2.1.2 Menu Operation	6
2.2 ISO system	7
2.2.1 Installation	7
2.2.2 Menu Operation	9
2.3 PC System	10
2.3.1 Installation	1
2.3.2 Menu Operation	1
3. Accessories	15



1. Product Overview

1.1 Product Description

This manual can help you to know and use WIFI camera, please read this manual carefully before use

As the development of wireless technology, wireless products quickly step into people's lives, this product combined image compression technology and data transmission technology, introduced a WIFI camera, for the continuously higher requirements of the public. The product has advanced digital image / voice compression, wireless transmission, iPod / phone / PC/ tablet monitoring functions, and completely replaces the traditional baby monitors!

1.2 Specification

1. Image Sensor: 0.3Mega 1/4 inch CMOS Sensor 2. Total Pixel: VGA(640*480), OVGA(320*240)

3. Video format: VGA

4. Infrared LED light: 12 PCS

5. IR distance: 15m

6. Distance: 100m (barrier-free)

7. Mirror/ Normal image: Switchable via Client Software

8. Display: LAN Peer to peer connection monitoring via Smart Phone (IOS device or Android)

9. Image Compression: MJPEG

10. Frame Rate: 30fps(VGA),30fps(QVGA) on PC; 20-25fps(VGA) on mobile or tablet pc

2

11. Wireless Standard: IEEE 802.11b/g/n

12. Client Software: Wifi camera.apk/REECAM/ipcamera_8

13. Audio Output: 1 channel with 4 pin connector

14. Waterproof level: IP69K

15. Language: Chinese/English

16. Power supply: DC12-32V

17. Working temperature: -10°C~65°C



2. Application Instructions

2.1 Android System

2.1.1 Installation

Note: The operating system for Android client (smart phone / tablet) shall not be lower than version 2.2. Version 4.0 is preferred.

1) Copy the Android client "WIFI Camera.apk" into a smart phone. Set the



software up and find the application program Wifi camera

2) Connect the camera to power

3) Open the WLAN in smart phone. Search the hotspot of WIFI camera and connect (commonly the one not encrypted), such as



Note: Close and then re-open WLAN if the hotspot cannot be found.

Wifi camera

4) When connected to WIFI signal from the camera, click Wifi camera [Search camera]





5) Click [Add] to add the camera



- 6) Search the camera
 - 1. Auto search of the camera: click [Auto search] to search the camera. When camera is found, its IP address will be displayed. Click the IP address to

Auto search • 192.168.1.1

view the camera.



2. Manual search of the camera: click [Manual] to set up the username and password. Then click [Enter monitor] to view the camera.

Host: 192.168.1.1

Port: 80

User: admin Password: blank

Name: user-default

Buffer time (ms): 1000



7) When camera is being viewed, video will be displayed on the smart phone. The connection to camera will be automatically saved. When screen is clicked on, menu will be displayed. When smart phone is displayed horizontally, the image will be zoomed to a full screen.







8) When connection to camera is saved, the camera can be found on the monitor list as a small icon. Click the icon to view the camera. You can click [Edit] in the camera list to edit the camera name or delete the camera.





2.1.2 Menu Operation

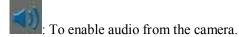

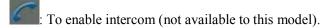

To take photo. Photos are automatically saved in the root directory of storage card.


To take video. Videos are automatically saved in the root directory of storage card. If sound is to be recorded, audio shall be enabled first.

: PTZ Controller (not available to this model).

: To set the image as mirrored / non-mirrored.





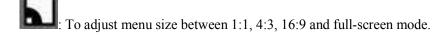

2.2 ISO System

2.2.1 Installation

1) Download The client "Ipcamera_8" (updated version "ipcamera_12") from App




Store.

- 2) Connect the camera to power
- 3) Open the Wi-fi function in setting. Search the hotspot of WIFI camera and connect (commonly the one not encrypted), such as 00000000001 ? 2.



4) Click PCamera 11 to display below dialog box



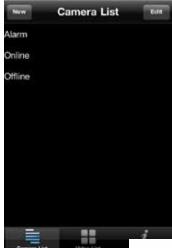

5) Click [NEW] to automatically search the IP address of camera - 192.168.1.1

6) Click the address 192.168.1.1 to display the dialog box for settings and input below

information:

Host: 192.168.1.1

Port: 80

User: admin

Password: blank



7) Click [Preview] to view the camera.


When the device is

displayed horizontally, the image will be zoomed to a full screen





8) Click [Save] to save the camera. You can edit the camera name. And then it will show on the camera list. It is convenient to view next time. You can click [Edit] to delete the camera.

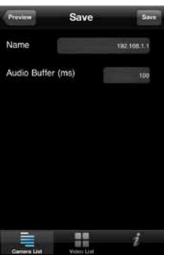



2.1.2 Menu Operation

[Audio]: To enable audio from the camera

[Speak]: Not available to this model

[Video record]: To take video. Videos are automatically saved in the root directory

of storage card. If sound is to be recorded, audio shall be

enabled first

[Sanpshot]: To take a photo

[Resolution]: To select the video resolution (the video of $\;$ high $\;$ resolution is

more clear but slower)

[Mode]: To choose the frequency of light wherever you are

[Vertical Patrol]: Not available to this model

[Level Patrol]: Not available to this model

[Mirror]: To switch mirror/ normal image

[Flip]: To reverse the image

[Brightness]: To adjust the image brightness.

[Contrast]: To adjust the image contrast






2.3 PC System

2.3.1 Installation



- 1) Install software "PC IPCamSetup.exe" into a PC.
- 2) Connect the camera to power
- 3) Open the Wi-Fi function. Search the hotspot of WIFI camera and connect (commonly the one not encrypted), such as 00000000001
- 4) After install the software, click to display below dialog box. The software will auto search the Wi-Fi camera. It can be set language.

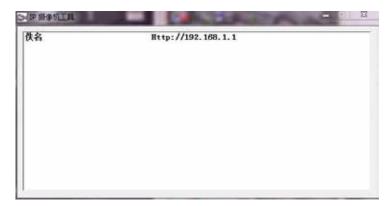

5) Click the IP address, the browser will appear. And then you will see the box as below, and enter the username "admin", password : blank.



10

PARK SAFE

6) Select the browser type to sign in




7) The left side is cameras image, and the right side is menu.




2.3.2 Menu Operation

2.3.2.1 For visitor

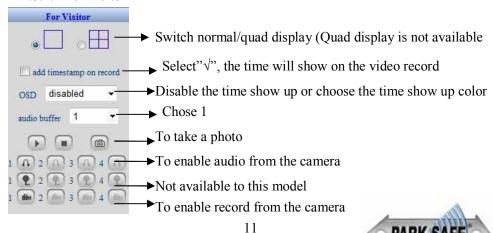

2.3.2.1 For Operator

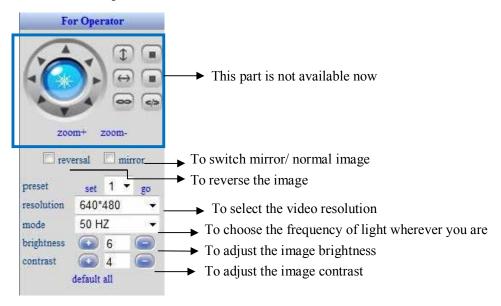

2.3.2.1 For Administrator





- 1. [Device Info]: View the Wifi camera information
- 2. [Alisa Setting]: Set the name of Wi-fi camera

	Alias	Settings	
Alias	anonymous		
	Submit	Refresh	

3. [Date & Time Settings]: Set the time which show up in the recording. Select " $\sqrt{}$ " in sync with PC time, it is auto update the local time.

	Date&Time Settings	
Device Clock Time	01 January 1970 08:22:44	
Device Clock Timezone	(GMT) Greenwich mean time; London, Lisbon, Casablanca 🔻	
Sync with NTP Server	15	
Sync with PC Time	E .	
	Submit Refresh	

4. [User Settings]: Set the visitor and administrator user name and password.

Users Settings	
Password	Group
	Administrator •
	Visitor

- 5. [Multi-Devices Settings]: Not available
- 6. [Basic Network Settings]: Do not change the setting

	Basic Network Settings	
Obtain IP from DHCP Server		
Http Port	80	
	Submit Refresh	

- 7. [Wireless Lan Settings]: Not available
- 8. [ADSL Settings]: Not available
- 9. [Upnp Settings]: Not available
- 10. [DDNS Service Settings]: Not available
- 11. [Mail Service Settings]: Not available
- 12. [Ftp Service Settings]: Not available
- 13. [MSN Settings]: Not available
- 14. [Alarm Service Settings]: Not available




- 15. [PTZ Settings]: Not available
- 16. [A & V daily schedule setting]: Not available
- 17. [Decorder Settings]: Not available
- 18. [Upgrade Device Firmware]: If we have any upgrade files, we will send to you. Then you can find the files and upgrade.

Upgrade De	evice Firmware
Upgrade Device Firmware	浏览 Submit
Upgrade Device Embeded Web UI	浏览 Submit

19. [Backup & Restore Settings]: You can back up the settings. When you want to use that setting you can restore it.

Backup & Restore Settings		
Backup	Submit	
Restore		浏览 Submit

- 20. [Restore Factory Settings]: If you set something wrong and cannot view the image, please restore the settings at first.
- 21. [Reboot Device]:Restart the software
- 22. [Log]: You can check the log in record

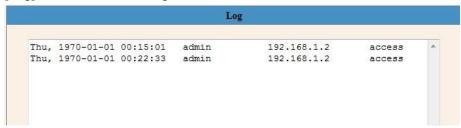

23. [Back]: Back to the video page

3. Accessories

1. Power Cable



2. Antenna



