



## **User Manual**

Congratulations for buying tablet pc

Thank you very much for your trust and your decision to buy our product!

As we constantly update and improve our pad there may be small differences between the printed manual and your pad in some cases. You have the option of downloading the current version of the manual and firmware updates

## Table of Contents

Safety instructions	3
Description of the buttons	4
Language settings	5
Power monitoring	
and charging the batteries	5
Screen lock	6
Connecting with computer and data transfer	6
Functions of the buttons on the	
user interface	7
Programme menu	8
System settings	11
1. Wireless & Networks	11
2. Sound settings	13
3. Display settings	13
4. Location & safety	13
5. Application	13
6. Accounts & synchr.	13
7. Data protection	14
8. Memory	14
9. Language & keyboard	14
10. Date & time	14
11. Bluetooth	14
12. Telephone info	14
Internet	16
Open Source Code & GNU General Public License	16
Technical Data	19

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

**A** Please keep the device away from places with high temperatures,  
high humidity or dust.

**B** In particular please avoid leaving the device in the car during summer if the doors are closed.

**C** Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

**D** The Standby Time of the batteries may vary due to different environmental influences.

**E** We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

**F** Do not open the housing of the device. Doing this will void your warranty claims.

**G** Do not use alcohol, thinners or petrol to clean the display  
– use only a dry cloth.

## **Description of the buttons**

### **Volume Buttons:**

Here you can increase or reduce the volume.

### **Power Button:**

Press the button for two seconds to switch on or switch off

the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

### **ESC Button:**

To go back to the previous menu

### **Menu Button:**

To open the context menu

### **Home Button:**

To go back to the user interface

 
## Language setting

PC is delivered with English as a default language. To change the language setting, please do the following:


- Press on the programme menu symbol on the right side of the screen.





- Select 'Settings'.
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.




## Power monitoring and charging the batteries

The battery charge symbol  on the status bar indicates

the charging status of the batteries.

If the power goes down, the device  shuts itself off automatically. If less power is shown, use the power adapter .

The charging time for the battery is approximately six hours. .


## **Screen lock**

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated. For locking the screen press the 'Lock' button in the specified direction.

## **Connecting to the computer and data transfer**

PC is equipped with a High-Speed USB2.0 Interface. After you connect the device to a computer, it appears in

the status display .

Pull the status bar down and press 'USB Connection' to activate

the USB Memory. When using the device for data transfer,

you cannot access the Micro SD/TF Card from PC!

## Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu.



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



Change Window Button:

The device has five desktops. You can press this button  
or push your finger on the touch screen to the side to  
navigate between different desktops.



WIFI / WLAN Signal Icon



System instructions:

Pull the status bar down to view messages about new  
e-mails, downloaded documents, USB Connection  
Status or other information.

## Program menu



**ApkInstaller:**

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



**Market:**

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



**Explorer:**

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



**Internet browser**



**Front& back 2.0MP camera**



**E-mail:**

Program for retrieving, processing and sending e-mails.



**G-mail:**

Program for retrieving, processing and sending e-mails through Google account.





### Google Maps:

Program for the display of maps or satellite images –  
Route planner.



### Skype:

Program to chat with other Skype users or to make  
telephone calls via Internet.



### Twitter:

Application for Microblogging – Facilitates the display  
of public diaries or create a public diary of your own.



### Facebook:

Program for using the social network site Facebook.



### Calendar:

Managing schedules – can be synchronised  
automatically with a Google account.



### Pocket Calculator



### Time:

Time display and setting alarm functions.



### Settings:

Changing the basic settings of EasyPad.



Sound Recorder:  
Dictation Device Function.



Video Player



Gallery:  
Manage and display images and videos – also enables  
synchronisation with Picasa web albums.



E-Shelves:  
A program for reading and managing e-books.

 
## System settings

 



Touch the icon for the settings to open the system settings menu:

### 1. Wireless & Networks

Touch 'Wireless & Networks'.

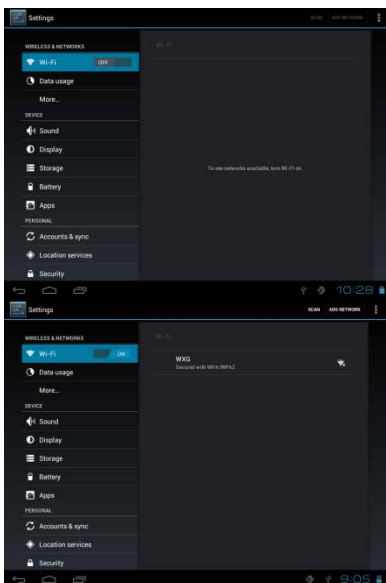 


WLAN: Touch  =>  to switch on the WLAN function.

The device automatically searches for available WLAN networks.

 
WLAN Settings: Select your network here.

If needed you will be requested to enter your WLAN password:

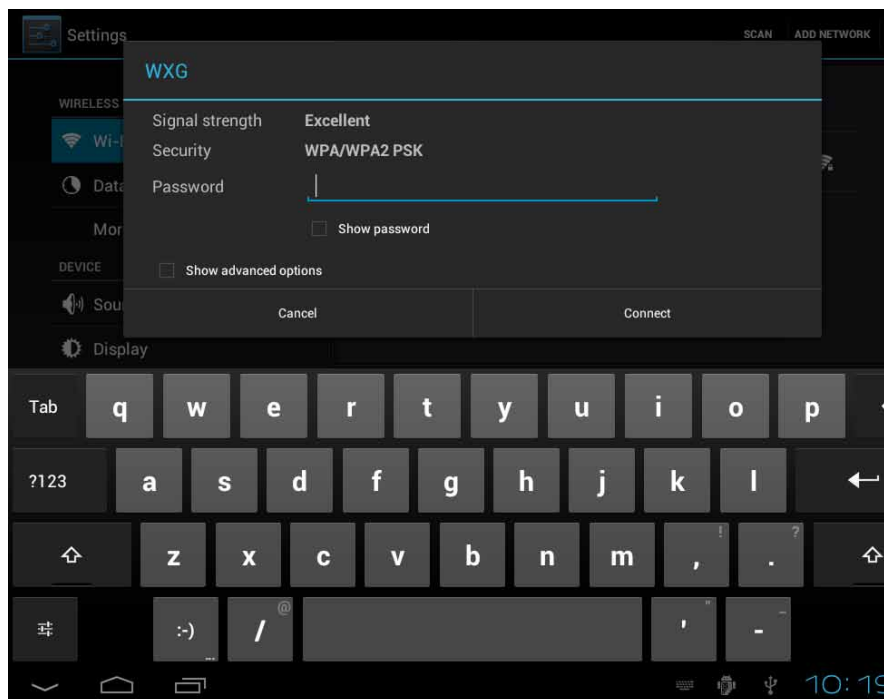

Advanced WLAN / Wi-Fi settings:



Touch  in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings

you can view the current status, the IP address and other device information.

## **2. Sound settings**

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

## **3. Display settings**

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after :

15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or

30 minutes are available. For example, if you select 30 seconds,

the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

## **4. Location & safety**

Here you can activate the automatic recognition of the location.

You can also set security passwords which will prevent unauthorised access to your EasyPad.

## **5. Application**

Here you can manage your apps and define if apps from sources other than the Android Market are

allowed to be installed.

## **6. Accounts & synchr.**

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

## **7. Data protection**

Secure my data: Here you can define if different settings

should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings.

All settings, self-installed apps and data stored on internal memory can be deleted.

## **8. Memory**

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card

during use.

## **9. Language and keyboard**

Set the system language and input method.

## **10. Date and time**

If your network does not support automatic setting of time,

you can set the time, time zone and date manually after deactivating automatic settings.

### **11. Bluetooth Setting**

In Wireless & Networks settings, After it scans and detects the Bluetooth phone devices, users should pair the phone, when it is paired, it will work.

### **12. Telephone info**

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

## Main functions

 
### Internet




Touch Icon to surf the net.

Google is the default start page.

Touch the input field to display the keyboard:

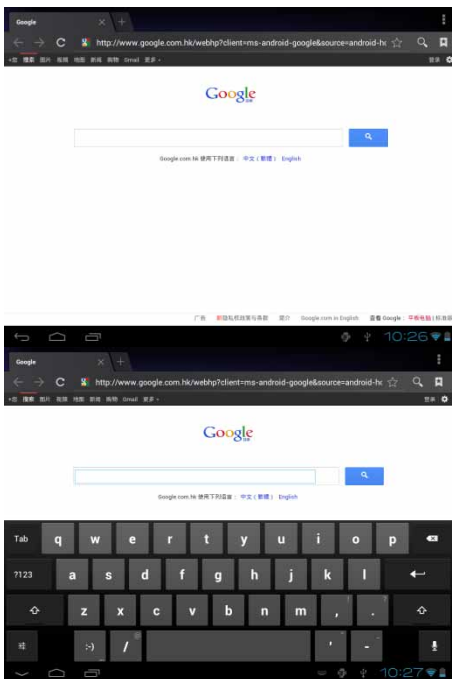


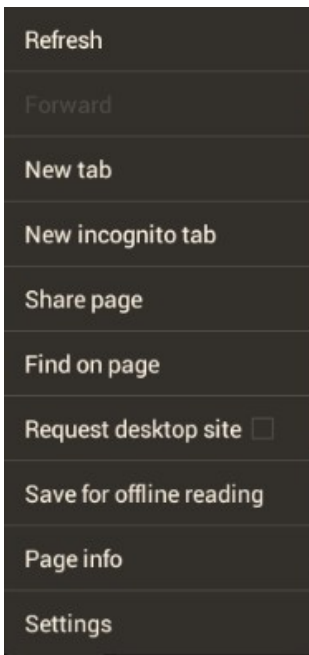 


Touch  after entering a website address to open the website.

**Note:** The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;

Touch  and the menu will be displayed as follows:



Touch 'Refresh' to refresh the current web page

Touch 'New tab' and a new website will be displayed.

Touch 'New incognito tab' and a new blank website will be displayed

Touch 'Share page' to Share this page to others

Touch 'Find on page' to enter new web address

Touch 'Request desktop site' to make it default web

Touch 'Save for offline reading' to read it when offline

Touch 'Page info' to check the web information

Touch 'Settings' to enter in browser settings

## Technical Data

CPU	Rockchip 3188 Quad Core 1.8GHz
GPU	4 cores Mali 400MP/ PowerVR SGX540
OS	Android 4.2.2 /4.1
RAM	1GB/(2GB DDR3 Optional)
Internal Memory	8/16GB/32GB NAND Flash
Memory Expansion	Micro SD/SDHC up to 32GB
G-SENSOR	MMA8452Q
Camera	Front 0.3MP/(2.0MP Optional), Back 2.0MP/(5.0MP Optional),
Bluetooth	Optional
MIC	Yes
HDMI	Optional
WIFI	802.11b/g/n (high sensitivity)
I/O ports	1x DC In, 1x headphone, 1x TF Card- Slot,
	1x USB 2.0, 1 x OTG, 1 x
HDMI(Optional)	
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263,
MPEG4 etc 1080P,	YouTube,
720P, HTML5, Flash 11	
Office	Word / Excel / PDF / PPT, Microsoft
Wordpad,	
	Microsoft SpreadExcel
	The software is not on the device and must be downloaded by the user.
Images	JPG, BMP, PNG etc.