

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669



USER'S MANUAL FOR ZF II SERIES FINGERPRINT SAFE

Serial Number:



This package contents:

- User manual
- 2 Master keys
- 1 External Battery Box
- 2 Bolt Down Screws
- M12mmx80mm
- 4 AA Batteries
- 2 Emergency back up Keys

Please contact your retailer or Qnn Safe Australia P/L if any shortage occurred

For the first time use, it needs the external battery power support:

- Insert the supplied 4 AA batteries into the External Battery Box
- Connect the power to the front panel. The power inlet is located at right hand side of the panel.

After the safe is opened, please replace the batteries into the internal battery box, which is located behind the door plate, please slid the box cover upward or downward to open.

- Prepare the Master Key into the position
- Place any one of your fingers on the Reading Window, until a green light is on with two beeps.
- Turn Master Key clockwise and turn the knob clockwise, safe now is unlocked.
(For some model, just turn the master key to unlock the safe)

This safe is operated by the Master Key and the Registered Fingerprint.

As factory default, there is no fingerprint be registered at this stage

Any person could open the safe with the Master Key.

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669

Fingerprint Registering Instructions:

Press the Setup Button which is located behind the door plate, near the upper hinge, It lights up the Reading Window.

- Place your finger on the Reading Window, until the light is off with one beep.
- After on second, the green light is on. Then place your **same** finger on the Reading Window, until green light is off with two beeps. The fingerprint is now registered successfully.
- Testing the registering before closing door.

If the light goes off with 3 beeps, it means that the registering is failed. After remove the finger from the Reading Window, the light will goes on again for registering again.

3 failed tries will end the register process, and it needs to press the Setup Button again to start a new registering process.

The system can story 250 Registered Fingerprints. Any dirt, sweat, oily on your registered finger will reduce the change of successful reading. We strongly recommend that you registered at least two fingerprints into the system at this time.

Deleting Registered Fingerprints (Restore factory setting)

- Cut off the power supply by remove at least one battery from the battery box
- Press the button located above the Reading Window at the front panel
- Put back the battery while holding down the Setup Button which is located behind the door plate, near the upper hinge,
- Ensure battery power is connected and then release the Setup Button after at least 2 seconds.
- With 1 beep, follow by 4 beeps, which is indicate that all the Registered Fingerprints are removed from the system successfully

Cautions: At this stage, any person could open the safe with the master key.

Please register your fingerprint immediately to protect the contents inside the safe.

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669

Opening Instructions by a Registered Fingerprint

- Prepare the Master Key into the position
- Place your **Registered** finger on the Reading Window, until a green light is on with two beeps.
- Turn Master Key clockwise and turn the knob clockwise, safe now is unlocked.
(For some model, just turn the master key to unlock the safe)

Closing instructions:

- Close the door
- Turn the knob counterclockwise (For some larger models)
- Turn master key counterclockwise, and remove the key.

Alarm:

- Any unexpected sharking and moving toward the safe body will lead the loudly sound alarm be activated for 60 seconds
- Enter a Registered Fingerprint can deactivate the alarm immediately.

Emergency Backup

In an emergency saturation, safe can be opened by the master key with the override emergency key together. (Override the any Registered Fingerprints). The key hole is located at the centre of the front panel. A small plastic cover need to be removed to see the key hole.

Turn the master key clockwise while hold the Emergency Key counter clockwise. (for some then turn the Handle / Knob to open the door)

Illumination:

Light atomically on for 15 seconds after the door is opened, or light will goes off 3 seconds after door is locked

Cautions:

- For security reason, Please do not story the master key with emergency key together.
- Do not store the emergency Keys and the External Battery Box inside the safe.
- When a red light is flashing, it means that the batteries need to be replaced. Please replace new batteries as soon as possible.