

Wi-Fi Digital Photo Frame

User Manual



Wi-Fi Digital Photo Frame

Features:

- Email photos and video clips to your Kogan Frame
- Search & send video clips from Photobucket, Facebook, Picasa and more!
- 800 x 600 high resolution screen with 'touch border' navigation design

Share photos and short videos with family and friends far away

LCD Display: 8-Inch LCD screen (800 X 600 pixels)

Communications: Internal 802.11b/g (WEP64, WEP128)

Interface: MMC/SD/MS card slot; USB 2.0 client

Memory Size: In-built FLASH memory 256MB with up to 500 photos stored online plus more

with Photobucket.

Remote Control: for PC-less easy setup and convenience

RTC -powered automatic shutdown feature for increasing reliability and saving energy

Power Source: External AC Adapter (Input:AC100~240V 50/60Hz 0.6A,Output:DC12V 1A)

Weight: 1.4 Kgs

Initial Setup Instructions

■Before Set-Up

Please ensure you have the following items available before beginning setup.

- ■Your Kogan Wi-Fi Digital Frame, along with the power supply and USB cable.
- •An operational Wi-Fi network with an internet connection with known SSID (network name), authentication type and the corresponding encryption key (WEP).

AC adaptor —

■STEP 1:

Power up your Kogan Wi-Fi Digital Frame by plugging in the power cord to a 240V wall socket. Your Kogan Wi-Fi Digital Frame will light up with the Kogan loading screen.

Please wait while the frame configures.


■STEP 2:

If your frame cannot locate a Wi-Fi signal, it will show a message indicating that no Wi-Fi network is connected. Press the **Enter** button on your Remote Control with the **Scan again** option highlighted.



STEP 3:

The frame will scan for any available Wi-Fi networks automatically. Select your specified Wi-Fi network, and then press **Enter**:

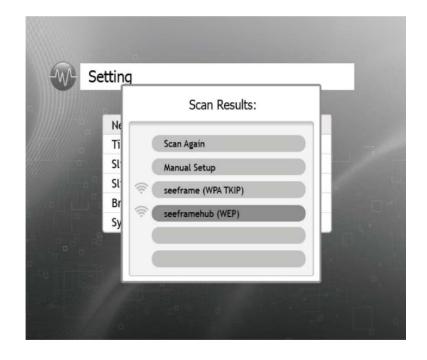

STEP 4:

Please enter your password by pressing the virtual keyboard buttons displayed on the screen. Once you have done this, press **Enter**.



BKSPC: Backspace - to selectively delete any

just entered information.

CLR : Clear - to delete all entered information.

MODE : Mode - changes the mode of characters/

numbers/symbols.

: Adjusts the cursor position left or right.

STEP 5:

Once the Wireless Network has been connected, the following message will be displayed on the frame:


(this is an example with username: saturday8)




Congratulations! You have now completed the set-up process. You are ready to start enjoying your Kogan Wi-Fi Digital Photo Frame.

Uploading Photos to your Kogan Wi-Fi Frame

Using the automatically generated username and password, you can log into www.seeframe.com to begin uploading photos onto your Kogan Wi-Fi Digital Photo Frame. Usernames and passwords can be changed upon log in.

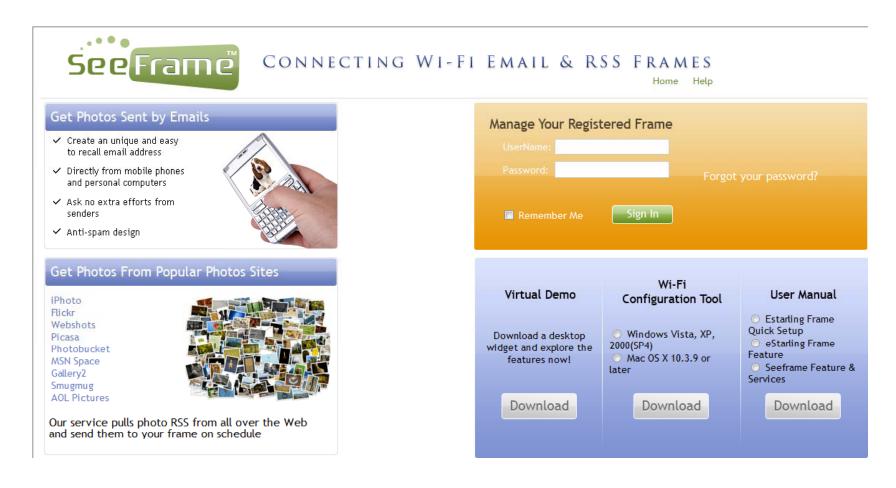

Once you have entered your username and password, you will be greeted with the below screen. Click on **My Account** → **Modify Account** to change username and password.

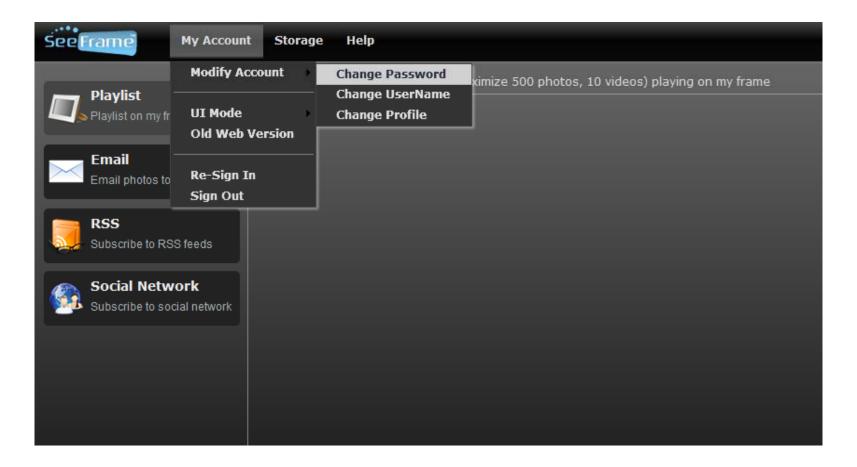


On the right-hand side, click **Upload** to upload pictures and video to your frame from a local PC.


On the top right-hand side, click **Upload** to begin uploading pictures and videos to your Kogan Frame from your computer.




The following window will open. Click Choose Files to Upload.

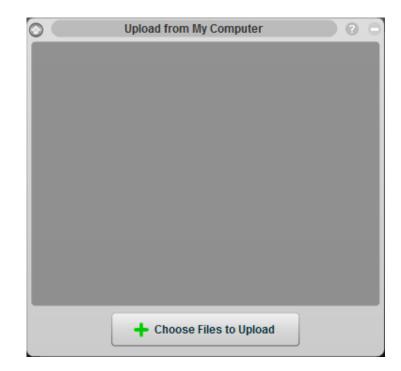

Choose the items which you wish to upload from your computer, then press **Open**.

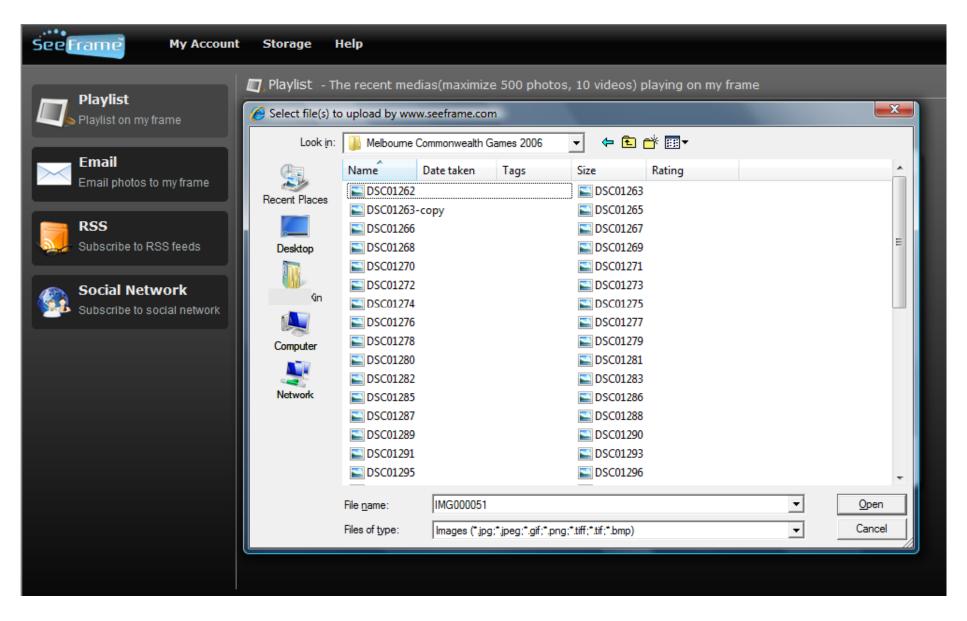

Every Kogan Frame has a unique email address. Send pictures or videos to this address from any computer and these will be uploaded to the frame in minutes!

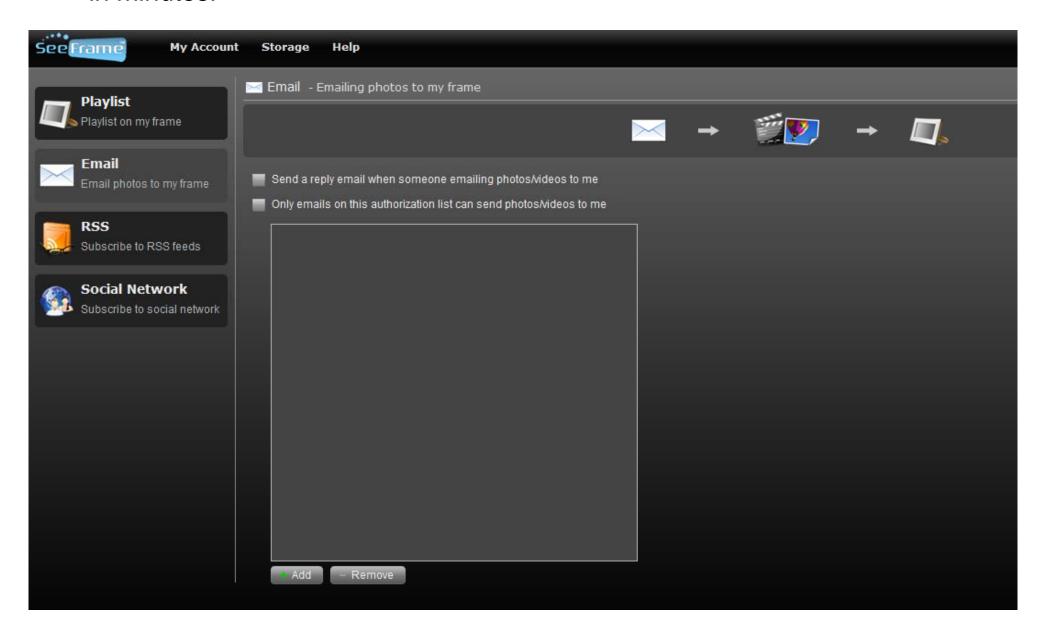


Alternatively, you can subscribe to RSS feeds to upload the latest photos and videos directly to your Kogan Frame.




Click on various public RSS feeds to the right of the screen to subscribe automatically.


For example, to subscribe to the National Geographic RSS feed, simply click on **Subscribe to** in the window.

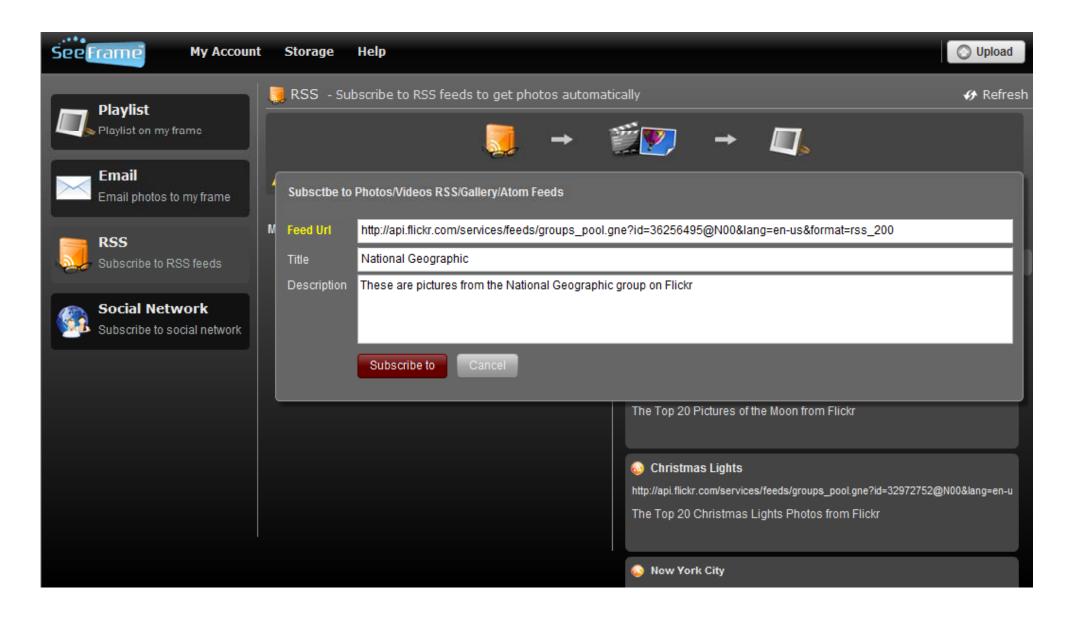

To connect to albums located on Social Networks, click on the **Social Network** tab on the left-hand side. Your Kogan Frame will then be automatically uploaded with these photos.

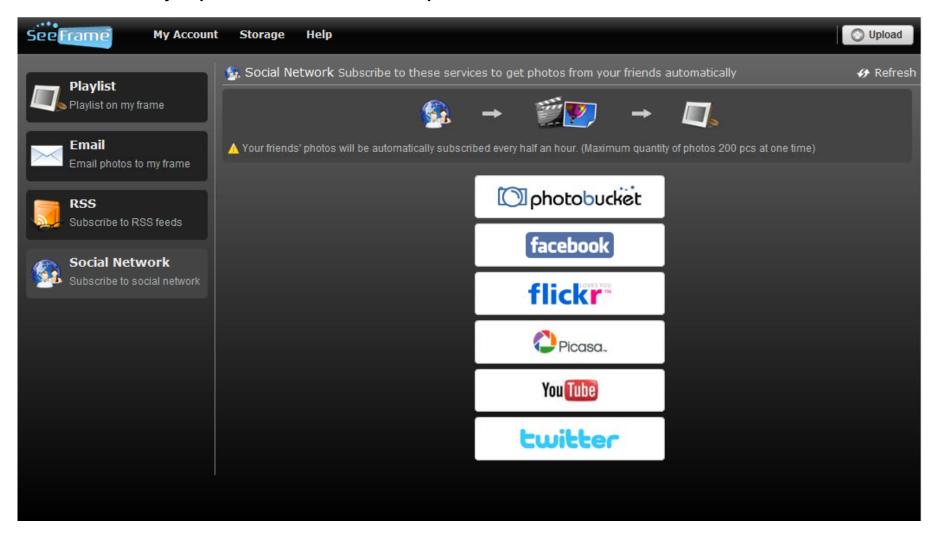

For example, to upload an album from Facebook, simply click on the **Facebook** logo.

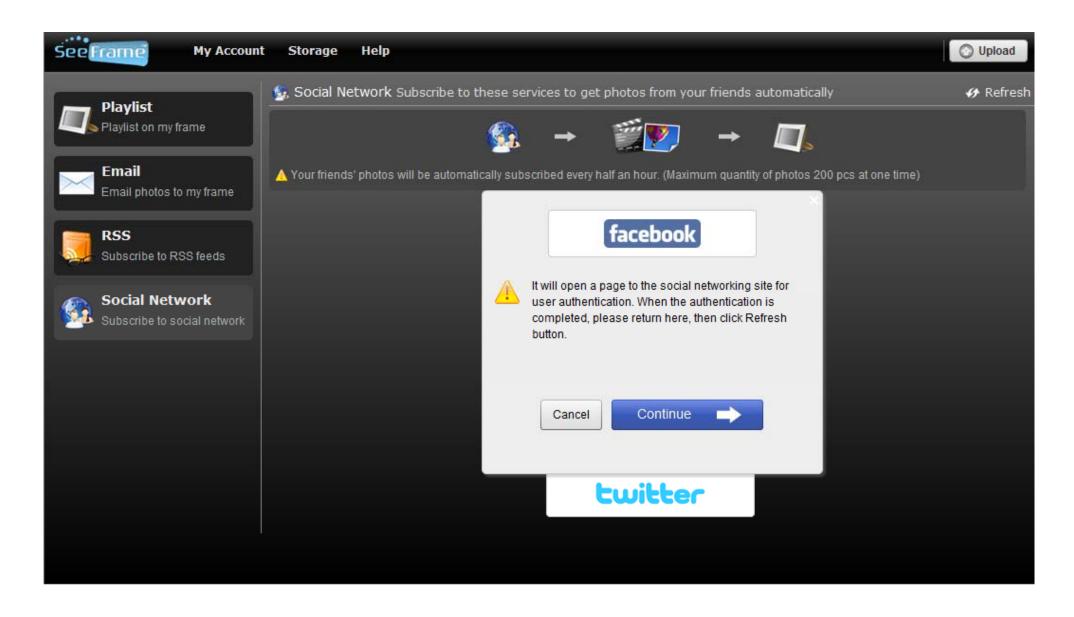


By pressing Continue, Seeframe will automatically take you to the Facebook login site.

Enter your Facebook details and click Log in


facebook

Sign Up

Facebook helps you connect and share with the people in your life.

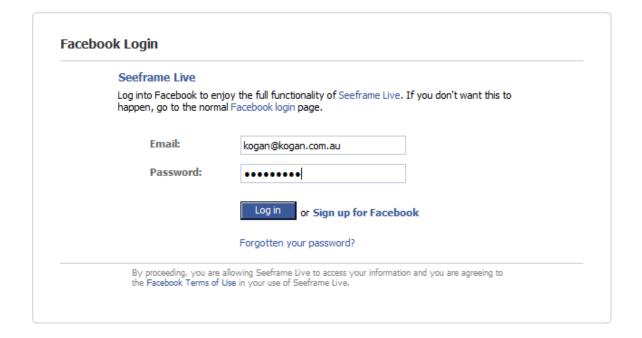


The pictures on Facebook will be downloaded to your Kogan Frame automatically. Return to See frame and click **Refresh**.

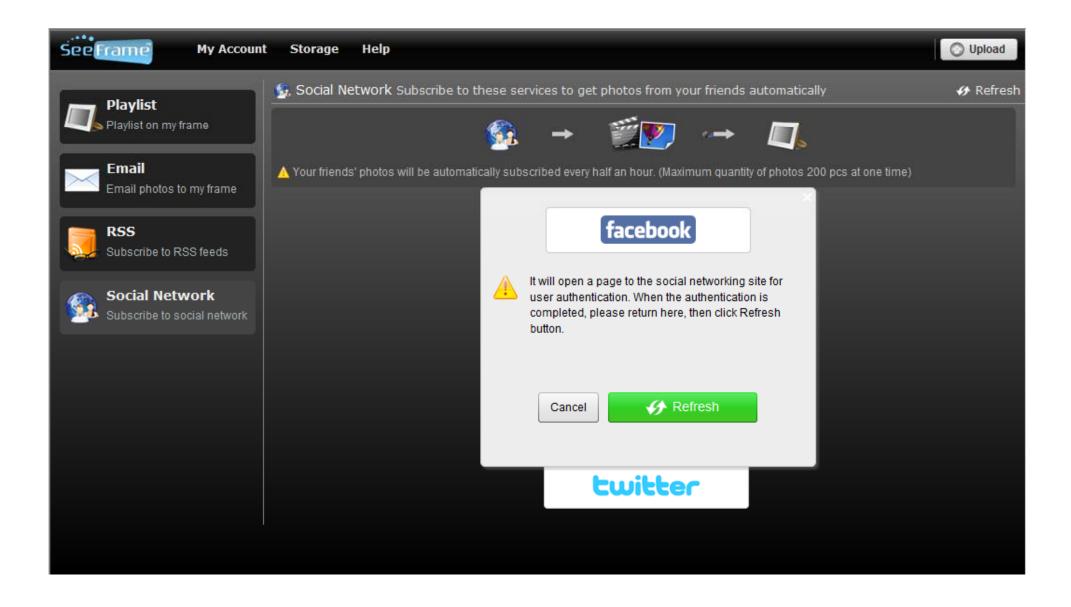

Once you have successfully added your Account, a green tick will be displayed next to the service.




For more functions, you can enter the advanced options. From My Account, select Ul Mode → Advanced

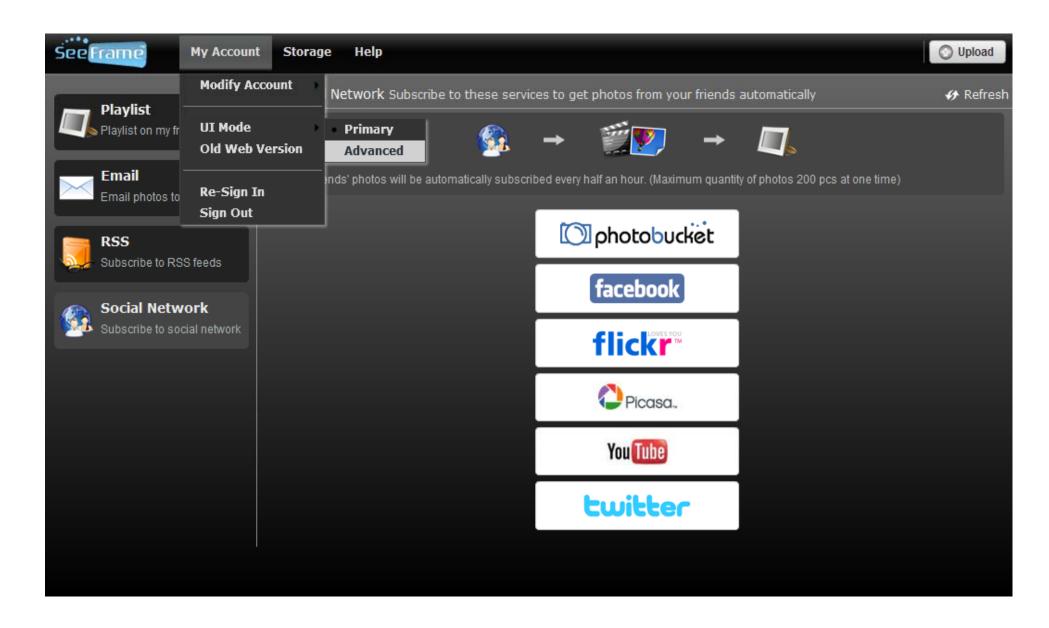

Entering Advanced Mode will open up an interface allowing more functions. Click **Help/Videos** to open various flash tutorials which teach you how to use the Seeframe interface.




The Flash tutorials are comprehensive yet simple to use. They can be repeated for your convenience.

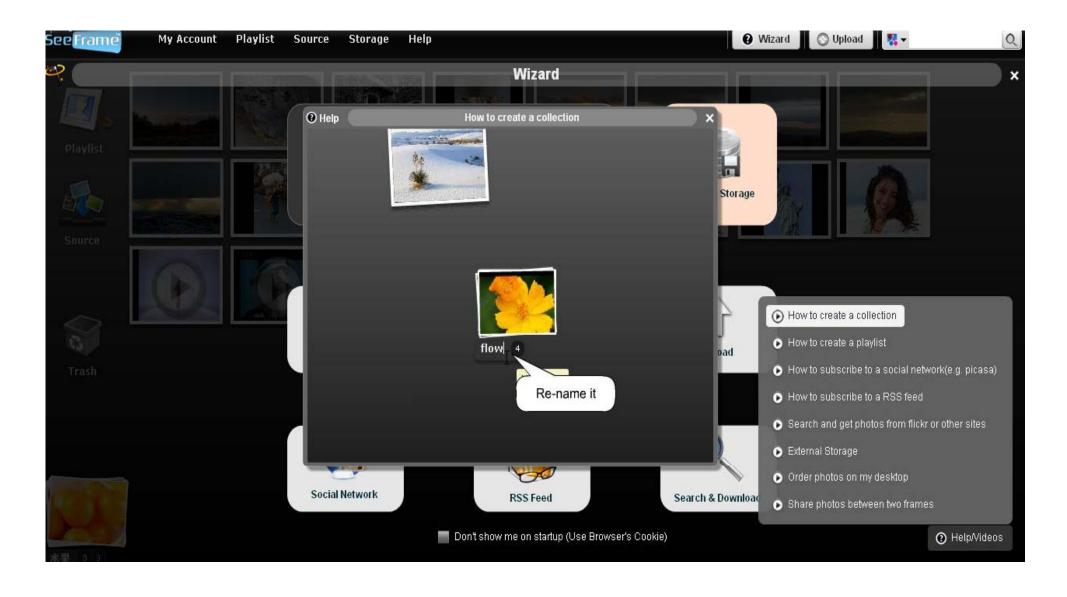

Your Kogan Frame can support various playlists. Click on **Manage Playlists** to edit your photo playlists.

You can choose to play specific photos one after the other in cycle, or certain photos on specific days.



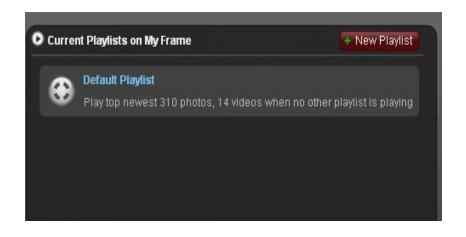



To upload photos from Social Network sites such as Flickr, search for your desired photos. Then choose your photos and drag them into the main interface where they will then be uploaded to your frame.







Your Kogan Wi-Fi Digital Photo Frame allows you to enjoy your favourite photos from the comfort of your own home conveniently and easily via Wi-Fi.



kugan