

LEGEND DIGITAL

LDVD5.1A

USER'S MANUAL



DVD/DIVX PLAYER



IMPORTANT SAFETY INSTRUCTIONS

The important safety instruction shall include where applicable, the following information and warnings.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus.
- 13) Unplug this apparatus during lightning storms or when unused for long period of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

"CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



IMPORTANT SAFETY INSTRUCTIONS

The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of uninsured "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

CAUTION:

When replace the direct plug in power supply with a separable cord-connected power supply. The replacement must be exact duplicate or one recommended by the manufacturer.

CAUTION:

TO PREVENT ELECTRIC SHOCK. MATCH WIDE BLADE OF PLUG TO WIDE SLOT.

POWER-CORE PROTECTION

Power-supply cords should be coated so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the product.

POWER LINE

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuit. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or from the product.

OVERLOADING

Do not overload the outlets extension cords or integral convenience receptacles as this can result in a risk of the electric shock.

SERVICING

Do not attempt to service this product yourself as opening or removing covers, otherwise it may expose you to dangerous voltage or other hazards. Refer all servicing to qualified services personnel.

IMPORTANT SAFETY INSTRUCTIONS

DAMAGE REQUIRING SERVICE

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following condition:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way.
- f) When the product exhibits a distinct change, a performance of this indicates a need for service.

SAFETY CHECK

Upon completion of service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

WALL OR CEILING MOUNTING

The product should not be mounted to a wall or ceiling.

HEAT

The product should be situated away from heat.

READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

FOLLOW INSTRUCTION

All operating and use instructions should be followed.

CLEANING

Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a soft lint-free cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile compounds since they may corrode the cabinet.

ATTACHMENTS

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

IMPORTANT SAFETY INSTRUCTIONS

WATER AND MOISTURE

Do not use this product near water for example. Near a bathtub, Wash bowl, Kitchen sink or laundry tub. In a wet basement or near a swimming pool and the like.

ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer. A product and cart combination should be moved with care to avoid the product and cart combination to overturn.

CART

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

VENTILATION

Slots and openings in the cabinet are provided for ventilation and to ensure operation of the product and to protect it from overheating. And these openings must not be blocked or covered. The openings should never be blocked by placing the product a bed, sofa rug or other.

LOCATION

The appliance should be installed in a stable location.

NONUSE PERIODS

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

GROUNDING OR POLARIZATION

This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other) This plug will fit into the power outlet only one way. This is a safety feature. You are unable to insert the plug should still fail to fit. Contact your electrician to not detect the safety purpose of the polarized plug.

Warning:

DANGER-laser radiation When open AVOID DIRECT EXPOSURE TO BEAM


The DVD player contains laser devices. The top cover of the DVD module acts as a protective housing. Laser radiation is dangerous when the top cover is removed or opened. Avoid direct exposure to beam during service or repair.

CONTENTS


Accessory	1
DVD Features	2
Front & rear panel	3
Remote Control	4
DVD Operations	5
● To Turn on	5
● To Play	5
● To Pause Playback	5
● To Mute	5
● To Adjust the Volume	5
● To Stop Playing	6
Frequently Used Operations	6
● To Select Playing Contents with the Menu	6
● Fast Forward Playing	6
● Fast Reverse Playing	6
● Play Images in Slow Motion	6
● To Call List of Songs	7
● To Skip to Play at the Specified Time	7
● To Switch between Caption Languages	7
● To Repeat Playing	7
● To Program Playing	7
● Use of Direct Numbers	8
● To Play MP3 Discs	8
● Digital Equalizer	8
System Setting	9
● Example 1: To Set up the Ratio Mode, Angle Mark, SCR Saver	9
● Example 2: To Set up the Output mode of Sound Mixing	10
● Example 3: To Set up 5.1 Channel Output	10
● Example 4: To Set up Parental Guide	12
Overview of the Functions of Remote Control Buttons	13
Glossary Explanation	15
Troubleshooting and Countermeasures	15
Specifications	16

Accessory

Please carefully check if all these following attachments are all ready after opening the gift box. If not, please consult with agency or retailer.

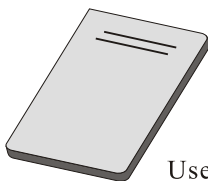

User's manual

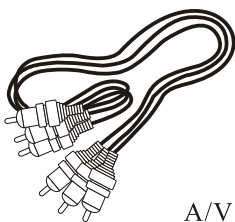 

A/V Cable



 
Remote Control

DVD Features

DVD player is an advanced appliance for home entertainment and learning. Its various indicators are far superior to any other video playing devices. Its output video is sharp and real. It can provide Dolby Digital (5.1 channel) sound with high fidelity, surround effect. The player can play many different formats of discs, such as DVD, super VCD, DVCD, CD, MP3.

Main Function

- **Full Compatibility:** It is fully compatible to all types of discs such as DVD, Super VCD, DVCD, CD, MP3.
- **Operation Hints in Different Languages:** Operation hints can be switched between Chinese and others so as to facilitate the operation for the clients at home and abroad.
- **Picture with High Fidelity Resolution:** Horizontal resolution as 500 dpi. It can make full use of the advantages of large screen TV based on the fidelity of normal TV.
- **Hi-Fi Sound:** Dolby Digital 5.1 Channel surround sound.
- **With Dolby Digital 5.1 Channel Surround Sound,** users can enjoy 3D listening.
- **Subwoofer** can even boost the bass sound effect. However, whether the DVD player can play Dolby Digital Surround depends on whether the audio signal of the disc is recorded according to Dolby digital format.

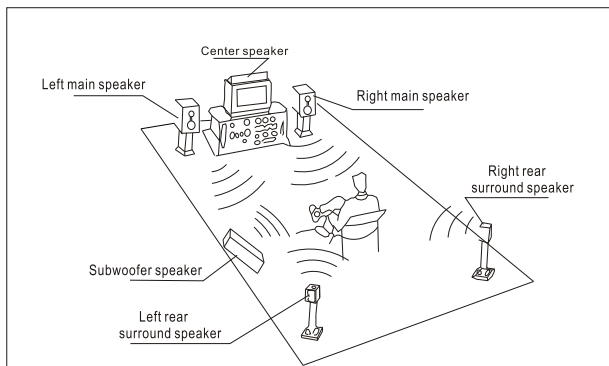


Other Function

- **Supporting Many Types of Different Languages:** DVD discs can support captions in as many as 32 different types of languages and dialogues in 8 languages.
- **Many angles of Enjoyment:** Users can enjoy the picture from different angles selected such as zoom in, side view, panorama etc.
- **Many Types of Picture Ratio Modes:** These modes enable the DVD player to suit different TV screens.
- **Manufactured under license from Dolby Laboratories.**
- **"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.**


Front & Rear panel function and instruction

Front panel

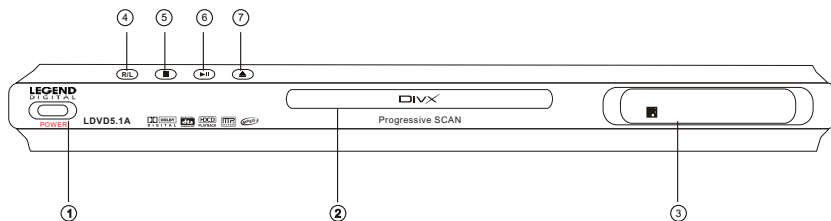


- ① Power Switch
- ② Disc Cell
- ③ LED
- ④ Vocal Button
- ⑤ Stop Button
- ⑥ Play/Pause Button
- ⑦ Open/Close Button

 Rear panel

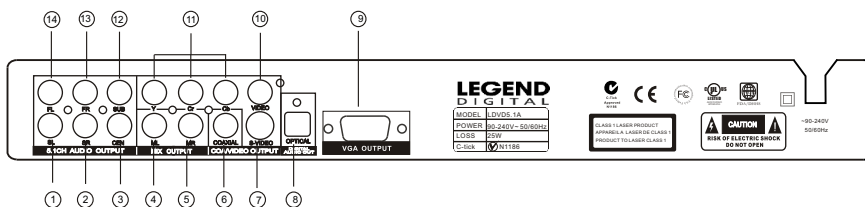

- ① Left Channel of Surround output
- ② Right Channel of Surround output
- ③ Center Audio Channel output
- ④ Left Channel of Mix output
- ⑤ Right Channel of Mix output
- ⑥ Coaxial output
- ⑦ S-Video output
- ⑧ Optical output
- ⑨ VGA output
- ⑩ Video output
- ⑪ Component output
- ⑫ Subwoofer Audio Channel output
- ⑬ Right Channel output
- ⑭ Left Channel output

 Remote control

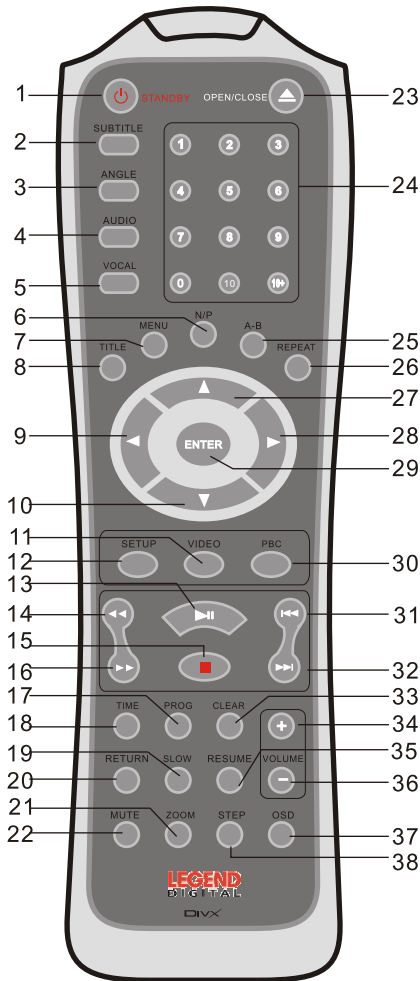

1. Standby
2. Select the caption language
3. Choose different angle when playing DVD
4. Choose audio mode or language when playing
5. Audio channel conversion
6. NTSC/PAL
7. DVD player root menu
8. DVD main menu
9. Left direction button
10. Down direction button
11. VIDEO Conversion
12. Set Parameters
13. Play/Pause
14. Reverse
15. Stop button
16. Forward
17. Program Playing
18. Jump to one point to play when playing
19. Slow playing
20. Return to PBC
21. Zoom the picture
22. Mute Voice
23. Open/Close the Tray
24. Digital key
25. Repeat A-B
26. Repeat 1/ALL
27. Up direction button
28. Right direction button
29. Enter or Selection effective
30. PBC on/off
31. Prev button
32. Next button
33. Clear the program contents/EQ Button
34. Volume+
35. Memory playing
36. Volume-
37. On screen display
38. STEP

DVD Operations

To turn on


Once your DVD player is connected with your TV and the power supply plugs of various devices have been plugged into the power sockets, and the batteries have already been inserted into the remote control, you are ready to operate the DVD player.

- Turn on the power supply to the TV.


To Play

1. Press POWER button on DVD player to turn on power.

- Wait a moment and switch the TV to the relevant video input mode (VIDEO IN) with the TV remote control.

2. Press OPEN/CLOSE button on the player or press  button on the remote control to eject the disc tray.

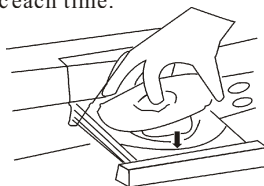

- When the tray is automatically ejected, place the disc in the tray with the label side facing up (see the following). You can only place one disc each time.



3. Press PLAY button

- The player will retract automatically the tray and start reading the disc, recognize the different format automatically and display the results on the VFD in the front panel of the player. Then the player starts the playback of the disc content automatically. If content or menu appears, you can use the UP, DOWN, LEFT, RIGHT buttons on the remote control to specify the items to be played, then press ENTER button to start the playback or select directly with numbers.

To Pause the Playback

During playback, press PAUSE  button to pause the playback, press  PLAY or PAUSE to resume play.

To Mute

Press MUTE button to turn off the audio output of the player.

Press MUTE button again to turn it on.

To Adjust the Volume

During the playback, press VOLUME+ or VOLUME- button to adjust the volume of the player.

To Stop Playing

1. Press OPEN/CLOSE button,
The playback will end. Wait for the tray to eject and take out the disc.
2. Press OPEN/CLOSE button to close the tray.
3. Press POWER button to turn off the power supply to the player.

Notes:

(1) If the screen is not full or the edges are covered or there is black and white image during the playback, please make the system setup by selecting the relevant TV signal format (PAL OR NTSC).

(2) When the "👁" symbol appears on the TV screen, it means the operation made by the user is not effective or not acceptable by the player.

Frequently Used Operations

In the following sections the frequently used operations are introduced according to the types of functions. Besides the functions and operations of the buttons are introduced in page 13.

To Select Playing Contents with the MENU

Press MENU or TITLE to call the menu on the DVD and select a certain portion to play. The detailed operation areas follows:

1. Press MENU button
A menu appears and the select contents
2. Press UP, DOWN, LEFT, RIGHT button
Move the symbol to the specified item or picture with these button.
3. Press ENTER button to select the items at this time the next submenu may appear, otherwise the
specified contents will be played automatically. For the submenu operation, first select the contents
with UP, DOWN, LEFT, RIGHT, then press ENTER button.

Fast Forward Playing

During the playback, you can press FWD ►► to realize the fast forward playing. There are totally five fast speeds. Every press increases the speed by one step. When the fast forward reaches the maximum speed, press FWD ►► again to return to normal playback.

Fast Reverse Playing

During the playback, you can press REV ◀◀ to realize the fast reverse playing. There are totally five fast speeds. Every press increases the speed by one step. When the fast reverse reaches the maximum speed, press REV ◀◀ again to return to normal playback.

Play Images in Slow Motion

During the playback, you can press SLOW to realize the slow motion playing at different speeds. There are forward and reverse for which there are three speeds. Pressing it once the slow motion speed varies and pressing "PLAY/PAUSE" will return to playing.

Frequently Used Operations

To Call List of Songs

With DVD, press MENU button to call the list of tracks on the disc, then you can press UP, DOWN button to select the tracks, then press ENTER button to play.
With non DVD discs, when PBC is on, press PLAY button, the list of tracks will appear, then you can input the track number directly to play.
You can switch the state of PBC by pressing PBC button.
Notes: Whether the above operation is effective differs from disc to disc.

To Skip to Play at the Specified Time

● With DVD discs

1. Press TIME button.
 2. Press the number button to input the specified chapter or time. The time format input is "hour hour minute minute second second". For example, if you like to move to the point at 38 minute 5 second to play, just input 003805.
 3. Press ENTER button.
- The player starts to play from the point of the input time.

● With VCD (or non DVD) discs

Press once TIME button

Press number buttons to input the specified time. The time format input is "minute minute second second". For example, if you would like to move to the point at 5 minute 25 second to play, just input 0525.

To Switch between Caption Languages

With DVD, you can press SUBTITLE button to select the language types, such as Chinese, English etc. Each pressing toggles between one caption language codes.

To Repeat Playing

During the playback, press REPEAT continuously to select different repeat contents to play.

● With DVD discs

Press once REPEAT button to repeat "Chapter".

Press twice REPEAT button to repeat "Title".

Press three times REPEAT button to cancel the repeat play.

● With other types of discs (when PBC is off)

Press once REPEAT button to repeat a single track.

Press twice REPEAT button to repeat the full disc.

Press three times REPEAT button to cancel the repeat play.

To Program Playing

1. When PBC is off, press PROGRAM button

The following figure will be displayed on the TV screen, waiting for the user to program.

PROG			
1[--]	5[--]	9[--]	13[--]
2[--]	6[--]	10[--]	14[--]
3[--]	7[--]	11[--]	15[--]
4[--]	8[--]	12[--]	16[--]
<PLAY>		<CLEAR>	

(effectiveness depends on disc)

Frequently Used Operations

2. Press the number button to input the track or chapter codes. For example, if a user would like to play chapter 5 on the disc, then play chapter 4 finally chapter 2, just press the number buttons "5" and "4" and "2", (you can press "CLEAR" button to cancel the number input).

3. Press PLAY button

The player will play in the order specified by the user.


Use of Direct Numbers

When playing VCD/SVCD/CD/MP3, if PBC is off, you can press directly the number button corresponding to the track number to play it. If the track number is over 10, you need to press first 10+ button, then press the corresponding number. For example, if you would like to select "21", first press twice "10+" button, then press "1" button again.

To Play MP3 Discs

MP3 discs are a new type of disc with a record of MP3 format audio track. The player supports MP3 and the specific operations are as follows.

Press OPEN/CLOSE button to eject the tray. Place the MP3 disc, press OPEN/CLOSE button to retract the tray and the TV screen will display the menu. (see picture 1)

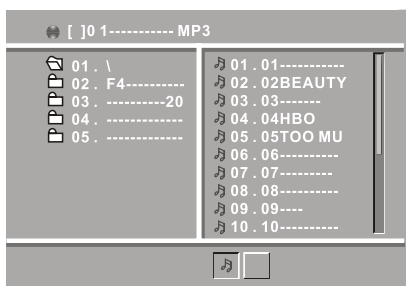

picture 1



picture 2

Digital Equalizer

Press EQ button to turn on digital equalizer. (VCD/SVCD/CD/MP3)

1. Press EQ one time, and current 3D surround mode info will show on the TV screen, press RIGHT button to choose "EQ". (see picture 2)

2. Press UP/DOWN button to choose "STANDARD, CLASSIC, ROCK, JAZZ, POP, USER" modes.

3. Press ENTER button to confirm setup above.


4. Press EQ button to exit.

System Setting Up

Press SETUP button, the screen will display the following system setup menu. At this time press UP, DOWN button to move the blue band to the specified menu, press ENTER button to show the submenu. In the submenu, you can press RIGHT button to enter a submenu on the right hand corner on the screen. Please note that under each menu state, you can move the blue band with UP, DOWN button. Press ENTER to make the selection effective. Press the LEFT button to exit the submenu on the right hand corner of the screen. At any time press SETUP button to exit the system setup.

The following are examples of the common setup. Users are master the method so as to setup other devices.


● SETUP MENU---MAIN PAGE

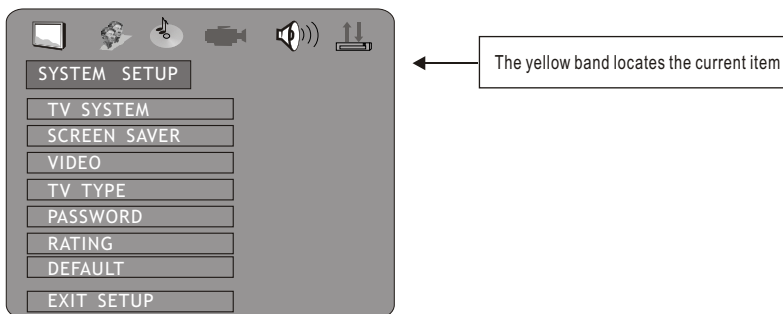

Example1: To set up the SCR saver

● Set up the SCR Saver

1. Press SETUP button so that system will be display on the TV screen and make sure that the blue band locates SYSTEM SETUP. Press ENTER button so that the following figure will show on the TV screen.

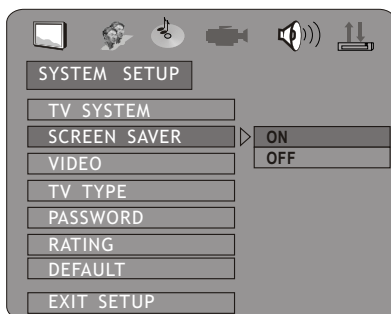

System Setting Up

2. Press RIGHT button to enter the submenu on the right hand corner of the screen. If you would like to setup the SCR SAVER to be OFF, press the button to locate the blue band on OFF, then press ENTER button.

3. Press SETUP button to exit the system setup.

Note: When SCR Saver is ON, screen saver picture will appear under non-work condition. When SCR Saver is OFF, there will be no screensaver function.

Example 2: To set up the Output Mode of Sound Mixing

1. Press SETUP button so that the system setup menu appears on the TV screen. Press DOWN button to move the blue band to SPEAKER SETUP and press ENTER button with the following picture appear on the TV screen.



2. Press RIGHT button to enter submenu on the right hand corner of the screen. If you would like to setup the sound mode to be STEREO, first press DOWN button to move the blue band to locate the STEREO, then press ENTER button.

Example 3: To set up 5.1 Chanel Output

Set up 5.1 Channel output might need two steps, namely to turn off MIXED OUTPUT MODE and turn on each speaker output channel.

System Setting Up

Step 1: To turn off mixed output mode (if the mode has been turned off, the step can be ignored). The operations are as follows:

1. Press **SETUP** button so that the system setup menu appears on the TV screen. Press **DOWN** button to move the blueband to **SPEAKERSETUP** and press **ENTER** button with the following pictures appear on the TV screen.

2. Press **RIGHT** button to enter the submenu on the right hand corner of the screen.

Press **DOWN** button to move the blue band to locate the **5.1CH**, then press **ENTER** button. Finally press **SETUP** button to exit the system setup.



Step 2: To turn on each various speaker output channel. The operations are as follows:

1. The operation is the same as the procedure 1 of the first step.

2. Press **DOWN** to locate the blue band on **CENTER** and the screen changes as follows:



System Setting Up

3. Press RIGHT button to enter the submenu on the right hand corner of the screen. Make sure the blue locates the ON, then press ENTER button.
4. Press LEFT button to exit the submenu on the right hand corner of the screen. Press DOWN button to allow the blue band to locate REAR, press RIGHT button to enter the submenu on the right hand corner of the screen. Make sure the blue locates the ON, then press ENTER button.
5. Press LEFT button to exit the submenu on the right hand corner of the screen. Press DOWN button to allow the blue band to locate SUBWOOFER, press RIGHT button to enter the submenu on the right hand corner of the screen. Make sure the blue locates the ON, then press ENTER button.
6. Finally press SETUP button to exit the system setup.

Example 4: To set up Parental Guide

DVD discs with genuine copyright, parents are entitled to forbid those contents not suitable for children. The operations to set up the parental guide are as follows.

1. Press STOP button so that the player is in stop mode.
2. Press SETUP button so that system setup menu displays on the TV screen, hold DOWN button pressed until the blue band moves to SYSTEM SETUP, then press ENTER button, press DOWN button until the blue band moves to RATING item with the TV screen displays as follows:



3. Press RIGHT button to enter the submenu on the right of the screen. If you would like to change the age control grade to 1, hold UP button pressed until the blue band locates **1 G**, then press ENTER button.
4. Input the password "0000" .
5. Press SETUP to exit the system setup.

Overview of the functions of Remote control buttons

Listed in this chapter are the functions of the remote control buttons and their methods of operations so that the user can refer to them for reference. Please refer to the relevant sections in chapter 4 and 5 for the detailed operations of most buttons.

11.1 PLAY/PAUSE button

When the player is in the state of stop, pause, slow motion, fast forward, fast reverse, pressing PLAY button can resume the player to normal playback. When the player is in playback mode (including slow motion play, fast forward, fast reverse), pressing PLAY/PAUSE button can resume the normal playback.

11.2 PROGRAM button

Depending on the type of disc, pressing PROGRAM button can change the track playing sequence.

11.3 CLEAR button

When inputting the code for program playback, pressing CLEAR button can cancel the input number.

11.4 TITLE button

Pressing TITLE button can display the selectable title menu contained in the DVD disc. In the menu picture, you can move the UP, DOWN, LEFT, RIGHT button to locate the specific item, then press ENTER button to specify the playing content (it can be submenu, in this case continue operating with UP, DOWN, LEFT, RIGHT and ENTER buttons.)

11.5 MENU button

When playing a DVD disc, pressing the button can appear the menu contained in the side (effectiveness depends on the type of disc). When PBC is off, pressing the button in stop mode can browse the contents of disc.

11.6 PBC button

Pressing the button switches the PBC state, with VCD 2.0 discs, when PBC is off, during the playback, press PBC to turn on PBC.

11.7 OSD button

Pressing OSD button will display the message about the play.

11.8 FAST FORWARD BUTTON

Pressing the button will play the disc in slow motion without sound. Each press changes the fast reverse speed until it resumes the normal playback.

11.9 FAST REVERSE button

Pressing the button will play the disc in slow motion without sound. Each press changes the fast reverse speed until it resumes the normal playback.

11.10 PREVIOUS button (depends on the format of the disc)

When playing a DVD disc, pressing this button can jump back to play the previous chapter. With SVCD and other types of disc, pressing the button can jump back to play the previous track.

11.11 NEXT button (effectiveness depends on the type of disc)

During DVD playback, pressing the button can jump to the playback of next chapter. In stop mode can browse the contents of disc, pressing the button can skip to the next track.

11.12 SLOW MOTION PLAY button

Pressing the button will play the disc in slow motion without sound. Slow motion play can be performed forward or reverse. Each press changes the slow motion play speed until it resumes the normal playback.

Overview of the functions of Remote control buttons

11.13 REPEAT button

When playing a DVD disc, pressing the button once will repeat the current chapter when it ends; pressing REPEAT a second time will repeat the content under the current title; pressing REPEAT a third time will cancel the repeat play function.

11.14 ZOOM button

During playback, pressing the button can zoom out the image, pressing it once enlarges the image by two times, pressing it twice can enlarge the image by four times, pressing it again can resume the normal playback.

11.15 ANGLE button (effectiveness depends on the type of disc)

When playing DVD discs on which many angles are recorded, pressing ANGLE can playback from different angles. Each press of the button changes the angle of the scene.

11.16 MUTE button

Pressing the button can turn off the audio output from the analogue channel.

11.17 SETUP button

On pressing the button, the system setup picture will display on the screen and wait for the user to set parameters not often changed. Users can make the relevant setup according to the specific needs. Please refer to page 13 or the detailed operation.

11.18 ENTER button

Pressing the button will make the input or selection effective.

11.19 NUMBER button

The number button "0,1...,9" are used to input numbers, such as inputting the track number of songs, chapter of a DVD disc, time etc.

11.20 TIME button

Pressing the button allows to input the specific time so that the player jumps to the point to play.

11.21 AUDIO button

When playing a DVD disc recorded with dts and AC-3, pressing this button can select audio mode (depends on the DVD disc) Or when playing a DVD disc recorded with many languages, pressing it can select different language. Each press of the button changes one language.

11.22 VOLUME+ button

Pressing the button can adjust the volume. Each press increases the volume by one unit.

11.23 VOLUME- button

Pressing the button can adjust the volume. Each press decreases the volume by one unit.

11.24 SUBTITLE button (depends on the type of disc)

Pressing the button can select the caption language such as Chinese, English etc. Each press changes one caption language code.

11.25 STOP button

When playing DVD, pressing the button once means the playback is paused, and pressing it twice means the playback is completely stopped.

11.26 OPEN/CLOSE button

Pressing this button once ejects the disc tray and pressing a second time close the disc tray in turn. You can use this button place or remove a disc.

Glossary Explanation

Title: The longest section of a picture, a music piece or a movie on a DVD. Each title is assigned a titlenumber enabling you to locate the\title you want.

Track: The sections of a picture or a music piece on a VCD or CD, each track is assigned a track number enabling you to locate the track you want.

Chapter: A complete section of picture or a music piece on DVD that are smaller than a title. A title is composed of several chapters. Each chapter is assigned a chapter number.

Caption: The language displayed at the bottom of the TV screen, normally the translation or the dialogue, which are also recorded on the disc.

Angle: Some DVD discs are recorded from different angles so that users can view the same scene from different angles.

Troubleshooting and Countermeasures

When you encounter the following problems, first try the following measures. If the problem still exists, please contact the nearest maintenance center or the maintenance department of the entertainment company for repairs.

No sound

- Make sure that the player is connected rightly with other devices such as amplifier of the TV set.
- Make sure that the TV set is in normal operation.
- Check if the system setup is correct.

No normal output from channel 5.1

- Make sure that the speakers are correctly connected.
- Make sure that the audio signals of disc are recorded with Dolby format.
- Make sure that speaker (such as central speaker, surround) are set to "ON".
- Check that the audio output is set to analogue output.
- Check that the KARAOKE is set to "OFF".

The player can not play

- Check the disc is correctly placed on the tray (with the label side facing up).
- Check if there is only one disc is placed on the tray.
- Make sure that the disc is clean.

Remote control does not work

- Move away the objects between the remote control and the player.
- Point the remote control at the remote sensor window on the player.
- Check the energy of the batteries are sufficient.

Image distortion

- Check whether the disc is scratched or dirty.
- The player is controlled by a micro computer. In case of malfunction, please turn off the power supply and turn on the player again in 10 seconds. If there is no error display, the player can be operated normally.

No response from the button

- It might be caused by the power instability or other abnormal phenomena. Please turn off the power supply and turn on the player again in 10 seconds.

Technical Specification

Type	DIVX PLAYER
Model	LDVD5.1A
Play mode	NTSC/PAL/AUTO
Disc mode	DIVX/DVD/VCD/SVCD/CD/MP3/CD-R/DVD-R/WMA/AVI/MPEG
Video characteristic	
Resolution	≥ 500 lines
Video S/N ratio	≥ 56 dB
Audio characteristic	
Frequency response	fs 96 KHz: 20Hz-20KHz:±1dB
Audio S/N ratio	≥ 90 dB
Dynamic range	≥ 90 dB
Distortion	< 0.01%
D/A converter	96 KHz/24bit
Output characteristic	
Video output	1Vp-p(75 Ω)
S-Video output	Y: 1Vp-p(75 Ω) C: 0.3Vp-p(75 Ω)
Audio output	$2.0V \pm \begin{smallmatrix} 0.0V \\ 1.0V \end{smallmatrix}$
Digital audio output	coaxial optical
AC-3	5.1 channel output
Power Voltage	~90V-240V50/60Hz
Power consumption	≤ 25 W
Size	
Weight	3.0Kg

Notes: design and specifications are subject to change without notice.

LEGEND
DIGITAL

www.legenddigital.com