

AMICROE

Model: AMI-TT FORCE



USER MANUAL



This manual contains instructions and notes on the operation and use of this device. For your safety and benefit, read this manual carefully before using the device. Keep this manual in a handy place for quick reference.

1. DO NOT place the product in hot, wet or dusty environment.
2. Avoid leaving this device in a hot car or other vehicle for prolonged periods of time.
3. Dropping, high impacts and shaking the device violently may cause damage or malfunctions.
4. To protect your device against online threats, it is highly recommended to use anti-virus software.
5. Only use the charger supplied in the package and ensure compatibility of 3rd party accessories before fitting.
6. DO NOT attempt to open the Tablet housing. Opening the Tablet housing may cause harm to people, or to the equipment and void the manufacturer's warranty.
7. Be sure to charge the device when the following situations occur.
 - The battery icon shows the device is low on power or empty.
 - The system automatically shuts down or turns OFF soon after a restart.
 - Operation keys are slow to respond.
 - The device shows an empty battery icon in the bottom right corner.

IMPORTANT: To optimise battery life, it is recommended to install a "Task Killing APP" available from the Play Store.



Specifications

 
 
Hardware

- Rockchip 3026 Cortex-A9 dual-core Processor
GPU400Mhz, DDR3 512MB RAM
- 7" TFT LCD(800 x 480) 5 Point Capacitive 16:9
Touch Screen
- Micro SD Card slot (max 32GB)
- 8GB onboard storage
- External 3G support
- 802.11b/g/n Wi-Fi
- 0.3MP front facing camera
- G-Sensor (Automatic 4 point screen rotation)
- Built-in Speaker & Built-in Mic
- 5V DC C-Tick approved Power Supply
- Dimension: 119*189*10.5mm

Software

- Android 4.2.2 – Jelly Bean
- Google Browser
- eBook format – TXT, EPUB, PDF, WORD, EXCEL, PowerPoint (All e-book formats support by applications)
- VoIP function with Wi-Fi connection
- MS office support via applications
- 1080P HD files playback
- Video – 1080P AVI (H-264, DIVX, XVID) MKV, WMV, MOV, MP4, MPG FLV
- Audio – MP3, WMA, OGG, AAC, M4A, FLAC, APE, 3GP, WAV
- Image – JPG, JPEG, GIF, BMP, PNG

Important Notice

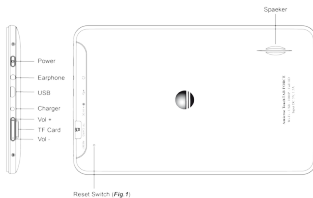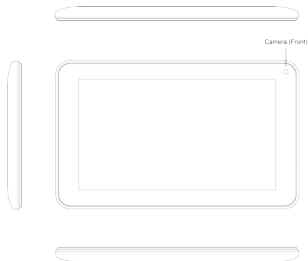

- If the device is unresponsive, press and hold the reset button (back of unit, **Fig.1**) for 7 seconds.

- If the device is running slow, it is recommended to close all applications not in use. This can be done through ***“Settings/ Apps/ Running”***.

1. Power On/Off

To turn the device on. Press and hold the Power button for 5 seconds, the device may take a minute to boot.

To place the device in “Standby” mode. Press the power button for 1 second.

To turn off the device. Press and hold the Power button until the “power off” confirmation message appears, touch **OK** to turn off the tablet.

2. Home Screen


After turning on and unlocking the device (see step 3), the Home Screen will display showing pre-loaded Apps, Settings and Shortcut icons down the right hand side.



3. Lock Screen/ Standby (power save mode)

When the device is powered on, the lock screen will appear. Touch and slide the “Padlock” icon in order to unlock the screen. In “standby” mode, press the power button once to activate the screen and then slide the padlock icon to access the Home Screen.


Quickly press the power button to put the device back into standby mode.

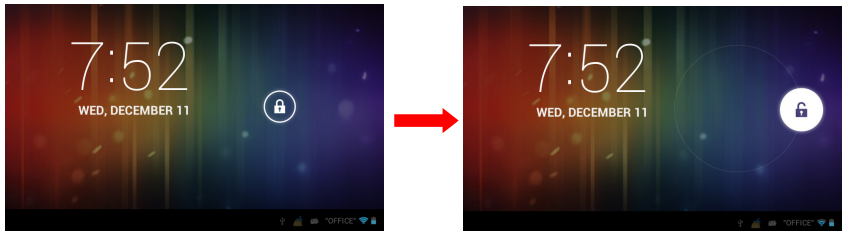

4. System settings


Method 1. On the desktop, touch the settings icon to go directly into the settings options.

Method 2, On the desktop, touch on the right hand bottom corner, slide up and select **system settings**.

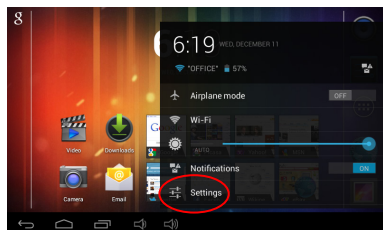

System Settings


1. Wi-Fi

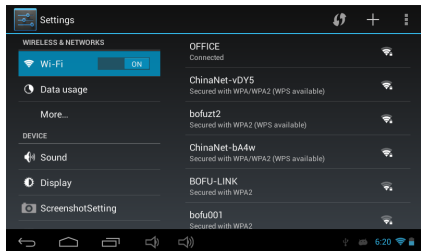

- Press “Wi-Fi” to turn ON/ OFF.


The device will automatically scan for available networks. Search and select the network that you would like to connect with.

2. Data Usage

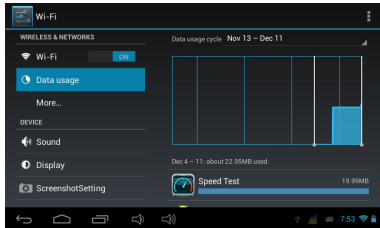

- Here you can view your current usage, or monitor which applications use the most data. By moving the white markers, you can select specific timelines to review data usage during the selected period.


3. More

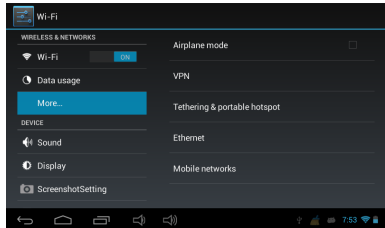

In this section you will find additional information on mobile data, including


- Airplane mode.
- VPN (Virtual Private Networks).
- Tethering & Portable Hotspots.
- Ethernet.
- Mobile Networks.

4. Sound

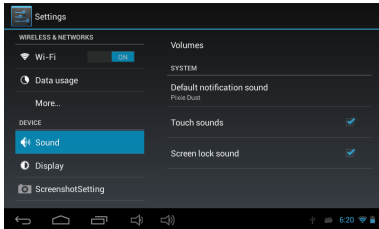

- Press **"Sound"** to access.
- *Volumes.*
- *Silent Mode.*
- *Ringtone & Notifications.*
- *System Sounds.*


5. Display

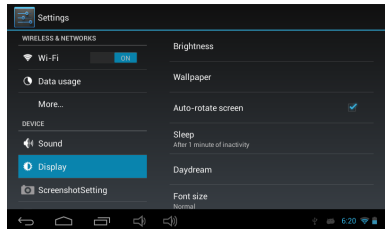

- Press **"Display"** to access display options
- Brightness
- Wallpaper
- Sleep Options
- Font size

6. Storage


Fig 1

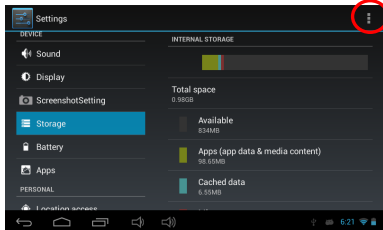

- Select "Storage" to access the device memory and MicroSD status.
- To safely remove external storage items such as MicroSD (TF) Cards & external USB Flash Drives, scroll down to "Unmount Storage" and press "OK".


To enable mass storage mode, connection to a PC, press "USB Computer Connection" (fig 1) and touch on "Mass Storage".

7. Battery

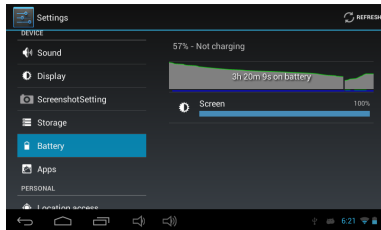


- Touch the battery icon to check the battery usage status.

8. Apps

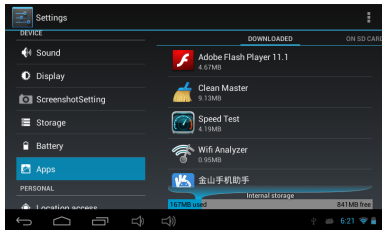

To view and manage installed Applications, press **“Apps”** to access options and then slide between:

- “Downloads”
- “On SD card”
- “Running”
- “All”

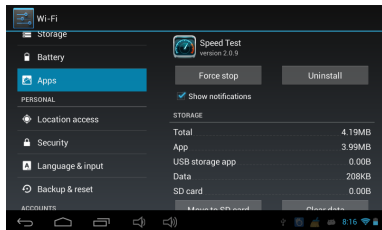


Touch the application that you want to manage.

- Select the **“Force Stop”** button to stop an application running in the background.
- Select the **“Uninstall”** button to remove unwanted applications.

9. Location services

Google's location service – enables Apps to use data from sources such as Wi-Fi and Mobile Networks to determine your approximate location.

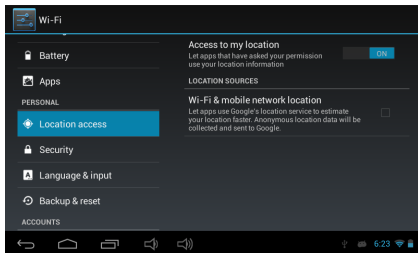


10. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock option.

Make Passwords Visible – Show the password on screen as you type.

Unknown Sources - If you want to allow installation of non-Market Applications, press Unknown Sources and press OK.

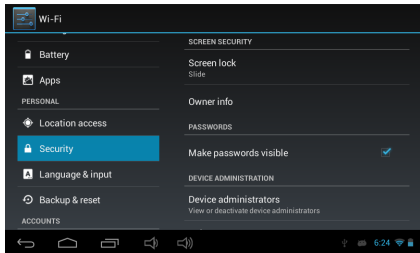


11. Language & Input

Language – Choose your preferable on-screen language.


Spell Checker – Enable onboard spelling correction. Add “Personal Dictionary” words to the onboard Dictionary.

Keyboard & Input Methods – Change Keyboard/ Keyboard settings. Turn Google “Voice Typing” ON/ OFF.

Language & Input. To change the Keyboard language from English, under the sub-heading “Keyboard & Input Methods” located on the right hand side of the screen, touch the settings icon adjacent to “Android Keyboard (AOSP)”, select “Input Languages” and choose your desired Keyboard Language.

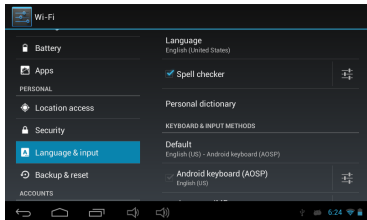


12. Backup & Reset

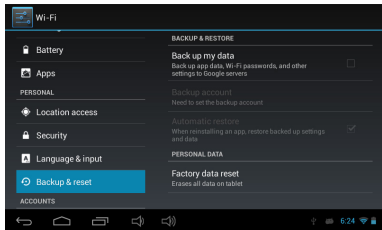

Here you can back-up your data, or if required, completely erase the device to clear all contents and restore the device to the original factory default settings.

Important note: Restoring factory settings will completely wipe all data from the devices internal storage memory.


13. Add Account

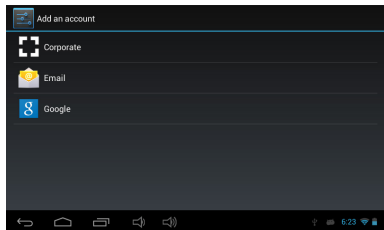

Create your account. After connecting to a Wi-Fi network, add your GMAIL account or enter your Exchange/ POP/ IMAP to install another email account.


Once completed the emailing system synchronizes your account with the device and emails are automatically downloaded into the device.

14. Date & Time

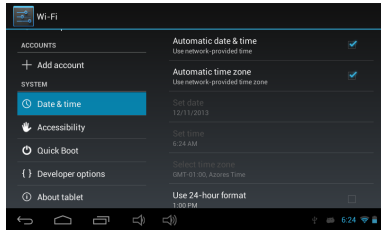


Adjust the Date & Time according to your time zone. Touch the “Tick” beside “Automatic Time Zone” to un-tick/ un-lock and set the Time and Region to your local settings. Once set, re-tick “Automatic Date & Time” and then re-tick “Automatic Time Zone” to lock in the new settings.

15. Accessibility

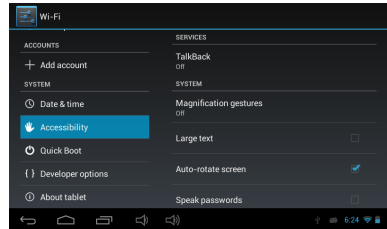


Select the accessibility options to suit your needs.

16. Developer options

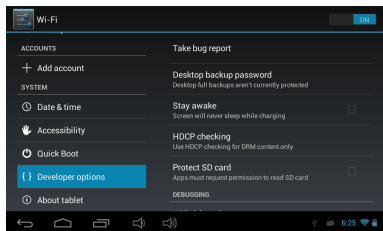

Set options for application development.

17. About Tablet

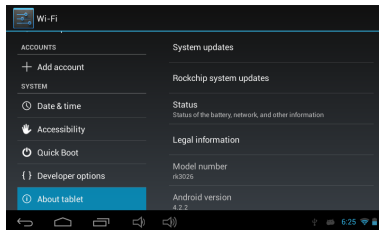

Identify model, software version and general information about your device.

How to enable USB storage mode/ connection with your Personal Computer.


When connected via USB to your PC, on the Tablet Desktop (Home Page) touch the USB symbol located in the bottom right hand corner of the screen.



To enable the USB storage mode, touch the ***“USB Connected”*** option and select ***“Turn on USB storage”*** this will connect your device to the PC. The device will appear on your PC as a removable disk. You can now use it as an external storage drive.

How to disconnect the device from your PC

(USB storage continued)

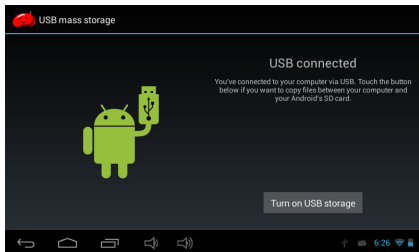

To disconnect the USB device, touch the ***“Turn off USB Storage”*** to disconnect the connection between the devices and then unplug and remove the drive.


Important note: *Mass storage mode must be enabled to connect to a PC. See page 10 for more details.

How to install Applications (.apk files) onto the device

Method 1.

1. Connect the device to the internet. See “System Settings” 1. (Wi-Fi) in order to establish an internet connection.
2. Touch “Google Play”, set up your account and search for the applications that you’d like to install.
3. Follow the instructions on the screen to download.

Play Store Button / Icon

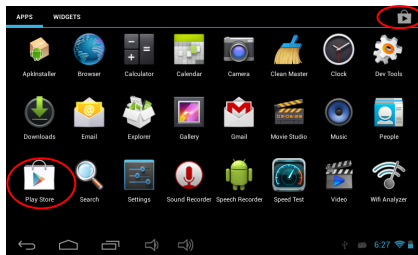

Method 2

1. With your computer, search application file (.apk) that you want to install onto the device.
2. Download the file (.apk) onto your computer.
3. Connect the device with your computer. See page 18 [How to enable USB storage mode/ connection with your Personal Computer]
4. Copy and paste the .apk file onto the device and then disconnect it from your computer.
5. Run “File Browser”, find the selected .apk file to ensure that it was copied correctly onto the device.
6. Press the file to install, follow the instructions on the screen to complete.

How to create Desktop icons & Shortcuts

On the Desktop, touch on the Apps Drawer icon (fig 1) to access pre-loaded applications (see next page).




Fig 1

You can scroll (swipe) left or right to access and personalize additional screens.

How to make Desktop icons (continued)


In the “Apps” drawer, press and hold the desired “App” icon and the Home (Desktop) Screen will appear.

You can now move the “App” to your desired location.

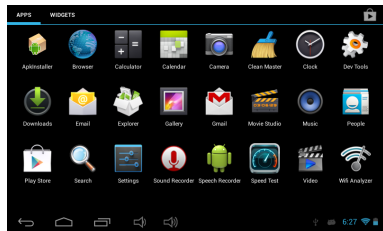

Shortcuts


Momentarily touch and hold on the desired APK icon and move it to the desired location.

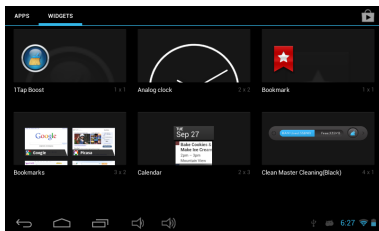


Widgets

Within the “Apps” drawer, select Widgets at the top left of the screen, or swipe from right to left on the desktop until you get to the pre-loaded “Widgets” pages. Momentarily touch and hold the desired Widget to move it to your preferred location.

How to change your Home Screen (Desktop) Wallpaper/ background

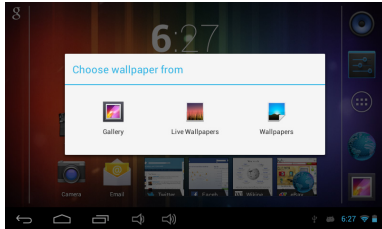


Momentarily touch and hold on the desktop, Wallpapers options will load, select from one of the galleries to choose different Wallpaper.

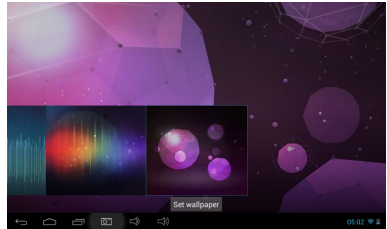


Once you've selected your new Wallpaper, select "Set Wallpaper".

How to change Keyboard input options

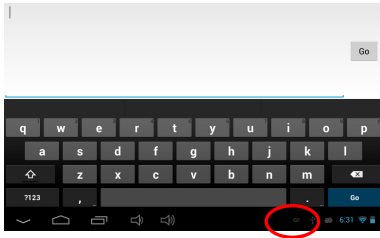

1. With the Keyboard on-screen, press the Keyboard icon to select ***Keyboard settings***.

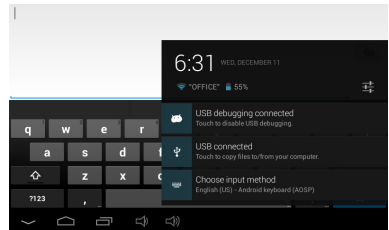

2. Now you can change settings to suit your needs.



Hardware Specifications

Operating System	Android 4.2.2 – Jelly Bean
CPU	Rockchip 3026 Cortex-A9 dual-core Processor
SDRAM	DDR3 512MB RAM
Display	7" TFT LCD(800 x 480) 5 Point Capacitive 16:9 Touch Screen
Screen	5 point Capacitive Touch Screen
Storage	8GB onboard storage
Audio port	3.5mm Stereo socket
USB port	Micro USB port (Support USB Host & OTG)
DC (Power) port	5V 1.5A (C-Tick Approved power adapter supplied)
Micro SD port	MicroSD Card slot - Max 32GB
Wi-Fi	802.11b/g/n Wi-Fi
Camera	0.3MP front facing camera
G-Sensor	Yes
Speaker & Mic	Built-in speaker & MIC
Battery	3.7V Li-Polymer
Charge Time	Approx 3~4 hours
Dimension	119*189*10.5mm
Warranty	12 Months Replacement Warranty

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty starts from the date of purchase. Proof of purchase that includes the original purchase date is required for warranty service. If our goods are defective, not caused by accident or improper usage, please properly package and return them at your expense to the place of purchase, or kindly contact us.



Amicroe Australia

13 Cleg St. Artarmon, NSW 2064 Australia
TEL: (+61 2) 9966 8896 Web: www.amicroe.com.au

Amicroe TM and the Amicroe logos are internationally registered trade marks.

FAQ's & Trouble Shooting

Refer to the Amicroe website (www.amicroe.com.au) for Frequently Asked Questions and Trouble Shooting Tips.