

**Telstra Explorer™**  
**3G Mobile Phone**  
**User Manual**

## **PC Software Requirements**

Join Me PC Software included supports Microsoft Windows 7, Vista (32 and 64 bit), XP with Service Pack 2 & 3. A limited version of Join Me is supplied that supports MAC OS 10.5, 10.6

## **Warnings and Safety Notices**

Please read all the safety notices before using this device.

Do not use the phone near fuel or chemicals or in any prescribed area such as service stations and refineries.

Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## **Copyright © 2010 ZTE Corporation All rights reserved.**

1<sup>st</sup> Edition May 2010

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation operates a policy of continuous development. ZTE Corporation reserves the right to make changes and improvements to any of the products described in this document without prior notice.

## **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

# Contents

<b>1</b>	<b>Welcome .....</b>	<b>9</b>
1.1	Handset Overview .....	10
1.2	Keypad Functions .....	12
1.3	Information Bar Icons .....	13
1.4	Menu Quick Reference Guide .....	14
1.5	How to use this manual.....	17
<b>2</b>	<b>Getting Started.....</b>	<b>18</b>
2.1	How do I insert the (U)SIM Card?.....	18
2.2	How do I insert the battery?.....	19
2.3	How do I switch the phone On or Off?.....	20
2.4	How do I connect the charger? .....	20
2.5	Tips about charging and battery life .....	21
2.6	How do I set the time and date? .....	21
2.7	How do I lock the keypad?.....	21
<b>3</b>	<b>Basic Operation .....</b>	<b>22</b>
3.1	How to make a voice call.....	22
3.2	How to answer an incoming call.....	22
3.3	How to send a Text Message (SMS).....	22
3.4	How to navigate the Menu.....	23
<b>4</b>	<b>Contacts.....</b>	<b>24</b>
4.1	How do I enter my Contacts? .....	24
4.2	How to copy all Contacts from a (U)SIM card .....	24
4.3	How to search your Contacts .....	24
4.4	How to add a Contact from a received call.....	25

4.5	How to add a Contact from a received SMS (Text Message).....	25
4.6	How to set a dedicated ringtone or image to a Contact.....	25
4.7	How to set Speed Dial numbers.....	26
4.8	How to make a call using Speed Dial.....	26
4.9	How to update an existing Contact.....	26
4.10	Advanced Contact Options.....	27
4.11	How to insert a Pause or Wait in the dialled number.....	27
<b>5</b>	<b>Calls</b> .....	<b>28</b>
5.1	How to make a Voice Call .....	28
5.2	How to make a Voice Call from my Contacts .....	28
5.3	How to view and make a Voice Call from my Call History.....	28
5.4	Call options during an active Voice Call .....	29
5.5	Tips for Calls .....	29
5.6	How to answer a Call.....	30
5.7	How to use the headphones (Personal Handsfree) .....	30
5.8	How to make a Video Call .....	30
5.9	Call options during an active Video Call .....	31
5.10	How to answer a Video Call .....	31
5.11	How to make Emergency Calls .....	32
5.12	Videophone Settings.....	33
5.13	Call Divert .....	33
5.14	Call Waiting .....	33
5.15	Call Barring .....	34
5.16	Send my number .....	34
5.17	Any key to answer .....	34
5.18	Missed Calls Alert.....	35

5.19	Call Options when Connected to a Bluetooth device .....	35
<b>6</b>	<b>Messages and Emails .....</b>	<b>36</b>
6.1	How to send a Text Message (SMS).....	36
6.2	How to view a received Text Message (SMS).....	36
6.3	How to use Predictive Text.....	37
6.4	How to add words to the built in Dictionary (My Words) .....	38
6.5	Special Characters and SMS Message Length.....	38
6.6	How to send a Multimedia Message (MMS).....	39
6.7	How to receive a Multimedia Message (MMS) .....	39
6.8	MMS and SMS Advanced Settings.....	39
6.9	WAP Push Messages .....	40
6.10	How to send an Email .....	40
6.11	How to receive an Email .....	41
6.12	How to set up automatic Email Retrieval .....	41
6.13	What are User Folders? .....	41
6.14	How to create a new Mailbox? .....	42
<b>7</b>	<b>How to Personalise the Phone .....</b>	<b>43</b>
7.1	Change the Background Screen (Wallpaper) .....	43
7.2	Change the Backlight timers .....	43
7.3	Change the Display Brightness .....	43
7.4	Set the Keypad Backlighting .....	44
7.5	Add a Greeting and Owner name .....	44
7.6	Set your own Shortcut Keys (Arrow keys).....	44
7.7	Change the Profiles.....	45
7.8	Change the Ringtone or Message Tone .....	45
7.9	Enable Vibrate Mode .....	46

7.10	Engage Meeting Mode with a single key press .....	46
7.11	Change the keypad sounds .....	46
7.12	What is the PIN Code? .....	46
7.13	What is the Handset Lock Code? .....	47
7.14	Additional notes on PIN Codes .....	47
<b>8</b>	<b>My Files .....</b>	<b>48</b>
8.1	My Files .....	48
8.2	Installing Additional Memory - microSD card .....	49
<b>9</b>	<b>Alarms and Appointments .....</b>	<b>50</b>
9.1	Set Alarms .....	50
9.2	Set Appointments using the Calendar .....	51
<b>10</b>	<b>Imaging - Pictures and Videos .....</b>	<b>52</b>
10.1	How to use the Camera .....	52
10.2	How to use the Video Camera .....	53
10.3	Viewing pictures and videos .....	54
<b>11</b>	<b>Music .....</b>	<b>55</b>
11.1	Browse and play music files from My Files .....	55
11.2	FM Radio .....	55
11.3	Create a new Playlist .....	56
<b>12</b>	<b>Assisted GPS .....</b>	<b>57</b>
<b>13</b>	<b>Connectivity .....</b>	<b>58</b>
13.1	Use the phone as a Mass Storage Device with a microSD Card .....	58
13.2	PC Connection via Bluetooth or USB cable .....	58
13.3	Use Join Me to Connect your phone to a computer .....	59
13.4	Install Join Me .....	60
13.5	Use Join Me to copy photos to your computer .....	61
13.6	Use Join Me to transfer music from a computer .....	63

13.7	Enter Contacts using Join Me .....	65
13.8	Copy Contacts from the phone to the computer (create a backup) .....	66
13.9	Import Contacts from Microsoft Outlook .....	67
13.10	Export Contacts to Microsoft Outlook .....	68
13.11	Use Join Me to send an SMS .....	69
13.12	Import Calendar events from Microsoft Outlook .....	69
13.13	Use Join Me to connect to the Internet .....	70
13.14	Connect to a Bluetooth Device .....	71
13.15	Dial Up Networking using USB or Bluetooth .....	73
14	<b>Other Facilities .....</b>	<b>75</b>
14.1	Browser .....	75
14.2	Stopwatch .....	76
14.3	Calculator .....	76
14.4	World Time .....	76
14.5	Currency Conversion .....	77
14.6	PocketNews .....	77
14.7	Games & Apps .....	77
14.8	Voice Recorder .....	78
14.9	Slide Show .....	78
14.10	Streaming URL .....	78
14.11	Connections .....	79
14.12	Access Point Settings .....	79
14.13	Restore default settings .....	79
14.14	Auto Keylock .....	79
14.15	Network Settings .....	80
14.16	CTM .....	81

<b>15</b>	<b>Troubleshooting, Technical and Warranty Information</b> .....	<b>82</b>
15.1	Troubleshooting and FAQ's .....	82
15.2	Error Messages .....	84
15.3	Technical Parameters .....	85
15.4	Support Information .....	86
15.5	Warranty Information .....	86
<b>16</b>	<b>Environmental Statement</b> .....	<b>87</b>
<b>17</b>	<b>Safety and General Information</b> .....	<b>88</b>

## RF Safety Information

The handset has an internal antenna located at the top of the phone. For optimum performance with minimum power consumption extend the antenna and do not cover the antenna with your hand. Hold the handset between thumb and finger in the middle of the device. Covering the antenna affects call quality, may cause the handset to operate at higher power and may shorten talk and idle times.

### Radio Frequency Energy

The handset is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves). The transmit power level is optimized for best performance and automatically reduces when there is good quality reception. Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low. Under poor network conditions the phone transmits at a higher power, may get hot and have a significantly shorter battery life.

### Declaration of Conformity - SAR (Specific Absorption Rate)

We declare under our sole responsibility that the product(s) detailed in this manual, and in combination with our accessories, conform with the essential requirements of The Radio Communications Standard (Electro-magnetic Radiation Human Exposure) 2003 and the Australian Communications and Media Authority Section 376 of the Telecommunications Act 1997.  N14945 **The highest SAR value recorded for the mobile phone is 0.764 W/kg.**


# 1 Welcome

Congratulations on choosing the Telstra Explorer™ handset. Please take a few minutes to read the user guide to help you get the most from your new mobile phone.

<b>Operation</b>	<b>Quick Reference</b>
Handset overview, keypad and information bar	Section 1 – Welcome
Making a call	Section 2 – Getting Started
Quick introduction to key features, Calls and SMS	Section 3 – Basic Operation
Store a list of contact names and phone numbers	Section 4 – Contacts
View calls received, dialled and missed	Section 5 – Calls
Text messages – sending and receiving	Section 6 – Messages and Emails
Personalise your phone, e.g. ringtone, screen saver	Section 7 – Personalise
Managing handset files and content	Section 8 – My Files
Setting alarms and reminders	Section 9 – Alarms and Appointments
Using the camera – take photos, record a video	Section 10 – Imaging
FM radio, MP3's and access to music libraries	Section 11 – Music
Using the Global Positioning System	Section 12 – Assisted GPS
Connecting to a PC to copy pictures and music	Section 13 – Connectivity
Calculator, Stopwatch and more	Section 14 – Other Facilities
Troubleshooting and Technical info	Section 15

## 1.1 Handset Overview

1.	Earpiece
2.	Daylight viewable display: The semi – transparent display enhances viewing in direct sunlight.
3.	Four way navigation controller Arrow Keys (◀▶▲▼)
4.	⋮ Left Soft Key (LSK)
5.	 Voice Call key, show Call History
6.	 Video Call Key, show Call History
7.	Keypad
8.	Microphone
9.	 Clear Key *
10.	 End / Exit / Power Key
11.	⋮ Right Soft Key (RSK)
12.	OK Key
13.	Front Camera

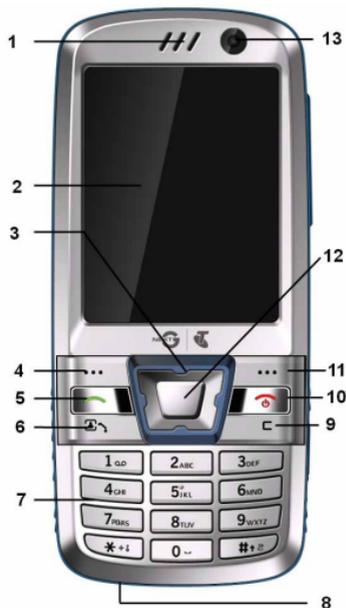

\* The **C** key is used to step back in menus and to clear text in text modes. In text edit mode press once for backspace, press and hold to clear all the text

## Handset Overview



Left

Rear

Right

## 1.2 Keypad Functions








Key	Corresponding Functions
1	1   punctuation marks   voicemail 
2	2   abc   ABC
3	3   def   DEF
4	4   ghi   GHI
5	5   jkl   JKL
6	6   mno   MNO
7	7   pqrs   PQRS
8	8   tuv   TUV
9	9   wxyz   WXYZ
0	0   Space 

Key	Corresponding Functions
	Long press for keylock 
* + #	Special characters in text modes Press twice for the international prefix '+' Press three times for the pause character 'P'
#	Toggle text modes. Long press for Silent Mode
 Call	Call a dialled or selected number View 'All Calls'. Last number redial
 End	End a call Exit a menu (return to the Main Menu) Long press to power ON / OFF


### 1.3 Information Bar Icons

	3G Signal Strength		Battery Level Indicator
	GSM Signal Strength		Alarm is set
	Signal Strength of the EDGE Network		Missed Voice Call
	New SMS Message		Missed Video Call
	SMS memory is Full		Bluetooth ON
	New MMS Message		Silent Mode
	MMS memory is full		CTM
	New E-mail		Vibrate mode enabled
	E-mail memory is full		Headset Mode
	New Wap Push Message		Headset and Vibrate Mode
	Wap Push Message memory is full		Call Forward is Active
	Data channel available (GPRS)		GPS
	Data channel active (PDP)		Roaming


## 1.4 Menu Quick Reference Guide

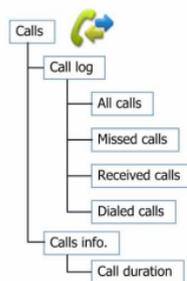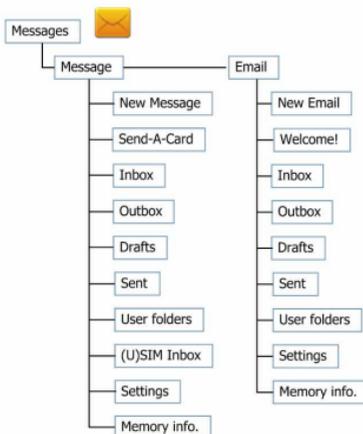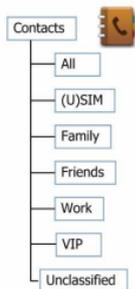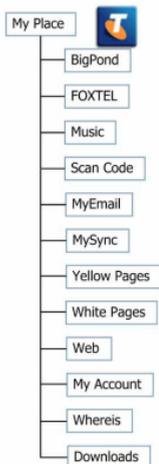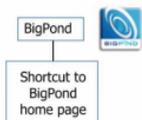

## Menu Quick Reference Guide Continued...

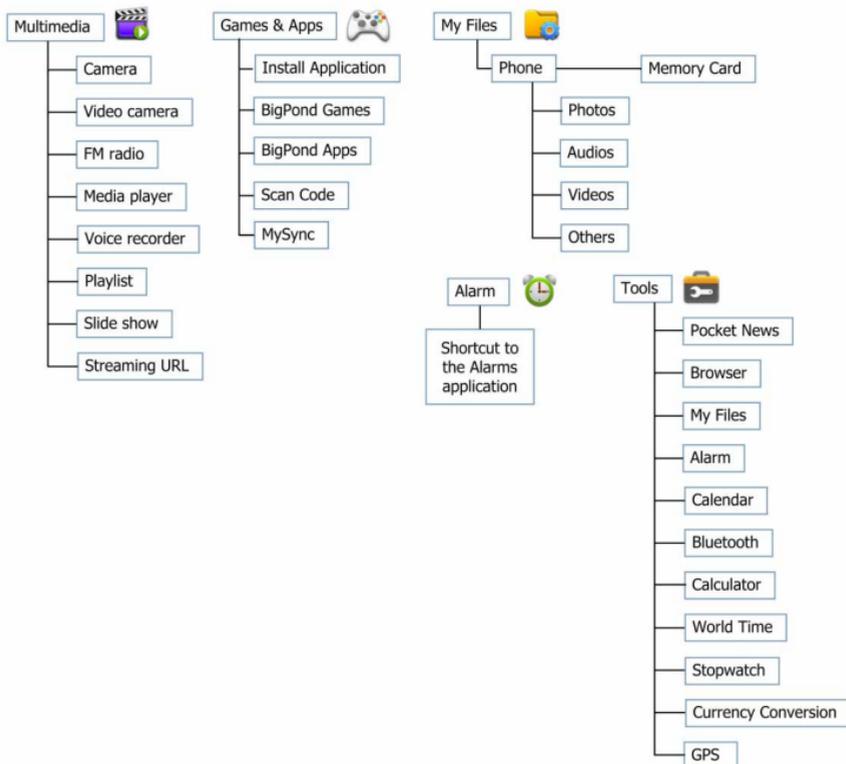

## Menu Quick Reference Guide Continued...

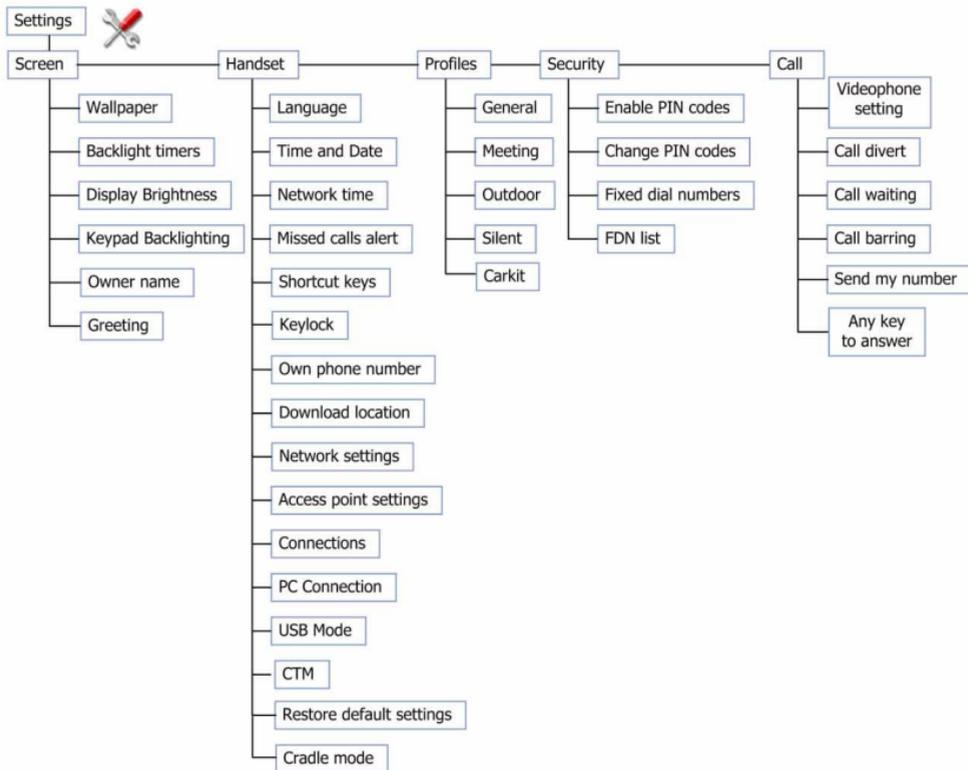

## 1.5 How to use this manual

The following instructional format is used in the manual:

Instruction	Description
Press the <b>Left Arrow</b> ◀	Press the left directional key on the four way navigation controller
Press <b>OK</b>	Press the <b>OK</b> key in the centre of the four way navigation controller
Press the <b>Right Soft Key</b>	Press the  key just below the screen
<b>Long press</b>	Press and hold the key for 2 seconds
<b>Menu &gt; Tools</b>	Go to the <b>Main Menu</b> (press <b>OK</b> ) select <b>Tools</b> and press <b>OK</b> to open

- The functions for the **OK** and **Soft keys** change depending on where you are in the menu. The functions are always described at the bottom of the handset display.
- The **End** or **Exit** key  is used to exit the menus, **End** a Call and switch the phone **On** or **Off**. From within a submenu the **End** key takes you back to the main menu
- Long press the **End key**  to switch the handset On and Off.
- The **C key** is used to step back in menus and to clear text in text modes. In text edit mode press once for backspace, press and hold to clear all the text.
- The  symbol shows useful tips.



Menu and setting choices on the handset are shown in **bold** text in the manual.

Quickly find the answer by checking the **Contents** at the front or the **Index** at the back.


There is a copy of the manual and quick start guide provided on your CD.

## 2 Getting Started

### 2.1 How do I insert the (U)SIM Card?

The **(U)SIM card** (UMTS Subscriber Interface Module) is the small plastic smart-card with gold contacts. It holds account and contact information and can be used to store text messages. It can be moved between different phones if required. **The (U)SIM card must be inserted before using the handset.**

- Insert the (U)SIM card with the **gold contacts** facing **down** and the bevelled edge on the top left as shown. Carefully slide it into the housing observing the correct orientation.

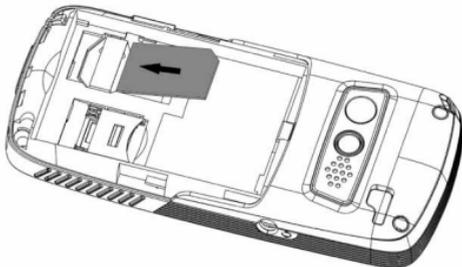


#### **If your handset displays:**

Enter Handset unlock code	The default code is 0000
Enter (U)SIM PIN Code	Enter the PIN supplied with your SIM card
No (U)SIM detected	Check the (U)SIM is inserted correctly.
Enter PUK code	Contact your Service Provider

## 2.2 How do I insert the battery?

1. **Press the thumb catch on the back of the handset and slide the cover down to open**
2. **Insert the battery** as shown with the contacts located against the gold springs.
3. **Press the battery down flush into the case**

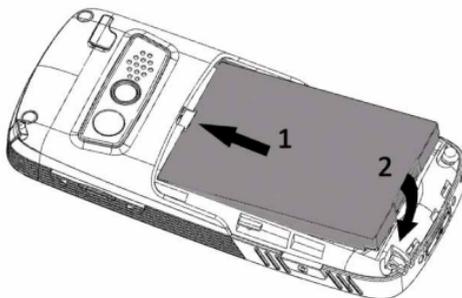

4. **Line the battery cover up correctly and slide up to close the case.**

## 2.3 How do I switch the phone On or Off?

Press and hold the **End key**  for **two seconds** to switch the phone **ON** or **OFF**.

**Enter (U)SIM PIN code** – supplied with your (U)SIM card. The **start up** screen below is referred to throughout the manual as the **Idle Screen**:

The Idle Screen:



← The Information bar

## 2.4 How do I connect the charger?

Charge before initial use. The plug and socket are keyed so they will only fit together one way. Insert the lead carefully with the B symbol facing the top of the handset

- Do NOT use excessive force which may damage the USB port.
- Physical damage to the USB port is NOT covered by warranty.
- The phone can also be charged by connecting it to a computer using the USB lead supplied.
- A sound is played when the charger or USB cable is inserted into the handset.
- If the phone is off after charging long press the red **End Key** to switch it back on.



## 2.5 Tips about charging and battery life

- Only use the AC charger and USB lead supplied.
- Insert the charger lead **carefully** with the plug and socket aligned correctly.
- **Normal charge time is 3-4 hours.** Do not leave on charge for more than 24hrs.
- When not using the phone for long periods remove the battery.
- Charge the battery between 0°C-45°C. Charge the battery promptly when flat.
- With **poor network conditions** (less than 2 bars) **battery life is reduced.**
- To maximize battery life turn off Bluetooth when not in use and limit multimedia functions.
- Battery life is improved after a few charge / discharge cycles.
- The phone can be charged in the ON or OFF state: When OFF the message "Charging battery..." is displayed. When switched ON the battery icon animates until fully charged.
- If charging in the OFF state turn the phone ON by long pressing the **End key**  .

## 2.6 How do I set the time and date?

**The time and date is set automatically from the network.** It takes a few seconds to update when the phone is first switched on. Select **12** or **24 hr** format in the **Network Time** menu. To manually set the time it is necessary to switch **Network Time off: Menu > Settings > Handset > Network time > Status off** then set the time and date manually: **Menu > Settings > Handset > Time and date.**

## 2.7 How do I lock the keypad?

**Manual keylock:** Press and hold the **\* key** then press the **Right Soft Key** to **lock** or **unlock** the handset.

**Auto keylock: Menu > Settings > Handset > Keylock** Set your desired time to lock the keypad. See 14.

14.

## 3 Basic Operation

### 3.1 How to make a voice call

- Enter the number on the keypad and press the **Voice Call key**  to make the call.
- Press **OK** to activate **Speaker** (Handsfree) mode
- Press the **End key**  to end the call.

### 3.2 How to answer an incoming call

- Press the **Voice Call key**  or **OK** to answer the call, **OK** to activate **Speaker** (Handsfree) mode.
- Press the **End key**  or **Reject** to end the call.



If **Vicemail** is active pressing **Reject** forwards the call to **Vicemail**.

### 3.3 How to send a Text Message (SMS)

- Press the **Right Arrow**  for **Messages**
- Press **OK** for **New message**. Press **OK** for **Text message**
- Enter the phone number directly or press **OK** to select from **Contacts (Cont.)**
- Select the **Contact** then press **OK** for **Done**. The **Contact** number is displayed, press **OK**
- Press the **Down Arrow**  to move the cursor into the text field
- Type the message using the letter keys on the keypad (see Chapter 6 on Texting)
- Press the **OK** to send the message.

### 3.4 How to navigate the Menu

The **Main Menu** is a grid of icons that are used to access key features on the phone.

From the **Idle Screen** press **OK** to access the **Main Menu**. Use the **Arrow Keys** **▲ ▼ ◀ ▶** to move the cursor or press the corresponding number key as shown on the grid below. Eg **Menu > 2 = My Place**

The icons are described at the bottom of the screen.



OK →



Icon description

#### Shortcuts

From the idle screen the **Arrow Keys** launch the default **Shortcuts** as shown:



To change default shortcuts: **Menu > Settings > arrow right ▶ to Handset > Shortcut keys**

From sleep mode (dark screen) press the key once to wake up the handset, press the key again to perform the required function.

## 4 Contacts

### 4.1 How do I enter my Contacts?

- From the **Idle Screen** enter the phone number on the keypad, press the **Left Soft Key** to **Save**.
- Press **OK** to create a **New contact** or press the **Down Arrow ▼** to **Update existing contact**
- Using the keypad, enter a **Name** for the new **Contact** or modify an existing contact
- Press **OK** to **Save**. The default save location is **Phone**. See **Options > Default Memory** to change.

### 4.2 How to copy all Contacts from a (U)SIM card

All (U)SIM Contacts are automatically read by the handset.

To copy **Contacts** into the handset memory follow the steps below:

- Insert the **(U)SIM** card to **copy contacts** from. Switch the phone **on**.
- From the **idle screen** press the **Down Arrow ▼** for **Contacts**.
- Press the **Right Arrow ►** once for **(U)SIM** to show the list of **Contacts** on the (U)SIM card.
- Press the **Left Soft Key** for **Options** then use the **arrow keys** to select, **Copy > Copy all > OK > Yes**

### 4.3 How to search your Contacts

From the **idle screen** press the **Down Arrow ▼** for **Contacts** or select **Menu > Contacts**

To find the **Contact** 'John' press the 5 key once for 'J'. All names starting with 'J' are displayed.

Refine the search by entering a subsequent letter that can occur anywhere in the name.

Eg. 'Jn' will find 'John' and 'Julian' but not 'James' whereas 'Ja' will find Julian and James but not John

#### 4.4 How to add a Contact from a received call

After **receiving a call** you can **add the caller's number** to the **Contacts** list:

- Press the **Voice Call key**  to display the **All Calls** list
- The last call received is at the top of the list or select the chosen number to save
- Press the **Right Soft Key** to **Save**
- Enter the contact details and press **OK** to **Save**.

#### 4.5 How to add a Contact from a received SMS (Text Message)

**Menu > Messages > Inbox**

- Select the required message and press **OK** to **View**
- Press **Options > Use highlighted item**
- Choose **New Contact** to create a new contact from the received SMS number.

#### 4.6 How to set a dedicated ringtone or image to a Contact

The contact **must** be stored on the handset in order to set a dedicated ring or image. See 4.2 above.

From the **idle screen** press the **Down Arrow** ▼ for **Contacts** or select **Menu > Contacts**

- Use the **arrow keys** ▼ ▲ to find the required contact (must be stored on the handset)
- Press **OK** to **View > Edit > Options > Add ring and photo**. Select the required feature
- Press **Add** then navigate to the folder where the Ringtone or Picture is stored.
- Press **OK** to **Save** your photo or ringtone, press **OK** again to **Save** the new details to the Contact

## 4.7 How to set Speed Dial numbers

Having **Speed Dials** set makes it quicker to call selected contacts.

**Menu > Contacts > Select the Contact > Options > Scroll down ▼ > Speed Dial**

- Select the next available number
- **Speed dials 1, 2 and 3 are preset** for Voice and Video message banks and **cannot** be changed
- Press the **OK Key to Setup** the speed dial or press the **Right Soft Key** to cancel
- Press the **End key**  to exit when finished.

## 4.8 How to make a call using Speed Dial

- From the **Idle screen press and hold** the required number key to call that **Contact**
- E.g. **Long press** the **1 key** to automatically dial the **MessageBank** (Voicemail) service.

## 4.9 How to update an existing Contact

- Edit the existing contact: **Menu > Contacts > View > Edit**. Press **Save** when finished



- You can enter up to 40 characters in the name field for each contact saved on the phone.
- If you copy **Contacts** into the handset they are stored in the **Unclassified** group.
- You can move contacts into other Groups: Family, Friends, Work, and VIP.
- Regardless of Group, all contacts on the handset are displayed under **All**
- Refine the search by entering a subsequent letter that can occur anywhere in the name.  
Eg. 'Jn' will find 'John' and 'Julian' but not 'James'; 'Ja' will find Julian and James but not John.

## 4.10 Advanced Contact Options

Menu > Contacts > Options

<b>Call</b>	Make a Voice Call or Video Call to the selected contact
<b>New contact</b>	Create a new contact
<b>Edit contact</b>	Edit the selected contact
<b>Delete</b>	Delete contact, Delete all (Phone), Delete all (U)SIM, Delete all (Both)
<b>Copy</b>	Copy to phone or (U)SIM card, Copy all
<b>Send Bus. Card</b>	Send a business card via SMS, MMS, Email or Bluetooth
<b>Default Memory</b>	Default save location for contacts, (U)SIM card or Phone
<b>Service dial number</b>	Preset Voicemail and Video-mail message bank numbers
<b>Speed Dial</b>	Assign a speed dial to the selected contact
<b>Manage Contacts</b>	Set Group parameters (eg Ringtone and photo), Speed dial info and check the memory status

## 4.11 How to insert a Pause or Wait in the dialled number

- Press the \* key three times to enter the Pause character or four times for the Wait character
- Each 'P' inserts a 3 seconds delay, a 'W' will wait indefinitely until you enter the next character
- Pause or Wait can also be entered into a **Contact** number (eg. to call a particular extension)

## 5 Calls

### 5.1 How to make a Voice Call

- Enter the **number** on the **keypad** and press the **Voice Call key**  to make a voice call.
- Press **OK** to activate **Speaker** (Handsfree) mode
- Press the **End key**  to end the call.

### 5.2 How to make a Voice Call from my Contacts

- Press the **Down Arrow** ▼ (default shortcut) for the **Contacts** menu
- Search **Contacts** using the **letter keys** – eg. press 'J' to find John or
- Use the **Arrow Keys** ▼ ▲ to scroll to the chosen contact
- Press the **Voice Call key**  to make the call.
- Press the **End key**  to end the call.

### 5.3 How to view and make a Voice Call from my Call History

- Press the **Voice Call key**  to bring up **All Calls**. Press  again for **Last Number Redial**
- Use the **Arrow Keys** ▼ ▲ to choose a number from the **All calls** list
- Press the **Voice Call key**  to make the call.
- Press the **End key**  to end the call.

## 5.4 Call options during an active Voice Call

Press the **Left Soft Key**  for **Options** during a voice call. Use the **End key** to return to the call menu

<b>Hold:</b>	Puts the current call on hold
<b>End call:</b>	End the call
<b>Record:</b>	Record the incoming audio. The audio file is saved to the My Audios folder
<b>DTMF off/on:</b>	Enable or disable sending DTMF tones. <b>Default is ON</b>
<b>Message:</b>	Switch to SMS interface during a call
<b>Contacts:</b>	Switch to Contacts interface during a call
<b>Browser:</b>	Launch the web browser

## 5.5 Tips for Calls

- **Handsfree** or **Speakerphone** mode is activated by pressing **OK (Speaker)** during a call
- To dial an **International number** press the **star key** twice for the **International Prefix '+'**
- To call a number from within a message **highlight** the number then press the **Call key**
- The microphone is on the base of the handset. Be careful not to block it with your hands
- **The number of rings before the phone diverts to Voicemail is set by your Service Provider.**

The default is 6 rings. Contact your Service Provider to change this setting.

- To enable international roaming please contact your Service Provider.
- Use the Pause or Wait characters to assist with interactive phone services (eg phone banking)

## 5.6 How to answer a Call

When you receive an incoming call the phone **rings, lights up** and **vibrates** depending on the current **profile** setting. An incoming **call notification** is displayed on the **screen**

- Press the **Voice Call key**  to answer or **OK** to activate **Speaker** (Handsfree) mode
- Press the **End key**  to **Reject** the call
- Press **Mute** to mute the **Incoming ring** if required. This feature is useful to mute the incoming ring without answering the call. The other party hears the phone ringing until the call ends.
- If **Vicemail** is active then pressing **Reject** will forward the call to your **Voice Message Bank**

## 5.7 How to use the headphones (Personal Handsfree)

The Personal Handsfree headphones include a microphone and a call switch

- Insert the headset carefully into the socket on the left of the phone. The headset icon comes on
- Incoming ring only beeps in the headset when Meeting or Silent mode is enabled
- In normal ringing mode the handset rings, press the call switch to answer
- When a call is received music playing is suspended and resumes after the call ends
- The headset acts as the FM antenna and needs to be inserted to use the FM Radio

## 5.8 How to make a Video Call

- 3G coverage is required to make and receive video calls
- Enter the phone number using the keypad or from the Contacts list as already described
- Press the **Video Call Key**  to make a video call.
- Press the **End key**  to end the call

**Note:** If the call is not successful you are asked if you want to try a voice call instead.

## 5.9 Call options during an active Video Call

Press the **Left Soft Key**  for the following **Options** during a **video call**:

<b>Hold/Retrieve</b>	Send a <b>still picture</b> instead of your own image and the <b>voice is muted</b>
<b>Start recording video</b>	Record video from the other party (i.e. received video stream)
<b>Block/Send my picture</b>	Block / Send your own image to the other party
<b>Use back/front camera</b>	Select the back / front camera
<b>Brightness</b>	Adjust the brightness
<b>Zoom</b>	Change the magnification of your own image
<b>PIP off/on</b>	Hide or show your own picture on the local screen
<b>Exchange PIP</b>	Reverse the Picture in Picture display
<b>New text message</b>	Send <b>SMS</b> during a video call
<b>Contacts</b>	Switch to <b>Contacts</b> interface

## 5.10 How to answer a Video Call

3G coverage is required to make and receive video calls. If a video call is received when browsing or using multimedia functions, the browser, media player or FM radio is suspended.

### When receiving an incoming Video call:

- When receiving an **Incoming video call** the phone **rings, vibrates** and **illuminates** depending on the current **profile** setting,
- Press the **OK Key** to **accept** the video call,
- Press the **End key**  to **end** the video call.

## 5.11 How to make Emergency Calls

### To make an emergency call during normal use

- Ensure that the handset is **switched on** and has network coverage
- Press the **End key**  repeatedly to return to the **Idle Screen**.
- Enter the emergency number for the present location using the keypad, (eg 000).
- Press the **Voice Call key**  to call the number. Follow instructions received and do not end the call until told to do so.
- If the keypad is locked it is possible to dial the Emergency Numbers without having to unlock the keypad. **Press the numbers as required then press the Call key.**

### Emergency calls can be made without a (U)SIM Card (Phone PIN not required)

When the **(U)SIM card** is not inserted or registered it is possible to dial the emergency services.

Enter the emergency number and press the **Voice Call key**  or **OK** to make the call.



- Advise the operator which emergency service you require
- Give your position and remain stationary to get the best coverage
- Due to the nature of the cellular system the connection of emergency calls cannot be guaranteed
- Never rely solely on any wireless device for essential communications ie. medical emergencies
- **The Emergency Number 112 Is used Internationally.**

## Advanced Call Settings

### 5.12 Videophone Settings

**Menu > Settings > arrow right ► to Call > Videophone setting**

All the fields are preset by your carrier. Contact your Service Provider for more details.

### 5.13 Call Divert

**Menu > Settings > arrow right ► to Call > Call divert**

This service enables incoming calls to be **diverted** to another number. Choose the **Call divert** function required from the menu list. Select the function to Activate, Deactivate or Check status.

### 5.14 Call Waiting

**Menu > Settings > arrow right ► to Call > Call waiting**

With **Call waiting** enabled, during an active call you will hear pips to indicate another incoming call. Press the **Call key** to answer the second call and automatically place the first call on hold.

The handset displays a table showing the **Active** call and the call on **Hold**.

Press **Options** to switch calls between **Hold** and **Active**:

<b>03991234xx</b>	<b>Active</b>	Press <b>Options &gt; Hold</b> to switch calls
03996543xx	Hold	Press <b>Options &gt; Retrieve</b> to switch calls

**Note:** If you are currently on the Active call the Hold option will place this call on Hold and switch to the other call. You can achieve the same result by selecting the on Hold call and pressing Retrieve.

## 5.15 Call Barring

**Menu > Settings > arrow right ► to Call > Call barring**

Call barring is a network feature. Contact your Service Provider to obtain your barring Password and enable this feature if required.

<b>All Outgoing</b>	Calls cannot be made.
<b>International Outgoing</b>	International calls cannot be made.
<b>International Outgoing (except to home country)</b>	Restricts international calls except to your home country
<b>All Incoming</b>	Calls cannot be received.
<b>Incoming (when roaming)</b>	Calls cannot be received when you are overseas
<b>Cancel all call barring</b>	Cancels all barring settings
<b>Change password</b>	Set password to activate or erase call barring.

## 5.16 Send my number

**Menu > Settings > arrow right ► to Call > Send my number**

**Send** or **hide** your number **when making calls**. Switch it **on** or **off**. The default **Set by network** is **On**.

## 5.17 Any key to answer

**Menu > Settings > arrow right ► to Call > Any key to answer**

Enables the pressing of any key to answer an incoming call. The default setting is **Off**.

## 5.18 Missed Calls Alert

Menu > Settings > arrow right ► to Handset > Missed calls alert

After missing a call, the **missed call icon**  is displayed on the **information bar**. Press the **OK key** to view the missed call details and to clear the icon.

When the **Missed call alert** is enabled the reminder tone will sound at your specified interval for 5 times or until the on screen message is acknowledged.



After a missed call press the **OK Key** to display the **All Missed Calls** list.

Press the **Voice Call key**  to dial the last number.

## 5.19 Call Options when Connected to a Bluetooth device

When **connected** to a Bluetooth accessory such as a **car kit** or a **wireless headset** incoming calls are forwarded to the Bluetooth device. Press the **Call key** on the **Bluetooth device** to answer the call. When idle press the call key on the Bluetooth device to initiate Last Number Redial on the handset.

The handset also supports the transfer of **Contacts over Bluetooth** (Phonebook Access Profile).



An **active call** can be **switched** between the **Bluetooth device** and the **handset** by pressing: **Options > Switch to Handset / Switch to Bluetooth**.

## 6 Messages and Emails

### 6.1 How to send a Text Message (SMS)

Press the **Right Arrow Key** as a shortcut to **Messages** or

**Menu > Messages > New message > Text message**

- Press the **OK Key** to select **Contacts (Cont.)** or enter the number manually.
- Scroll to the chosen contact and press **OK twice** (once to

### 6.3 How to use Predictive Text

Predictive text allows words to be entered more efficiently using a single keypress for each letter, as opposed to multiple key presses in multi-tap text mode. Compare how to write the word 'the':

Traditional multi-tap text mode (ABC, abc)	Predictive Text Mode (En)
Press 8 (tuv) once to select 't'	Press 8 once for 't'
Press 4 (ghi) twice to select 'h'	Press 4 once for 'h'
Press 3 (def) twice to select 'e'	Press 3 once for 'e'

- The **default text mode** is **abc** mode indicated by **abc** in the top right corner of the display.
- Press the **# key** to toggle between different modes **En, ABC, abc** and **123**.
- Select **En** for predictive text mode if required. The handset remembers the last setting chosen.
- **Predictive text** uses a built-in dictionary to generate words from the sequence of letters pressed.
- When a word is highlighted press the **# key** to raise the case. **Eg.** dave > # > Dave > # > DAVE.
- Use the **▲ ▼ keys** to choose from available words and press **OK** to confirm or choose **Spell Word?** to insert a new word and save to **My Words**. Unknown words default to **Spell Word?**
- In Multi-tap modes (ABC, abc) if the next letter is on the same key, wait until the cursor appears or press the **Right arrow ►** to move the cursor on.
- To insert a **space** press the **0** key. To **delete** letters press the **C key**.
- Press the **1 key** for common punctuation marks. Press the **\* key** for special characters.
- **ABC, abc** are multi-tap modes. Press the key once for the first letter, twice for the second letter etc.
- In text input screens (eg SMS, MMS and Email) you can add your own words to the built-in **Dictionary** which is called **My Words**.
- Press the **Options** key to access **My Words** to **Add** new words to the available lists

## 6.4 How to add words to the built in Dictionary (My Words)

- From **predictive text** mode enter words directly by choosing **Spell Word?**
- From the text entry screen press the **Options** key and select **My Words**
- The first time you use **My Words** press **OK** to **Add** a new word
- Type the new word using the **ABC**, **abc** or **123** modes then press **OK** to **Save** it
- In **My Words** you can press the **Options** key to **Edit**, **Delete** or **Delete all** words.

## 6.5 Special Characters and SMS Message Length



€ \   [] {}	Each time one of these symbols is used 2 standard SMS characters are transmitted.
...	This symbol is not part of the standard SMS character set. Each time one of these symbols is used the <i>entire</i> message is converted to Unicode. The maximum number of Unicode characters per SMS is 70.


## 6.6 How to send a Multimedia Message (MMS)

Use a **Multimedia Message** to send **pictures, music** or **video files**.

You can also send an MMS directly to an Email address.

**Menu > Messages > New message > Multimedia message**

- Enter the phone number, email or press **OK** for **Contacts**
- Press the **down arrow ▼** to enter the subject field (if required)
- Press the **down arrow ▼** to enter the main message body
- From the text area press **OK** to **Insert** an **Image, Audio** or **Video** file
- Browse the folders to select the required file. Press **OK**
- When finished press the **Left Soft Key > Options** to **Send**

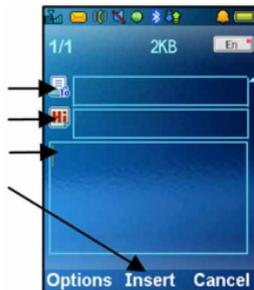

Each 'page' can only contain one image, one audio, and one video file.

To add more than one file of the same type, select **Options** to add a new page.

## 6.7 How to receive a Multimedia Message (MMS)

**Menu > Messages > Inbox**

- When **receiving** an **MMS** you get a standard **message alert**. Press **OK** to **View**.
- Press **Retrieve** to download the message attachment.
- When the attachment has downloaded press the **Left Soft Key** for **Options**.
- Choose **Use Highlighted Item** to **Save** the file into **My Files**

## 6.8 MMS and SMS Advanced Settings

**Menu > Messages > ▼ Settings > SMS Settings**

The message centre number is stored on your (U)SIM card supplied by your service provider. The default number is +61418706700. The MMS and SMS settings are preset by your Service Provider.

## 6.9 WAP Push Messages

### Menu > Messages > Settings > MMS Settings > Push Message – Accept or Reject

A WAP push message is a formatted SMS that displays a message to the user, giving the option of connecting directly to a particular URL via the mobile phone's WAP browser.

- WAP Push Messages are indicated by the  icon on the main display
- Use the Browser to view Push Messages. Set to Reject to disable Push Messages.

## 6.10 How to send an Email


You can send an Email using an MMS (See 6.6), subscribe to **MyEmail** provided by Telstra or set up your own Email account by creating a new Mailbox.

- To setup **MyEmail** go to **Menu > My Place**, select **MyEmail** and follow the setup instructions.
- To set up alternate providers *see* **How to Create a new Mailbox** below

### Sending an Email

**Menu > Messages > arrow right ► to Email > New Email**

- Enter the sender address e.g. username@domain.com 
- Press the **down arrow ▼** twice to access the Copy To Field 
- Press the **down arrow ▼** twice to access the Subject Field 
- Press the **down arrow ▼** to enter the Text Field 
- Press **OK** to **Insert** attachments if required
- Browse to the appropriate folder to add the attachment
- When you are finished press the **Left Soft Key > Options** to **Send**.
- You can send an SMS, MMS to up to 10 recipients, or send Email to up to 20 recipients

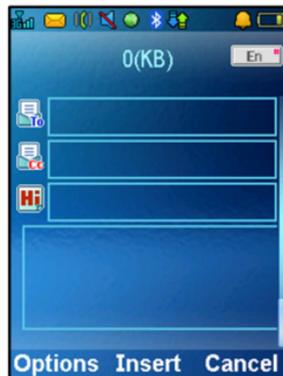

## 6.11 How to receive an Email

To receive Emails you need to subscribe to **MyEmail** provided by Telstra or set up your own Email account by creating a new Mailbox.

- To setup **MyEmail** go to **Menu > MyPlace**, select **MyEmail** and follow the setup instructions.
- To set up alternate providers see **How to Create a new Mailbox** below

### Receive Emails

**Menu > Messages > arrow right ► to Email > Inbox > Options > Retrieve**

New Email messages are delivered to the handset.

## 6.12 How to set up automatic Email Retrieval

**Menu > Messages > arrow right ► to Email > Settings > Automatic Retrieval**

Set your required polling time interval to check the server for new Email messages.

## 6.13 What are User Folders?

User folders can be used to file your incoming SMS, MMS and Email messages

- **Menu > Messages** or **Email > Inbox > Options > Move to user folders**
- **Menu > Messages** or **Email > user folders** to view the contents
- **Rename** your folders if required eg Work, Personal etc.

## 6.14 How to create a new Mailbox?

Create a new Mailbox to set up alternate Email providers:

**Menu > Email > Scroll down to Settings > New**

Complete all the required fields for your service provider:

Account name	Eg. My ISP	Add Signature	Optional
Server Type	IMAP4 or POP3	Signature	Optional, your name
E-mail address	username@isp.com	Delivery mode	Foreground sending
User Name	username@isp.com	Receive header only	Optional
Password	Xxxxxx	Download mode	N = Number of Kb
<b>Sending server</b>	<b>mail.bigpond.com</b>	Receive last mode	Optional
<b>Sending port</b>	<b>25</b>	Display Name	Name eg John
Receiving server	Check with your ISP	SSL Type	Check with your ISP
Receiving port	Check with your ISP	SMTP Auth	Check with your ISP
Save on server?	Option for POP only	<b>APN</b>	<b>Telstra Internet</b>

The fields in **bold** are the correct defaults for **Telstra** connections. You should *only* change these if you change to another network Service Provider.

## 7 How to Personalise the Phone

There are many ways to customise the handset such as changing profiles, wallpapers, ringtones, and setting up shortcuts.

### 7.1 Change the Background Screen (Wallpaper)

Menu > Settings > Wallpaper

- Browse to the **required folder eg Photos > Wallpapers or My Pictures**
- Choose the required picture and press **Set** to confirm



See **Connectivity** to import pictures

See **Imaging** to take photos on the camera

### 7.2 Change the Backlight timers

Menu > Settings > Backlight timers

- **Fulllight duration:** The main display is lit for the duration specified after the last key press
- **Halfight duration,** the display is lit at reduced brightness for the specified time

### 7.3 Change the Display Brightness

Menu > Settings > Display Brightness

- Use the Up and Down **▼▲** keys to set the desired level.

## 7.4 Set the Keypad Backlighting

### Menu > Settings > Keypad Backlighting

Keypad light		Set the duration the keys remain illuminated after the last key press
Period	Always On	The keypad backlighting is enabled for the <b>Duration</b> specified
	Customise	The keypad is only illuminated between the times set



Keypad backlighting is unnecessary during the day so a customised setting can improve battery life.

## 7.5 Add a Greeting and Owner name

### Menu > Settings > Owner name

### Menu > Settings > Greeting

- The **Owner name** is permanently displayed on the idle screen
- The **Greeting** is displayed during the start up sequence

## 7.6 Set your own Shortcut Keys (Arrow keys)

The **four arrow keys** ( ▲ ▼ ◀ ▶ ) can be customised to launch your **preferred features** quickly from the **idle screen**.

### Menu > Settings > arrow right ▶ to Handset > Shortcut keys > OK

- Set each key in turn to the preferred setting
- Scroll to the chosen feature and press **OK** to assign the shortcut key.

## 7.7 Change the Profiles

A profile describes how the handset behaves during an incoming call. Eg. If you are in a theatre or library you can select the **Silent** profile.

Profile	Default Setting	Notes
<b>General</b>	Keytones ON, Ringing ON, Vibrate OFF	Press and hold the <b># key</b> to switch
<b>Meeting</b>	Keytones OFF, Ringing OFF, Vibrate ON	between <b>General</b> and <b>Meeting</b> profiles
<b>Outdoor</b>	Keytones ON, Ringing ON, Vibrate ON	
<b>Silent</b>	Keytones OFF, Ringing OFF, Vibrate OFF	

Each profile can be customised to suit your needs:

**Menu > Settings > arrow right ► to Profiles > Edit** the required **Profile** to change the following settings:

Voicecall ringtone	Ring volume	Message tone	Warning tone (eg. Low battery)
Videocall ringtone	Ringing type (vibrate)	Keypad volume, Keypad sounds	Earpiece volume

## 7.8 Change the Ringtone or Message Tone

**Menu > Settings > arrow right ► to Profiles > Select the Profile you wish to modify > Edit**

- Press **OK** to **Modify** the **Voicecall ringtone**, **Videocall ringtone** or **Message Tone**
- Browse to **Audios, Ring** to see the available built in tones.
- See **Connectivity** to import your own music files.

## 7.9 Enable Vibrate Mode

**Menu > Settings > arrow right ► to Profiles > Select the Profile you wish to modify > Edit**

- Scroll down ▼ to **Ringing type** and press **OK** to **Modify**
- Select the required mode and press **OK** to confirm.
- The **vibrate icon**  displays on the **Information Bar**

## 7.10 Engage Meeting Mode with a single key press

- **Meeting Mode** puts the handset in silent mode with vibrate on.
- From the **Idle Screen press and hold** the **# key** to engage and disengage **Meeting Mode**
- The vibrate icon  and mute symbol  displays on the **Information Bar**

## 7.11 Change the keypad sounds

**Menu > Settings > arrow right ► to Profiles > Edit, Scroll down ▼**

- **Keypad volume** sets the volume level for the keypad sounds. Select **Mute** switch them off.
- **Keypad sounds** select **Tones** or **Spoken**. The default is Spoken keys

## 7.12 What is the PIN Code?

**Menu > Settings > arrow right ► to Security > Enable PIN codes > PIN code**

- The **PIN code** is stored on the **(U)SIM card** and protects your **account** against unwanted use
- Select **On** or **Off** and enter the PIN number to confirm. The original PIN number is provided by your service provider but can be changed if required
- To change the PIN Code select **Change PIN codes**
- **If you forget the PIN code it can be reset by your service provider.**

### 7.13 What is the Handset Lock Code?

**Menu > Settings > arrow right ► to Security > Enable PIN codes > Handset lock code**

- The Handset lock code is stored on the handset and protects against unwanted use. If the handset is lost or stolen it cannot be switched on without the handset lock code. This provides a greater level of protection than the PIN code which protects the (U)SIM card only. The default code is 0000.
- Select On or Off and enter the Handset code, 0000.
- To change the Handset Code select **Change PIN codes** and enter a new code of your choice
- **It is important to remember this code as it cannot be reset by the user. It can only be reset by the repair agent for a fee.**

### 7.14 Additional notes on PIN Codes

- The PIN and PUK Codes are provided by your Service Provider
- If you enter the PIN number incorrectly three times the phone will be PUK locked
- Contact your service provider to get the PIN Unlocking Key (PUK code)
- PIN2 Code is an additional PIN on the (U)SIM card and is not generally supported.

## 8 My Files

### 8.1 My Files

#### Menu > Tools > My Files

My Files is a storage area for **Photos**, **Audios**, and **Videos**. It is separated into four folders, **Photos**, **Audios**, **Videos** and **Others** as shown:

Folder	Contents	Description
<b>Photos</b>	Pics	Link to BigPond
	Wallpapers	Background screens for the handset
	My Pictures	Default directory for handset pictures
	BigPond Tones	Link to BigPond
<b>Audios</b>	BigPond Music	Link to BigPond
	Ring	Pre-loaded handset Ring Tones
	My Audios	Storage for your own Audio files (MP3 etc)
<b>Videos</b>	BigPond Music Videos	Link to BigPond
	My Videos	Default directory for handset videos
<b>Others</b>		Downloaded Internet files, JAVA apps etc.


Preloaded files in the Wallpapers and Ring folders are read only and cannot be deleted.

## 8.2 Installing Additional Memory - microSD card

Handset memory can be increased by inserting a micro SD (HC) card up to 8GB.

micro SD cards up to 2GB are supported (FAT 16 format).

micro SD HC (high capacity) cards up to 8GB are supported (FAT 32 format).

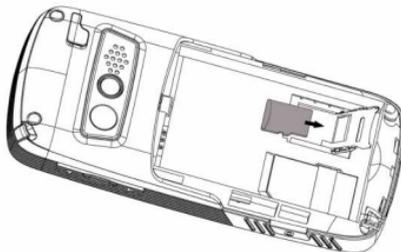

- Open the battery cover and remove the battery.
- Open the card holder and insert the memory card as shown with the gold contacts facing down.
- With the microSD card inserted the default storage location (for photos etc) is the **External Memory**. You can set this under **Menu > Settings > arrow right ► to Handset > Download location**.
- Go to **Menu > Tools > My Files > arrow right ► to Memory Card** to access the stored files
- Go to **Menu > Settings > Handset > USB Mode > Mass Storage Mode** to enable the memory card to show up as an external drive on your computer. See Connectivity for more information.
- Always handle memory cards with care and avoid static discharge

## 9 Alarms and Appointments

### 9.1 Set Alarms

**Menu > Tools > Alarm > Add** (or **View** an existing Alarm)

Configure the alarm as required using the Alarm Setup Screen:

- **Daily** Alarm goes off every day
- **Workday** Alarm goes off Mon – Fri only (Rest days can be set under **Options**)
- **Weekly** Alarm goes off at the same time each week
- **Once** Alarm only goes off once
- **Snooze** can be set to be Off, 5, 10, 15 or 30 minute intervals
- **Snooze** repeats for **six times** or until you **Stop** the alarm by pressing the **OK key**
- The **Alarm sound** is preset. Press **Edit** to change if required
- If the Alarm time has passed it cannot be saved
- If the phone is switched off the Alarm automatically switches the handset **On**

**Alarm Summary Table**

<b>Status</b>	Enable / Disable
<b>Alarm type</b>	Daily, Workday, Weekly, Once
<b>Alarm date</b>	<i>Available with Weekly and Once</i>
<b>Alarm time</b>	<i>Set as required</i>
<b>Snooze</b>	Off, 5, 10, 15, 30 minutes
<b>Ringtone</b>	On / Off
<b>Alarm sound</b>	alarm.mid, press <b>Edit</b> to change
<b>Comment</b>	<i>Optional</i>

## 9.2 Set Appointments using the Calendar

### Menu > Tools > Calendar > Add

- Add an **Appointment**, **Memo** or **Reminder**. The memo function does not include an alarm.
- Use the **Appointment** function to set **repeat events** such as **Weekly Meetings** and **Anniversaries**
- Follow the prompts on screen to configure the event, see the examples in the table below
- Events are shown by a highlighted box on the event day
- Use **Options** to see the Week view and to change default behaviour under **Settings**
- If the Alarm time has passed or is after the event time you cannot save the appointment
- If the phone is switched off the Alarm automatically switches the handset **On**

### Examples of different uses for the Calendar > Appointment function

	Daily Reminder	Meeting with alarm	Repeat Meeting	Anniversary
<b>Subject</b>	Check mail	Appointment	Weekly Team	John's Birthday
<b>Location</b>		Dentist	Office	
<b>Start time</b>	10.00am	11.00am	10.00am	08.00am
<b>End time</b>	10.00am	01.00pm	11.00am	08.00am
<b>Start date</b>	28/09/2008	30/10/2008	29/09/2008	29/03/2009
<b>End date</b>	01/01/2010	30/10/2008	01/01/2010	29/03/2030
<b>Alarm set</b>	On	On	On	On
<b>Alarm time</b>	09.45am	10.00am	09.45am	08.00am
<b>Alarm date</b>	28/09/2008	30/10/2008	29/09/2008	29/03/2009
<b>Repeat set</b>	Daily	Not repeated	Weekly	Yearly
<b>Repeat until</b>	28/10/2008	N/A	29/09/2012	29/03/2030

## 10 Imaging - Pictures and Videos

### 10.1 How to use the Camera

#### Menu > Multimedia > Camera

 From Still mode press  to change to Video mode as shown by the icon in the top right hand corner.

- Use the Up and Down arrows to control the zoom\*
- Press the **Options** button to:
  - Change the **Photo size**\*\*
  - Change the **Photo quality**
  - Change the **Brightness**
  - Change the **Contrast**
  - Apply an **Effect (Normal, B&W or Sepia)**
  - Change the **Shutter sound**
  - **Save to – Handset memory or External Memory (SD card if fitted)**
  - **Use the front/back camera**
  - **Switch to video camera**



\* Zoom is not available on 1536 x 2048 as the screen is at maximum resolution.

\*\* The default photo size is small to enable easy sending by MMS and Email.

To increase the photo size : **Menu > Multimedia > Camera > Options > Photo size**

## 10.2 How to use the Video Camera

### Menu > Multimedia > Video Camera

💡 From Video mode press the ◀ to change to Still mode as shown by the icon in the top right hand corner.

- Use the Up and Down arrows to control the zoom
- Press the **Options** button to change the following:
  - **Video size**, default is MMS size. Change this if required.
  - **Video quality**
  - **Brightness**
  - **Contrast**
  - **Effect (Normal, B&W or Sepia)**
  - **Video sound**
  - **Video format**, MP4 or 3GP
  - **Save to – Handset memory or External Memory (SD card if fitted)**
  - **Use the front/back camera**
  - **Switch to camera**



💡 Press My Vids to view your saved video files  
When viewing a video press **Full Screen** to view in Landscape.

## 10.3 Viewing pictures and videos

### 1. View the file directly from My Files

**Menu > Tools > My Files > Photos > My Pictures or**

**Menu > Tools > My Files > Videos > My Videos**

Scroll down the list to your chosen picture, Press **Open** to view the image.

### 2. Create a slide show to view pictures in sequence

**Menu > Multimedia > Slide show > Add > Photos > My Pictures**

Press the **Right Soft Key** to **Mark** your selected photos then press **OK** to **Save**

Press **Play** to access the slide show, then press **Start** to automatically view the pictures sequentially.

### 3. View My Pics or My Vids from Camera mode

**Menu > Multimedia > Camera > My pics**

**Menu > Multimedia > Video Camera > My Vids**

Press the Right Soft Key to select **My pics** or **My Vids** to view your saved photos.

### Additional features when viewing Pictures and Videos

Still Pictures	
<b>Full Screen</b>	Right Soft Key
<b>Zoom in and out</b>	Up and Down Arrows
<b>Rotate the image</b>	1,3 keys
<b>Move the image</b>	2,4,6,8

Videos	
<b>Full Screen, Landscape</b>	Right Soft Key
<b>Volume up and down</b>	Up and Down Arrows
<b>Brightness</b>	2,8

## 11 Music

To import music files onto the handset see the following sections:

- Import music files from your computer using Join Me (See **Connectivity**)
- Import music files from your computer or other device using Bluetooth (See **Connectivity**)
- Import music files from a computer using **Mass Storage mode** (See **Connectivity**)
- Download music from BigPond Music: **Menu > My Place> Music**

### 11.1 Browse and play music files from My Files

**Menu > Tools > My Files > Audios > My Audios**

- Press **Open** to play the desired music file.

### 11.2 FM Radio

**Menu > Multimedia > FM radio**

- Insert the personal hands free kit (PHF). The headset improves radio reception.
- Tune the required station using the ◀▶ keys or **Options > Auto\_search** or **Add preset**
- **Auto\_search** scans automatically for channels.
- Use **Add preset** to enter the frequency using the keypad and \* key to access the decimal point
- **Remember** to **Save** the **new channel**.
- From the channel list press **Options > Rename** to personalize the channel name eg ABC
- Press **Options > Speaker** to listen in Loudspeaker mode
- If an incoming call is received, the radio is suspended while you answer the call.

## 11.3 Create a new Playlist

### Method 1: Create a Playlist from My Files

#### Menu > Tools > My Files > Audios > My Audios

- Scroll through the files and press the **Right Soft Key** to **Mark** or press **Options** > **Mark all** files then Press **OK**
- Press **Options** > **Add to playlist** > **OK** (for existing Playlist) or **Add / New** (to create a playlist)
- The selected song or songs are added to an existing or new playlist
- **Menu** > **Multimedia** > **Playlist** > Scroll to select, **OK** to **Play**
- Press **Options** to access the **Equalizer** and to set the **Repeat setting** etc.

### Method 2: Create a playlist in Multimedia

#### Menu > Multimedia > Playlist > Options > New Playlist > Playlist name > OK > Audios > My Audios

- Scroll through the files and press the **Right Soft Key** to **Mark** or press **Options** > **Mark all** files
- Press **OK** to save the **Playlist**, Press **OK** again to begin playing it
- Once a **Playlist** has been saved press the **Right Soft Key** to **Edit**. Press **Options** to Remove tracks or Change Order.
- When stop playing, press **Options** to access the **Equalizer** and to set the **Repeat setting** etc.
- Use the up / down arrow keys to adjust the volume
- Use **▲ ▼** keys to select tracks from your playlist. Press the **◀ ▶** keys to skip tracks
- Press and hold the **◀ ▶** keys to forward or rewind through tracks
- It is possible to create up to six different playlists.

## 12 Assisted GPS

A-GPS is an advanced positioning system developed for mobile phone applications. The complex calculations performed by a GPS receiver are carried out on an external server. Assistance information is sent to the handset over the cellular system and is dependant on cellular coverage. The handset contains an antenna and receiver specifically for A-GPS signals and this enables the handset to calculate its position in terms of longitude, latitude and altitude.

- **Stand alone GPS** is a **limited service** pre-installed in the handset, that in good conditions will provide a **location position** with latitude, longitude and elevation results.
- **Full functionality** requires **additional applications** to be installed or supplied by third parties. Please contact your service provider for more information.
- The **GPS receiver** requires signals from **at least three satellites** and can take **several minutes** to acquire.
- **Reception is reduced in city areas**, best reception is achieved with a clear view of the whole sky.
- The **signal strength may be reduced** in a **vehicle, indoors** or in **overcast weather** conditions.
- The **antenna** is in the top of the phone. Avoid blocking it with your hand to maximize reception.
- It is not recommended to utilise stand alone GPS for mission critical applications.
- To switch GPS On or Off go to Tools, GPS Status.
- Perform a search under GPS Location. Results will be dependant on the above conditions.
- Regular use of GPS positioning will increase battery consumption.

## 13 Connectivity

### 13.1 Use the phone as a Mass Storage Device with a microSD Card

**Menu > Settings > Arrow Right ► to Handset > USB Mode**

**Mass Storage** enables the microSD Memory card to be connected to the computer as an external drive. The handset can be used as a USB mass storage device. Files can be transferred to and from the handset via the USB cable. The memory card appears as an external drive on your computer.

**PC Suite Mode** enables the handset to transfer files to the Join Me Computer Suite via the USB cable.

### 13.2 PC Connection via Bluetooth or USB cable

**Menu > Settings > Handset > PC Connection**

PC Connection specifies how the handset transfers data to a computer. It can be set to be via Bluetooth or via the USB cable. Use Join Me to transfer data via the USB cable or use Bluetooth if your PC supports Bluetooth transfers.



If **PC Connection > Bluetooth** is selected then **Join Me will not connect** to the handset.

Restore the PC Connection to USB to re-enable Join Me.

### 13.3 Use Join Me to Connect your phone to a computer

Join Me is a computer program to connect your phone to a computer. Once installed Join Me is used to manage contacts, messages and calendar functions. It is also used to connect to the internet and transfer music / picture files. Please install the software before connecting your phone.

#### Compatibility

- The software is **only** compatible with Windows 7, Vista, XP (SP2 & SP3) and MAC OS (10.5,10.6) and above but cannot be guaranteed to run on these systems
- The software may not run in all environments, or in conjunction with other software
- Multi-boot systems are not supported
- The software should be installed and run with the Administrator login
- Please install the software before connecting your phone and follow the installation steps carefully
- Please see our web site FAQ's <http://www.zte.com.au>
- Browse the CD Join Me Help file for more assistance.

## 13.4 Install Join Me

Please install the Join Me CD **before** connecting the phone to the computer.

- Insert the CD provided into the computer
- The CD auto-starts after a few seconds
- If auto run does not start then explore the CD to the Join Me folder and run Setup.exe
- Please follow the prompts to install the software
- When the installation is complete plug the handset into the computer using the USB lead supplied
- The USB lead is unique and **should not** be used for other devices (It is not the same as digital camera leads)
- When the handset is plugged in the computer automatically installs the drivers. If this fails consult our website for more help or access Windows Device Manager to update the drivers. See <http://www.zte.com.au> for instructions



### Note

If the phone is connected to the computer before installing Join Me then the drivers are not installed correctly:

- Unplug the phone, un-install then re-install Join Me
- See the Join Me user guide on the CD for more information
- See <http://www.zte.com.au> for more assistance

## 13.5 Use Join Me to copy photos to your computer

- **With the handset on and Join Me installed.**
- Check that PC Connection on the handset is set to USB  
Menu > Settings > arrow right ► to Handset > PC Connection > USB
- **Using the supplied USB lead, connect the phone** to the computer

- **Double-click the Join Me icon on the desktop**



- Select the phone type and **press Connect**.
- Select the **Media tab**  as shown on the next page
- **Double click on My Phone** in the **bottom left hand corner**
- **Double click on Photos** to expand the folder
- **Double click on My Pictures** to view the picture files on the right hand side.
- **Drag** the required file from the file list and **Drop** it into the required **destination folder**



**Drag and Drop** is a method of copying files. Click on the file, hold down the left mouse button, move the mouse pointer to the required destination and release the left mouse button to Drop the file to that location.

**Alternatively** you can use a) the copy & paste options from the right mouse click menu b) Copy & Paste function from the Edit pull down menu or c) the Ctrl+C, Ctrl+X, Ctrl+V keyboard shortcuts.

- The file is copied to the destination folder (Desktop in the example below).
- **Files can only be transferred from one folder in to another folder displayed in Join Me.**




**Dragging a file on to your desktop will not work. Transferring of files must be done in Join Me.**

The default picture size is very small when viewed on the computer.

See section 10.1 to change the image size.

## Eg. Copy a picture from the phone to the computer using Join Me

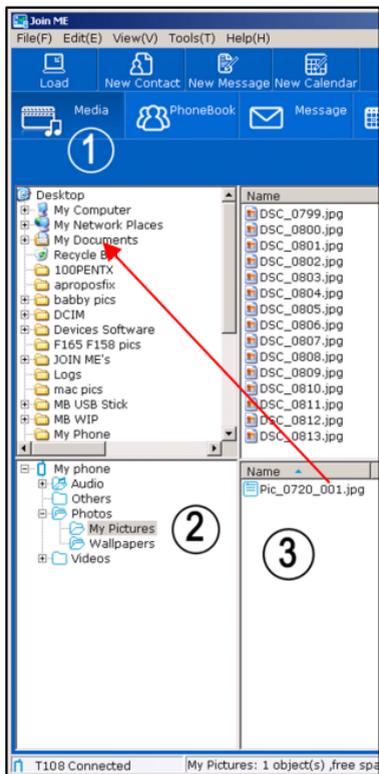

1. Select the **Media Tab**
2. Select **My Pictures** folder on **My Phone**
3. **Drag** the picture from **My Pictures** to a **folder** on the **PC**

**Alternatively** right click on the file and use **Copy** and **Paste** from the menu



Files can only be transferred into the **folders** on the **handset**. Eg. Transfer music files into **My Audios**, pictures into **My Pictures** and java games and applications into the **Others** folder. All other folders are write protected.

## 13.6 Use Join Me to transfer music from a computer

- Check that PC Connection on the handset is set to USB  
    **Menu > Settings > arrow right ► to Handset > PC Connection > USB**
- **With the handset on and Join Me installed.**
- **Double click the Join Me icon on the desktop.**
- Select the phone type and **press Connect.**
- Select the **Media tab** as shown in the picture on the next page.
- **Double click My Phone** in the **bottom left hand corner.**
- **Double click Audios** to open up the **Audios folder.**
- Locate the **music files** on the computer by browsing through the Windows file structure in Join Me.
- **Drag** the required file from the **top half** (computer) and drop it into **My Audios** on the phone.
- The file is copied to the destination folder (as shown below). **Files can only be copied into Folders.**
- Alternatively **Right Click** on the file, choose **Copy**, then go to the destination folder and **Paste.**


**Note:** Files that you purchase from your service provider are DRM protected. These protected files cannot be copied or sent to other devices.



MP3, WAV, WMA and MIDI files are supported.

The MP3 format is preferable due to smaller file size.

## Eg. Copy an audio (mp3) file from computer to the phone using Join Me

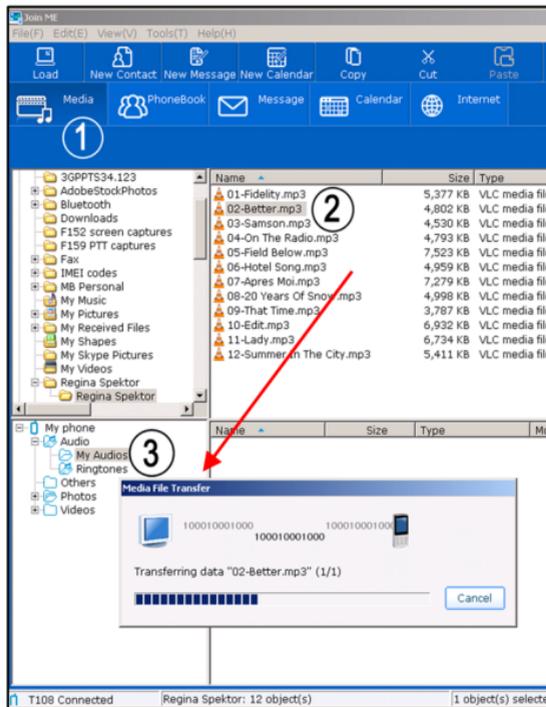


1. Select the Media tab in Join Me
2. In the upper pane of Join Me browse to the audio file you wish to copy to your phone.
3. **Drag and drop** the selected file from the computer to the **My Audios** folder on the handset.

**Alternatively** select the file, right click, select **Copy**, select the destination folder (on the phone), right click then select **Paste**.



Files can only be transferred into the **folders** on the **handset**. Eg. Transfer music files into **My Audios**, pictures into **My Pictures** and java games and applications into the **Others** folder. All other folders are write protected.

## 13.7 Enter Contacts using Join Me

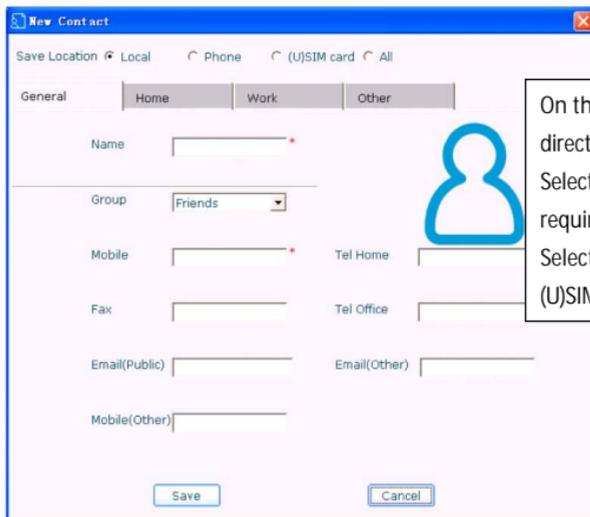

On the phonebook tab enter contacts directly using the PC. Select 'New Contact' then complete the required fields. Select the Save Position; Local, Phone , (U)SIM or All.



The save position 'Local' refers to the computer. Remember to change this if you want to save your contacts directly to the phone. Alternatively use the copy function to copy contacts from Local to Phone. There is less storage available on the (U)SIM card so some of the fields are greyed out.

## 13.8 Copy Contacts from the phone to the computer (create a backup)

1. Select the PhoneBook tab

2. Select (U)SIM card to display all your contacts stored on the SIM

3. 'Select all' by clicking the box at the top of the list, alternatively select specific contacts by checking the respective boxes.

4. Drag the list and drop it under Local on the left hand side. All your selected contacts are copied to the PC.

N...	P...	Tel	Group
<input checked="" type="checkbox"/>	abc n...	0297 ...	
<input checked="" type="checkbox"/>	Alan S...	0488 ...	
<input checked="" type="checkbox"/>	Alison ...	0393 ...	
<input checked="" type="checkbox"/>	Alison...	+614...	
<input checked="" type="checkbox"/>	amal	0425 ...	
<input checked="" type="checkbox"/>	amy	0421 ...	
<input checked="" type="checkbox"/>	Andre...	+614...	
<input checked="" type="checkbox"/>	andre...	0438 ...	
<input checked="" type="checkbox"/>	Anna	9696 ...	
<input checked="" type="checkbox"/>	Anna ...	0425 ...	
<input checked="" type="checkbox"/>	Anne...	9741 ...	
<input checked="" type="checkbox"/>	Annette	0438 ...	
<input checked="" type="checkbox"/>	arthur	0448 ...	
<input checked="" type="checkbox"/>	Ashley	0400 ...	
<input checked="" type="checkbox"/>	Audi G...	9427 ...	
<input checked="" type="checkbox"/>	Bank	1406 ...	
<input checked="" type="checkbox"/>	ben	0414 ...	
<input checked="" type="checkbox"/>	Beth Y...	0421 ...	
<input checked="" type="checkbox"/>	BigBlog	1252 ...	
<input checked="" type="checkbox"/>	BigPo...	1253 ...	
<input checked="" type="checkbox"/>	Bill Xia...	+614...	
<input checked="" type="checkbox"/>	Bo Li	+614...	
<input checked="" type="checkbox"/>	Caitlin...		
<input checked="" type="checkbox"/>	Car re ...	9534 ...	
<input checked="" type="checkbox"/>	celia	0432 ...	
<input checked="" type="checkbox"/>	Chaz ...	0129 ...	
<input checked="" type="checkbox"/>	Chaz...	+447...	
<input checked="" type="checkbox"/>	Chris ...	0402 ...	
<input checked="" type="checkbox"/>	Chris ...	0425 ...	
<input checked="" type="checkbox"/>	chrisie	0439 ...	
<input checked="" type="checkbox"/>	Citylink	132629	
<input checked="" type="checkbox"/>	cobra ...	8872 ...	
<input checked="" type="checkbox"/>	Comt...	9645 ...	
<input checked="" type="checkbox"/>	Craig	0414 ...	

T108 Connected | 193 contact(s) selected

1. Select the Phonebook tab
2. Select (U)SIM card to display all your contacts stored on the SIM
3. 'Select all' by clicking the box at the top of the list, alternatively select specific contacts by checking the respective boxes.
4. Drag the list and drop it under Local on the left hand side. All your selected contacts are copied to the PC.

**You can also import contacts from Outlook.**

*See 13.7 below...*



**Copy** one or all of the contacts from **Local** to **Phone** using the **same method**

## 13.9 Import Contacts from Microsoft Outlook

- Launch Microsoft Outlook, have Join Me running and the handset connected.
- Select the **Phonebook tab** in Join Me, see image in *section 13.8*
- **Click** the 'sync' button in the top right hand corner of the Join Me window
- Select **Import Contacts From Outlook**.
- Only contacts in the **root folder** (Contacts) of Outlook are imported


The following fields are imported from Outlook to Join Me as below:

Outlook	Join Me
Full Name	Name
Mobile Telephone Number	Mobile
Home Telephone Number	Tel Home
Home Fax	Fax
Business Telephone Number	Tel Office
Other Telephone Number	Mobile(Other)
Home Address	Home Address
Business Address	Business Address
Company Name	Company
Department	Department
Job Title	Job Title
Business Fax	Business Fax
Email Address	Email(Public)
Email Address 2	Email(Other)

**Note:** Telephone numbers must contain numbers only for import to be successful. (only exception is the '+' symbol). Any foreign characters eg. ( ) - . will cause the entry not to be imported.

## 13.10 Export Contacts to Microsoft Outlook

- Launch Microsoft Outlook, have Join Me running and the handset connected.
- Select the **Phonebook tab** in Join Me, see image in *section 13.8*
- Tick the phone number(s) you want to export.
- **Click** the 'sync' button in the top right hand corner of the Join Me window
- Select **Export Contacts to Outlook**
- The contact details will be mapped to the Outlook fields as shown. It is possible to modify the respective Outlook destination field using the drop down box.
- Press **Start Export** to export the Contacts:

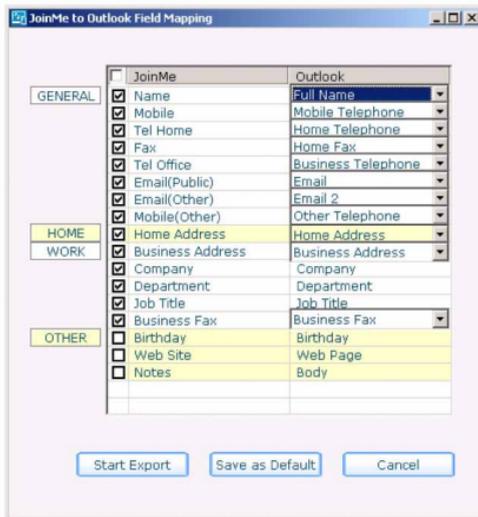

### 13.11 Use Join Me to send an SMS

- Select the **Message** tab
- Click the **New** button to draft an SMS
- The new message window appears
- Click the **magnifying glass** to select a contact from **Local**, **Phone** or **(U)SIM** card
- Tick the box to select the Contact, press the right arrow to choose.
- Multiple contacts can be chosen. Click OK to continue
- Type your message in the text entry field and press Send when complete.
- Alternatively from the Phonebook tab you can select multiple contacts then right click and select New Message.



SMS Messages sent from Join Me are stored on your computer in the Local folder of the Message tab.

### 13.12 Import Calendar events from Microsoft Outlook

- Launch Microsoft Outlook, have Join Me running and the handset connected
- **Note:** at the end of the import process Outlook may shut down. Save all information beforehand.
- Select the **Calendar tab** in Join Me
- **Click** the 'sync' button in the top right hand corner of the Join Me window
- Select **Import Calendar From Outlook**
- All calendar entries are copied into Join Me
- Select the required entries, or select All
- Copy the imported entries from Local to phone



## 13.14 Connect to a Bluetooth Device

Bluetooth is used as a wireless connection for headsets, hands free car kits and computers. Not all applications or devices are supported. Bluetooth is an open forum and manufacturers choose which functions to implement.

The handset supports Bluetooth 2.0 with Handsfree, Headset, FTP and DUN profiles.

Consult the other device for compatibility, connection issues and to find the pairing password.

Please follow the process carefully. Connecting to a Bluetooth device first time around requires authentication where both devices share a password.

When the devices are paired and connected the process is more automatic.

### Connect to a Bluetooth Device

#### Menu > Tools > Bluetooth > Bluetooth manager

- Press the **Left** or **Right Arrow Key** to switch Bluetooth on.
- Go down to **Visible** then press the **Left or Right Arrow Key** to select **Show**. The phone name can be customised if required. Press **OK** to confirm.
- Go to **My devices** and press **OK**. Press **Search** to look for Bluetooth devices nearby.
- The chosen device must be switched on and in pairing mode.
- Available devices are listed in the device list. Select the required device and press **OK** to **Connect**.
- Enter the **pass code**, usually 0000 or 1234. Consult the device user guide for more information.
- If you are connecting to a PC or another mobile enter the same password when requested on that device.
- Once the password has been shared and accepted by both devices they are paired.

## Send files from the handset to another device

### Menu > Tools > My Files

- Browse through the folders to the chosen file
- Press the **Left Soft Key** for **Options**
- Choose **Send** then select **Via Bluetooth** and press the **OK Key**
- If no devices are shown press **Search**
- Select the required device to send the file to
- Enter a **pass code** and use the same **pass code** on the other device (eg 0000).

## Receive files from another device

- When another device sends you a file press **Yes** to authorise the connection
- Press **Yes** to accept the file

## Connect to a Bluetooth Car Kit or Personal Headset

Follow the manufacturer's instructions carefully to enable Pairing Mode on the other device.

It is not possible to connect the phone to the other device unless Pairing Mode is enabled. Select the required device, share a **pass code** and press **Connect**.

### Menu > Tools > Bluetooth > Bluetooth manager > Turn On, Show > OK

- Make sure Bluetooth is **On** and in **Show mode** and the **other device** is in **Pairing Mode**
- On the handset go to **Bluetooth: Menu > Tools > Bluetooth > My devices**
- Press the **Right Soft Key** to **Search**
- From the list of available devices select the required device and press **OK** to **Connect**
- Enter the **pass code** specified in the user guide of the far end device (eg 0000 or 1234)
- When the devices are paired the handset reports the device has been added

- In **My devices** go to the new device and press **OK** to **Connect**
- The devices are now Connected
- When connected, incoming calls are sent to the Bluetooth device automatically. Press the call button to answer.
- During a call press **Options** > **Switch to Handset** to return the call to the handset

### 13.15 Dial Up Networking using USB or Bluetooth

Dial Up Networking (DUN) is a method to connect your PC or MAC to the internet using the handset as a dial up modem. Broadband speeds can be achieved on the high speed wireless network.

#### a) Dial up Networking over USB using the Windows New Connection Wizard

Make sure Join Me is installed, the handset is on and connected to the PC using the USB lead supplied.

#### Example for Windows XP

On the PC go **Start** > **Accessories** > **Communications** > **New Connection Wizard** and follow the prompts:

**Connect to the internet** > **Set up my connection manually** > **Connect using a dial up modem**

Select the ZTE USB Modem and uncheck any other modems

The **ISP Name** can be any name you like eg. Explorer Handset

Set the **Phone number** to \*99# > The **Username and Password** must be **blank** >

'Make this the default Internet connection' can be unchecked (optional) >

'Add a shortcut to this connection to my Desktop' can be checked (optional) > **Finish**

Press **Dial** to test the connection

The PC opens an internet connection using the handset as a high speed modem

## b) Dial Up Networking over Bluetooth

Bluetooth can be considered as a wireless replacement for the USB connection and is compatible with any DUN enabled Bluetooth device. Use Bluetooth to connect the handset to a PC or MAC and use Dial Up Networking to create an internet connection.

### a) Both devices must have Bluetooth ON

**Handset:** Menu > Tools > Bluetooth > Bluetooth manager > Turn On, Show > OK

**PC or MAC:** Enable Bluetooth using the appropriate hardware or software settings

### b) Set the handset PC Connection to Bluetooth

Menu > Settings > Handset > PC Connection > Bluetooth

### c) Create a New Connection on the PC or MAC

Launch the Bluetooth manager software on your PC or MAC. This varies depending on your platform, hardware and software. Create a new connection and enter the same password, when prompted, on each device.

Select the T165+ Handset, the Dial Number is \*99# and the Username and Passwords are blank.

When the Bluetooth manager opens a connection to the handset, accept the incoming connection by pressing

**Yes** when prompted.

The PC or MAC can now connect to the internet via the handset.

The features described are dependant on external suppliers' hardware and software and vary between platforms and components. Consult your system supplier for more information.

## 14 Other Facilities

### 14.1 Browser

#### Menu > Tools > Browser

<b>Home</b>	The home page is set by your Service Provider
<b>New Link</b>	Enter a web address manually using the keypad
<b>Bookmarks</b>	Link to a previously saved page
<b>History</b>	Display pages visited
<b>Saved Page</b>	View a local copy of a previously saved page
<b>Settings</b>	Display browser settings (see below)
<b>Version</b>	Display current browser version

#### Menu > Tools > Browser> Settings

<b>Connection settings</b>	Sets the APN, preset by your service provider
<b>Advanced settings</b>	Customise the browser display modes, sound, cache, cookies etc
<b>Clear cache</b>	Clears all cache data
<b>Clear Cookies</b>	Deletes all cookie information
<b>Clear history</b>	Clears all history data
<b>Certificate</b>	List the root and CA certificates on the handset

## 14.2 Stopwatch

### Menu > Tools > Stopwatch

- Press **OK** Key to **Start** timing.
- Press **OK** to **Stop** timing. The screen displays the event time.
- Press **OK** to continue timing.
- Press **Right Soft Key** to reset.

## 14.3 Calculator

### Menu > Tools > Calculator

- Press 0-9 keys to enter numbers. Press **Point** to enter the decimal point.
- Press **▲ ▼ ◀ ▶** for **+, -, ×, ÷**
- Press the **C key** to clear digits and results.
- Press **OK** to show the result

## 14.4 World Time

### Menu > Tools > World Time

- The world time function provides time information on major cities worldwide.
- Scroll to the desired city by using the **Left / Right keys**.
- Select the required city then press the **OK key** to save the selected city as the local time zone.
- Note changing time zones changes the current time setting.
- World time is based on GMT standard hours and does not include Daylight Savings Time.

## 14.5 Currency Conversion

### Menu > Tools > Currency Conversion

- Convert currencies quickly and easily
- The exchange rate stays set after you close the function
- Use the ▲ ▼ arrows to highlight the required field
- Press **Point** to use a decimal point
- The result is displayed in local or foreign currency automatically

## 14.6 PocketNews

### Menu > Tools > PocketNews

Select the required feature from the available menus. The information is regularly updated by your service provider and is be sent to your handset by SMS.

## 14.7 Games & Apps

### Menu > Games & Apps

- Built in applications are provided by your Service Provider
- Download the latest games from your service provider or other specialist websites
- The handset supports Java Midlet 2.0
- Use Join Me to copy other games from your computer (see Connectivity)
- Games and applications are saved into the **Others** folder
- Select **Open** to install the game.

## 14.8 Voice Recorder

**Menu > Multimedia > Voice recorder (use Options to change the duration if required)**

- Press **OK** to **Start** recording the voice memo
- Press **OK** to **Pause / Continue (Contin.)** recording
- Press the **Right Soft Key** to **Stop** recording
- Press **OK** to **Save**. The file is saved to My Audios
- Press **Right Soft Key** to **Discard** the voice memo
- Press **Left Soft Key** and select **Send** to send the memo via MMS, Email or Bluetooth.

## 14.9 Slide Show

**Menu > Multimedia > Slide Show**

- Add pictures by pressing **Add** or **Options > New slide**
- Browse to **My Pictures** and **Mark** the pictures you want. Press **OK** to finish, **Play** to play.
- Use **Options** to create New slide, Rename, Delete, Delete all, and View the image info.
- Press the **Right Soft Key** to **edit** the slide

## 14.10 Streaming URL

**Menu > Multimedia > Streaming URL**

Streaming URL are links to audio or video streaming content over the internet. The content is only available while connected to the server and depends on your network provider.

## 14.11 Connections

**Menu > Settings > arrow right ► to Handset > Connections**

Connections are pre-defined by your service provider and enable the handset to connect to the internet via WAP and to send multi media messages (MMS). When using an alternate carrier, **Add** a new Connection setting as defined by your service provider.

## 14.12 Access Point Settings

**Menu > Settings > arrow right ► to Handset > Access point settings**

Access Point Settings (APN) are pre-defined by your service provider and enable the handset to connect to the internet via WAP and to send multi media messages (MMS). When using an alternate carrier, **Add** a new APN setting as defined by your service provider.

## 14.13 Restore default settings

**Menu > Settings > arrow right ► to Handset > Restore default settings > 0000**

If the handset is not working as normal, restore the handset to default factory settings. The default Handset Lock Code is 0000. User content is not erased.

## 14.14 Auto Keylock

**Menu > Settings > arrow right ► to Handset > Keylock**

**Auto keylock** can be set to automatically lock the keypad after a predetermined time. Set your desired time from the available choices. Press and hold \* followed by the **Right Soft Key to lock** or **unlock** the keypad.



Emergency numbers can still be dialled while the keypad is in the locked state.

Enter the emergency number on the keypad then press the Voice Call key.

## 14.15 Network Settings

**Menu > Settings > arrow right ► to Handset > Network settings**

**Preferred Mode:** Lock the handset to GSM or UMTS (3G) Networks

**Preferred Band:** Lock the handset to certain bands, U = UMTS, G = GSM

**Preferred Selection:** Choose which network to register with from a list of available networks.



**Manual Network Selection overrides** the **Preferred Mode and Band settings**.

The handset stays on the chosen network and related band. Eg. If you choose a GSM Network, the Preferred Mode switches to GSM and remains in GSM-only mode. Further searches performed by **Preferred Selection > Manual** mode only detects GSM networks. To return to normal mode set Preferred Mode and Preferred band to Automatic.

## 14.16 CTM

**Menu > Settings > arrow right ► to Handset > CTM**

CTM (Cellular Text Telephone Modem) is a text based communications protocol to offer support to hearing and speech impaired people. Hearing or speech impaired persons can communicate using a teletype (TTY) terminal connected to the mobile phone via a CTM Modem. The TTY signals are sent alongside speech so it is possible to configure the system to enable speaking and hearing as well as typing or receiving text to the TTY device. See below for the options available:

<b>CTM Mode</b>	<b>Description</b>
<b>Full</b>	Text entered on the terminal is sent to the other party. Received text from the other party is displayed on the terminal.
<b>Read &amp; Talk</b>	Received text is displayed on the terminal. Voice is relayed to the other party.
<b>Write &amp; Hear</b>	Text entered on the terminal is sent to the other party. Incoming speech is heard from the other party.
<b>Off</b>	All CTM is disabled, use the phone as normal.

**If you are using a TTY device make sure the terminal baud rate is set to 45.45 bps**

If you are using a terminal with a CTM modem built in then select CTM Off on the handset.

## 15 Troubleshooting, Technical and Warranty Information

### 15.1 Troubleshooting and FAQ's

Please check the manual thoroughly before contacting your service provider

Symptom	Solution
<b>No incoming ring or alarm tone</b>	Check the ring tone and ring volume settings under Profiles Check the handset is not muted (Long press the <b># key</b> )
<b>(No) keytones when pressing keys</b>	Check the key tone settings in the current profile. See 7.1 Change the Profiles
<b>How do I extend the incoming ring time?</b>	This is not a handset setting. Please contact your Service Provider to extend the ringing time.
<b>A phone number cannot be dialled</b>	Check for network coverage Check whether any call restrictions are set. See 5.15 Call Barring
<b>Short messages cannot be sent or received</b>	See Text Message Settings and check the SMS centre number is correct. Contact your service provider for more details.
<b>MMS messages cannot be sent or received</b>	Your subscription does not include data services. Check with your service provider.
<b>How do I switch off Predictive Text?</b>	The <b># key</b> is used to toggle between different modes. See Chapter 6 for details.
<b>I cannot connect to FOXTEL or BigPond</b>	Your subscription is not provisioned for data services. Check with your service provider.

Symptom	Solution
I cannot connect to Join Me	<b>Check: Menu &gt; Settings &gt; Handset &gt; PC Connection &gt; USB</b> Uninstall and re-install the CD software
My phone is slow to respond, handset storage problems	See FAQ's at <a href="http://www.zte.com.au">www.zte.com.au</a> for more assistance Restart your phone every day to refresh the memory Delete or archive old SMS messages and other content <b>Restore default settings:</b> <b>Menu &gt; Settings &gt; Handset &gt; Restore default settings &gt; 0000 &gt; Yes</b>
The battery discharges quickly	Possible network coverage issue. Check the signal strength. With only 1 or 2 bars, the battery has to work harder to maintain network contact. Limit multi-media and Bluetooth usage to save power. The battery may be worn out and needs to be replaced.
I cannot charge the phone	Confirm the charger is properly inserted. Remove the battery, clean the contacts and check it is inserted correctly. The battery may be worn out and needs to be replaced. <b>Tip:</b> Charge the phone using the supplied USB cable.
How do I enter text in an SMS?	From the phone number field press the down arrow twice to move into the text area. Use predictive text or abc mode to manually type words. See chapter 6 for details.
How do I change the Ringtone?	Edit the current profile and select a new tune from the Audios directory. See chapter 7 for details.
The handset switches off after charging.	The handset is charging in the off state. Press and hold the Red key to switch the handset ON or charge it in the ON state

Symptom	Solution
<b>The handset switches on automatically</b>	An alarm or calendar event switches the handset on automatically.
<b>My phone is not able to connect to other Bluetooth devices</b>	Turn Bluetooth on. Set visibility to Show. Possible compatibility issues. Manufacturers incorporate different Bluetooth profiles. Not all functionality is supported.
<b>How do I transfer pictures via Bluetooth to a photo printer (eg Kodak)?</b>	This is not supported due to different Bluetooth profiles. Copy photos using Join Me

## 15.2 Error Messages

Message	Solution
<b>No (U)SIM detected</b>	Check a valid (U)SIM card is inserted See 2.1 How do I insert the (U)SIM Card?
<b>Enter PIN code</b>	Enter the correct PIN code supplied by your service provider
<b>Enter PUK code</b>	Contact your service provider to get the PUK code
<b>Enter 16 digit unlock code</b>	Please contact your service provider
<b>Enter handset lock code</b>	The default handset lock code is 0000
<b>File does not exist or is in the wrong format</b>	Check the file type is supported by the handset. On your PC or MAC, make sure the file is closed. Re-send the file using Join Me, Mass Storage Mode or Bluetooth transfer.
<b>Insufficient Memory</b>	Handset memory is full. Delete unwanted files, messages, emails & videos to create more user space.

### 15.3 Technical Parameters

<b>Network Compatibility</b>	3G UMTS 850, 1900, 2100 MHz with data rates up to 3.6Mbps 2G GSM 850, 900, 1800, 1900 MHz
<b>Dimensions L×W×H</b>	Approx 115.4mm x 51.5mm x 15.5mm
<b>Weight</b>	Approx 110g (Including standard battery)
<b>Features</b>	MP4 video, MP3 audio, 3.0/0.3MPixel dual cameras, Video Calling, USB, FM Radio, A-GPS, MIDP 2.0 JAVA, 2.4" 262K colour, daylight viewable display with 240 x 320 pixels, MMS, Email, Calendar, Speakerphone, Voice Recorder, Bluetooth 2.0 Stereo, CTM, approx 130MB user memory.
<b>Battery</b>	1300mA hours, Lithium ion (Li-ion)
<b>Continuous Idle time*</b>	Up to 400 hours
<b>Continuous talk time*</b>	Up to 240 minutes talk time, Video call >70 minutes
<b>Charge time</b>	Approximately 3-4 hours
<b>Battery Life</b>	Approximately 400 charge cycles
<b>Supported Files</b>	JPG, BMP, GIF, MP3, WAV, MID, WMA, MMF, AMR, MP4, 3GP, TXT
<b>Bluetooth 2.0</b>	HSP, SPP, GOEP, A2DP, FTP, PBAP

\*The phone's talk and idle times are based on ideal working environments. The use of extended backlighting, browser, Bluetooth and network conditions can reduce battery life and talk/idle time.

## 15.4 Support Information

- For Warranty Service directions please consult the ZTE website at <http://www.zte.com.au>
- All calls for PIN number enquiries, Network problems, Next G Services, BigPond account information, Web Access, Account and Billing Information, (U)SIM card registration and general enquiries should be directed to your Service Provider.

## 15.5 Warranty Information

### **The warranty does not apply to defects or errors in the product caused by:**

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water, exposure to solvents or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

**Note: Consult the warranty card for full information**

## 16 Environmental Statement

Your handset is made using the latest manufacturing techniques and environmental standards to reduce waste and hazards to the environment. However at the end of life of the equipment the manufacturer recommends that you return the handset and accessories to the nearest re-cycling depot, send it to our recycling agent below or return it in the pre-paid bag supplied with the handset. Valuable materials such as gold, silver, and copper can be recovered from the handset. Materials are prevented from entering the environment and the waste materials are recycled. At the end of life of the equipment please send the handset, batteries and charger to:

**MRI (Australia) Pty Ltd**  
**20-24 Dennis St**  
**Campbellfield**  
**VIC 3061**  
**[www.mri.com.au](http://www.mri.com.au)**

**or**

**MRI Sydney**  
**1 – 4 Bentley Street**  
**Wetherill Park**  
**NSW 2164**

MRI Australia recycles every part of the equipment and diverts over 90% of the materials from landfill for re-use.

## 17 Safety and General Information

The handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and pay attention to the following points:

- Handle the handset with care. Do not drop or throw the handset down roughly.
- Do not immerse in any liquid. The handset contains a liquid detection sticker and the warranty will be voided by any liquid damage.
- Do not place the handset near computer disks, credit cards, and other magnetic media. The information contained on disks or cards may be erased or damaged.
- Do not leave the handset or battery in direct sunlight or near other heat sources where temperatures could exceed 45°C.
- Keep the handset, battery, charger and other accessories away from children.
- In the unlikely event of a battery leak avoid contact with your eyes or skin. Flush with water and consult a doctor.
- Observe and obey warning signs at petrol stations, airports and hospitals.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected by the handset.
- Take care not to allow metal objects such as coins or keys to come into contact with the battery terminals.
- Do not dispose of batteries in a fire.
- Do not throw used batteries into household rubbish, return them to a recycling point
- Do not connect the handset to any other chargers or cigarette lighter chargers.
- Only use the supplied charger.
- Be careful not to pierce the battery with sharp objects and do not use damaged batteries.
- Do not disassemble or modify the battery.
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal condition is detected during use, charge, or storage.
- Do not put the battery in your mouth.
- Only use original replacement batteries.
- Do not attempt to dismantle the handset or any of its accessories.

- Do not place the handset close to the edge of a table in case it moves when set on vibrate mode.
- Do not put the handset into a microwave oven, dryer, or high-pressure container.
- Don't use the handset immediately after a sudden temperature change eg. from an air conditioned environment to high temperature and humidity outside. In such cases there could be condensing moisture inside the handset which can cause internal damage. Switch off and leave for 30 minutes before use.
- Do not use the handset while driving or operating other machinery.
- Do not use the handset where blasting is in progress.
- Switch the phone off when boarding aircraft.
- Do not leave the handset at the bottom of a bag where it may be damaged by sharp objects.
- At high volume, prolonged listening to audio devices can cause hearing loss.
- Do not leave the handset discharged or disconnected for a long time, otherwise your personal data may be lost.
- Remember to make backup copies of all important data on the handset.
- Take care when the phone is in your pocket. Sitting down may damage the handset.
- It is normal for the handset to become warm while the battery is being charged.
- Under poor network conditions battery life is considerably reduced.
- When the battery is thrown away cover the terminals with insulating tape.
- Please recycle the packaging and all parts
- Emergency service coverage is dependant on network availability and battery status.
- It is always good practice to switch off the handset regularly.
- Do not expose the handset to oils or solvents.
- If you have an alarm set the handset switches on at the prescribed time.

## Index

Access Point Settings	79	CTM Mode	81
A-GPS	57	Dial Up Networking	73
Alarms	50	Display Brightness	43
Answer a Call	22, 30	Download Location	49
Any key to answer	34	DTMF	29
Appointments	50	Email	40
Background Screen	43	Emergency Calls	32
Backlight Timers	43	Environmental	87
Backlighting	43	Error messages	84
Battery	19, 21	FAQ's	82
Bluetooth	35, 71, 72	File Manager	48
Browser	75	Games & Apps	77
Calculator	76	Handsfree	29
Calendar	51	Headphones	30
Call Barring	34	International Dialling	29
Call Divert	33	Join Me	60
Call History	28	Keylock	21, 79
Call Options	29, 31	Last Number Redial	28
Call Waiting	33	Main Menu	23
Camera	52	Make a Video Call	30
Charging	21	Make a voice Call	22, 28
Connect to a computer	59	Make Videos	53
Contacts	24, 26	Mass Storage Device	58
		Meeting Mode	46

MicroSD Memory Cards	49	Set the Time	21
Microsoft Outlook	67	Shortcuts	23, 44
Missed Calls	35	Silent Mode	46
MMS - Multimedia Message	39	SIM card	18
MP3 Player	55	Slide Show	78
Music Player	55	SMS	36
My Words Dictionary	37, 38	SMS Message Length	38
Network Settings	80	Snooze	50
PC Connection	58	Speakerphone	29
PIN Codes	47	Speed Dial	26
Playlist	56	Stopwatch	76
Predictive Text	37	Support & Warranty	86
Preferred mode	80	Take Pictures	52
Preferred selection	80	Technical Parameters	85
Profiles	45	Troubleshooting	82
Push Messages	40	USB	20
Receive a Text Message	36	Vibrate Mode	46
Restore default settings	79	Voice Recorder	78
RF Safety & SAR Information	8	Wallpapers	43
Ringtones	45	World Time	76
Safety Information	88		
Send a Text Message	22, 36		
Send my number	34		