

kogan

KAEBK06TCHAA

USER MANUAL



Contents

| | |
|---------------------------------------|-----------|
| <u>General Precautions</u> | <u>2</u> |
| <u>Supplied</u> | <u>4</u> |
| <u>Appearance</u> | <u>5</u> |
| <u>Enabling and disabling devices</u> | <u>6</u> |
| <u>Main Menu</u> | <u>8</u> |
| <u>Connecting to a Computer</u> | <u>9</u> |
| <u>Reading e-books</u> | <u>10</u> |
| <u>Book menu</u> | <u>11</u> |
| <u>Context menu</u> | <u>13</u> |
| <u>Listening</u> | <u>18</u> |
| <u>Music Menu</u> | <u>19</u> |
| <u>View images</u> | <u>21</u> |
| <u>Photo Menu</u> | <u>23</u> |
| <u>Notebook</u> | <u>25</u> |
| <u>Explorer</u> | <u>26</u> |
| <u>Calendar</u> | <u>28</u> |
| <u>Settings</u> | <u>29</u> |
| <u>Transferring eBooks</u> | <u>33</u> |
| <u>Specifications</u> | <u>34</u> |

General Precautions

Attention!

Before you start using the device, please read this manual and keep it handy for future use.

The impact of fluid

- Do not spill liquid on the surface or inside the eBook Reader - it can cause damage to the device.
- Do not put it next to anything containing liquids.

Direct exposure to sunlight

- Avoid direct sunlight on the screen of the device. The information on the screen may be displayed incorrectly or not at all, if exposed to direct sunlight.

Additional devices

- Do not use any unsupported device - it can cause damage to the device.

Using earphones

- To protect your hearing, we recommend you do not listen to music on earphones at a high volume for a long period of time.
- If you have a hearing problem, please turn down the volume or abstain from the use of earphones.

Repair

- Please contact the Authorised Repair Centre.

Attention!

To avoid losing important data, periodically back up important data from the device. Kogan is not responsible for all kinds of data loss and does not provide support for data recovery.

▲ Attention!

If your unit has been off for a long period of time, it may display artifacts of black and white on the screen.

 
This is not a malfunction in your unit!

This is the operation of the screen. Please refresh the screen contents, and the artifacts will disappear.

Supplied

- eBook Reader.
- USB Cable.
- Earphones.
- Cover.

Appearance

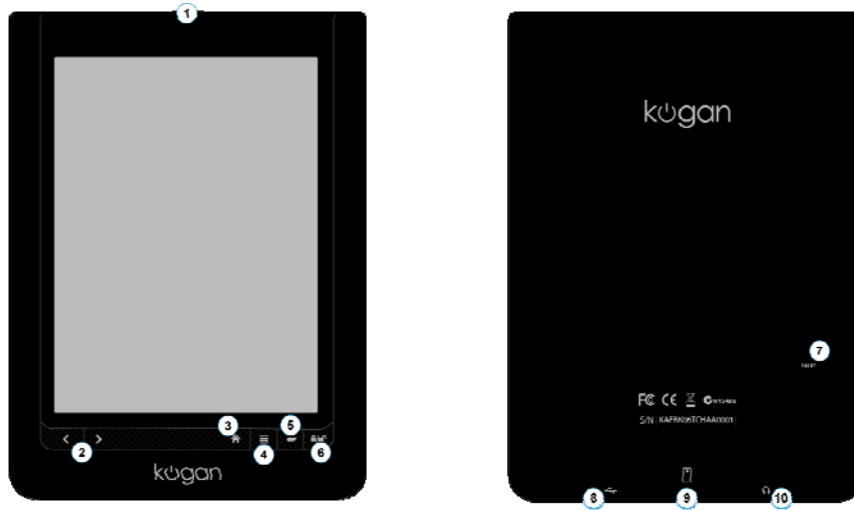

1. Power on / off.
2. Buttons to scroll through pages.
3. Button to return to the main menu.
4. Button-up menu.
5. Return button.
6. Lock button.
7. Reset button.
8. USB port for connecting to the computer / charger connection.
9. Card slot.
10. 3.5 mm jack for earphones.

Enabling and disabling devices

To turn the device ON, press the ON/OFF button on the top of the eBook Reader.

To put the unit into standby mode, briefly press the lock button. After this, the device stops responding to button management. When the device is in standby mode, the image of a key will appear in the center of screen and an inscription at the bottom of the screen:

kogan



To unlock press:



To unlock press:



To unlock the eBook reader, click the lock button once again.

For emergency powering off of the device, press and hold on / off for a few seconds. The device will be completely turned off.

If the eBook reader is frozen, or operates slower than usual, please press the hard reset button in on the back of the unit. You may need to use a pin to do so.

Main Menu

 
On the home screen there is a clock, calendar and icons that you can choose by touching the corresponding button on the screen.

In **Book**, a list of eBooks in the memory will be displayed.

In **Photo**, a list of graphic files in the memory will be displayed.

In **Music**, a list of music files in memory will be displayed.

The **Recent** section provides quick links to the latest accessed files.

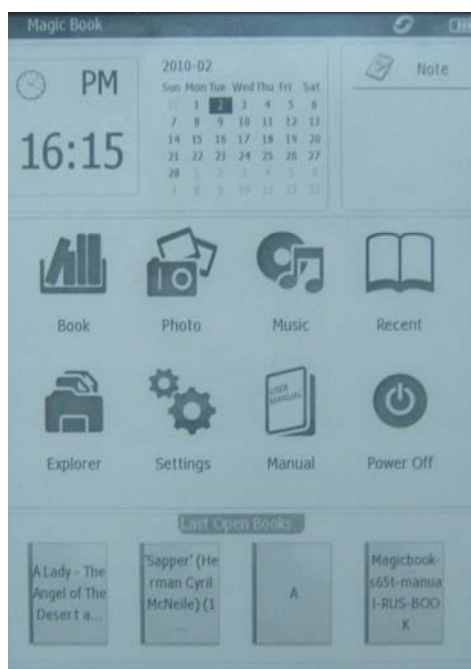

Explorer is designed to navigate the entire contents of the device and memory cards.

Settings section contains date, time, menu language, screen, power off, as well as system information.

Manual is used to view the manual on the device.

Power off is used to turn off the device.

Connecting to a Computer

To connect the eBook Reader to your computer:


1. Connect the USB-cable to the USB port on the device.
2. Connect the USB-cable to a USB 2.0 port on your computer.
3. There will be a message box on the eBook, you can choose either: "Data Transfer Mode" or "Charge Mode". Select Data Transfer Mode to gain access to the eBook via the computer.
4. Wait for the operating system detects a new storage device for USB.

After connecting the device to a PC, it will be displayed in explorer as a removable disk USB.



You will then be able to copy music and image files to your device.

To disconnect the unit from the computer you must use the Safely Remove Hardware. To do this:



1. Double click on the icon  in the notification area of Windows.
2. In the resulting window, select **USB Mass Storage Device** and click **Stop**.
3. In the resulting window, **stop the device** by clicking **OK**.
4. Then a message will appear on your computer to let you know that the hardware can be safely removed from the system.

Reading e-books

To read e-books:


1. Go to the main menu click **Book**.
2. Select the desired directory and then select the eBook that you wish to read.



3. To navigate through the pages, use the buttons  or  page turning buttons on the screen. There will be a page number displayed at the top of the screen.



4. To selecting the file, touch the file you wish to access. To move to the next page and return to the previous page, use the buttons to scroll through pages.



For other actions, you can enter the Context Menu of the eBook. To do this: click the context





menu icon  in the upper right corner of the screen.

  
Book menu

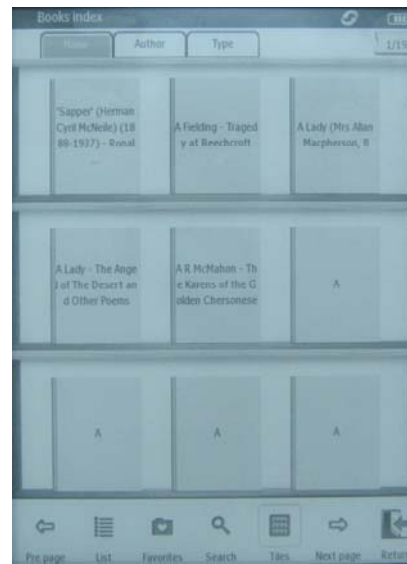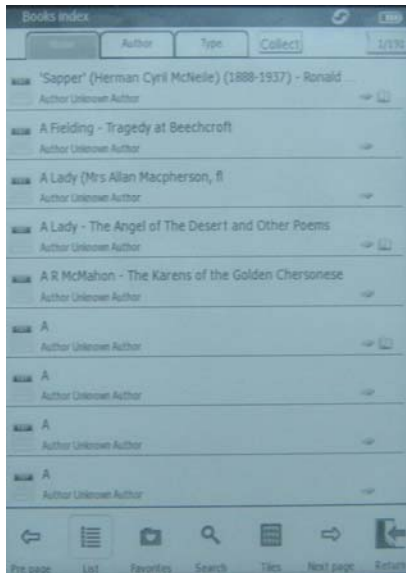

In the **book** menu, you can sort the list by file name, group by author or genre. You can select one of three tabs - **Name, Author, Type**. The Author or Genre is determined by the book file itself.

 
To change the appearance of the file list, you can use the  **List** button and the  **Tiles** button at the bottom of the screen. When clicking the List button the icon file or the book cover will appear. When clicking the Tiles button only the book covers are displayed.

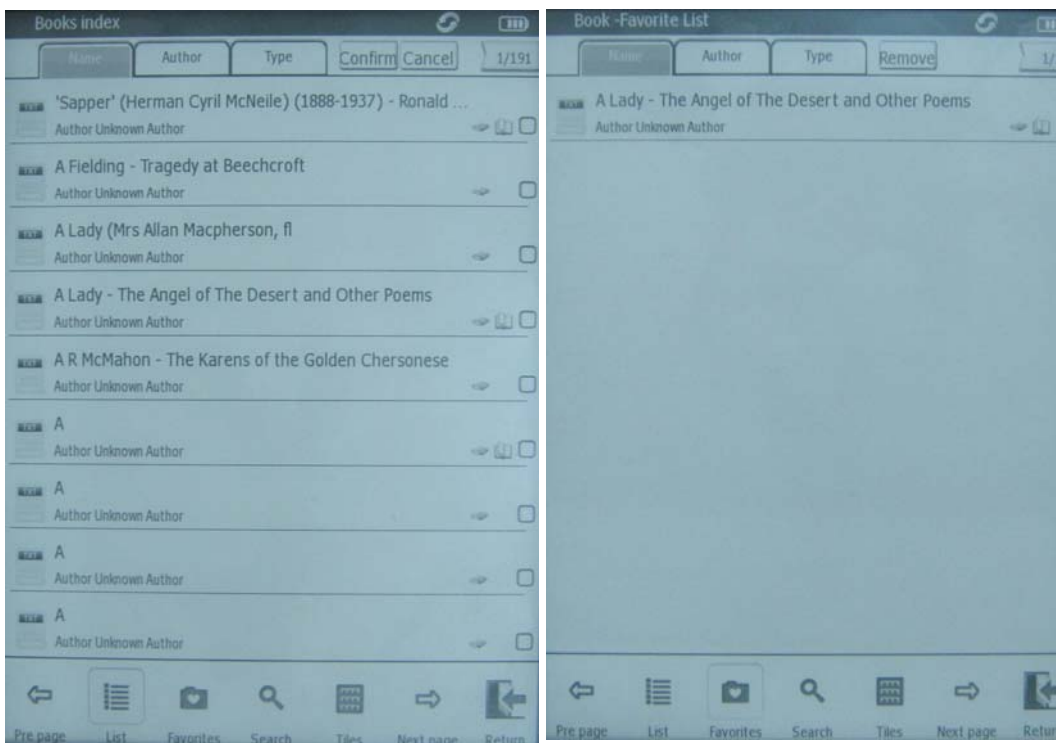


When you sort files by the book's name, you can add the book file to the favorites. To do this, click the **Collect** button at the top of the screen, select tick on the right side of the screen then click **Confirm**. To view the selected files, press the  **Favorites** button at the bottom of the screen. To remove the book file from your favorites click on the  **Favorites** button at the bottom of the screen, click the **Remove** button at the top of the screen, tick off the right side of the screen you want files and click **Confirm**. To exit, press  **List** or  **Tiles**.





To search for files, click the  **Search** button at the bottom of the screen. Using the keyboard type the name or part of the file name and click .

 
 
To exit from the **Book** menu, click  **Return**.

Context menu


To update the context menu, click the  **Refresh** button.


To add a bookmark, enter the shortcut menu and click  **Add bookmarks**. The page will

then be marked in the upper left corner. To manage bookmarks, click  **View bookmarks**.

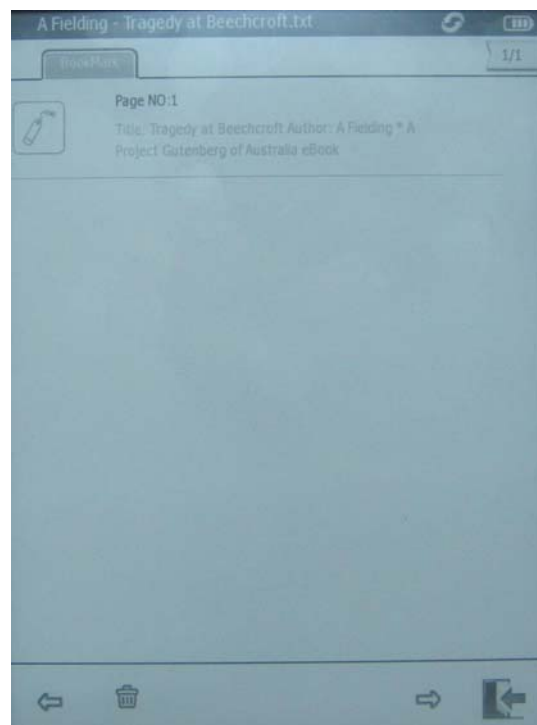
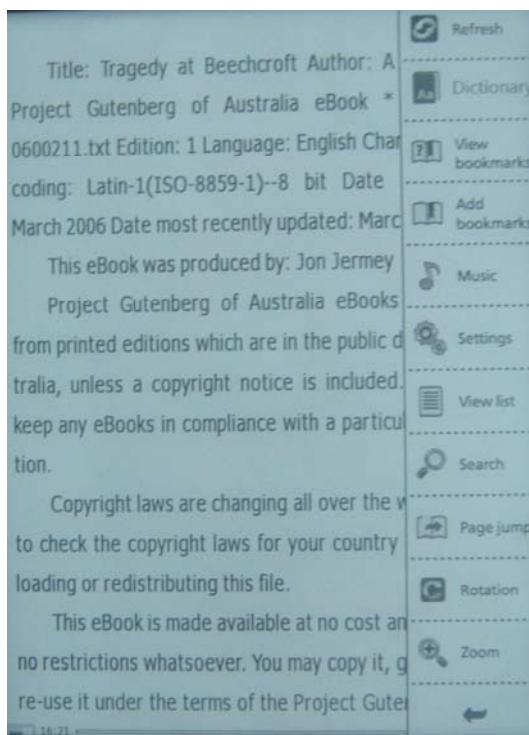


To delete a bookmark, click , select the bookmark and click  .

To listen to music while reading, click  **Music**, choose a file from the list and start playing it. To return to the text books, use the return button.

To quickly jump to a specific chapter of the book log in the context menu, click  **View list**.

 Selecting a chapter, click  on the right of the chapter.

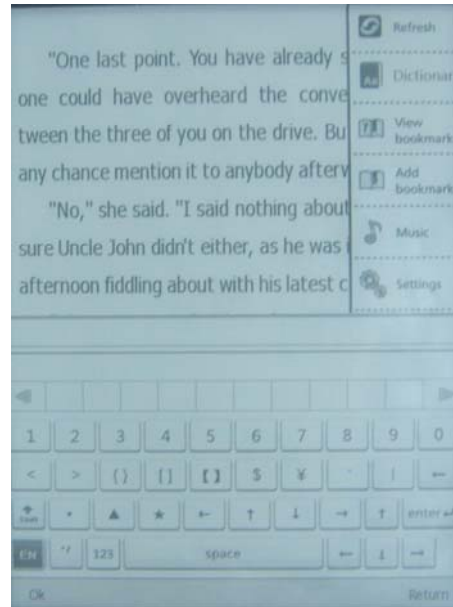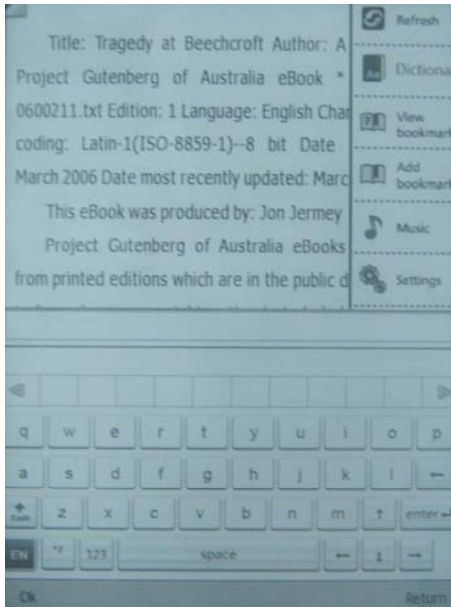



To go to a specific page, select the **Page jump** button, enter a numeric keypad page number and select **OK**.



 
To turn the horizontal position of the screen in shortcut menu, select the item **Rotation**.



To quickly change the text size, click **Zoom** and select the desired font size.



To change the settings displayed text log, click **Settings**.

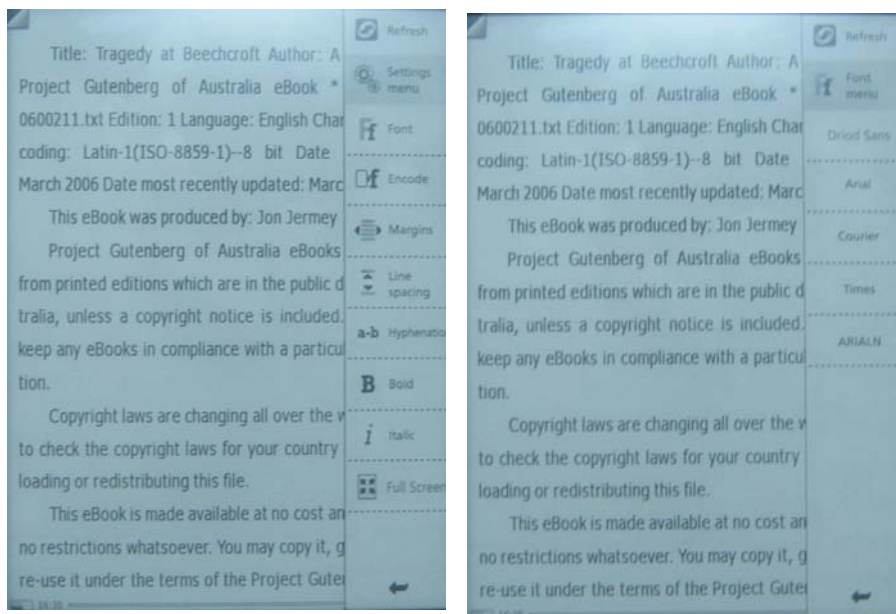

Ff **Font** - at this point choose the font, which will display the text of the book.



Of **Encode** –you can choose the encode of the text.

≡ **Margins** - the item to adjust the distance between the text and the lateral limits of the screen. You can select 9, 6 and 3 mm.


⋮ **Line spacing** - click to adjust the line spacing. You can select 1, 3 and 5 mm.


a-b **Hyphenation** - click to activate and deactivate hyphens in the text.

B **Bold** – can make the words in the text in bold.

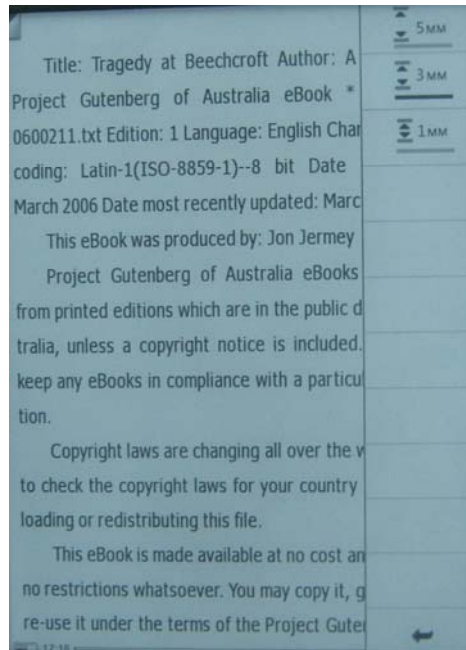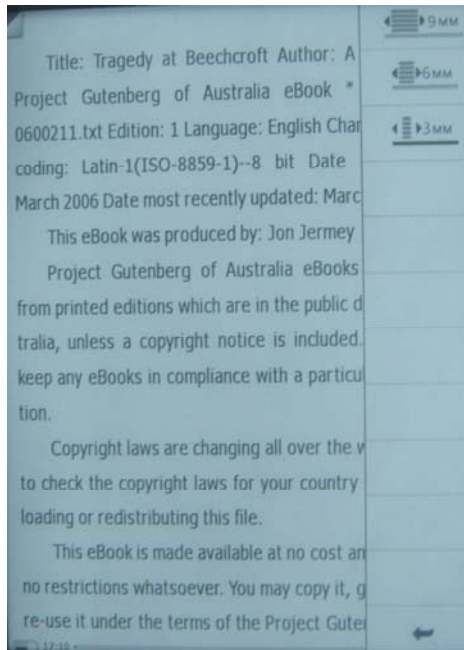



 i **Italic** - can make the words in the text in italic.

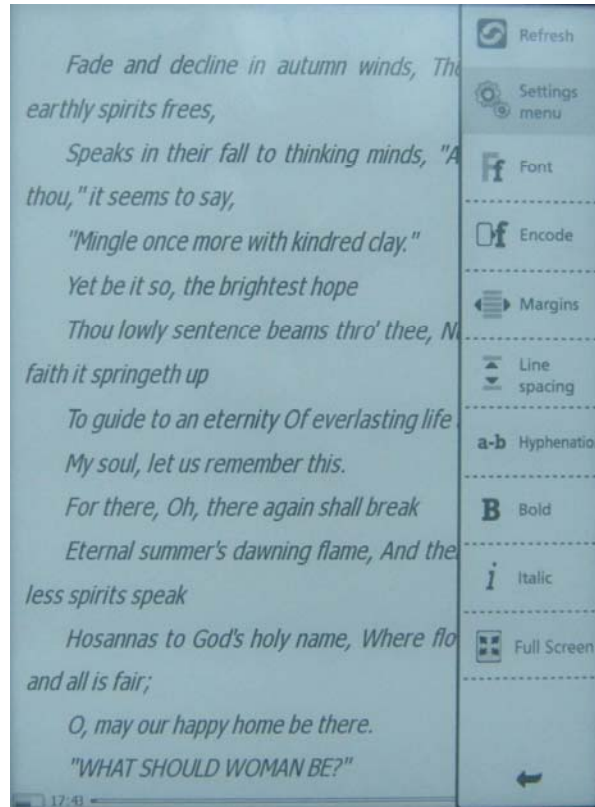 **View bookmarks** - information about the book.

 




Listening



To play music:

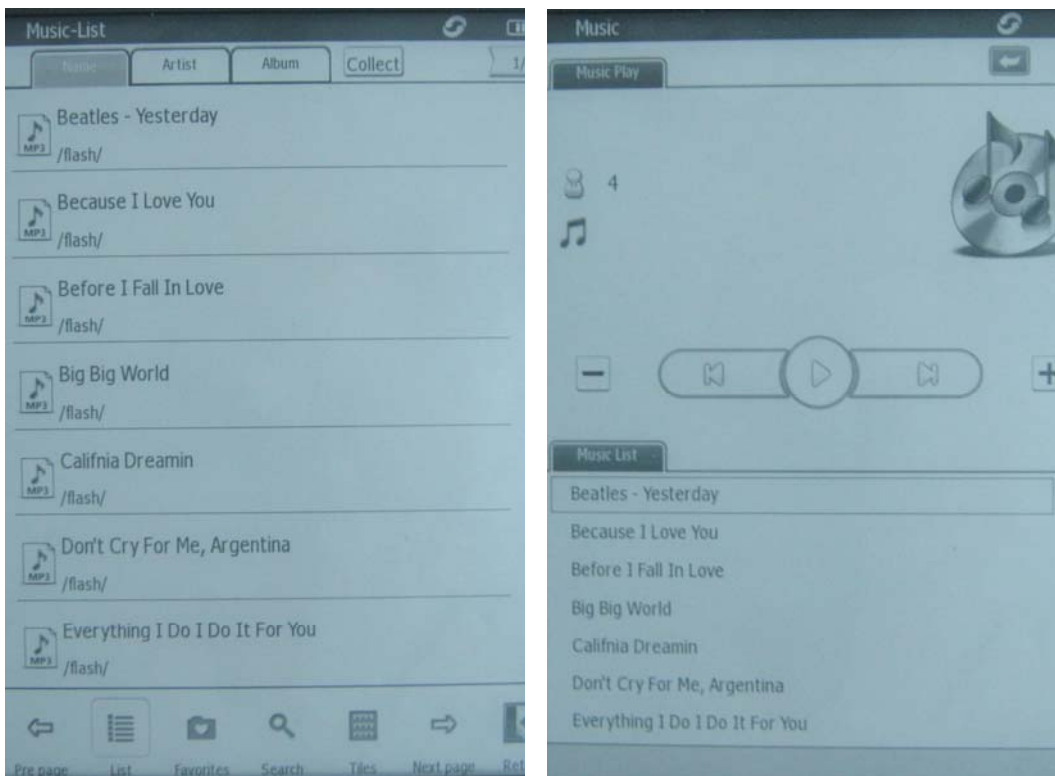1. Select **Music** from the Main Menu.
2. Select the desired directory.
3. To navigate through the pages of the files list, use buttons  and  scroll through pages. At the top of the screen will display the page that you are on.
4. To select the file, click on it.

To start playing, press the button , to stop playback, press .



To go to the previous or next track, use the buttons  and .



To control the volume level, use the buttons  and .

 
To go to the list of files without stopping the music playback, press the return button.





To exit the music player, press the button  in the upper right corner of the screen.

Music Menu

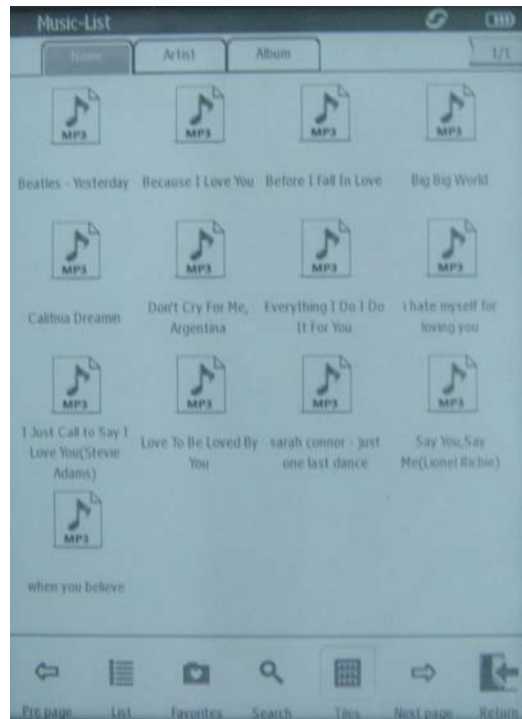

You can sort the list of songs in the **Music** menu, by file name, group by artist or album. You can select one of three tabs - **Name, Artist, Album**.


To change the appearance of the file list, use the **List** button  and **Tiles**  at the bottom of the screen.



When you sort files by music name you can add the music file to favorites. To do this, click the **Collect** button at the top of the screen, select tick on the right side of the screen then click **Confirm**. To view the selected files, press the  **Favorites** button at the bottom of the screen. To remove the file from your favorites click on the  **Favorites** button at the bottom of the screen, click the **Remove** button at the top of the screen, tick off the right side of the screen you want files and click **Confirm**. To exit, press  **List** or  **Tiles**.





 
To search for files, click the  **Search** button at the bottom of the screen. Using the keyboard, type the name or part of the file name then click .

To exit the **Music** menu, click  **Return**.



View images


To view images:

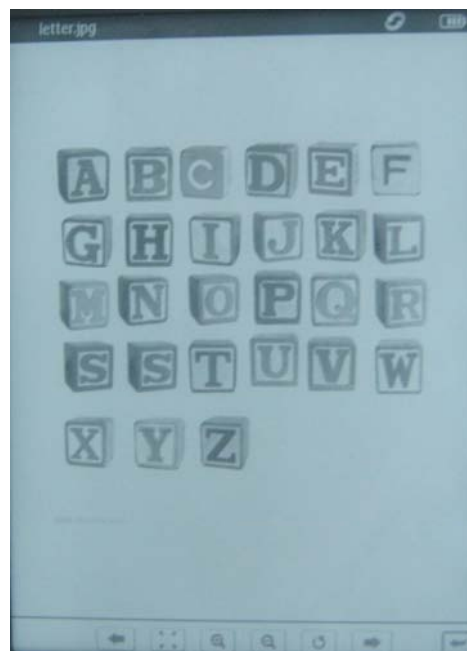1. Select **Photo** in the main menu.
2. Select the desired directory.
3. To navigate through the pages of the list of files, use the buttons  or  page turning buttons on the screen.
4. To select a file, click on it.




To view the previous or next graphic file, use the buttons or scroll through pages buttons

 and  at the bottom of the screen.

To enlarge the image to fit the screen, press button  at the bottom of the screen.

 To reduce and enlarge, use buttons  and  at the bottom of the screen.

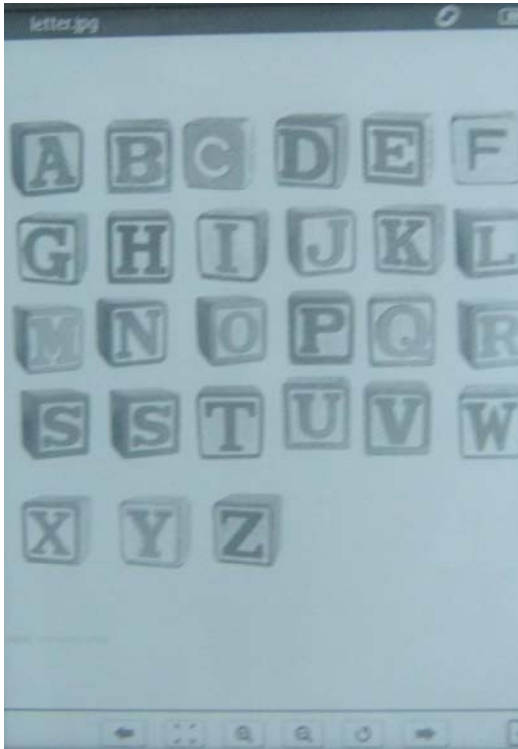



To rotate the image, click  at the bottom of the screen.





To exit the image viewer, click return.


Photo Menu



The list of image files in **Photo** can be sorted by file name, group by date or album. You can select one of three tabs - **Name, Date, Album**. For correct grouping by date or by album, this information should be written into the image file.

 
To change the appearance of the file list, used **List** button  and **Tiles**  at the bottom of the screen. When map files list, next to the filename is the file format icon. When you display file icons, there are visual thumbnails images.

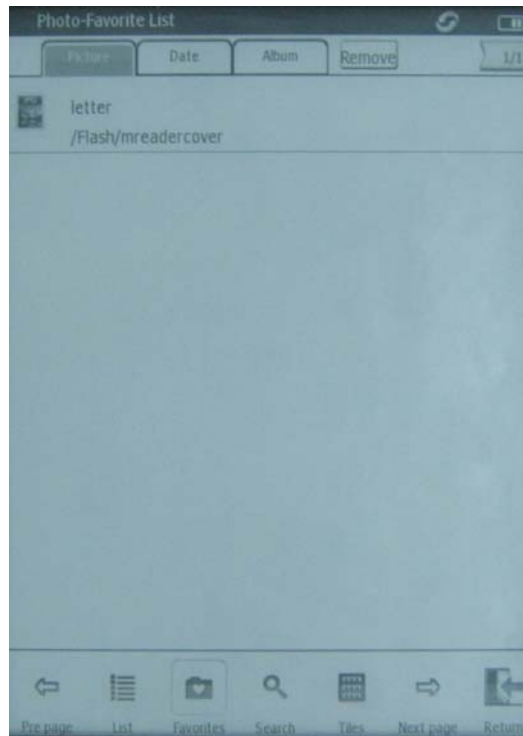

When you sort files by image name you can add the book file to the favorites. For this click the **Collect** button at the top of the screen, select tick on the right side of the screen then click **Confirm**. To view the selected files, press the  **Favorites** button at the bottom of the screen. To remove book file from your favorites click on the  **Favorites** button at the bottom of the screen, click the **Remove** button at the top of the screen, tick off the right side of the screen you want files and click **Confirm**. To exit, press  **List** or  **Tiles**.





To search for files, click the  **Search** button at the bottom of the screen. Using the keyboard, type the name or part of the file name then click .


To exit the **Photo** menu, press  **Return**.

 
Notebook

To view or edit text entries:




1. Go to the main menu item in the **Note**.
2. To navigate through the pages of the list of files, use the  or  page turning buttons on the screen.
3. To selecting, gently touch on it.
4. You can then add information using the keyboard.
5. To exit and save, click **Save** in the upper left corner of the screen. To exit, without saving, use the return button.

To create a new text entry:

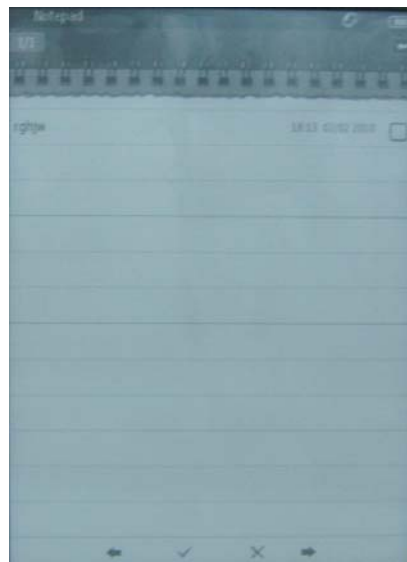1. Go to the main menu item in the **Note** menu.
2. Click on the button  at the bottom of the screen.
3. Enter a name for the record.
4. To exit and save, click **Save** in the upper left corner of the screen. To exit, without saving, use the return button.






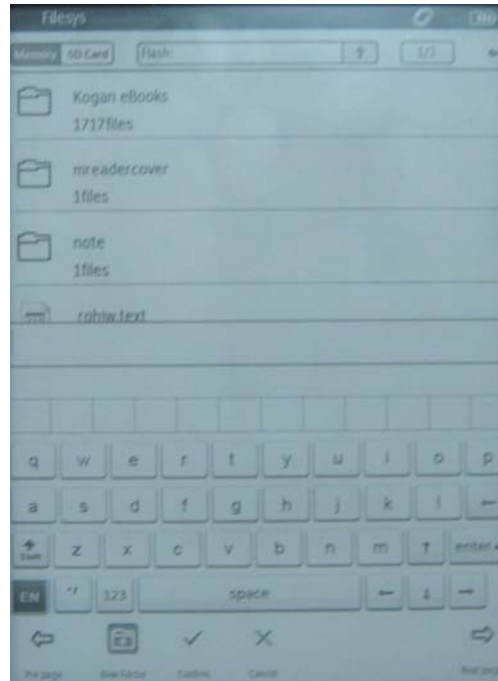 
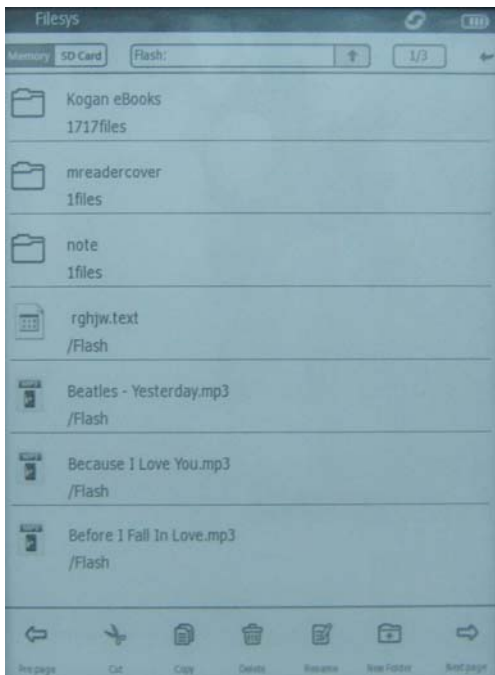 
To remove an entry:

1. Go to the **Note** menu.
2. Click on the button  at the bottom of the screen.
3. Tick off the records you and click on button . To cancel, press the button .



Explorer



To switch between the internal memory and SD card use the button **Memory - SD Card** in the upper left corner of the screen.


To create a folder, click  **New Folder**, type folder name using the onscreen keyboard and press  **Confirm**. To cancel creating a folder, click  **Cancel**.



To delete files and folders, click the  **Delete** button, select the files or folders and click

 **Confirm**. To cancel deletion, click  **Cancel**.

To copy files and folders, click  **Copy**, select the files or folders and click  **Confirm**.


To cancel copying, press  **Cancel**. Then select the location where you want the copied

files and folders and click  **Confirm**. To cancel insert, press  **Cancel**.

To cut the files and folders, click the  **Cut** button, select the files or folders and click

 **Confirm**. To cancel the cut, click  **Cancel**. Then select the location where you want

the cut files or folders and click  **Paste**. To cancel insert, press  **Cancel**.


To rename a file or folder, click  **Rename**, and then select the file or folder. Correct the

name of the on-screen keyboard and press  **Confirm**. To cancel the renaming of a file

or folder, click  **Cancel**.

Calendar


To create a new note:

1. Select the desired date on the screen. You can scroll through months by using the page turning buttons.
2. Click the button  at the top of the screen.
3. Use the keyboard to enter text notes.




4. To exit and save, click **Save** at the top of the screen. To exit without saving the note, use the return button.

To edit a note:

1. Select a date on the screen with a note.
2. Click  on the top screen, edit the entry and click the **Save** button at the top of the screen.

To delete a note:

1. Select a date on the screen with a note.
2. Click the button  at the top of the screen.

 
 
To exit the **Calendar** application, use the return button.

Settings

To change the **settings** on the device, select preferences.

From this it is possible to:

- Re-calibrate the screen;
- Format a memory card;
- Change the language;
- Set the date and time;
- Reset to factory defaults;
- Set the auto-off time;
- View system information.

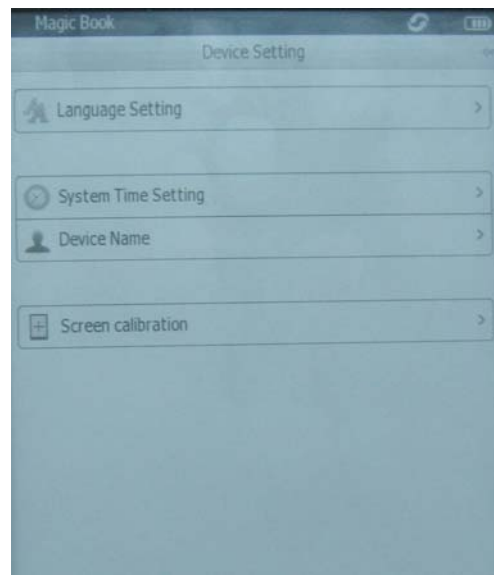
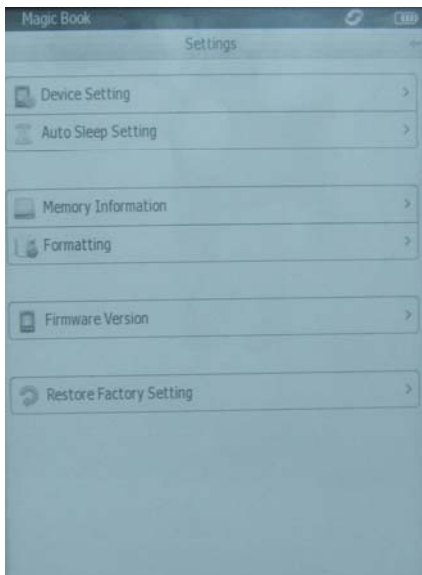


To change the language, go to the **Language Setting** and select the language from the list. To exit the language selection screen, use the return button.

To change the date and time, go to the **System Time Setting**. Enter the date and time and click **Confirm**. To exit date and time settings, use the return button.

To change the name of your device, go to **Device Name**, type a new name and click **Confirm**.

  To calibrate the screen, go to **Screen Calibration**. To start the calibration touch the screen anywhere, then touch the screen in places marked by a cross, first at the corners of the screen, then in the center.

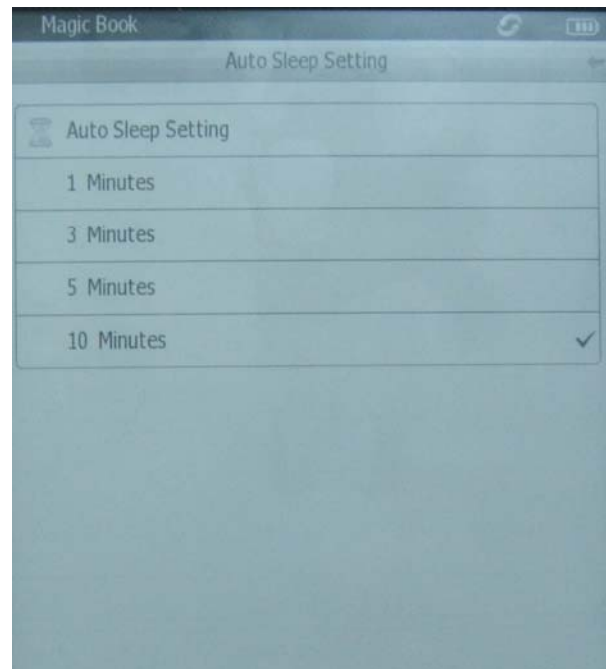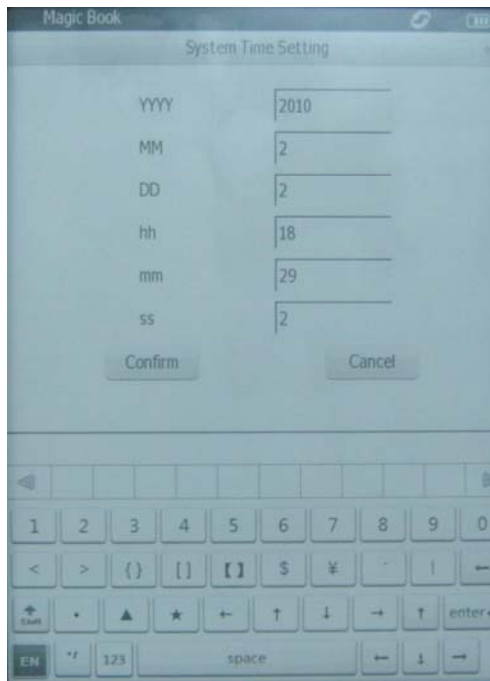

To power off using the time setting, go to the **Auto Sleep Setting**, select the time to power off and press the return button.

 
To view information on the amount of used memory on the internal memory and the SD card, go to item **Memory Information**.

To format the internal memory or SD card, go to the **Formatting** option, select internal memory or memory card and press **Confirm**.


▲ **Attention!**

After formatting, all information will be lost.

To view system information, go to item **Firmware Version**.

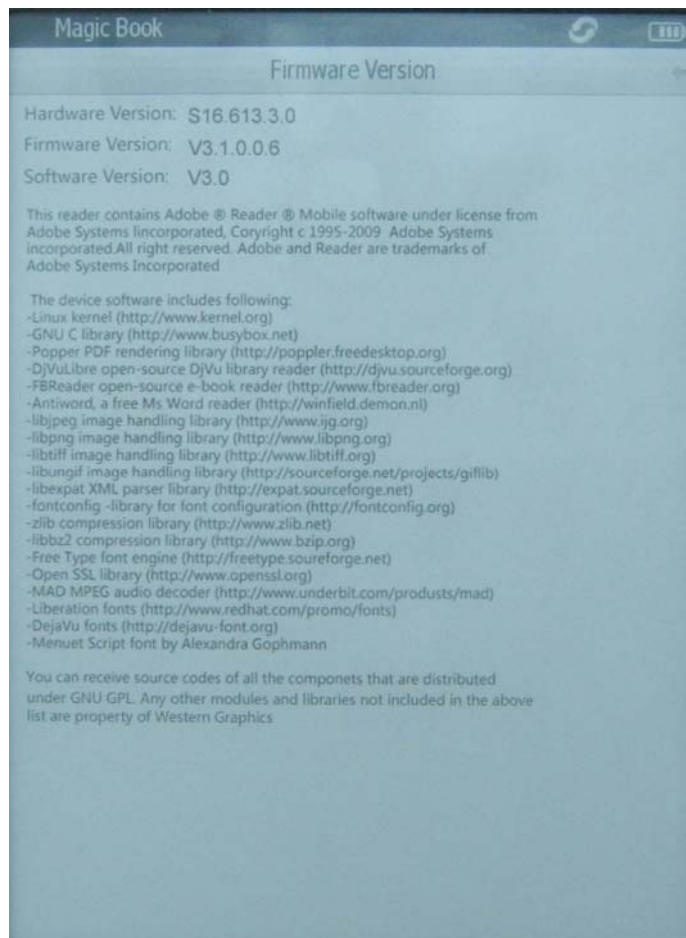

 To restore the factory configuration select **Restore Factory Setting** and click **Confirm**.

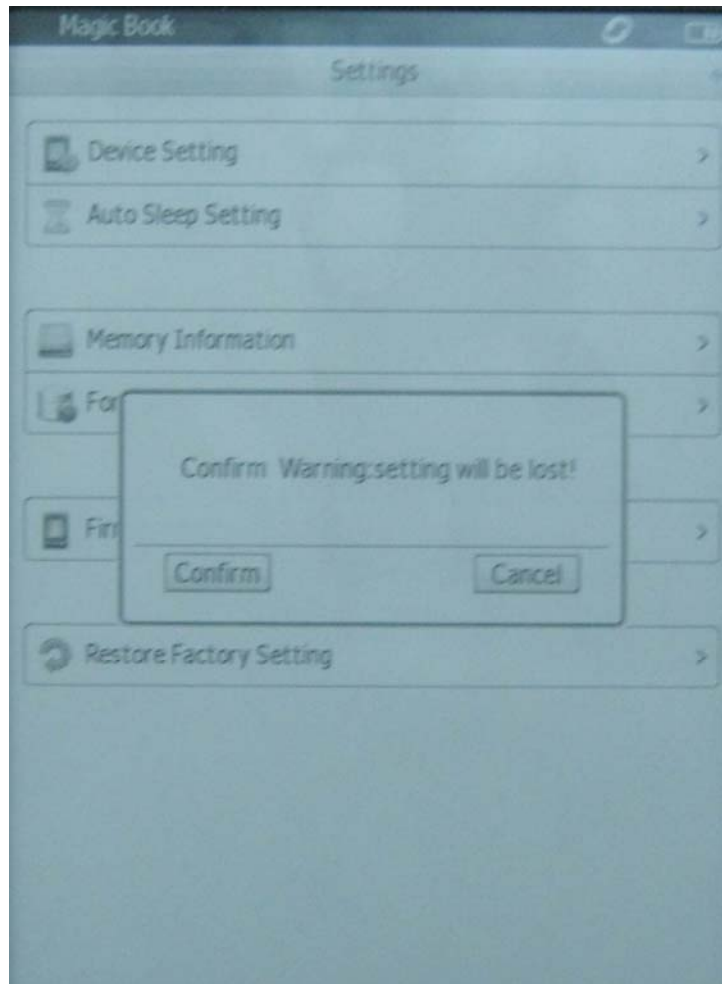

Transferring eBooks

Please follow the steps below to transfer eBooks using ADE software:-

- 1> Download Adobe Digital Editions from <http://www.adobe.com/products/digitaleditions/>
- 2> Install Adobe Digital Editions, open it and create an account and authorize your computer.
- 3> Connect your eBook reader to the computer, select data transfer mode, and authorise the eBook reader as prompted.

To transfer books to the eBook Reader:

- 1> Inside ADE, click on the Library menu and select 'Add Item to Library'. You will need to find where you saved the downloaded book to, and select it in this window.
- 2> Connect your eBook Reader to your computer and select Data Transfer Mode on the eBook reader.
- 3> In ADE, in the Library view select the files you want to copy, and click and drag them onto the 'Mreader Flash' or 'Kogan eBook Flash' folder in the Bookshelf list on the left hand side of the window. Wait for the files to transfer
- 4> Once you have finished transferring books, eject the ebook reader from your computer.

Once you have authorised your computer and the device, you will be able to skip steps 1-3, and will not be prompted to authorise the ebook reader as in step 4.

Transferring Non-DRM protected eBooks

- 1> Connect the Reader to your computer and select Data Transfer mode.
- 2> Under 'My Computer' or 'Computer', a removable disc will appear as "Kogan eBook"
- 3> Open the location where your eBooks are stored. Click and drag your eBooks to the folder named "ebooks" on the removable disc "Kogan eBook".
- 4> Depending on the size of your eBooks, it may take some time.
- 5> Once you have finished transferring your eBooks, you can safely disconnect the Reader from your computer.

Specifications

| | |
|-----------------------------|---|
| Model | KAEBK06TCHAA |
| Screen Size | 6" |
| | |
| Resolution | 800x600, 16 shades of gray |
| Supported Formats | |
| Text | PDF / EPUB with DRM, CHM, TXT, HTM, HTML, RTF, PDB, DJVU, DJV, IW4, IW44, FB2, PRC, MOBI, TCR |
| Audio | MP3, WMA, WAV, M4A |
| Images | JPG, GIF, PNG, BMP, TIFF |
| Processor and memory | |
| Processor | Arm9 Core (Samsung S3C2416) |
| Memory Card Support | SD 16 GB |
| Built-in Memory | 4 GB |
| Battery | |
| Capacity | 1600 mAh |
| Interface | |
| USB | miniUSB 2.0 port for PC connection |
| Headphone jack | 3.5MM |
| Additional function | Music player, image viewing, touch Screen |
| Power | Input: 100 ~ 240 V 50/60 Hz, 0.15 A; Output: 5V 1A |
| Dimensions | 176 x 118 x 9.6 mm |
| Weight | 179 g |