 


# benchtop collection

---

Instructions for use and warranty details

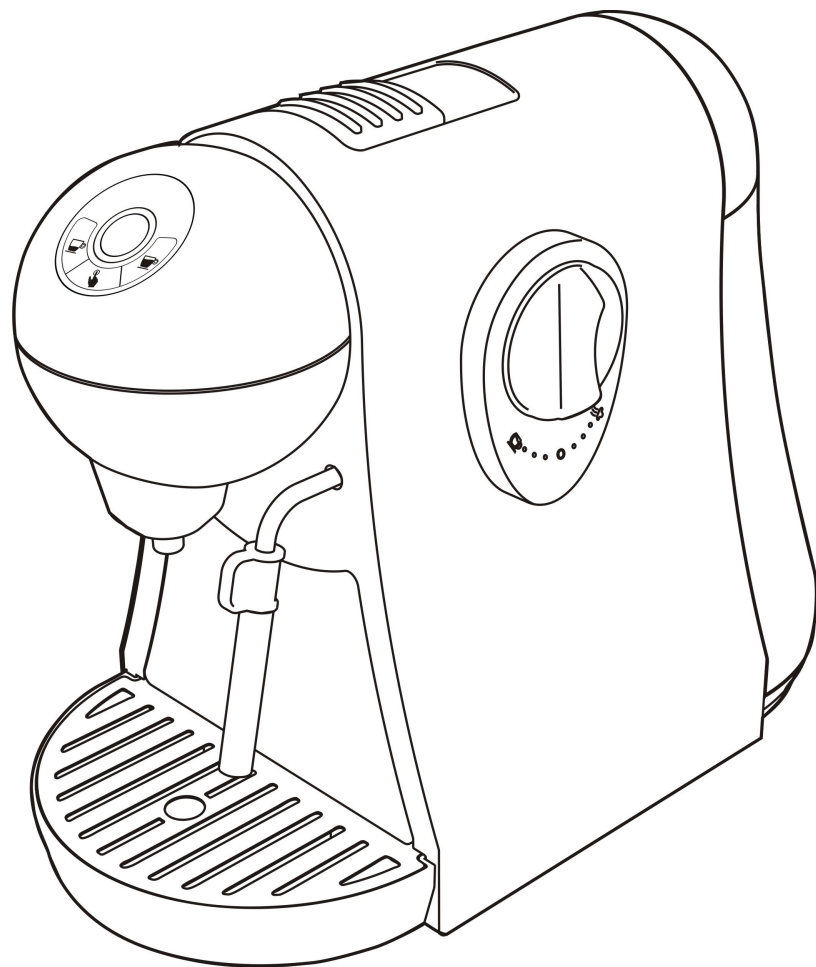

Capsule Coffee Machine

Model No.: CMBT01N

 **kLEENmaid**

Dear Customer,

Thank you and congratulations for choosing Kleenmaid.

Your new appliance has been designed and meticulously tested to ensure that it meets all your culinary requirements, and has been carefully manufactured using top quality materials to give you years of reliable performance.

For best results, carefully read the instructions on how to set up your new appliance. Correct set up will avoid delays and unnecessary service call costs.

Once set up is complete, please read this instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance. These simple instructions will enable you to achieve excellent results from the very first time you use it.

Again, congratulations and thank you for choosing **The Best You Can Own.**

KLEENMAID

# USER INSTRUCTION MANUAL

**READ THIS INSTRUCTION MANUAL CAREFULLY:** Read and follow all instructions. Place this manual in a safe place for future reference. Do not allow anyone who has not read these instructions to assemble, adjust or operate the appliance.

## CONTENTS

IMPORTANT INSTRUCTIONS	.....	2
PRODUCT DESCRIPTION	.....	4
INSTRUCTIONS FOR USE	.....	5
TROUBLESHOOTING	.....	7
CLEANING AND MAINTENANCE	.....	7
SPECIFICATIONS	.....	8
WARRANTY DETAILS	.....	10

## IMPORTANT INSTRUCTIONS



### PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

*When using electrical appliances, basic precautions should always be followed to reduce the risk of the fire, electric shock, and injury to persons, including the following:*

1. Read all instructions before using the machine.
2. In case of emergency, immediately remove the plug from power outlet.
3. Check the voltage indicated on the rating label on the appliance matches that of the electricity supply.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience, and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return the appliance to the original place of purchase or an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Always unplug the appliance when not in use or before cleaning. Allow it to cool before adding or removing parts, and before cleaning the appliance.
7. To protect against fire, electric shock and personal injury, do not immerse cord, plug or appliance in water or other liquid. Never clean the appliance or the power cord if those are humid. Avoid touching the appliance with wet hands.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic areas and where it will not cause a trip hazard.

9. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. Only use an earthed socket to connect the appliance.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug or a fire. Contact a qualified electrician to replace a loose or worn outlet.
12. Use the appliance only as the described in this manual. Any other use or using accessory attachments not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
13. Do not put fingers inside capsule chamber (brewing chamber), due to the presence of sharp edges.
14. Do not touch hot surfaces. Use buttons, handles or knobs only.
15. Indoor & domestic use only.
16. Hot water, steam, spout and capsule holder are hot. Danger of burning injuries. Do not aim steam or coffee/beverage outlets towards the body.
17. When heating up or frothing liquids, dip the steam nozzle deep into the liquid in order to avoid hot water or steam splashes.
18. Do not operate the appliance when the drip tray and the grille are not in place.
19. Use only water in the appliance! Do not put any other liquids or foods in the water tank (reservoir).
20. Steam nozzle is very hot during and after steaming. Be careful not to touch it by hand except by holding the rubber handle.
21. If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.
22. **WARNING:** The water tank (reservoir) must not be opened during use. The sliding capsule chamber cover must not be opened while coffee or steam are being dispensed.
23. This appliance is intended to be used in household and similar application such as:
  - Indoor & domestic use only;
  - Farmhouses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Staff kitchen areas in shops, offices and other working environments;


## PRODUCT DESCRIPTION

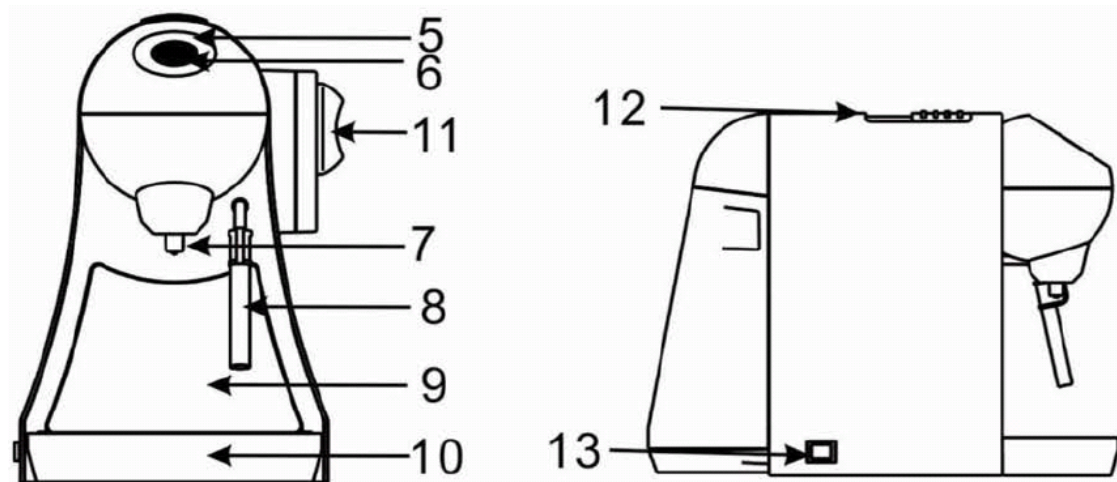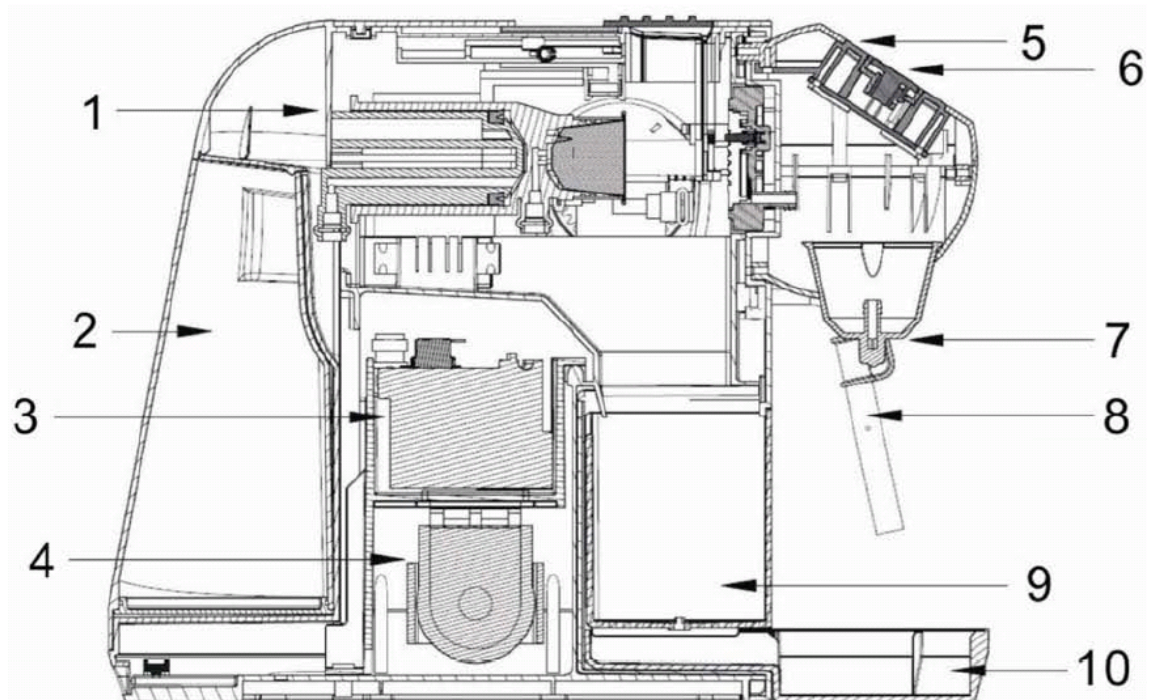

1. Brewing Chamber
2. Water tank (reservoir)
3. Thermal block (boiler)
4. Solenoid pump
5. Pre-heating/ready LED indicator
6. Front control buttons (short, lungo & steam)
7. Coffee/beverage outlet, hot water outlet  
(Can be screwed off for cleaning)

8. Steam nozzle with rubber handle
9. Waste capsule collection container
10. Removable drip tray with detachable grille
11. Coffee/Steam selection control knob
12. Sliding capsule chamber cover
13. On/Off switch with power indicator

# INSTRUCTIONS FOR USE

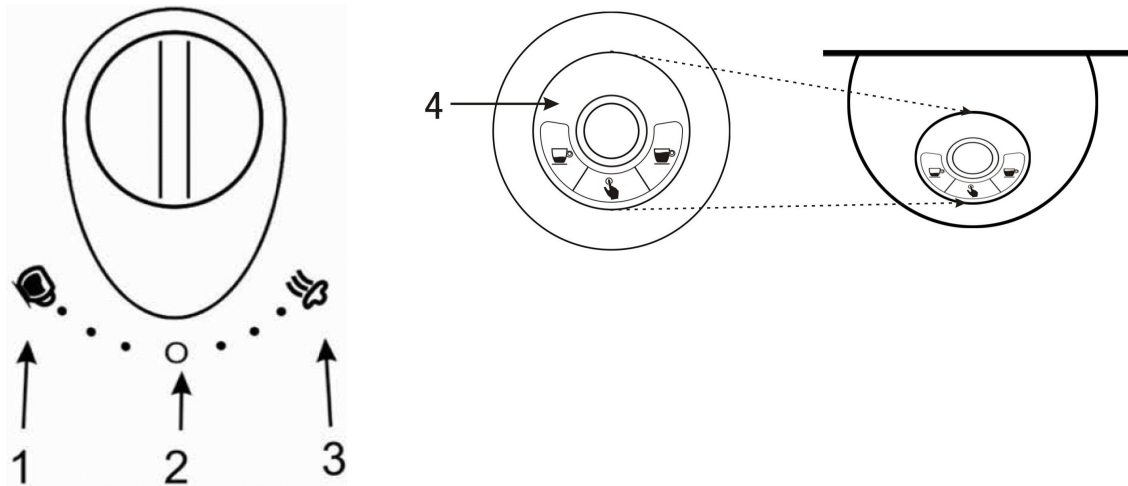

## Guide to Controls

1. Coffee position for beverage dispensing or self cleaning
2. OFF position
3. Steam position for hot steam and milk frothing
4. LED Indicator (circle)
  - a) Steady blue colour indicates ready to dispense coffee or other beverage
  - b) Steady red colour indicates ready to dispense steam
  - c) Blinking for either colour indicates pre-heating for either beverage or steam.
5. Buttons
  - a) Left: Press once to dispense small cup (30mL) or repeat to start/stop beverage flow
  - b) Middle: Start/stop steam dispensing
  - c) Right: Press once to dispense large cup (60mL) or repeat to start/stop beverage flow

## 1. Start up

Fill the water tank with fresh clean water, pure water is strongly recommended to avoid scale in the machine. The water level should be between the Min. and Max. positions. Switch on the machine at the On/Off switch and the machine will then be preheated. Check the following procedure for coffee/ espresso brewing or system cleaning before first use.

## 2. Coffee/Espresso brewing

Firstly, switch on the machine at the On/Off switch, and it starts preheating. Turn the Coffee/Steam selection knob clockwise to the Coffee position (cup icon). When the blue indicator is blinking it shows the machine is preheating; when the machine is ready, blue indicator stops blinking and is constantly illuminated.

Open the sliding capsule chamber cover and Insert the capsule into the capsule holder after aligning it according to its shape and orientation, then close the cover  
Press the left control button to dispense a coffee volume of 30ml, OR  
Press the right control button to dispense a coffee volume of 60ml.  
Turn the selection knob back to “0” position to stop dispensing coffee, and the round blue indicator is switched off.  
The capsule will automatically drop into the waste capsule collection container several seconds after the selection knob is turned back to the “0” (centre) position.

### 3. Steaming and Frothing

Make sure the sliding capsule chamber cover is closed, turn the Coffee/Steam selection knob counter-clockwise to the steam position (cloud icon), the Coffee/Steam indicator will change colour to red. When the red indicator is blinking it shows the machine is preheating;  
When it stops blinking, press the middle Steam button. Steam then begins to dispense from the steam nozzle continuously, and you can froth and/or heat milk.  
Turn the knob to the “0” position to stop it. You can also stop steam dispensing by pressing the middle control button again, but always remember to turn back the steam knob to the “0” position when you are finished using the steaming function.

**Note:**

*Do not wait too long before cleaning the steam wand. Milk deposits are hard to remove. Once the froth has been made, we recommend placing a cup of water under the steam wand and starting the steam dispensing function again for a few 1-2 seconds. This way, any residue of milk should be easily removed from the wand.*

### 4. To dispense hot water

Just repeat the coffee/espresso brewing procedure without inserting a capsule, and hot water will be dispensed.

### 6. Important Notes

- Do not remove move the water tank from the machine when the machine is operating.
- The capacity of the waste capsule collection container is limited, please empty the waste capsule container after a maximum of 12 capsules have been used since last emptying the container.
- Use only water in the appliance! Do not put any other liquids or foods in the water tank (reservoir).

## TROUBLESHOOTING

Problem	Solution
On/Off Switch not on	Check plug, main switch and fuses
No coffee dispensed	Make sure the capsule is properly positioned, capsule slot not obstructed, brewing chamber cover properly closed, water tank full and properly placed. Perform the priming procedure by turning Coffee/Steam selection knob to the off position, wait a few seconds, then turn it clockwise back to the Coffee position. Repeat if necessary.
Coffee not hot enough	Preheat cup (hot water without capsule), descale if necessary.
No hot water/steam	Remove steam nozzle and clean, descale if necessary.
Milk does not froth	Check the Coffee/Steam selection knob position, and clean the steam dispenser if necessary.
Milk for cappuccino not frothy enough	Dismantle the steam nozzle and clean all its parts. Use only cold, whole milk.
Noisy pump	Make sure the water tank is full and properly placed.
Capsule area leaking (water in capsule container)	Position capsule correctly. If leakage persists, contact the retailer or supplier of the machine.

## CLEANING AND MAINTENANCE

### 1. System Cleaning

To refresh the inside parts of the system, you can choose to repeat the procedure of coffee brewing several times and meantime try to brush the inside brewing chamber capsule holder with a soft brush between different times. Clean the casing with a soft damp cloth. The water tank, drip tray and used capsule collection container can be hand-washed only in warm soapy water then rinsed thoroughly. The coffee/beverage outlet can be removed for cleaning by rotating the vertical mark to the left. It may be placed in a secure place in the upper basket of a dishwasher. The outlet is re-installed by following the reverse procedure to removal.

*Note: Before attempting to clean the appliance, remove the plug from the power outlet. Do not immerse the machine or its power cable in water or other liquids. Allow the machine to cool before starting the cleaning procedure.*

### 2. Descaling

When indicated by "TROUBLESHOOTING" above, obtain a commercial decalcifier/descaler product and apply according to its accompanying instructions. After de-scaling is complete the dispensed de-scaling liquid should be discarded appropriately, and the machine flushed with drinking water prior to re-use.



## SPECIFICATIONS

Rated Voltage: AC 220-240V  
Rated Frequency: 50Hz  
Rated Power: 1,400W  
N.W./G.W.: 3.5/4.4kgs  
Pump Power: 48W  
Pump Pressure: 15-20 Bars  
Water Tank Capacity: 1.2L  
Drip Tray Capacity: 350ml  
Protection Class: I  
Product size: 35L x 18W x 27H cm



# WARRANTY DETAILS

## Warranty – One year replacement warranty

In addition to all statutory rights which you, the Purchaser, have under relevant laws in respect of this Kleenmaid appliance, during the first year of ownership as the original purchaser of this appliance, we guarantee that upon determination that any fault has been caused by defective material or workmanship, the appliance will be replaced free of charge, provided that the Purchaser must pay or otherwise arrange for transporting the appliance to, and collecting the replacement from, the original place of purchase.

## What this warranty does not cover

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for consequential damages from any malfunction.

This warranty does not cover consumable items or breakage caused by any kind of impact. In case of any breakage do not use your appliance.

## Purchaser’s responsibility

The Purchaser must at their own expense make the appliance available for inspection at the original place of purchase. We are not liable for any consequential damage, including that which may be incurred during de-installation, transport or re-installation.

## Warranty registration and Proof of Purchase.

Please complete warranty details below and retain together with your proof of purchase document.

When requesting service under this warranty the Purchaser agrees that Proof of Purchase of their appliance will be necessary in order to validate the warranty. Inability to provide Proof of Purchase even though this warranty is in place will not bind us to replace the appliance at no charge under this warranty. If no fault is found in an appliance returned to us under warranty we reserve the right to charge the Purchaser the reasonable costs of transport and handling associated with the return of their original appliance.

**Model Number** .....

**Date of purchase** .....

**For service assistance visit**  
[www.kleenmaidhelp.com.au](http://www.kleenmaidhelp.com.au)

## Other products available in the Kleenmaid range of appliances

Washing machines

Clothes dryers

Dishwashers

Ovens

Cooktops

Steam ovens

Microwave ovens

Built-in espresso coffee machines

Rangehoods

Compass Capital Services Pty Limited trading  
as Kleenmaid  
ABN 96138214525

Level 2, 204 Botany Road  
Alexandria NSW 2015

E: [help@kmaid.com.au](mailto:help@kmaid.com.au)  
[www.kleenmaid-appliances.com.au](http://www.kleenmaid-appliances.com.au)

 **kleenmaid**