


VIBRATION SPEAKER

User Manual



Connection Diagram:

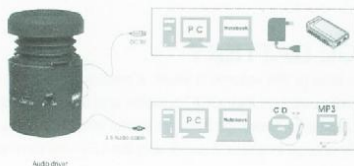

Hamburger Bluetooth Vibration Speaker

THANK YOU FOR PURCHASING THE VIBRATION SPEAKER!
WE APPRECIATE YOUR WILLINGNESS TO TRY SOMETHING NEW AND DIFFERENT IN SOUND TECHNOLOGY.

Precautions:

1. Remove the protective film from the bottom of the speaker while leaving the gel attached to the speaker. Keep the protective film and reapply it when not in use.
2. Your speaker will work by placing it on clean, hard and flat horizontal surface. Every placement will create a new sound! Have fun experimenting to find optimum placement within the room for the application you intend to use the speaker for.
3. Lightly press the top of the speaker to achieve a better connection between the gel and the sound surface.
4. Correctly connect the cable according to the Connection Diagram.
5. Do not attempt to open or disassemble this product.
6. It is normal for the speaker to get slightly warm after prolonged use or high volume usage.
7. To clean the gel, use a wet cloth to gently remove any dirt. Do not get water into the speaker.

Warning:

Do NOT place the speaker on non-horizontal surface to avoid the risk of falling down and damage.



Instructions:

Let's know the multifunction switch before operating the Vibration Speaker.

Multifunction Switch	V- <<	>	>> V+			
Mode \ Action	Rotate to left briefly	Rotate to left and hold	Press briefly	Press and hold	Rotate to right briefly	Rotate to right and hold
LINE IN	N/A	Volume Down	Pause	Changes mode	N/A	Volume Up
USB FLASH DISK	Previous Song	Volume Down	Pause	Changes mode	Next Song	Volume Up
FM RADIO	Previous Song	Volume Down	Scan	Changes mode	Next Song	Volume Up
BLUETOOTH	Previous Song	Volume Down	Microphone	Disconnect	Next Song	Volume Up

“BLUETOOTH” MODE...

1. Turn on the unit by sliding the side switch to the “Bluetooth” sign position. When LED blinks blue, the unit is ready to “pair” and waiting for phone and speaker to connect.
2. Activate the Bluetooth function of the phone and search Bluetooth device.
3. Select the Bluetooth device named “BT SPEAKER” and tell it to “pair”. If the phone requests you to enter a password, please enter “0000” and confirm the connection. After the phone shows “Connect successfully”, the LED stops blinking and turn blue. You now can play music from your phone or Music player.
(For some phones, it will show “Connect failed”, don't worry, it may have connected, try playing music. If you cannot play music, retry “paring” the phone to the speaker.)
4. For more actions, please refer to the instruction diagram of the multifunction switch above.

Mode Priority when the Multifunction switch is at “ON” position:

USB flash disk > FM radio > Line in

“USB flash disk” MODE...

1. Carefully insert a USB flash disk into the slot labeled “USB”.
2. Turn on the unit by sliding the side switch to the “ON” sign position, according to the mode priority, the unit will be in “USB flash disk” mode and the LED shines in pink, after several seconds the internal reader will play music in the disk automatically and the

LED will blinks in orange. If the unit is not in “USB flash disk” mode, please use the Multifunction switch to achieve.

3. For more actions, please refer to the instruction diagram of the multifunction switch above.

“FM RADIO” MODE...

1. In order to receive signals better, please use the USB cable as an antenna by inserting the mini USB plug into the unit.
2. Turn on the unit by sliding the side switch to the “ON” sign position,
 - a) If there is no USB flash disk in the unit, according to the mode priority, the unit will switch to “FM radio” mode; the LED will turn blue after several seconds pink.
 - b) If there is a USB flash disk in the unit, please use the multifunction switch to switch the unit to “FM radio” mode.
3. For the first use of the unit as a radio, please press the multifunction switch to search channels, after finishing searching, the unit will play at the lowest frequency automatically.
4. For more actions, please refer to the instruction diagram of the multifunction switch above.

“LINE IN” MODE...

1. Connect the mini USB cable to the unit, and then insert 3.5mm plug of the audio cable into the output devices, such as: mobile phone, projector, laptop, MP3, CD/DVD etc.
2. If the battery needs charge, insert the USB plug into a computer's USB port or an USB wall charger.
3. Turn on the unit by sliding the side switch to the “ON” sign position, and use the Multifunction to switch the unit to “Line in” mode, the LED will turn orange.
4. Play music from your audio player.
5. For more actions, please refer to the instruction diagram of the multifunction switch above.

RECHARGE BATTERY

When the LED is blue or the volume is weak, it means the battery needs to be charged. Please turn the side switch to the “OFF” position and then connect the USB cable to the PC, laptop or DC adapter to charge the unit. When charging, the LED turns blue. The battery will be fully charge in about 2 hours and the LED will turn red.