

QP-5588



Copyright 2009 Jaycar Electronics Pty Ltd

User Manual Amendment

Product: QP-5588 LED Current Meter
Batch: E41029
Date: 16th April, 2013

Wiring Diagram:

1. Note: The Load and Load positive connection to the DC Supply positive are not shown below.
2. Wire the device according to the diagram with the 50A shunt connected in the negative supply lead. Refer User Manual.
3. The Panel Meter negative supply (Pin2) must be connected to the 50A shunt where shown, otherwise errors will result in the reading.
4. Make sure all high current cables are appropriately sized and capable of carrying the load current.

