

**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

**- Children should be supervised to ensure that they do not play with the appliance.**

# TUSCANY

## Instruction Manual



**Model: XH-34**

**230-240 volts 50hz**

**Before using this unit, please read these instructions completely.**

2. Clean the Skillet plate while still warm after use by using a soft damp cloth, paper napkin or soft sponge.
3. For excess soiling, after the unit is cool, wash the Skillet plate with a soft sponge moistened with a non-abrasive kitchen cleaner while flushing with warm water.
4. After completion of cleaning, completely wipe dry with a soft cloth. Clean the Skillet after each use.
5. To clean the Temperature Control Probe wipe with a dry soft cloth or paper napkin.

#### **CAUTIONS AND SUGGESTIONS**

1. The Skillet surface is non-stick coated, so be careful in handling.
2. DO NOT use sharp metal utensils or knives to cut food on the Skillet surface.
3. DO NOT place the Temperature Control Probe on the Skillet surface. it may scratch or damage the surface.
4. DO NOT use cleansers, nylons or metal brushes on Skillet surface. It may scratch or damage the surface.
5. When moving the unit, always grip the handles.
6. DO NOT wash the Skillet with the Temperature Control Probe connected.
7. To season the non-stick properties of the Skillet surface, apply a light coat of cooking oil. Repeat

#### **IMPORTANT SAFE GUARDS**

**When using electrical appliances , basic safety precautions should always be followed including the following:**

- 1. Read all Instructions.**
- 2. Do not touch hot surfaces. Use handles or knobs.**
- 3. To protect against electric shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.**
- 4. Close supervision is necessary when any appliance is used by or near children.**
- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.**
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.**
- 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.**
- 8. Do not use outdoors (this item may be omitted if the product is specifically designed for outdoor use).**
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.**
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.**
- 11. Extreme caution must be used when moving an appliance**

periodically to maintain the non-stick properties.

5

12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to <sup>2</sup>off,<sup>2</sup> then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Use only PO-0700 temperature controlling plug  
Manufactured by D G King Way Enterprise Co., Ltd.

#### **SAVE THESE INSTRUCTIONS**

#### **SPECIAL INSTRUCTION**

#### **THIS UNIT IS FOR HOUSEHOLD USE ONLY**

#### **SHORT POWER SUPPLY CORD INFORMATION**

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

containing hot oil or other hot liquids.

2

#### **USING YOUR ELECTRIC SKILLET**

Before using for the first time, wash Skillet in warm soapy water, rinse and dry. **DO NOT IMMERSE** the UNIT in any liquid. **DO NOT IMMERSE** the Temperature Control probe or let the probe come in contact with any liquid.

1. Make sure Temperature Dial is set to the “Min” Position .insert the Temperature Control Probe into the Skillet so the two terminal pins on the Skillet are fully inserted into the probe. if the Temperature Control Probe is not completely inserted , abnormal heating may occur, resulting in accident or damage.
2. Plug the cord in a 230-240 volt, 50HZ AC outlet only.
3. During cooking, the pilot light may cycle on and off indicating the desired temperature is being maintained.
4. After use, turn the Temperature Dial to the “OFF” position, unplug unit from outlet and then unplug the Temperature Control Probe from the Skillet.

#### **CLEANING YOUR ELECTRIC SKILLET**

1. After use, turn the Temperature Dial to the “Min” Position,

unplug the cord from the electrical outlet and remove the Temperature Control Probe from the Skillet.

**NOTE:** When removing the plug from the outlet, be sure to grip the plug unit with your hand instead of gripping the cord.