

User Manual

1 GENERAL	33
General Information	33
Symbols	33
Product Life Cycle	33
Product Labeling.....	33
User Weight Limitation.....	33
Technical Data	34
2 SAFETY	34
Intended Use.....	34
General Warnings.....	35
3 USAGE	36
Using the Rollator.....	36
Operating Position.....	36
Walking	36
Sitting Down	36
Rise to a Standing Position.....	36
Folding the Rollator.....	36
Transport Position.....	37
Using the Height Adjustment Memory	37
Adjusting the Handle Height	38
Adjustment of Brake Effect.....	38
Using the Hand Brake.....	39
Using the Parking Brake	39
Using the Kerb Climber	39
Mount Kerb Climber on the Opposite Side.....	39
Mounting of Basket.....	40
Seat Cushions	40

4 CARE AND MAINTENANCE	41
5 AFTER USE	41
Disposal.....	41
Reuse	41
6 WARRANTY	41
Warranty	41

I GENERAL

I.1 General Information

Study the operating instructions carefully before use. The person who prescribes the product or who is otherwise responsible for the user must ensure that the product is suitable for the user.

I.2 Symbols

Signal words are used in this manual and apply to hazards or unsafe practices which could result in personal injury or property damage. See the information below for definitions of the signal words.



WARNING

Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Gives useful tips, recommendations and information for efficient, trouble-free use.



This product complies with Directive 93/42/EEC concerning medical devices.

The launch date of this product is stated in the CE declaration of conformity.


I.3 Product Life Cycle

The expected product life cycle of this product is 5 years when used in accordance with safety instructions, maintenance intervals and correct use, stated in this manual. The effective product life cycle can vary according to frequency and intensity of use.

I.4 Product Labeling

The label contains all important technical information regarding **DOLOMITE JAZZ**.

- 1: Article number
- 2: Product name
- 3: Serial number
- 4: Date of manufacture
- 5: Max. user weight
- 6: NB! See user manual.
- 7: In- and outdoor rollator.
- 8: Max. width of rollator.
- 9: Manufacturer's name.
- 10: Height adjustment range

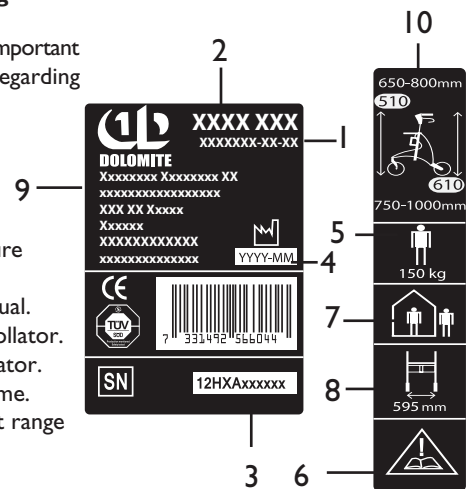

I.5 User Weight Limitation

Your walker should only be used as a walking aid!
User's max. weight: **Jazz** 150 kg. *

INVACARE will not accept responsibility for adaptations, faulty repairs, etc, that are outside their control.


* The weight limitation includes the contents of the basket and the weight of the user whether standing or sitting.

1.6 Technical Data

Dimensions Jazz	Model 610	Model 510
A	595	595
B	750-1000	650-800
C	450	450
D	610	510
E	690	690
Width when folded	215	
Weight:	7,8 kg	7,5 kg

All dimensions are in mm

Diameter front and rear wheels: 200 mm

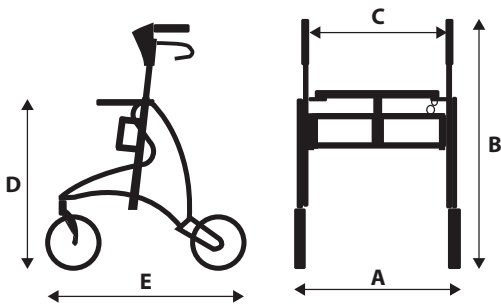

2 SAFETY

- ⓘ Check ALL parts for shipping damage. If shipping damage is noted, DO NOT use. Contact carrier/dealer for further instruction.

2.1 Intended Use

The rollator is intended to support a person during walking and may also serve as a resting seat. Further the rollator is intended to carry a load either in a specially designed basket or on a tray.

The user shall be instructed how to use the rollator. This shall include the use of the features of the rollator and the restrictions in use. The user shall also be notified of the warnings for use given in the user manual.

The rollator is only intended for use indoor in living or public areas or outdoor. The rollator is not to be used under water in e.g. pools or open-air bathe, neither in hot areas as e.g. saunas.

2.2 General Warnings



WARNING

Exercise caution when walking on sloping / slippery ground and on uneven surfaces.



WARNING

Never lift the rollator in the folding strap when it is in use.



WARNING

Not to be used for standing on or as a wheelchair.



WARNING: Risk of falling

Be careful when walking rearwards over obstacles.



WARNING:

Never sit and push with your feet.



WARNING

Always sit on the rollator from the correct side, i.e. do not sit down from the frontside of the rollator, to avoid getting hurt by the holders for the basket.



WARNING

Do not go up or down stairs with the rollator.

Do not use the rollator on escalators.

Do not under any circumstances stand on the walker.

Do not let children play with the rollator, risk of injuries.

If the push handles or the seat are exposed to extreme temperature (above 41°C) there might be risk for first degree burns.

The walker must be fully unfolded when used as walking support.

Be careful when using long skirts, the clothes might get stuck in the wheels.

Be careful if the wheel turns 90 degree and stops against an obstacle, there might be a risk of falling.

Use seat for stationary seating only, both brakes must be in parking position when the rollator is used as a seat.

Never sit on the rollator on sloping ground.

The parking brakes must be in braked position when the rollator is used as a support when getting up, from a chair for example.

Loads must only be transported in the basket or on the tray.

Be careful when there is a heavy load in the basket.

Max load in the basket is 7 kg and on the tray is 5 kg.


3 USAGE

3.1 Using the Rollator

We do not recommend that the rollator is issued to anyone without first carrying out a full assessment of their specific needs. It is important that the user is given the necessary support by the rollator as prescribed by a qualified professional. This is both for the safety of the user and also their recovery pattern.

3.2 Operating Position

Release the rollator by pulling the push handles outwards. Press on the seat in order to lock the rollator in operating position.

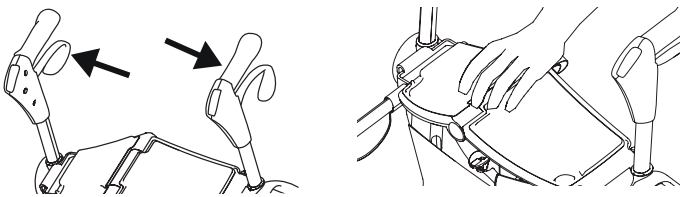


WARNING

Always make sure that the lock is engaged before using the rollator.

3.3 Walking

Place the rollator a bit in front of you and take a step towards it whilst using the hand grips for support.

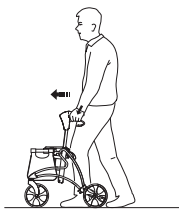


3.4 Sitting Down

Stand in front of the chair with the rollator, the back of the legs should touch the chair. Place the hands on the arms of the chair, lean forward slightly and sit down carefully.



3.5 Rise to a Standing Position

Place the rollator in front of you, use the armrests of the chair as support and rise carefully to a standing position. Once steady in a standing position, transfer hands to the hand grips of the rollator.

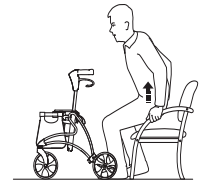


WARNING

Never use the rollator to pull yourself up from a sitting position due to the tipping risk!


3.6 Folding the Rollator

1. Stand to the side of the rollator.
2. Lift the folding strap on the seat.
3. Press the push handles inwards to fold the rollator.

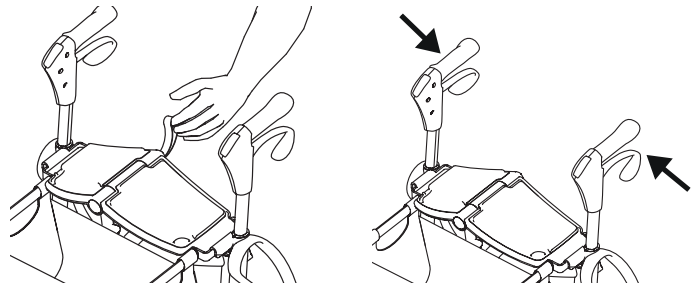

3.7 Transport Position

Lift the seat in the folding strap and press the push handles inwards to fold the rollator. Close the locking mechanism (A) to lock the rollator in folded position for transporting.

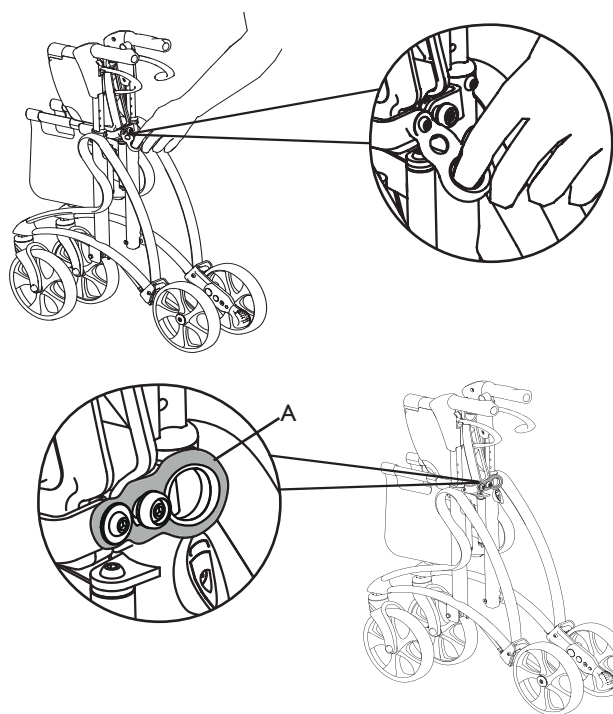

WARNING


Be careful when folding the rollator. Risk of pinching.

3.8 Using the Height Adjustment Memory

When adjusting the handle height for the first time, the built in height adjustment memory can be used.


To access the height memory for the first time, raise the push handles to the highest position to reveal the adjustment screw (A). Loosen the screw of the height adjustment memory, but do not remove it. Adjust the handles to a suitable height and retighten the screw. Push the handles slightly downwards to fix the height. Suitable tool to use is a 1,5 mm hexagon key (not included).

- ❗ If the screw is removed by mistake and the adjustment screw can not be accessed, raise the handle to the highest position to make the screw visible again.

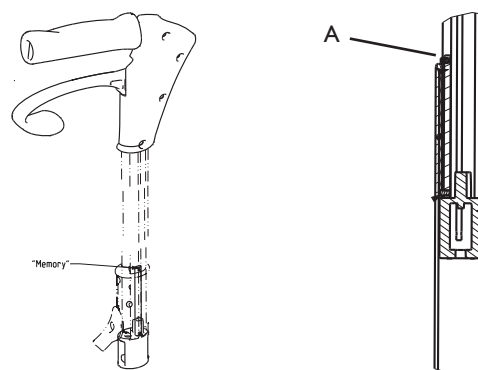


3.9 Adjusting the Handle Height

Stand behind the rollator. The handles should normally be positioned at wrist height.

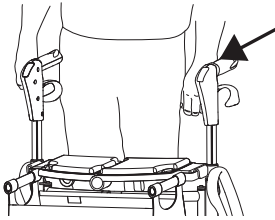


Loosen the handlebar by pushing the locking lever (A) upwards and then adjust the handles to a suitable height. Lock the handlebars by pushing the handle slightly downwards, a distinct "click" is heard when the handle is locked in its position. Repeat the procedure on the other side.

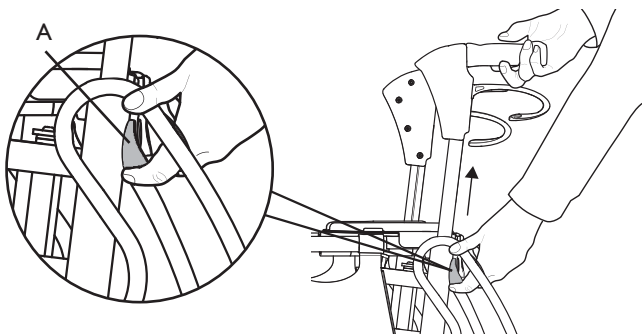

3.10 Adjustment of Brake Effect

If braking effect is poor adjust the brake cable. Suitable tools to use are fixed spanners, 8 mm for adjustment and 10 mm for the locking nut (not included).

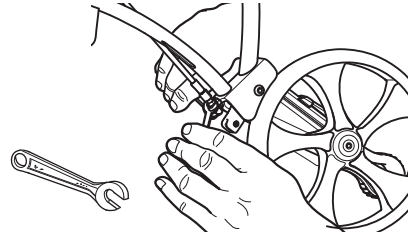


WARNING

Make sure to tighten the lock nuts after adjustment.

3.11 Using the Hand Brake

Apply the brakes by pulling both brake handles upwards.

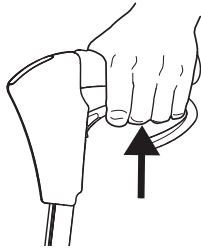


3.12 Using the Parking Brake

Press the brake handles carefully downwards to apply the parking brakes. A distinct click indicates that the brake is in the correct position.


i It is important that both brakes are put into parking position.

To release the brake pull the brake handle upwards.

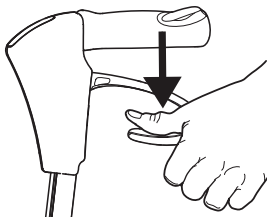

3.13 Using the Kerb Climber


Use the kerb climber to make it easier to mount pavements etc.

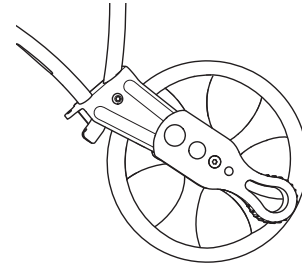

3.14 Mount Kerb Climber on the Opposite Side

i The kerb climber can be mounted on both the left and the right side.

To mount the kerb climber on the opposite side, loosen the screw (A) and remove the kerb climber. Remount the kerb climber on the opposite side (B) and tighten the screw with a 4 mm hexagon key.

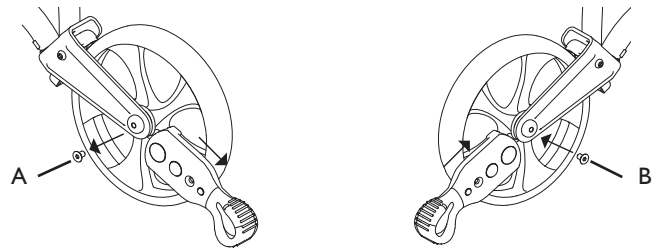


WARNING: Risk of falling

When using the kerb climber, make sure that the rollator does not roll away uncontrolledly after crossing over an obstacle.

3.15 Mounting of Basket

Mount the basket by pushing it onto the tubes under the seat (A). When the attachment of the basket covers the red marking on the tubes (B), the basket is correctly mounted.

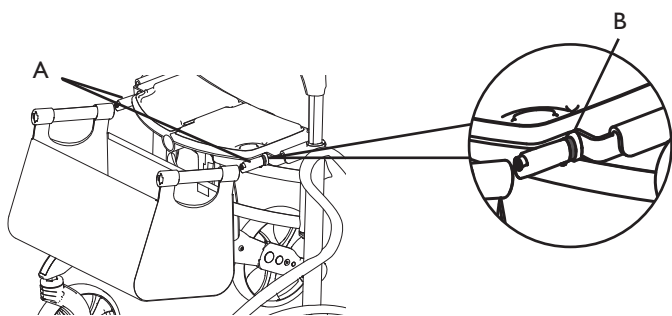


To remove the basket from the rollator, lift the handles of the basket slightly upwards and pull the basket outwards.



WARNING: Risk of imbalance/falling
Always lock the brakes before mounting/removing the basket.

3.16 Seat Cushions

The seat cushions on the seat can easily be removed if needed. To remove the seat cushions, pull the cushion upwards on the marking of the cushion (A).

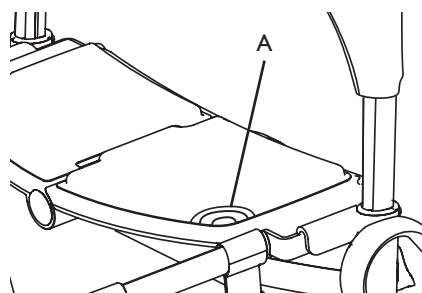

WARNING: Risk of imbalance/falling
If the seat cushions are removed, be careful not to get stuck with the clothes on the velcro.

4 CARE AND MAINTENANCE

- ❗ Maintenance should be done at least once a year. Do not use an abrasive detergent, cleaner or cloth to clean or dry the walker.

To ensure good performance and safety you should regularly check that the following is carried out:

- Clean the rollator with solvent-free household cleaner. Keep the wheels clean.
- Ensure that screws and adjustments are properly tightened.
- Immediately contact the nearest dealer if a fault should appear.
- Never use a defective walker. Do not attempt repairs yourself!
- Verify brake operation. If brake adjustment is required, see section 3.10 in the user manual.
- If hand grips are loose do not use the rollator. Change hand grips according to the service instructions which can be obtained from your Invacare representative.
- Periodically inspect the castors tightness, wear and damage.
- Make sure that the wheels are free of hair, lint and other debris.

5 AFTER USE

5.1 Disposal

When the product can no longer be used, it and its accessories as well as the packaging material should be sorted in the correct way. The individual parts can be separated and handled according to this list specification:

Frame: Polyester powder coated aluminium.

Handle bars: Anodised aluminium

Handgrips: TPE

Wheels: Polypropylene with threads of TPE

Plastic parts: material according to marking (PA, PP, PE)

Please be environmentally responsible and recycle this product through your recycling facility at its end of life.

5.2 Reuse



WARNING: Risk of Injury

Always inspect the product according to the service instructions before transferring the product to a different user. If any damage is found do not use the product. Otherwise injury may occur.

The service instructions can be obtained from your Invacare representative.

6 WARRANTY

We supply a 2 year guarantee ** from the date of delivery. Damage caused by wear to items such as wheels, handles and brakes is not covered by the guarantee. Damage that arises due to abnormal use is excluded. Damage caused by users who weigh more than 150 kg is excluded. Maintenance and operating instructions must be observed for the guarantee to be valid.

- ❗ ** Deviations may occur due to local agreements.