



EN

AIR PURIFIER

Purissimo



OPERATING INSTRUCTIONS

Read the instructions carefully before operating or servicing the air purifier.
Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage. Store these instructions in a safe place for future reference.

GENERAL OPERATING AND SAFETY INSTRUCTIONS

- **This appliance is a highly efficient air purifier designed for domestic use only!**
- Use this air purifier only as outlined in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or malfunctions.
- The unit must be placed in a vertical position at all times.
- Ensure that the available power source conforms to the required voltage and frequency (220 - 240V/50Hz).
- Make sure that the plug is fully inserted. Do not use multiple adapters. Do not touch the plug with wet hands. Make sure that the plug is clean.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This air purifier can be used by children aged 8 years and older and by persons with reduced physical, sensory and mental abilities, or who are not familiar with its operation, under the supervision or instruction of a person responsible for their safety, so that they are fully aware of the attendant risks.
- Do not allow the unit to be cleaned or serviced by unsupervised children.
- **Disconnect the main power when the appliance is not in use or during cleaning operations. Keeping the appliance plugged in may cause electric shocks or accidents.**
- To disconnect the appliance, set the switch to OFF and remove the plug from the socket. Pull on the plug only. Do not pull the cord.
- Do not bend, drag or twist the cord, or apply force to remove it. **Do not operate the unit if its cable or plug are damaged; doing so can cause fires or electric shock.** If the power cord is damaged, it must be replaced by a service centre.
- **Do not place heavy objects on the appliance.**
- **Do not use the appliance on unstable or sloping surfaces.**
- The air purifier must be placed **at least 50 cm** from the wall or from other obstacles, to ensure proper heat dissipation.
- **Close all open windows to maximise air purification efficiency.**
- **Do not insert objects or sharp instruments into the air outlet grille.**
- **Do not cover the air intake and outlet grilles in any way.**

 
WARNING!

In the event of an anomaly, switch the appliance off and unplug it immediately. Do not dismantle, repair or modify this product freely. In the event of a malfunction, contact the after-sales service centre directly.

- Do not immerse the power cord, plug or any other part of the appliance in water or other liquids.
- Do not expose the air purifier to direct sunlight.
- Keep the appliance well away from sources of heat which could cause plastic parts to become warped.
- Do not spray insecticides, oils or paints near the appliance; doing so may damage its plastic parts or start a fire.
- **Keep flammable gases and oils away from the appliance!**
- **Do not move the appliance while it is operating, as this may cause malfunctions.**


DESCRIPTION OF PARTS

FRONT VIEW

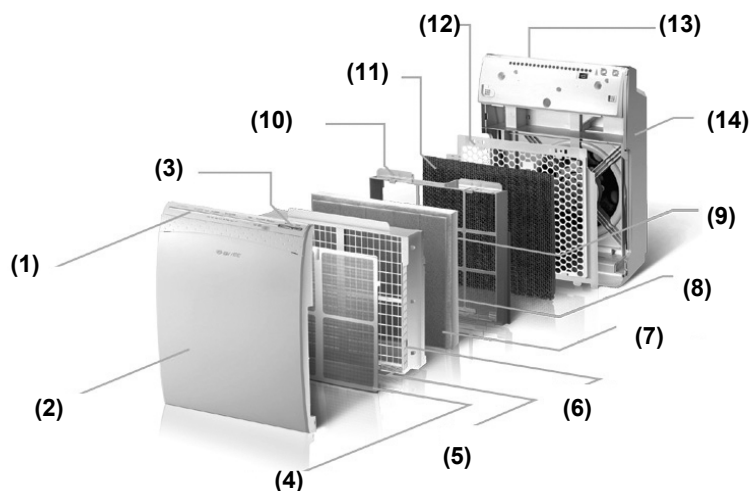

- 1) CONTROL PANEL AND DISPLAY
- 2) FRONT PANEL
- 3) ON/OFF BUTTON
- 4) PRE-FILTER
- 5) FILTER FRAME
- 6) AIR INTAKE
- 7) COTTON PRE-FILTER
- 8) HIMOP FILTER
- 9) HEPA FILTER
- 10) FILTER FRAME
- 11) ACTIVATED CARBON FILTER
- 12) FILTER SUPPORT
- 13) IONISER
- 14) REAR SECTION

 REAR VIEW

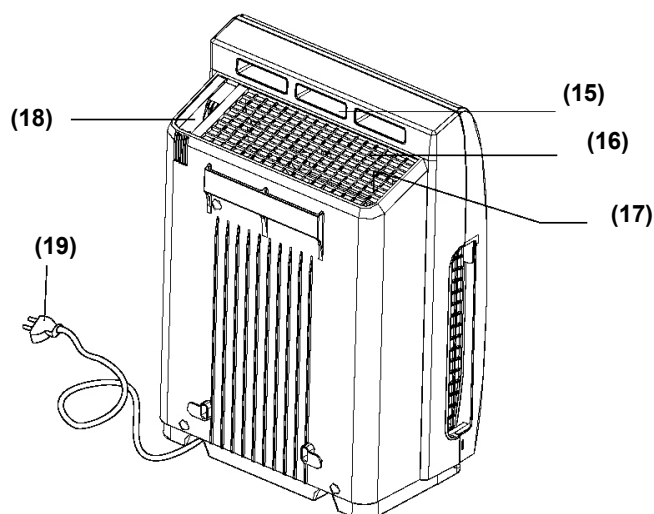

- 15) HANDLE
- 16) AIR DISCHARGE
- 17) IONISER/PLASMA
- 18) REMOTE CONTROL SLOT
- 19) PLUG

PRE-FILTER. Its main function is to filter the coarsest particles, which consequently allows for extending the life of the HEPA filter.

COTTON PRE-FILTER. It is capable of decomposing odours in the air.

 
HEPA FILTER. It can filter particles with a diameter above 0.3 microns and effectively eliminates pollen, smoke, animal hairs, mould and dust.

HIMOP (High Efficiency Multi Oxidation Porcelain) FILTER. Made of ceramic and biopolymers, it is endowed with strong oxidising properties for destroying odours and toxic gases in the environment, such as formaldehyde.

IONISER/PLASMA. Generates a large amount of negative ions. Household air is filled with positive ions generated by many appliances such as television sets and radios. Using the ANION mode helps to release plenty of negative ions which naturally abound in areas renowned for their high well-being, such as mountainous areas. The air becomes fresh and crisp, just like mountain air.

OPERATING INSTRUCTIONS

APPLIANCE START-UP

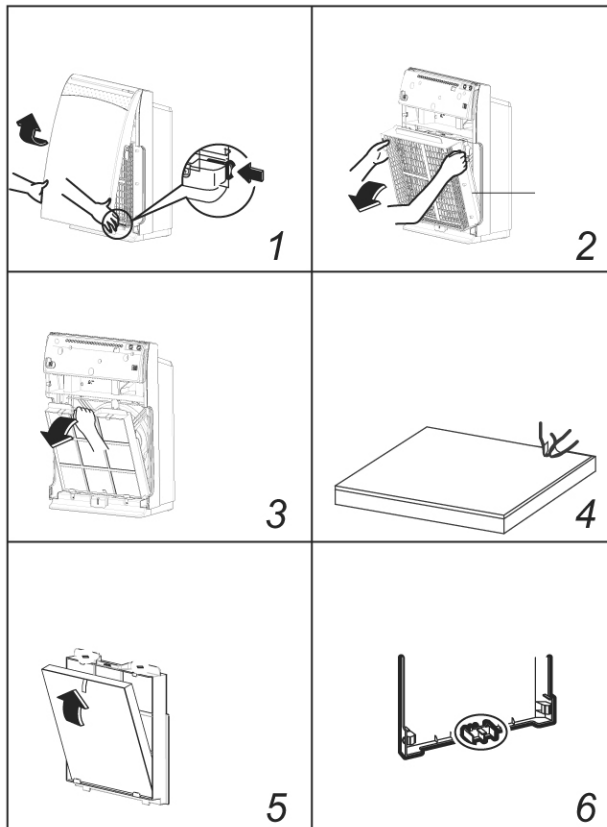


Place the product on a flat and stable heat-resistant surface, at least 1 metre away from flammable or heat-sensitive materials and 50 cm away from walls or other objects. Connect the power cord to a suitable electric socket (220-240V/50Hz). Remove the plastic seal from the HIMOP + HEPA filters prior to using the appliance, and place it inside the air purifier as shown in the adjacent sequence.

REMOTE CONTROL OPERATION

Insert the batteries into the remote control, while respecting the indicated polarities.

 
Only use type CR2025 batteries. Remove the batteries if the remote control is not used for a month or longer. Do not attempt to recharge the batteries. Change all batteries at the same time. Do not throw the batteries into a fire, as they may explode.

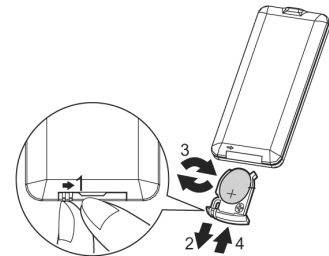


INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC

Please replace the battery when flat: at the end of its working life, the battery must not be disposed of together with unsorted waste. It must be delivered to appropriate separated waste disposal facilities or to dealers that provide a similar service. Separate waste disposal of batteries prevents potential negative effects on the environment and human health due to inadequate disposal, and also allows for recovering and recycling their constituent materials, resulting in significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the batteries. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.

 
If you do not expect to use the remote control for a long time, store it in its appropriate slot on the side of the air purifier.

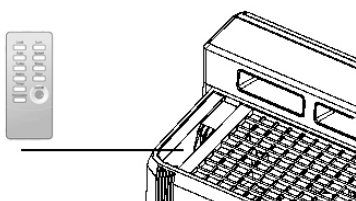

 For optimal operation of the remote control, point the head of the transmitter towards the receiver located on the air purifier.

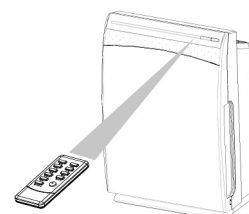

CONTROL PANEL AND REMOTE CONTROL

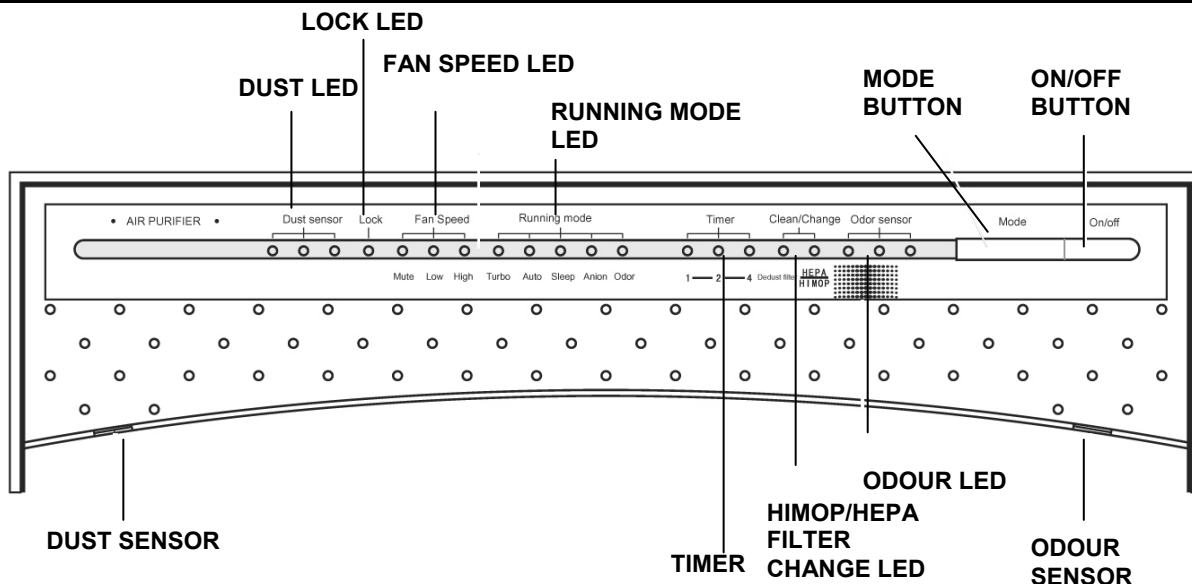 

ON/OFF BUTTON: press the ON/OFF button to turn the appliance on and off.

The **MODE** button on the air purifier allows for manually setting the following modes: **AUTO-TURBO-SLEEP-ANION-ODOR**.

This button cannot be used to set the ventilation mode. The speed is adjusted automatically.



BUTTONS ON THE REMOTE CONTROL:

ODOR BUTTON: press the ODOR button to neutralise odours at the maximum speed.

SLEEP BUTTON: press this button for the appliance to operate more silently. The fan speed will be set to the minimum level.

SPEED BUTTON: press this button to adjust the fan speed according to the following sequence:

Mute → Low → High
 ↑ ← → ↓

LUM BUTTON: press this button to adjust the LED luminosity from lower to higher.

ELECTROSTATIC BUTTON: not operational.

TIMER BUTTON: press this button to set the timer to 1 – 2 - 4 hours.

When the appliance is off, the timer switches it on; when the appliance is on, the timer switches it off.

ANION BUTTON: when pressed, it allows for emitting negative ions. The fan speed will be set to the minimum (Low) level.

TURBO BUTTON: maximum air purifying function. The fan speed is set to the maximum level and cannot be adjusted.

LOCK BUTTON (CHILD SAFETY): press this button for 2 sec. to lock the buttons on the appliance. Press again to unlock the buttons.

AUTO BUTTON: the speed is adjusted automatically.

MEMORY FUNCTION: the air purifier maintains its settings after a power failure.

This button cannot be used to set the ventilation mode. The speed is adjusted automatically.

CLEANING AND MAINTENANCE

MAINTENANCE OF THE AIR PURIFIER'S OUTER SURFACE



Warning

Always pull the air purifier's plug out of the power socket before cleaning it, to prevent electric shocks or malfunctions.



Warning

 
Do not wet or immerse the air purifier in water, as this may cause electric shocks.

Use a damp and soft cloth to clean the outer surface of the air purifier.


Do not use solvents, petrol, xylene, talcum powder or brushes to clean the unit: these may damage the surface or colour of the casing.

MOUNTING AND REASSEMBLING THE FRONT PANEL AND FILTERS


1. Grip the lower part of the front panel and pull it towards you. When the front panel detaches, the appliance switches off automatically.

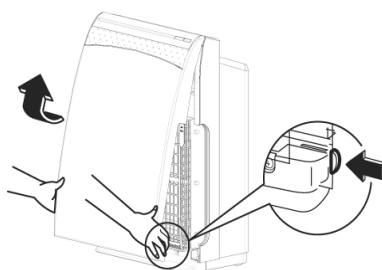

 
2. After removing the front panel, remove the filter unit. Use both hands to pull the filter support towards you. Clean the pre-filter using a vacuum cleaner or wash it with clean water at a temperature below 40°C. DO NOT USE ALCOHOL, BENZENE OR OTHER AGGRESSIVE PRODUCTS.

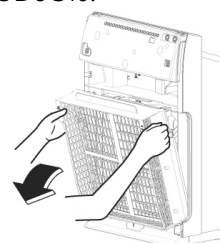

 
3. Remove the HIMOP filter locking device, by pressing upwards the tabs on the front part and pulling the fabric tabs towards you.

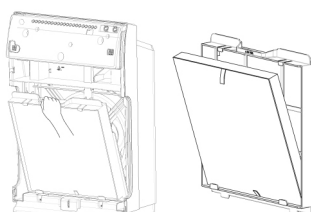

 4. Remove the activated carbon filter.

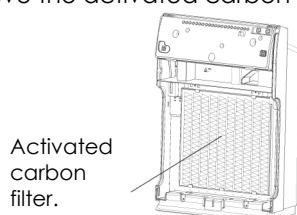

 5. Reinstall the filters.

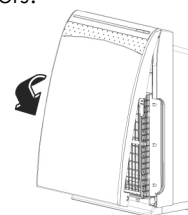

CLEANING

1. Cleaning the casing.

Use a damp and soft cloth to clean the outer surface of the appliance.

Do not use excessively hot water, solvents, petrol or other aggressive chemical compounds, talcum powder or brushes: these may damage the surface or colour of the casing.

Remove stains using lukewarm water with a little neutral detergent.

Do not pour water onto the air purifier to clean it, as this may damage the internal components or cause a short circuit.

WHEN THE FILTERS ARE DIRTY, THE CLEAN/CHANGE INDICATOR LIGHT ON THE PANEL WILL SWITCH ON.

2. Cleaning the pre-filter.

For improved efficiency, the pre-filter should be cleaned regularly. First use a vacuum cleaner then water to wash the pre-filter. Use neutral detergent if the pre-filter is very dirty. Put the filter back into place after cleaning it and leaving it to dry. Press the MODE button for 5 seconds: the CLEAN indicator light will switch off.

3. Cleaning the sensors.

Use a vacuum cleaner to remove dust from the access openings of the ODOUR SENSOR and DUST SENSOR.

4. Cleaning the cotton, HIMOP and HEPA filters.

Clean the cotton filter every month: first clean the surface using a vacuum cleaner then leave to dry under sunlight for 3-5 hours.

The replacement frequency of the cotton filter – ranging from a few months to 1 year – depends on the air quality. Normally it must be replaced every 3 months.

The air purifier is supplied with 3 cotton filters.

When the CHANGE indicator light switches on, the HIMOP+HEPA filters must be replaced.

Once the HIMOP+HEPA filters have been cleaned, press the MODE button for 5 seconds and the CHANGE indicator light will switch off.

Be careful when replacing the cotton filter. The blue surface must be facing the outside, the light surface must be facing the HIMOP+HEPA filters. Attach the cotton filter firmly to the HIMOP+HEPA filters.

 
5. Cleaning the activated carbon filter.

The carbon filter lasts 2-3 years. When the activated carbon filter smells, remove it and place it under sunlight for 3-5 hours then mount it back on. If the odour persists, replace the activated carbon filter.

WARNING: DO NOT WASH THE COTTON, ACTIVATED CARBON, HIMOP AND HEPA FILTERS WITH WATER.

6. Cleaning the dust sensor.

Use a vacuum cleaner to remove dust from the sensors.

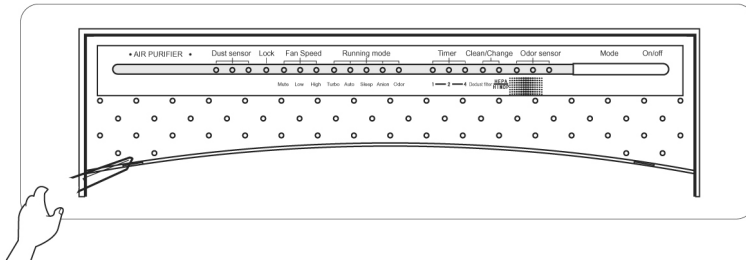

INFORMATION ON CORRECT DISPOSAL OF THE PRODUCT ACCORDING TO EUROPEAN DIRECTIVE 2012/19/EU ON THE DISPOSAL OF ELECTRICAL AND ELECTRONIC WASTE MATERIALS'

This appliance must not be scrapped with domestic waste at the end of its life cycle. We call your attention to the crucial role played by the consumer in the reuse, recycling and other forms of recovery of such waste.

The dismantled appliance, with its components collected separately, must be delivered to the local waste disposal facility or returned to the dealer free of charge when purchasing a new equivalent appliance.

Sorted disposal of electric and electronic equipment prevents potentially negative consequences on the environment and human health due to improper scrapping, and also allows the constituent materials to be recovered and recycled, with significant savings in terms of energy and resources.

The sorted disposal requirement is indicated by the crossed dustbin symbol affixed to the product.





improve your life

www.argoclima.com