



# Spider MT502 Analog Phone

USER MANUAL

---



---

## INDEX

---

Overview	.....	Page 03
Connecting the Spider	.....	Page 04
Using the Spider	.....	Page 05
Dialing	.....	Page 05
Incoming Call	.....	Page 05
During A Call	.....	Page 06
Device Menu	.....	Page 07
External Mic/Speaker	.....	Page 11
Daisy Chaining	.....	Page 12
Specifications	.....	Page 14
Warranty	.....	Page 15

---

 
## SPIDER 502 Analog Phone OVERVIEW

---

The Spider is a high-quality conference speakerphone that will turn any room into a professionally sounding conference room. It has an exceptionally large pickup and broadcasting range, yet is small in size and discrete in design.

The Spider utilizes multiple microphones, a uniquely designed speaker, and a powerful DSP to achieve commanding performance.


This guide will help you learn how to use your conference phone and will reveal all the features that come with it.

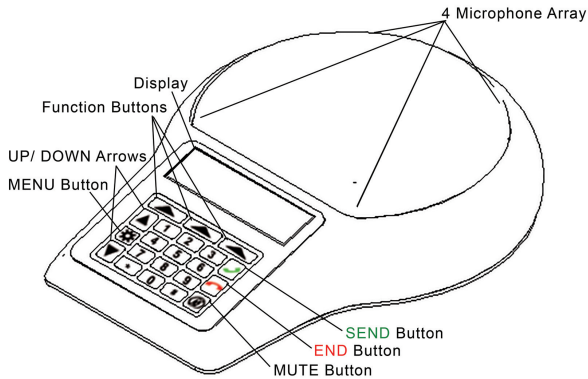

---

## CONNECTING YOUR SPIDER

 ---

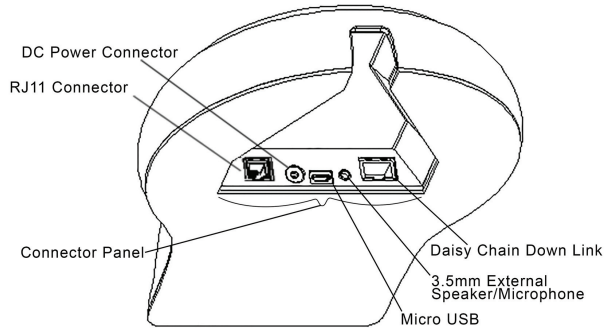

---

## CONNECTING TO A COMPUTER

---

This connection is for any session using your computer, such as Voice over IP applications (Skype, Vidyo, etc.).

- ▶ Using the USB cable provided, plug the micro USB side of the cable into the Spider (USB connector located on the connector panel below the unit).
- ▶ Plug the USB end of the cable into any USB port on your computer.
- ▶ Connect the provided Power Supply to the AC connector located on the connector panel below the unit. Once you plug the Power Supply into a power source, your Spider is ready for use.

No additional drivers or steps are needed. However, we do recommend downloading and using our "Phoenix Audio Setup Utility" for optimal audio control and performance. This utility can be found on our website: [www.phnxaudio.com/support/downloads](http://www.phnxaudio.com/support/downloads)

## CONNECTING TO AN ANALOG PHONE LINE

---

For any session using a PSTN / POTS / ANALOG phone line.

- ▶ Using the telephone cable provided, plug one end of the cable into the Spider's RJ11 telephone jack (TEL connector located on the connector panel below the unit).
- ▶ Plug the other end of the cable directly into your telephone line wall socket.
- ▶ Connect the provided Power Supply to the AC connector located on the connector panel below the unit. Once you plug the Power Supply into a power source, your Spider is ready for use.




---

## USING THE SPIDER

---

### DIALING

---



- ▶ If keypad is dimmed, press any key to turn on the backlight
- ▶ Dial the desired number
- ▶ Press  **OR**
- ▶ Press  to get a dial tone
- ▶ The screen will display the last dialed number
- ▶ Either select to redial by pressing  **OR** dial the desired number

### INCOMING CALL

---

When the Spider receives an incoming call, the display will notify you of the caller ID, a ringtone will play, and the grill lights will flash blue.

### TAKE CALL

- ▶ Press  **OR** the left function button 

### REJECT CALL

- ▶ Press  **OR** the right function button  (this will hang-up the call)

### SILENCE CALL

- ▶ Press the middle function button  (the Spider will continue ringing, only without the audible ringtone)

## DURING A CALL

---

### DIRECTIONAL ARRAY

During a call the Spider uses proprietary beamforming technology to locate a legitimate voice source and steer an array towards it. This allows the Spider to focus on the speaker in the room and to cancel out all other noises.

The beamforming process is dynamic and adjusts the direction of the array when the source of sound changes or moves. When in a call and voice is detected in the room, a single or multiple blue lights located under the grill will indicate which direction the Spider's audio beam is focusing on. This is the direction that will be heard best by the far-end of the call (the person you are talking to).

**NOTE:** This function can be disabled (see page 9).



### CALL TIMER

In the top left corner of the screen you will see a timer that will start when your call is picked up and will stop when the call is disconnected.


### CALLER ID


The center of the screen will display the in-session phone number. If that number has a caller ID name, the name will be displayed.

### VOLUME CONTROL


Use the  and  buttons on the keypad to control the speaker volume.

### MUTE

In order to mute the Spider's microphones during a call, press the  button located on the bottom right of the keypad. When muted, a MUTE symbol will appear on the screen and all the grill lights will flash red.

To UNMUTE, just press the  button again.

## END CALL

▶ Press the  button **OR** the left function key .  
All grill lights will show solid red for three seconds.


---

## DEVICE MENU


---

To enter the menu, click on the  button. While inside the menu:


### ENTER

 
The  button functions as ENTER and will take you one step forward in the menu.

### BACK

The Right function key  is BACK and will return you one step back in the menu.

### EXIT

The  button will EXIT the menu and will return you to the Spider's main display.

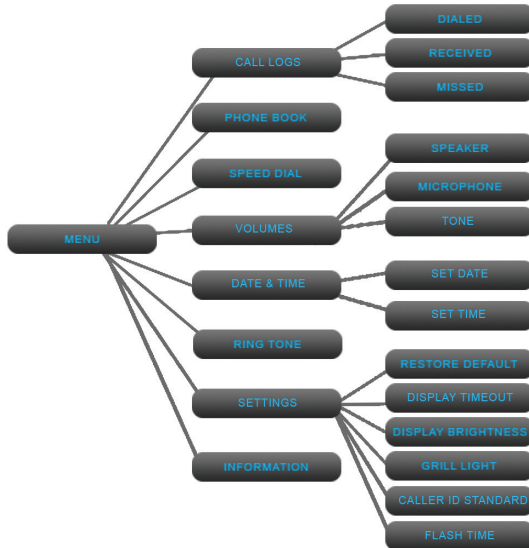




## MENU OPTIONS

---




### CALL LOG

This is the Spider's call history. You can clear complete call logs by using the middle function button in the general CALL LOG menu or a specific call by using the middle function button inside a sub-log listed below:




#### Dialed Calls

These are the last 1000 phone numbers dialed from the Spider. You can scroll through the list using the  and  buttons, and dial the number by selecting it with the  button.


#### Received Calls

These are the last 1000 phone numbers answered from the Spider. You can scroll through the list using the  and  buttons, and dial the number by selecting it with the  button.

#### Missed Calls

These are the last 1000 phone numbers not answered from the Spider. You can scroll through the list using the  and  buttons, and dial the number by selecting it with the  button.

### PHONE BOOK

Store up to 100 contact names and numbers. You can clear the whole phone book by selecting the middle function button , or just a specific entry by scrolling to it.

### SPEED DIAL



Assign up to 10 numbers that can be dialed automatically by holding down one of the numeric buttons.





## VOLUMES

Adjust the volume levels for the Spider's different volume profiles listed below:

### Speaker

Increase or decrease the speaker volume by using  and .

### Microphone

Increase or decrease the microphone sensitivity using  and .

**NOTE:** If the volume is set too low you won't be heard by the far-end. However, if the volume is set too high, the far-end might get a distorted signal.

### Tone


Increase or decrease the button volume by using  and .

### Ringer



Increase or decrease the ringtone volume by using  and .

## DATE & TIME

### Set Date

Using the numerical keypad, enter date in DD/MM/YYYY format. When finished, save date by pressing the left  button.

### Set Time

Using the numerical keypad, enter time. Then, using the middle  button, choose AM, PM, or 24-hour time format. When finished, save date by pressing the left  button.

## RINGTONES

Scroll using the  and  buttons to choose a ringtone.



## SETTINGS

General device controls and settings



### **Restore Defaults**

Returns all settings to factory defaults.

### **Display Timeout**

Scroll using the  and  buttons to choose the amount of time you want the Spider to standby before going into sleep mode. When going into sleep mode, the keypad light will turn off and the screen will dim, leaving a clock display.



### **Display Brightness**

Scroll using the  and  buttons to choose a display brightness setting.



### **Grill Light**

Turn ON/OFF the blue and red lights that appear under the grill during a call (incoming call, mute, beamforming, and hanging up).

### **Caller ID Standard**

Scroll using the  and  buttons to choose the correct Caller ID protocol setting for your country.

### **Flash Time Standards**

The required flash time depends on the local PBX and sometimes might need to be adjusted. The default value is set at 250 msec. but can be changed using the  and  buttons.

## INFORMATION

### **Firmware Version**

The firmware version the Spider is running.

### **S/N**

The Spider's serial number given by Phoenix Audio Technologies.

### **ID**

Internal ID number.

---

## EXTERNAL MIC/SPEAKER

---

### MICROPHONE ONLY

Connect the external microphone to the 3.5mm connector. Select MIC ONLY in the Audio Setup Utility. (Microphone goes to tip.)

### SPEAKERS ONLY

Connect the external speakers to the 3.5mm connector. Select SPEAKERS ONLY in the Audio Setup Utility. (Speakers go to ring.)

### MICROPHONE AND SPEAKERS

Connect the microphone to tip. Split two speakers to ring. Select both MIC and SPEAKERS in the Audio Setup Utility.

 
---

## DAISY CHAINING

---

Every Spider comes with the built-in ability to connect to other SMART Spiders (MT503) or Quattro3s (up to 15 units). This feature enables you to provide coverage for larger spaces using a chain of units.

**NOTE:** The Spider MT502 can only act as the first or "master" unit and not as a satellite or unit.

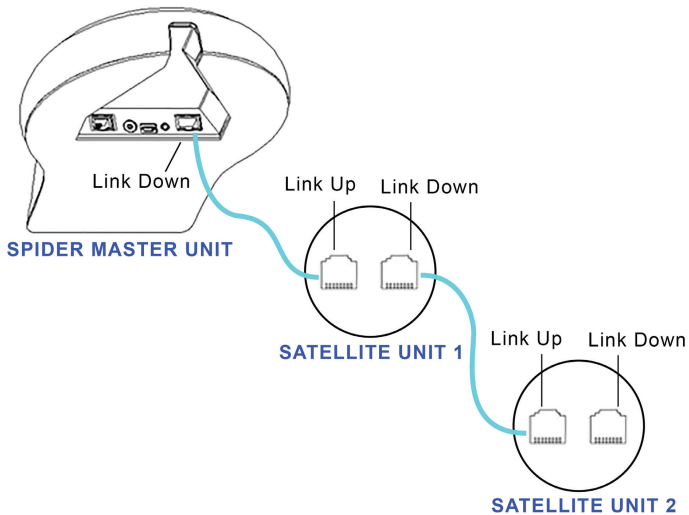

## MAKING THE CONNECTION

---

- ▶ The Spider MT502 will be the master unit. This unit will be the one interfacing for the entire chain. The master unit will be the only unit communicating with an external device, while all other units will connect and communicate only with each other.
- ▶ Using either the provided daisy chain cable or any other Ethernet cable, connect one of the cable ends to the master unit's daisy chain **DOWN** connector (the RJ45 connector marked "Link Down").
- ▶ Take the other end of the cable and connect it to the next unit's daisy chain **UP** connector (the RJ45 connector marked "UP" or "Link Up").
- ▶ Repeat the process in order to connect a third unit to unit number 2. This process can be repeated with up to 15 units regardless of their interface type. All units in the chain must be Quattro3s or Spiders.

**NOTE:** MT505 and MT502 can only be masters, or the first units in the chain.

## POWERING THE DAISY CHAIN

---

Every unit in the chain must be powered. In order to do this, there are two available options:

### **OPTION 1**

Power each unit separately, using its own provided USB cable, DC power supply, or internal battery (if applicable).

### **OPTION 2**

Power any unit in the chain using the "Daisy Chain Power Kit" (MT320), or the included 48V power supply. This setup will require you to connect only the first unit to a power source, and will allow the rest of the units to feed off the master unit via the Ethernet daisy chain cables.

**NOTE:** While any Spider or Quattro3 can be daisy chained (regardless of interface), the power daisy chain method requires all units in the chain to have some type of secondary interface card (ONLY Quattro3 MT301 will not work). The power daisy chain method will work with up to 8 consecutive units before requiring another power source. The power source can be placed anywhere in the chain (first, last, or middle units).

---

## SPECIFICATIONS

---

- UBS interface (micro B connector)
- 3.5mm external loudspeaker and microphone jack
- Daisy chain expandability of up to 15 units
- Three-way bridging capability
- Frequency response 50Hz – 16KHz
- Low latency (10ms)
- Broadcast level (peak): 92dB SPL @1m (5 watts RMS)
- Noise cancellation > 10dB (without pumping noise)
- 100% full duplex – no attenuation (in either direction) during full duplex
- High-end performance conforms to ITU-T G.167
- Acoustic echo cancellation > 40dB with conversion speed of 40dB/sec
- Residual echo is suppressed to the environment noise level, preventing artificial ducking of signal
- 4 high-quality directional microphones
- Direction-finding algorithm (determines the presence and direction of a speaker)
- Beam-forming algorithm (forms and directs audio beams towards a defined direction)
- Automatic voice-level adjustment (AGC)
- Line-echo canceller active when telephone interface is present
- Metal case and metal grill mesh for high RFI immunity and product durability

<b>Dimensions:</b>	<i>Length: 9.4" Width: 7" Height: 2.75"</i>
<b>Weight:</b>	<i>2.15 lbs.</i>
<b>Power Consumption:</b>	<i>150 mA from 48V ac/dc adaptor via PoE supply</i>
<b>Software:</b>	<i>Plug-and-Play. No installation or drivers.</i> Note: Audio Setup Utility is available for Windows. The setup utility helps monitor the audio input and output level but is not required.
<b>Operating Systems:</b>	<i>Windows 98 and up / Linux / MacOS.</i>

Complies with FCC 47 CFR Part 68, and ACTA adopted technical criteria: TIA-968-A

Complies with FCC 47CFR part 15; ICES-003: 2004 Issue 4, Class B; AS/NZS CISPR 22: 2006, Class B; EN 55022: 1998+A1(00)+A2(03), Class B.; EN61000-3-2: 2000+A2(05); EN61000-3-3: 1995+A2(05); EN55024: 1998+A1(01)+A2(03)

Complies with ETSI EG 201 121 V1.1.3 (2000-02); ETSI ES 203 021-2 V2.1.2 (2006-01); ETSI ES 203 021-3 V2.1.2 (2006-01)

Conforms to the requirement of the European Union Directive 2002/95EC (RoHS Directive)

---

## WARRANTY

---

The following warranty statement is effective for all Phoenix Audio Technologies' products as of October 1st, 2007

Phoenix Audio Technologies warrants that this product is free of defects in both materials and workmanship. Should any part of this product be defective, the Manufacturer agrees, at its option, to repair or replace with a like new replacement any defective part(s) free of charge (except transportation charges) for a period of two years for all products. This warranty period begins on the date the end user is invoiced for the product, provided the end user provides proof of purchase that the product is still within the warranty period and returns the product within the warranty period to Phoenix Audio Technologies or an authorized Phoenix Audio Technologies dealer according to the Product Return and Repair Policy listed below. All inbound shipping costs are the responsibility of the end user, Phoenix Audio Technologies will be responsible for all outbound shipping costs.

### Product Return and Repair Policy

1. Return to seller if purchased through an authorized dealer
  - a. Proof of purchase date from reseller within warranty period must be provided by the end user
  - b. Seller may, at its discretion, provide an immediate exchange or repair or may return the unit to the Manufacturer for repair
2. Return to Manufacturer
  - a. An RMA (return merchandise authorization) number must be obtained by the end user from Phoenix Audio Technologies
  - b. The end user must return the product to Phoenix Audio Technologies with proof of purchase (showing purchase date) for a warranty claim, and display the RMA number on the outside of the shipping package

### THIS WARRANTY IS VOID IF:

The product has been damaged by negligence, accident, act of God, or mishandling, or has not been operated in accordance with the procedures described in the operating and technical instructions; or, The product has been altered or repaired by other than the Manufacturer or an authorized service representative of the Manufacturer; or, Adaptations or accessories other than those manufactured or provided by the Manufacturer have been made or attached to the product which, in the determination of the Manufacturer, shall have affected the performance, safety or reliability of the product; or, The product's original serial number has been modified or removed.

NO OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE, APPLIES TO THE PRODUCT. MANUFACTURER'S MAXIMUM LIABILITY HEREUNDER SHALL BE THE AMOUNT PAID BY THE END USER FOR THE PRODUCT.

Manufacturer shall not be liable for punitive, consequential, or incidental damages, expenses, or loss of revenue or property, inconvenience, or interruption in operation experienced by the end user due to a malfunction in the purchased product. No warranty service performed on any product shall extend the applicable warranty period. This warranty extends only to the original end user and is not assignable or transferable. This warranty is governed by the laws of the State of California.

For more information or technical support please refer to our website [www.phnxaudio.com](http://www.phnxaudio.com), email us at [support@phnxaudio.com](mailto:support@phnxaudio.com), or call (818) 937-4779

Phoenix Audio Technologies, 16 Goodyear #120, Irvine, CA 92618 Telephone: (818) 937-4774,  
Fax: (818) 859-1054, [info@phnxaudio.com](mailto:info@phnxaudio.com)



