

USER MANUAL

---

# TG2480H

CUSTOM®



CUSTOM S.p.A.  
Via Berettine 2/B  
43010 Fontevivo (PARMA) - Italy  
Tel. : +39 0521-680111  
Fax : +39 0521-610701  
<http://www.custom.biz>

Customer Service Department:  
Email : [support@custom.it](mailto:support@custom.it)

© 2014 CUSTOM S.p.A. – Italy.

All rights reserved. Total or partial reproduction of this manual in whatever form, whether by printed or electronic means, is forbidden. While guaranteeing that the information contained in it has been carefully checked, CUSTOM S.p.A. and other entities utilized in the realization of this manual bear no responsibility for how the manual is used.

Information regarding any errors found in it or suggestions on how it could be improved are appreciated. Since products are subject to continuous check and improvement, CUSTOM S.p.A. reserves the right to make changes in information contained in this manual without prior notification.

The pre-installed multimedia contents are protected from Copyright CUSTOM S.p.A. Other company and product names mentioned herein may be trademarks of their respective companies. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. CUSTOM S.p.A. assumes no responsibility with regard to the performance or use of these products.

**THE IMAGES USED IN THIS MANUAL ARE USED AS AN ILLUSTRATIVE EXAMPLES. THEY COULDN'T REPRODUCE THE DESCRIBED MODEL FAITHFULLY.**

**UNLESS OTHERWISE SPECIFIED, THE INFORMATION GIVEN IN THIS MANUAL ARE REFERRED TO ALL MODELS IN PRODUCTION AT THE ISSUE DATE OF THIS DOCUMENT.**

## GENERAL SAFETY INFORMATION

Your attention is drawn to the following actions that could compromise the characteristics of the product:

- Read and retain the instructions which follow.
- Follow all indications and instructions given on the device.
- Make sure that the surface on which the device rests is stable. If it is not, the device could fall, seriously damaging it.
- Make sure that the device rests on a hard (non-padded) surface and that there is sufficient ventilation.
- When positioning the device, make sure cables do not get damaged.
- Use the type of electrical power supply indicated on the device label. If uncertain, contact your dealer.
- Make sure the electrical system that supplies power to the device is equipped with a ground wire and is protected by a differential switch.
- Do not block the ventilation openings.
- Do not insert objects inside the device as this could cause short-circuiting or damage components that could jeopardize printer functioning.
- Do not carry out repairs on the device yourself, except for the normal maintenance operations given in the user manual.
- Make sure that there is an easily-accessible outlet with a capacity of no less than 10A closely to where the device is to be installed.
- Periodically perform scheduled maintenance on the device to avoid dirt build-up that could compromise the correct, safe operation of the unit.
- Before any type of work is done on the machine, disconnect the power supply.
- Do not touch the head heating line with bare hands or metal objects. Do not perform any operation inside the printer immediately after printing because the head and motor tend to become very hot.



THE CE MARK AFFIXED TO THE PRODUCT CERTIFY THAT THE PRODUCT SATISFIES THE BASIC SAFETY REQUIREMENTS.

The device is in conformity with the essential Electromagnetic Compatibility and Electric Safety requirements laid down in Directives 2006/95/CE and 2004/108/CE inasmuch as it was designed in conformity with the provisions laid down in the following Standards:

- EN 55022 Class B (*Limits and methods of measurements of radio disturbance characteristics of Information Technology Equipment*)
- EN 55024 (*Information Technology Equipment – Immunity characteristics – Limits and methods of measurement*)
- EN 60950-1 (*Safety of information equipment including electrical business equipment*)



GUIDELINES FOR THE DISPOSAL OF THE PRODUCT

The crossed-out rubbish bin logo means that used electrical and electronic products shall NOT be mixed with unsorted municipal waste. For more detailed information about recycling of this product, refer to the instructions of your country for the disposal of these products.

- Do not dispose of this equipment as miscellaneous solid municipal waste, but arrange to have it collected separately.
- The re-use or correct recycling of the electronic and electrical equipment (EEE) is important in order to protect the environment and the wellbeing of humans.
- In accordance with European Directive WEEE 2002/96/EC, special collection points are available to which to deliver waste electrical and electronic equipment and the equipment can also be handed over to a distributor at the moment of purchasing a new equivalent type.
- The public administration and producers of electrical and electronic equipment are involved in facilitating the processes of the re-use and recovery of waste electrical and electronic equipment through the organisation of collection activities and the use of appropriate planning arrangements.
- Unauthorised disposal of waste electrical and electronic equipment is punishable by law with the appropriate penalties.

## GENERAL INSTRUCTIONS

CUSTOM S.p.A. declines all responsibility for accidents or damage to persons or property occurring as a result of tampering, structural or functional modifications, unsuitable or incorrect installations, environments not in keeping with the equipment's protection degree or with the required temperature and humidity conditions, failure to carry out maintenance and periodical inspections and poor repair work.



The format used for this manual improves use of natural resources reducing the quantity of necessary paper to print this copy.



# **MANUAL**

For details on the commands,  
refer to the manual with code. **77200000001100**



# TABLE OF CONTENTS

|          |                                       |     |
|----------|---------------------------------------|-----|
| <b>1</b> | <b>INTRODUCTION</b>                   | .9  |
| 1.1      | Document structure                    | .9  |
| 1.2      | Explanatory notes used in this manual | .9  |
| <b>2</b> | <b>DESCRIPTION</b>                    | .11 |
| 2.1      | Box content                           | .11 |
| 2.2      | Device components                     | .12 |
| 2.3      | Product label                         | .14 |
| 2.4      | Key functions: power up               | .15 |
| 2.5      | Key functions: standby                | .16 |
| 2.6      | Status led flashes                    | .17 |
| <b>3</b> | <b>INSTALLATION</b>                   | .19 |
| 3.1      | Fastening                             | .19 |
| 3.2      | Paper roll holder assembly            | .21 |
| 3.3      | Collections                           | .23 |
| 3.4      | Pinout                                | .24 |
| 3.5      | Driver and SDK                        | .26 |
| <b>4</b> | <b>OPERATION</b>                      | .27 |
| 4.1      | Device opening                        | .27 |
| 4.2      | Device closing                        | .28 |
| 4.3      | Adjusting paper width                 | .30 |
| 4.4      | Adjusting paper stock                 | .31 |
| 4.5      | Switch the device ON                  | .32 |
| 4.6      | Loading the paper roll                | .33 |
| 4.7      | Anti-jamming system                   | .35 |
| 4.8      | Issuing ticket                        | .36 |
| <b>5</b> | <b>CONFIGURATION</b>                  | .47 |
| 5.1      | Configuration mode                    | .47 |
| 5.2      | Setup report                          | .48 |
| 5.3      | Printer status                        | .49 |
| 5.4      | Printer parameters                    | .50 |
| 5.5      | Hexadecimal dump                      | .53 |

|   |    |
|---|----|
| <b>6 MAINTENANCE .....</b>                                      | 55 |
| 6.1 Paper jam .....   | 55 |
| 6.2 Planning of cleaning operations .....                       | 58 |
| 6.3 Cleaning .....  | 59 |
| 6.4 Upgrade firmware .....                                      | 63 |
| <b>7 SPECIFICATION .....</b>                                    | 65 |
| 7.1 Hardware specifications .....                               | 65 |
| 7.2 Character specifications .....                              | 68 |
| 7.3 Device dimensions .....                                     | 68 |
| 7.4 Power supply dimensions cod.963GE020000003 (optional) ..... | 71 |
| 7.5 Paper specification .....                                   | 72 |
| 7.6 Character sets .....  | 73 |
| <b>8 CONSUMABLES .....</b>                                      | 81 |
| <b>9 ACCESSORIES .....</b>                                      | 83 |
| 9.1 Adapter cable for power supply .....                        | 84 |
| <b>10 ALIGNMENT .....</b>                                       | 85 |
| 10.1 Calibration .....  | 86 |
| 10.2 Alignment parameters .....                                 | 88 |
| 10.3 Printing area .....  | 90 |
| <b>11 TECHNICAL SERVICE .....</b>                               | 91 |

# 1 INTRODUCTION

## 1.1 Document structure

This document includes the following chapters:

|                      |  |
|----------------------|--|
| 1 INTRODUCTION       | information about this document  |
| 2 DESCRIPTION        | general description of device  |
| 3 INSTALLATION       | information required for a correct installation of the device            |
| 4 OPERATION          | information required to make the device operative                        |
| 5 CONFIGURATION      | description of the configuration parameters of the device                |
| 6 MAINTENANCE        | information for a correct periodic maintenance                           |
| 7 SPECIFICATION      | technical specification for the device and its accessories               |
| 8 CONSUMABLES        | description and installation of the available consumables for the device |
| 9 ACCESSORIES        | description and installation of the available accessories for the device |
| 10 ALIGNMENT         | information required for managing the paper alignment                    |
| 11 TECHNICAL SERVICE | information required for contacting the technical service                |

## 1.2 Explanatory notes used in this manual

### NOTE:

Gives important information or suggestions relative to the use of the device

### ATTENTION:

Gives information that must be carefully followed to guard against damaging the device

### DANGER:

Gives information that must be carefully followed to guard against operator injury or damage




# 2 DESCRIPTION

## 2.1 Box content

Remove the device from its carton being careful not to damage the packing material so that it may be re-used if the printer is to be transported in the future.

Make sure that all the components illustrated below are present and that there are no signs of damage. If there are, contact Customer Service

1. Power supply cable
2. Fixing screws for paper roll holder
3. Paper roll
4. Installation instruction sheet
5. Device (all models)
6. Paper roll holder

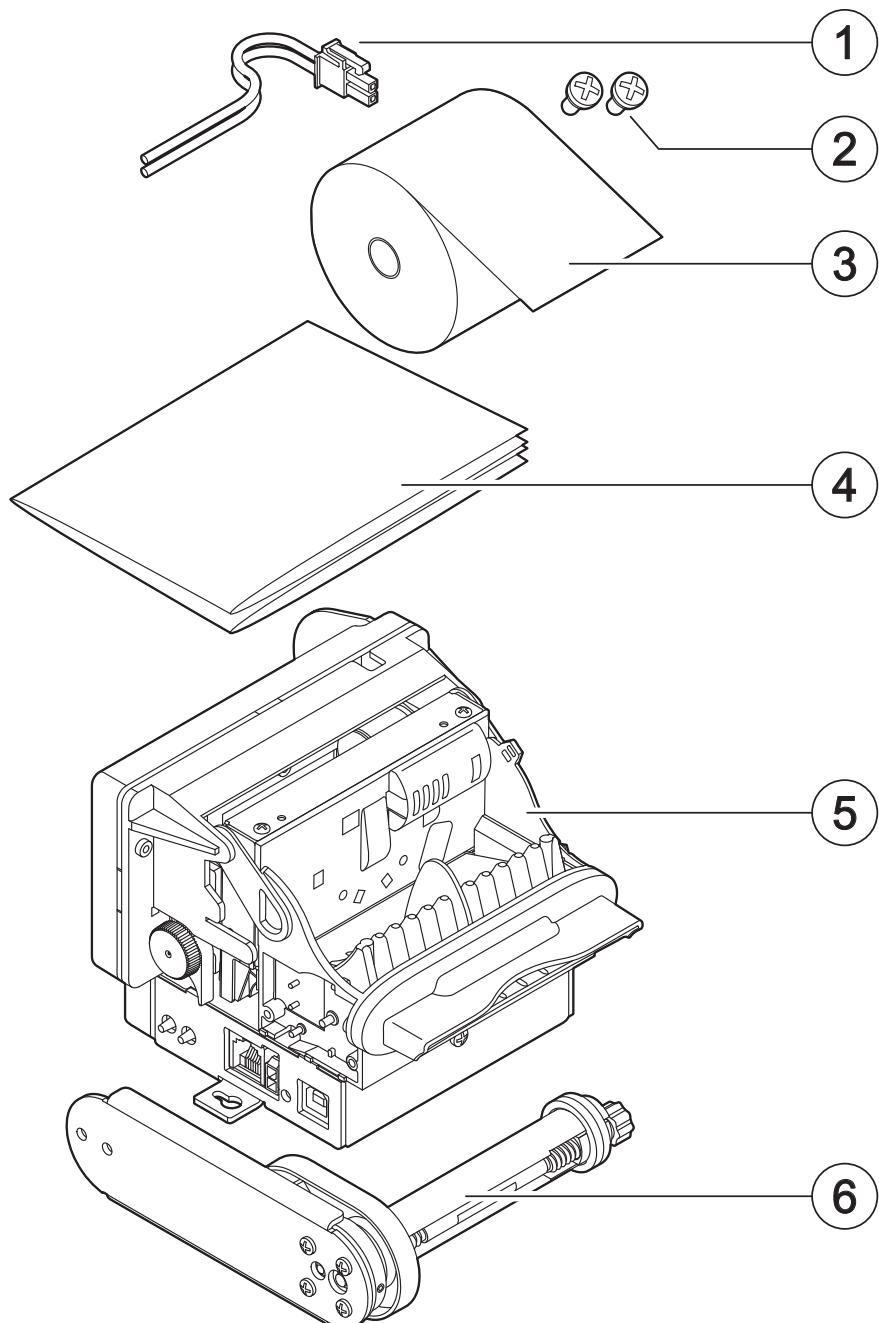


- Open the device packaging.
- Take out the device.
- Take out the rest of the content.
- Keep the box, trays and packing materials in the event the printer must be transported/shipped in the future.

## 2.2 Device components


### Standard model

1. Paper width adjustment
2. Paper roll holder pin
3. Near paper end sensor
4. Lever for paper stock adjustment
5. Paper roll holder
6. Printing head
7. Cutter group
8. Ticket withdrawal sensor
9. Inspection door
10. Paper out
11. Unlocking hook for cutter group
12. Device chassis
13. USB port
14. Status led
15. Power supply port
16. Serial port
17. Paper in
18. Paper in presence and black mark sensor
19. Rear cover
20. Paper jam sensor
21. FEED key
22. PRINT key
23. Unlocking lever for rubber roller
24. Rubber roller manual feed

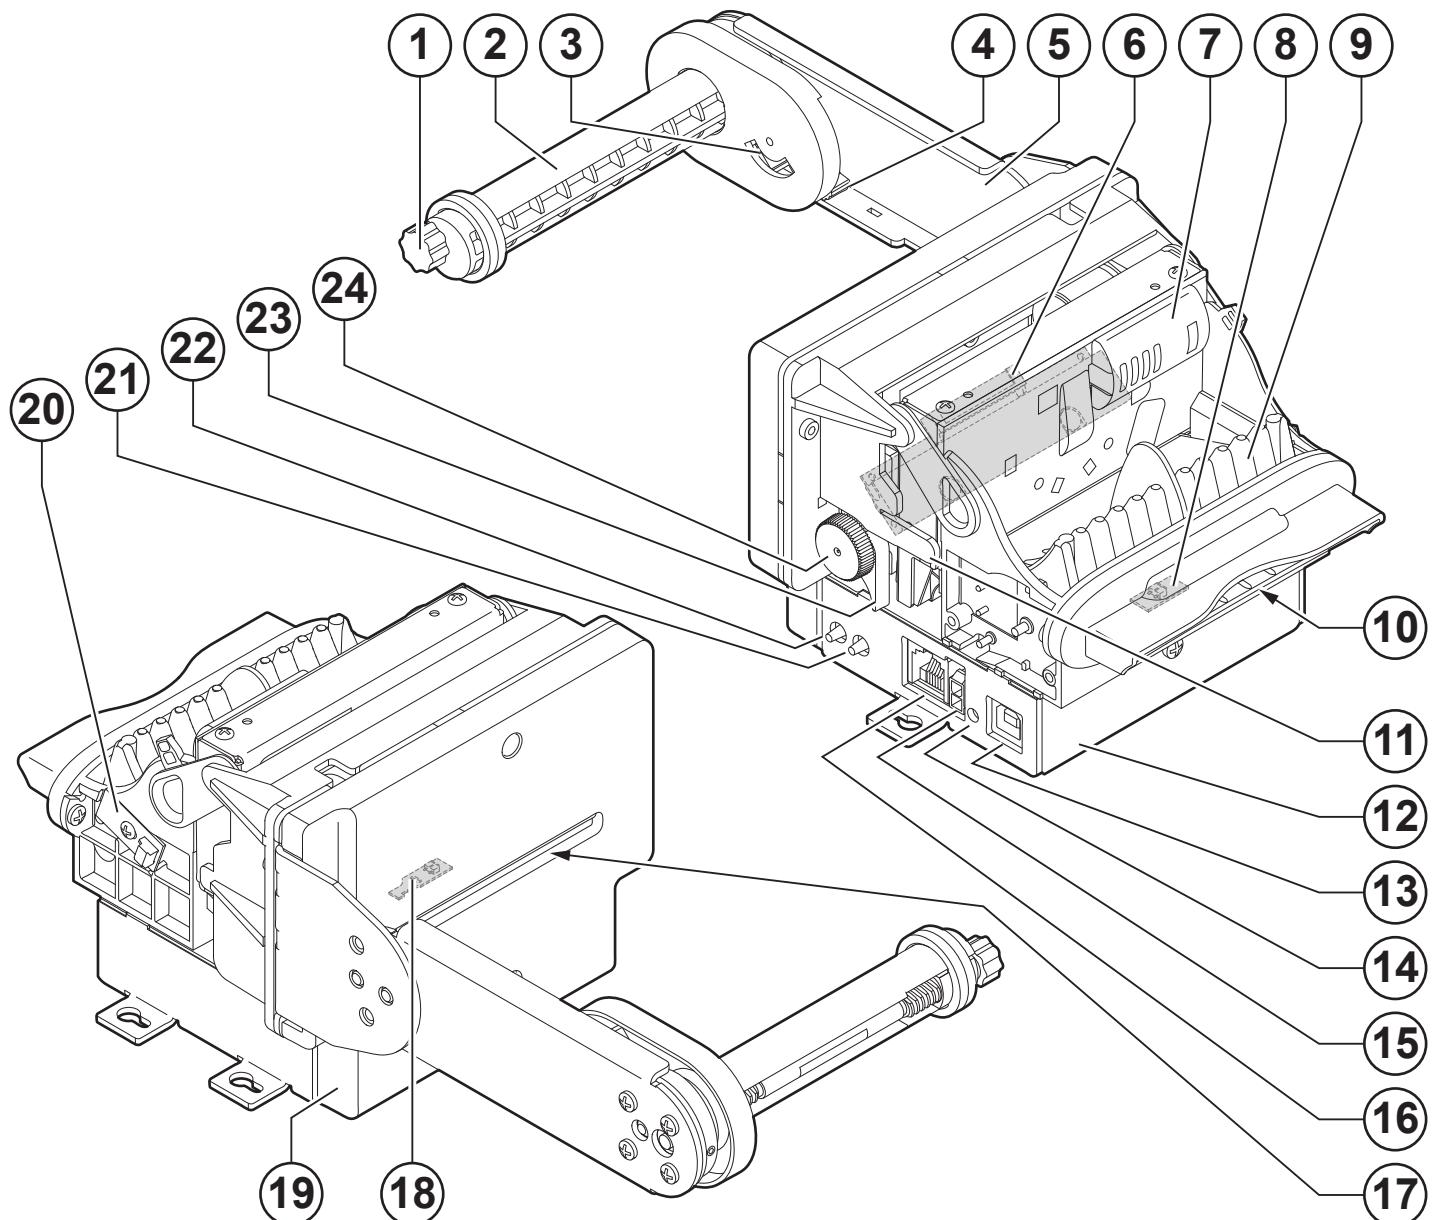


## Model with motorized ejector

1. Paper width adjustment
2. Paper roll holder pin
3. Near paper end sensor
4. Lever for paper stock adjustment
5. Printing head
6. Cutter group
7. Ejector group
8. Paper out
9. Paper out presence sensor
10. Unlocking hook for cutter group
11. Device chassis
12. USB port
13. Status led
14. Power supply port
15. Serial port
16. FEED key
17. PRINT key
18. Paper roll holder
19. Paper in
20. Paper in presence and black mark sensor
21. Rear cover
22. Unlocking lever for rubber roller
23. Rubber roller manual feed

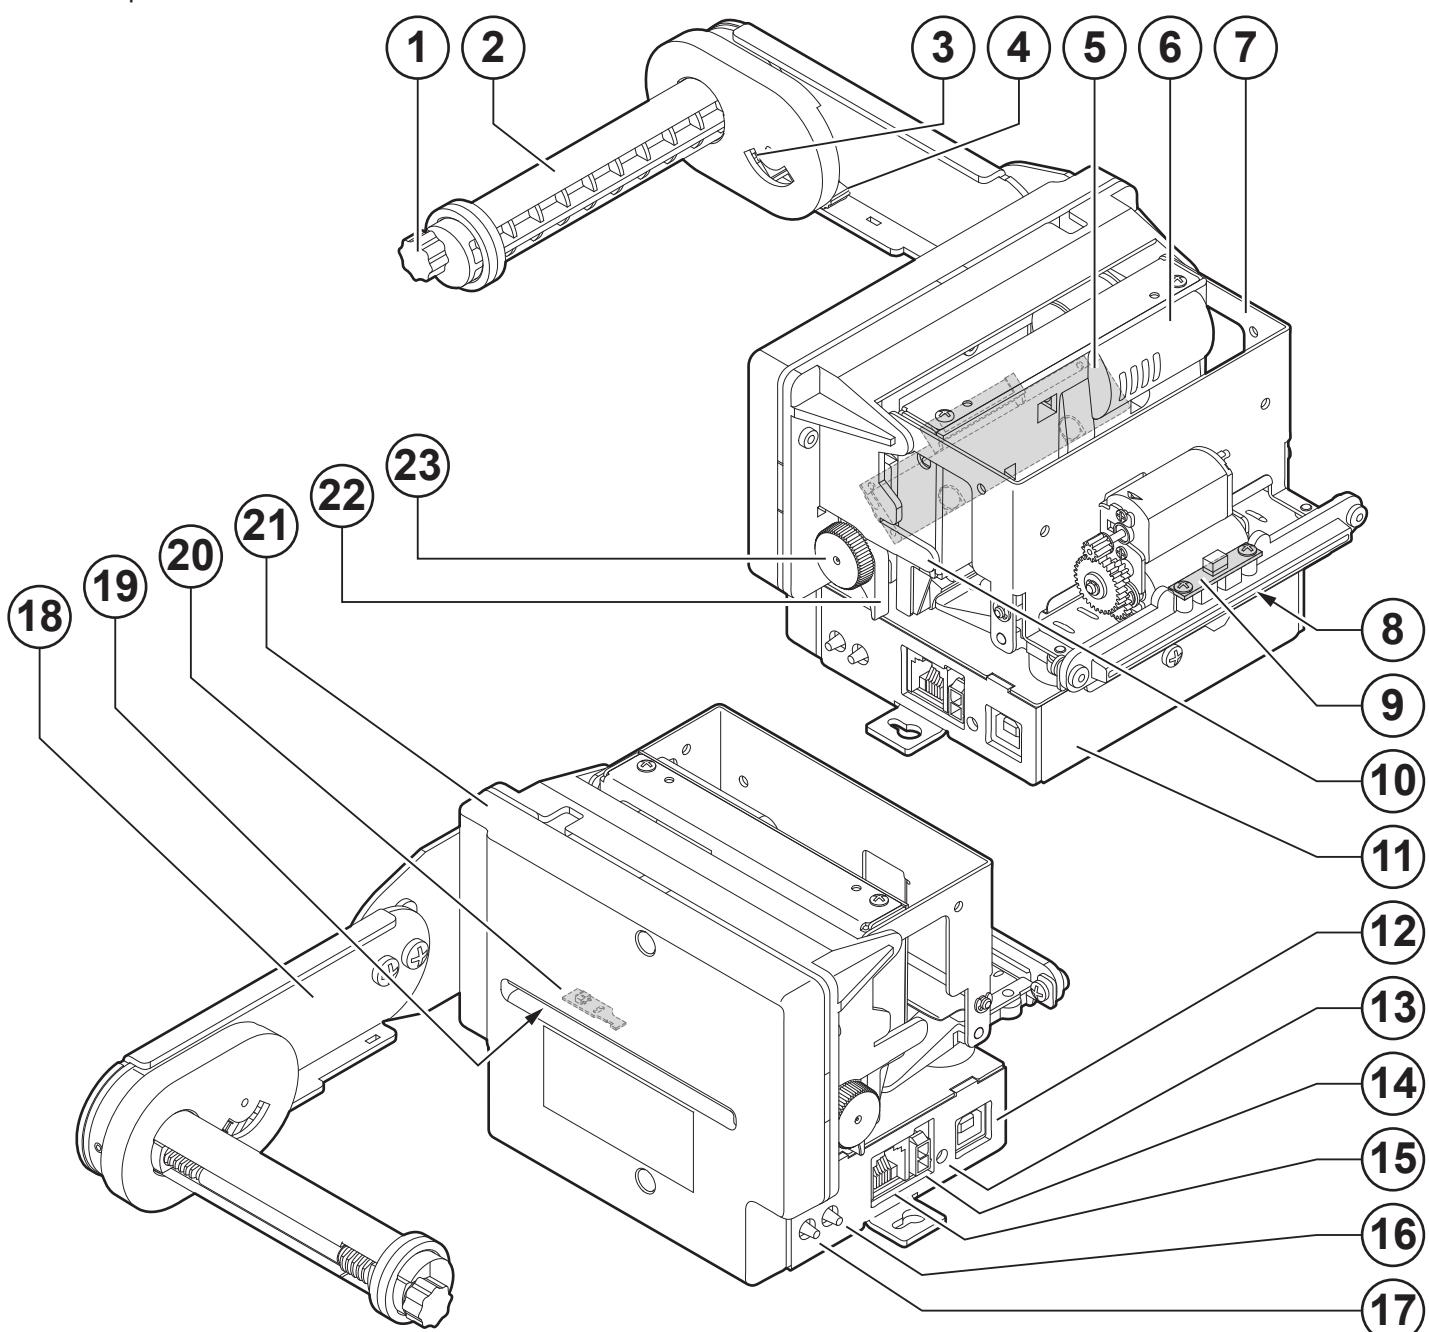


## 2.3 Product label

PC = Product code (14 digits)  
SN = Serial number  
HW = Hardware release

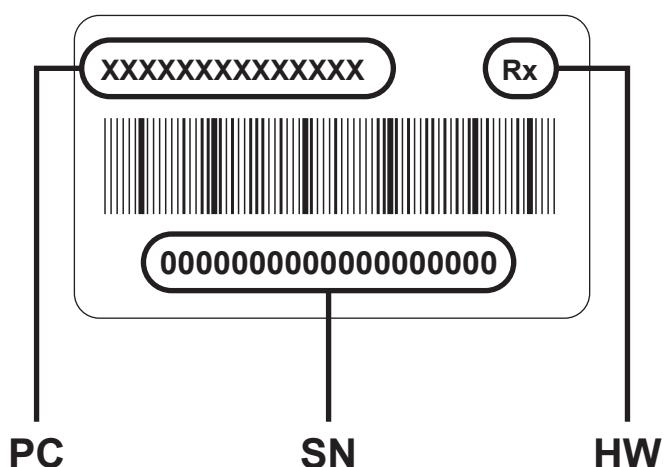


## 2.4 Key functions: power up

The following figure shows the functions of device's keys according to the operating condition.

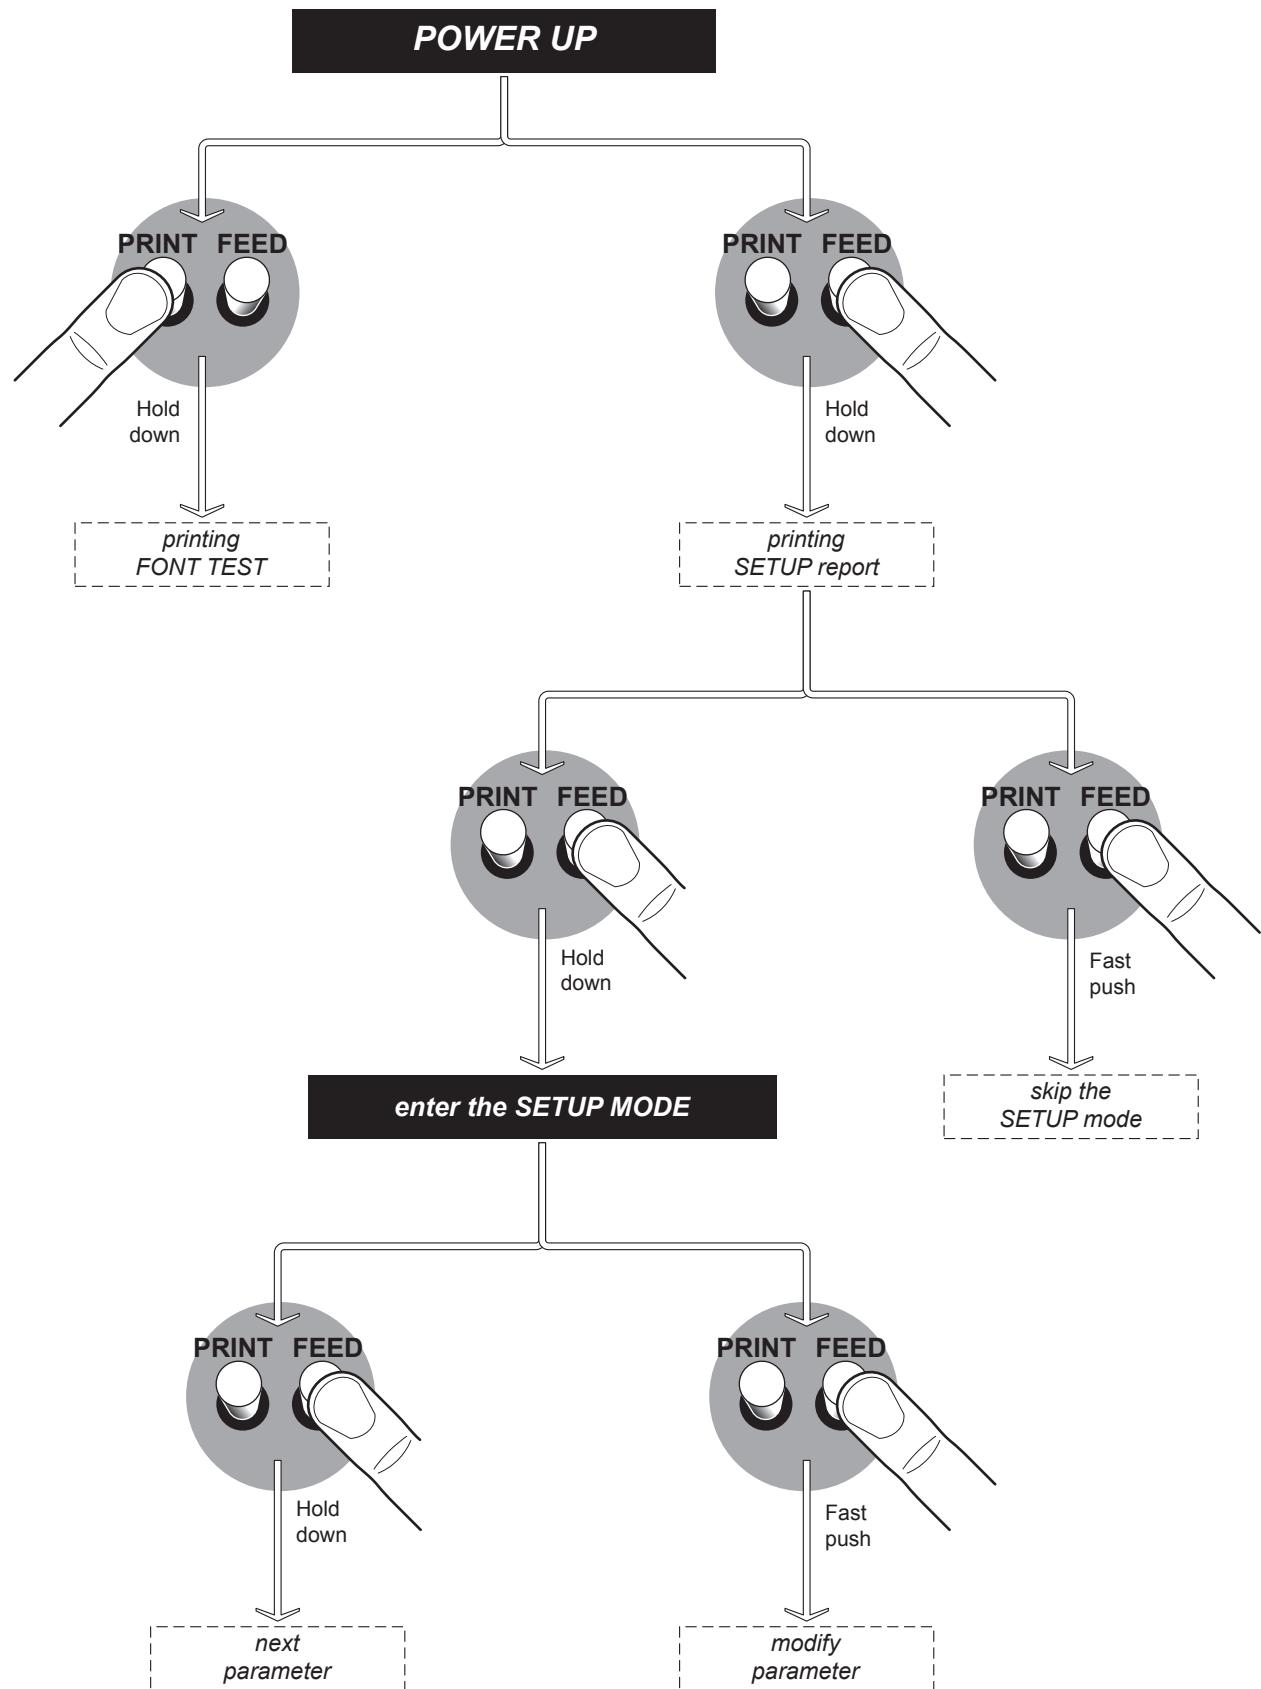

## 2.5 Key functions: standby

The following figure shows the functions of device's keys according to the operating condition.

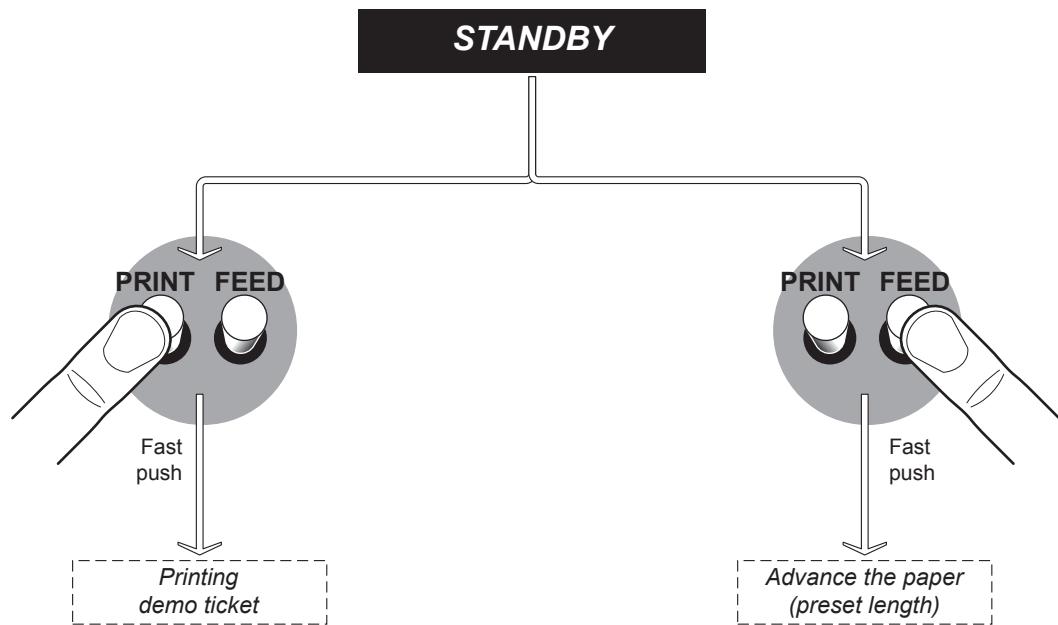

## 2.6 Status led flashes

The Status led indicates hardware status of device. Given in the table below are the various led signals and the corresponding device status.

| STATUS LED                       |  | DESCRIPTION  |
|----------------------------------|--|--|
| -                                |  | <b>OFF</b><br>DEVICE OFF   |
| GREEN                            |  | <b>ON</b><br>DEVICE ON: NO ERROR                                   |
|                                  |  | <b>x 1</b> RECEIVE DATA  |
|                                  |  | <b>x 2</b> HEADING OVER TEMPERATURE                                |
|                                  |  | <b>x 3</b> PAPER END   |
|                                  |  | <b>x 4</b> POWER SUPPLY VOLTAGE INCORRECT                          |
| GREEN<br>COMMUNICATION<br>STATUS |  | <b>x 5</b> RECEPTION ERROR<br>(PARITY, FRAME ERROR, OVERRUN ERROR) |
|                                  |  | <b>x 6</b> COMMAND NOT RECOGNIZED                                  |
|                                  |  | <b>x 7</b> COMMAND RECEPTION TIME OUT                              |
|                                  |  | <b>x 8</b> INSPECTION DOOR OPEN <sup>(1)</sup>                     |
|                                  |  | <b>x 9</b> PAPER JAM <sup>(1)</sup>                                |
|                                  |  | <b>x 10</b> NEAR PAPER END   |
| GREEN<br>UNRECOVERABLE<br>ERROR  |  | <b>x 11</b> CUTTER ERROR   |

NOTE:

(1) : Only for standard models.




# 3 INSTALLATION

## 3.1 Fastening

### Standard model


The device is provided with three fixing holes on the bottom of device (see following figure). To fasten the device on a panel, use three M3 screws.

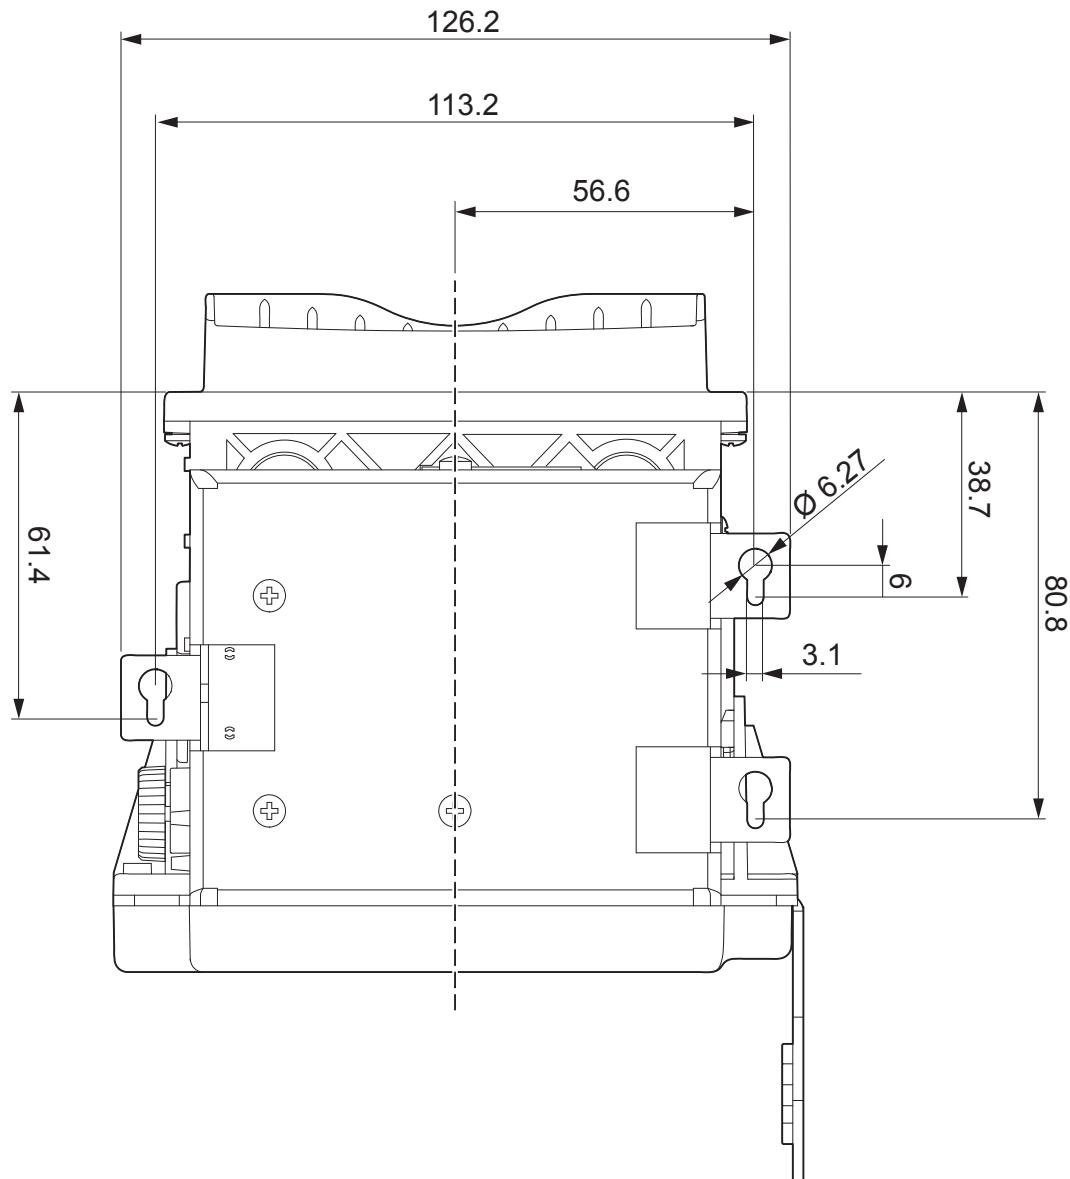

NOTE: All the dimensions shown in figure are in millimetres.

## Model with motorized ejector

The device is provided with three fixing holes on the bottom of device (see following figure). To fasten the device on a panel, use three M3 screws.

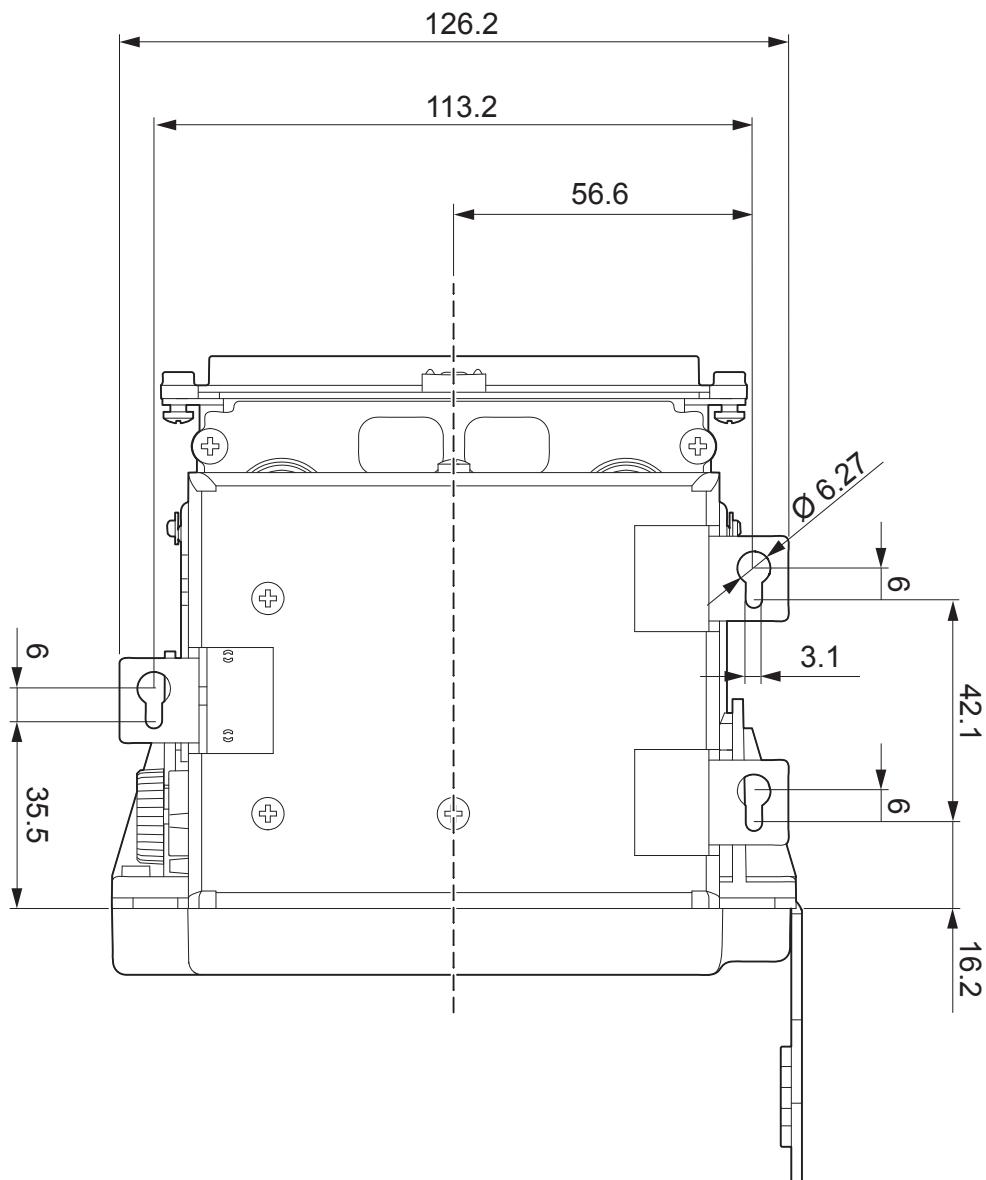


NOTE: All the dimensions shown in figure are in millimetres.

## 3.2 Paper roll holder assembly


The paper roll holder position is adjustable on four different positions: upper position P1, rotated upward P2, rear P3, rotated downward P4.

Fix the paper roll holder to the device holes shown in figure according to the desired position by using the two M4x6 fixing screws supplied.


P1

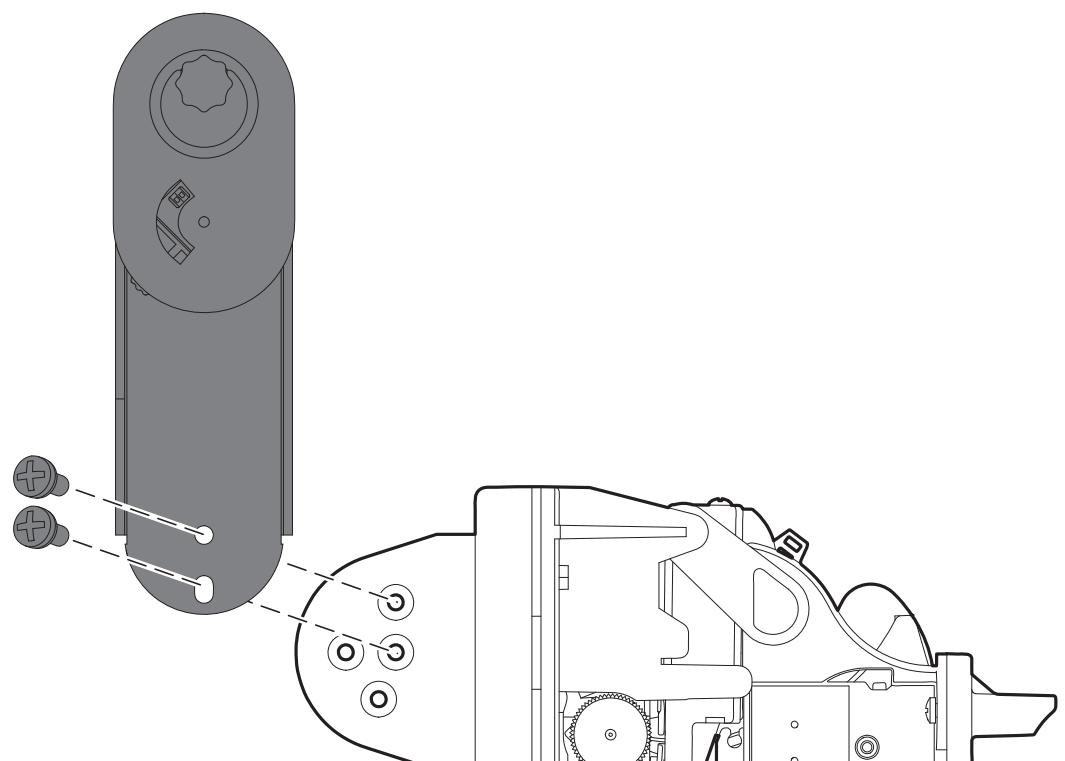


P2

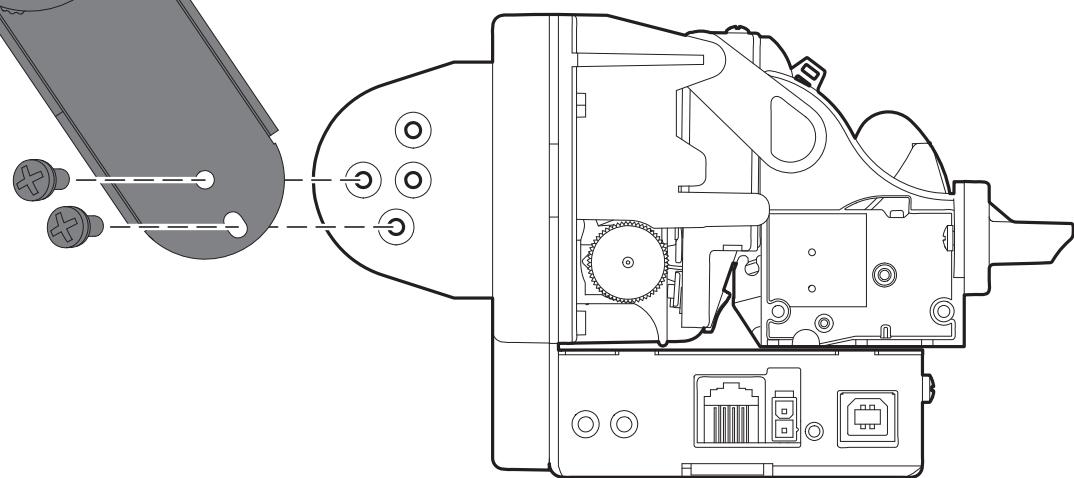

P3

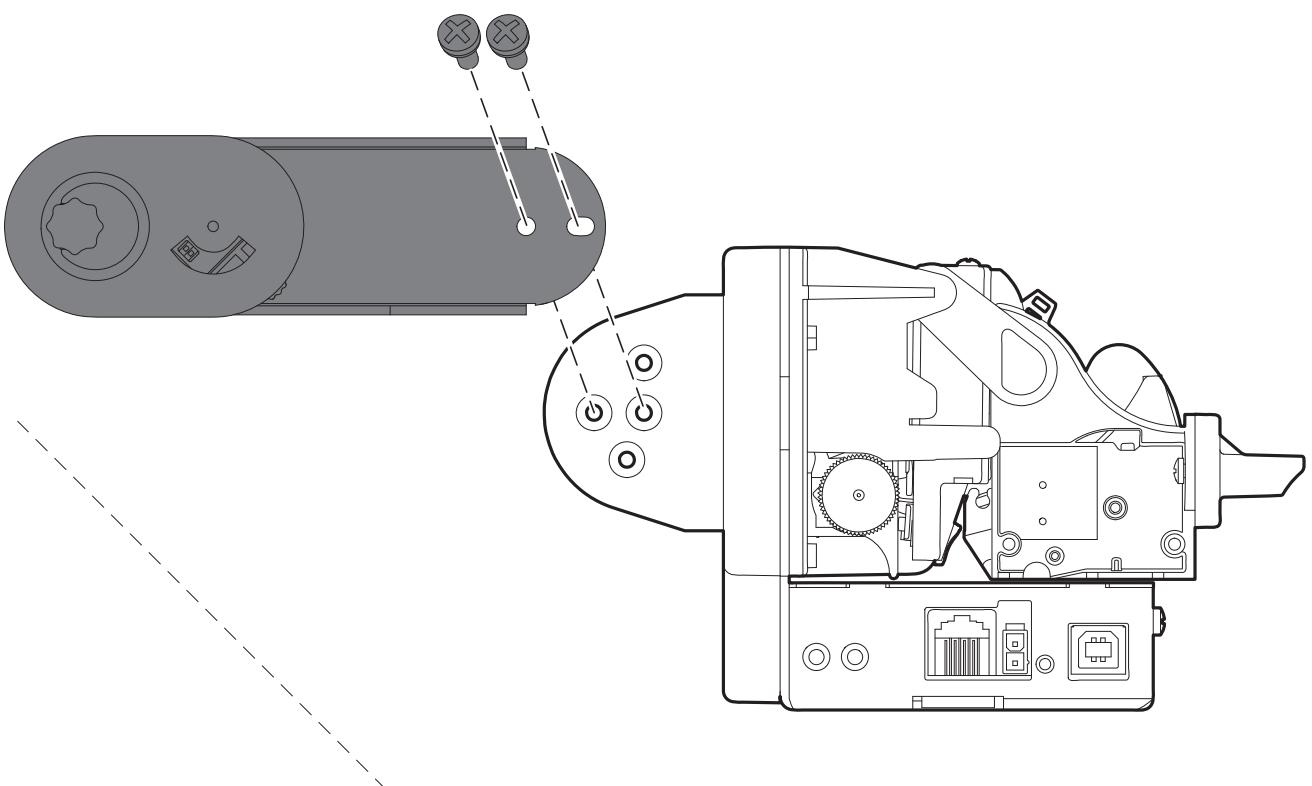


P4

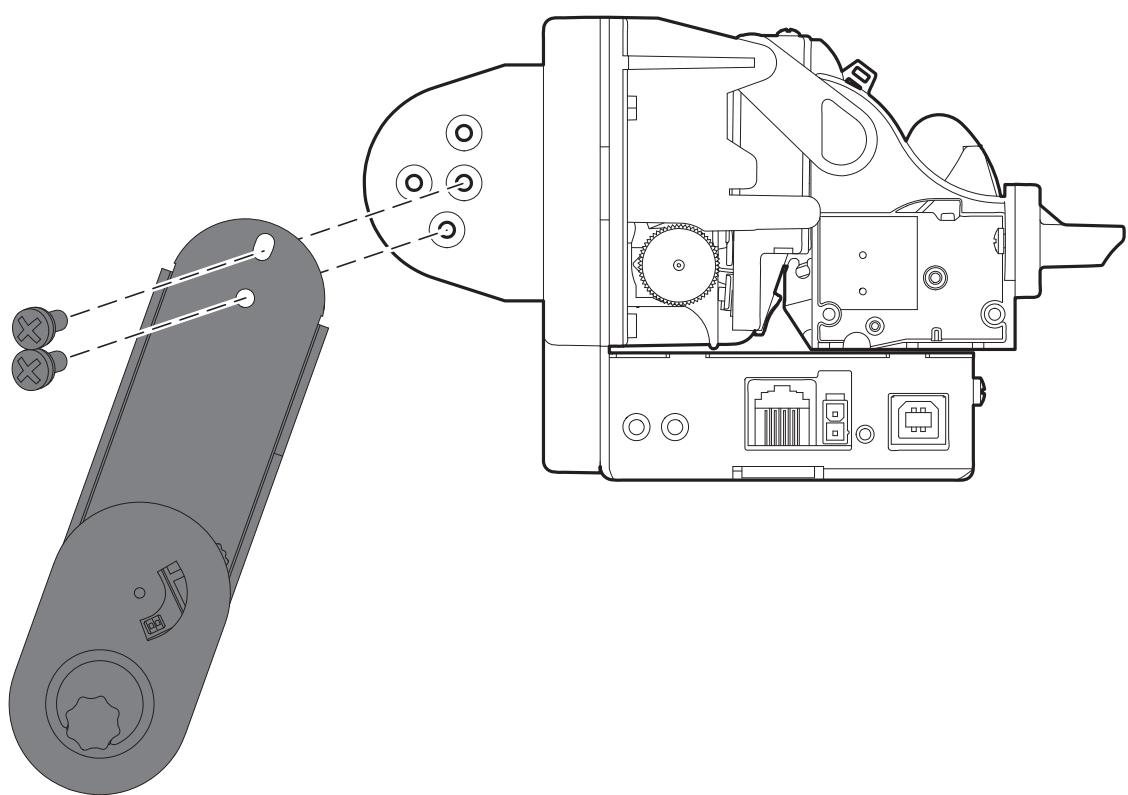

ATTENTION: While assembly the paper roll holder check the cable path (near paper end sensor) is correct. Incorrect positions of the cable could cause damage on it.

### 3.3 Collections

The following figure shows the possible connections for the device.

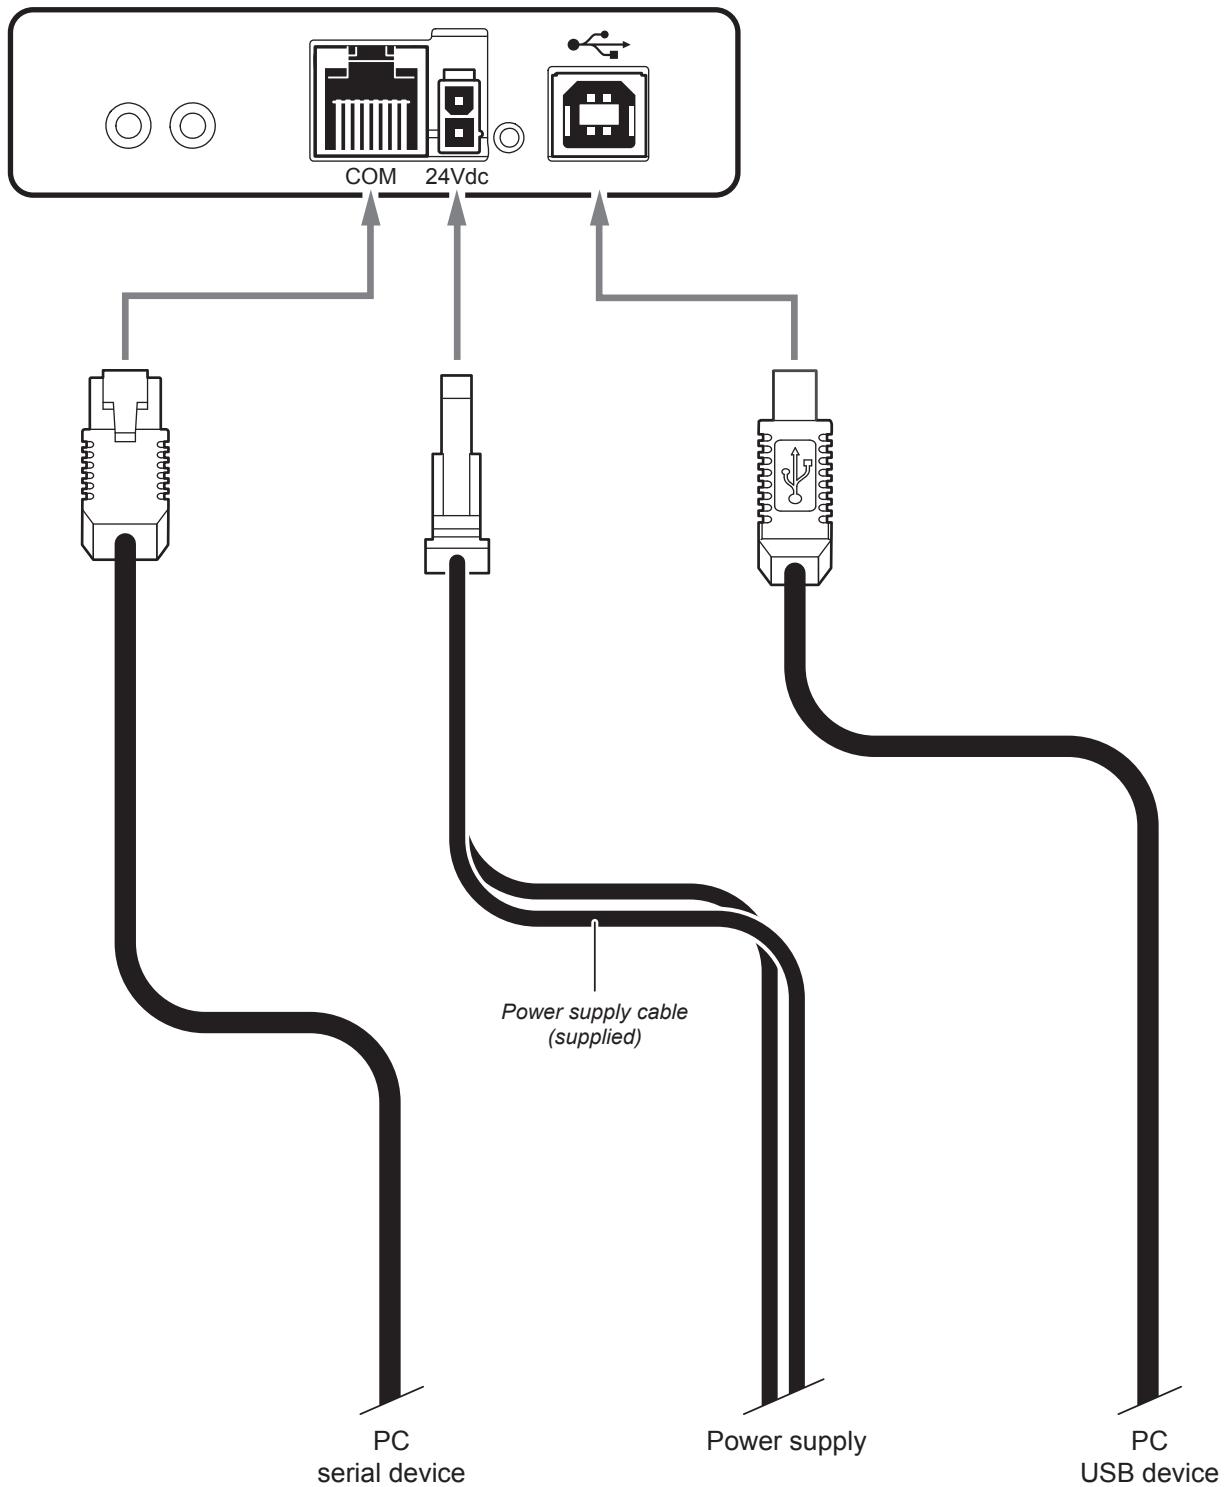

**ATTENTION:** In some using conditions, we recommend the installation of a ferrite core on the power supply cable.

**NOTE:** If RS232 and USB connectors are inserted, communication port is USB.

## 3.4 Pinout



### POWER SUPPLY

Male Molex connector series 5569 vertical (n° 39-30-1020)




#### ATTENTION:

Respect power supply polarity.


#### NOTE: Power supply cable

The following figure shows the connector pinout of the power supply cable for the device:

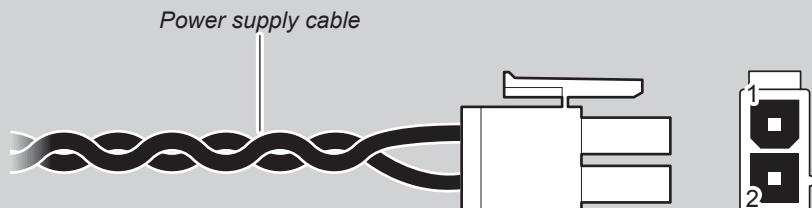

Female Molex connector  
series 5557 (n.39-01-3022)


| PIN | Cable color | Signal |
|-----|-------------|--------|
| 1   | Red         | +24V   |
| 2   | Black       | GND    |

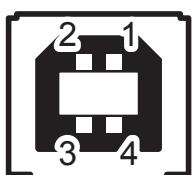

### USB INTERFACE

Female USB type B connector



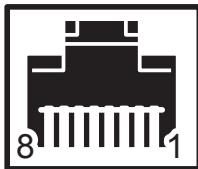

## SERIAL INTERFACE


Female RJ45 connector

|     |   |           |   |
|-----|---|-----------|---|
| J15 | 1 | n.c.      |   |
|     | 2 | GND       |   |
|     | 3 | TX (out)  | During transmission, takes the value "0" and "1", depending on data |
|     | 4 | RX (in)   | During reception, takes the value "0" and "1", depending on data    |
|     | 5 | RTS (out) | When "1", printer is ready to receive data                          |
|     | 6 | n.c.      |   |
|     | 7 | n.c.      |   |
|     | 8 | n.c.      |   |

### NOTES

DEVICE > PC connection

The following picture shows an example of connection between the device and a personal computer using an 8 pin serial RJ45 male connector and a 9 pin female connector.

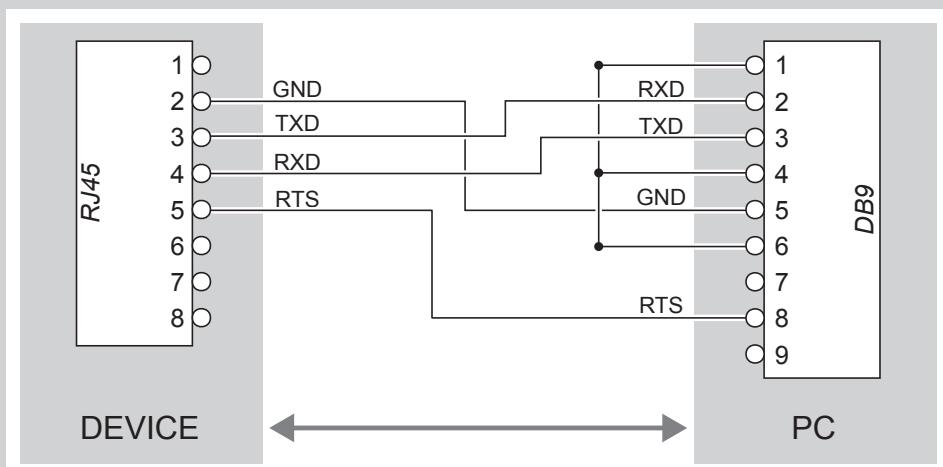

When use a serial cable, we recommend the installation of a ferrite core on the power supply cable.

Given the presence of the RS232 standard, logic value "0" corresponds to a voltage level of between +3 Vdc and +15 Vdc and logic value "1" corresponds to a voltage level of between -3 Vdc and -15 Vdc.

## 3.5 Driver and SDK

The drivers are available for the following operating system:

| OPERATING SYSTEM | DESCRIPTION                         | INSTALLATION PROCEDURE   |
|------------------|-------------------------------------|--|
| Windows          | Driver for Windows XP               |  |
|                  | Driver for Windows VISTA (32/64bit) |  |
|                  | Driver for Windows 7 (32/64bit)     | From the START menu, press Run and type-in the path where the SW was saved on your PC, then click OK. Follow the instructions that appear on the screen to install the driver. |
|                  | Driver for Windows 8 (32/64bit)     |  |
| Linux            | Opos                                |  |
|                  |                                     | Follow the instruction get back on the README.TXT file. You can find it in the software package downloaded in advance.   |
| Android          | Library for CustomAndroidAPI        | Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the library.  |


### NOTE:

All drivers can be found in the DOWNLOAD section of the web site [www.custom.biz](http://www.custom.biz).

# 4 OPERATION


## 4.1 Device opening

1

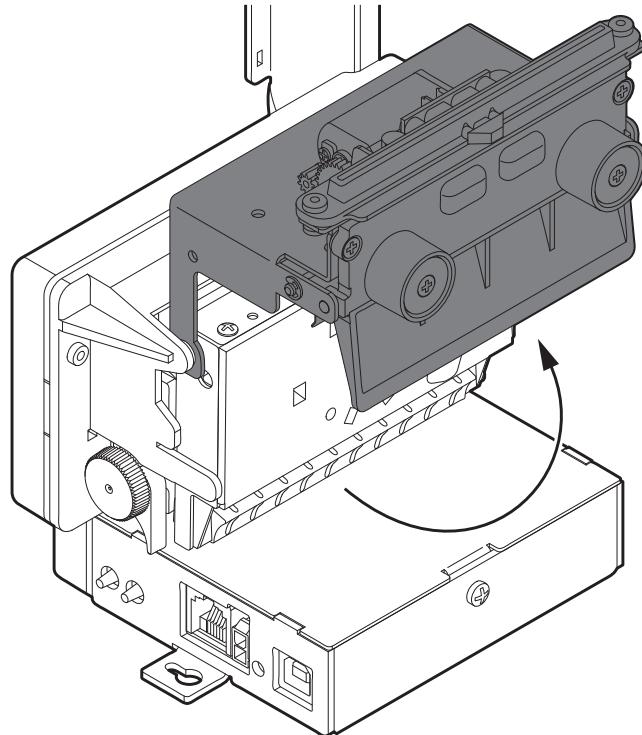


Lift the ejector group by unhooking the magnets on the bottom side  
and by rotating the group upwards.

2

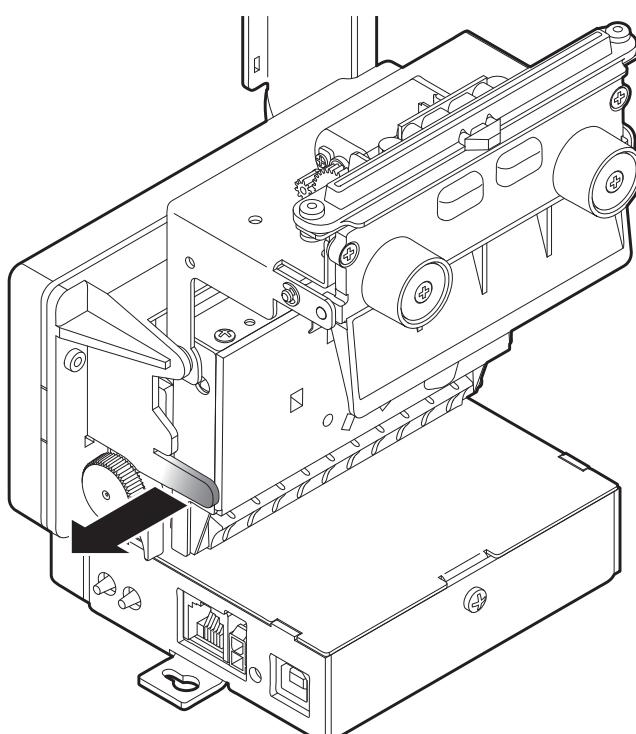

Widen the unlocking hook for the cutter group.


3

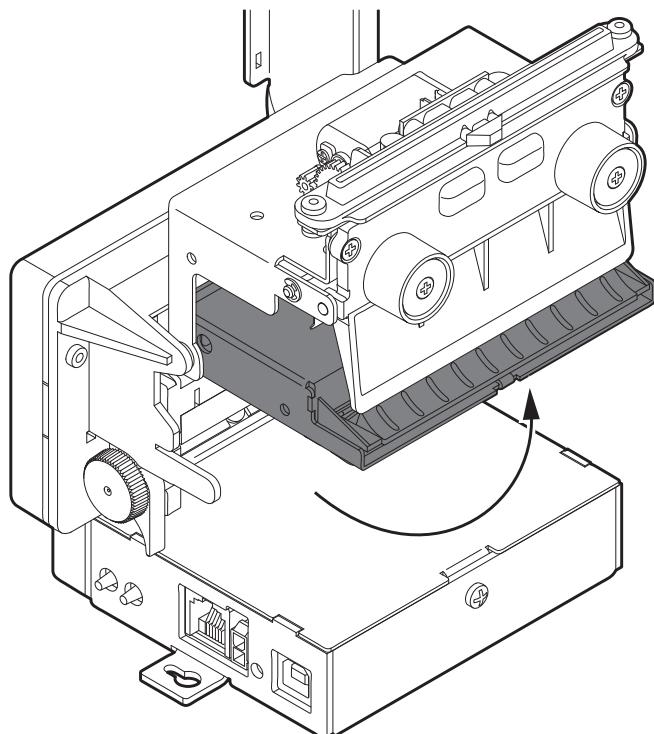

Rotate upwards the cutter group to lift it.


## 4.2 Device closing

1

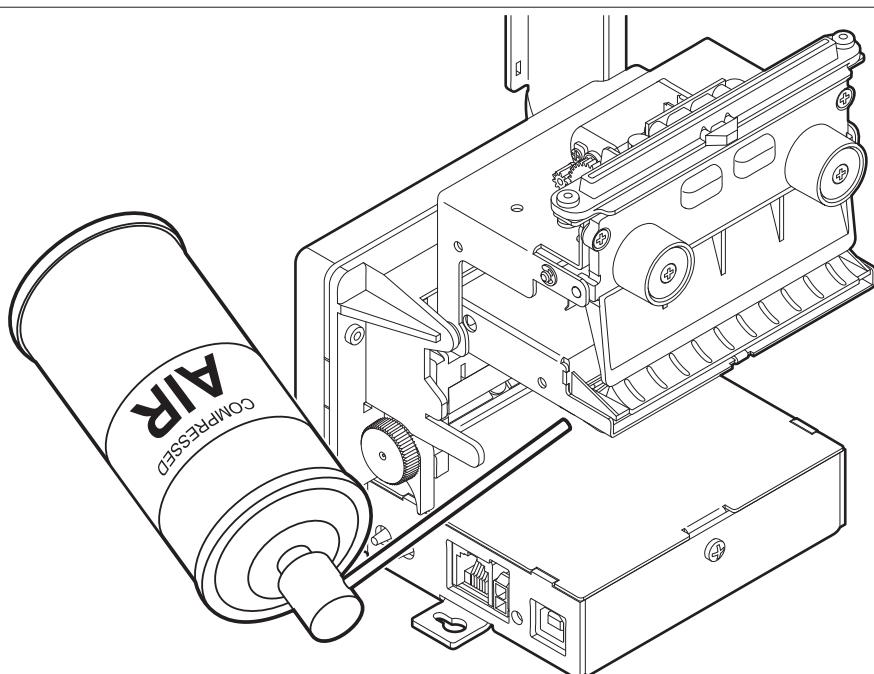


Check the presence of paper scraps  
and remove them (see par.6.3).

2

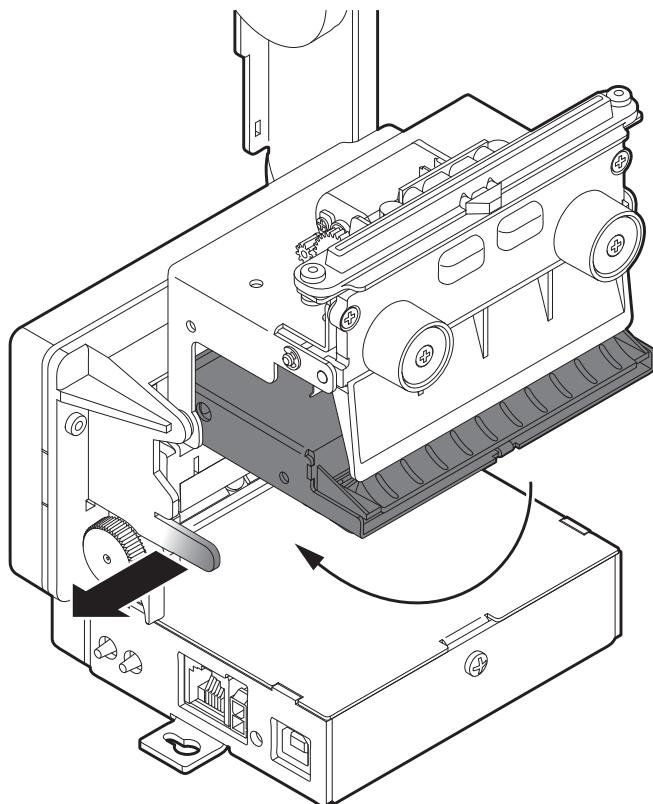

Widen the unlocking hook  
and close the cutter group.


3

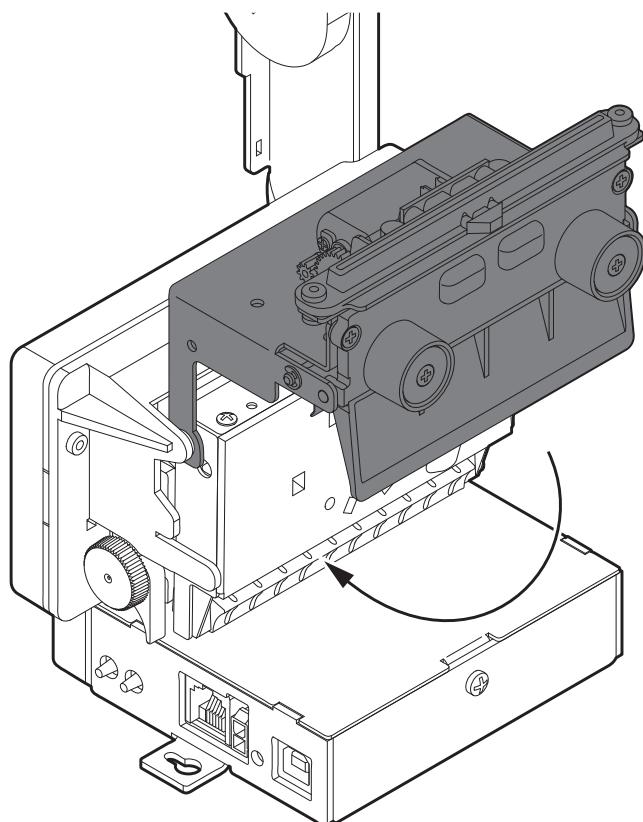

Lower the ejector group and hook  
the two magnets to the device chassis.

## 4.3 Adjusting paper width

The device allows the use of paper roll width from 52mm to 80mm. To adjust the width of the paper roll case, rotate the knob as shown in the following figure.

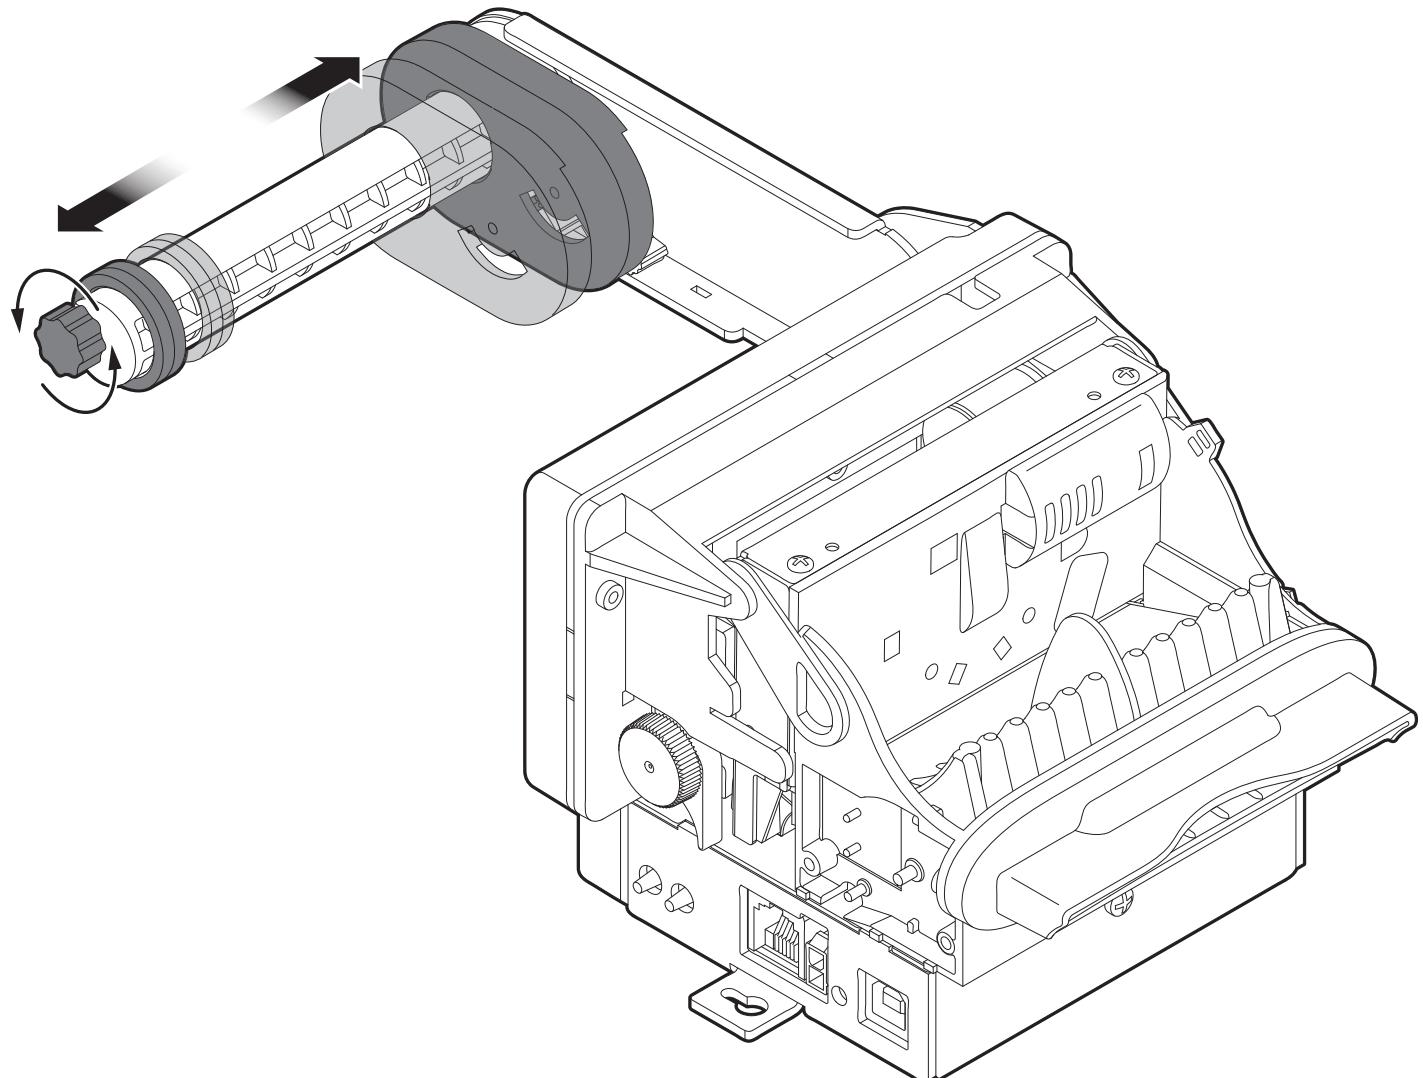


**NOTE:**

Properly set the value of the "Paper Width" parameter during the Setup procedure (see chapter 5).

## 4.4 Adjusting paper stock


The device allows the move the position of the near paper end sensor to adjust the amount of paper on the roll under which report the near paper end.

Use the lever shown in figure to move the near paper end sensor: move the lever up to increase the paper stock, move the lever down to decrease the paper stock.

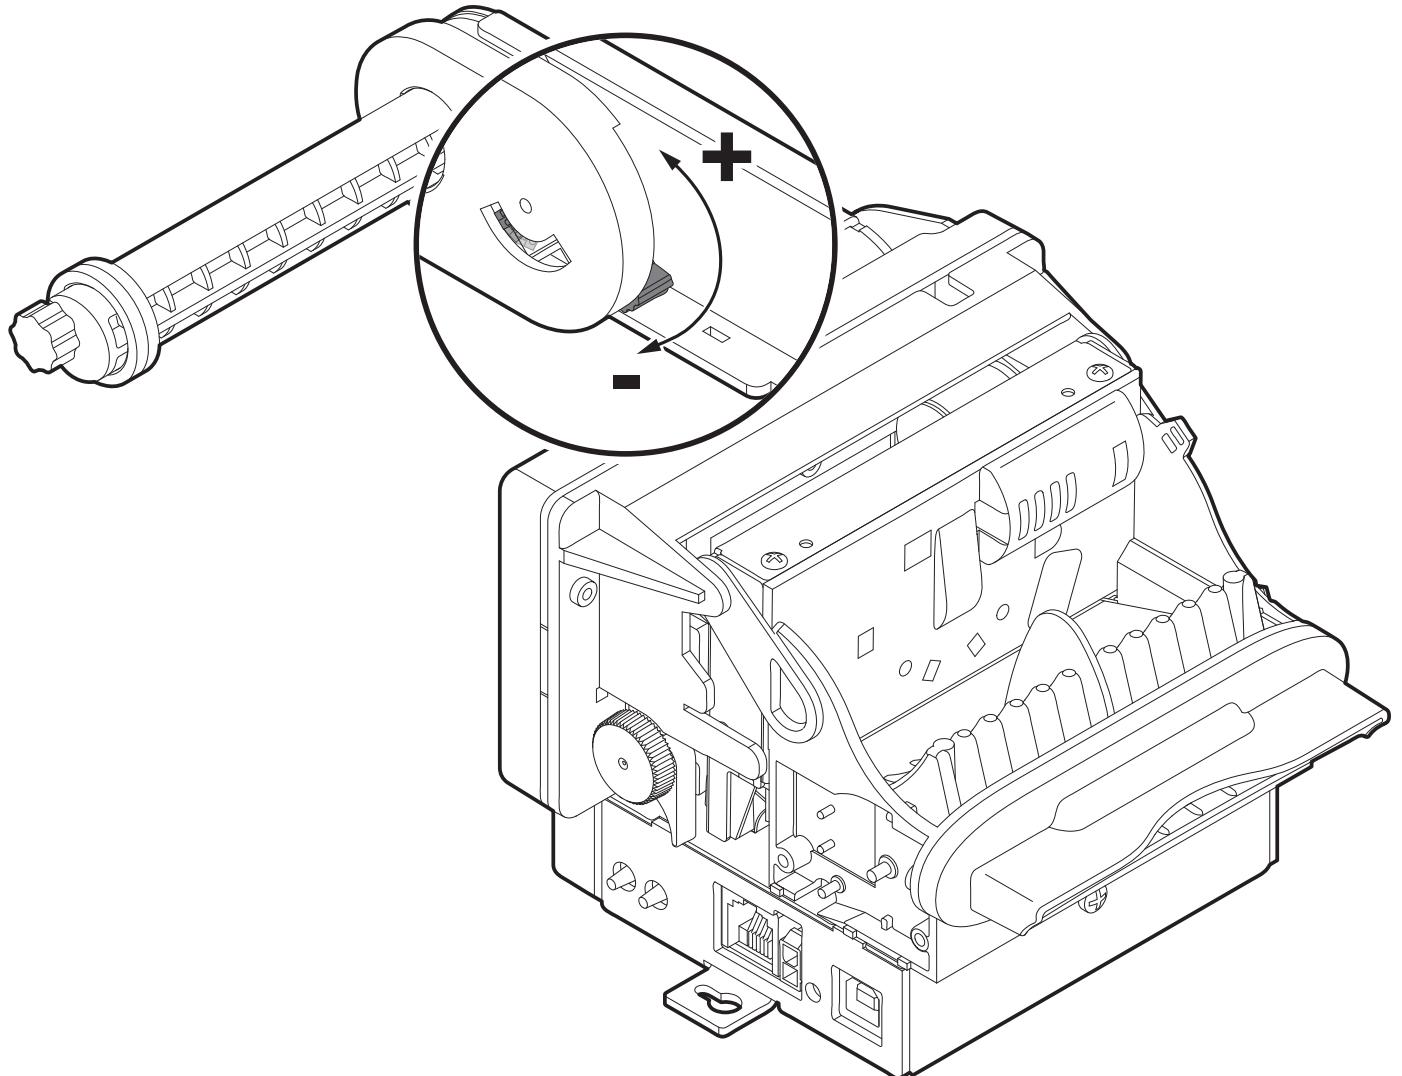


## 4.5 Switch the device ON

1

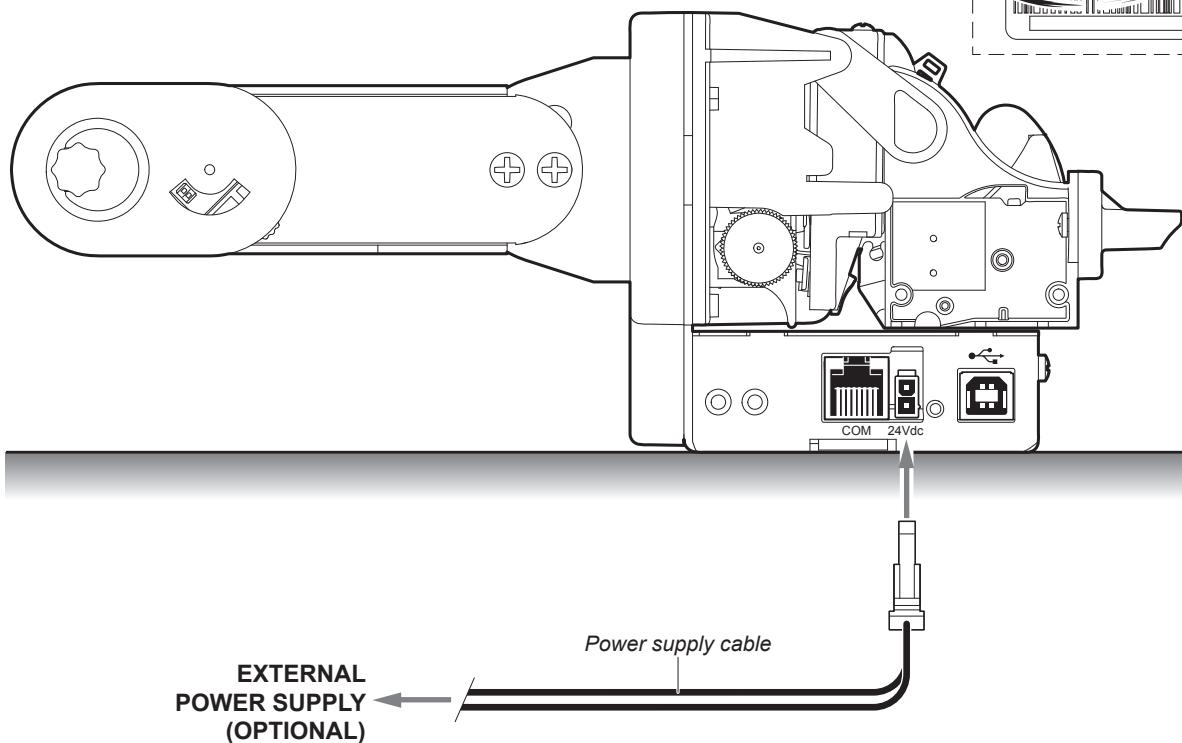

Connect the power supply cable to an external power supply unit and to the device.  
Use the type of electrical power supply indicated on the label.

2

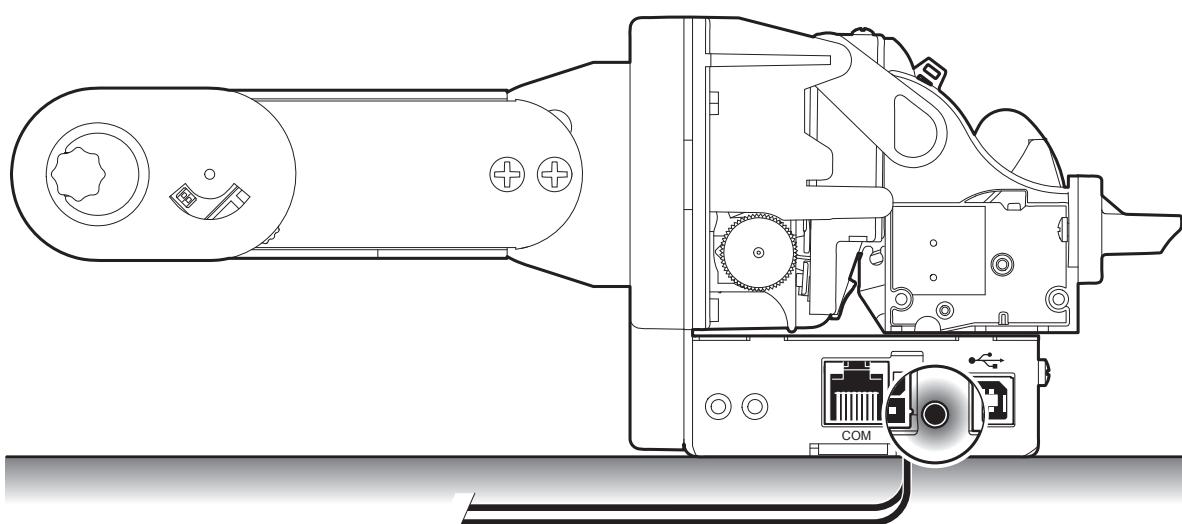


The green status led turn on  
and the device is ready.

## 4.6 Loading the paper roll


To change the paper proceed as follows.

1

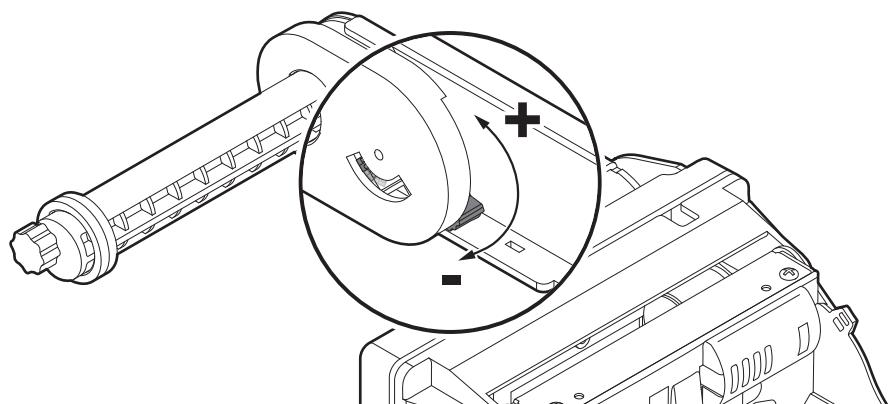


Adjust the paper stock  
(see previous paragraphs).

2

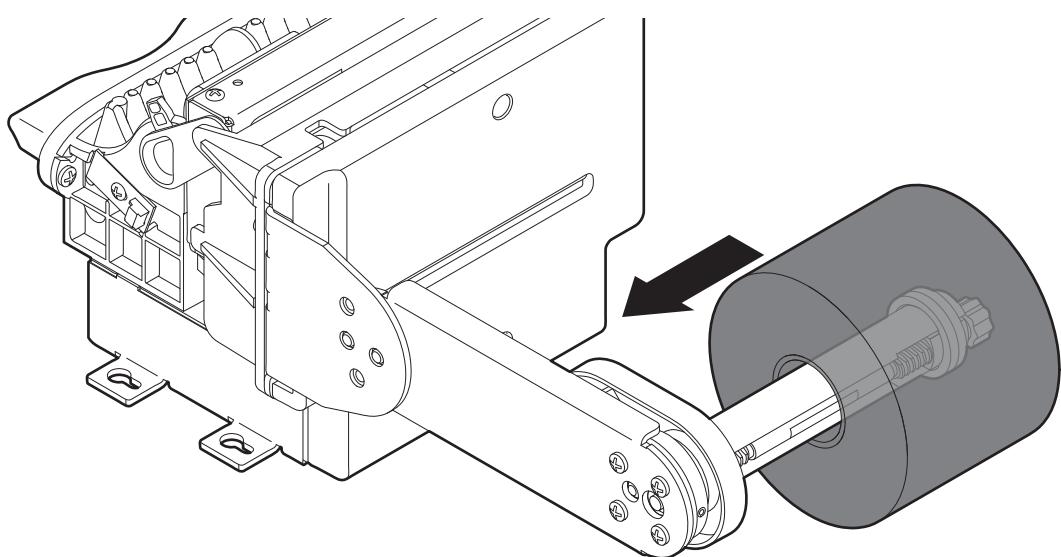


Insert the paper roll on the pin  
of the roll holder.

3

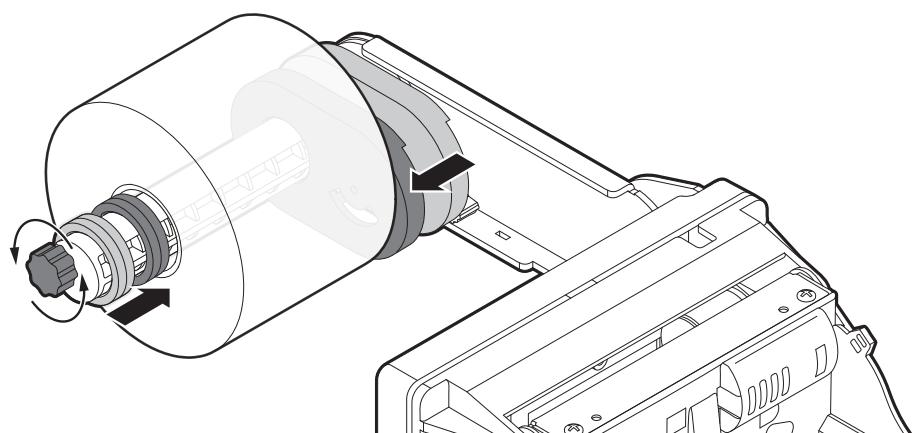


Adjust the paper width  
(see previous paragraphs).

4

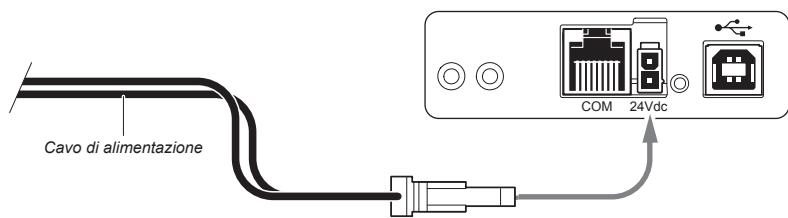


Accendere il dispositivo  
(vedere paragrafi precedenti).

5

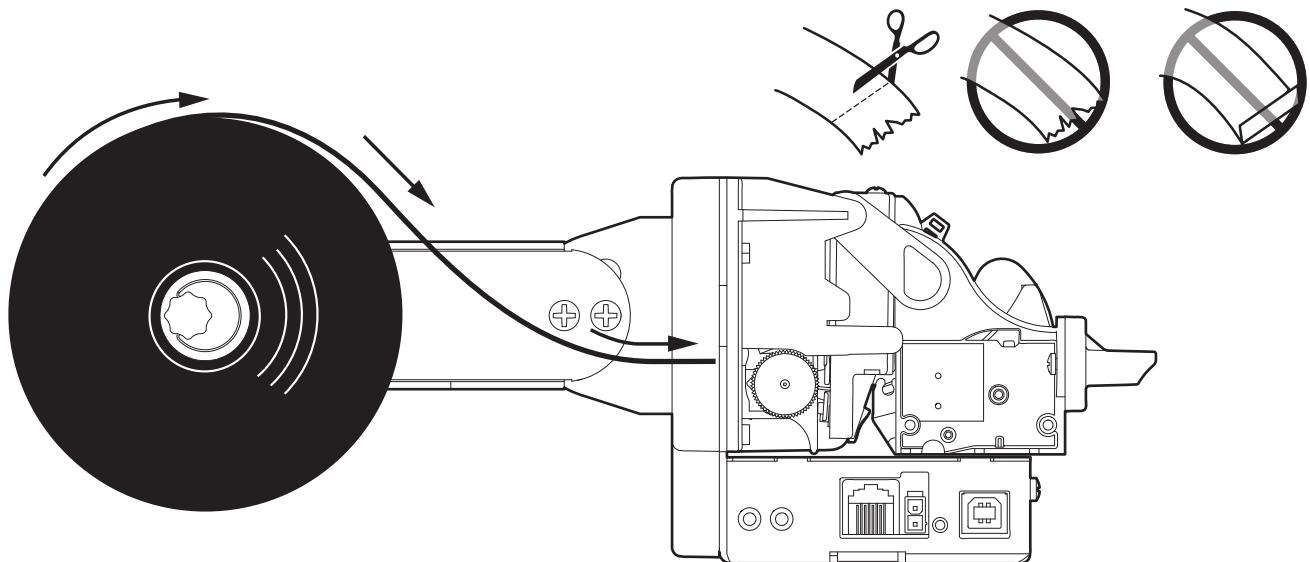

Inserire la carta nella bocca di ingresso  
rispettando il verso di rotazione mostrato in figura.

5

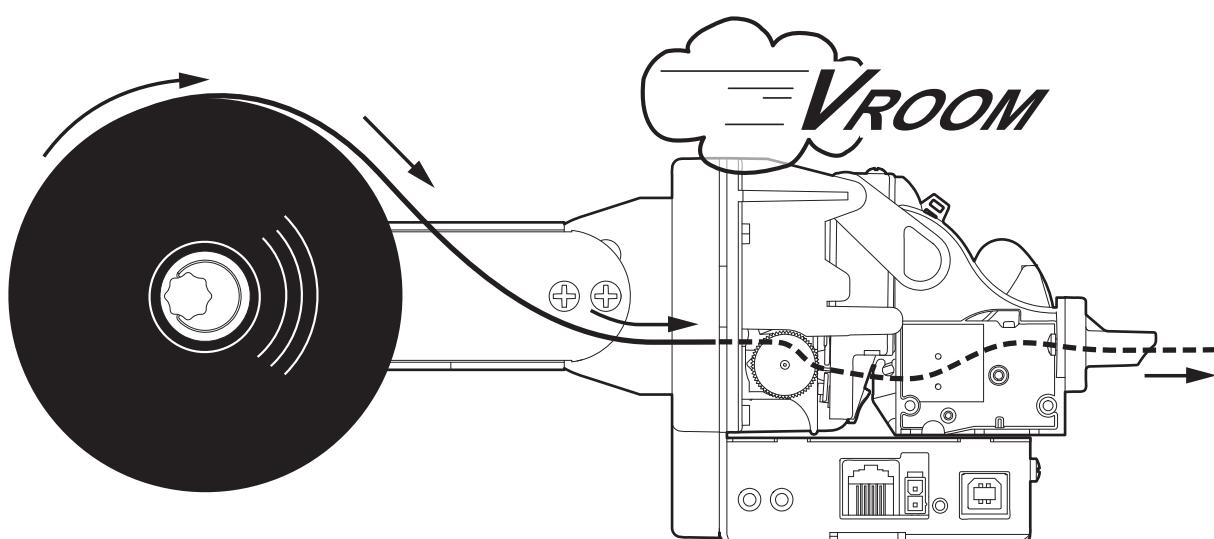

Attendere il caricamento automatico della carta.

NOTE: At every change of paper roll, check inside the device and remove any scraps of paper and accumulated dust (see par.6.2).

## 4.7 Anti-jamming system


### Standard model

The withdrawal of the ticket before the end of printing, may damage the printing mechanism or the paper ripping resulting in probable jam.

The device is equipped with an anti-jamming system that starts operating when the user tries to pick up the ticket while printing is still in progress.

This system is composed of an oscillating plane placed under the inspection door and of a fork sensor that detects the movements of the oscillating plane.

The user that make a ticket withdrawal before the printing end, causes the tension of the paper resulting in the lowering of the oscillating plane. This movement engages the fork sensor: printing is interrupted and the ticket is cut instantly.

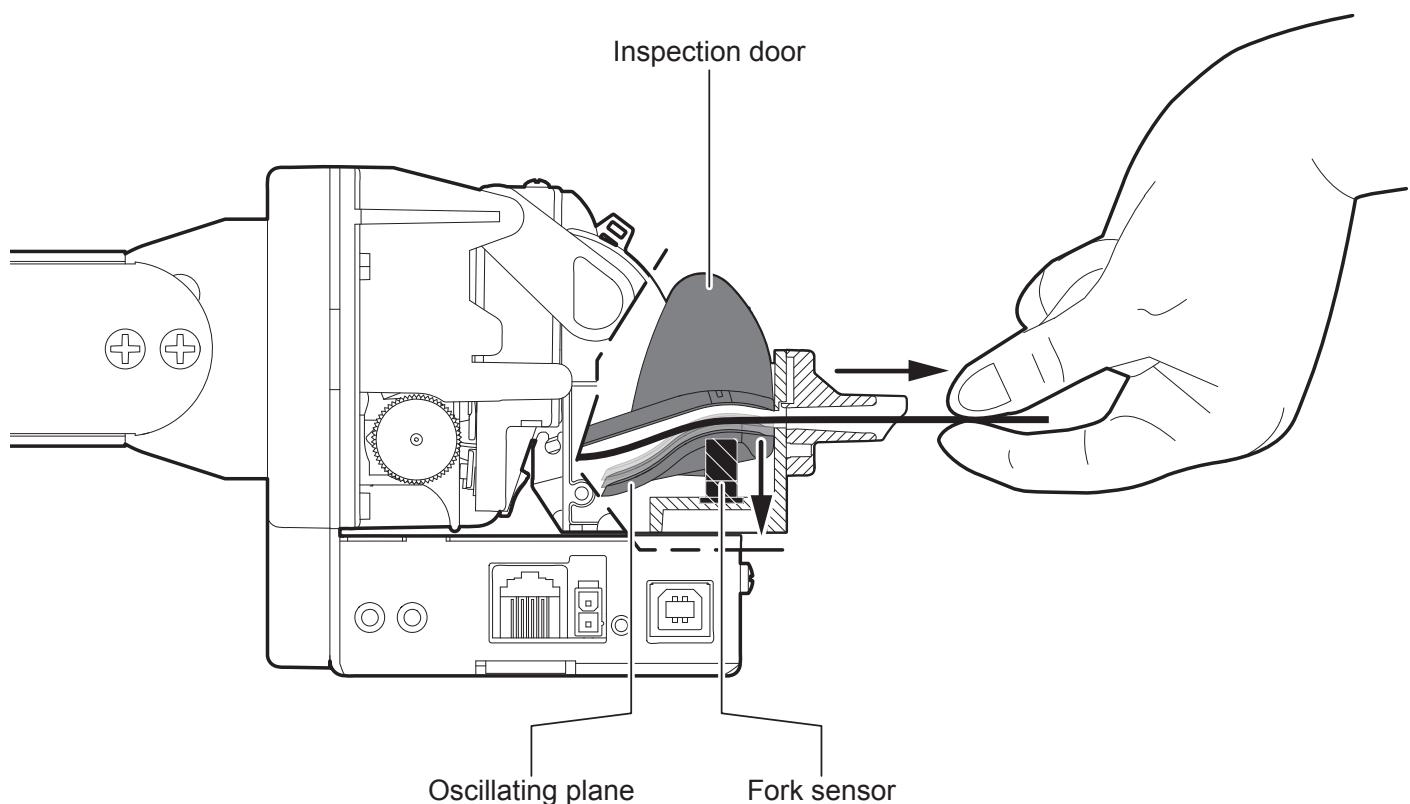


## 4.8 Issuing ticket

The device allows you to choose between different operating modes for the issuance of printed tickets. The operating modes shown in the following images, depend on the settings of the configuration parameters and commands sent to the device.

### "EJECT" mode (standard model)


1

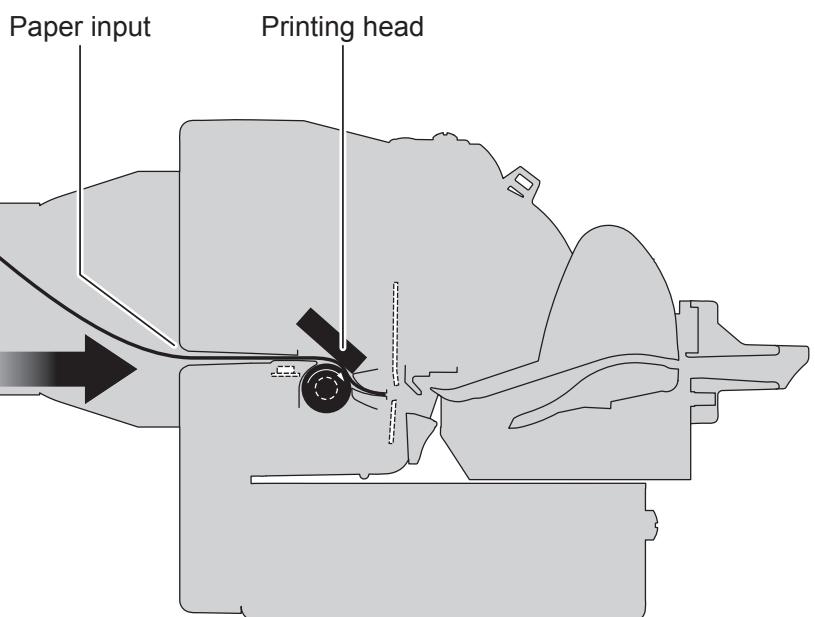

The device starts the ticket printing.

2

Printing head      Paper output

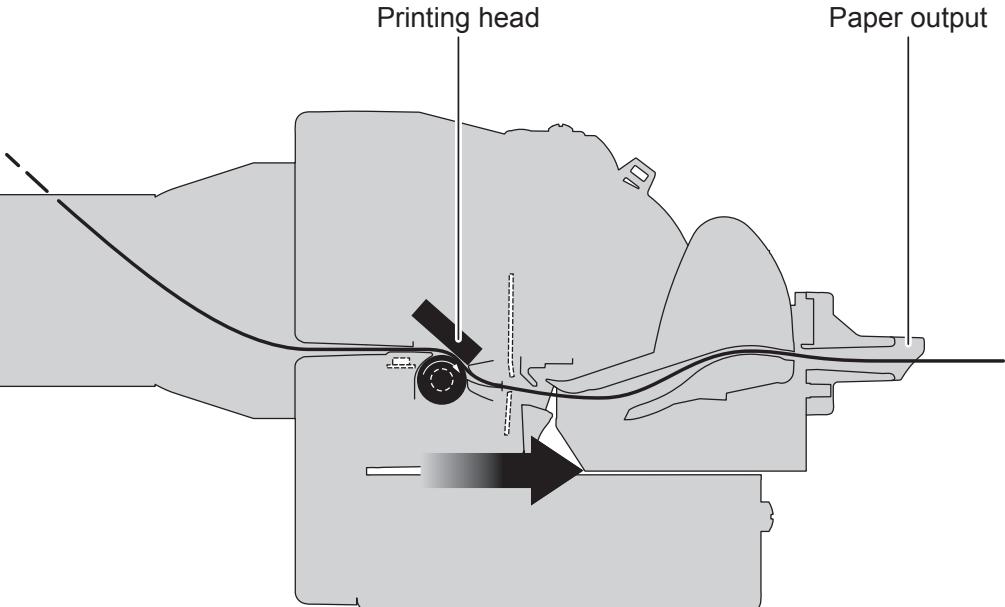


The device continues the ticket printing while  
the portion already printed starts to get out of the cutter.

**3**

Cutter

Paper output


Ticket presented

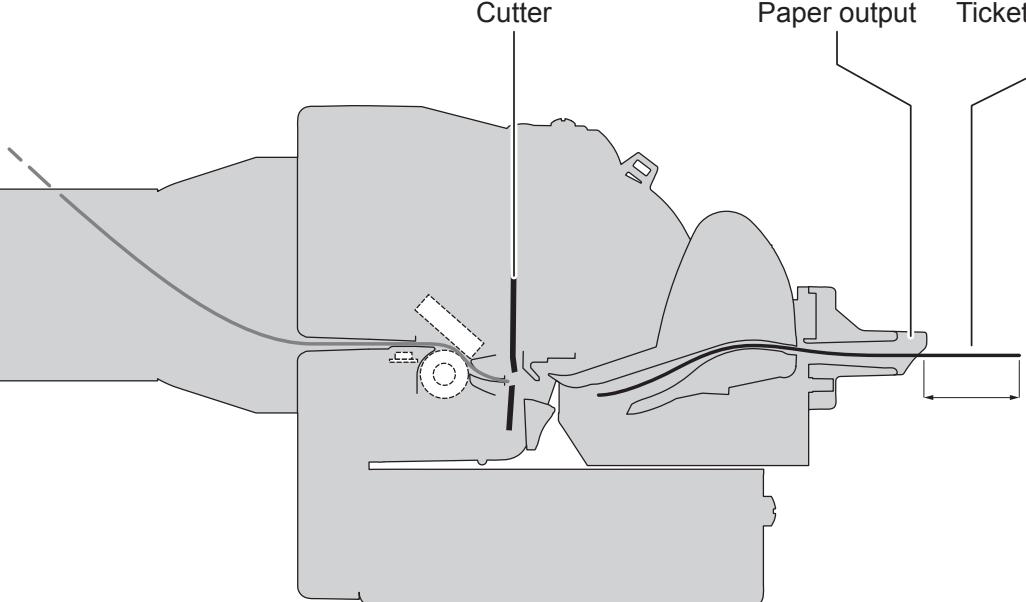

When printing ends, the device cuts the ticket printed  
and presents a portion of it on the paper mouth

**4**


Paper output Ticket withdrew

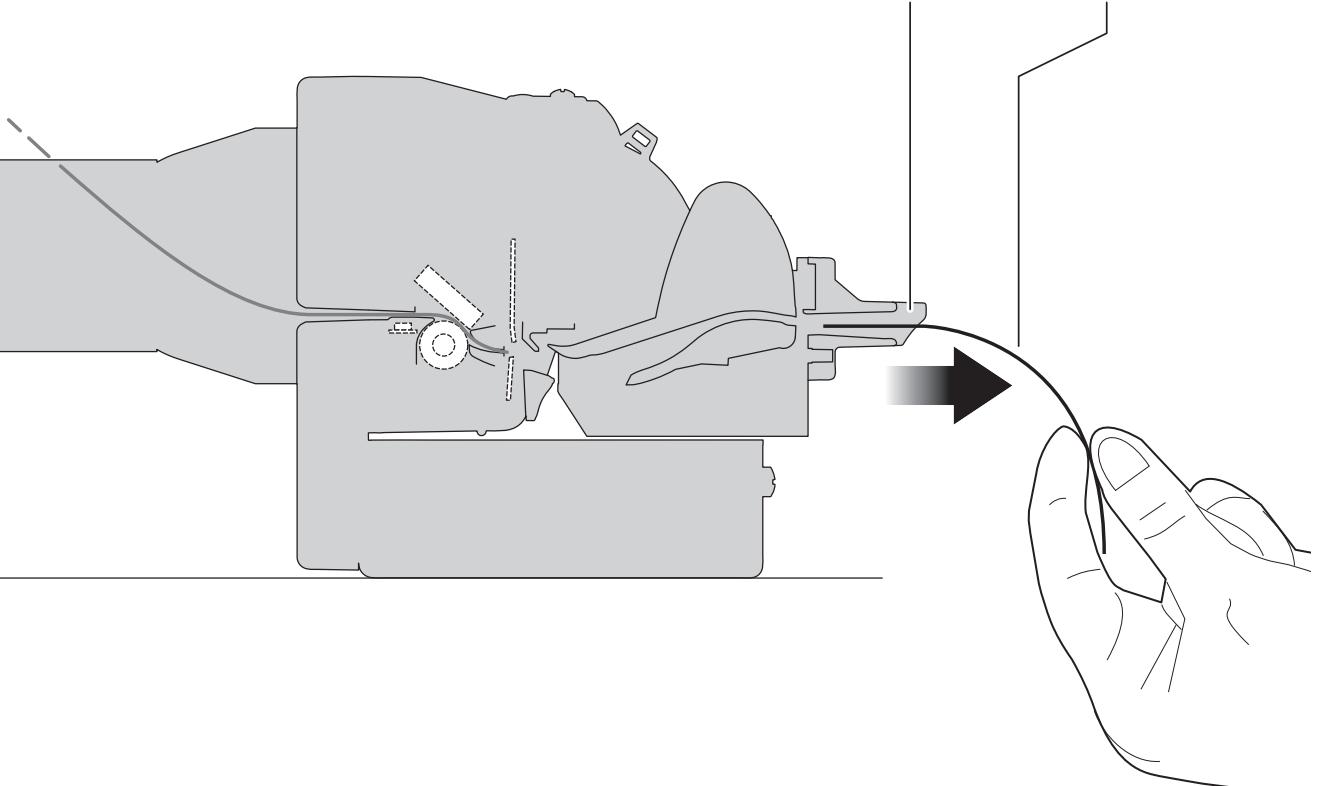

The user withdraws the ticket from the paper mouth.


**“EJECT” mode (model with motorized ejector)**

1

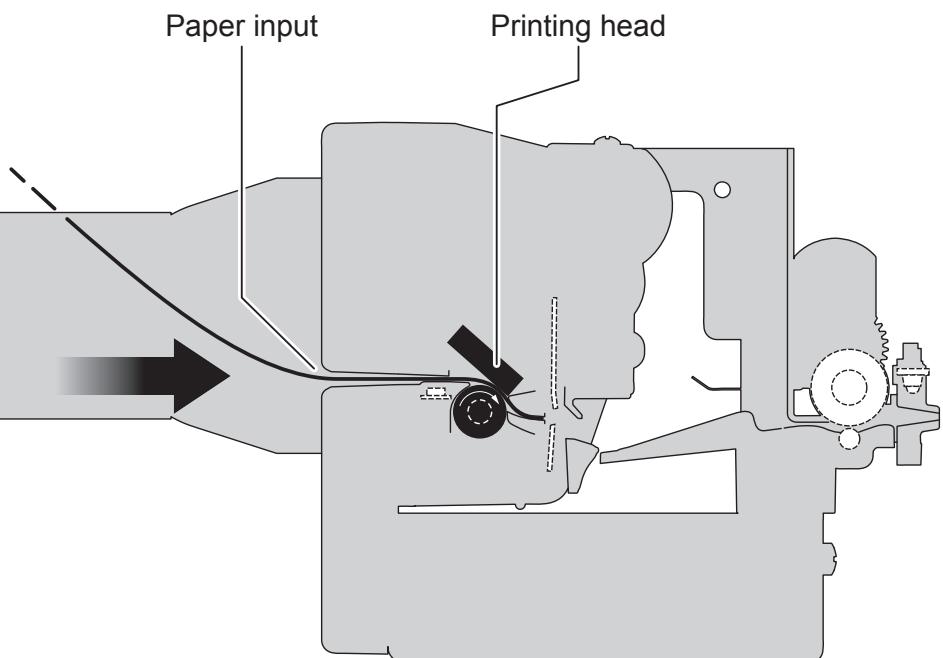


The device starts the ticket printing.

2

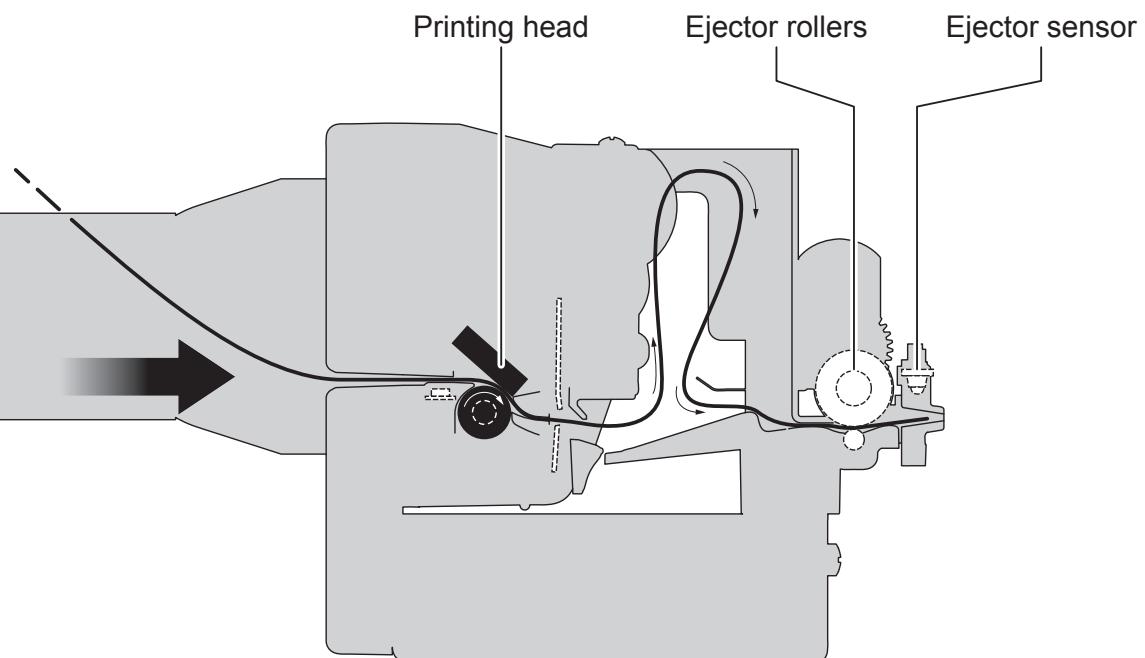


The ticket advances ahead to engage the ejector sensor and is caught between the ejector rollers. The printed portion of ticket is collected in the space between cutter and ejector while the device continues printing.

3

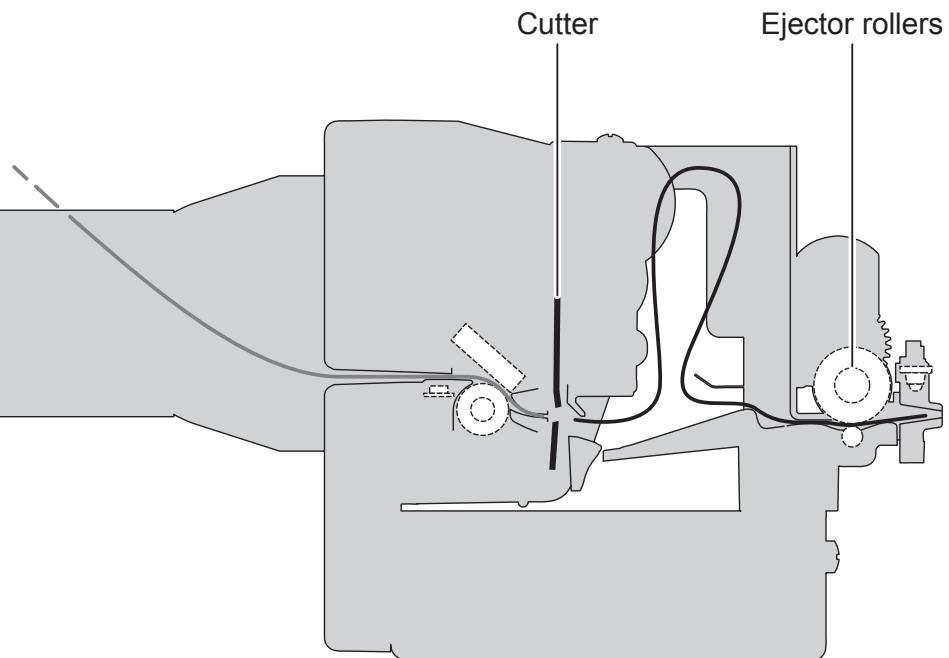

When printing ends, the device cuts the ticket printed.


4

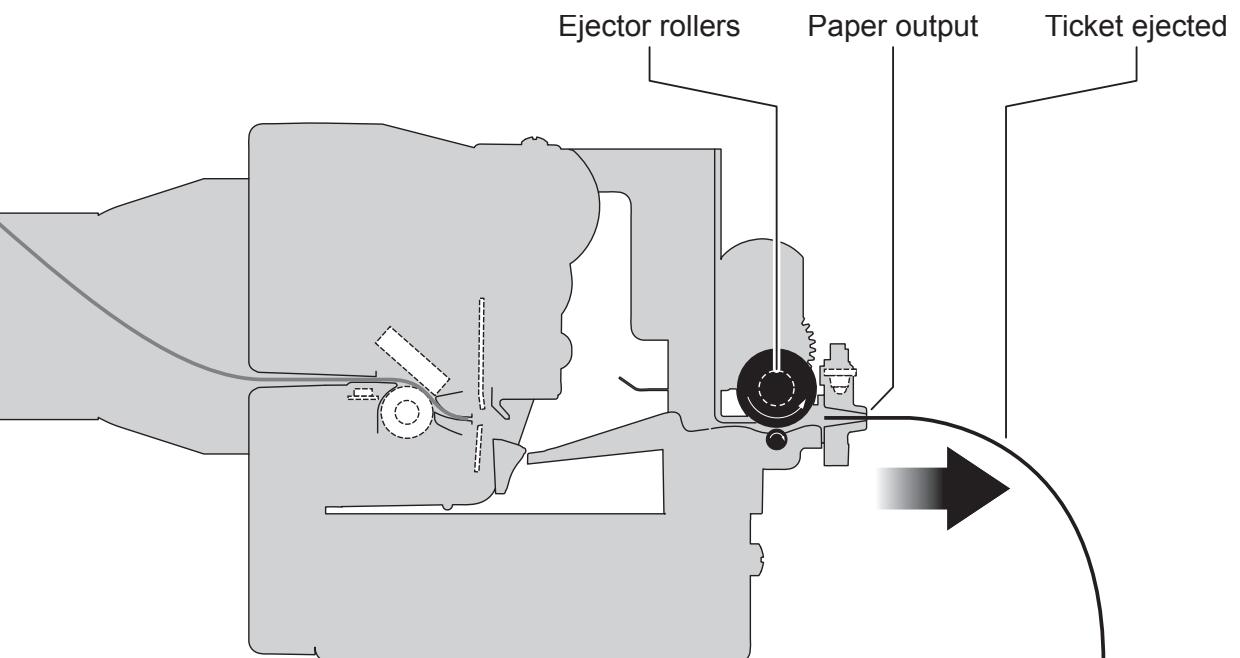

The device directly ejects the ticket


**"PRESENT-EJECT" mode (model with motorized ejector)**

1

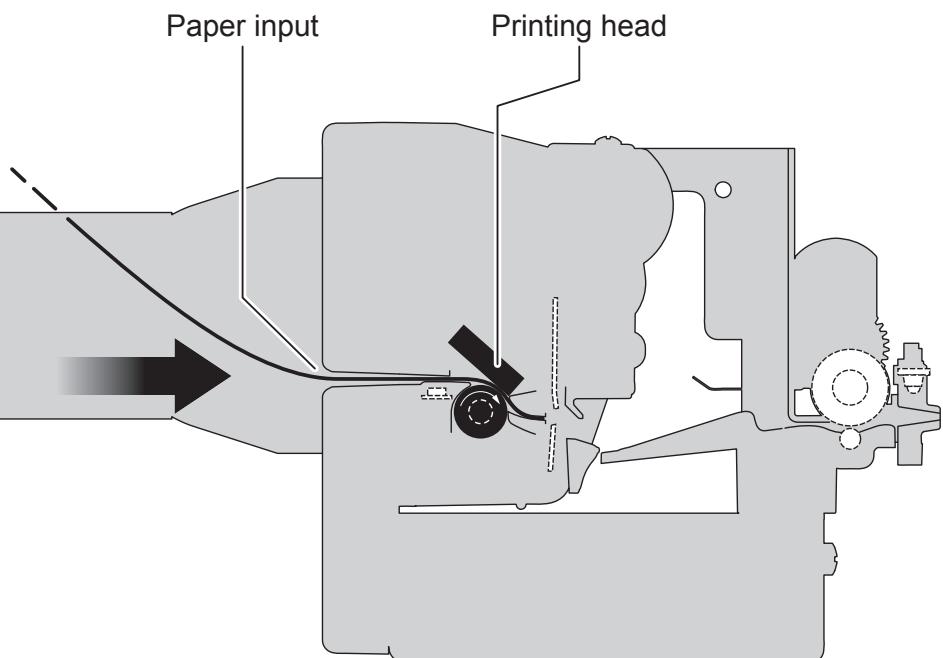


The device starts the ticket printing.

2

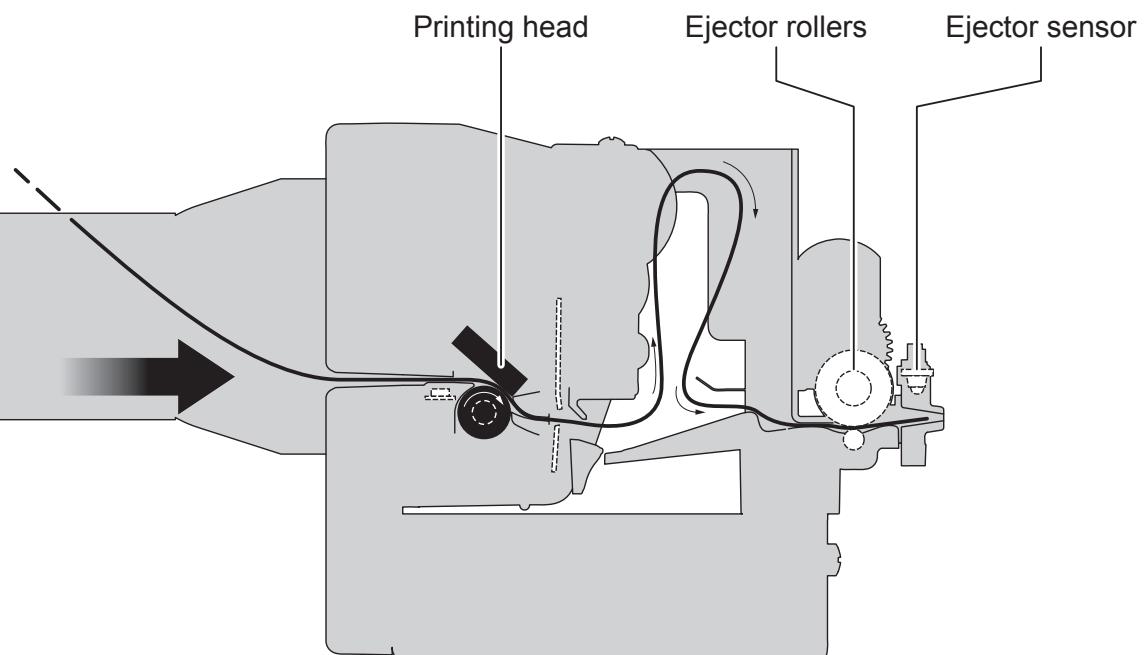


The ticket advances ahead to engage the ejector sensor and is caught between the ejector rollers. The printed portion of ticket is collected in the space between cutter and ejector while the device continues printing.

3

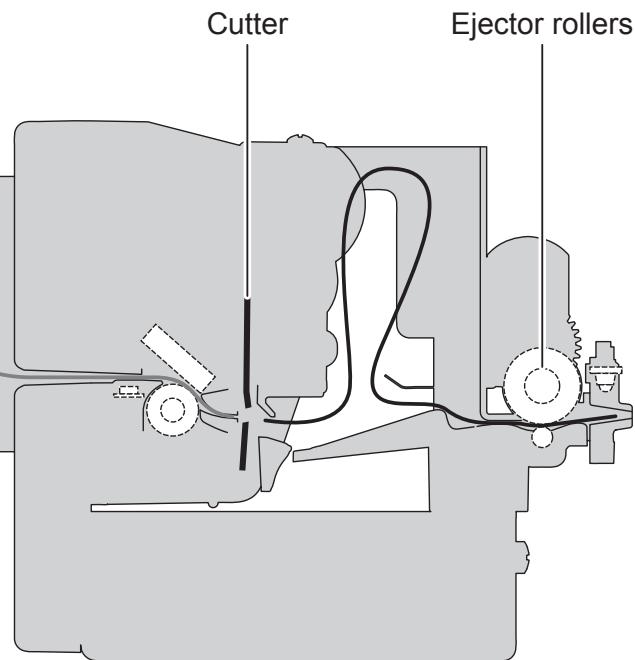


When printing ends, the device cuts the ticket printed.

4

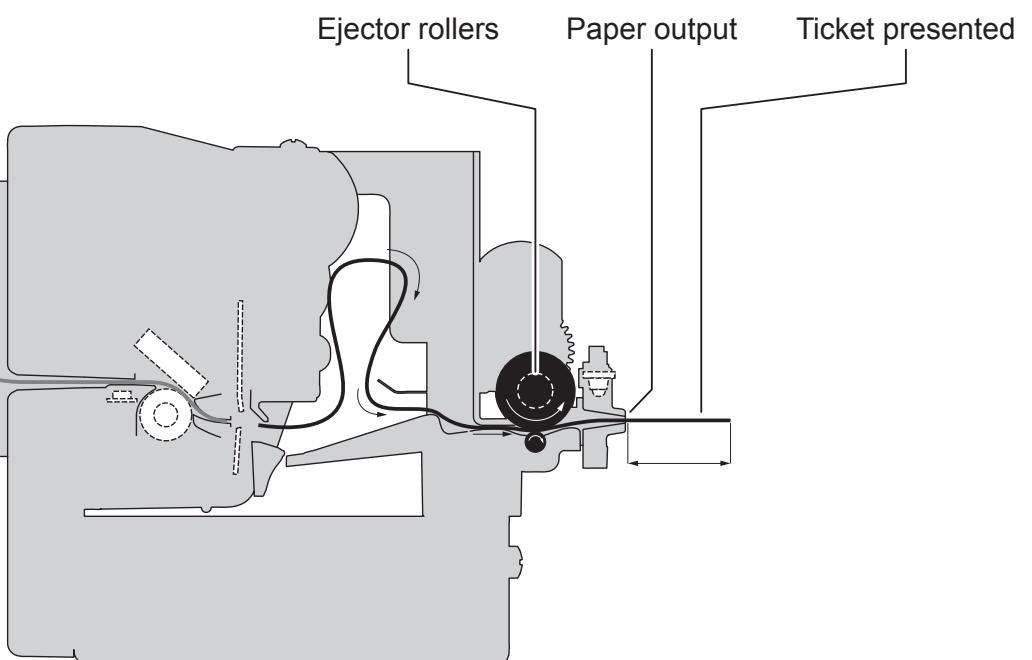


The device presents a portion of the ticket printed on the paper mouth.

5

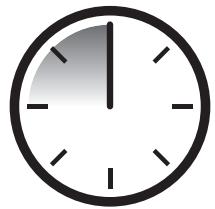

The ticket is waiting on the paper mouth for a preset period of time

6

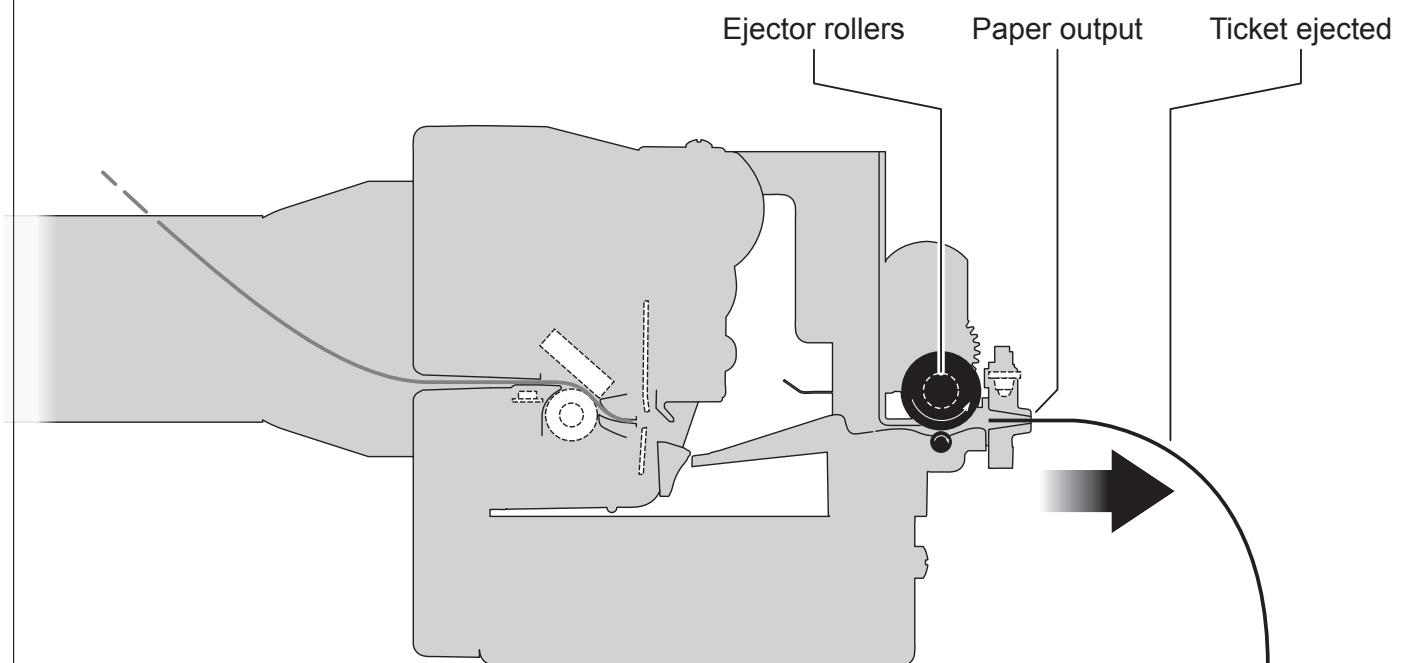


The device directly ejects the ticket

**"PRESENT" mode (model with motorized ejector)**

1


Paper input      Printing head

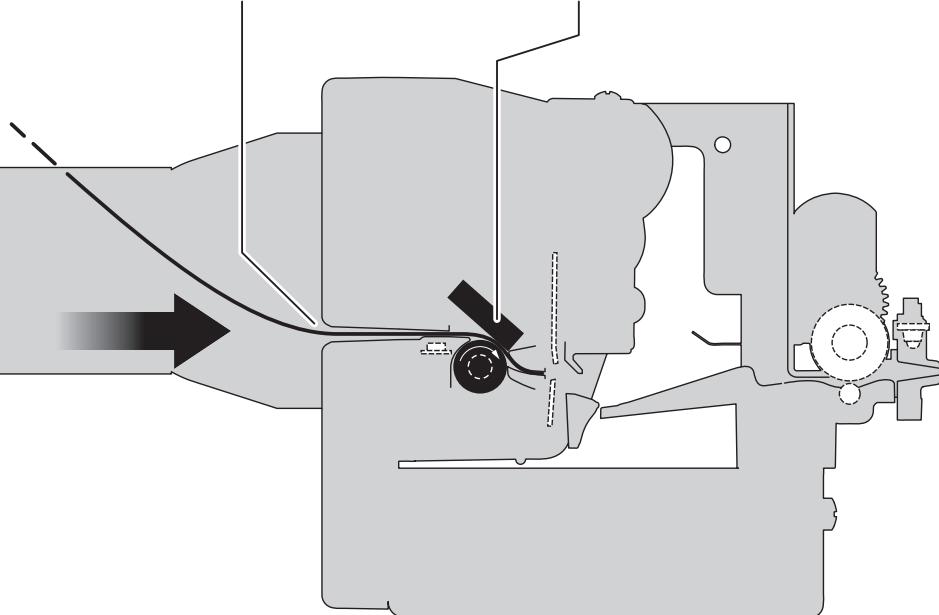

The device starts the ticket printing.


2

Printing head      Ejector rollers      Ejector sensor

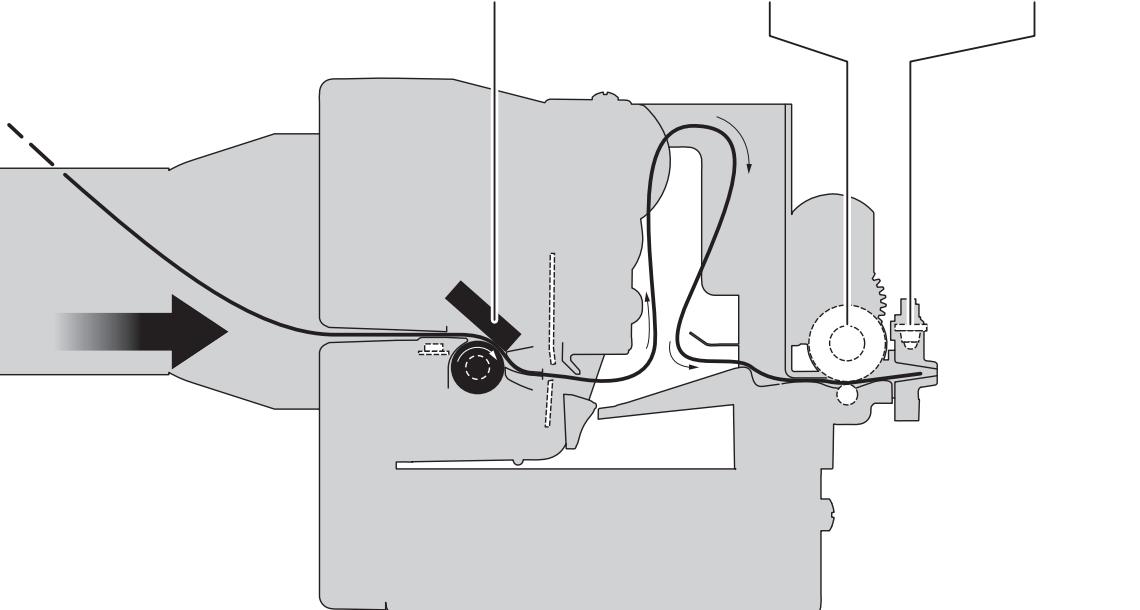


The ticket advances ahead to engage the ejector sensor and is caught between the ejector rollers. The printed portion of ticket is collected in the space between cutter and ejector while the device continues printing.

3

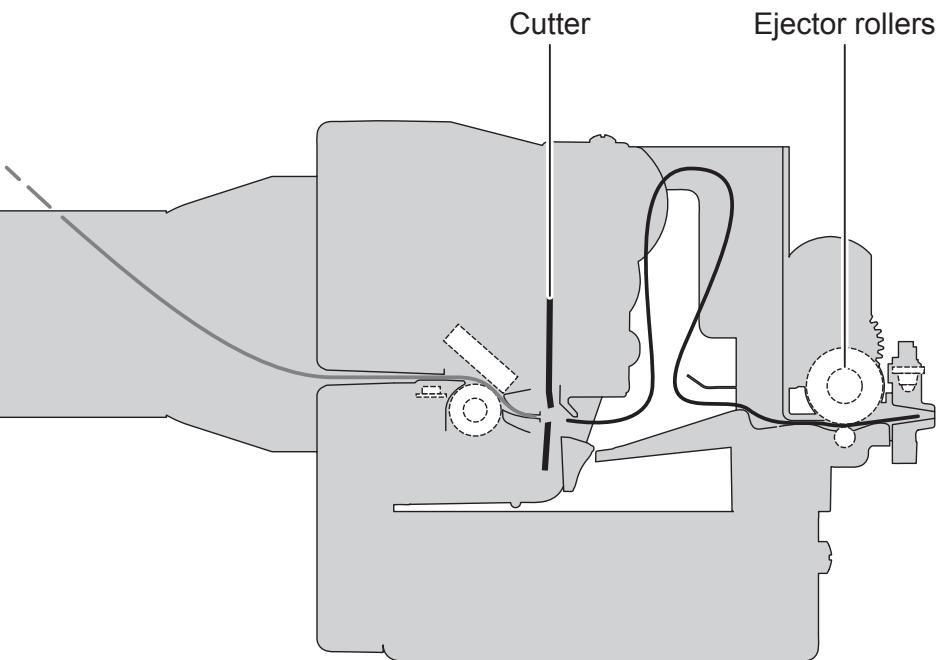


When printing ends, the device cuts the ticket printed.

4

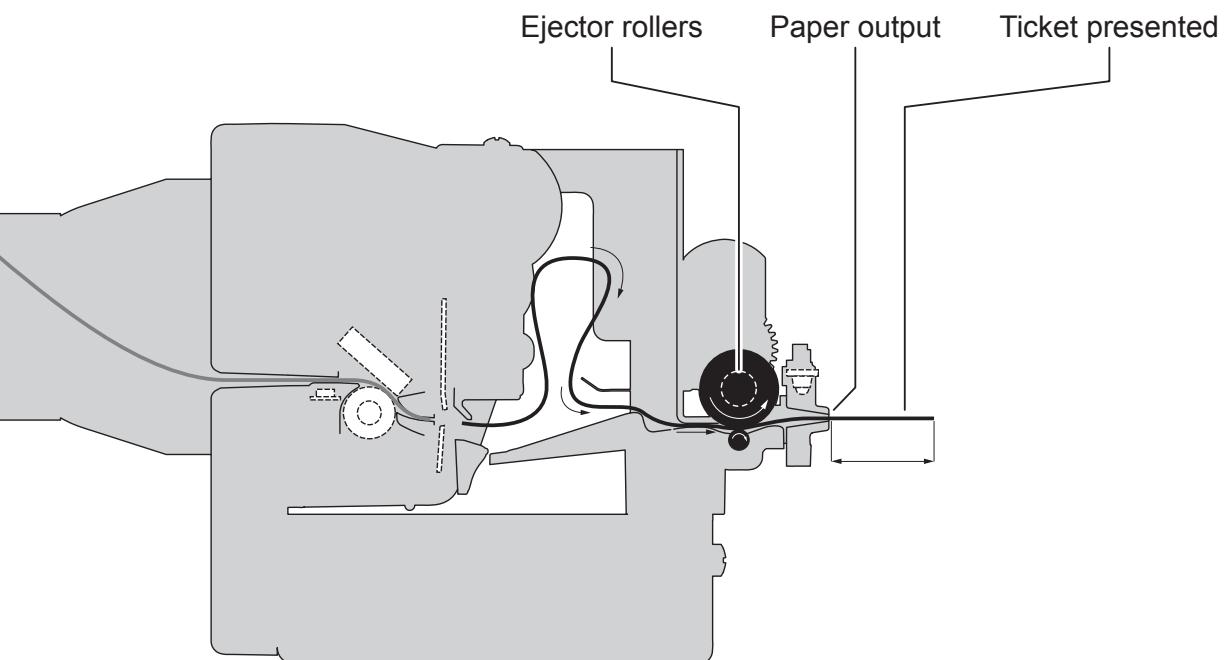

The device presents a portion of the ticket printed on the paper mouth.

5

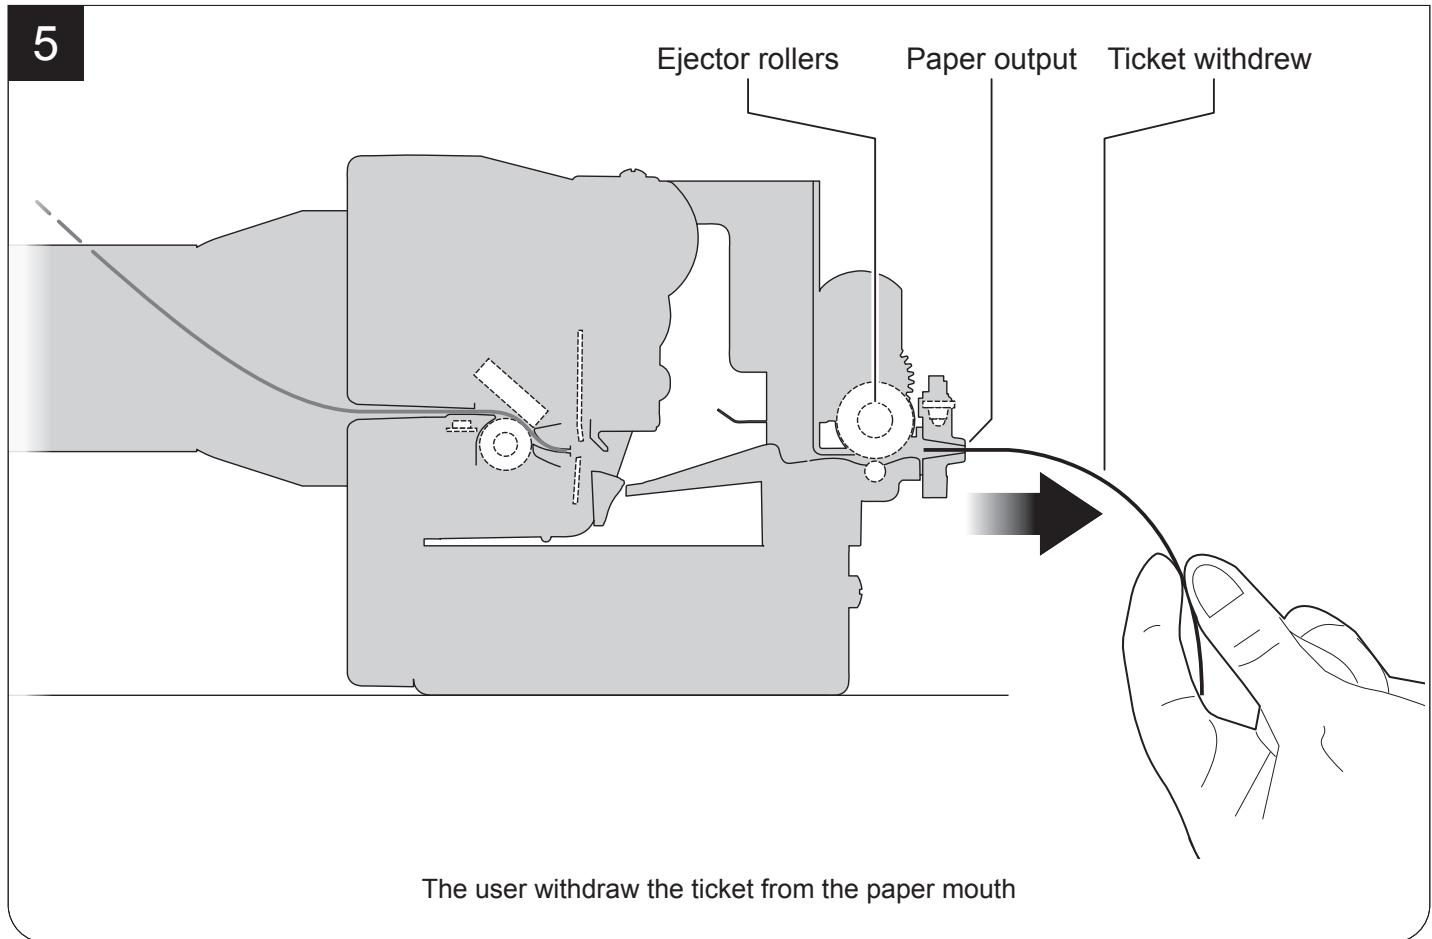

**NOTE:**

For further information, refer to chapter 5 and to the Commands Manual.




# 5 CONFIGURATION

## 5.1 Configuration mode


To enter the configuration mode and print a setup report with the operating parameters of the device, proceed as follows.

1

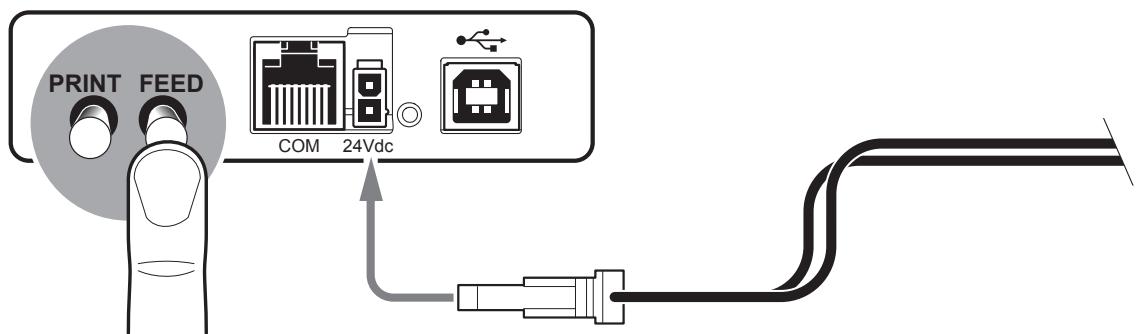


While pressing the FEED key,  
switch on the device by inserting the power supply cable.

2

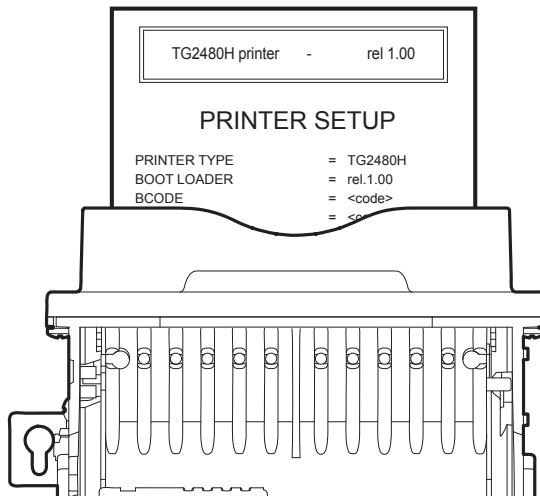

The device prints the report with  
parameters for settings.


3

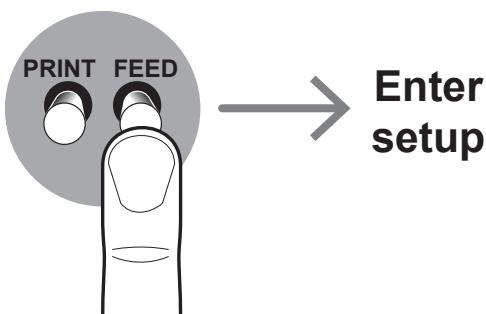

Hold down the FEED key to enter  
the configuration mode.

## 5.2 Setup report

The following figure shows the setup report of the device. The shown values for parameters are sample values; for the list and the description of device parameters see the following paragraphs.

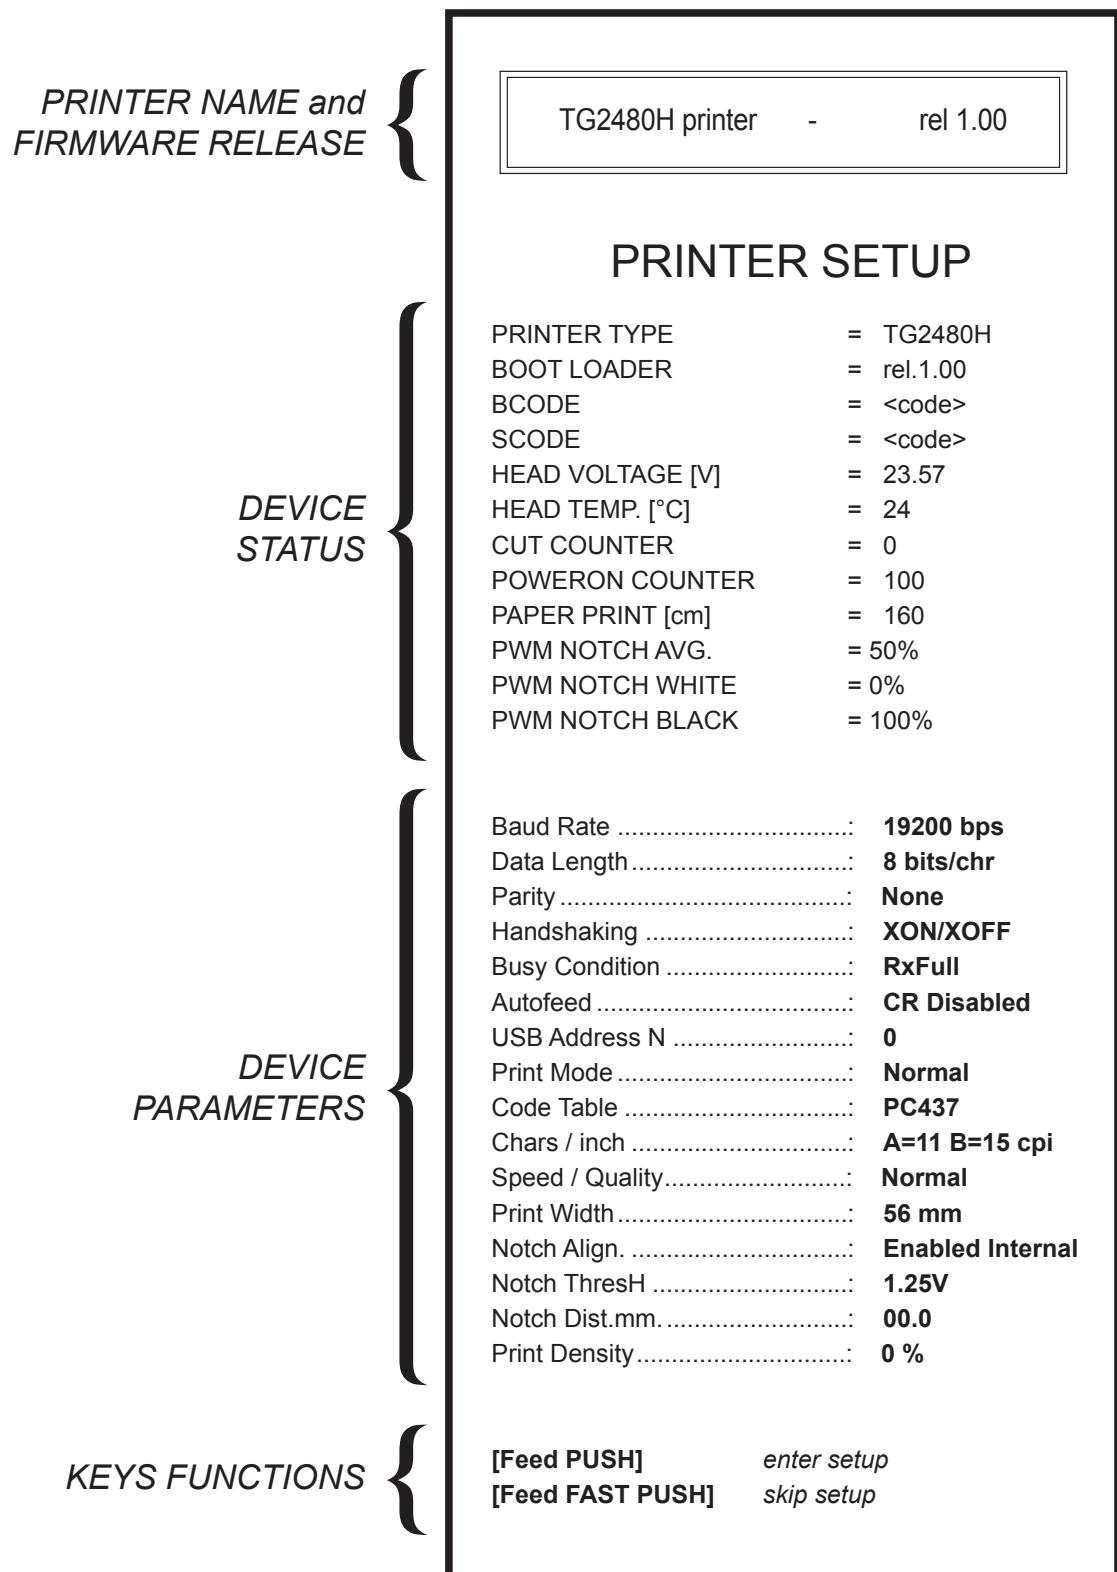

## 5.3 Printer status

The printer operating status is indicated in the configuration print-out in which, next to the name of the components displayed, the following information is given:

|                         |   |
|-------------------------|---|
| <b>PRINTER TYPE</b>     | <i>device model</i>                         |
| <b>BOOT LOADER</b>      | <i>boot loader release</i>                  |
| <b>BCODE</b>            | <i>release of the BCODE firmware module</i> |
| <b>SCODE</b>            | <i>release of the SCODE firmware module</i> |
| <b>HEAD VOLTAGE</b>     | <i>voltage of the head</i>                  |
| <b>HEAD TEMP</b>        | <i>temperature of the head</i>              |
| <b>CUT COUNTER</b>      | <i>number of cuts made</i>                  |
| <b>POWER ON COUNTER</b> | <i>number of power-ups made</i>             |
| <b>PAPER PRINT</b>      | <i>centimetres of paper printed</i>         |
| <b>PWM NOTCH AVG.</b>   | <i>for future use</i>                       |
| <b>PWM NOTCH WHITE</b>  | <i>for future use</i>                       |
| <b>PWM NOTCH BLACK</b>  | <i>for future use</i>                       |

## 5.4 Printer parameters

This printer allows the configuration of the parameters listed in the following table.

The parameters marked with the symbol <sup>D</sup> are the default values.

Settings remain active even after the printer has been turned off and they are stored in non-volatile memory.

### BAUD RATE

*Communication speed of the serial interface:*

115200 <sup>D</sup>    19200    2400  
57600        9600        1200  
38400        4800

NOTE: Parameter valid only with serial interface.

### DATA LENGTH

*Number of bit used for characters encoding:*

7 bits/car  
8 bits/car <sup>D</sup>

NOTE: Parameter valid only with serial interface.

### PARITY

*Bit for the parity control of the serial interface:*

None <sup>D</sup> = parity bit omitted  
Even = even value for parity bit  
Odd = odd value for parity bit

NOTE: Parameter valid only with serial interface.

### HANDSHAKING

*Handshaking:*

XON/XOFF <sup>D</sup> = software handshaking  
Hardware = hardware handshaking (CTS/RTS)

NOTES:

Parameter valid only with serial interface.

When the receive buffer is full, if handshaking is set to XON/XOFF, the printer sends the XOFF (0x13) on the serial port. When the receive buffer has cleared once again, if handshaking is set to XON/XOFF, the printer sends the XON (0x11) on the serial port.

### BUSY CONDITION

*Activation mode for Busy signal:*

OffLine/ RXFull = Busy signal is activated when the printer is both in OffLine status and the buffer is full  
RXFull <sup>D</sup> = Busy signal is activated when the buffer is full

NOTE: Parameter valid only with serial interface.

### AUTOFEED

*Setting of the Carriage Return character:*

CR disabled <sup>D</sup> = Carriage Return disabled  
CR enabled = Carriage Return enabled

|                              |  |                           |              |                              |              |              |              |              |               |              |  |
|------------------------------|--|---------------------------|--------------|------------------------------|--------------|--------------|--------------|--------------|---------------|--------------|--|
| <b>USB ADDRESS N</b>         | Numerical address code for the univocal identification of the USB device (in case of more than a USB device connected with the same PC):   |                           |              |                              |              |              |              |              |               |              |  |
|                              | 0 <sup>D</sup> 2      4      6      8<br>1            3      5      7      9   |                           |              |                              |              |              |              |              |               |              |  |
| <b>PRINT MODE</b>            | <i>Printing mode:</i><br><br><i>Normal <sup>D</sup> = enables printing in normal writing way</i><br><i>Reverse = enables printing rotated 180 degrees</i>  |                           |              |                              |              |              |              |              |               |              |  |
| <b>CODE TABLE [num]</b>      | <i>Characters table (character code).</i><br><br><table style="margin-left: auto; margin-right: auto;"> <tr><td><i>PC437 <sup>D</sup></i></td><td><i>PC865</i></td></tr> <tr><td><i>U.D.P. <sup>(1)</sup></i></td><td><i>PC858</i></td></tr> <tr><td><i>PC850</i></td><td><i>PC866</i></td></tr> <tr><td><i>PC860</i></td><td><i>VISCII</i></td></tr> <tr><td><i>PC863</i></td><td></td></tr> </table> | <i>PC437 <sup>D</sup></i> | <i>PC865</i> | <i>U.D.P. <sup>(1)</sup></i> | <i>PC858</i> | <i>PC850</i> | <i>PC866</i> | <i>PC860</i> | <i>VISCII</i> | <i>PC863</i> |  |
| <i>PC437 <sup>D</sup></i>    | <i>PC865</i>   |                           |              |                              |              |              |              |              |               |              |  |
| <i>U.D.P. <sup>(1)</sup></i> | <i>PC858</i>   |                           |              |                              |              |              |              |              |               |              |  |
| <i>PC850</i>                 | <i>PC866</i>   |                           |              |                              |              |              |              |              |               |              |  |
| <i>PC860</i>                 | <i>VISCII</i>  |                           |              |                              |              |              |              |              |               |              |  |
| <i>PC863</i>                 |  |                           |              |                              |              |              |              |              |               |              |  |
|                              | <p><b>NOTE:</b><br/>This parameter is not printed in the setup report of models with simplified chinese font GB2312. or with extended chinese font GB18030.</p> <p>(1) : U.D.P. = User-defined page</p>  |                           |              |                              |              |              |              |              |               |              |  |
| <b>CHARS / INCH</b>          | <i>Font selection:</i><br><br><i>A = 11 cpi, B = 15 cpi <sup>D</sup></i><br><i>A = 15 cpi, B = 20 cpi</i>  |                           |              |                              |              |              |              |              |               |              |  |
|                              | <p>NOTES: CPI = Characters Per Inch</p>  |                           |              |                              |              |              |              |              |               |              |  |
| <b>SPEED / QUALITY</b>       | <i>Setting of printing speed and printing quality:</i><br><br><i>Normal <sup>D</sup></i><br><i>High Speed</i>  |                           |              |                              |              |              |              |              |               |              |  |
| <b>PRINT WIDTH</b>           | <i>Width of printing area:</i><br><br><table style="margin-left: auto; margin-right: auto;"> <tr><td><i>52 mm</i></td><td><i>64 mm</i></td><td><i>76 mm <sup>D</sup></i></td></tr> <tr><td><i>56 mm</i></td><td><i>68 mm</i></td><td><i>80 mm</i></td></tr> <tr><td><i>60 mm</i></td><td><i>72 mm</i></td><td></td></tr> </table>  | <i>52 mm</i>              | <i>64 mm</i> | <i>76 mm <sup>D</sup></i>    | <i>56 mm</i> | <i>68 mm</i> | <i>80 mm</i> | <i>60 mm</i> | <i>72 mm</i>  |              |  |
| <i>52 mm</i>                 | <i>64 mm</i>   | <i>76 mm <sup>D</sup></i> |              |                              |              |              |              |              |               |              |  |
| <i>56 mm</i>                 | <i>68 mm</i>   | <i>80 mm</i>              |              |                              |              |              |              |              |               |              |  |
| <i>60 mm</i>                 | <i>72 mm</i>   |                           |              |                              |              |              |              |              |               |              |  |
| <b>NOTCH ALIGNMENT</b>       | <i>Management of the paper alignment:</i><br><br><i>Disabled <sup>D</sup> = the notch alignment is not performed</i><br><i>Enabled Internal <sup>(1)</sup> = the notch alignment is performed</i><br><i>Enabled External <sup>(1)</sup> = the notch alignment is performed</i>   |                           |              |                              |              |              |              |              |               |              |  |
|                              | <p><b>NOTE:</b><br/>(1) : The difference between the "Enabled Internal" and "Enabled External" values is reserved for future use: both the values enable the notch alignment.</p>  |                           |              |                              |              |              |              |              |               |              |  |

**NOTCH THRESHOLD**

*Threshold value for the recognition of the presence of notch by the notch sensor:*

|                    |       |       |
|--------------------|-------|-------|
| 0.75V              | 1.50V | 2.25V |
| 1.00V              | 1.75V | 2.75V |
| 1.25V <sup>D</sup> | 2.00V | 2.50V |

NOTE: If the “Notch Alignment” parameter is disabled, the “Notch Threshold” parameter is not printed.

**NOTCH DISTANCE**

*“Notch Distance” is the minimum distance (in mm) between the upper edge of ticket and the notch.*

*The numeric value of the distance is made up with the following three parameters for the setting of three digits (two for the integer part of the number and one for the decimal part):*

**NOTCH DISTANCE [mm x 10]**

*Setting the digit for tens:*

|                |   |
|----------------|---|
| 0 <sup>D</sup> | 1 |
|----------------|---|

**NOTCH DISTANCE [mm x 1]<sup>(1)</sup>**

*Setting the digit for units:*

|                |   |   |   |   |
|----------------|---|---|---|---|
| 0 <sup>D</sup> | 2 | 4 | 6 | 8 |
| 1              | 3 | 5 | 7 | 9 |

**NOTCH DISTANCE [mm x .1]**

*Setting the digit for decimals:*

|                |   |   |   |   |
|----------------|---|---|---|---|
| 0 <sup>D</sup> | 2 | 4 | 6 | 8 |
| 1              | 3 | 5 | 7 | 9 |

**NOTES:**

For example, to set the notch distance to 10 mm, modify the parameters as follows:

Notch Distance [mm x 10] = 1

Notch Distance [mm x 1] = 0

Notch Distance [mm x .1] = 0

If the “Notch Alignment” parameter is disabled, the “Notch Distance” parameter is not printed

(1) : The values of “Notch Distance [mm x 1]” > 2 can be set only if “Notch Distance [mm x 10]” = 0.

**PRINT DENSITY**

*Adjusting the printing density:*

|      |                |      |
|------|----------------|------|
| -50% | -12%           | +25% |
| -37% | 0 <sup>D</sup> | +37% |
| -25% | +12%           | +50% |

## 5.5 Hexadecimal dump

This function is used for the diagnosis of the characters received from the communications port. Characters are printed as hexadecimal code and the corresponding ASCII code (see below). Each line is preceded by a counter in hexadecimal that indicates the number of bytes received.

During the startup, if you hold down the FEED key, the printer enters the self-test routine and print the setup report. The printer remains in standby until a key is pressed or characters are received through the communication port (Hexadecimal Dump mode). For each character sent, the ticket shows the hexadecimal value and the ASCII codes (if the characters are underlined, the receive buffer is full). Shown below is an example of a Hexadecimal Dump:

| HEXADECIMAL DUMP |    |    |    |    |     |                  |
|------------------|----|----|----|----|-----|------------------|
| 31               | 32 | 33 | 34 | 35 | ... | <b>12345</b> ... |
| 39               | 30 | 31 | 32 | 33 | ... | <b>90123</b> ... |
| 37               | 38 | 39 | 75 | 69 | ... | <b>789ui</b> ... |
| 68               | 6B | 6A | 73 | 64 | ... | <b>hkjsd</b> ... |
| 73               | 64 | 66 | 6B | 6A | ... | <b>sdfkj</b> ... |
| 66               | 73 | 64 | 66 | 6B | ... | <b>fsdfk</b> ... |
| 65               | 69 | 6F | 79 | 75 | ... | <b>eioyu</b> ... |
| 6F               | 72 | 69 | 75 | 77 | ... | <b>oriuw</b> ... |
| 6F               | 75 | 77 | 65 | 72 | ... | <b>ouwer</b> ... |
| 77               | 65 | 72 | 69 | 6F | ... | <b>werio</b> ... |
| 72               | 69 | 6F | 75 | 77 | ... | <b>riouw</b> ... |
| 6B               | 6C | 73 | 64 | 66 | ... | <b>klsdf</b> ... |
| 64               | 66 | 6B | 73 | 64 | ... | <b>dfksd</b> ... |
| 73               | 64 | 66 | 6B | 6A | ... | <b>sdfkj</b> ... |
| 66               | 6B | F2 | 6A | 73 | ... | <b>fk≥j</b> ...  |
| 6A               | 6B | 6C | 68 |    |     | <b>jklh</b>      |




# 6 MAINTENANCE

## 6.1 Paper jam


### Standard model

1

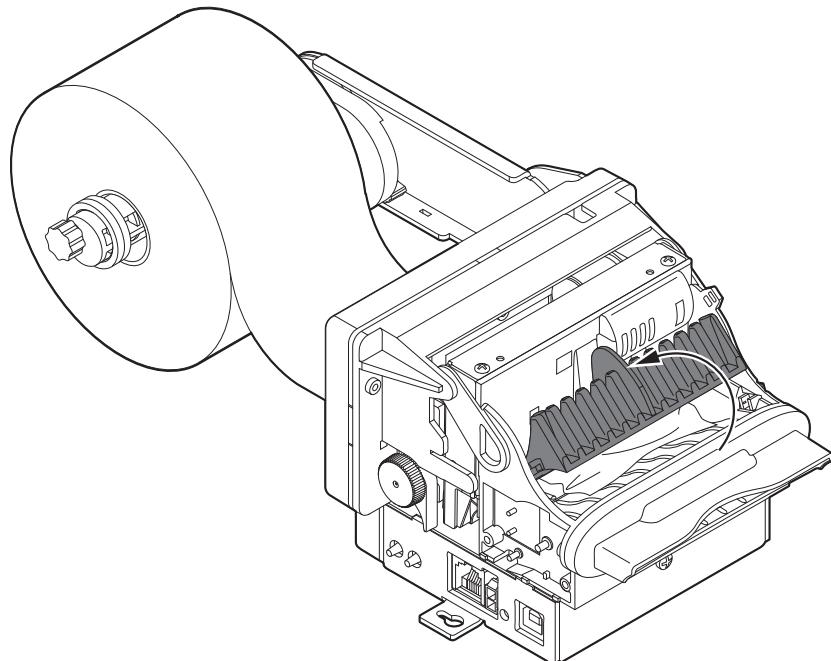


Lift the inspection door.

2

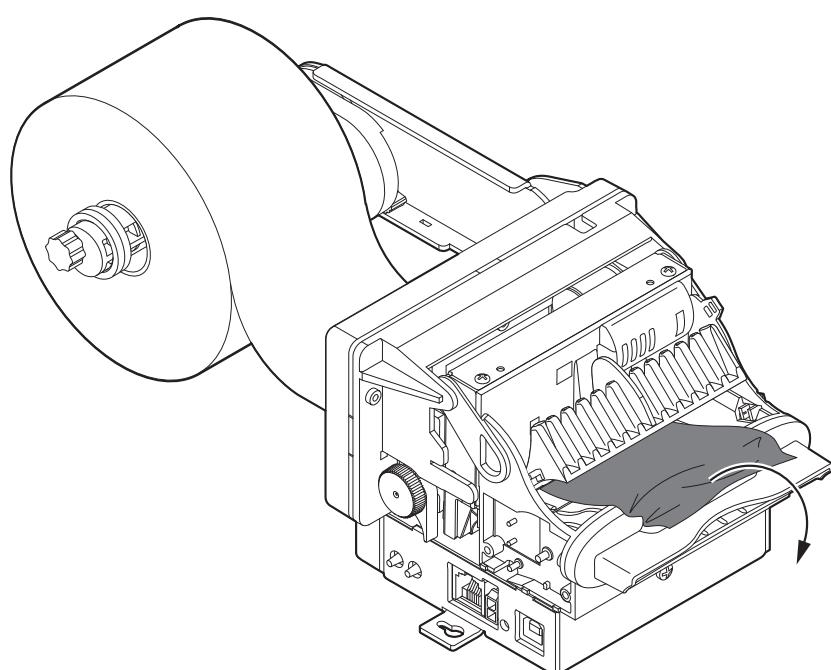


Remove any scraps of paper  
from the front side of the device.

3

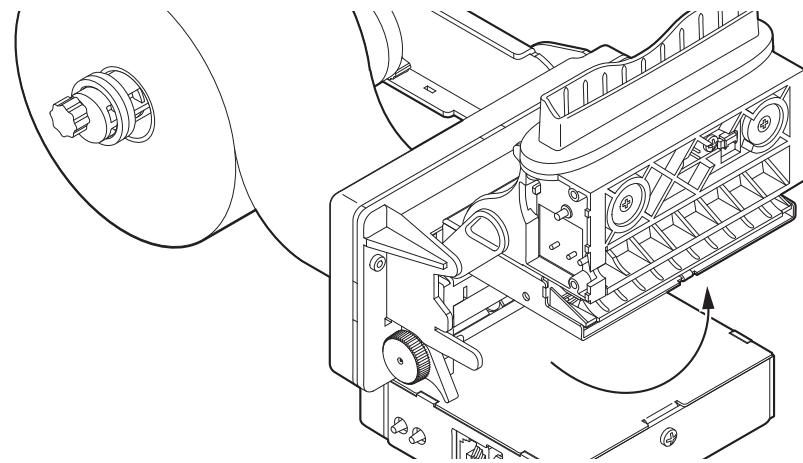


Open the device  
(see previous paragraphs).

4

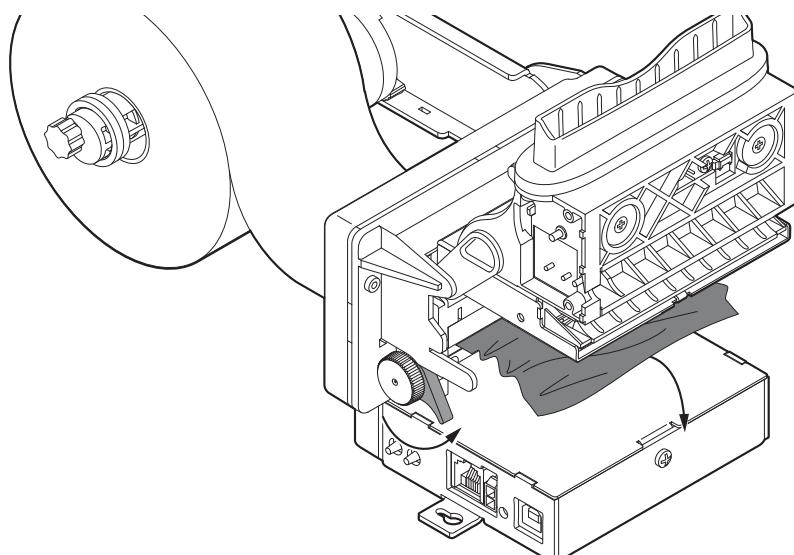

Lift the unlocking lever for the rubber roller  
and remove any scraps of paper from the printing mechanism.


5

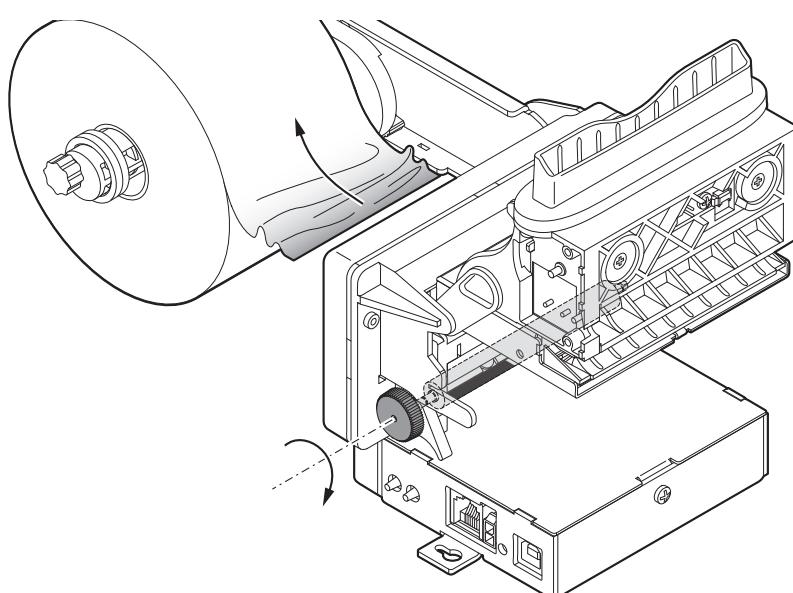

Rotate clockwise the rubber roller  
to eject the paper from the rear side of the device.


## Model with motorized ejector

1

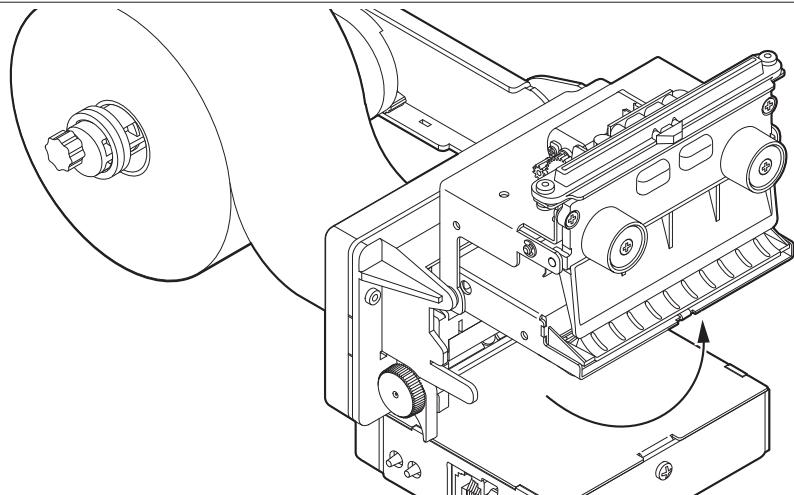


Open the device  
(see previous paragraphs).

2

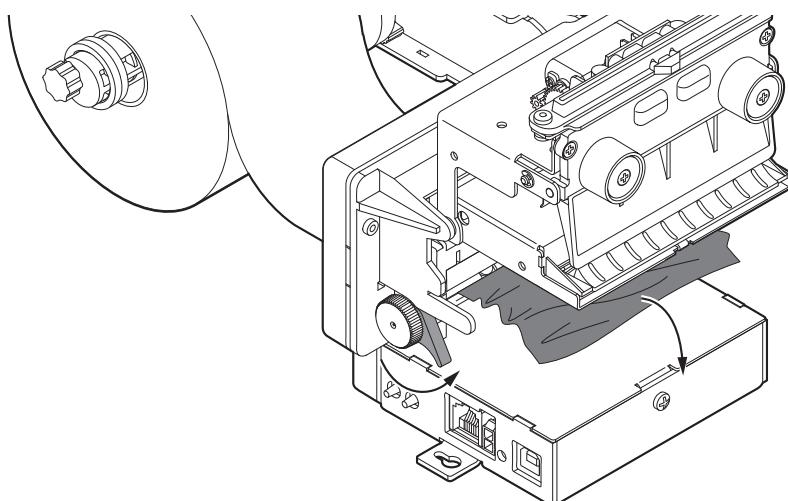

Lift the unlocking lever for the rubber roller  
and remove any scraps of paper from the printing mechanism.

3

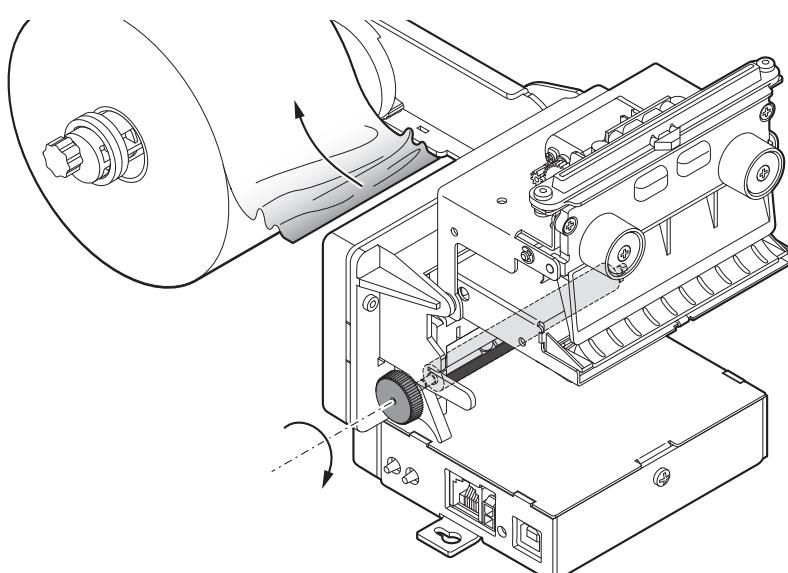

Rotate clockwise the rubber roller  
to eject the paper from the rear side of the device.

## 6.2 Planning of cleaning operations

The regular cleaning of the device keeps the print quality and extends its life. The following table shows the recommended planning for the cleaning operations.

| EVERY PAPER CHANGE          |                                    |
|-----------------------------|------------------------------------|
| Rollers                     | Use isopropyl alcohol              |
| EVERY 5 PAPER CHANGES       |                                    |
| Paper path                  | Use compressed air or tweezers     |
| Cutter                      | Use compressed air                 |
| Ejector                     | Use compressed air                 |
| Sensors                     | Use compressed air                 |
| EVERY 6 MONTHS OR AS NEEDED |                                    |
| Printer case                | Use compressed air or a soft cloth |

For specific procedures, see the following pages.

**NOTE:**


If you use the device in dusty environments, you must reduce the intervals between the cleaning operations.

## 6.3 Cleaning

For periodic cleaning of the device, see the instructions below


### Rollers

1

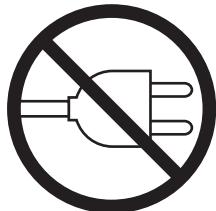

Disconnect the power supply cable and open the device (see previous paragraphs).

2

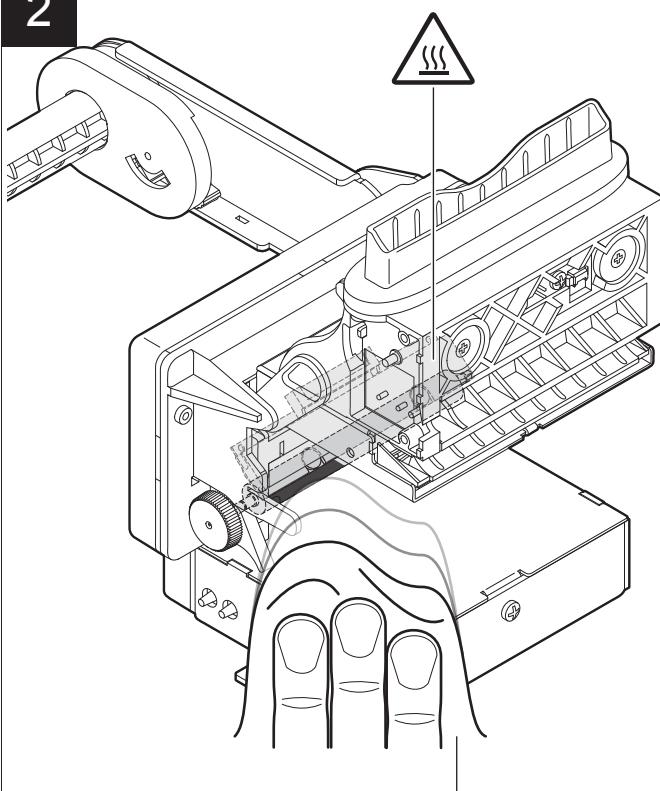

Clean the printing roller by using a non-abrasive cloth moistened with isopropyl.

**ATTENTION:**


Do not use solvents, or hard brushes.

Do not let water or other liquids get inside the device.




### Paper path

1

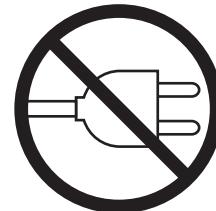

Disconnect the power supply cable and open the device (see previous paragraphs).

2

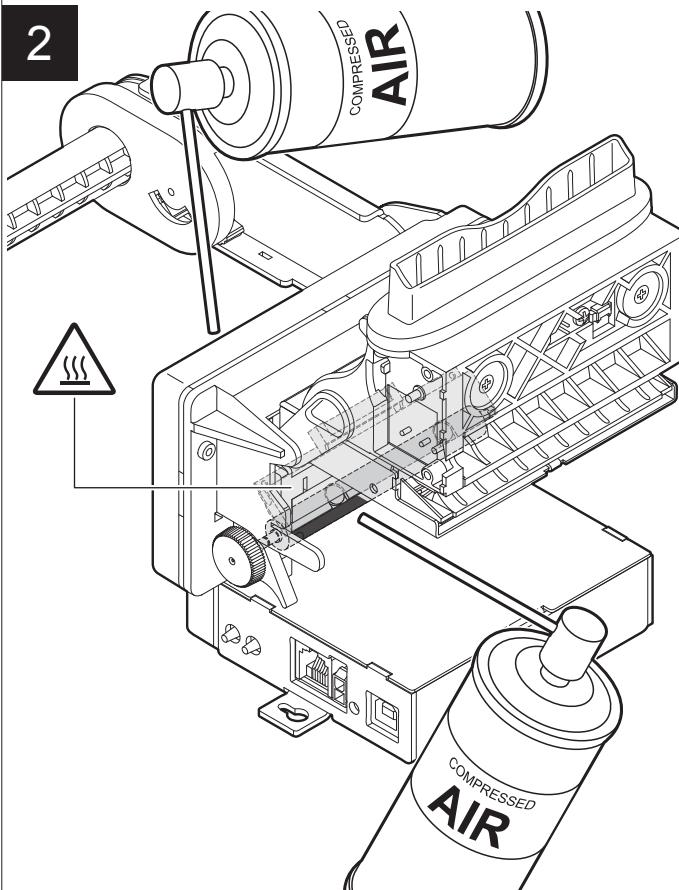

Remove any scraps of paper and the accumulated paper dust on the rubber roller and in areas near to the paper presence sensor.

**ATTENTION:**


Do not use alcohol, solvents, or hard brushes.

Do not let water or other liquids get inside the device.




## Cutter

1

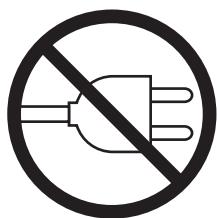

Disconnect the power supply cable and open the device (see previous paragraphs).

2

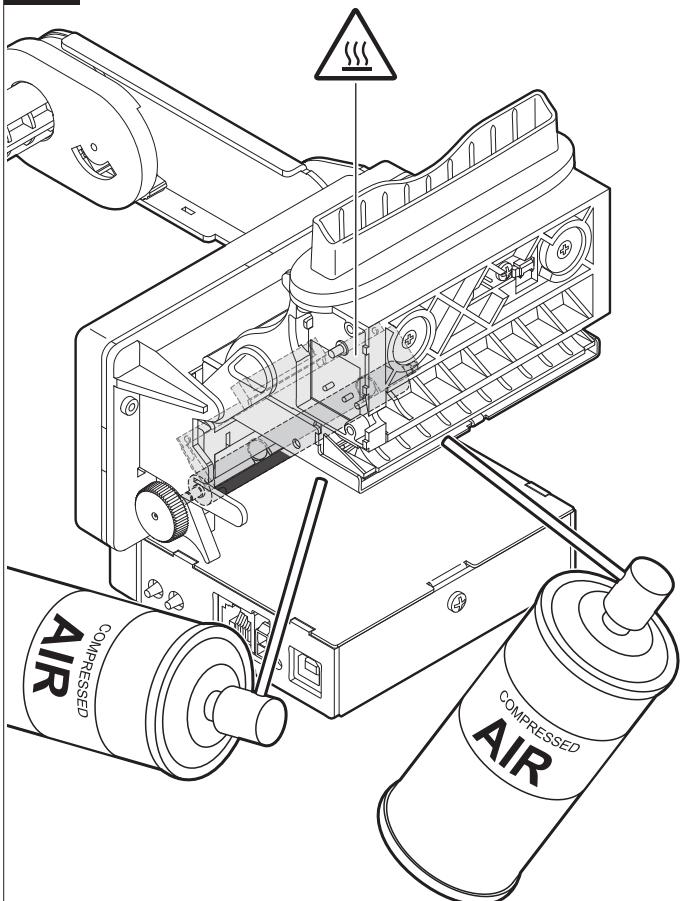

Remove any scraps of paper and the accumulated paper dust on the input and the output of cutter.


### ATTENTION:

Do not use alcohol, solvents, or hard brushes.  
Do not let water or other liquids get inside the device.




## Case

1

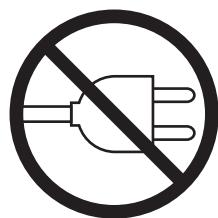

Disconnect the power supply cable (see previous paragraphs).

2

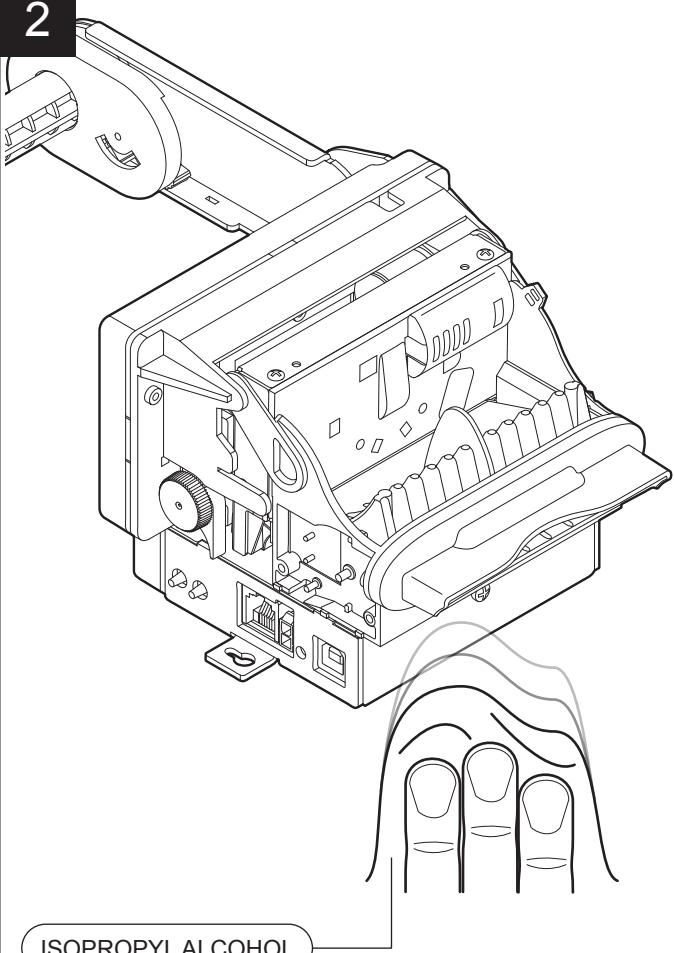

To clean the device, use compressed air or a soft cloth


### ATTENTION:

Do not use alcohol, solvents, or hard brushes.  
Do not let water or other liquids get inside the device.




### Ejector (standard model)

1

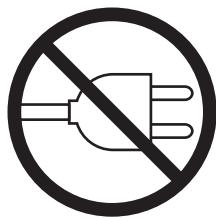

Disconnect the power supply cable and lift the inspection door (see previous paragraphs).

2

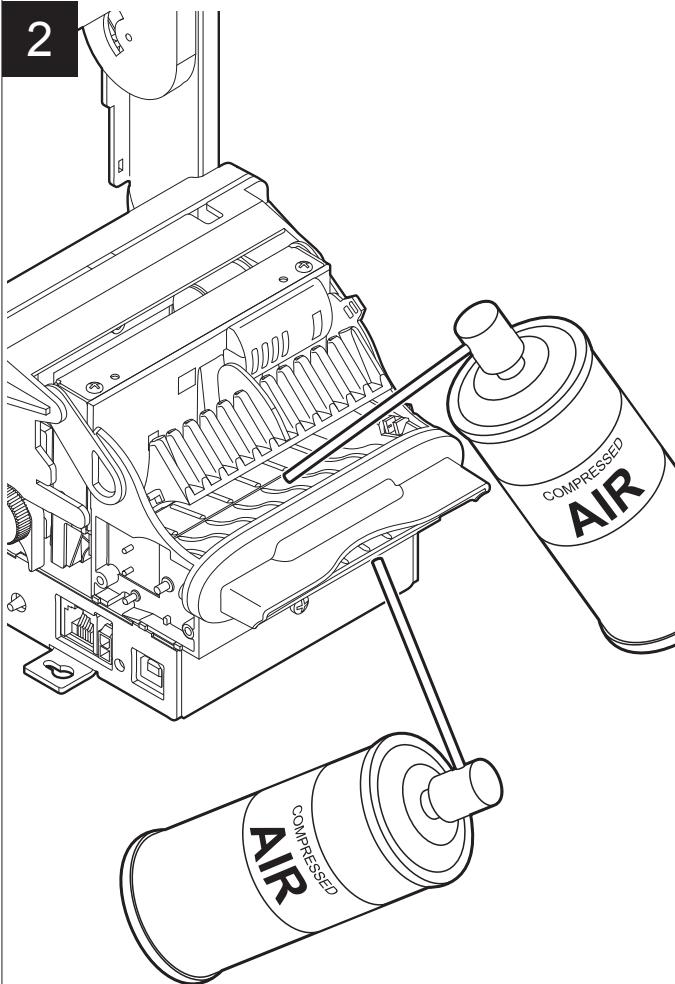

Remove any scraps of paper and the accumulated paper dust under the inspection door and on the paper output.

**ATTENTION:**


Do not use alcohol, solvents, or hard brushes.

Do not let water or other liquids get inside the device.




### Ejector (model with motorized ejector)

1

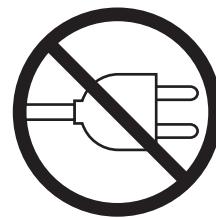

Disconnect the power supply cable and lift the ejector group (see previous paragraphs).

2

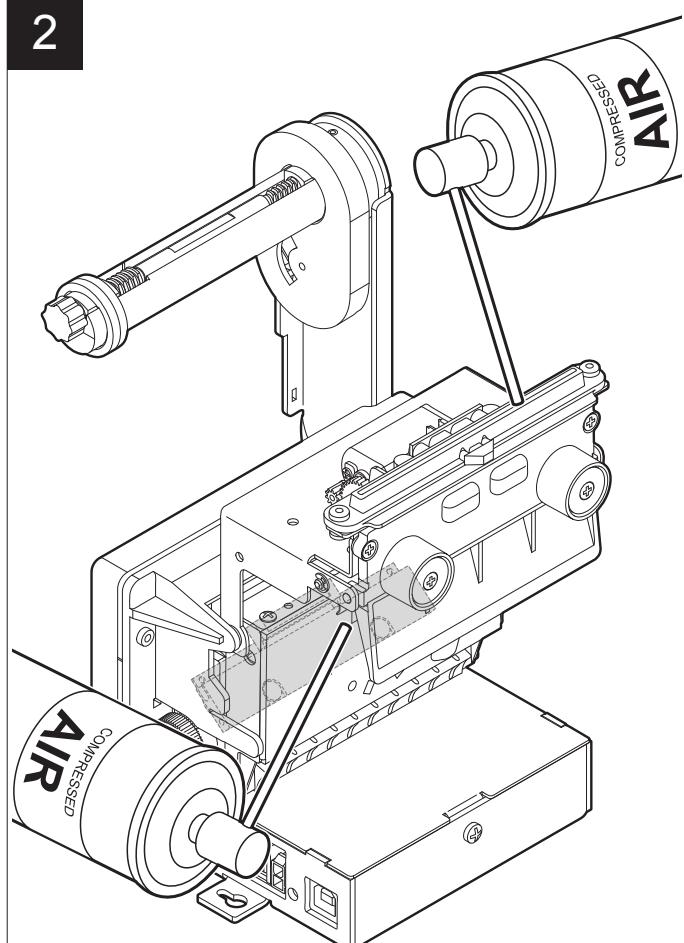

Remove any scraps of paper and the accumulated paper dust on the input and the output of the ejector.

**ATTENTION:**


Do not use alcohol, solvents, or hard brushes.

Do not let water or other liquids get inside the device.




## Sensors (standard model)

1

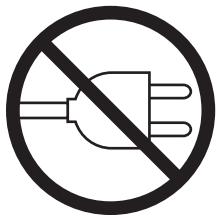

Disconnect the power supply cable and open the inspection door (see previous paragraphs).

2

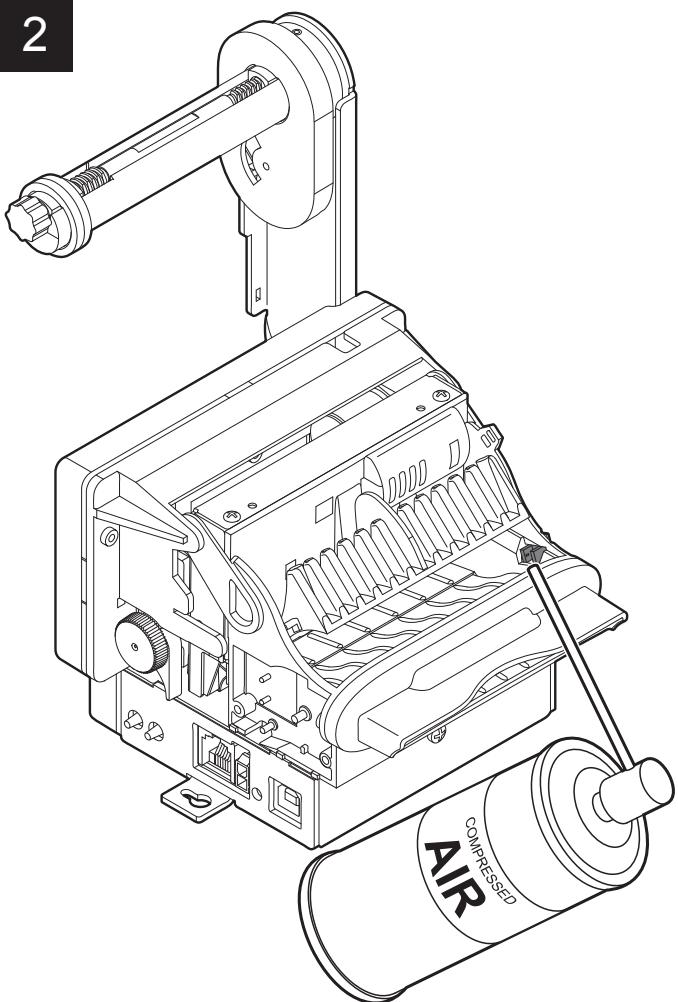


Clean the anti-jamming sensor by using compressed air.

**ATTENTION:**

Do not use alcohol, solvents, or hard brushes.  
Do not let water or other liquids get inside the device.



3

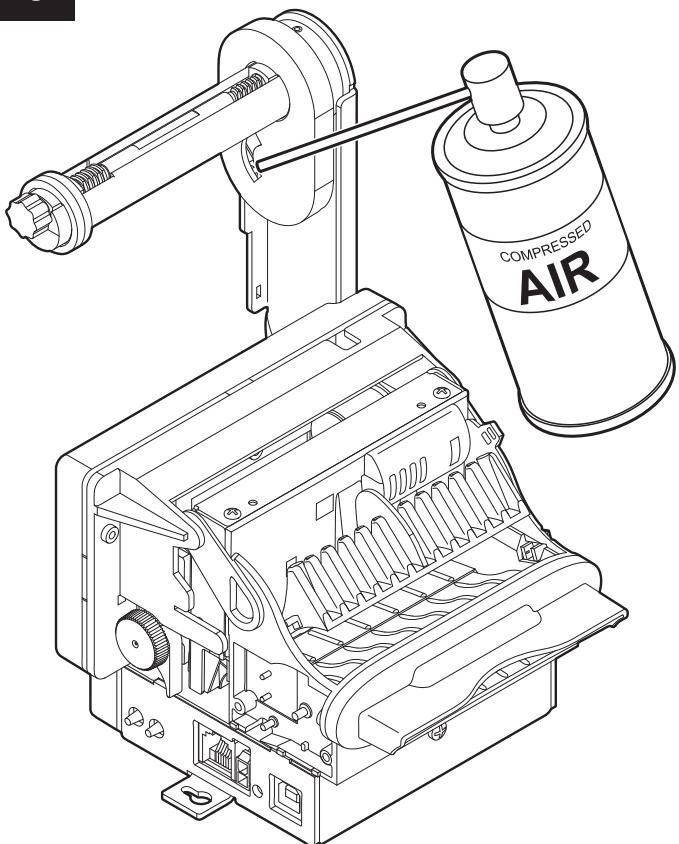

Clean the near paper end sensor by using compressed air.

**ATTENTION:**

Do not use alcohol, solvents, or hard brushes.  
Do not let water or other liquids get inside the device.



## 6.4 Upgrade firmware

**WARNING:** During communication between PC and device for the firmware update it is strictly forbidden to disconnect the communication cable or to remove the power supply of the devices not to endanger the proper functioning of the machine.

### NOTES:


The latest firmware of the device is available in the download area of the web site [www.custom.biz](http://www.custom.biz)

Install on the PC used for printer upgrading the UPGCEPRN software available in the download area of the web site [www.custom.biz](http://www.custom.biz).


### Update via serial interface

Proceed as follows:


1. Write down the product code (14 digits) printed on the product label (see par.2.3).
2. Go to the web site [www.custom.biz](http://www.custom.biz) and download the appropriate firmware release from the DOWNLOAD area.
3. Print the SETUP report (see chapter 5).
4. Switch OFF the device.
5. Connect the device to the PC using a serial cable (see par.3.3).
6. Switch ON the device.
7. Launch the software UPGCEPRN.
8. Select the update file .PSW location:

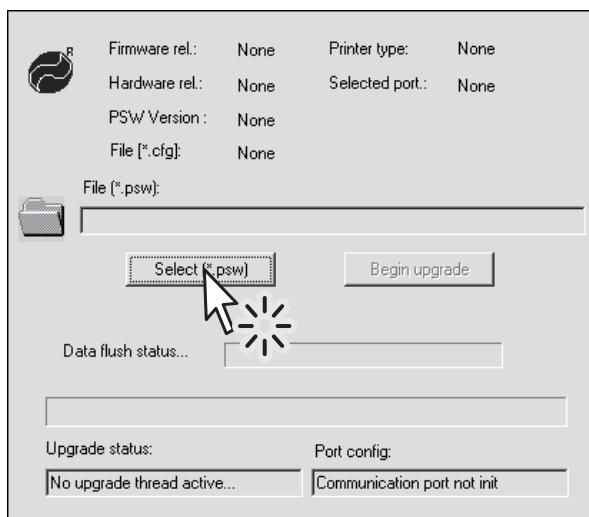

9. Select the serial communication port (ex. COM1):

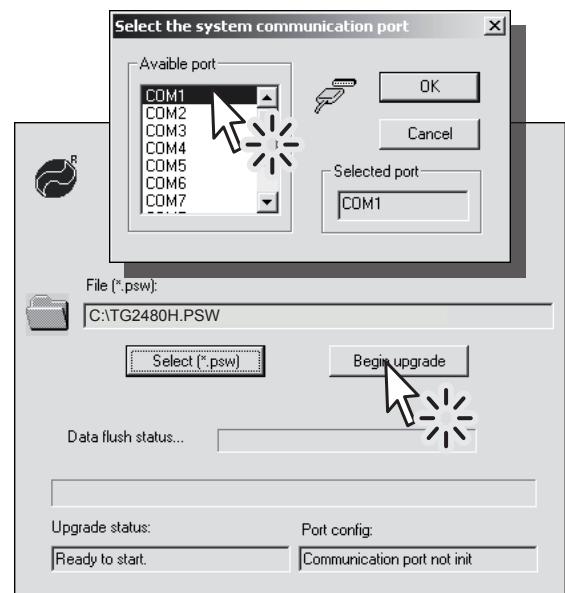

10. Detecting and setting of the parameters necessary for serial communication are performed automatically and then updating begins.
11. After a few minutes a message on the screen warns that the update is completed.

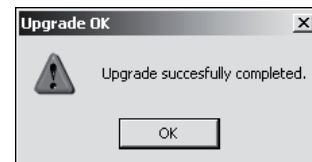

12. Print a new SETUP report to verify the new firmware release (see chapter 5).

## Update via USB interface

### ATTENTION:


Only during the firmware update, the connection between PC and device must be direct, without the use of HUB device.

Only during the firmware update, do not connect or disconnect other USB devices.


NOTE: For communication via USB you must install on PC the printer driver available in the download area of the web site [www.custom.biz](http://www.custom.biz).

Proceed as follows:


1. Write down the product code (14 digits) printed on the product label (see par.2.3).
2. Go to the web site [www.custom.biz](http://www.custom.biz) and download the appropriate firmware release from the DOWNLOAD area.
3. Print the SETUP report (see chapter 5).
4. Switch OFF the device.
5. Connect the device to the PC using a USB cable (see par.3.3).
6. Switch ON the device.
7. Launch the software UPGCEPRN.
8. Select the update file .PSW location:

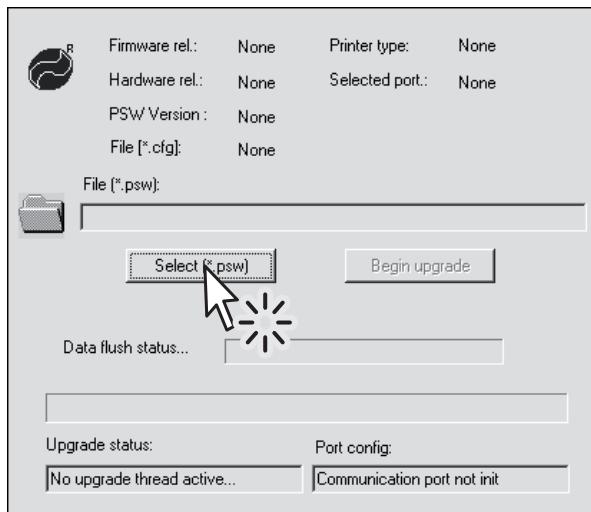

9. Select item USB and then select the USB device among those proposed (e.g. TG2480H):

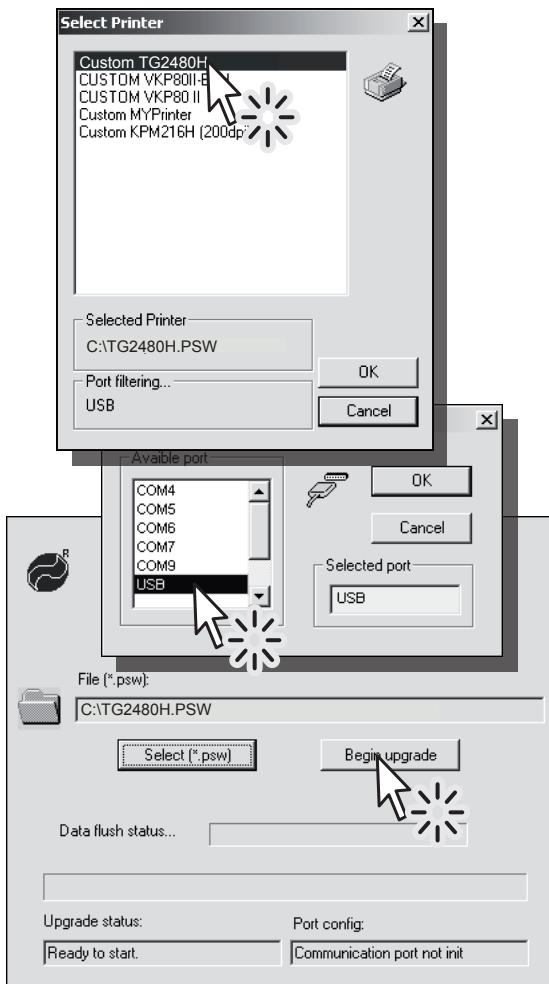

10. After a few minutes a message on the screen warns that the update is completed.

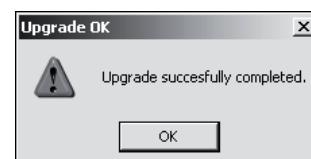

11. Print a new SETUP report to verify the new firmware release (see chapter 5).

# 7 SPECIFICATION

## 7.1 Hardware specifications

### GENERAL

Sensors

*standard model*

Paper presence in input, head temperature, paper jam, ticket withdrawal, external near paper end (on paper roll holder)

*model with motorized ejector*

Paper presence in input, paper presence in output, head temperature, external near paper end (on paper roll holder)

MTBF <sup>(1)</sup>

171 735 h

Noise level (*standard model*)

63 dB

Emulations

ESC/POS™

Printing driver

Windows XP, Windows VISTA (32/64bit),  
Windows 7 (32/64bit), Windows 8 (32/64bit),  
Opos, Linux, Android

### INTERFACES

RS232 serial connector

from 1200 to 115200 bps

USB connector

12 Mbit/sec

### MEMORIES

Receive buffer

2 Kbytes

Flash memory

1 Mbytes

Graphic memory

2 logos (608 x 430 dots)

### PRINTER

Resolution

203 dpi (8 dot/mm)

Printing method

Thermal, fixed head

Head life <sup>(2)</sup>

50 km

Printing width

52 mm, 56 mm, 60 mm, 64 mm, 68 mm, 72 mm, 76 mm, 80 mm

|   |  |
|---|--|
| Printing mode                                     | Normal, 180°   |
| Printing format                                   | Height/width from 1 to 4, bold, reverse, underlined, italic                                      |
| Character fonts                                   |  |
| standard model                                    | PC437, PC850, PC860, PC863, PC865, PC858, PC866, VISCI, U.D.P.                                   |
| model with simplified chinese font <sup>(3)</sup> | PC437, PC850, PC860, PC863, PC865, PC858, GB2312   |
| model with extended chinese font <sup>(3)</sup>   | PC437, PC850, PC860, PC863, PC865, PC858, GB18030  |
| Printable barcode                                 | UPCA, UPCE, EAN13, EAN8, CODE39, ITF, CODABAR, CODE93, CODE128, CODE32, QRCODE                   |
| Printing speed <sup>(2) (5)</sup>                 | Normal = 100 mm/sec<br>High Speed = 130 mm/sec   |
| <b>PAPER</b>                                      |  |
| Type of paper                                     | Thermal rolls, heat-sensitive side on outside of roll  |
| Paper width                                       | from 52 mm ± 0.5 mm to 80 mm ± 0.5 mm  |
| Paper thickness                                   | 63 µm ± 0.5 µm (for 55 g/m <sup>2</sup> paper)<br>85 µm ± 0.6 µm (for 80 g/m <sup>2</sup> paper) |
| Paper weight                                      | from 55 g/m <sup>2</sup> to 80 g/m <sup>2</sup>  |
| Recommended types of paper                        | KANZAN KF50 or KP460, MITSUBISHI PG5075 or TL4000  |
| External roll diameter                            | max 90 mm  |
| Paper end   | Not attached to roll core  |
| Internal roll core diameter                       | 25 mm  |
| Core type   | Cardboard or plastic   |
| Minimum ticket length                             |  |
| standard model                                    | 87 mm  |
| model with motorized ejector                      | 80 mm  |
| <b>CUTTER</b>                                     |  |
| Paper cut   | Total  |

|                               |                         |
|-------------------------------|-------------------------|
| Estimated life <sup>(2)</sup> | 1 000 000 cutter number |
|-------------------------------|-------------------------|

## DEVICE ELECTRICAL SPECIFICATIONS

|                                    |  |
|------------------------------------|--|
| Power supply                       | 24 Vdc ±10% (optional external power supply) |
| Medium consumption <sup>(4)</sup>  | 2.2 A  |
| Typical consumption <sup>(5)</sup> | 0.8 A  |
| Stand-by consumption               | 0.05 A                                       |

## ELECTRICAL SPECIFICATIONS POWER SUPPLY cod.963GE020000003 (OPTIONAL)

|                      |                         |
|----------------------|-------------------------|
| Power supply voltage | from 100 Vac to 240 Vac |
| Frequency            | from 50 Hz to 60 Hz     |
| Current (output)     | 2.5 A                   |
| Power                | 60 W                    |

## ENVIRONMENTAL CONDITIONS

|                           |                       |
|---------------------------|-----------------------|
| Operating temperature     | from -20°C to +70°C   |
| Relative humidity         | from 10% Rh to 85% Rh |
| Storage temperature       | from -20 °C to +70 °C |
| Storage relative humidity | from 10% Rh to 90% Rh |

### NOTES:

- (1) : Control board.
- (2) : Respecting the regular schedule of cleaning for the device components.
- (3) : For further information, refer to the commands manual for the chinese font management.
- (4) : Referred to the UL measurements (L = 10cm, Density = 50% dot on, Print density = +50%).
- (5) : Referred to a standard CUSTOM receipt (L=10cm, Density = 12,5% dots on).

## 7.2 Character specifications

|                              |         |         |         |
|------------------------------|---------|---------|---------|
| Character set                | 3       |         |         |
| Character density            | 11 cpi  | 15 cpi  | 20 cpi  |
| Number of columns            | 35      | 45      | 64      |
| Chars / sec                  | 1540    | 1980    | 2773    |
| Lines / sec                  | 43      | 43      | 43      |
| Characters (L x H mm)-Normal | 2.2 x 3 | 1.7 x 3 | 1.2 x 3 |

NOTE: Theoretical values.



## 7.3 Device dimensions

|                                     |          |
|-------------------------------------|----------|
| Length                              |          |
| <i>standard model</i>               | 271.5 mm |
| <i>model with motorized ejector</i> | 260.2 mm |
| Height                              | 102 mm   |
| Width                               | 130.2 mm |
| Weight                              |          |
| <i>standard model</i>               | 1130 g   |
| <i>model with motorized ejector</i> | 1250 g   |



### NOTES:

Data refer to device with paper roll holder assembled in the rear position (see par.3.2).

All the dimensions shown in following figures are in millimetres.

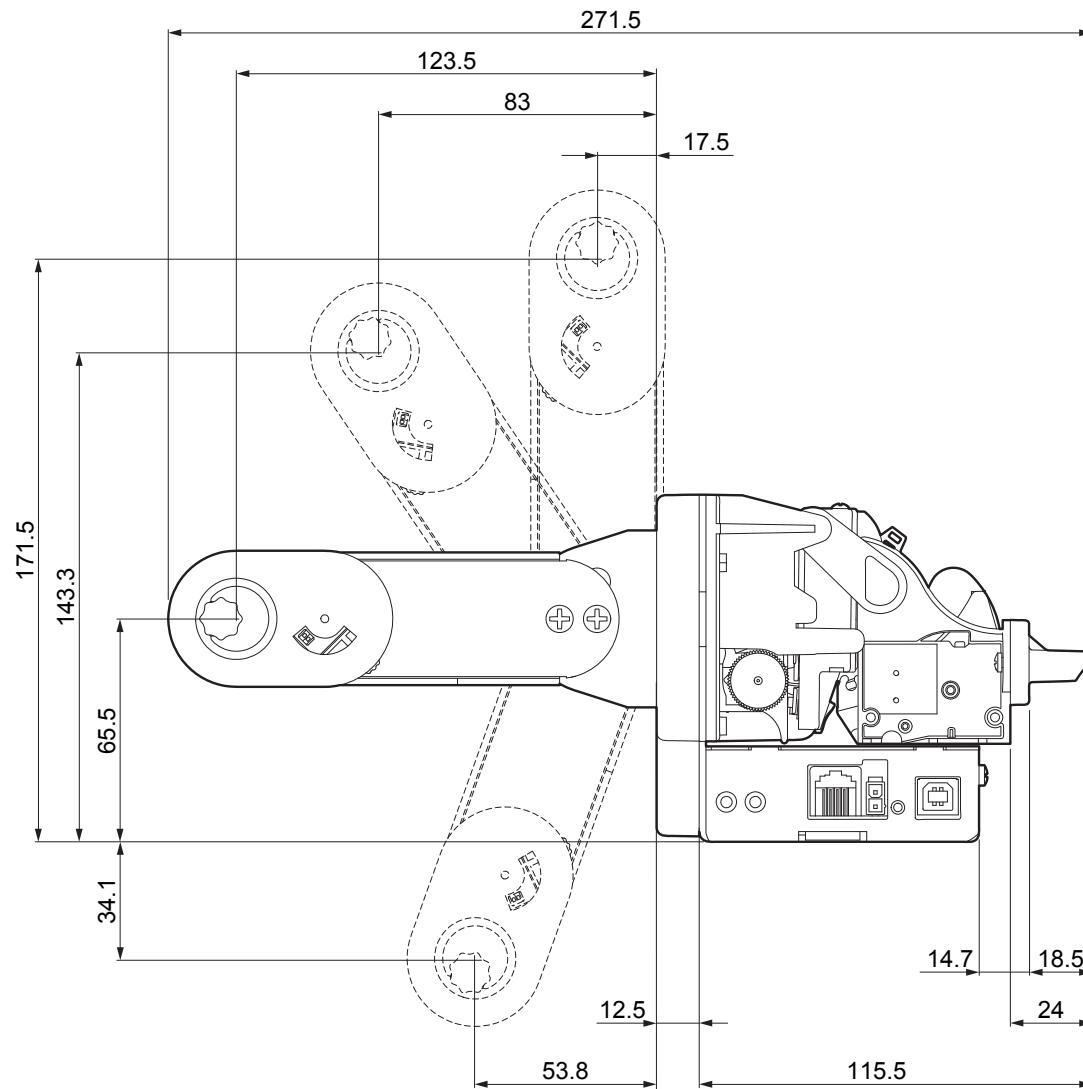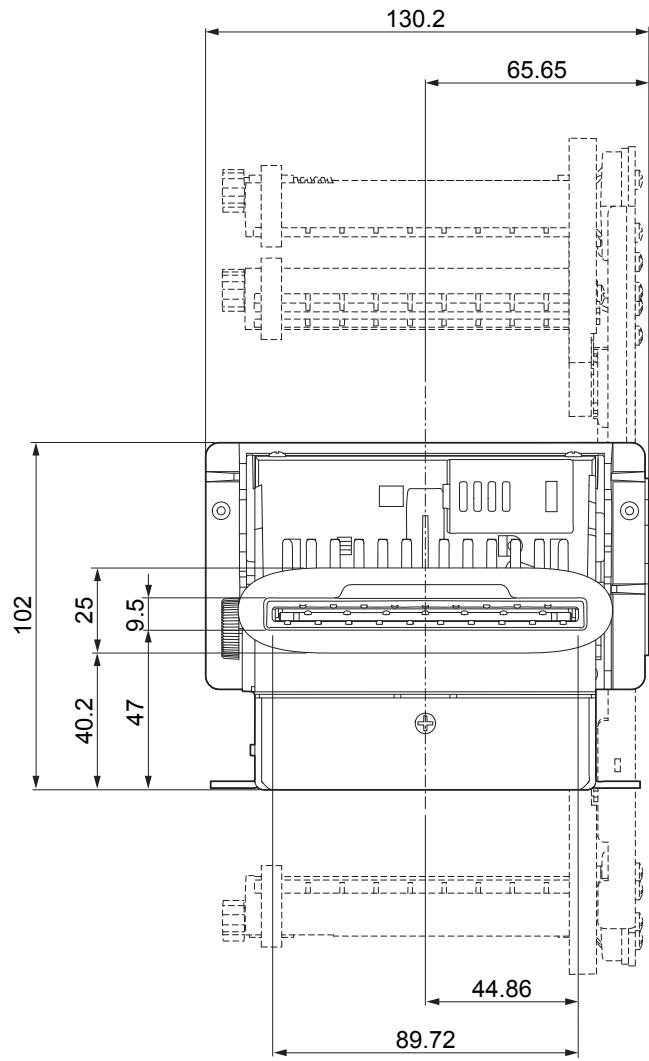Standard model



## Model with motorized ejector

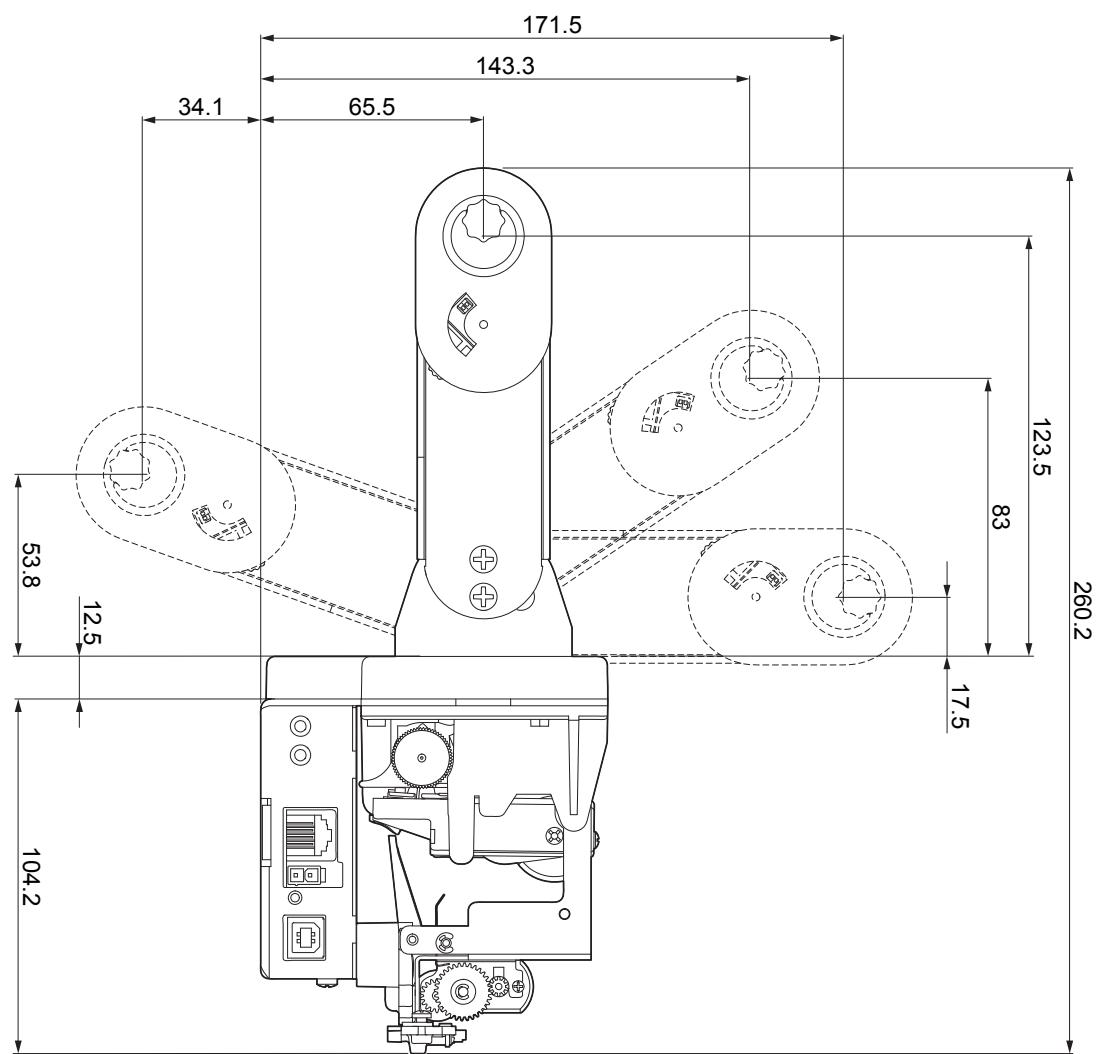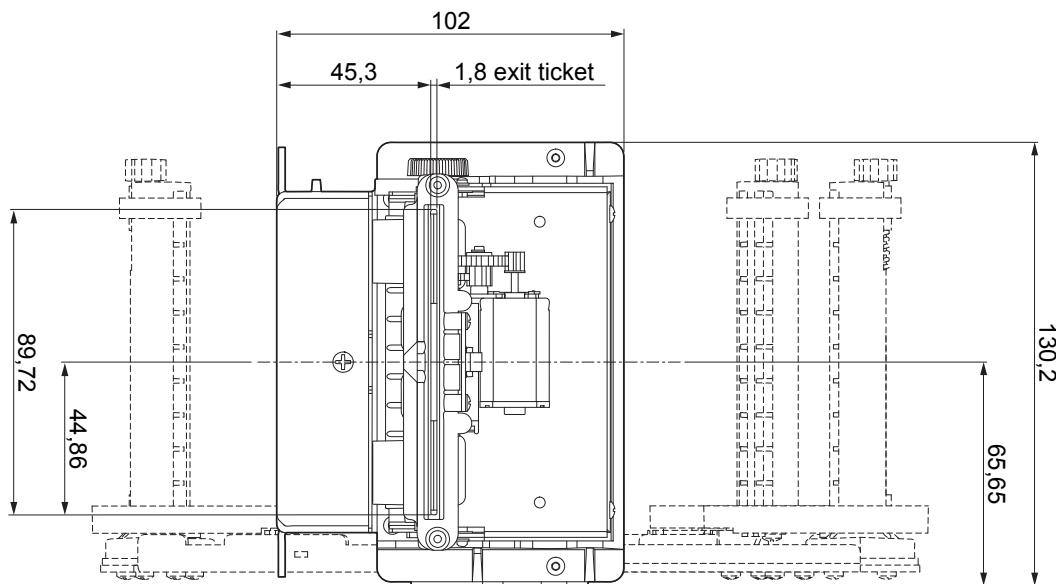

## 7.4 Power supply dimensions cod.963GE020000003 (optional)


|        |         |
|--------|---------|
| Length | 127 mm  |
| Height | 35,5 mm |
| Width  | 56 mm   |

**NOTE:**  
All the dimensions shown in following figures are in millimetres

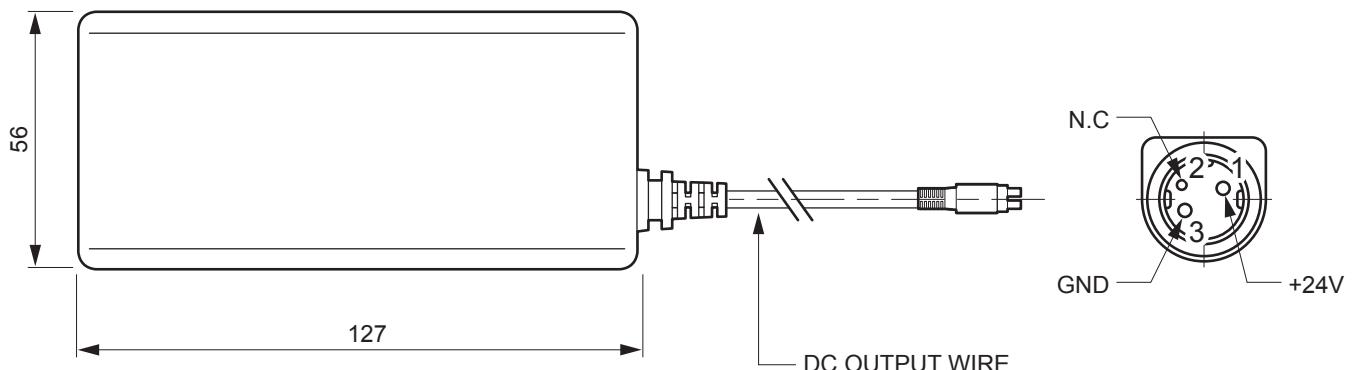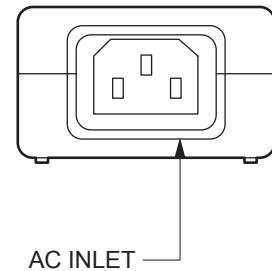

## 7.5 Paper specification

The following image shows an example of black mark placement on the non-thermal side of paper.

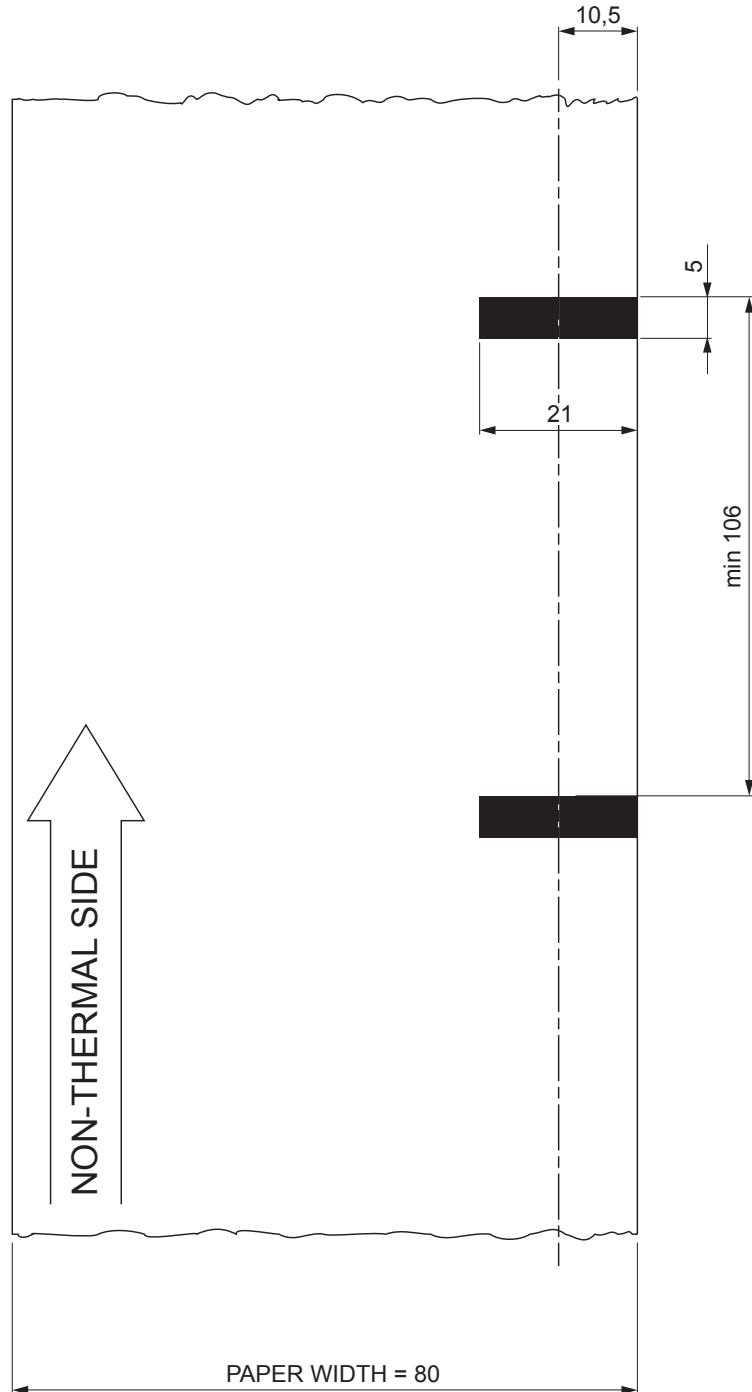

**NOTE:**

All the dimensions shown in following figures are in millimetres.

## 7.6 Character sets

The device has 3 fonts of varying width (11, 15 and 20 cpi) which may be accessed through programming or control characters.

Each of these fonts offers the following code tables: PC437, PC850, PC860, PC863, PC865, PC858, PC866, VISCII, U.D.P.

### PC437 CODE TABLE (Usa, Standard Europe)

|      |           |          |          |          |          |          |          |          |          |          |          |          |          |          |            |             |
|------|-----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|------------|-------------|
| Char | <b>SP</b> | !        | "        | #        | \$       | %        | &        | '        | (        | )        | *        | +        | ,        | -        | .          | /           |
| Hex  | 0020      | 0021     | 0022     | 0023     | 0024     | 0025     | 0026     | 0027     | 0028     | 0029     | 002A     | 002B     | 002C     | 002D     | 002E       | 002F        |
| Dec  | 32        | 33       | 34       | 35       | 36       | 37       | 38       | 39       | 40       | 41       | 42       | 43       | 44       | 45       | 46         | 47          |
| Char | <b>0</b>  | <b>1</b> | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> | <b>8</b> | <b>9</b> | :        | ;        | <        | =        | >          | ?           |
| Hex  | 0030      | 0031     | 0032     | 0033     | 0034     | 0035     | 0036     | 0037     | 0038     | 0039     | 003A     | 003B     | 003C     | 003D     | 003E       | 003F        |
| Dec  | 48        | 49       | 50       | 51       | 52       | 53       | 54       | 55       | 56       | 57       | 58       | 59       | 60       | 61       | 62         | 63          |
| Char | <b>@</b>  | <b>A</b> | <b>B</b> | <b>C</b> | <b>D</b> | <b>E</b> | <b>F</b> | <b>G</b> | <b>H</b> | <b>I</b> | <b>J</b> | <b>K</b> | <b>L</b> | <b>M</b> | <b>N</b>   | <b>O</b>    |
| Hex  | 0040      | 0041     | 0042     | 0043     | 0044     | 0045     | 0046     | 0047     | 0048     | 0049     | 004A     | 004B     | 004C     | 004D     | 004E       | 004F        |
| Dec  | 64        | 65       | 66       | 67       | 68       | 69       | 70       | 71       | 72       | 73       | 74       | 75       | 76       | 77       | 78         | 79          |
| Char | <b>P</b>  | <b>Q</b> | <b>R</b> | <b>S</b> | <b>T</b> | <b>U</b> | <b>V</b> | <b>W</b> | <b>X</b> | <b>Y</b> | <b>Z</b> | [        | \        | ]        | ^          | -           |
| Hex  | 0050      | 0051     | 0052     | 0053     | 0054     | 0055     | 0056     | 0057     | 0058     | 0059     | 005A     | 005B     | 005C     | 005D     | 005E       | 005F        |
| Dec  | 80        | 81       | 82       | 83       | 84       | 85       | 86       | 87       | 88       | 89       | 90       | 91       | 92       | 93       | 94         | 95          |
| Char | '         | <b>a</b> | <b>b</b> | <b>c</b> | <b>d</b> | <b>e</b> | <b>f</b> | <b>g</b> | <b>h</b> | <b>i</b> | <b>j</b> | <b>k</b> | <b>l</b> | <b>m</b> | <b>n</b>   | <b>o</b>    |
| Hex  | 0060      | 0061     | 0062     | 0063     | 0064     | 0065     | 0066     | 0067     | 0068     | 0069     | 006A     | 006B     | 006C     | 006D     | 006E       | 006F        |
| Dec  | 96        | 97       | 98       | 99       | 100      | 101      | 102      | 103      | 104      | 105      | 106      | 107      | 108      | 109      | 110        | 111         |
| Char | <b>p</b>  | <b>q</b> | <b>r</b> | <b>s</b> | <b>t</b> | <b>u</b> | <b>v</b> | <b>w</b> | <b>x</b> | <b>y</b> | <b>z</b> | {        |          | }        | ~          | ◊           |
| Hex  | 0070      | 0071     | 0072     | 0073     | 0074     | 0075     | 0076     | 0077     | 0078     | 0079     | 007A     | 007B     | 007C     | 007D     | 007E       | 007F        |
| Dec  | 112       | 113      | 114      | 115      | 116      | 117      | 118      | 119      | 120      | 121      | 122      | 123      | 124      | 125      | 126        | 127         |
| Char | <b>ç</b>  | <b>ü</b> | <b>é</b> | <b>â</b> | <b>ä</b> | <b>à</b> | <b>å</b> | <b>ç</b> | <b>ê</b> | <b>ë</b> | <b>è</b> | <b>ï</b> | <b>î</b> | <b>ì</b> | <b>Ä</b>   | <b>À</b>    |
| Hex  | 0080      | 0081     | 0082     | 0083     | 0084     | 0085     | 0086     | 0087     | 0088     | 0089     | 008A     | 008B     | 008C     | 008D     | 008E       | 008F        |
| Dec  | 128       | 129      | 130      | 131      | 132      | 133      | 134      | 135      | 136      | 137      | 138      | 139      | 140      | 141      | 142        | 143         |
| Char | <b>É</b>  | <b>æ</b> | <b>Æ</b> | <b>ô</b> | <b>ö</b> | <b>ò</b> | <b>û</b> | <b>ù</b> | <b>ÿ</b> | <b>Ö</b> | <b>Ü</b> | <b>¢</b> | <b>£</b> | <b>¥</b> | <b>Pts</b> | <b>f</b>    |
| Hex  | 0090      | 0091     | 0092     | 0093     | 0094     | 0095     | 0096     | 0097     | 0098     | 0099     | 009A     | 009B     | 009C     | 009D     | 009E       | 009F        |
| Dec  | 144       | 145      | 146      | 147      | 148      | 149      | 150      | 151      | 152      | 153      | 154      | 155      | 156      | 157      | 158        | 159         |
| Char | <b>á</b>  | <b>í</b> | <b>ó</b> | <b>ú</b> | <b>ñ</b> | <b>Ñ</b> | <b>ª</b> | <b>º</b> | <b>¿</b> | <b>¬</b> | <b>¬</b> | <b>½</b> | <b>¼</b> | <b>í</b> | <b>»</b>   |             |
| Hex  | 00A0      | 00A1     | 00A2     | 00A3     | 00A4     | 00A5     | 00A6     | 00A7     | 00A8     | 00A9     | 00AA     | 00AB     | 00AC     | 00AD     | 00AE       | 00AF        |
| Dec  | 160       | 161      | 162      | 163      | 164      | 165      | 166      | 167      | 168      | 169      | 170      | 171      | 172      | 173      | 174        | 175         |
| Char | <b>„</b>  | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b> | <b>„</b>   | <b>„</b>    |
| Hex  | 00B0      | 00B1     | 00B2     | 00B3     | 00B4     | 00B5     | 00B6     | 00B7     | 00B8     | 00B9     | 00BA     | 00BB     | 00BC     | 00BD     | 00BE       | 00BF        |
| Dec  | 176       | 177      | 178      | 179      | 180      | 181      | 182      | 183      | 184      | 185      | 186      | 187      | 188      | 189      | 190        | 191         |
| Char | <b>Ł</b>  | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b> | <b>Ł</b>   | <b>Ł</b>    |
| Hex  | 00C0      | 00C1     | 00C2     | 00C3     | 00C4     | 00C5     | 00C6     | 00C7     | 00C8     | 00C9     | 00CA     | 00CB     | 00CC     | 00CD     | 00CE       | 00CF        |
| Dec  | 192       | 193      | 194      | 195      | 196      | 197      | 198      | 199      | 200      | 201      | 202      | 203      | 204      | 205      | 206        | 207         |
| Char | <b>Ĳ</b>  | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b> | <b>Ĳ</b>   | <b>Ĳ</b>    |
| Hex  | 00D0      | 00D1     | 00D2     | 00D3     | 00D4     | 00D5     | 00D6     | 00D7     | 00D8     | 00D9     | 00DA     | 00DB     | 00DC     | 00DD     | 00DE       | 00DF        |
| Dec  | 208       | 209      | 210      | 211      | 212      | 213      | 214      | 215      | 216      | 217      | 218      | 219      | 220      | 221      | 222        | 223         |
| Char | <b>¤</b>  | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b> | <b>¤</b>   | <b>¤</b>    |
| Hex  | 00E0      | 00E1     | 00E2     | 00E3     | 00E4     | 00E5     | 00E6     | 00E7     | 00E8     | 00E9     | 00EA     | 00EB     | 00EC     | 00ED     | 00EE       | 00EF        |
| Dec  | 224       | 225      | 226      | 227      | 228      | 229      | 230      | 231      | 232      | 233      | 234      | 235      | 236      | 237      | 238        | 239         |
| Char | <b>≡</b>  | <b>±</b> | <b>≥</b> | <b>≤</b> | <b>∫</b> | <b>ʃ</b> | <b>÷</b> | <b>≈</b> | <b>°</b> | <b>·</b> | <b>·</b> | <b>√</b> | <b>n</b> | <b>²</b> | <b>■</b>   | <b>NBSP</b> |
| Hex  | 00F0      | 00F1     | 00F2     | 00F3     | 00F4     | 00F5     | 00F6     | 00F7     | 00F8     | 00F9     | 00FA     | 00FB     | 00FC     | 00FD     | 00FE       | 00FF        |
| Dec  | 240       | 241      | 242      | 243      | 244      | 245      | 246      | 247      | 248      | 249      | 250      | 251      | 252      | 253      | 251        | 255         |

## **PC850 CODE TABLE (Multilingual)**

## PC860 CODE TABLE (Portuguese)

## **PC863 CODE TABLE (Canadian, French)**

## PC865 CODE TABLE (Nordic)

## **PC858 CODE TABLE (Euro symbol)**

NOTA:

To print the Euro (€) symbol, the command sequence is: 0x1B 0x74 0x13 0xD5 (see Commands Manual).

## PC866 CODE TABLE (Cyrillic)


## VISCI CODE TABLE (Vietnamense standard code)

| Char | NUL  | SOH  | À    | ETX  | EOT  | Ã    | Ã    | BEL  | BS   | HT   | LF   | VT   | FF   | CR   | SO   | SI   |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| Hex  | 0000 | 0001 | 0002 | 0003 | 0004 | 0005 | 0006 | 0007 | 0008 | 0009 | 000A | 000B | 000C | 000D | 000E | 000F |
| Dec  | 0    | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   |
| Char | DLE  | DC1  | DC2  | DC3  | Ý    | NAK  | SYN  | ETB  | CAN  | Ý    | SUB  | ESC  | FS   | GS   | Ý    | US   |
| Hex  | 0010 | 0011 | 0012 | 0013 | 0014 | 0015 | 0016 | 0017 | 0018 | 0019 | 001A | 001B | 001C | 001D | 001E | 001F |
| Dec  | 16   | 17   | 18   | 19   | 20   | 21   | 22   | 23   | 24   | 25   | 26   | 27   | 28   | 29   | 30   | 31   |
| Char | SP   | !    | “    | #    | \$   | %    | &    | ‘    | (    | )    | *    | +    | ,    | -    | .    | /    |
| Hex  | 0020 | 0021 | 0022 | 0023 | 0024 | 0025 | 0026 | 0027 | 0028 | 0029 | 002A | 002B | 002C | 002D | 002E | 002F |
| Dec  | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   | 41   | 42   | 43   | 44   | 45   | 46   | 47   |
| Char | 0    | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | :    | ;    | <    | =    | >    | ?    |
| Hex  | 0030 | 0031 | 0032 | 0033 | 0034 | 0035 | 0036 | 0037 | 0038 | 0039 | 003A | 003B | 003C | 003D | 003E | 003F |
| Dec  | 48   | 49   | 50   | 51   | 52   | 53   | 54   | 55   | 56   | 57   | 58   | 59   | 60   | 61   | 62   | 63   |
| Char | @    | A    | B    | C    | D    | E    | F    | G    | H    | I    | J    | K    | L    | M    | N    | O    |
| Hex  | 0040 | 0041 | 0042 | 0043 | 0044 | 0045 | 0046 | 0047 | 0048 | 0049 | 004A | 004B | 004C | 004D | 004E | 004F |
| Dec  | 64   | 65   | 66   | 67   | 68   | 69   | 70   | 71   | 72   | 73   | 74   | 75   | 76   | 77   | 78   | 79   |
| Char | P    | Q    | R    | S    | T    | U    | V    | W    | X    | Y    | Z    | [    | \    | ]    | ^    | _    |
| Hex  | 0050 | 0051 | 0052 | 0053 | 0054 | 0055 | 0056 | 0057 | 0058 | 0059 | 005A | 005B | 005C | 005D | 005E | 005F |
| Dec  | 80   | 81   | 82   | 83   | 84   | 85   | 86   | 87   | 88   | 89   | 90   | 91   | 92   | 93   | 94   | 95   |
| Char | ‘    | a    | b    | c    | d    | e    | f    | g    | h    | i    | j    | k    | l    | m    | n    | o    |
| Hex  | 0060 | 0061 | 0062 | 0063 | 0064 | 0065 | 0066 | 0067 | 0068 | 0069 | 006A | 006B | 006C | 006D | 006E | 006F |
| Dec  | 96   | 97   | 98   | 99   | 100  | 101  | 102  | 103  | 104  | 105  | 106  | 107  | 108  | 109  | 110  | 111  |
| Char | p    | q    | r    | s    | t    | u    | v    | w    | x    | y    | z    | {    |      | }    | ~    | DEL  |
| Hex  | 0070 | 0071 | 0072 | 0073 | 0074 | 0075 | 0076 | 0077 | 0078 | 0079 | 007A | 007B | 007C | 007D | 007E | 007F |
| Dec  | 112  | 113  | 114  | 115  | 116  | 117  | 118  | 119  | 120  | 121  | 122  | 123  | 124  | 125  | 126  | 127  |
| Char | À    | Ã    | À    | Ã    | À    | Ã    | À    | Ã    | È    | É    | É    | È    | Ã    | È    | Ê    | Ó    |
| Hex  | 0080 | 0081 | 0082 | 0083 | 0084 | 0085 | 0086 | 0087 | 0088 | 0089 | 008A | 008B | 008C | 008D | 008E | 008F |
| Dec  | 128  | 129  | 130  | 131  | 132  | 133  | 134  | 135  | 136  | 137  | 138  | 139  | 140  | 141  | 142  | 143  |
| Char | Ò    | Ó    | Ò    | Ó    | Ò    | Ó    | Ò    | Ó    | !    | Ó    | Ó    | Ì    | Ù    | Ù    | Ù    | Ù    |
| Hex  | 0090 | 0091 | 0092 | 0093 | 0094 | 0095 | 0096 | 0097 | 0098 | 0099 | 009A | 009B | 009C | 009D | 009E | 009F |
| Dec  | 144  | 145  | 146  | 147  | 148  | 149  | 150  | 151  | 152  | 153  | 154  | 155  | 156  | 157  | 158  | 159  |
| Char | Õ    | ă    | ã    | ă    | á    | à    | â    | â    | ë    | é    | é    | è    | ë    | ê    | ê    | ó    |
| Hex  | 00A0 | 00A1 | 00A2 | 00A3 | 00A4 | 00A5 | 00A6 | 00A7 | 00A8 | 00A9 | 00AA | 00AB | 00AC | 00AD | 00AE | 00AF |
| Dec  | 160  | 161  | 162  | 163  | 164  | 165  | 166  | 167  | 168  | 169  | 170  | 171  | 172  | 173  | 174  | 175  |
| Char | ò    | ô    | ò    | ó    | ò    | ó    | ò    | ó    | !    | ó    | ú    | ú    | ú    | ú    | ó    | ú    |
| Hex  | 00B0 | 00B1 | 00B2 | 00B3 | 00B4 | 00B5 | 00B6 | 00B7 | 00B8 | 00B9 | 00BA | 00BB | 00BC | 00BD | 00BE | 00BF |
| Dec  | 176  | 177  | 178  | 179  | 180  | 181  | 182  | 183  | 184  | 185  | 186  | 187  | 188  | 189  | 190  | 191  |
| Char | À    | Á    | Â    | Ã    | À    | Ã    | À    | Ã    | È    | É    | É    | È    | Ì    | Í    | Í    | Ù    |
| Hex  | 00C0 | 00C1 | 00C2 | 00C3 | 00C4 | 00C5 | 00C6 | 00C7 | 00C8 | 00C9 | 00CA | 00CB | 00CC | 00CD | 00CE | 00CF |
| Dec  | 192  | 193  | 194  | 195  | 196  | 197  | 198  | 199  | 200  | 201  | 202  | 203  | 204  | 205  | 206  | 207  |
| Char | Đ    | ú    | ò    | ó    | ò    | ó    | ä    | ý    | ù    | ù    | ù    | ý    | y    | ý    | ò    | ú    |
| Hex  | 00D0 | 00D1 | 00D2 | 00D3 | 00D4 | 00D5 | 00D6 | 00D7 | 00D8 | 00D9 | 00DA | 00DB | 00DC | 00DD | 00DE | 00DF |
| Dec  | 208  | 209  | 210  | 211  | 212  | 213  | 214  | 215  | 216  | 217  | 218  | 219  | 220  | 221  | 222  | 223  |
| Char | à    | á    | â    | ã    | â    | ã    | û    | ã    | è    | é    | ê    | è    | ì    | í    | í    | í    |
| Hex  | 00E0 | 00E1 | 00E2 | 00E3 | 00E4 | 00E5 | 00E6 | 00E7 | 00E8 | 00E9 | 00EA | 00EB | 00EC | 00ED | 00EE | 00EF |
| Dec  | 224  | 225  | 226  | 227  | 228  | 229  | 230  | 231  | 232  | 233  | 234  | 235  | 236  | 237  | 238  | 239  |
| Char | đ    | ụ    | ò    | ó    | ò    | ó    | õ    | ò    | ụ    | ú    | ú    | ü    | ú    | ý    | ò    | ú    |
| Hex  | 00F0 | 00F1 | 00F2 | 00F3 | 00F4 | 00F5 | 00F6 | 00F7 | 00F8 | 00F9 | 00FA | 00FB | 00FC | 00FD | 00FE | 00FF |
| Dec  | 240  | 241  | 242  | 243  | 244  | 245  | 246  | 247  | 248  | 249  | 250  | 251  | 252  | 253  | 251  | 255  |

## 8 CONSUMABLES

The following table shows the list of available consumables for device:


| DESCRIPTION  | CODE                  |
|--|-----------------------|
| THERMAL PAPER ROLL<br><br>width = 80mm<br>Ø external = 90mm<br>Ø core = 25mm | <b>67300000000406</b> |

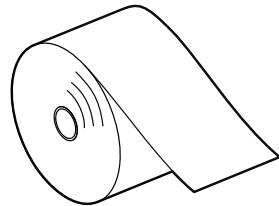



# 9 ACCESSORIES

The following table shows the list of available accessories for device:

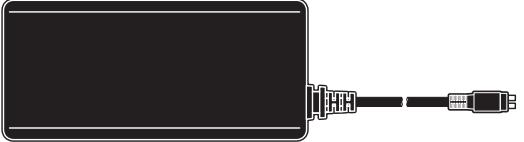
| DESCRIPTION   | CODE   |
|---|--|
|   | <b>963GE020000003</b>  |
| POWER SUPPLY<br>(for technical specifications, see the paragraph 7.1) |    |
| ADAPTER CABLE FOR POWER SUPPLY<br>(see the paragraph 9.1)             |    |
|   | <b>26500000000356</b>  |
| USB CABLE TYPE A-B<br>Length = 1.8 m                                  |  |
|   | <b>26500000000311</b>  |
| SERIAL CABLE RJ-DB9F<br>Length = 1.5 m                                |  |

## 9.1 Adapter cable for power supply

For the device is available an adapter cable (cod. 26900000000005) supplied as an accessory, for connecting the device to the external power supply unit (cod. 963GE02000003 - optional).

### Assembly instructions

Connect the adapter cable to the power supply unit as follows:

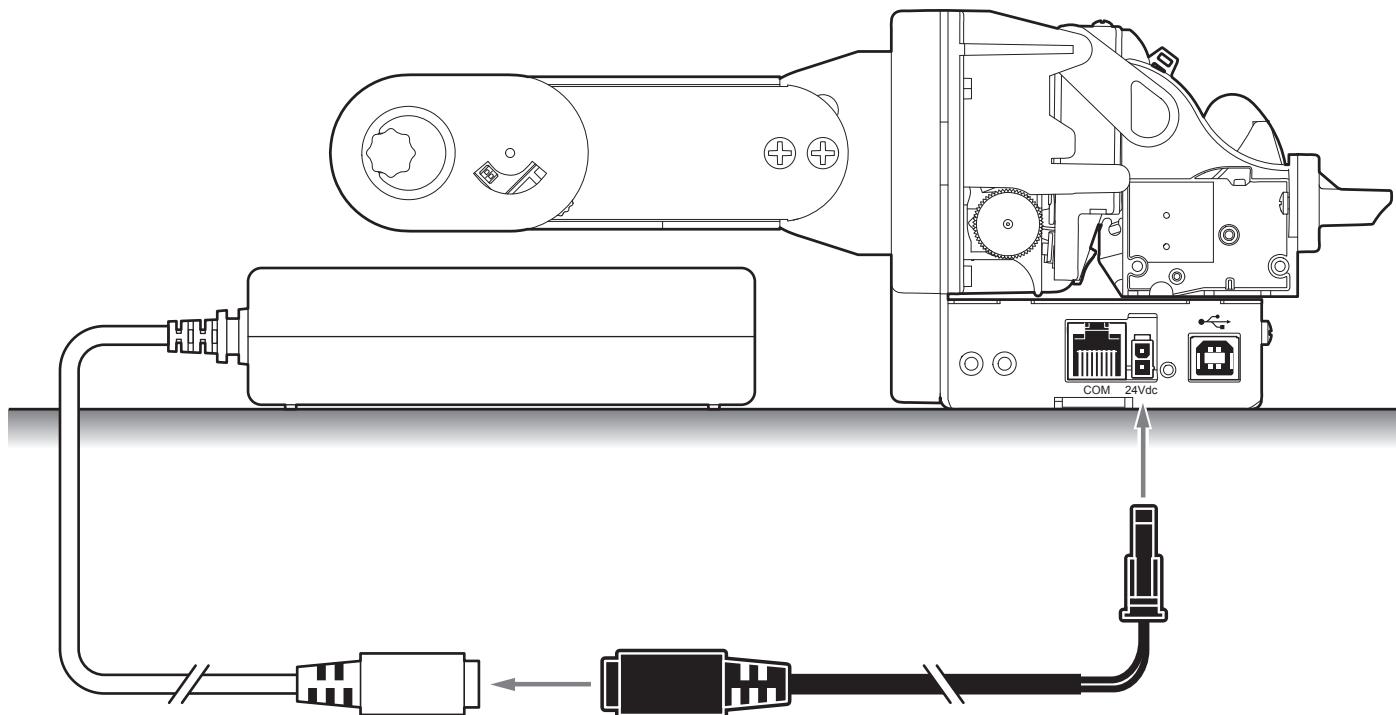

# 10 ALIGNMENT

The device is provided with a sensor for the use of alignment notch in order to handle rolls of tickets with pre-printed fields and a fixed length.

The alignment sensor is a “reflection” sensor: this kind of sensor emits a band of light and detects the quantity of light reflected to it. The presence of the notch is therefore detected by the amount of light that returns to the sensor, considering that the light is reflected by the white paper and absorbed by the black mark.

To ensure the correct alignment, you must enable the “Notch Alignment” parameter during the Setup procedure (see chapter 5).

The following paragraphs show how to correctly set the configuration parameters of device in order to assure the alignment.

## 10.1 Calibration

The sensor calibration occurs automatically and consists in adjusting the quantity of light emitted to match the degree of whiteness of the paper used and the degree of black of the mark printed on paper.

The device automatically performs the self-calibration during the Setup procedure only if the “Notch Alignment” parameter is set to a value other than “Disabled” (see chapter 5).

When self-calibration starts, the device performs some paper feeds and then it prints the calibration result and the value of the PWM duty-cycle of the alignment sensor driver so that it can perform an optimal notch detection:

Autosetting Notch : OK


PWM Duty Cycle : 85.3%]

The “Autosetting Notch” parameter indicates the result of the self-calibration procedure; OK will appear if it has been successful, NOT OK will appear if the procedure has failed.


After the printing of the procedure result, the device offers the execution of the function of paper characterization “Characterize Paper” and the change of the “Notch Threshold” parameter which represents the detection threshold of the notch.

Choosing the “Yes” value for the “Characterize Paper” parameter, the device prints a graphic representation (see following figures) of the outgoing voltage of the alignment sensor (expressed as a percentage) and the “Notch Threshold” value. This graphic representation is useful to set the most suitable value to assign to the “Notch Threshold” parameter and then to better identify the optimal threshold value which takes into account the variations of the signal and the small oscillations around zero.

The following figure shows an example of paper with the non-thermal paper printed with black marks: the outgoing voltage is constant while passing the white paper between two notches and presents a peak at each black mark. In this case, the optimal value for the “Notch Threshold” parameter is placed about half of the peak.

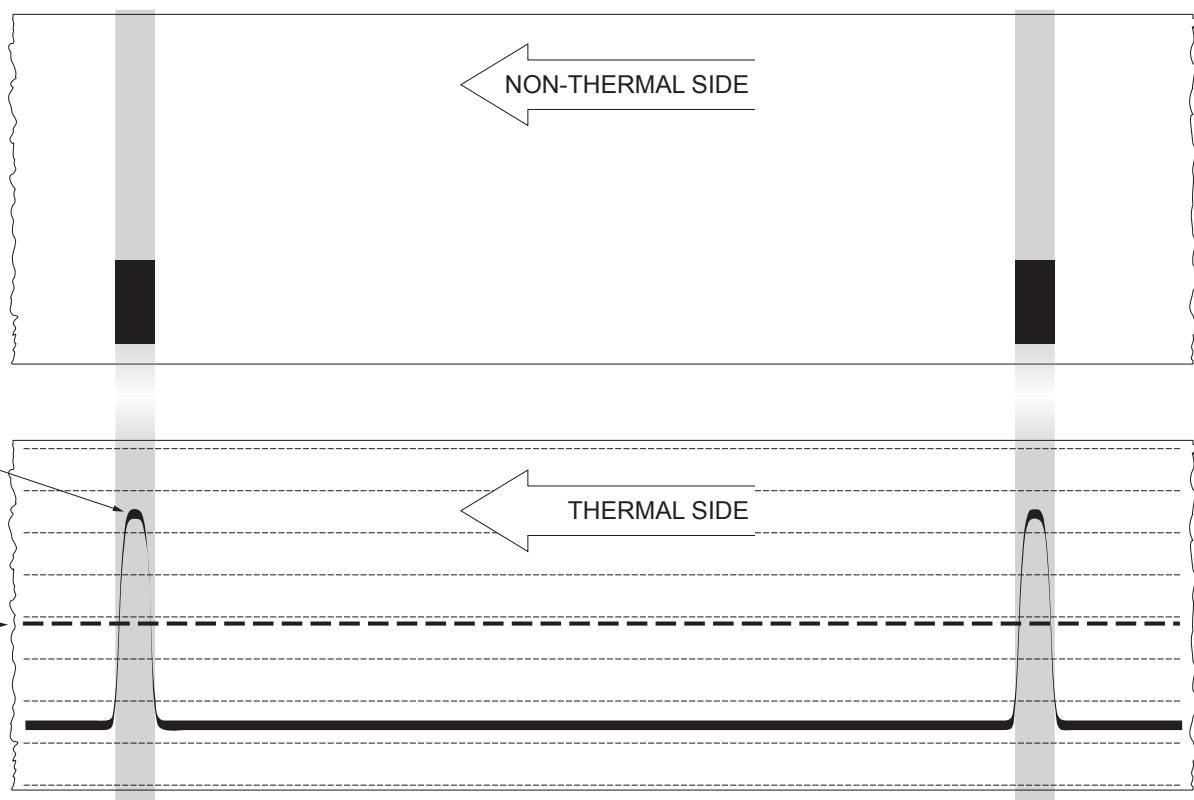

The following figure shows an example of paper with the non-thermal paper printed with black marks and other graphics (for example, a barcode): the outgoing voltage is constant while passing the white paper between two notches, presents a peak at each black mark and presents some “noise” at each barcode. In this case, the optimal value for the “Notch Threshold” parameter is located about halfway between the peak value and the maximum value of the “noise”.

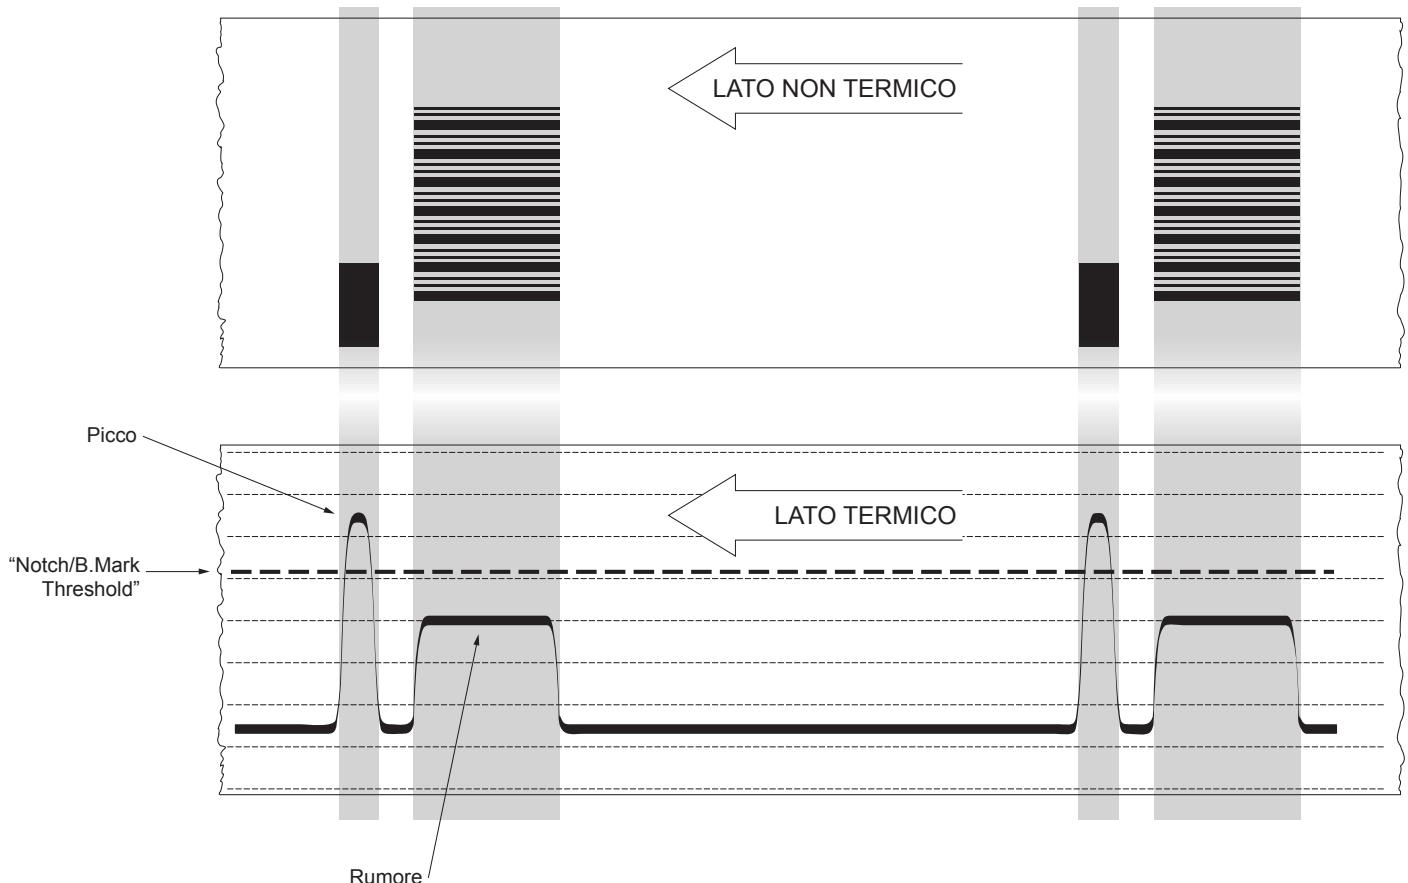


If the maximum value of “noise” read by the sensor is very close to the peak value, it might be difficult to place the value of the “Notch Threshold” at an intermediate point. In these cases, it is mandatory that the portion of paper between the point of printing end and the front notch is completely white (no graphics). In this way, the only next graphic detected by the sensor for alignment after the printing end will be the notch.

## 10.2 Alignment parameters

The “alignment point” is defined as the position inside the ticket to use for the notch alignment. The distance between the notch edge and the alignment point is defined as “Notch Distance”.

Referring to the front of the notch, the value of “Notch Distance” varies from 0mm minimum and 12.9mm maximum.


If the “Notch Distance” value is set to 0, the alignment point is set at the beginning of the notch.

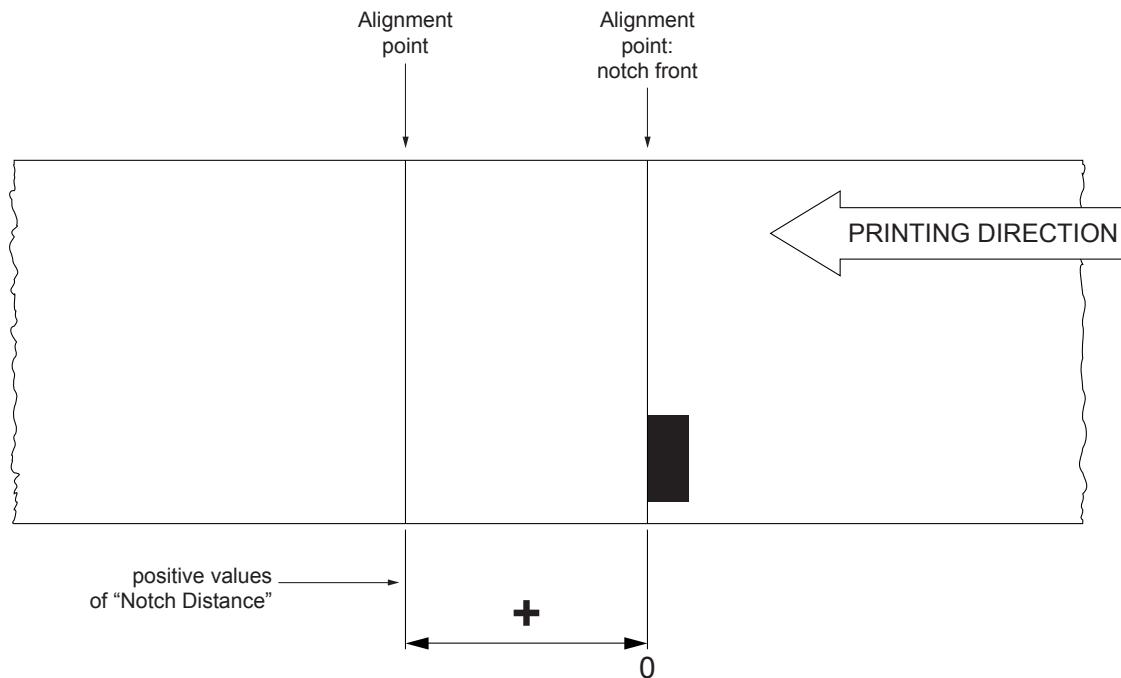

The following figure shows a section of the device with the paper path and the distances between the alignment sensor, the printing head and the cutter (cutting line), where

A = distance between the alignment sensor and the printing line = 12 mm

B = distance between the printing line and the cutting line = 12.5mm

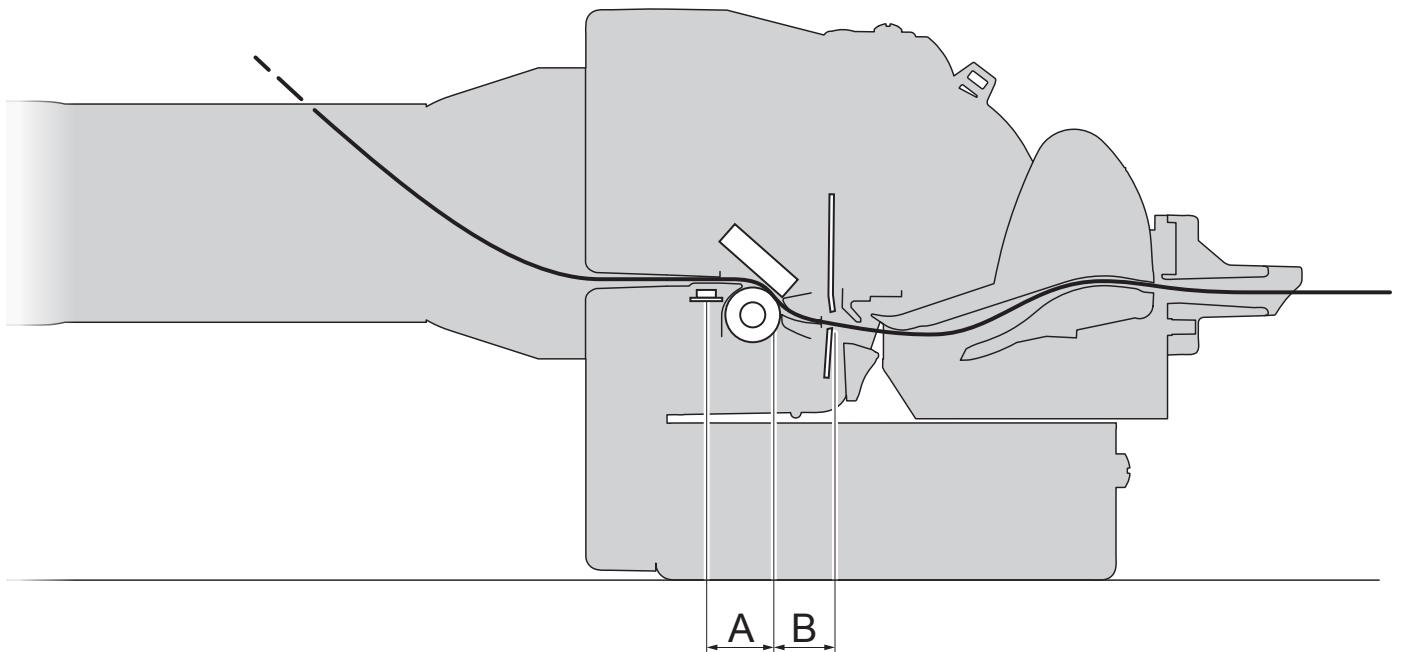

### ESC/POS™ emulation

To define the alignment point you need to set the device parameters that compose the numerical value of the "Notch Distance" parameter.

For example, to set a notch distance of 10mm between the notch and the alignment point, the parameters must be set on the following values:

|                          |     |
|--------------------------|-----|
| Notch Distance [mm x 10] | : 1 |
| Notch Distance [mm x 1]  | : 0 |
| Notch Distance [mm x .1] | : 0 |


The "Notch Distance" parameter, may be modified as follows:

- during the Setup procedure of the device (see chapter 5)
- by using the 0x1D 0xE7 command (for more details, refer to the Commands Manual)
- by driver.

## 10.3 Printing area

In order to print ticket containing only one notch and to not overlay printing to a notch (that will make it useless for the next alignment), it is important to well calibrate the length of the printing area of ticket according to the inter-notch distance.

The following figure shows an example of tickets with “Notch Distance” set to 0:

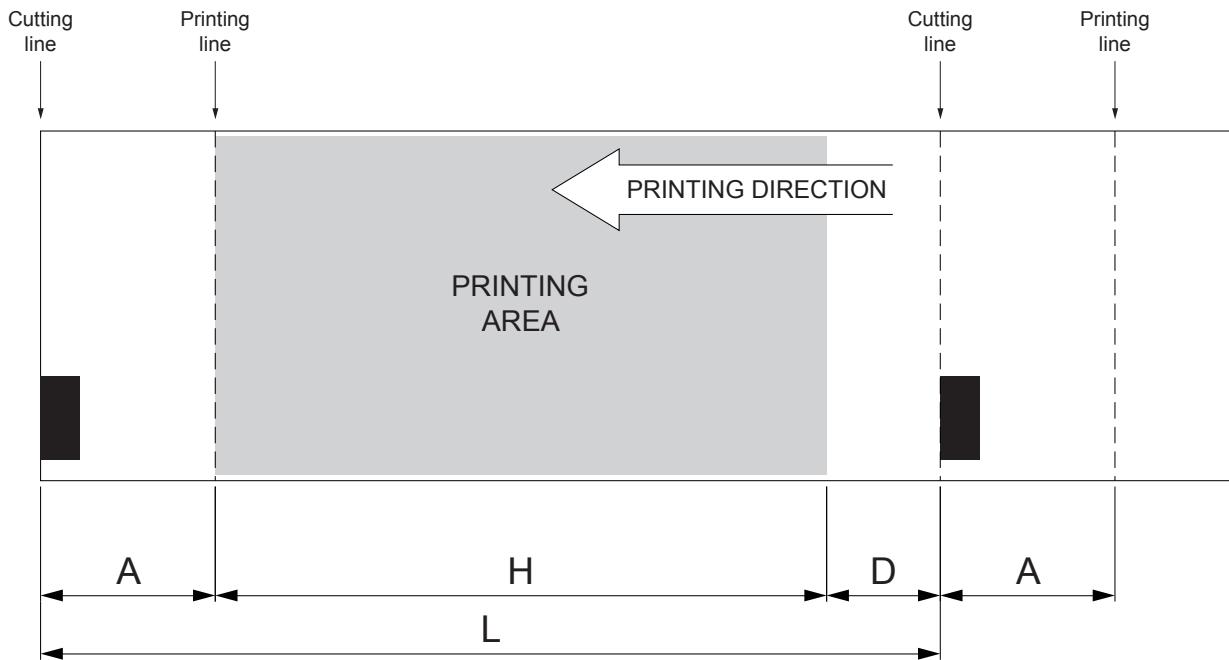

A “Non-printable area” = “Distance between cutter/printing head”

where:

“Distance between cutter/printing head” = 12 mm

H Distance between the first and the last print line, called “Height of the printing area”.

L Distance between an edge of the notch and the next one, called “Inter-notch distance”.

D Automatic feed for alignment at the next notch.

To use all the notches on the paper, you must comply with the following equation:

$$H + A \leq L$$


The height of the printing area H can be increased to make no progress on alignment D but no further.

# 11 TECHNICAL SERVICE

In case of failure, contact the Technical Service by sending an e-mail to support@custom.it detailing:

1. Product code
2. Serial number
3. Hardware release
4. Firmware release

To get the necessary data, proceed as follows:

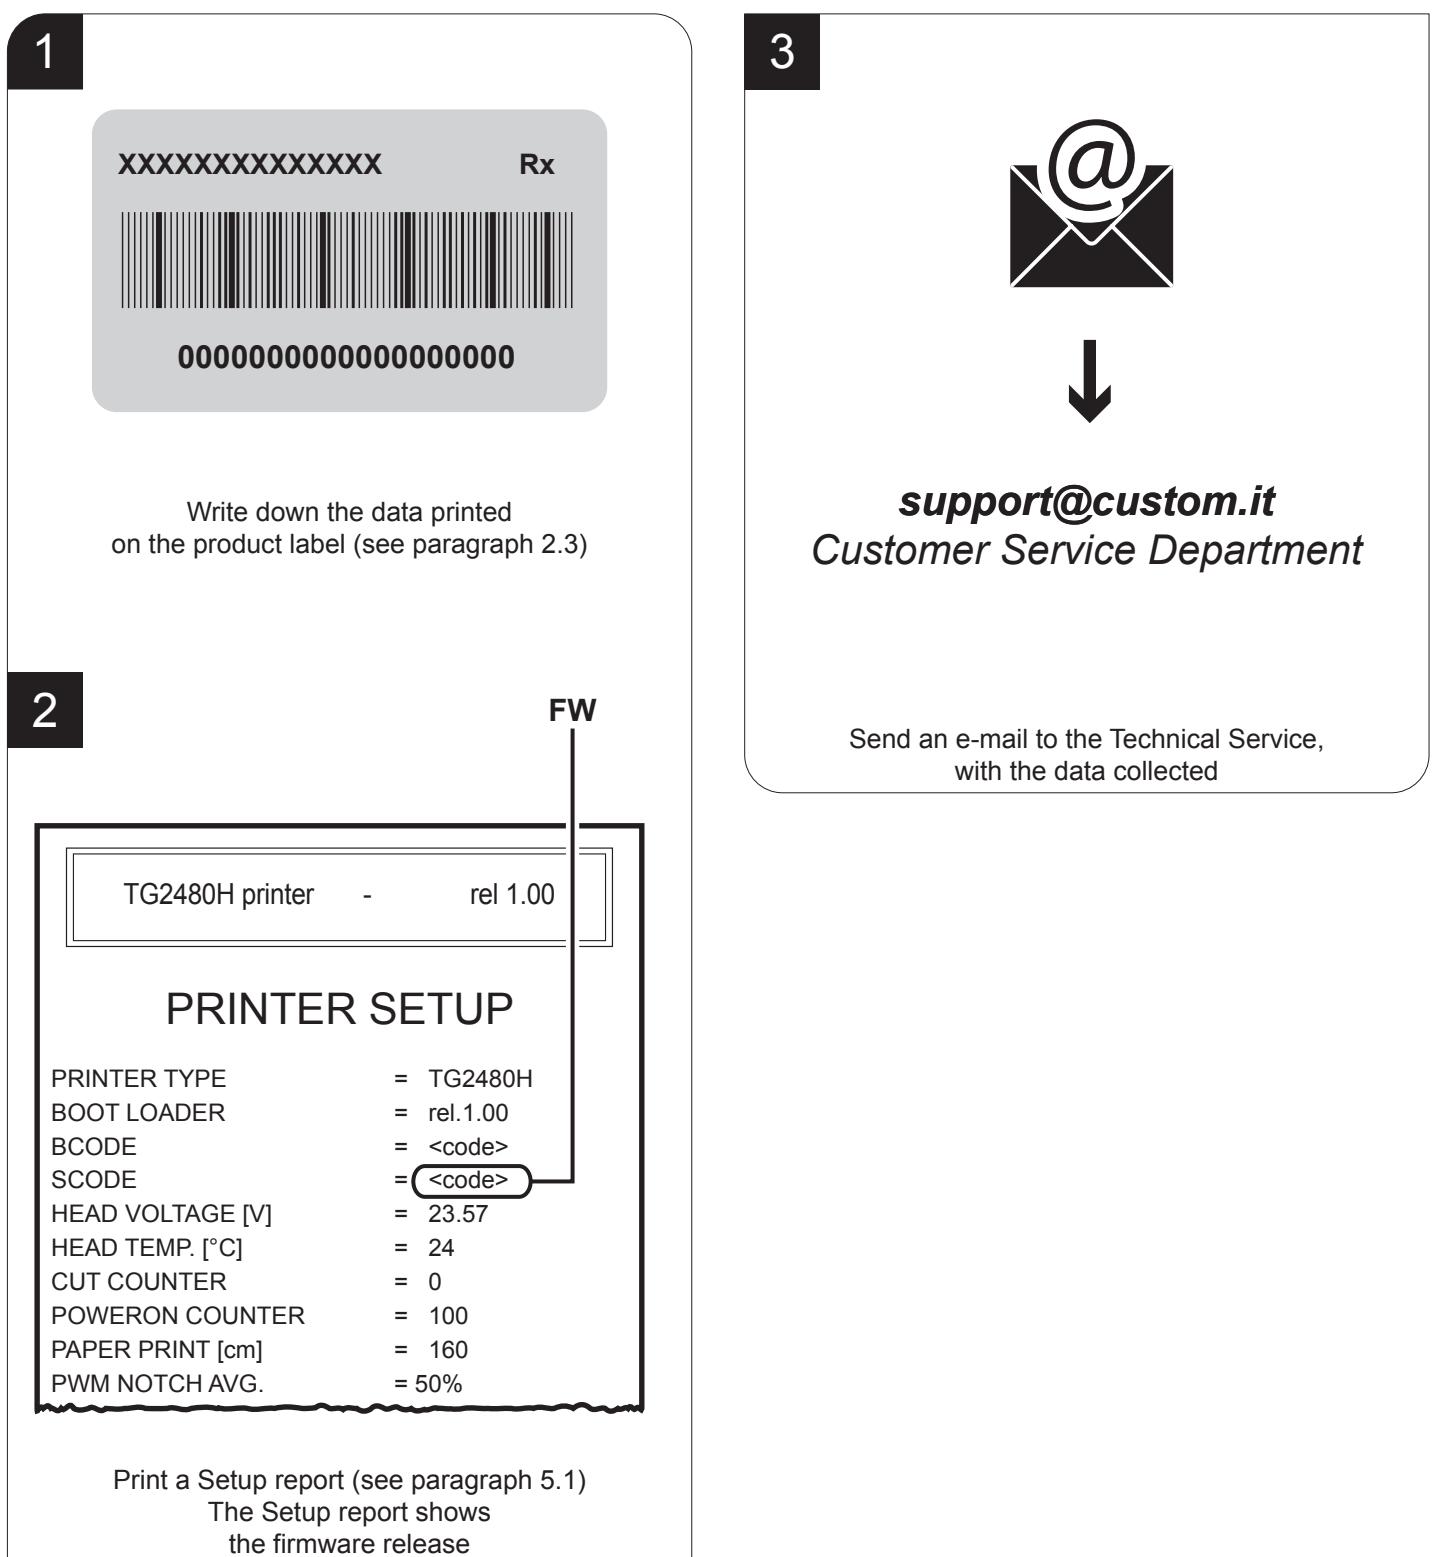

# CUSTOM®

**CUSTOM S.p.A.**

World Headquarters

Via Berettine, 2/B - 43010 Fontevivo, Parma ITALY

Tel. +39 0521 680111 - Fax +39 0521 610701

[info@custom.biz](mailto:info@custom.biz) - [www.custom.biz](http://www.custom.biz)

*All rights reserved*

[www.custom.biz](http://www.custom.biz)