

GE MultiClient for the PC
User Manual



GE imagination at work

Copyright Copyright © 2005, GE Security B.V. All rights reserved.

This document may not be copied or otherwise reproduced, in whole or in part, except as specifically permitted under US and international copyright law, without the prior written consent from GE.

Document number/revision: **xxxx_GB** (July 2005).

Disclaimer THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. GE ASSUMES NO RESPONSIBILITY FOR INACCURACIES OR OMISSIONS AND SPECIFICALLY DISCLAIMS ANY LIABILITIES, LOSSES, OR RISKS, PERSONAL OR OTHERWISE, INCURRED AS A CONSEQUENCE, DIRECTLY OR INDIRECTLY, OF THE USE OR APPLICATION OF ANY OF THE CONTENTS OF THIS DOCUMENT. FOR THE LATEST DOCUMENTATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT WWW.GESECURITY.NET.

This publication may contain examples of screen captures and reports used in daily operations. Examples may include fictitious names of individuals and companies. Any similarity to names and addresses of actual businesses or persons is entirely coincidental.

Trademarks and patents GE and the GE monogram are registered trademarks of General Electric. Digia Client product and logo are registered trademarks of GE Security.

Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

Software license agreement GE software supplied with GE products is proprietary and furnished under license and can be used or copied only in accordance with the license terms.

THE ENCLOSED PROGRAM IS FURNISHED SUBJECT TO THE TERMS AND CONDITIONS OF THIS AGREEMENT. RETENTION OF THE PROGRAM FOR MORE THAN 30 DAYS, OPENING OF THE SEALED WRAPPER, IF ANY, SURROUNDING THE PROGRAM, OR USE OF THE PROGRAM IN ANY MANNER WILL BE CONSIDERED ACCEPTANCE OF THE AGREEMENT TERMS. IF THESE TERMS ARE NOT ACCEPTABLE, RETURN THE UNUSED PROGRAM AND ANY ACCOMPANYING DOCUMENTATION TO GE FOR A FULL REFUND OF THE LICENSE FEE PAID. (FOR INFORMATION REGARDING THE RETURN OF PROGRAMS ENCODED OR INCORPORATED WITHIN EQUIPMENT, CONTACT THE NEAREST GE SALES OFFICE.)

Intended use Use this product only for the purpose it was designed for; refer to the data sheet and user documentation. For the latest product information, contact your local supplier or visit us online at www.gesecurity.net.

Regulatory



Table of Contents


Table of Contents	iii
Chapter 1. GE Security MultiClient Application Setup	1
Minimum System Requirements	2
GE MultiClient Installation	3
Logging in to the GE MultiClient	3
Enabling Camera Monitoring	5
Connecting to an FVS Gateway	5
Setting FVS Gateway Default Video and Sound Settings	11
Viewing FVS Gateway Properties and Statistics	12
FVS Gateway Properties	12
FVS Gateway Statistics	12
Securing the GE MultiClient	14
Chapter 2. Viewing Video	19
Viewing Live Video Streams	21
Adjusting Camera Settings	23
Viewing Recorded Video	28
Playing Video Stored on an FVS Gateway	28
Playing Video Stored on Your PC	29
Controlling Video Playback	33
Adjusting Camera Pane Placement	34
Viewing Multiple Cameras in a Camera Pane	36
Using the Desktop to See Different Views	37
Using Workspaces	39
Saving and Opening a Workspace	39
Chapter 3. Advanced Settings	41
Setting Viewing Options	41
Setting Proxy Server Properties	42
Setting Event Notification Properties	42
Setting Snapshot Properties	43
Setting Time Format Properties	44
Viewing Stream Info	46
Exporting Records to Self-Playable Format	47
Viewing Security Devices on Maps	48
Using Input Sensors	50
Using Activators	52
Setting Image Quality Options	53

Chapter 1 GE Security MultiClient Application Setup

The GE MultiClient application (GEMC) enables you to monitor security cameras from your PC. By connecting with the FVS Gateway, the GEMC enables you to control up to 16 cameras simultaneously, monitor events in real-time, either when they happen or live, choose between different quality modes in viewing or recording, and enjoy full DVR capabilities on all video channels.

The following figure illustrates the GE Security operational diagram.

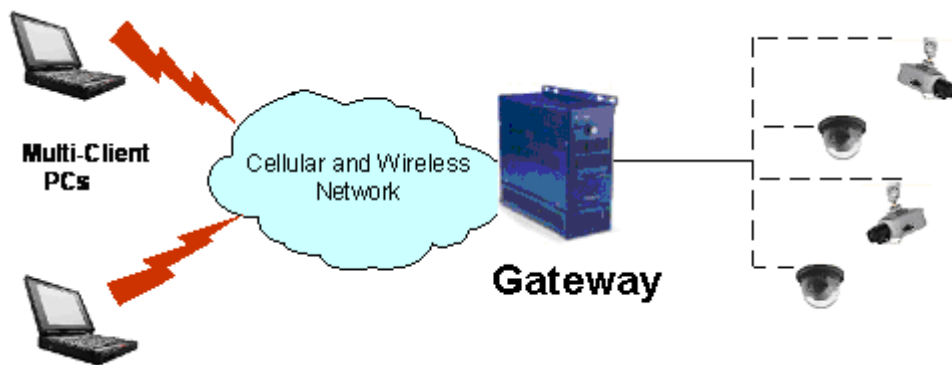Figure 1. GE Security Operational Diagram



You can connect your PC to an FVS Gateway through a LAN, WAN, or Wi-Fi network, analog and broadband phone lines, and all cellular protocols.

Minimum System Requirements

To access an FVS Gateway via a PC, you need the following:

- Windows 2000/XP
- Pentium 3, with a 1 GHz processor or higher
- 256 MB of RAM
- 10 MB of hard disk space for the installation (not including the space required for the video downloaded from the gateway)
- A video card and monitor that support a of resolution 1024 x 768 or higher

Note: To use the map feature, it is recommended to have two monitors and supporting video cards.

GE MultiClient Installation

The GE MultiClient application (GEMC) runs directly from a PC. Before you use the application, you must install the software on the PC. The setup program is located on the installation CD, but it is recommended that you download the latest version at <ftp://www.servision.net/Support/GeneralElectric>.

To install the GE MultiClient application on the PC

1. Start the setup program in one of the following ways:
 - Insert the installation disc into the CD drive of your PC. The setup program starts automatically.
 - Double-click the downloaded setup file, **Setup-MultiClient-GE-0.0.X.X.exe**. The setup program is displayed.

Note: If a Microsoft Windows Security Warning dialog box is displayed, click **Run**.

2. On the Welcome screen, click **Next**.
3. On the License Agreement screen, accept the license terms and click **Next**.
4. On the Destination Folder screen, select the installation folder by performing one of the following:
 - To accept the default folder (**C:\Program Files\GeneralElectric\GEMultiClient**), click **Next**.
 - To install to a different folder, click **Change**, enter the new folder, then click **Next**.
5. On the Installation screen, review the installation options, then click **Install**.
6. After the installation process is completed, click **Finish**.

An application icon is placed on your desktop.

If you selected to launch the program, continue with the following section to log in.

Logging in to the GE MultiClient


To access the GEMC, you can log in as an authorized user (full access) or a guest (limited access). The differences in access rights are described in *Securing the GE MultiClient* on page 14. The first time you log in, you must create a user ID.

To log in to the GEMC

1. Start the program by double-clicking the desktop icon or by running **GEMultiClient.exe** from the installation folder.

The Log In dialog box is displayed.

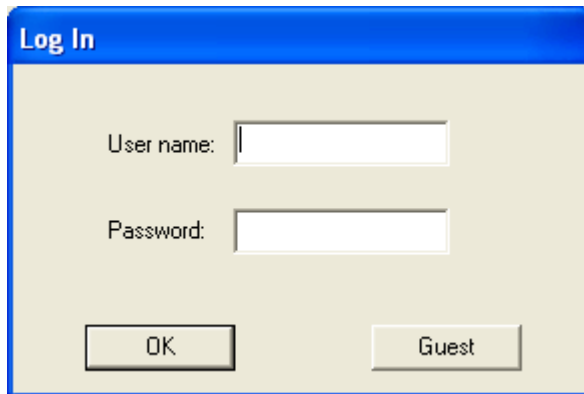Figure 2. Log In Dialog Box



2. Enter a user name and password and click **OK**, or for limited access, click **Guest**.

If no user name and password has been created yet, you are prompted to create a new user ID and password.

3. To create a new user name and password, perform the following:
 - a. Confirm the request to create a new user ID. The Add User dialog box (*Figure 12* on page 14) is displayed.
 - b. Enter a user name, password, and password confirmation.
 - c. Click **OK**.

The name of the user is displayed in the title bar of the GEMC main window.

Note: In this document, all tasks are described from the main window, assuming that a successful log in has been accomplished.

Enabling Camera Monitoring

To monitor the cameras that are attached to an FVS Gateway, you must connect to an FVS Gateway. You can connect to as many FVS Gateways as exist in your network security system, and you can subsequently disconnect from connected FVS Gateways. GEMC automatically remembers the last gateway to which your PC was connected.

Connecting to an FVS Gateway


You connect to an FVS Gateway by configuring basic connection properties in the New Gateway dialog box. You can configure advanced connection properties by using the Advanced Settings dialog box, as described in [Configuring Advanced Connection Properties](#) on page 7.

To open the New Gateway dialog box

From the main menu, choose **Gateway => Connect**.

The New Gateway dialog box is displayed.

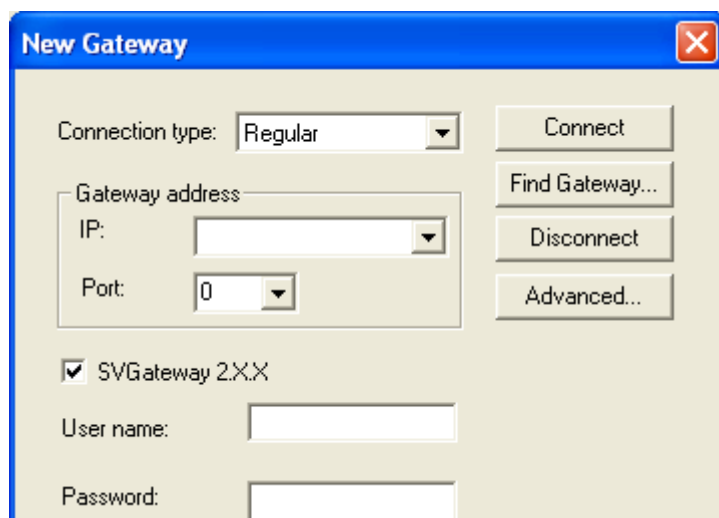Figure 3. New Gateway Dialog Box



Configuring Basic Connection Properties


1. Open the New Gateway dialog box (*Figure 3*).
2. Select from the following connection types:
 - **Regular**: connect to an IP, proxy server, or host name.
 - **Dial-up**: connect via a modem to an FVS Gateway modem.
3. In the **Gateway Address** section, enter the IP address (or host name) and the port (default 9988) of the FVS Gateway to which you want to connect, or to connect to a gateway that was previously connected, select it from the **IP** drop-down box.

Note: If you don't know the information on the FVS Gateways in your network, click **Find Gateway** to use the auto find feature. For more information, see [To find all FVS Gateways in the network](#) on page 6.

The IP and port information entered will be saved for future connection attempts.




4. If the FVS Gateway is running version 2.X.X of the software, select **SVGateway 2.X.X**.
5. Enter the user name and password for the FVS Gateway. The user name and password are configured using the GEConfigHTML utility.
6. To save the entered user name and password for subsequent connections, select **Save user name and password**.
7. Click **Connect**. The FVS Gateway selected is displayed in the **Connection** pane on the left side of the main window.

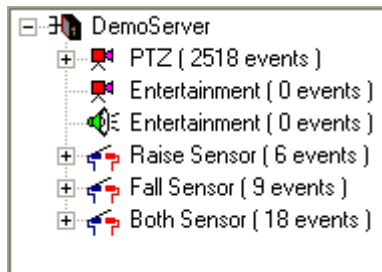Figure 4. Connection Pane



After successfully connecting, you can expand the FVS Gateway to display all the devices connected to it. The following table describes the connected devices:

Table 1. Connected Devices

Device	Description
	video device (in this example, a Pan\Tilt\Zoom camera and an entertainment feed)
	an audio device
	sensors (raise, fall, and both)

To remove a FVS Gateway

- In the **Connection** pane, right-click the FVS Gateway to disconnect and choose **Remove**.
- The FVS Gateway is removed.

To remove all connected FVS Gateways

- From the main menu, choose **Gateway => Remove all**.
- All connected FVS Gateways are removed.


Note: To locate the IP address of the FVS Gateways in your network, you can use the auto find feature.

To find all FVS Gateways in the network

1. Open the New Gateway dialog box (*Figure 3*).
2. Click **Find Gateway**.

The Find Gateway dialog box is displayed, showing a list of all FVS Gateways in the network.

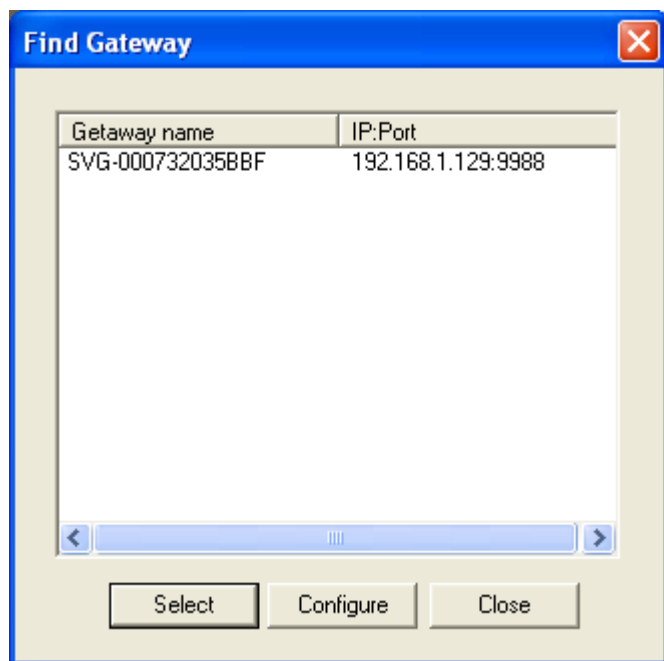Figure 5. Find Gateway Dialog Box



3. To connect to an FVS Gateway, select it and click **Select**. The gateway details are entered in the New Gateway dialog box.

Note: You can access the GEConfigHTML gateway administration utility through the Find Gateway dialog box. Select the desired FVS Gateway and click **Configure**. The GEConfigHTML utility is displayed in a Web browser window.

Configuring Advanced Connection Properties

You can set the following advanced gateway options:

Table 2. Advanced gateway options

Option	Description
Dial-up settings	Settings used for dialing into the FVS Gateway
Proxy settings	Settings used to define a proxy server
Backup Address settings	Settings used to configure a second IP address


You set advanced gateway connection properties with the Advanced Settings dialog box.

To open the Advanced Settings dialog box

1. Open the New Gateway dialog box (as described in *To open the New Gateway dialog box* on page 5) and click **Advanced**.


The Advanced Settings dialog box—Dial-up settings tab is displayed.

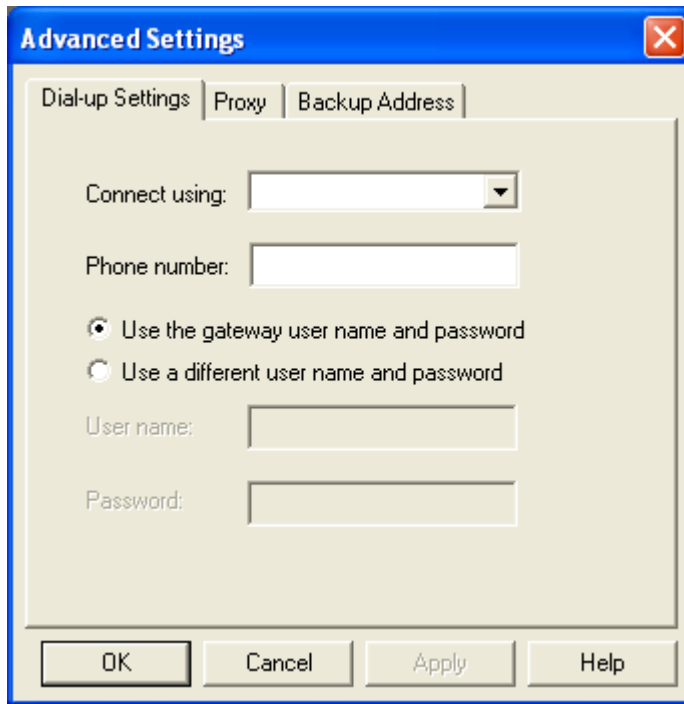Figure 6. Advanced Settings Dialog Box—Dial-up Settings Tab




2. To enter dial-up settings, perform the following:
 - a. Select an available device from the **Connect using** drop-down list.
 - b. Type the phone number to dial.
 - c. Select an authentication method:
 - Use the gateway user name and password
 - Use a different user name and password. For this method, enter the user name and password.
 - d. Click **OK**.
3. To enter proxy settings, perform the following:
 - a. Select the **Proxy** tab. The Advanced Settings Dialog Box—Proxy tab is displayed.

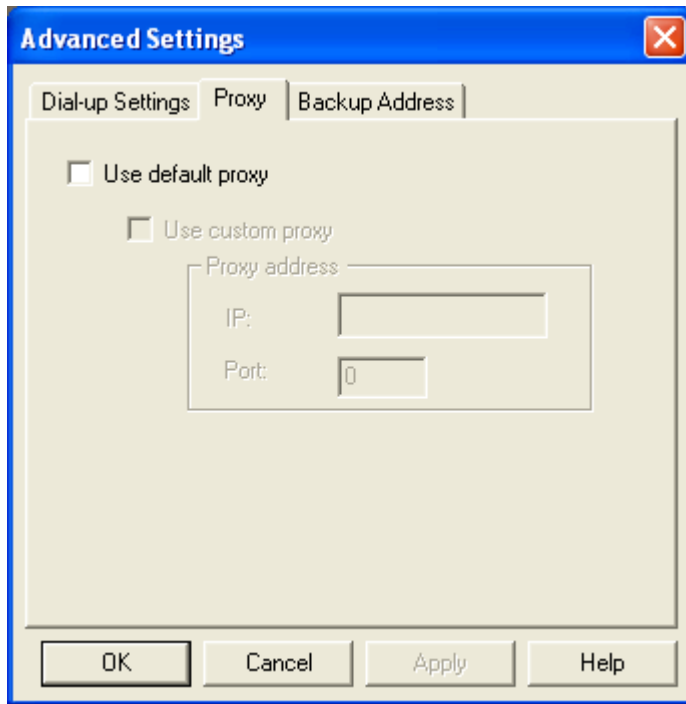Figure 7. Advanced Settings Dialog Box—Proxy Tab



- b. Select a proxy option:
 - To use the default proxy server, select **Use default proxy**. The default proxy server is configured in the Proxy tab of the Options dialog box. For more information, see [Setting Proxy Server Properties](#) on page 42.
 - To use a custom proxy, select **Use custom proxy** and enter the IP and port of the proxy.
- c. Click **OK**.
4. To enter backup address settings, perform the following:
 - a. Select the **Backup Address** tab. The Advanced Settings Dialog Box—Backup Address tab is displayed.

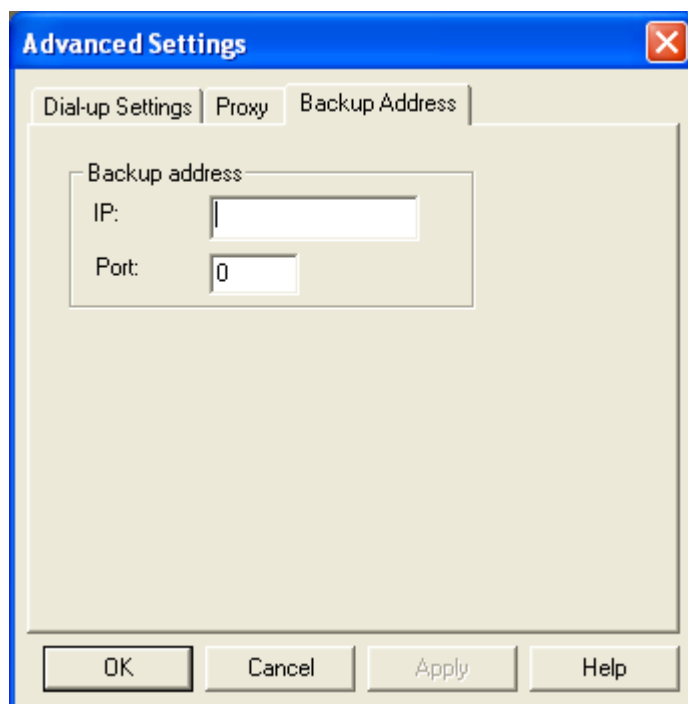Figure 8. Advanced Settings Dialog Box—Backup Address Tab



- b. Enter the IP and port of the backup address, and click **OK**.

Setting FVS Gateway Default Video and Sound Settings


You can set video and audio defaults for cameras connected to an FVS Gateway. Choose a quality profile based on the bandwidth of your connections. Selecting a higher quality profile for low bandwidth connections can cause a delay in the video stream.

For more information on video settings, see [Setting Image Quality Options](#) on page 53.

To set default video quality settings

1. From the Connection pane, right-click a connected FVS Gateway and choose **Default Video Quality**.
2. To select a preassigned default video setting, perform the following:
 - a. Select from **1 Lowest** to **8 Highest**.
 - b. Click **OK**.
3. To select a custom default video setting, perform the following:
 - a. Choose **Custom**. The Custom Video Settings dialog box is displayed.

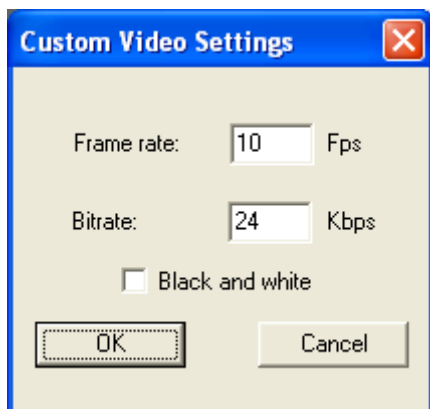Figure 9. Custom Video Settings Dialog Box



The default quality settings are as follows:

- Frame rate: 15 Fps (range is from 0 to 25)
 - Bitrate: 60 Kbps (range is from 5 to 1024)
- b. Enter the desired frame rate and bitrate settings.
 - c. To force black and white display, select **Black and white**.
 - d. Click **OK**.

To set default audio quality settings

1. From the Connection pane, right-click a connected FVS Gateway and choose **Default Audio Quality**.
2. Select a default audio setting from **Mute** (no sound) to **6 Highest** (best sound quality).
3. Click **OK**.

Viewing FVS Gateway Properties and Statistics

You can view basic FVS Gateway properties and advanced FVS Gateway statistics.

FVS Gateway Properties


You can view FVS Gateway properties using the Gateway Properties dialog box. You can also use the Gateway Properties dialog box to change the displayed name of the FVS Gateway and to enter the GEConfigHTML utility.

To open the Gateway Properties dialog box

1. From the **Connection** pane, right-click an FVS Gateway and choose **Properties**.

The Gateway Properties dialog box is displayed.

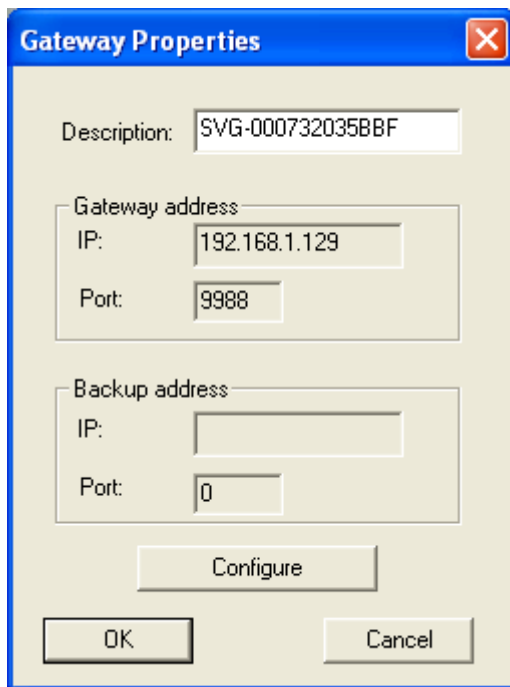Figure 10. Gateway Properties Dialog Box



2. To change the gateway name, enter a new name in the **Description** field and click **OK**.

Note: You can access the GEConfigHTML gateway administration utility through the Gateway Properties dialog box. Select the desired FVS Gateway and click **Configure**. The GEConfigHTML utility is displayed in a Web browser window.


FVS Gateway Statistics

You can view FVS Gateway statistics using the Gateway Statistics window.

To view FVS Gateway statistics

From the **Connection** pane, right-click an FVS Gateway and choose **Statistics**. The Gateway Statistics window is displayed.

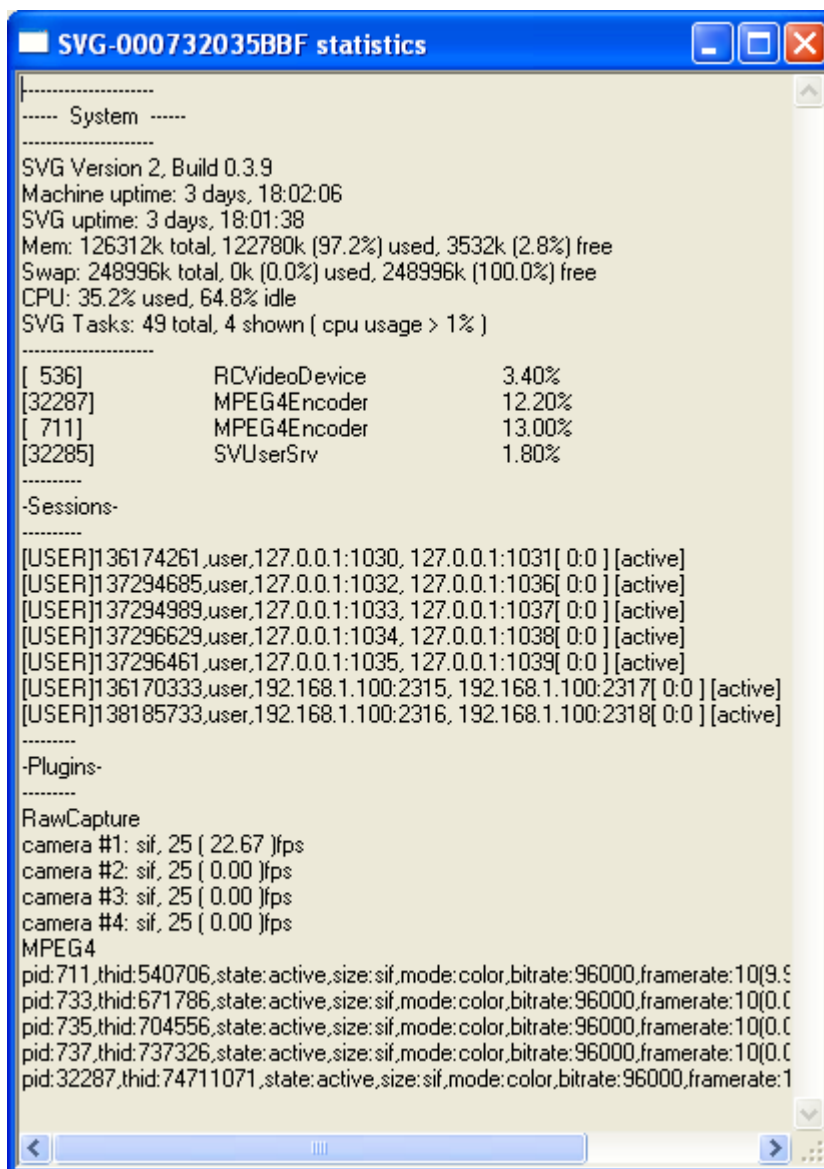Figure 11. Gateway Statistics Window



Securing the GE MultiClient

Access to the GEMC can be controlled by the use of password authentication. Authorized user can have full access, whereas guest users are limited to the following activities:

- Selecting video and sound settings (except for custom settings)
- Opening cameras in camera panes
- Moving camera (pan, tilt, and zoom)
- Viewing cameras in full screen mode
- Changing desktop and layout modes
- Viewing the security map

In addition to all video viewing and control activities, authorized users can manage user accounts.

Managing User Accounts

Authorized users can perform the following user account management tasks:

- Adding users
- Removing users
- Changing user passwords
- Setting user permissions


You manage user accounts with the Manage Users dialog box.

To open the Manage Users dialog box

From the main menu, choose **User => Management**.

The Manage Users dialog box is displayed.

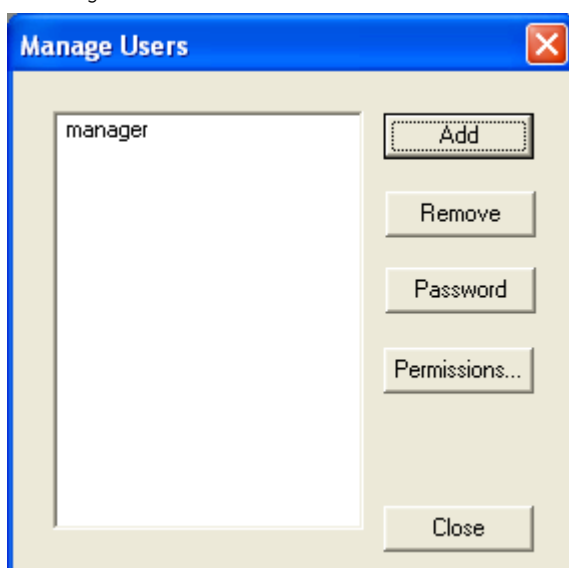
Figure 12. Manage Users Dialog Box



To add new users

1. Open the Manage Users dialog box (*Figure 12* on page 14) and click **Add**.
The Add User dialog box is displayed.

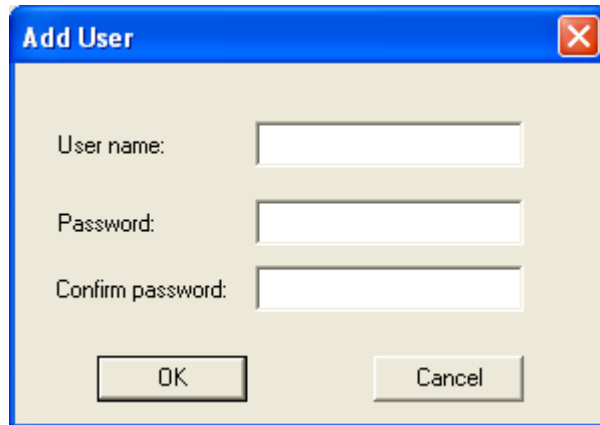Figure 13. Add User Dialog Box



The image shows a standard Windows-style dialog box titled "Add User". It has a blue header bar with the title and a red close button. The main area is light beige and contains three text input fields stacked vertically, each with a label to its left: "User name:", "Password:", and "Confirm password:". At the bottom of the dialog are two buttons: "OK" on the left and "Cancel" on the right.

2. Enter a new user name and password
3. Confirm the password and click **OK**.
The new user name is listed in the Manage Users dialog box.


To remove a user

1. Open the Manage Users dialog box (*Figure 12* on page 14).
2. Select the user to remove and click **Remove**.
The user name is removed from the Manage Users dialog box.

To change a user password

1. Open the Manage Users dialog box (*Figure 12* on page 14).
2. Select the user whose password is to be changed and click **Password**.
The Change Password dialog box is displayed.

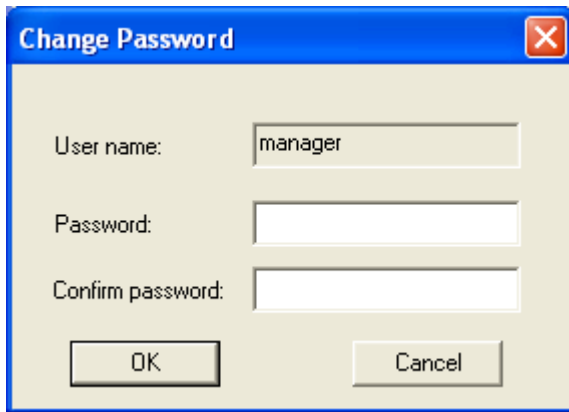Figure 14. Change Password Dialog Box




3. Enter the new password.
4. Confirm the new password and click **OK**.

To set user permissions

1. Open the Manage Users dialog box (*Figure 12* on page 14).
2. Select the user whose permissions are to be changed and click **Permissions**.
The User Permissions dialog box for the selected user is displayed.

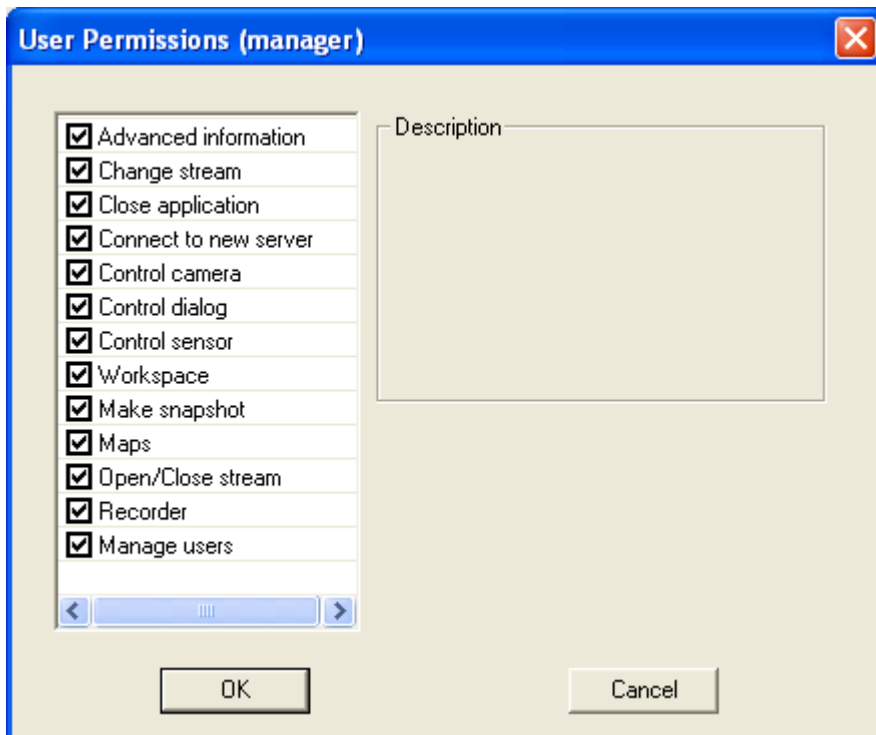Figure 15. User Permissions Dialog Box




3. Select or clear the desired permissions, then click **OK**.

Chapter 2 Viewing Video

You can use the GE MultiClient application to display and control all the cameras on any connected FVS Gateway. You can display up to 16 cameras simultaneously in a single view, view events, and play back recorded video. You can control the video display (pan, tilt, and zoom) and the video and audio quality of a camera.

All activities are performed using the GE MultiClient (GEMC) main window. The main window is displayed in the following figure.

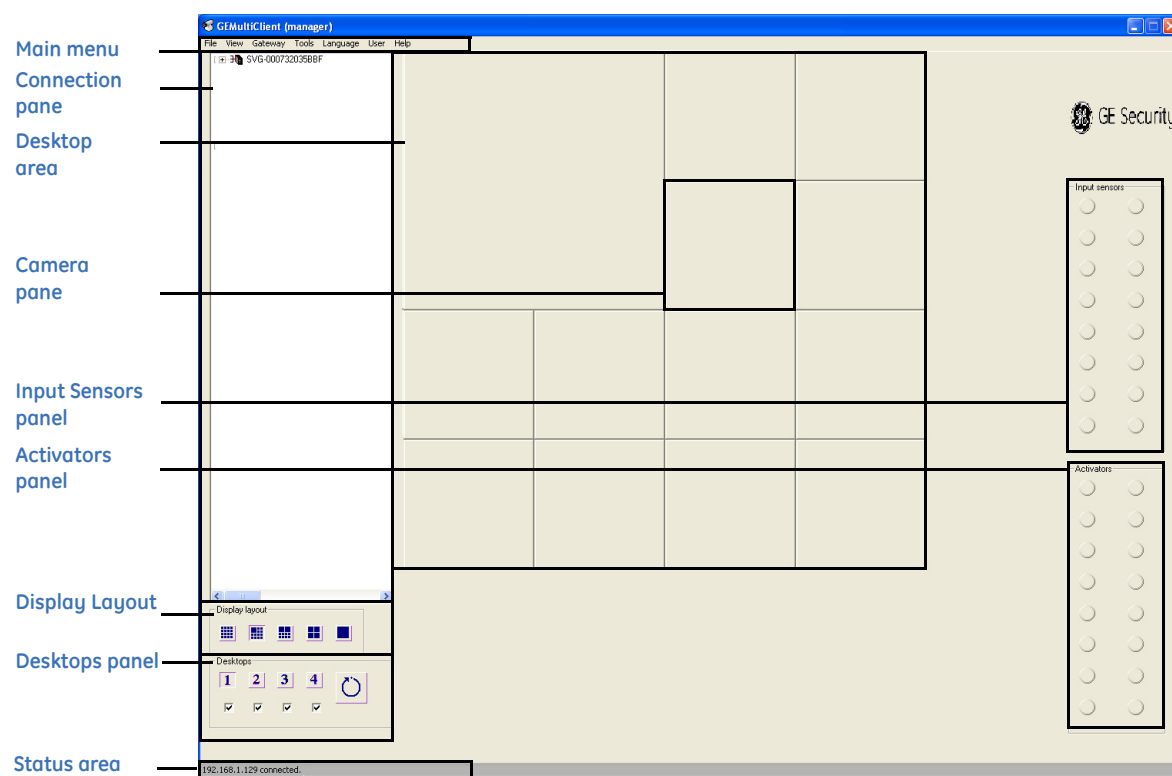Figure 16. Main Window



The following table describes the GEMC main window areas:

Table 3. GEMC main window areas

Main Window Area	Description
Main menu	enables the activation of GEMC functions
Connection pane	displays the FVS Gateways connected to the GEMC
Desktop area	displays the camera panes
Camera pane	displays video from a single camera
Input sensor area	enables the use (and displays the status) of event triggering devices (such as input sensors) For more information, see Using Input Sensors on page 50.


Table 3. GEMC main window areas

Main Window Area	Description
Activator area	enables the use (and displays the status) of activators. For more information, see Using Activators on page 52.
Display Layout panel	enables the use (and displays the status) of display layout modes For more information, see Adjusting Camera Pane Placement on page 34.
Desktop mode area	enables the use (and displays the status) of desktop modes For more information, see Using the Desktop to See Different Views on page 37.
Status area	displays the status of a selected active camera pane

Viewing Live Video Streams


You view video live video streams in a camera pane in the main window viewing area. GE MultiClient can display up to sixteen sources simultaneously.

To view video

From the connection pane, drag a camera icon  to a camera pane. (You may need to expand the FVS Gateway to display the connected cameras.) The video is displayed in the selected camera pane.

The following figure illustrates video displayed in a camera pane.

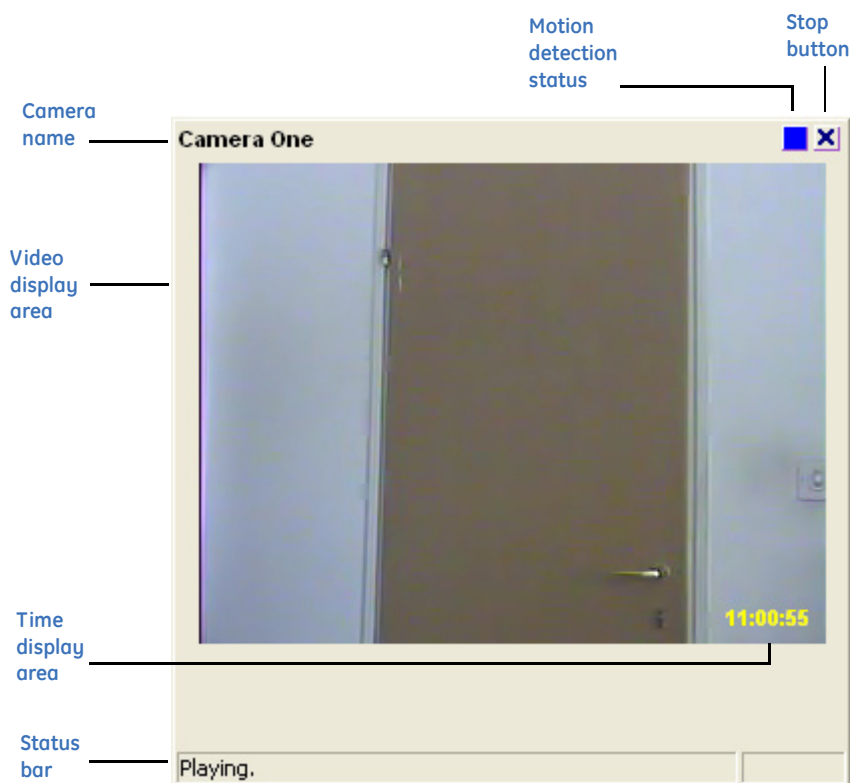Figure 17. Video Displayed in a Camera Pane



The camera pane contains the following parts:

Table 4. Camera Pane parts

Camera Pane Part	Descriptions
Camera name	shows the name of the camera
Motion detection status	flashes when the camera detects motion
Stop button	enables you to stop the video display in this camera pane
Video display area	shows the video being played
Time display area	shows the time associated with the displayed video
Status bar	shows the current camera action

You can drag the same camera or a different camera to as many camera panes as are displayed in the viewing area. You can also move a camera from one pane to another by dragging it to the desired location.

When you pass the cursor over an active camera pane, the video type, gateway name and camera name are displayed.

You can adjust camera settings such as location, brightness, and contrast. For more information, see [Adjusting Camera Settings](#) on page 23.

To pause playback

To pause playback, double-click the video display. To restart, double-click again. The video display resumes at the current time.

You can save a snapshot of a video stream that is currently playing.

To save a snapshot of a video stream

During playback, press <Space>. The frame is saved in JPG format in the default folder. For more information about snapshot defaults, see [Setting Proxy Server Properties](#) on page 42.

Adjusting Camera Settings

You can use the GEMC application to control a camera’s pan, tilt, and zoom functions. You can also set preset locations and adjust the image quality.

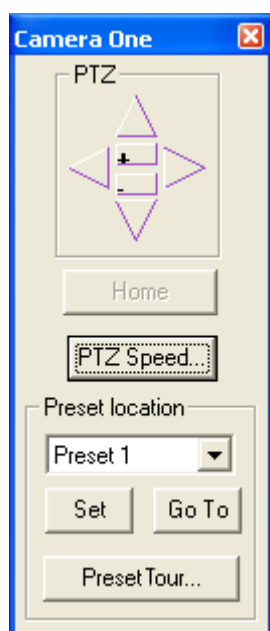
Controlling Pan, Tilt, and Zoom Functions

You can control a camera by moving it directly from your PC. You can adjust the pan (left to right), tilt (up to down), and zoom (in to out) functions according to your camera’s capabilities. In addition, you can set preset locations so you can move the camera view to there quickly and easily.

To move a camera


 


1. From an active camera pane, right-click and choose **Camera Control**.
The Camera Control panel is displayed.

Figure 18. Camera Control Panel





2. To pan or tilt, click the appropriate arrow. The camera moves in the direction selected.

Table 5. Camera direction controls

Camera Control	Description
	Pan left
	Pan right
	Tilt up
	Tilt down

  You can set the speed and step for PTZ functions. For more information, see [Setting the Speed for PTZ Actions](#) on page 24.

3. To zoom in or out, click  or . The camera view zooms in or out according to your selection.

Note: Your camera may be limited to support either tilt/pan action or zoom action but not both. For information on your camera's features, see the camera documentation or contact a GE Security representative.


Setting the Speed for PTZ Actions

Every camera has a different default *speed* (how quickly the camera moves from one point to another) and *step* (the distance the camera moves with each click). You can set the speed and step for your camera's movement. This can help you view desired locations easier.

To set PTZ speed

1. Open the Camera Control panel (as described in [To move a camera](#) on page 23) and click **PTZ Speed**. The PTZ Speed Configuration dialog box is displayed.

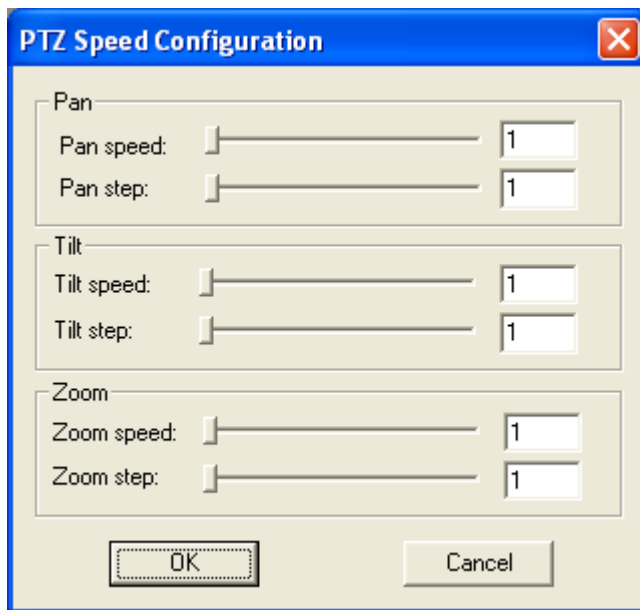Figure 19. PTZ Speed Configuration Dialog Box



2. Slide the markers to the desired speed for each pan, tilt, and zoom movements. To increase speed, slide the marker to the right.
3. Click **OK**.

Preset Camera Locations

You may want to repeatedly view activity in the same camera location (for example, for a frequently entered security area). You can create preset camera locations that enable you to quickly move a camera to view these locations. You can also loop the viewing of the preset locations to enable you to view the preset locations in a set order.

Note: If an event notification is received during the viewing of a preset tour, the event notification will be viewed in place of the preset tour.

You can link a sensor event trigger with a camera action. For example, when a sensor event is triggered, a camera can be configured (using the GEConfigHTML utility) to record video at one of the preset locations.

To set and view preset camera locations


1. Open the Camera Control panel (*Figure 18* on page 23).
2. To create a preset location, perform the following:
 - a. Use the **Camera action** controls to set the camera to the desired location and zoom setting, as described in *To move a camera* on page 23.
3. Select a preset location setting from the drop-down list and click **Set**.
4. To move the camera to a preset location, select the preset location from the drop-down list and click **Go To**.

To view preset locations in a specific order

1. After you have created preset locations (as described in *To set and view preset camera locations* on page 25), click **Preset Tour**.

The Preset Tour dialog box is displayed.

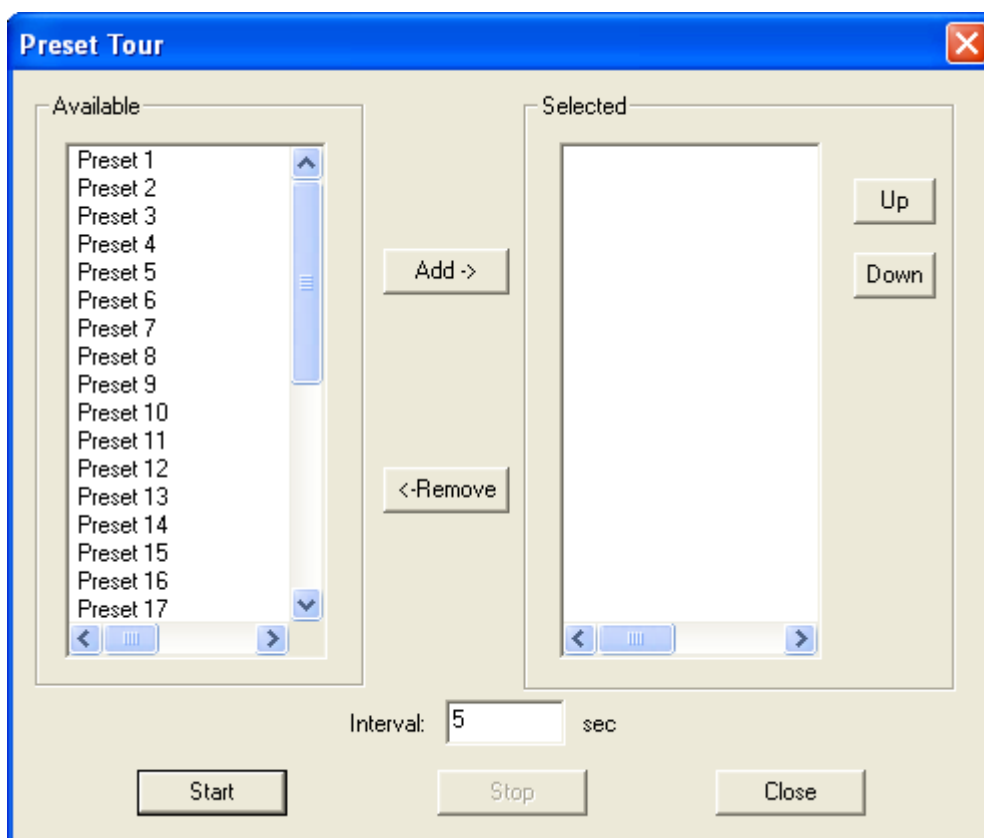Figure 20. Preset Tour Dialog Box



2. From the **Available** list, select the desired preset locations to include in the tour, and click **Add**.

Note: You can change the order of viewing by using the **Up** and **Down** buttons to change the order in which the preset locations appear in the In the tour list.

3. Set the time interval (minimum of 5 seconds) to view for each preset location.
4. Click **Start**.

The defined preset tour is displayed in the active camera pane.

To stop the display of the preset tour

Open the Preset tour dialog box (*Figure 20* on page 25) and click **Stop**.

Adjusting Video Quality

You can adjust the image and sound properties of a video stream. By default, the camera assumes the default settings defined for the FVS Gateway. For more information on the default settings, see [Setting FVS Gateway Default Video and Sound Settings](#) on page 11.

Adjusting Image Properties

You can adjust the image quality, brightness, and contrast settings.

To adjust image quality

1. From an active camera pane, right-click and choose **Video Quality**.
2. From the pop-up menu, perform one of the following:
 - Choose a defined quality level, from **1 Lowest** to **8 Highest**. The default is 5.
 - Choose **Custom Quality** to set the frame rate and bitrate properties.


For more information on image quality options, see [Setting Image Quality Options](#) on page 53.

To adjust brightness and contrast settings

1. From an active camera pane, right-click and choose **Picture Parameters**.

The Picture Parameters dialog box is displayed.

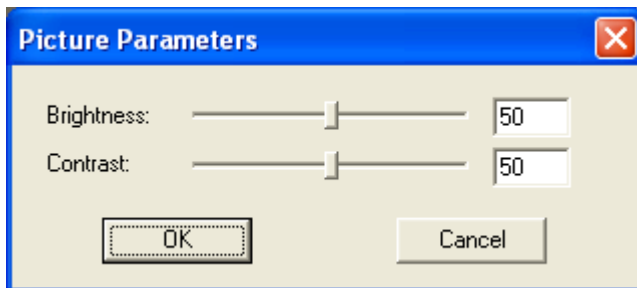Figure 21. Picture Parameters Dialog Box



2. Adjust the settings and click **OK**.

Adjusting Sound Properties

For cameras with audio capabilities, you can listen to the audio at the same time as you are viewing the video.

Note: Enabling audio is performed using the GEConfigHTML utility.

To adjust audio settings

From an active camera pane, right-click, choose **Audio Quality**, and select a sound quality setting from **Mute** (no sound) to **6 Highest**.

Viewing Recorded Video

You can play back video that is stored on the FVS Gateway or downloaded to your PC. Video can be recorded for playback in any of the following situations:

- A camera is configured to record all the time.
- A camera is configured to record events.
- A video file is uploaded to an FVS Gateway or downloaded to a PC.

Note: To enable recording, the camera must be configured using the GEConfigHTML utility.


Playing Video Stored on an FVS Gateway

You can view video stored on an FVS Gateway by event or by time.

Viewing Recorded Video by Event

You can view recorded video by events in the same way as you view live video. For more information on how events are triggered, see [Setting Proxy Server Properties](#) on page 42.

To view recorded video by event

From the connection pane, drag an event icon  to a camera pane.

During playback, you can control certain functions such as pause, fast forward, and rewind. You can also take snapshots of video frames. For more information, see [Controlling Video Playback](#) on page 33.


Viewing Recorded Video by Time

If the camera whose video you want to view is configured to always record video streams, you can view recorded video by time.

To view recorded video by time

1. From the connection pane, right-click a camera and choose **Play Record by Time**.
The Play Record by Time dialog box is displayed.

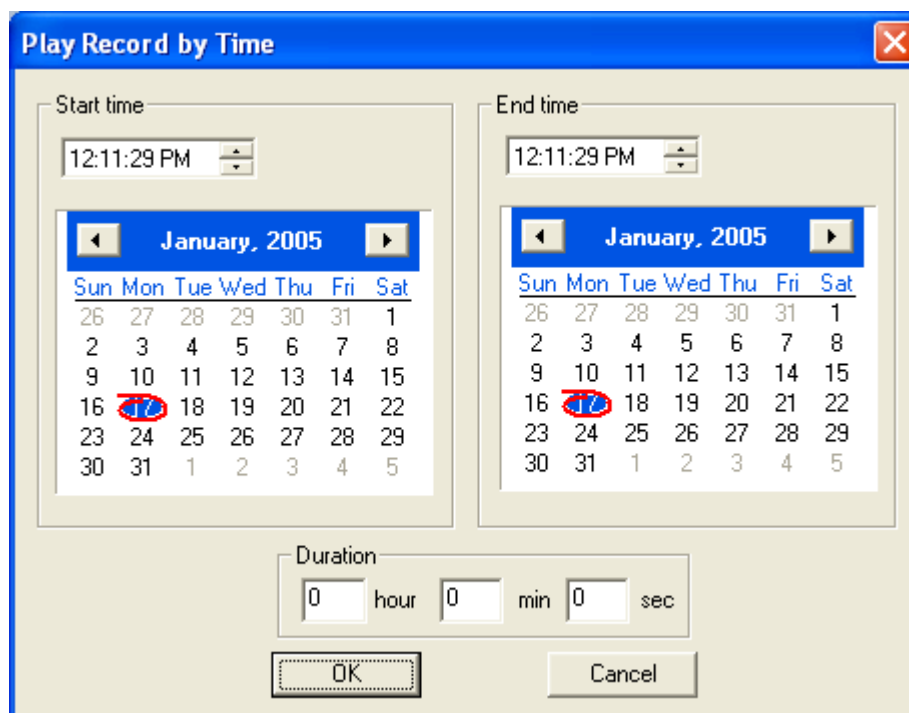Figure 22. Play Record by Time Dialog Box



The current date is indicated by a red circle.

2. Select a start time and date and an end time and date (or choose a start time and duration), then click **OK**.
3. Click a camera pane in which to play the video.

The video playback begins.

During playback, you can control certain functions such as pause, fast forward, and rewind. You can also take snapshots of video frames. For more information, see [Controlling Video Playback](#) on page 33.

Playing Video Stored on Your PC

You can use the GEMC application to view video that is stored on your PC. This video may have been downloaded from an FVS Gateway or you may have received a downloaded file via an email message.

In some cases, the video is in SVR format, in which case you can play it only by using the GEMC application. In other cases, SVR video can be exported into a self-playable format that enables viewing on any PC.

Downloading Video from an FVS Gateway


You can download video from an FVS Gateway by event or by time.

To download a recorded event

1. From the Connection pane, right-click an event and choose **Download Event**.

The Download Event dialog box is displayed.

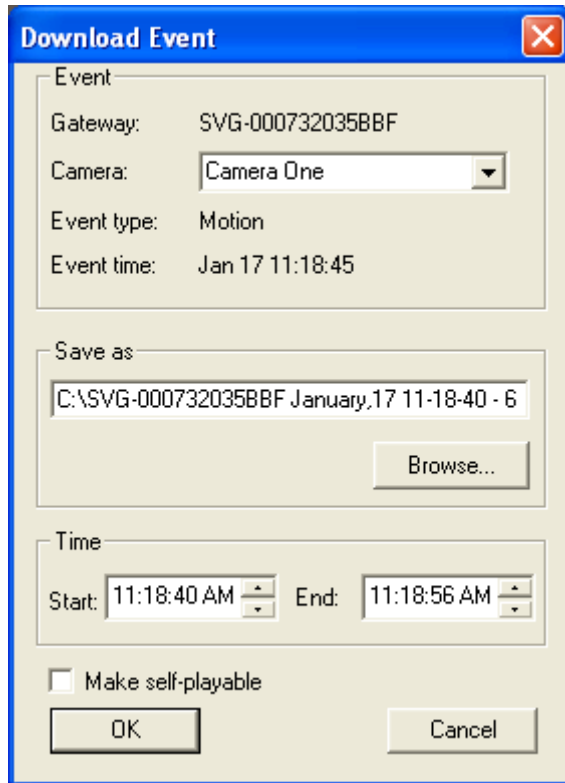Figure 23. Download Event Dialog Box



The event properties are displayed in the upper portion of the dialog box.

2. Enter a path and file name for the downloaded file or click **Browse** to navigate to the desired location. The default path is **..My Documents**.
3. To view a longer segment of video, change the **Start** and **End** settings in the **Time** box.


Note: When a camera always records video, you can change the viewing segment to include more than the recorded 'event.' If the camera is configured only to record events, this extended recording time is limited to the time configured in the GEConfigHTML utility.

4. To enable the viewing of the downloaded file on PCs where GE MultiClient is not installed, select **Make self-playable**. The file is saved in EXE format and can be played from any PC. For more information on viewing self-playable files, see [Playing Downloaded Video](#) on page 31.
5. Click **OK**. After successful downloading, a confirmation is displayed.

To download video by time

1. From the Connection pane, right-click a camera and choose **Download Record by Time**. The Download Record dialog box is displayed.

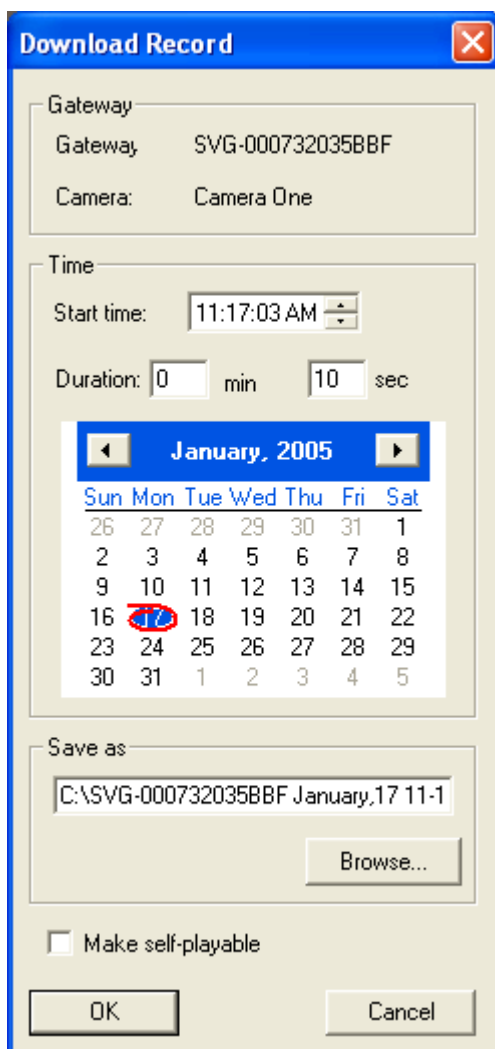Figure 24. Download Record Dialog Box



2. Enter the start time, duration, and date of the video to download.
3. Enter a path and file name for the downloaded file or click **Browse** to navigate to the desired location. By default, the file is saved in the **..My Documents** folder in SVR format named “*GatewayName Date Time.svr*”.
4. To enable the viewing of the downloaded file on PCs where GE MultiClient is not installed, select **Make self-playable**. The file is saved in EXE format and can be played from any PC.
5. Click **OK**. After successful downloading, a confirmation is displayed.

Playing Downloaded Video

You can play back downloaded video in the GE MultiClient or, if the file was saved in “self-playable” format, you can view it from any PC.

To view downloaded video from GE MultiClient

1. Choose **Tools => Play Downloaded Video**. The Microsoft Windows Open dialog box is displayed.
2. Select the file to play and click **Open**.
3. Select the camera pane in which to display the video. The video is displayed.


During playback, you can control certain functions such as pause, fast forward, and rewind. You can also take snapshots of video frames. For more information, see [Controlling Video Playback](#) on page 33.

To view self-playable downloaded video from any PC

1. Navigate to the saved file and double-click it.

The video stream is displayed in the GE Security Player window.

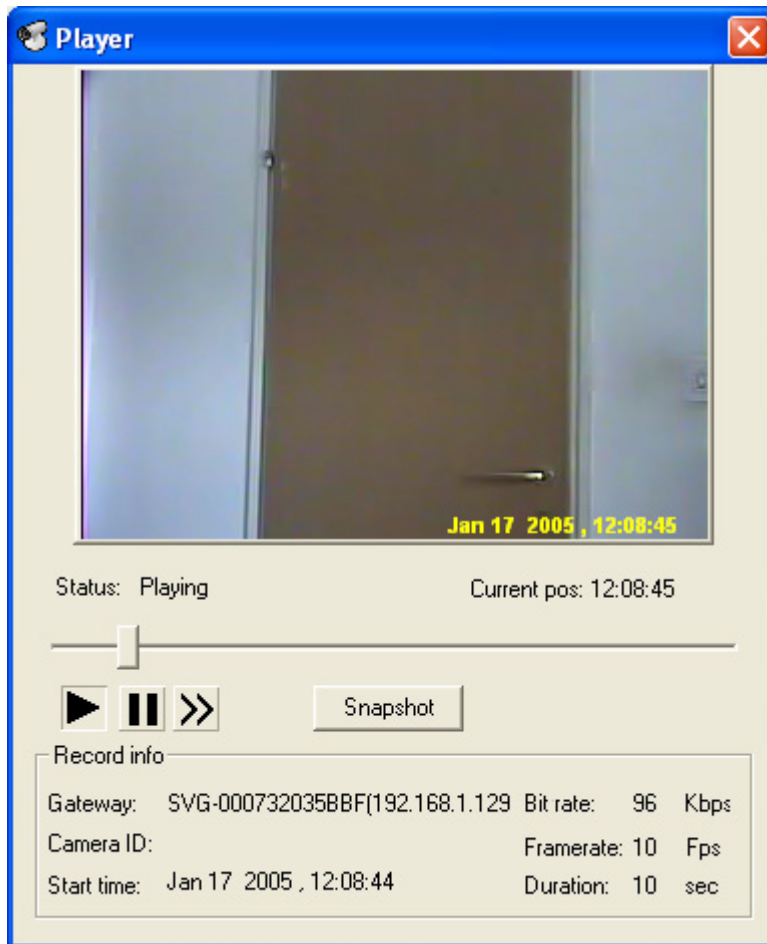Figure 25. GE Security Player Window



The record information is displayed in the Record info section of the GE Security player.

During playback, you can control certain functions such as pause and fast forward. For more information, see [Controlling Video Playback](#) on page 33.

You can also take snapshots of video frames.

To take a snapshot of a video stream

During playback, click **Snapshot**. The frame is saved in JPG format in the default folder. For more information about snapshot defaults, see [Setting Proxy Server Properties](#) on page 42.

Controlling Video Playback

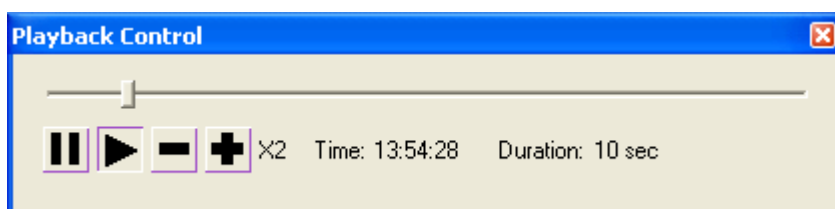
During playback of recorded video, you can control the playback and you can save snapshots of video frames.

To control video playback

1. From an active camera pane, right-click and choose **Playback Control**.






The Playback Control panel is displayed.

Figure 26. Playback Control Panel



2. Control video playback using the following controls:

Table 6. Playback functions

Playback Function	Description
 Segment slider	Slide the control to quickly reach a desired section of the playback.
 Pause	Click to pause playback.
 Play	Click to start playback.
 Reduce Playback Speed	Click to reduce the speed at which the video is played. Each click reduces speed by 2X (2X, 4X, 8X, 16X, 32X).
 Increase Playback Speed	Click to increase the speed at which the video is played. Each click increases speed by 2X (2X, 4X, 8X, 16X, 32X).

To take a snapshot of a video stream

During playback, press **<Space>**. The frame is saved in JPG format in the default folder. For more information about snapshot defaults, see [Setting Proxy Server Properties](#) on page 42.

Adjusting Camera Pane Placement

You can adjust the following properties of the camera pane:

- the size of the camera pane
- the amount of camera panes displayed

These properties are referred to as camera pane placement properties. You can also choose to view the camera panes in full screen mode. For more information, see [Viewing Cameras in Full Screen Mode](#) on page 35.

You can configure the placement of camera panes within the viewing area. The fewer camera panes that are displayed, the greater the size available for viewing single cameras. So, if you set sixteen panes, each pane will be smaller than if you set four.






Camera panes come in the following sizes:

- Quarter SIF
- SIF
- VGA

You can set the image quality for these sizes. For more information, see [Setting Image Quality Options](#) on page 53.

You can choose from the following defined placement setting:

Table 7. Camera Placement Settings

Placement Setting	Enables You to View
 16 QSIF	up to 16 videos in quarter-SIF camera panels
 1 SIF + 12 QSIF	1 video in a SIF camera panel and 12 videos in quarter-SIF camera panels
 2 SIF + 8 QSIF	2 videos in SIF camera panels and 8 videos in quarter-SIF camera panels
 4 SIF	1 video in a SIF camera panel and 12 videos in quarter-SIF camera panels
 VGA	1 video in a VGA camera panel


To set camera placement

Perform one of the following:

- From the menu, choose **View** and select the desired placement.
- From the Display Layout panel (*Figure 27*), select the desired placement.


The current selection is indicated in the Display Layout panel.

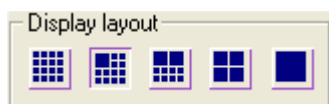Figure 27. Display Layout Panel



The placement setting is reflected in the viewing area. The following figure illustrates video displayed in a SIF camera pane of the viewing area with a 2 SIF + 8 QSIF setting.

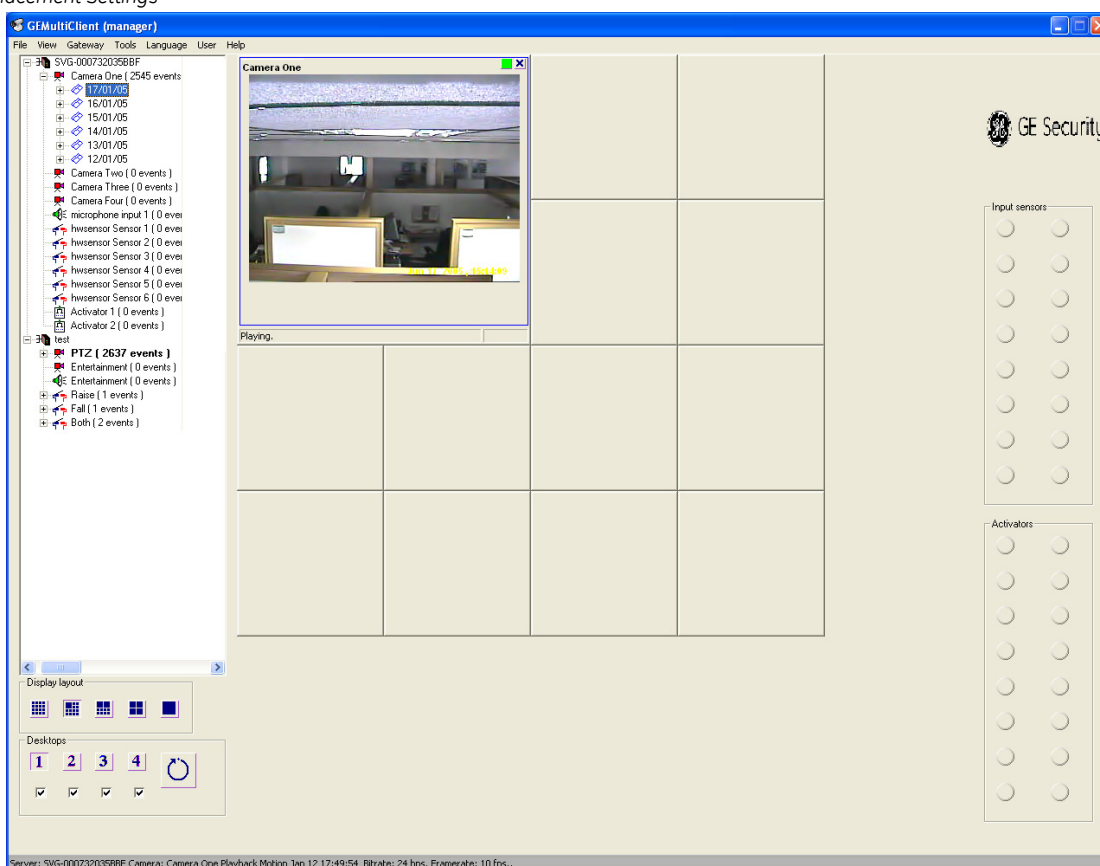Figure 28. Camera Placement Settings



Viewing Cameras in Full Screen Mode

You can view the camera panes in full screen mode, so the camera panes are stretched to fill the entire screen.

To view the camera panes in full screen mode

From the main menu, choose **View => Full screen**.

To return to normal mode, click the mouse, or press any key on the keyboard.


Viewing Multiple Cameras in a Camera Pane

You can *loop* multiple cameras in a single camera pane. This enables you to use the same camera pane to automatically switch the view between multiple cameras for a preset amount of time in the same camera pane.

To loop cameras


1. In an active camera pane, right-click and choose **Camera Loop**.
The Camera Loop Settings dialog box is displayed.

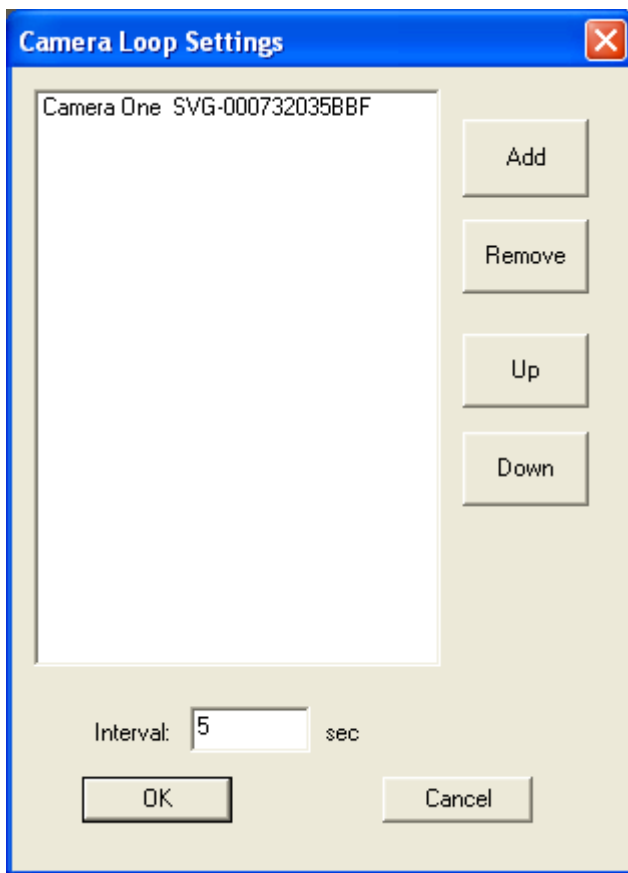Figure 29. Camera Loop Settings Dialog Box



2. To add a camera to the loop sequence, click **Add**.
The Choose Camera dialog box is displayed.

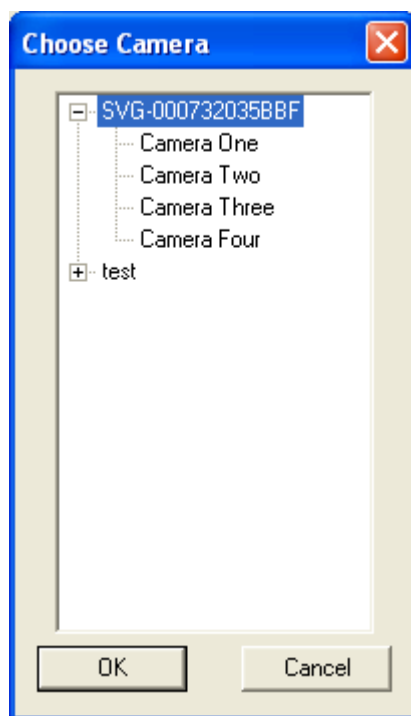Figure 30. Choose Camera Dialog Box




3. Select the camera to add and click **OK**.
4. To add additional cameras, repeat step 2 and step 3.
5. To set the amount of time to display each video, enter the amount of seconds to view in the Interval box. This setting applies to all cameras in the loop.
6. To adjust the order in which the cameras are displayed, select a camera and click **Up** to display it earlier or **Down** to display it later.
7. Click **OK**. The camera pane display will loop through the cameras as you have selected.

Using the Desktop to See Different Views

Camera and FVS Gateway settings are saved in a *desktop*. You can create alternate desktops to enable different defined configurations. For example, a nighttime watch may have different viewing needs than a daytime watch. Or, you may want to view more than sixteen cameras in a loop. You can save up to four different desktops, and you can loop between them, just as you loop between cameras in a camera pane.

The default desktop is number 1, as indicated in the Desktops panel on the main window.

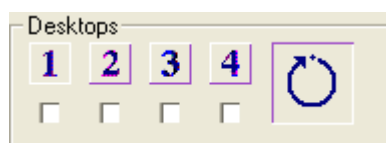Figure 31. Desktops Panel



To switch to a different desktop view

In the Desktop panel, select the desired desktop.

To loop between desktop views


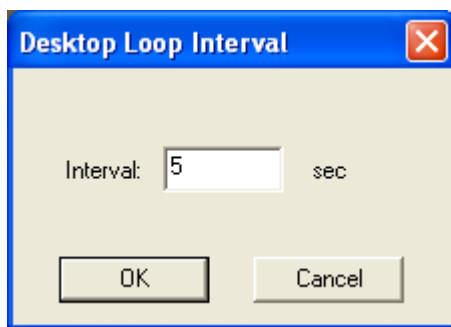
1. In the Desktops panel, select the box under the desired desktop views.
2. Click **Loop** . The Desktop Loop Interval dialog box is displayed.

Figure 32. Desktop Loop Interval Dialog Box



3. Enter the time (in seconds) to display each desktop view, then click **OK**.

Using Workspaces

You can save your FVS Gateway connection, desktop, and camera settings in a *workspace*. You can use workspaces to do the following:

- save different workspaces for different needs, such as a security manager and a watch person or a workspace for recurring events with different security needs
- send a workspace via email so you can monitor activity from an off-site location.


Saving and Opening a Workspace

You can save a workspace or send it to another user via email. Saved workspaces include the FVS Gateway connection and camera information. Workspaces are saved on your PC in WSP file format.

To save a workspace

1. From the main window, choose **File => Save Workspace (or Save Workspace As)**.
The Windows Save (or Save As) dialog box is displayed.

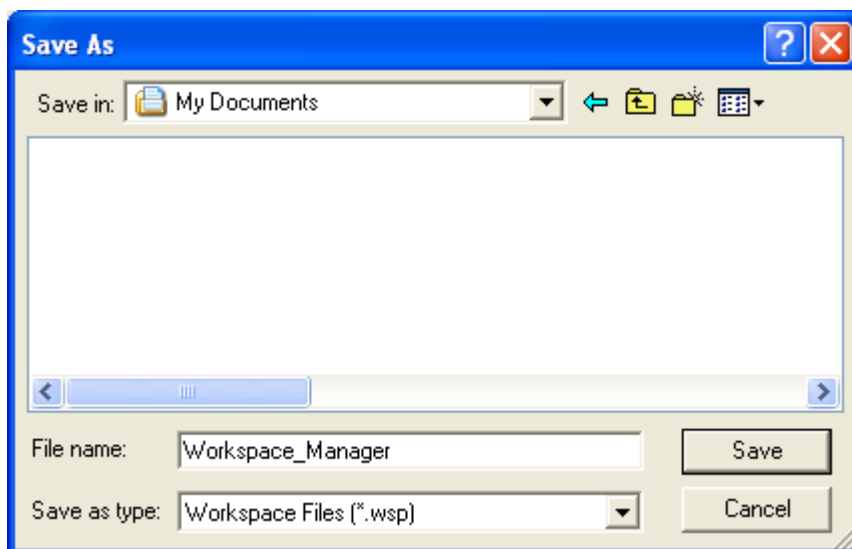Figure 33. Save Dialog Box




2. Navigate to the folder where you want to save the workspace file. By default, WSP files are saved in the **..\My Documents** folder.
3. Enter the workspace file name and click **Save**.

To open a workspace

1. From the main window, choose **File => Open Workspace**.
The Windows Open dialog box is displayed.

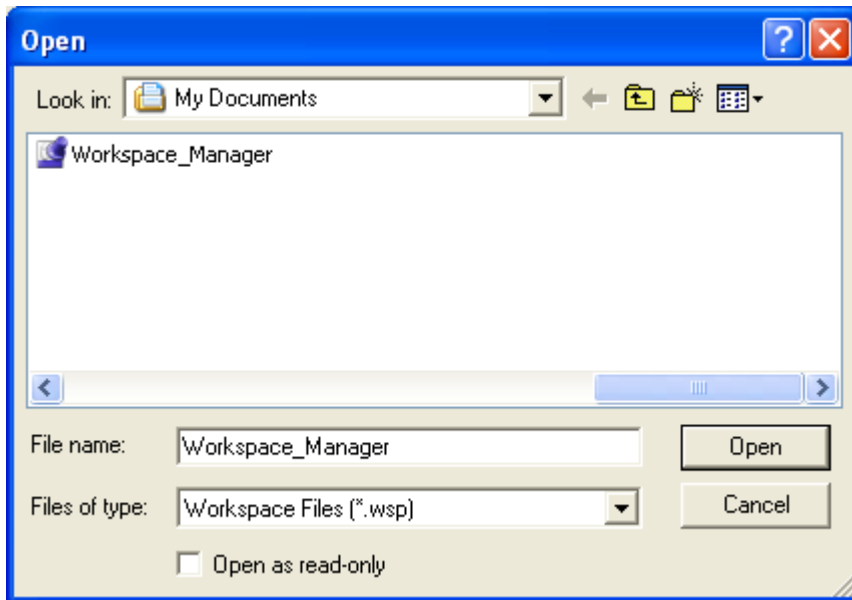Figure 34. Open Dialog Box



2. Select the workspace file to open, and click **Open**. The selected workspace replaces the current workspace in the main window.

To send a workspace via email

1. From the main menu, choose **File => Send to mail recipient**.

A new mail message is opened in your default mail program with the workspace file included as an attachment.

2. Enter the recipient information and send the message as usual.

The recipient can save the attached workspace file and open it as described in [Saving and Opening a Workspace](#) on page 39.

Chapter 3 Advanced Settings

This section discusses advanced settings you can use to customize the GE MultiClient (GEMC).

You can customize the following settings:

Setting Viewing Options

Exporting Records to Self-Playable Format

Viewing Security Devices on Maps

Using Input Sensors

Using Activators

Setting Image Quality Options

Setting Viewing Options

You can set the following viewing options:


- *Setting Proxy Server Properties* Set the default proxy server settings
- *Setting Proxy Server Properties* Set the audio and visual notifications triggered by the occurrence of events
- *Setting Proxy Server Properties* Set the options for taking snapshots
- *Setting Proxy Server Properties* Set the format in which time is displayed

You set viewing options with the viewing Options dialog box.

To open the viewing Options dialog box

1. From the main screen, choose **Tools => Options**.
The Options dialog box is displayed.

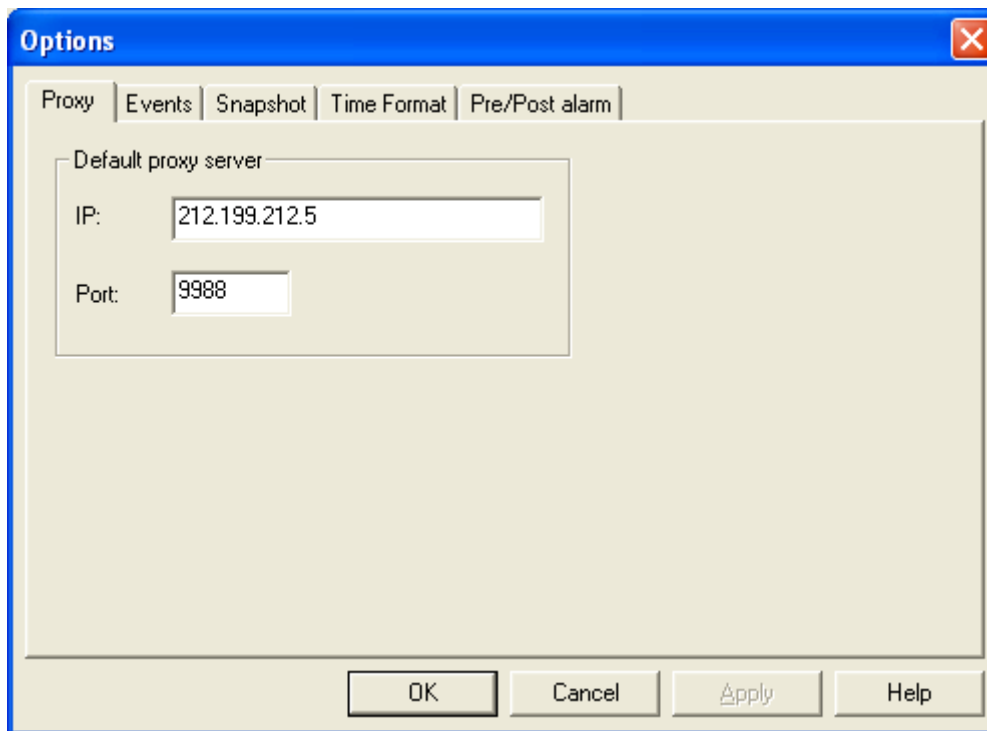Figure 35. Options Dialog Box—Proxy Tab



Setting Proxy Server Properties

You can change the IP and port of the default proxy server.

To set viewing proxy options

1. Open the Options dialog box (*Figure 35* on page 42).
2. Enter an IP address and port, and click **OK**.

Setting Event Notification Properties

An event is triggered when some kind of defined activity is sensed by a camera or a sensor. For example, a video motion detection (VMD) event is triggered when motion is detected and a sensor detection event is triggered when a contact is made or broken.

Note: The activities that trigger events are configured in the GEConfigHTML utility.

A motion detection event lasts for as long as the motion is detected. Depending on the camera configuration, the event (and the recording thereof) can extend for a short period of time after movement has stopped.

Event Notification Behavior

Within the GEMC, you can receive the following notification behaviors when an event is triggered:

- Sound notification

When an event occurs, a sound is played. The sound played is configured using the GEConfigHTML utility.


- Video pop-up

When an event occurs, the video stream from the camera linked to the sensor is displayed in an available camera pane.

To set event actions

1. Open the Options dialog box (*Figure 36* on page 42).
2. Select the **Events** tab.

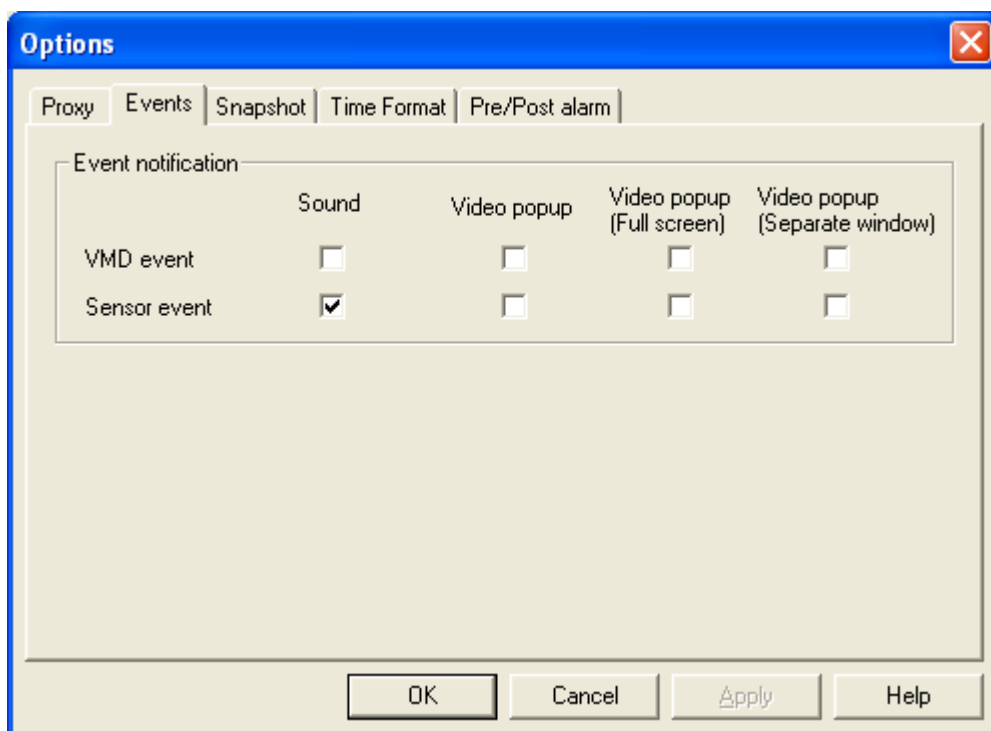Figure 36. Options Dialog Box—Events Tab



3. Set the sound and video notifications for video motion detection (VMD) and sensor events by selecting or clearing your choices.
4. Click **OK**.


Setting Snapshot Properties

You can save snapshots of video to your hard drive by pressing the <Space> key during playback. Snapshots are saved in JPG format. Use the Snapshot tab to set options.

To set snapshot options

1. Open the Options dialog box (Figure 35 on page 42).
2. Select the **Snapshot** tab.

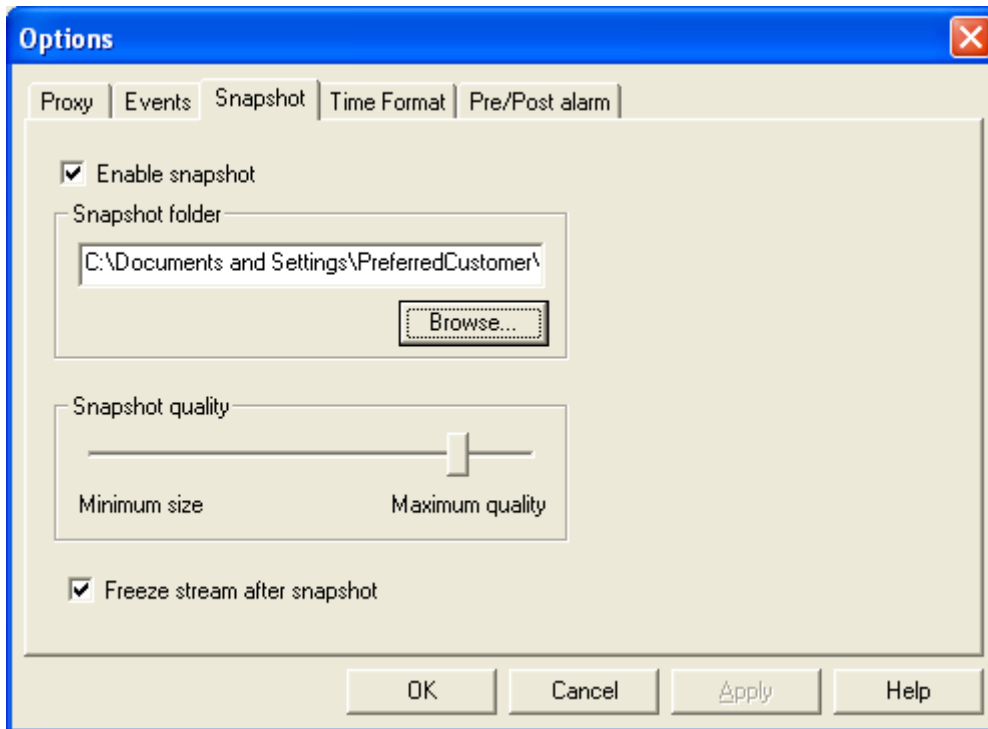Figure 37. Options Dialog Box—Snapshot Tab



3. To enable the taking of snapshots, perform the following:
 - a. Select **Enable snapshot**.
 - b. Enter the path to the folder in which to store snapshots.
4. To set the quality of snapshots, move the slider as desired. Snapshot files can range from approximately 5 Kb to 150 Kb.
5. To freeze the video stream after a snapshot is saved, select **Freeze stream after snapshot**.
6. Click **OK**.

Setting Time Format Properties

You can select the format in which time is presented in the camera pane from the following options:


Table 8. Time formats

Format	Description	Example
Long time format	Mmm DD YYYY HH:MM:SS	Dec 15 2005 15:15:30
Short time format	HH:MM:SS	15:15:30

To set time presentation options

1. Open the Options dialog box (*Figure 35* on page 42).
2. Select the **Time Format** tab.

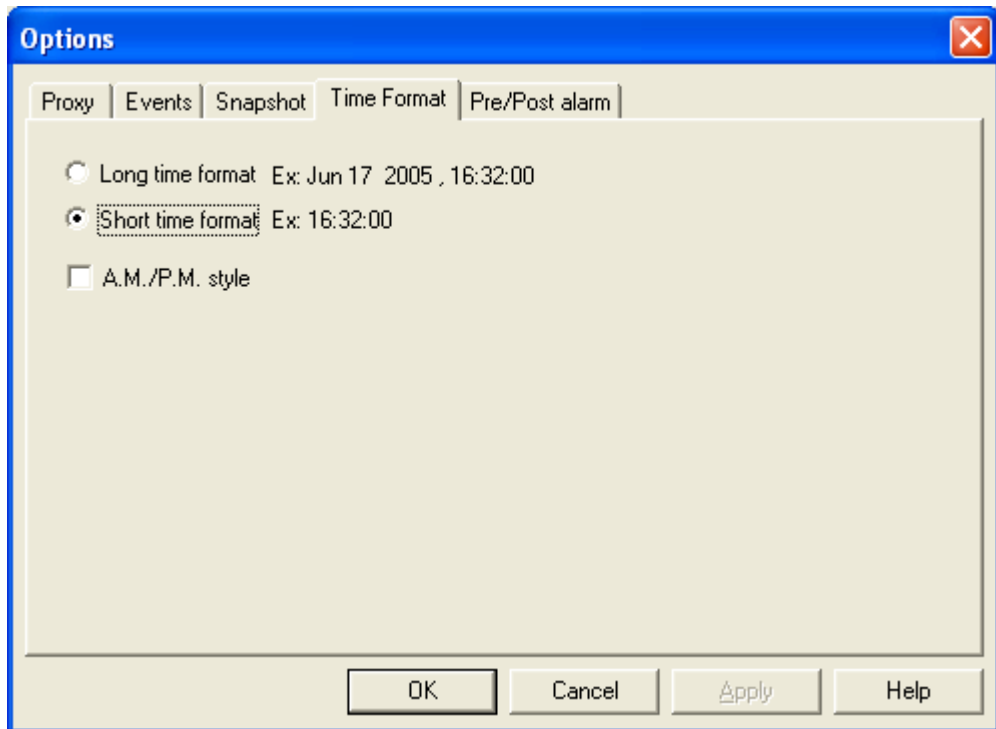Figure 38. Options Dialog Box—Time Presentation Tab



3. Select the desired format for time presentation and click **OK**.


Viewing Stream Info

You can view the properties of a video stream.

To view stream info

1. From an active camera pane, right-click and choose **Stream Info**.
The Stream Info dialog box is displayed.

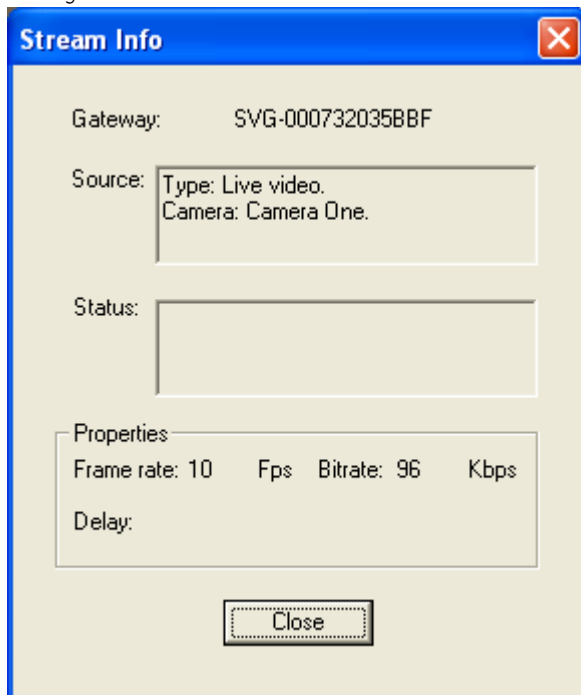Figure 39. Stream Info Dialog Box



2. To close the dialog box, click **Close**.

Exporting Records to Self-Playable Format

You can transform saved video files (SVR format) into a format that can be viewed on any PC.

To make video files self-playable

1. From the main menu, choose **Tools => Convert Downloaded Video**.

The Convert Downloaded Video dialog box is displayed.

Figure 40. Convert Downloaded Video Dialog Box



2. In the **Source** box, enter (or browse to select) the SVR file to transform.
3. In the **Save as** box, enter (or browse to select) the name of the transformed file. The transformed file will be created with an EXE file suffix.
4. Click **OK**.

For information on viewing transformed files, see [Playing Downloaded Video](#) on page 31.

Viewing Security Devices on Maps

You can use the GEMC Maps feature to “see” the location of cameras when an event is created. To use maps, you import a map of your facility and drag camera and sensor icons on to the map. When an event is detected, the icon will flash and another visual indicator will be displayed enabling you to see in which zone the event took place.

You use the Map window to import maps and to create mappings.


Note: For best results, it is recommended that you use the maps function with two computer monitors. For more information, see “System Requirements” on page 2.

To import a map of your facility

1. From the main window, choose **Tools => Show/Hide Maps**.

The Map window is displayed.

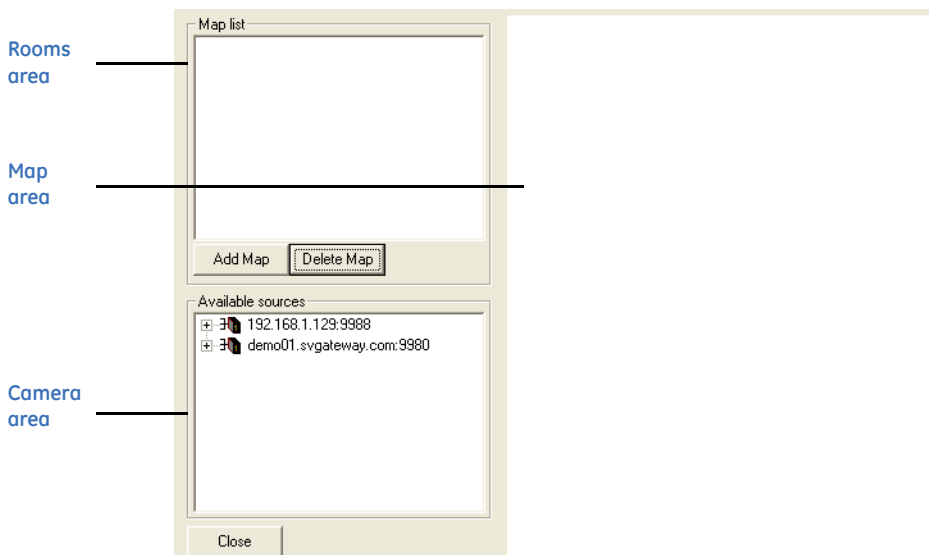
Figure 41. Map Window



2. Click **Add Map**.

The Add Map dialog box is displayed.

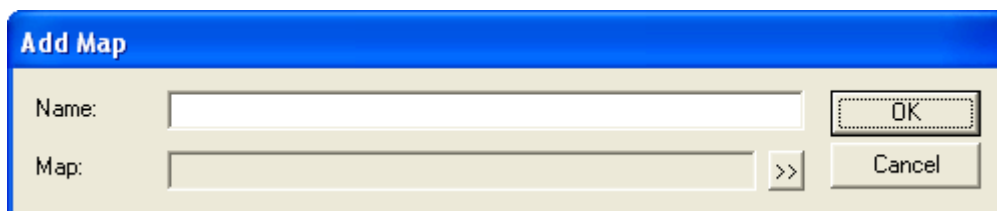Figure 42. Add Map Dialog Box



3. Enter a map name.

4. Click  to browse to the graphic file (JPG, BMP, or other) of the map to add and click **Open**.

The added room is listed in the Rooms area.

To place cameras on map


1. From the Rooms area, double-click an imported map.

The imported map is displayed in the Map area.

2. From the Cameras area, drag cameras to their appropriate location on the map.

The following figure illustrates a map with cameras and sensors in place.

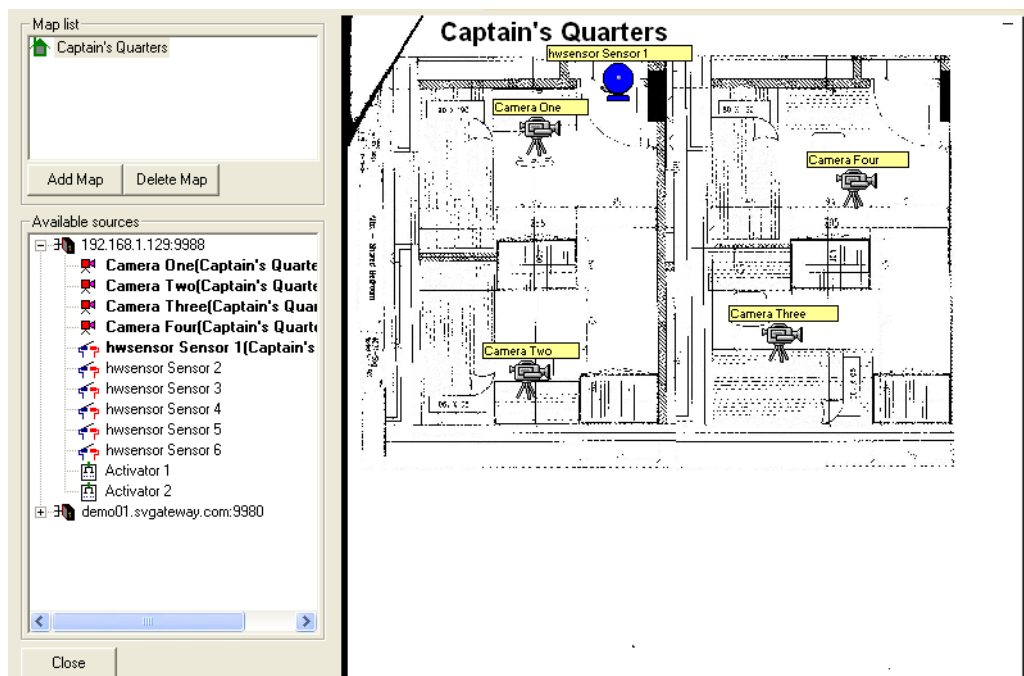Figure 43. Map Window Displaying Cameras and Sensors



Once you have cameras located on a map, you can view the video stream or see on which camera an event has been created.

In the **Maps** area, double-click a camera to display its video stream.

Note: If you are not using two monitors, you will need to close the Map window to see the video stream.

When an event is generated, the camera is colored red, and the video is displayed in the active camera pane.

Using Input Sensors


You can use input sensors to keep tabs on areas of interest. When a linked camera or sensor event is triggered, the input sensor flashes to signal the event. You can then see the event immediately.

To link an input sensor to a camera or event

1. In the **Input Sensors** area, click an input sensor.

The Event Sources dialog box is displayed.

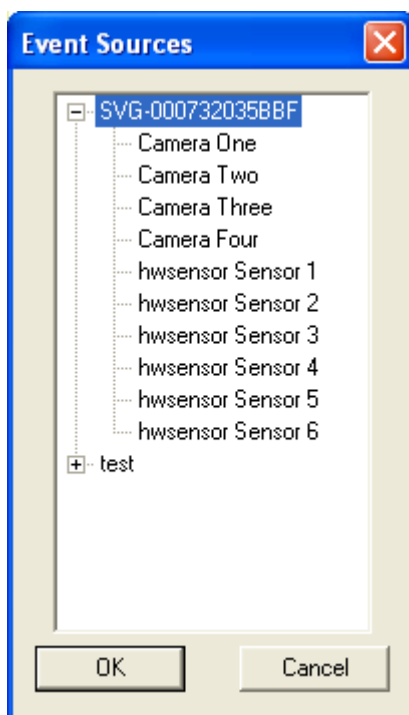Figure 44. Event Sources Dialog Box



2. Select a connected camera or sensor to link to the selected input sensor and click **OK**. You may have to expand the FVS Gateway to display all connected devices.

The selected input sensor changes color to indicate its status:


- Steady green
No events have been triggered
- Flashing red/blue
Motion is currently occurring
- Steady blue
Motion was detected

To view an event linked to an input sensor

1. Click a “triggered” input sensor.

2. The Sensor Info dialog box is displayed showing details of the sensor and the last event.

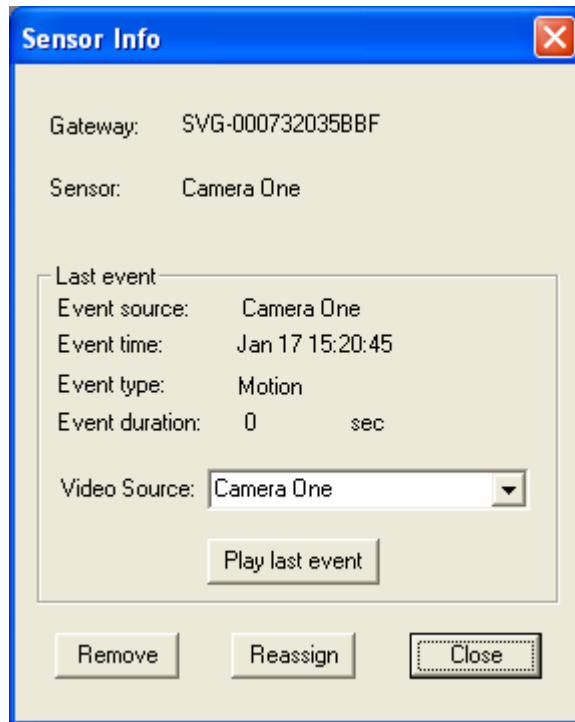Figure 45. Sensor Info Dialog Box



3. To view the last event, click **Play Last Event** and select the camera pane in which to view the event.
4. To unlink the input sensor, click **Remove**.

To change an input sensors link source

1. From the Sensor Info dialog box (*Figure 45* on page 51), click **Reassign**.
The Event Sources dialog box is displayed.
2. Link the sensor as described in *To link an input sensor to a camera or event* on page 50.

Using Activators

You can use the GEMC to operate an output activator that is connected to the FVS Gateway. For example, when an event is triggered, you can open or close a gate, turn on lights, reset an alarm, etc.

Note: Before using activators, they must be configured in the GEConfigHTML utility.

To link an activator to an action

1. In the **Activators** area, click an activator button.
The Event Sources dialog box (*Figure 44* on page 50) is displayed.
2. From the displayed gateways, select an activator to link to the selected activator sensor and click **OK**.
You may have to expand the FVS Gateway to display all connected devices.

When an activator has been linked, its button turns green.

To activate an activator

Double-click the activator button.

To deactivate an activator sensor

Right-click the activator button and choose **Deactivate**.

To change an input sensors link source

1. Right-click the activator button and choose **Activator Info**.
2. The Sensor Info dialog box is displayed (*Figure 45* on page 51).
3. Click **Reassign**.
The Event Sources dialog box is displayed.
4. Link the activator as described in [To link an activator to an action](#) on page 52.

Setting Image Quality Options

You can set the default image quality per FVS Gateway and adjust the image quality of each camera separately. You can choose from predefined quality profiles, or you can set a custom quality level.

The following settings define image quality:

- Bit rate (measured in kbps)

The amount of detail (pixels) compressed into each frame. Lowering this setting will decrease the frame quality but increase the amount of frames that can be displayed without skipping. This can increase the smoothness of the displayed image and can be particularly useful for low capacity connections (such as non-broadband connections).

- Frame rate (measured in fps)

The number of frames displayed per second.

The following table describes the predefined quality profiles:

Table 9. Predefined quality profiles

Quality Profile	QSIF (16 viewing panes) 160x120		SIF (4 viewing panes) 320x240		VGA (Single viewing pane) 640x480	
	Bit rate kbps	Frame rate fps	Bit rate kbps	Frame rate fps	Bit rate kbps	Frame rate fps
1	5	4	20	4	80	4
2	9	4	36	4	144	4
3	12	5	48	5	192	5
4	16	7	64	7	256	7
5	24	10	96	10	384	10
6	32	15	128	15	512	15
7	48	20	192	20	768	20
8	64	25	256	25	1024	25

For the lowest bandwidth channels, you can set the camera to display grayscale.

