

Network Camera

User Manual

Contents


Chapter 1 Warning	3
Chapter 2 Product Overview	5
Chapter 3 Function Overview	8
3.1 Parameter of IP Camera	8
3.2 Hardware Interface	10
Chapter 4 Common function	12
4.1 Product upgrade	12
Chapter 5 Installation Instruction	13
5.1 Installation Preparation	13
5.2:Installation Instruction:	14
Chapter 6 WEB Instruction	17
6.1 System Requirement	17
6.2 Built-in Web Instruction	17
6.3 Log in	18
6.4 Preview	18
6.5 Playback	20
Chapter 7 Configuration	22
7.1 Audio Video Set	22
7.2 Camera Set	24
7.3 VCA	26
7.4 OSD	28
7.5 Storage Management	29
7.6 Network Management	31
7.7 User management	33
7.8 Alarm Management	34
7.9 PTZ Management and Control	36
7.10 Advance	36
Chapter 8 Simple Fault Maintenance	38
8.1 System Failure	38
8.2 Network Failure	38
8.3 Operation Failure	40
8.4 Control Failure	41
8.5 Video Failure	41
8.6 Audio Failure	41
8.7 Alarm Failure	42
Chapter 9 After-sales Service	43
Chapter 10 Harmful Elements	44

Chapter 1 Warning

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECT THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

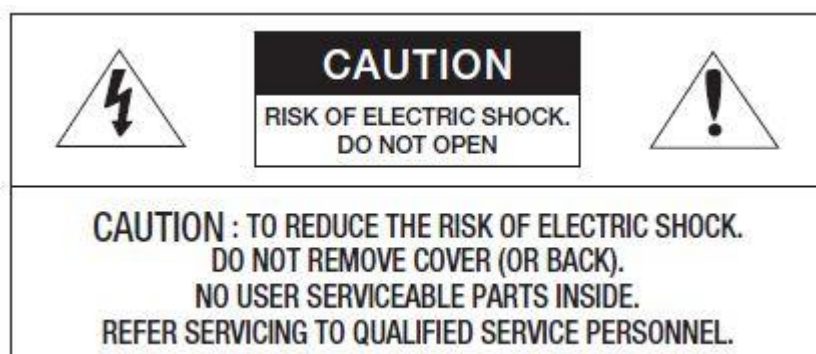

EXPLANATION OF GRAPHICAL SYMBOLS

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



Battery

Batteries(battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Disconnection Device

Disconnect the main plug from the apparatus, if it’s defected. And please call a repair man in your location.

When used outside of the U.S., it may be used HAR code with fittings of an approved agency is employed.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

The BNC Out terminal of the product is provided for easier installation, and is not recommended

for monitoring purposes.

If you keep the BNC cable connected, a risk of lightening may cause damage or malfunction to the product.

Please use the input power with just one camera and other devices must not be connected.

Please read the following recommend safety precautions carefully.

- Do not place this apparatus on an uneven surface.
- Do not install on a surface where it is exposed to direct sunlight, near
- heating equipment or heavy cold area.
- Do not place this apparatus near conductive material.
- Do not attempt to service this apparatus yourself.
- Do not place a glass of water on the product.
- Do not install near any magnetic sources.
- Do not block any ventilation openings.
- Do not place heavy items on the product.

User's Manual is a guidance book for how to use the products.


The meaning of the symbols are shown below.

- Reference : In case of providing information for helping of product's usages
- Notice : If there's any possibility to occur any damages for the goods and human caused by not following the instruction

Please read this manual for the safety before using of goods and keep it in the safe place.


Chapter 2 Product Overview

IP Box Camera

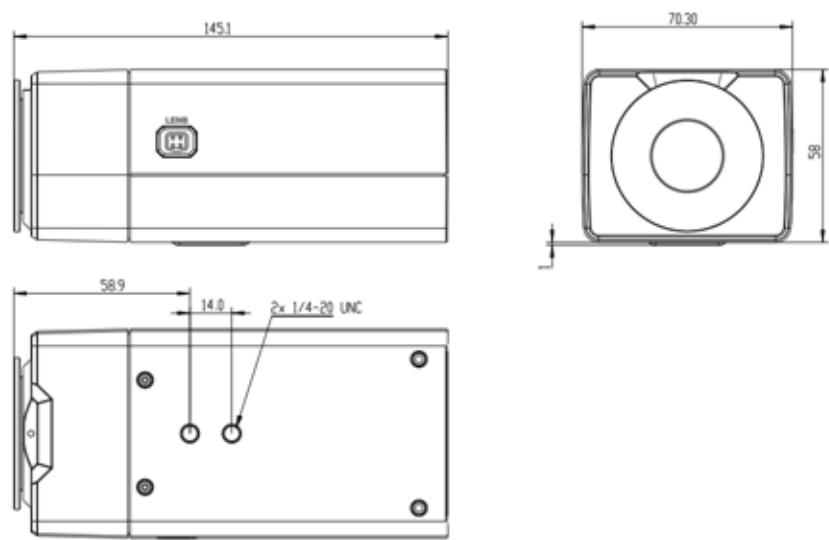


Size of IP box camera

IP IR Bullet Camera (fixed lens)

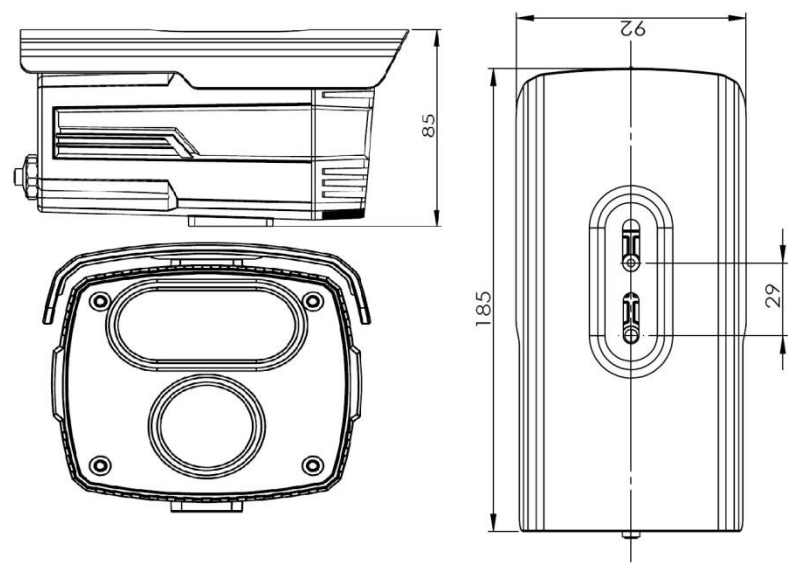


Size of IP IR bullet camera (fixed lens)

IP IR Bullet Camera (varifocal lens)

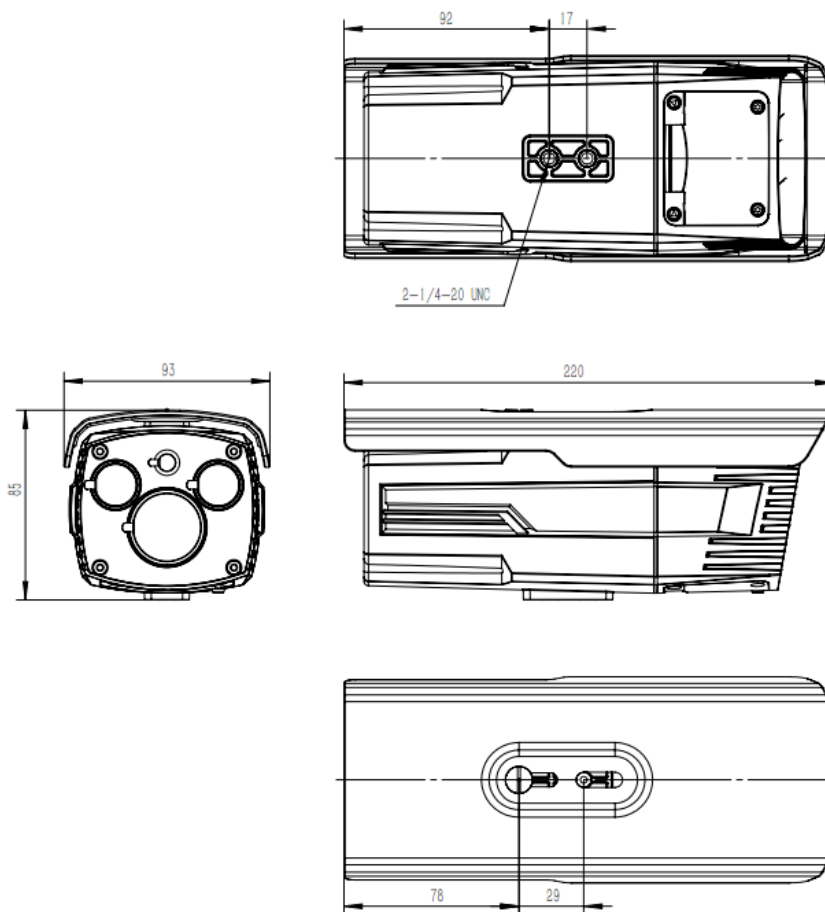


Size of IP IR bullet camera (varifocal lens)

IP IR Dome Camera (fixed lens)

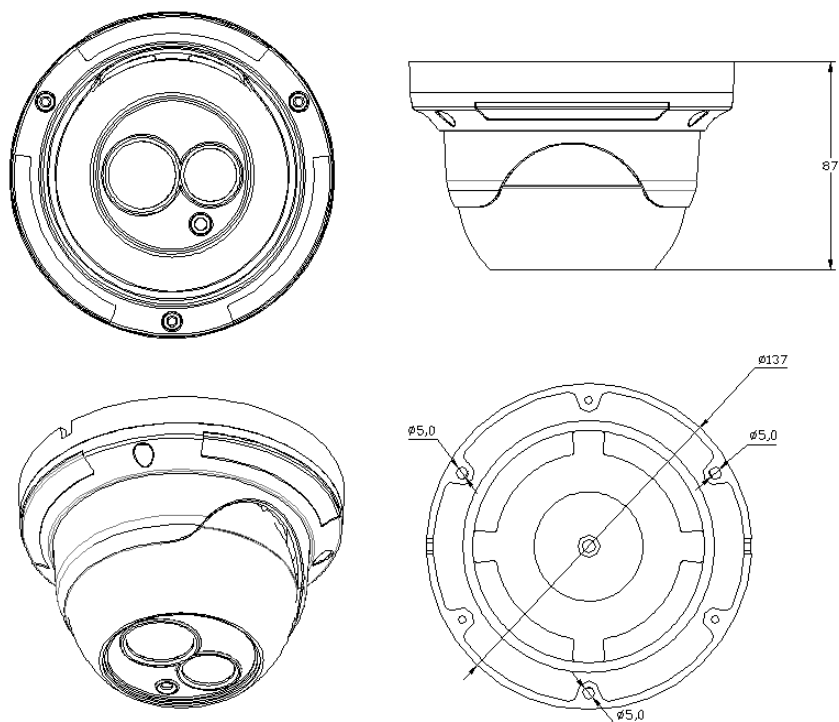

Size of IP IR Dome Camera (fixed lens)

IP IR Dome Camera (varifocal lens)

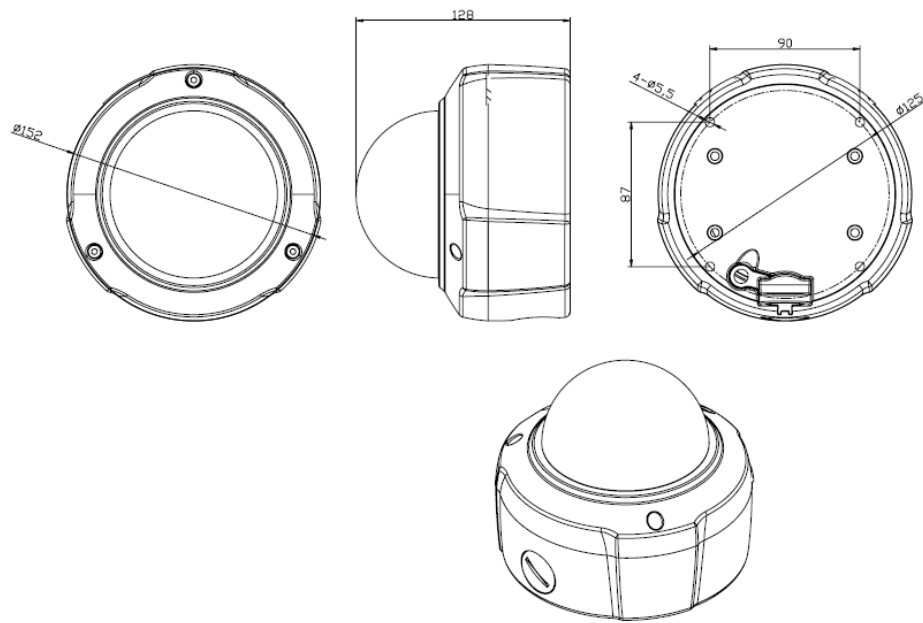

Size of IP IR Dome Camera (varifocal lens)

Chapter 3 Function Overview

3.1 Parameter of IP Camera

3.1.1 IP Box Camera

	S3E Series 1.3M	S3E Series 2M
core processor	ARM9 Architecture processor	
operating system	Embedded LINUX	
Video Compression	Support H.264 baseline,main profile, M-JPEG	
Audio Compression	G.711/G.726/ADPCM/AAC	
Image sensor	1/3 Inch CMOS	1/2.8 Inch CMOS
Image resolution	1280x960	1920x1080
Framerate	960P@30 F/S	1080P@30 F/S
Lens interface type	C/CS,DC	
WDR	100dB	
Image processing	Support NIR,3D noise reduction,de-interlace,image enhancement, edge enhancement, backlight compensation, gamma adjustment	
Electronic Shutter	Support auto/manual,1s~1/10000s	
Day/Night	ICR	
code rate	Video Compression code rate:32K ~ 16M bps,Audio Compression code rate:8k,32k,48K	
interface	Two-way audio,alarm input,TF card,analog video	
option	POE,analog video output,alarm output,RS485	
Network Port	10M/100M Ethernet interface	
Network protocol	TCP/UDP/HTTP/MULTICAST/UPnP/NTP/RTSP/Onvif	
IVA	support tripwire, Perimeter	
Ingress Protection	TVS 4000V lightning protection	
power	Not include,suggest DC12V \pm 10%	

3.1.2 IP IR Bullet Camera:

	S3E Series 1 M	S3E Series 1.3 M	S3E Series 2M
--	----------------	------------------	---------------

core processor	ARM9 Architecture processor		
operating system	Embedded LINUX		
Video Compression	Support H.264 baseline,main profile, M-JPEG		
Audio Compression	G.711/G.726/ADPCM/AAC		
Image sensor	1/4 Inch CMOS	1/3 Inch CMOS	1/2.8 Inch CMOS
Image resolution	1280x720	1280x960	1920x1080
Framerate	720P@30 F/S	960P@30 F/S	1080P@30 F/S
Lens interface type	fixed lens/varifocal lens for option		
WDR	100dB	100dB	100dB
Image processing	Support NIR,3D noise reduction,de-interlace,image enhancement, edge enhancement, backlight compensation, gamma adjustment		
Electronic Shutter	Support auto/manual,1s~1/10000s		
IR Distance	30-50m		
Day/Night	ICR		
code rate	Video Compression code rate:32K ~ 16M bps,Audio Compression code rate:8k,32k,48K		
interface	Two-way audio,alarm input,USB		
option	POE,analog video output,alarm output,RS485		
Network Port	10M/100M Ethernet interface		
Network protocol	TCP/UDP/HTTP/MULTICAST/UPnP/NTP/RTSP/Onvif		
IVA	support tripwire, Perimeter		
Ingress Protection	IP66, TVS 4000V lightning protection		
power	Not include,suggest DC12V \pm 10%		


3.1.3 IP IR Dome Camera:

	S3E Series 1 M	S3E Series 1.3 M	S3E Series 2 M
core processor	ARM9 Architecture processor		
operating system	Embedded LINUX		
Video Compression	Support H.264 baseline,main profile, M-JPEG		
Audio Compression	G.711/G.726/ADPCM/AAC		

Image sensor	1/4 Inch CMOS	1/3 Inch CMOS	1/2.8 Inch CMOS
Image resolution	1280x720	1280x960	1920x1080
Framerate	720P@30 F/S	960P@30 F/S	1080P@30 F/S
Lens interface type	fixed lens/varifocal lens for option		
WDR	100dB	100dB	100dB
Image processing	Support NIR,3D noise reduction,de-interlace,image enhancement, edge enhancement, backlight compensation, gamma adjustment		
Electronic Shutter	Support auto/manual,1s~1/10000s		
IR Distance	20-30m		
Day/Night	ICR		
code rate	Video Compression code rate:32K ~ 16M bps,Audio Compression code rate:8k,32k,48K		
interface	Two-way audio, alarm input, alarm output, camera recording for option		
option	POE,analog video output,alarm output,RS485		
Network Port	10M/100M Ethernet interface		
Network protocol	TCP/UDP/HTTP/MULTICAST/UPnP/NTP/RTSP/Onvif		
Ingress Protection	All aluminum, TVS 4000V lightning protection		
IVA	support tripwire, Perimeter		
power	Not include,suggest DC12V \pm 10%		

Please take the actual device as the standard

3.2 Hardware Interface

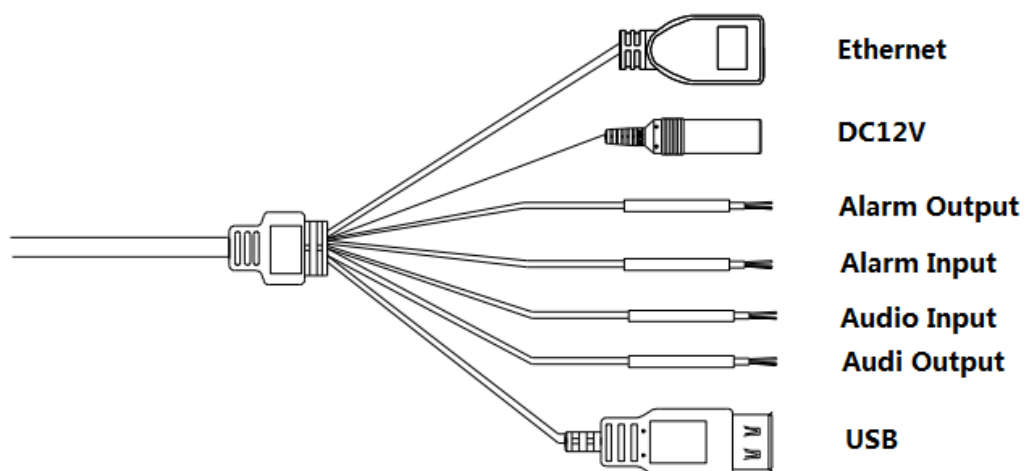

3.2.1 Interface Introduction

type	function	name	description
System interface	power	DC12V	DC12V±10%
	Ethernet interface	ETHERNET	10M/100M,RJ45
Audio/video interface	Video output	VIDEO OUT	BNC(Q9)interface, 75Ωp-p analog video signal output (only box camera)
	Audio input	IN	linear signal input,G is common port,input voltage ≤1V; (for option)
	Audio output	OUT	linear signal output,G is common port, should with active speaker (for option)
extend interface (option)	Alarm interface	ALARM	1-ch input&1-ch output, IN&G alarm input interface,G is common port OUT,COM are alarm output interface; COM is ground terminal (for option)
	Control interface	RS-485	A:485(+), B:485(-); (only box camera)
Recording interface	support	TF CARD	Micro SD max support 32G
		USB	Support 32G (for option)

Notes: Only Vari-focal Camera owns all these ports; Fixed len camera only has ports for Ethernet and power supply.

Charpter 4 Common function

4.1 Product upgrade

How to upgrade the version of product

step	description
1	Connect computer and network video to the same network, and modify the ip address to the same network segment.
2	Input device address and login
3	Select kernel file(*.bin) and start upgrade, program will restart automatically
4	Select web file(*.box) and start upgrade, program will restart automatically
5	Login web-advanced option and check if upgrade is successfully

Chapter 5 Installation Instruction

5.1 Installation Preparation

1. Preparation

All electrical work must comply with the latest electrical codes, fire regulations and relevant laws and regulations; According to the packing list check if all accessories are in the package and determine the location of the high speed dome camera and installation applications are consistent with the requirements; if not match, please contact your dealer. Please follow the work environment requires the use of the product. Depending on the circumstances actually required to prepare your own tools.

2. Necessary Tools:

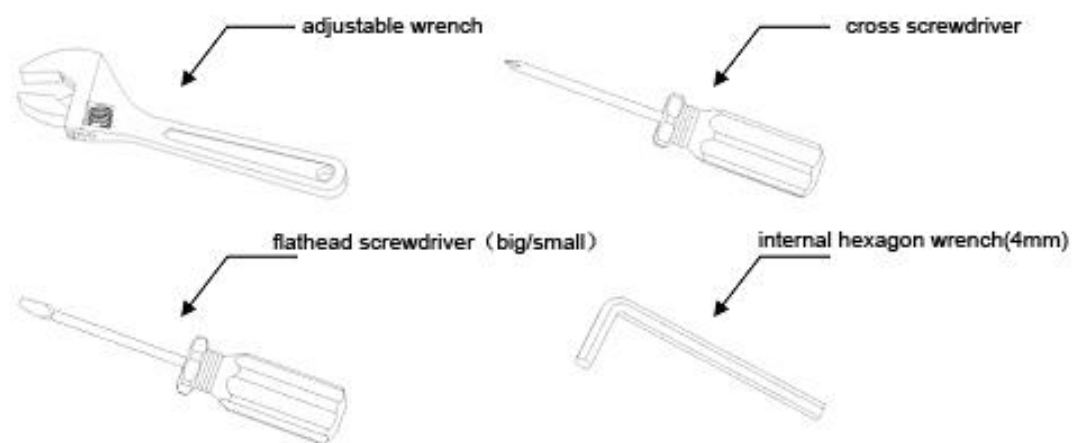


Fig 4.1.1Tools

3. Check the installation location space and intensity

Please make sure the location has sufficient space and intensity to install. The ceiling, wall or bracket must be able to bear 4 times the weight of the IP camera itself.

4. Please save all packaging material


Please well keep the original packing materials, in order to send back if any problem.

★ Note: Non-original packing material may result in accidental damage in transit.

5.2:Installation Instruction:

5.2.1 HD IP Box Camera:

Taking wall mount as example

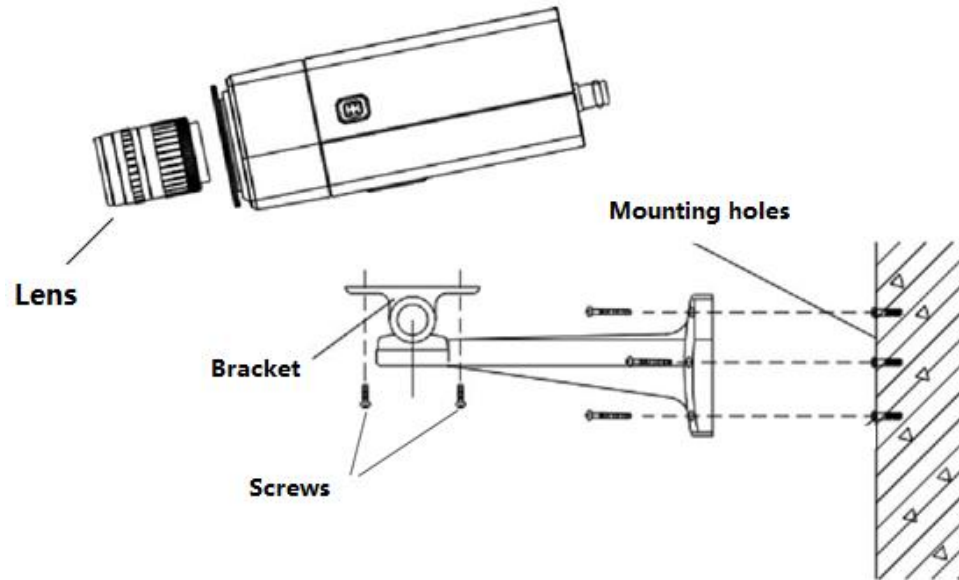


HD IP Box Camera Installation

Steps:

- 1, Mark the installation holes in the wall by ink pen
- 2, Drill holes in marked points.
- 3, Plug the expansion bolts into the holes.
- 4 Screw the bracket fastened to the wall.
- 5, Fix two nut screws aligned camera position and rotate tight. Adjust bracket gimbals to appropriate location.

5.2.2 HD IP IR Bullet Camera (Fixed&Varifocal):

Taking wall mount as example

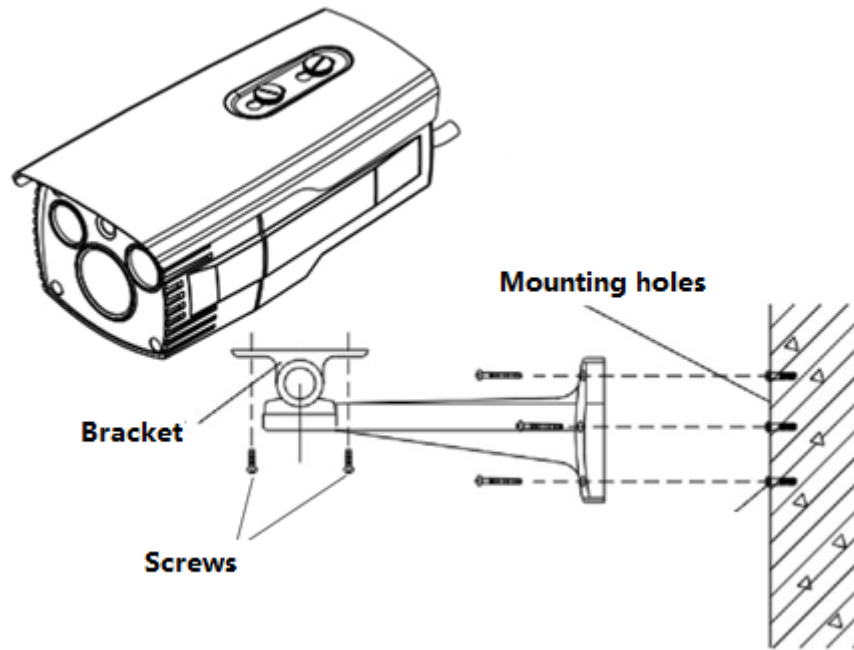


HD IP IR Bullet Camera Installation

Steps:

- 1, Mark the installation holes in the wall by ink pen
- 2, Drill holes in marked points.
- 3, Plug the expansion bolts into the holes.
- 4 Screw the bracket fastened to the wall.
- 5, Fix two nut screws aligned camera position and rotate tight. Adjust bracket gimbals to appropriate location.

5.2.3 HD IR Dome Camera (Fixed):

Taking ceiling mount as example

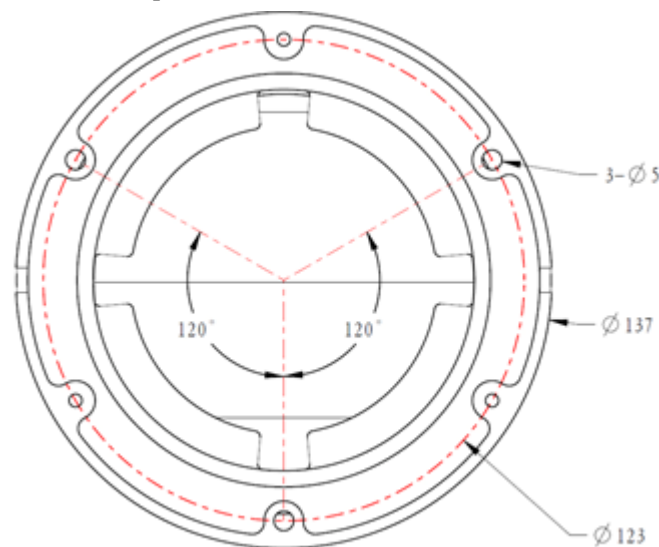


HD IP IR Dome Camera(Fixed) Installation

Steps:

- 1, Take out camera and unscrew the three screws on the housing, remove the bottom chassis
- 2, Mark the installation holes in the wall by ink pen
- 3, Drill holes in marked points.
- 4, Plug the expansion bolts into the holes.
- 5, Fix the three $\phi 5$ screws on dome camera and fasten on the wall. Assemble the components removed from the first step. Adjust the lens direction to the proper position and tighten the three screws.

5.2.4 HD IR Dome Camera (Varifocal):

Taking ceiling mount as example

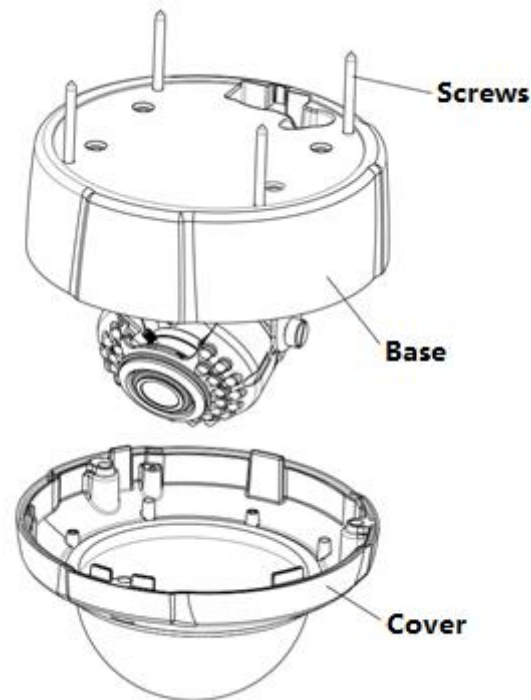

HD IP IR Dome Camera(Varifocal) Installation

Steps:

- 1, Paste positioning on the wall
- 2, Punch holes on marked points and plug in expansion bolts.
- 3, Loose the three screws and remove dome cover, fasten the dome base on ceiling.
- 4, Adjust camera lens to the proper angle, and tighten the screws
- 5, Aligned cover with mount position, adjust black hood position and tighten the screws.

Chapter 6 WEB Instruction

6.1 System Requirement

IP camera web settings support WindowsXP,Win7 and Win8 system, please make sure right installation and setup of following items:

- (1)Display resolution: 1400 * 900 or higher, color: High Color (32-bit).
- (2)Please make sure the Windows system install the necessary character style.


6.2 Built-in Web Instruction

When using the network video products for the first time, an ActiveX control is needed.

- (1)Login IP address and enter to ActiveX download interface
- (2)Download ActiveX and click **【Run】** to install;
- (3)Shot down the WEB before installation and click **【Next】** .



- (4)Input IP address of camera and allow to add plug-in after installation success.
- (5)When you success to load plug-in, it shows page as below. Then please enter ID, password.

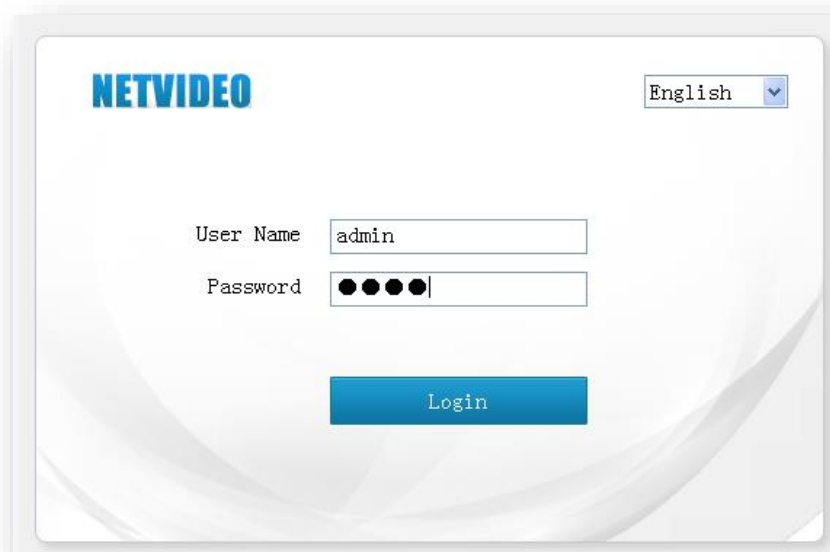


Note: Please ensure IE version above 6.0. And do not use any other browser except Firefox and Chrome.

6.3 Log in

- (1)Default user name is “Admin”
- (2)Default password “1111”
- (3)If you want to change port number, please enter right port number after IE shows port number after you success to log in.




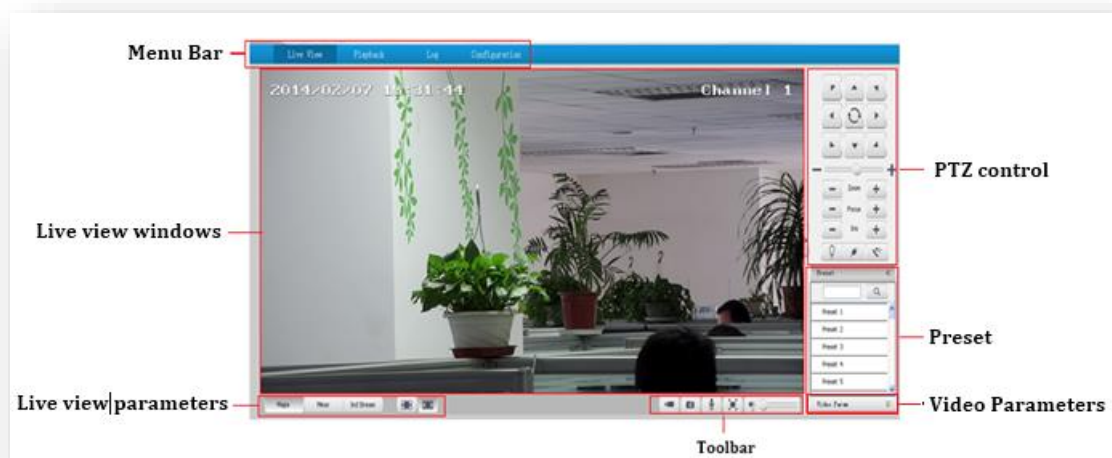






6.4 Preview

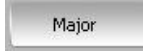

6.4.1 Preview page



Descriptions of live view parameters and toolbar

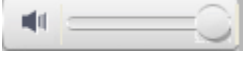
Icon	Description	Icon	Description
	Major stream		Manual recording on / off, and default storage path is D\NetVideoBrowser\
	Minor stream		Manually capture, and default storage path is D\NetVideoBrowser\
	Third stream		Intercom on/off
	Screen lock		Full screen
	Screen adapt to current resolution		Audio on, volume adjustment and mute

Note: When stream type is **【Pure Video】**, audio preview is invalid.

6.4.2 Video parameter

(1)<Default> to resume the default settings.

(2)According to network situation you can choose preview mode from <Low bandwidth>, <Low latency> to <High quality>, <High fluency>

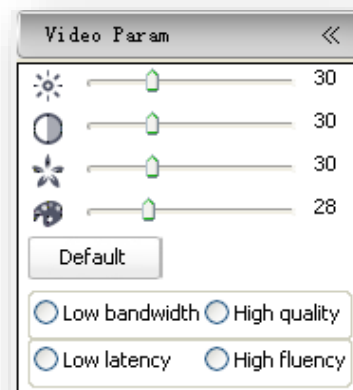

6.4.3 PTZ control

(1) Select rotation direction of speed dome,




enable auto scan.

(2)<**Zoom**>Zoom in /Zoom out

(3)<**Focus**> Manual Focus.


(4)<**Iris**>Manually adjust iris.


(5) set PTZ speed

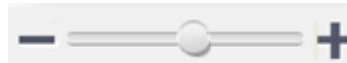

(6)  Wipper



(7)  Preserved for future functions

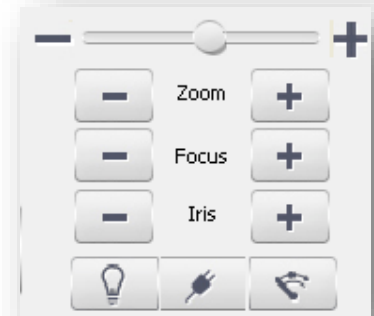


6.4.4 Preset position




Search the target preset number

<Set> Setup preset position

<Call> Call the preset position

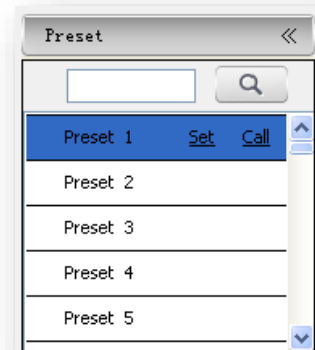


6.5 Playback

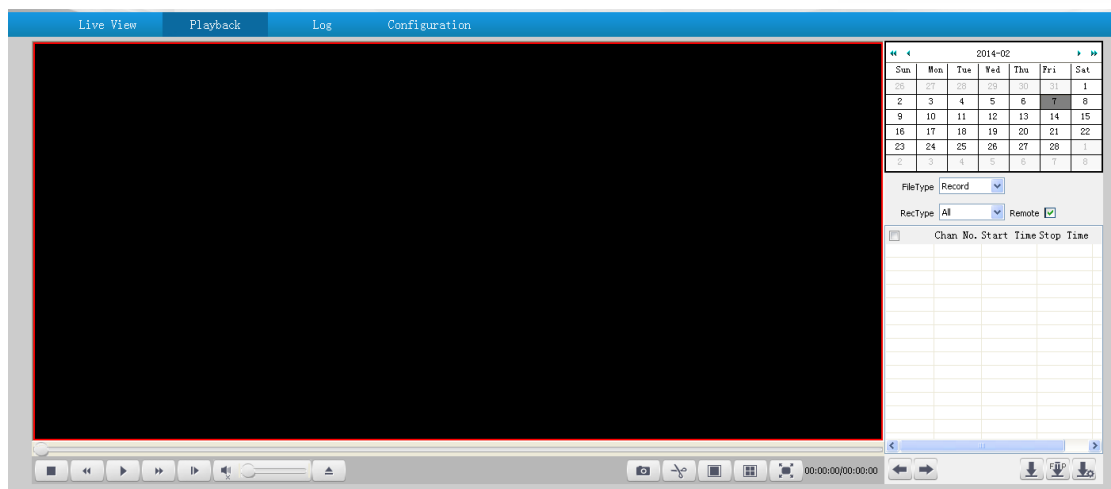

6.5.1 Search recording files

- (1) Select date in the calendar
- (2) <File Type> select <Record> or <Picture>
- (3) <Rec Type> Select targeted file type video/picture.

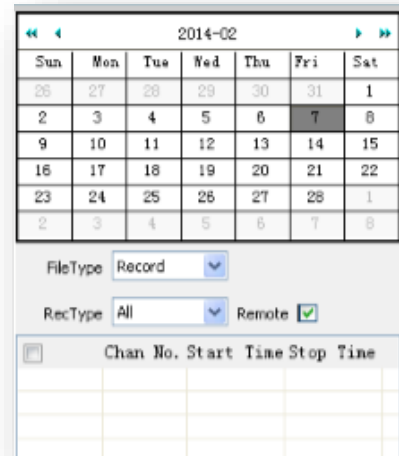


6.5.2 Descriptions of playback toolbar


con	Description	Icon	Description
	Stop recording		Clip video files, and default storage path is D\NetVideoBrowser\
	Speed down in 1/2X, 1/4X, 1/6X and 1/8X		Single screen
	Play		Playback in 4 screen at the same time
	Speed up in 2X, 4X, 6X and 8X		Full Screen
	Playback by frame		Download recording files
	Audio on, volume adjustment and mute		Download files into FTP server
	Capture, and default storage path is D\NetVideoBrowser\		Preview download status

6.6 Log

- (1) <Channel No> Select target channel
- (2) <Log type>
All/system/warning/alarm/operation/user/others
- (3) <Start time> Select start date and time.
- (4) <End time> Select end date and time.
- (5) <Query> Get a log list.
- (6) Check logs by <First page><Pre page><Next page><Last page> and <Jump to> target page.
- (7) <Export current page> to export logs, and default save path is D\NetVideoBrowser.
- (8) <Export all page> to export all the pages query, and default save path is D\NetVideoBrowser.

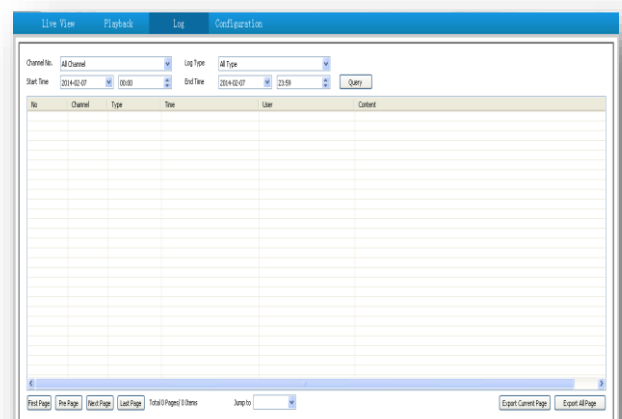

Chapter 7 Configuration

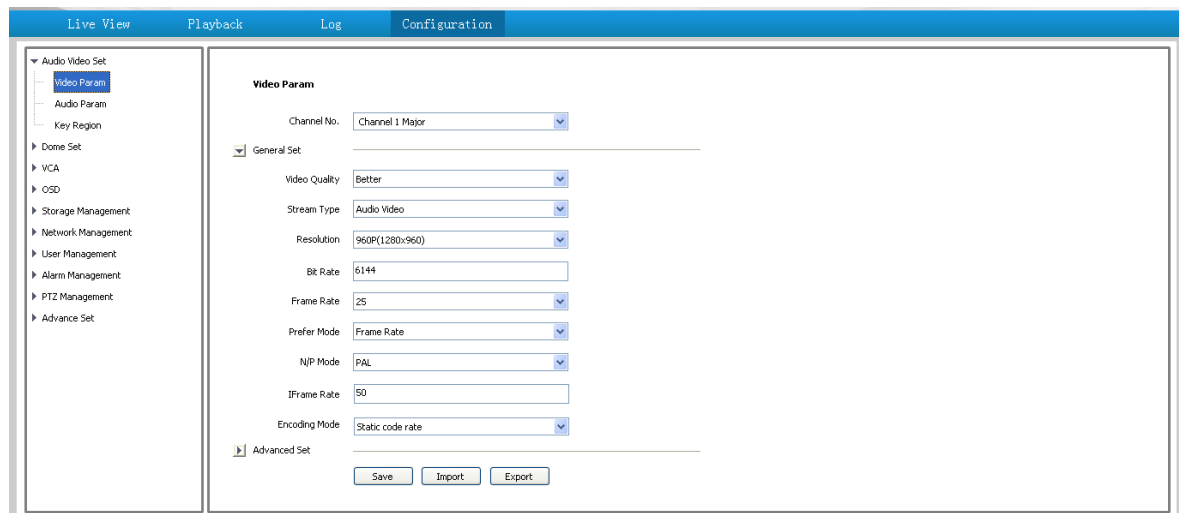

Attention: All settings will be enabled in 3 seconds after <save>.

7.1 Audio Video Set

7.1.1 Video Parameter

<Channel No.>Select the target channel

General Set

(1)<Stream Type><Audio Video>/<Pure Video>

(2)<Encoding Mode>

<Static code rate> Fix stream and bandwidth occupation.

<Dynamic code rate> Stream will be varied to the change of video, take up less bandwidth when there is no change on video.

(3)<Video Quality>only be activated when choose <Dynamic code rate> in <Encoding Mode>.


<Video

Quality><Best>,<Better>,<Good>,<Fair>,<Poor>

The better quality the more stream and bandwidth occupation.

(4)<Bit Rate> show stream rate for the video, unit is Kbps. When choose<Static code rate>, <Bit Rate>stand for actual rate of the stream. When choose<Dynamic code rate>,<Bit Rate>show the max stream rate, range from 32 ~ 8000Kbps.

(5)<Frame Rate> 1/5/10/15/25/30fps optional.

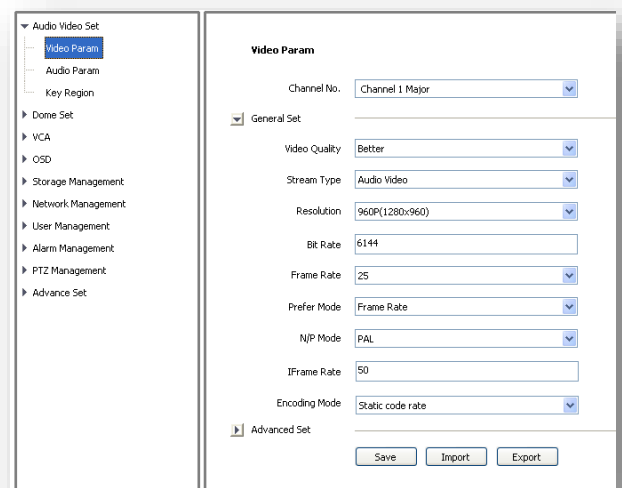

(6)<**I Frame Rate**> To set the interval time for each two I frame. (I frame is the key frame in the video stream)

(7)<**Prefer Mode**>

<**Frame Rate**> Fluency first

<**Quality**> Video quality first

(8)<**Resolution**> 4CIF/VGA/720P/960P/1080P.

(9)<**N/P Mode**> Select <**PAL**> or<**NTSC**>.

Advance Set

(1)<**Video Encoding**>

<**H.264**> and <**Motion JPEG**>

(2)<**Extended Code**>

Available when selected <**H.264**>, there are <**baseline**>, <**main profile**>, <**high profile**> for selection.

(3)<**Encrypt Type**> Add password for the channel.

<**Encrypt Password**> Enter password.

<**Password Confirm**> Confirm the password.
Click<**Save**>to enable.

Video Parameter-Export

<**Export**> backup the configuration file, save to
D:\NetVideoBrowser\VideoParam.dat as default.

Video Parameter-Import

<**Import**> import the backup file for parameter configuration.

The screenshot shows the 'Video Param' configuration window. On the left, a sidebar lists various settings categories: Audio Video Set, Video Param (selected), Audio Param, Key Region, Dome Set, VCA, OSD, Storage Management, Network Management, User Management, Alarm Management, PTZ Management, and Advance Set. The main panel is titled 'Video Param' and includes the following fields: 'Channel No.' set to 'Channel 1 Major', 'General Set' (collapsed), 'Advanced Set' (expanded), 'Extended Code' set to 'baseline', 'Video Encoding' set to 'H.264', 'Channel Type' set to 'Local Channel', 'Encrypt Type' set to 'Not encrypted', 'Encrypt Password' and 'Password Confirm' text boxes, and 'Electronic image stabilization' set to 'Disable'. At the bottom right, there are 'Save', 'Import', and 'Export' buttons.

Audio Parameter

(1)<**Channel No.**>select target audio channel.

(2)<**Audio Encoding**> select audio compression type.

(3)<**Audio Sample Rate**>

<**8k**>,<**32k**>,<**64k**> optional.

(4)<**Save**> save and enable the setting.

The screenshot shows the 'Audio Param' configuration window. The left sidebar is the same as the previous window, with 'Audio Param' now selected. The main panel is titled 'Audio Param' and includes the following fields: 'Channel No.' set to 'Channel 1', 'Audio Encoding' set to 'G.711A', and 'Audio Sample Rate' set to '8k'. A 'Save' button is located at the bottom center of the main panel.

Note: some models need reboot after saving the setting.

7.1.2 Key Region

<Key Region> To have better image quality for some regions on the video, there are 4 regions settable for each video.


(1) **<Draw Region>**

Use the mouse to draw the key region on the video.

(2) Click **<Save>** to enable.

(3) **<Delete Region>**

delete the drawn regions.

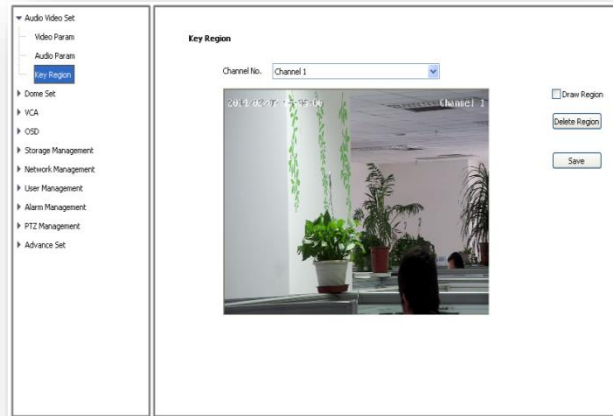

7.2 Camera Set

7.2.1 HD Parameter

Set video image parameter in this page.

HD Param-Model

The system provides 8 video templates for different application, all the video parameter can only be revised and saved in the template.

(1) **<Current>** Select current template.

(2) **<Name>** show the name of the current template, it can be revised.

HD Param-Parameter

(1) **<Sharpness>** Range from 0 to 255.

(2) **<Focus Mode>** **<Auto>** or **<Manual>**.

(3) **<Day/Night>** **<Auto>**, **<Night>**, **<Day>**.

(4) **<ICR-Sensitivity>** set sensitivity for IR filter,

<Low>, **<Middle>**, **<High>** optional. The higher value you set, the faster the IR filter switch.

(5) **<Digital De-noise>** revise the gamma value of image.

<Digital De-noise> has options of **<Close>**, **<Ordinary Mode>** and **<Expert Mode>**, default is **<Close>**. When selected **<Ordinary Mode>**, there will be a sliding block to set the de-noise level. When selected **<Expert Mode>**, there will show sliding block for **<Space-Domain Denoise>** and **<Time-Domain Denoise>**, drag to set **<Space-Domain Denoise>** and **<Time-Domain Denoise>**.

Remark Click button **<Save Schedule>** to save all the setting into the template.

(6) **<Wide Dynamic>** **<ON>**, **<OFF>**. When selected **<ON>**, it will enable setting for **<Level>**, there are High/Medium/Low for selection.


(7) **<White Balance ><Auto>**, **<Manual>** and **<ATW>**. When selected **<Manual>**, there will be 2 sliding blocks to set the white balance, R stand for red gain and B stand for blue gain.

(8) **<Exposure>** **<Auto>** and **<Manual>**

(9) **<Light Suppression>** **<ON>** and **<OFF>**, suppress the high light.

(10) **<Defog>** **<ON>** and **<OFF>**

HD Param-Restore Defaults

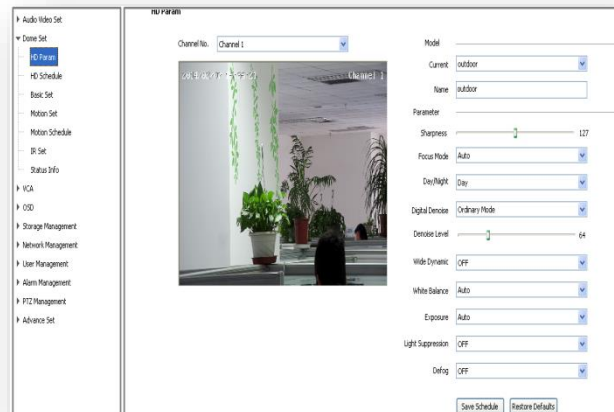

Click button **<Restore Default>** to recover the defaults setting for the target template.

Remark **<HD Param>** has Export and Import function, operation is the same as **<Video Param>**.

7.2.2 HD Schedule


To define different video template used for different time period.

- (1) It offers 8 different time periods, select the check box to enable it.
- (2) Select template for each time period.
- (3) Length of each time period is settable. Colors are different for different template.
- (4) Click **<Save>** to save and enable.



7.2.3 Color to black

<Color to black> switch from color to black&white.

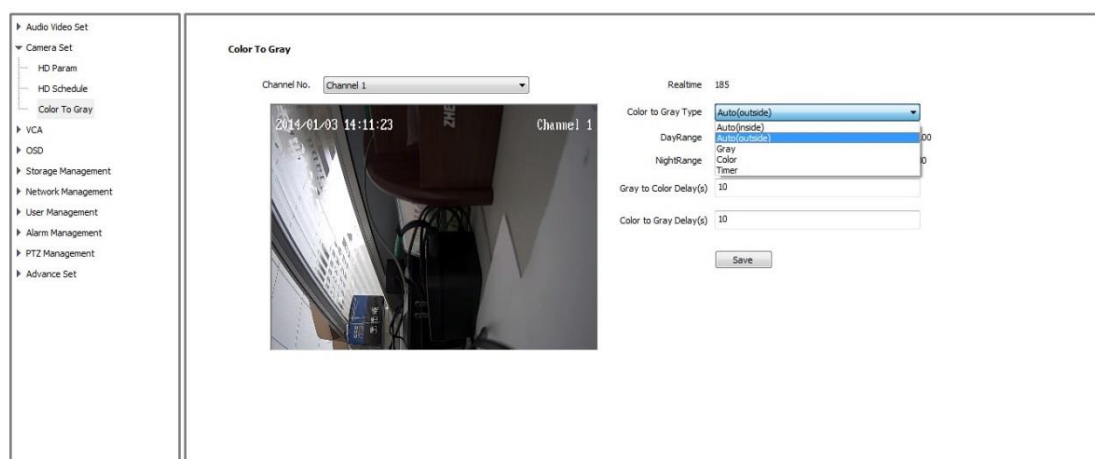

Color to black - Color

<Color> IP camera always display color image and never switch to black&white.

Color to black - Black&white

<Gray> IP camera always display black&white image and never switch to color.

Color to black - Timer:

<Timer> IP camera display color image at day time and black&white at night time.

- (1) Select **<Timer>** in the list of **<Color to gray type>**.
- (2) **<Day range>** Time for black&white switch to color, default is 6:00.
- (3) **<Night range>** Time for color switch to black&white, default is 18:00.
- (4) Click **<Save>**.

Note: Night range must be later than day range.

Color to black - Auto inside:

<Auto inside> IP camera will detect brightness of the video image automatically. If the brightness

value is more than day range, the video switch from black&white to color. If the brightness value is less than night range, the video switch from color to black&white.

(1)Select <Auto inside> in the list of <Color to gray type>.

(2)<Gray to color delay> unit is second, which means it delays for a certain seconds before video switch from black&white to color. The default value is 10 seconds.

(3)<Color to gray delay> unit is second, which means it delays for a certain seconds before video switch from color to black&white. The default value is 10 seconds.

(4)Click <Save>

Color to black - Auto outside:

IP camera detects brightness of environment by using camera sensor. If the brightness value is more than day range, the video switch from black&white to color. If the brightness value is less than night range, the video switch from color to black&white.

7.3 VCA


<VCA>, also called <IVA> / <IVS>, to setup the video intelligent analysis of speed dome camera.

<Enable> enable the VCA function.

Tripwire



Perimeter

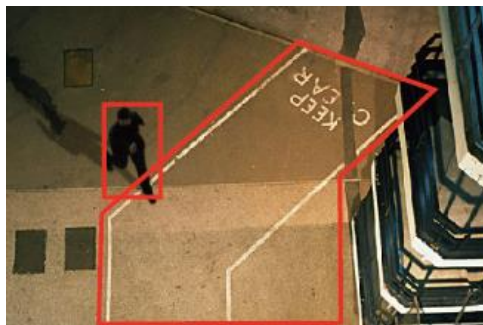

7.3.1 Event Parameters

The speed dome camera supports 2 rules of VCA<Tripwire> and <Perimeter>. <Tripwire> Draw a tripwire on the screen, when objects cross the tripwire, it would trigger alarm; <Perimeter> Draw an area on the screen, when objects enter it will trigger alarm.

(1)<Enable> enable VCA function on current channel.

Channel No. ☐ Enable

<Valid> activate the rules and start setting.

<Rule Name>Give a rules name(max to 16 characters).

Notes Max 2 rules available on the same video channel.

(2)<Event Set>

Choose the rules <Tripwire>/<Perimeter>.

<Detect Mode> For <perimeter> detection, include <Intrusion>/<Enter>/<Leave>.

<Intrusion> alarm when object come in/out.

<Enter> alarm when object come in.

Rule ID	<input type="text" value="1"/>	<input checked="" type="checkbox"/> Valid
Rule Name	<input type="text"/>	<input type="button" value="Rule Clear"/>
Event Set	<input type="text" value="Perimeter"/>	<input type="button" value="Line Clear"/>
Detect Mode	<input type="text" value="Intrusion"/>	
Alarm Color	<input type="text" value="Red"/>	
No Alarm Color	<input type="text" value="Green"/>	
<input checked="" type="checkbox"/> Show Alarm Count <input checked="" type="checkbox"/> Show Alarm Rule		
<input type="button" value="Save"/>		

(3)<**Show Alarm Count**>show the total alarm times.
<**Show Alarm Rule**>show the tripwire/perimeter on video.

<Line Clear>clear current lines drawn on video.

(4)<**Save**>Save and enable the VCA setting.

Notes VCA will be activated in the whole week as default. For specific setting on alarm schedule, please go to <Alarm Set>.

Rule ID	<input type="text" value="1"/>	<input type="checkbox"/> Valid
Rule Name	<input type="text"/>	<input type="button" value="Rule Clear"/>
Event Set	<input type="text" value="Tripwire"/>	<input type="button" value="Line Clear"/>
Alarm Color	<input type="text" value="Red"/>	
No Alarm Color	<input type="text" value="Green"/>	
<input type="checkbox"/> Show Alarm Count		
<input type="checkbox"/> Show Alarm Rule		
<input type="checkbox"/> Two-way Alarm		
<input type="button" value="Save"/>		

Setup VCA activation schedule.

<VCA Enable> Indicate the VCA status of the current channel.

<Enable> Enable the setting of **<Schedule>** to setup the day and time of the VCA activation.

Channel No.	<input type="text" value="Channel 1"/>	<input type="checkbox"/> VCA Enable
Rule ID	<input type="text" value="1"/>	
Rule Name	<input type="text"/>	
Event	<input type="text" value="Tripwire"/>	<input checked="" type="checkbox"/> Enable

Schedule Thursday

<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00

Copy To ☐ All

☐ Sun ☐ Mon ☐ Tue ☐ Wed ☒ Thu ☐ Fri ☐ Sat

Apply

<Apply> enable the setting.

<Link Out> alarm output.

<Link Rec> activate recording.

<Link Snap> activate snapshot.

<Save> Save to enable setting.


[illegible]

7.3.3 Alarm Information

Check alarm info.

<Reset> Clear alarm numbers of the VCA rule.

<Clear> Delete all the alarm information in list.

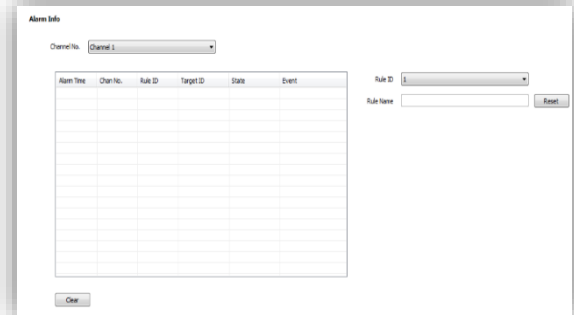

The 'Alarm Info' window displays a table for alarm information. At the top, there is a 'Channel No.' dropdown menu set to 'Channel 1'. To the right, there is a 'Rule ID' dropdown menu set to '1' and a 'Rule Name' text field. Below these is a 'Reset' button. The main area is a table with columns: Alarm Time, Chan No., Rule ID, Target ID, State, and Event. The table is currently empty. At the bottom left, there is a 'Clear' button.

7.4 OSD

7.4.1 OSD

Channel Name

(1) **<Channel Name>** Input channel name, then it will show on screen.

(2) **<Customize Position>** drag **<Channel Name>** to the target position on screen.

(3) **<Color>** Choose your favorite color.



Date

(1) **<Date>** Display date on screen.

(2) **<Show Week>** Display week on screen.

(3) **<Customize Position>** drag **<Date>** to the target position on screen.

(4) **<Color>** Choose your favorite color.

Additional Text

(1) **<Additional Text>** 5 areas available to put additional text on the screen.


(2) **<Customize Position>** drag **<Date>** to the target position on screen.

(3) **<Color>** Choose your favorite color.

OSD Size

<Adjust-Self> Edit OSD size.

<Save> Save all settings.

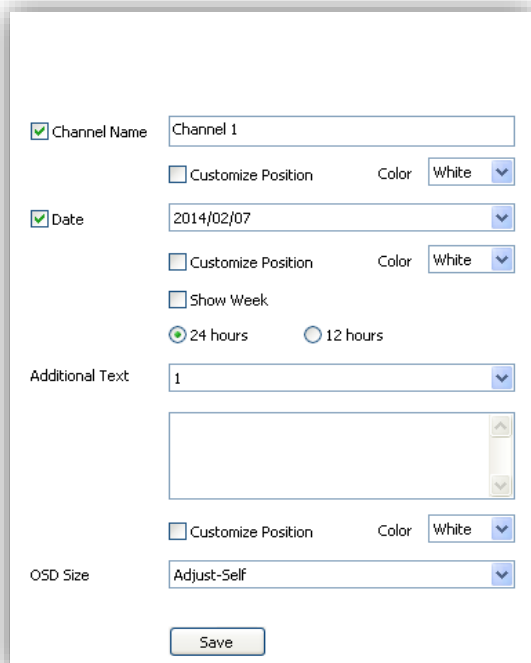

The 'OSD Settings' window contains several configuration options. It starts with a 'Channel Name' dropdown set to 'Channel 1', followed by a 'Customize Position' checkbox and a 'Color' dropdown set to 'White'. Below this is a 'Date' dropdown set to '2014/02/07', also with a 'Customize Position' checkbox and a 'Color' dropdown set to 'White'. There is a 'Show Week' checkbox and two radio buttons for '24 hours' (selected) and '12 hours'. An 'Additional Text' dropdown is set to '1', followed by a large text area for input. Below the text area is another 'Customize Position' checkbox and a 'Color' dropdown set to 'White'. At the bottom, there is an 'OSD Size' dropdown set to 'Adjust-Self' and a 'Save' button.

7.4.2 LOGO

Add LOGO picture on screen.

Notes logo picture format must be .bmp, and must be follow the size.

<LOGO File>,**<Browse>** to select logo picture, and**<Upload>**

Notice Device will restart after upload

(1)After restart, select**<Enable>** to show the logo on screen.

(2)Enable**<Customize coordinate Pos>** to put the logo on the target position on screen where you click.

LOGO File(*.bmp)

☐ Enable

☐ Customize coordinate(click video window)Pos

Requirements on the image format:
1.The bitmap depth must be 24.
2.The size shall be less than 200*200, and the height and width shall be multiple of 4.

7.4.3 Video Cover

Add up to 4 cover areas on the screen.

(1)**<Channel No.>** Choose target channel.

(2)**<Draw Region>** Check to enable.

(3)Draw cover area on screen

(4)**<Clean Area>** Delete all cover areas.

Video Cover

Channel No.

Feb 07 2014 15:48:36 Channel 1

☐ Draw Region

7.5 Storage Management

7.5.1 Record Policy

Setup recording schedule.

(1)**<Channel No.>** Choose target channel.

(2)**<Record Status>** Display current record status.

(3)Select recording type(multiple-choice)

<Manual Rec> Check to start recording.

<Alarm Rec> Recording will be activated by alarm.

<Task Rec> Timing recording, 4 time periods settable for one day.

(4)**<Offline Video>** When it is ON, the device will follow the schedule of **<Task Rec>** when offline.

(5)**<Save>** Save.

Record Policy

Channel No.

Record Status

☐ Manual Rec

☒ Alarm Rec

☐ Task Rec

Schedule

☐ 00:00 ~ 00:00

☐ 00:00 ~ 00:00

☐ 00:00 ~ 00:00

☐ 00:00 ~ 00:00

Copy To ☐ All

☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☒ Fri ☐ Sat

Offline Video Prompt video recording with Internet disconnected, as

7.5.2 Pre-recorded Alarm

<Pre-recorded Alarm> record before alarm, or continue to record after alarm.


(1)<Channel No.> Target channel.

(2)<Pre-recorded Alarm> Check to enable.

(3)<Pre-record Time> Record before alarm.

(4)<Record Delay> Continues to record after alarm.

(5)<Save> Save.

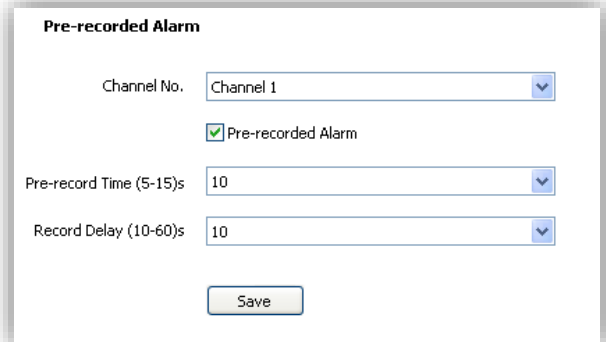

The 'Pre-recorded Alarm' window contains the following fields: 'Channel No.' with a dropdown menu showing 'Channel 1'; a checked checkbox for 'Pre-recorded Alarm'; 'Pre-record Time (5-15)s' with a dropdown menu showing '10'; 'Record Delay (10-60)s' with a dropdown menu showing '10'; and a 'Save' button at the bottom.

7.5.3 Storage Set

<Pack by time> Pack the record files by time.

<Free Disk> Pack the record files by size.

<Strategy> Select how to handle the record files when the disk is full.


<Stop Rec> Stop record new files.

<Cycle Del> Delete the earliest record files.

<Cycle Del (Except Alarm)>

Delete the earliest record files except event record files.

<Save>

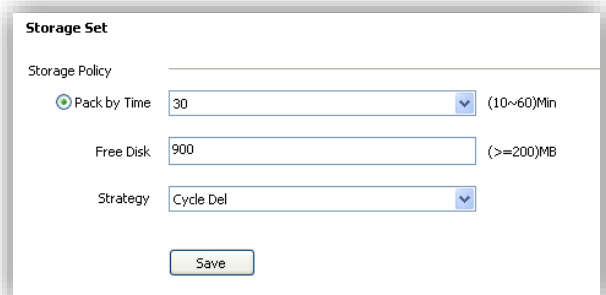

The 'Storage Set' window contains the following fields: 'Storage Policy' with a radio button selected for 'Pack by Time' and a dropdown menu showing '30' (with '(10~60)Min' to the right); 'Free Disk' with a text input field showing '900' (with '(>=200)MB' to the right); 'Strategy' with a dropdown menu showing 'Cycle Del'; and a 'Save' button at the bottom.

7.5.4 Snapshot Set

(1) <Channel No.> Select target channel.


(2)<Timing capture> Enable timing capture

(3)<Interval(s)> Set how much interval times between two snapshots.

(4)<Link FTP>snapshot and upload to FTP server.

(5)<Link Email>snapshot and send to target email.

(4)<Save>

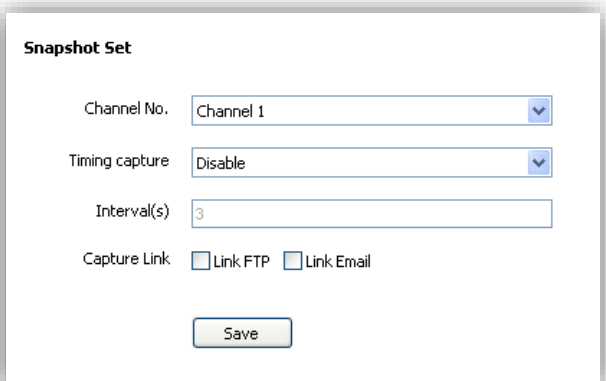

The 'Snapshot Set' window contains the following fields: 'Channel No.' with a dropdown menu showing 'Channel 1'; 'Timing capture' with a dropdown menu showing 'Disable'; 'Interval(s)' with a text input field showing '3'; 'Capture Link' with two checkboxes, 'Link FTP' and 'Link Email', both of which are unchecked; and a 'Save' button at the bottom.

7.5.5 Disk Information

<Initialize Disk> format the disk

7.5.6 Network Storage


(1)<Device No.> Select disk.

(2)<Status> Show current disk status information

(3)<Usage> Shows purpose of disk.

(4)<IP Address> Setup IP address of <Network Storage>.

(5)<Mapping Path> Setup disk path of mapping.

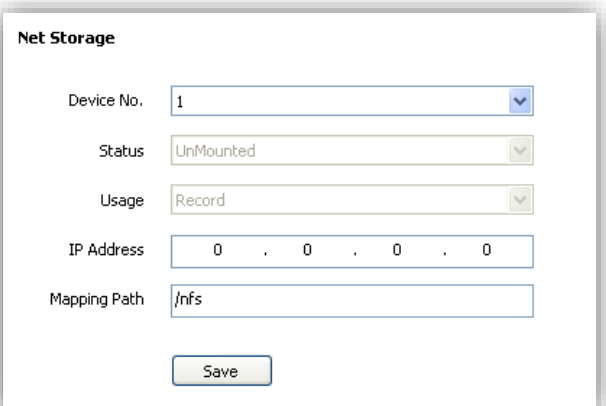

The 'Net Storage' window contains the following fields: 'Device No.' with a dropdown menu showing '1'; 'Status' with a dropdown menu showing 'UnMounted'; 'Usage' with a dropdown menu showing 'Record'; 'IP Address' with a text input field showing '0 . 0 . 0 . 0'; 'Mapping Path' with a text input field showing '/nfs'; and a 'Save' button at the bottom.

(6)<Total Size(M)> Shows used and total capacity of the disk.

(7)<Save>

7.6 Network Management

7.6.1 Cable Network

<DHCP> check to enable DHCP server will automatically allocate IP address for devices.

<IPv6> Display IPV6 address and subnet mask.

<MTU> Maximum Transmission Unit, range from 500~1500, default value is 1500.

<Ethernet Rate> Select mode and rate of Ethernet card, default mode is <Automatic Detection>, speed unit is MB.

Notes: Devices will restart after change <Ethernet Rate>.

7.6.2 Registration Center

Keep same settings as what you register in DDNS website (www.myvideo.com).

Total Size(M)

Free Space(0.00G) Total Size(0.00G)

Cable Network

☐ DHCP

IPv4 Address

IPv4 Subnet Mask

IPv6 Address

IPv6 Subnet Mask

Gateway

DNS

MTU

Ethernet Rate(M)

Audio Video Set
Dome Set
VCA
OSD
Storage Management
Network Management
Cable Network
Registration Center
Network Service
IP Filter
User Management
Alarm Management
PTZ Management
Advance Set

Registration Center

Server Name

IP1

Port1

IP2

Port2

User Name

Password

7.6.3 Network Service

DDNS

Keep same settings as what you register in DDNS website(suggested: www.myvideo.com).

The screenshot shows the 'Network Service' configuration page with the 'DDNS' tab selected. On the left, a navigation menu lists various settings, with 'Network Service' highlighted. The main area contains fields for 'Server Domain' (nvs.3322.org), 'DDNS Domain' (www.3322.org), 'Port' (80), 'User Name' (nvs), and 'Password' (masked with dots). A 'Password Confirm' field is also present. A 'Save' button is at the bottom. Below the main form, there are links for 'FTP', 'PPPoE', 'NTP', and 'Other'.

FTP

Make sure to insert the memory card.

The screenshot shows the 'Network Service' configuration page with the 'FTP' tab selected. The 'Usage' is set to 'Download'. Fields include 'Server URL', 'Port' (21), 'Path', 'User Name', and 'Password'. A 'Save' button is at the bottom. Links for 'PPPoE', 'NTP', and 'Other' are visible at the bottom of the page.

PPPoE

Check to enable PPPoE function, enter User name and confirm password.

The screenshot shows the 'Network Service' configuration page with the 'PPPoE' tab selected. The 'Enable' checkbox is checked. Fields for 'User Name' (12345678) and 'Password' (masked with dots) are present, along with a 'Password Confirm' field. A 'Save' button is at the bottom. Links for 'NTP' and 'Other' are visible at the bottom of the page.


NTP

<NTP Server> enter server address.
<Port> enter NTP server port.
<Interval> update interval.

The screenshot shows the 'Network Service' configuration page with the 'NTP' tab selected. Fields include 'NTP Server' (0), 'Port' (123), and 'Interval(h)' (0). A 'Save' button is at the bottom. A link for 'Other' is visible at the bottom of the page.

Others

Set Http and Https port, Enable UPnP and SNMP functions.

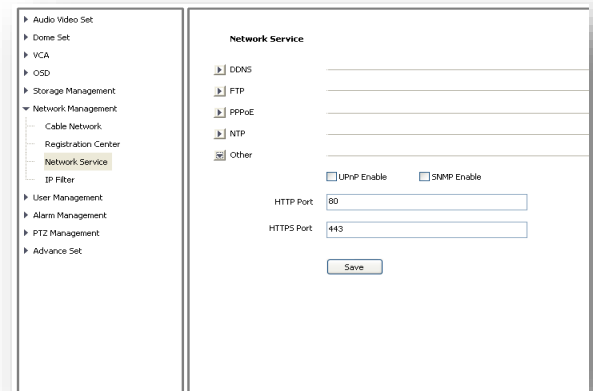

7.6.4 IP Filter

Blacklist

User want to block some IP address, select<Block the Following IPs>, input the block IP address and<Add>,<Save>.Max to add 16 blacklist IP address.

Caution: Please don't add your own IP address in blacklist, otherwise you will not be able to login.

Whitelist


User want to allow only some IP address, select <Allow the Following IP>, input trusted IP address, <Add> and <Save>. Max to 16 whitelist IP address.

Caution: Once enable the whitelist function, please make sure to add your own IP address in whitelist, otherwise you will not be able to login the device.

Cancel blacklist or whitelist

Anytime click<Allow All> and <Save> to cancel all the blacklist and whitelist.

Note: Please restart device after setup blacklist or whitelist.

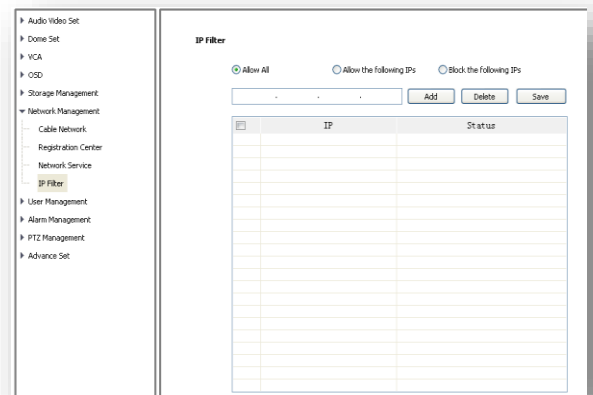

7.7 User management

7.7.1 Add User

<User name> add user, only English letter and figure are available.

<Password> only English letter and figure are available.


<Authority>:

Browse: Can only watch the videos.

browse+ control: Watch video and control PTZ.

browse+ control+ set: Allow all operation except user management.

Administrator: All operations available.

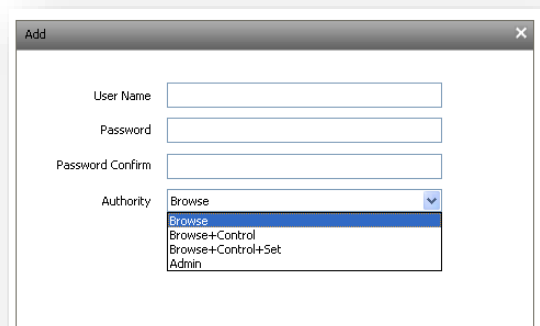


7.7.2 Modify password

Select the user you want to modify in the user list, click <Modify Pwd>, input the old password, new password, password confirmation, then click <Modify>.

7.7.3 Delete User


Select targeted user in user list and click **【Delete】** to delete.

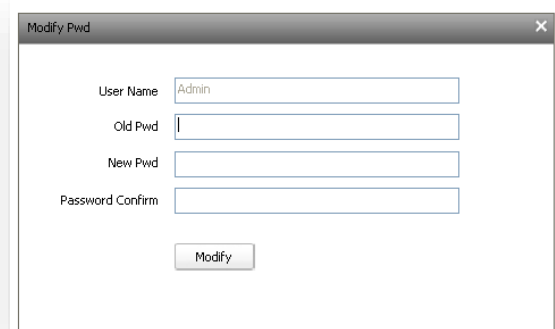

7.8 Alarm Management


7.8.1 Alarm Input

IP Camera alarm input only has port1, alarm mode include closed circuit alarm and open circuit alarm. <ON>is closed circuit alarm. <OFF>is open circuit alarm. <Link Out>/<Link PTZ> activate alarm device or PTZ.

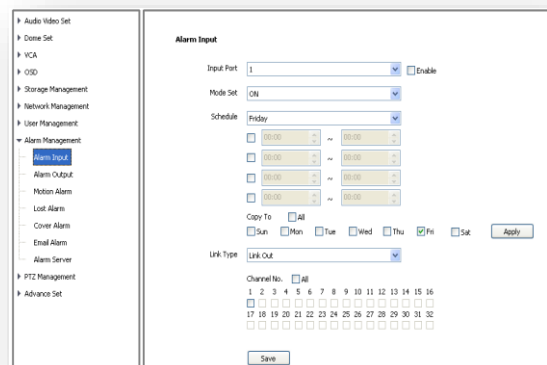


7.8.2 Alarm Output

Alarm output only has port 1. <ON>is closed circuit alarm. <OFF>is open circuit alarm.

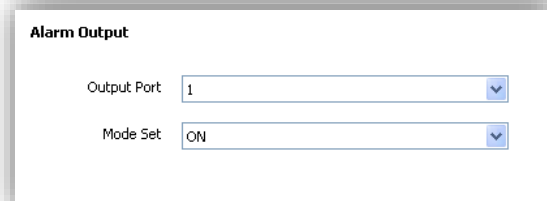

7.8.3 Motion Alarm

- (1)<Set Motion Detection Area> Check to draw area on screen.
- (2)<Clean Area> Clean drawn area.
- (3)<ICR-Sensitivity> set detection sensitivity, range from 0-100, 100 means the highest sensitivity.
- (4)<Schedule> setup alarm arm schedule.
- (5)<Link Out> set alarm activation.

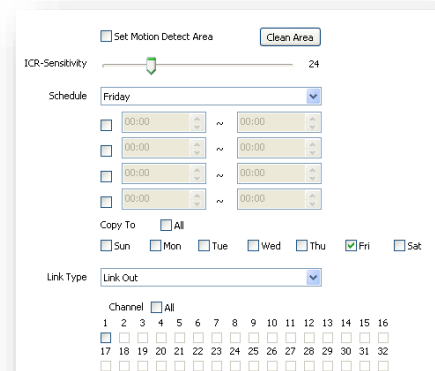

7.8.4 Lost alarm

Alarm when video lost.

- (1) Check to enable lost alarm for target channel.
- (2) <Schedule> Setup alarm arm schedule.
- (3) <Link Type> Link PTZ/no link.
- (4) <Link Channel>
- (5) <Link PTZ Type> no link/preset position/pattern/auto Tour.

Lost Alarm

Channel No. ☒ Enable

Schedule

<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00

Copy To ☐ All ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☒ Fri ☐ Sat

Link Type

Link Channel

Link PTZ Type

Number

7.8.5 Cover Alarm

Alarm when camera lens is covered.

Cover Alarm

Channel No. ☐ Enable

ICR-Sensitivity

Schedule

<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00
<input type="checkbox"/>	00:00	~	00:00

Copy To ☐ All ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☒ Fri ☐ Sat

Link Type

Link Channel

Link PTZ Type

Number

7.8.6 Email Alarm

- (1) <Email Alarm Enable> check to enable sending email after alarm.
- (2) Set sending email information:
<SMTP server> <SMTP port> <Email Account> <Email Password>
(3) <Email Mode>
- (4) Input receive email address, support up to 4 email address.

Email Alarm

☐ Email Alarm Enable

SMTP Server

SMTP Port

Email Account

Email Password

Email Mode

Email Subject

Main Email Address

Email Address 1

Email Address 2

Email Address 3

7.8.7 Alarm Server

Set alarm server's IP address and port number,

Alarm Server

Alarm Server

Port

7.9 PTZ Management and Control


PTZ management mode: <Serial Port Set>and<Protocol Set>

<Serial Port Set>:

<Port Name>,<Baud Rate>,<Parity>,<Byte Size>,<Work Mode>

<Protocol Set>:

<Channel>,<Port Name>,<Protocol>,<Address>

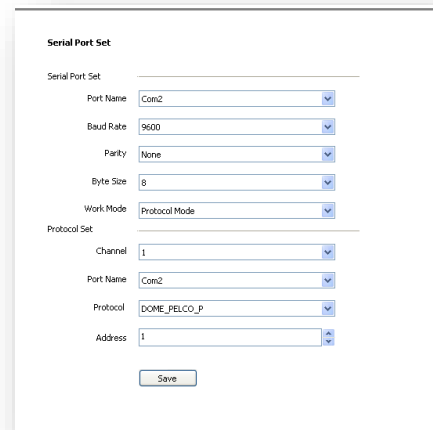

The 'Serial Port Set' window contains two sections. The 'Serial Port Set' section has dropdowns for Port Name (Com2), Baud Rate (9600), Parity (None), Byte Size (8), and Work Mode (Protocol Mode). The 'Protocol Set' section has dropdowns for Channel (1), Port Name (Com2), Protocol (DOME_RELCO_P), and Address (1). A 'Save' button is at the bottom.

7.10 Advance


7.10.1 Local set

(1)<Showing frame-rate and bit-stream information> check to display frame rate and bit stream on video.


(2)Set the save path of record files, snapshot, clips and download files.

(3)<Protocol Type> TCP, UDP or multicast.

(4)IP camera has only one channel, user can choose major stream or minor stream.

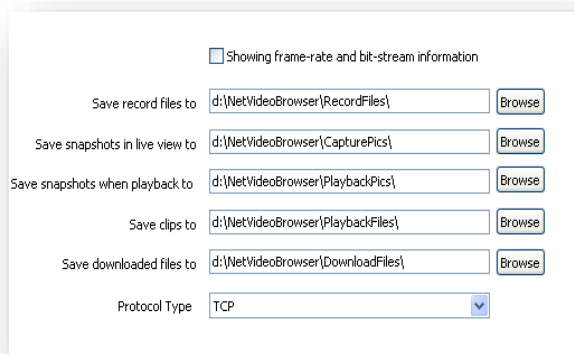

The 'Local Set' window includes a checkbox for 'Showing frame-rate and bit-stream information'. Below are five 'Browse' buttons for saving record files, snapshots in live view, snapshots when playback, clips, and downloaded files, all pointing to paths under 'd:\NetVideoBrowser\'. At the bottom, 'Protocol Type' is set to 'TCP'.

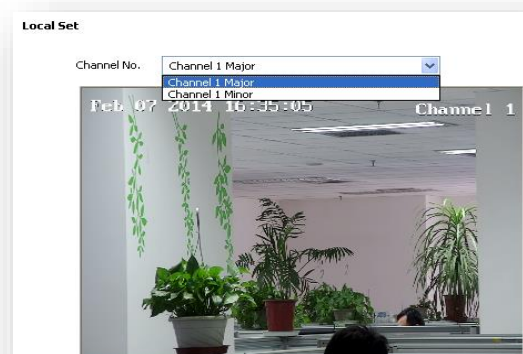


7.10.2 System setting

(1)<System Time> Set time zone and time synchronous.

(2)<SystemInformation>Display information of CPU,Memory and FLASH.

(3)< Version Information >Display <SDK Version>,<Kernel Version>,<Web Version> and<Factory ID>.

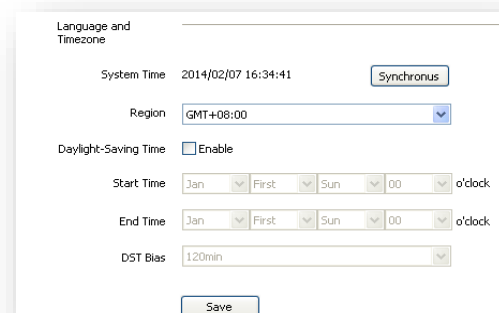

The 'Language and Timezone' window shows 'System Time' as 2014/02/07 16:34:41 with a 'Synchronous' button. The 'Region' is set to 'GMT+08:00'. There is an 'Enable' checkbox for 'Daylight-Saving Time'. Below are fields for 'Start Time' and 'End Time' (both set to Jan First Sun 00 o'clock) and a 'DST Bias' of 120min. A 'Save' button is at the bottom.

7.10.3 System Maintenance

System maintenance includes <Equipment Control>and <Version Upgrade>.


(1)<Equipment Control>

<Restore> Reset to factory default.

<Reboot> Reboot the device.

(2)<Version Upgrade> upgrade new firmware.

(firmware format: .box/.bin) Upgrade process normally needs a few minutes until indication for completion.

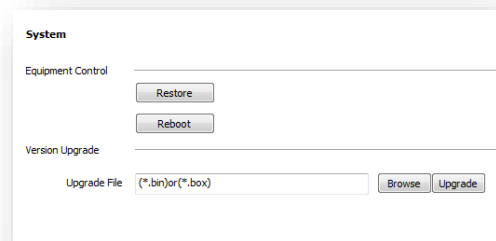


The screenshot shows a web interface titled "System". Under the "Equipment Control" section, there are two buttons: "Restore" and "Reboot". Under the "Version Upgrade" section, there is a text input field for "Upgrade File" with a file type hint "(*.bin)or(*.box)", a "Browse" button, and an "Upgrade" button.

Caution: Please strictly follow the instruction by technical specialist for firmware upgrade.


7.10.4 Access Platform

PU set user can set the IP address and port number of<Register Server>,<Heartbeat Server>,<Alarm Server>and VSP's port number and VAP's port number. <Channel No. >support<Auto Filling Setting>function.

PU set support 【SIP】 protocol setting.

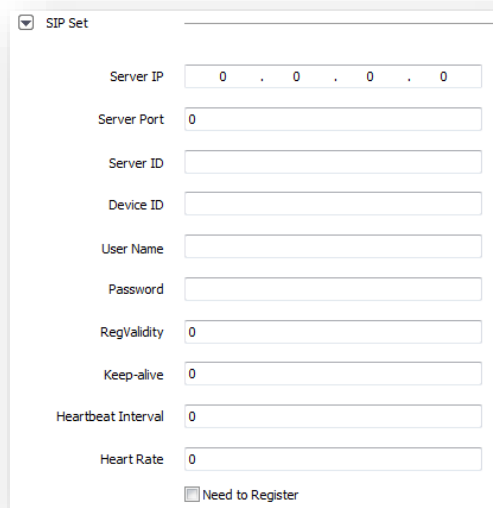


The screenshot shows a web interface titled "SIP Set". It contains several input fields: "Server IP" (0 . 0 . 0 . 0), "Server Port" (0), "Server ID", "Device ID", "User Name", "Password", "RegValidity" (0), "Keep-alive" (0), "Heartbeat Interval" (0), and "Heart Rate" (0). There is also a checkbox labeled "Need to Register".

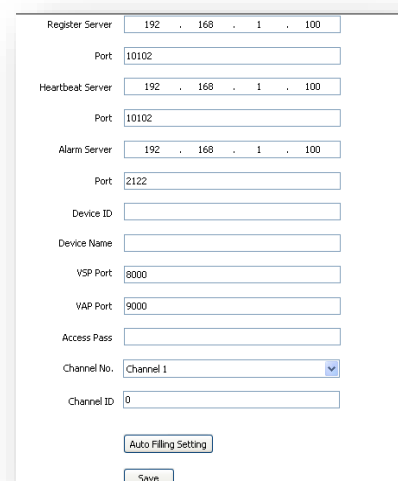

The screenshot shows a web interface titled "Access Platform". It contains several input fields: "Register Server" (192 . 168 . 1 . 100), "Port" (10102), "Heartbeat Server" (192 . 168 . 1 . 100), "Port" (10102), "Alarm Server" (192 . 168 . 1 . 100), "Port" (2122), "Device ID", "Device Name", "VSP Port" (8000), "VAP Port" (9000), "Access Pass", "Channel No." (Channel 1), and "Channel ID" (0). There are also buttons for "Auto Filling Setting" and "Save".

IP cameras support onvif V10, user can choose <Enable>.

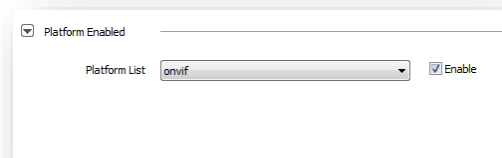

The screenshot shows a web interface titled "Platform Enabled". It contains a dropdown menu for "Platform List" with "onvif" selected, and a checkbox labeled "Enable" which is checked.

Chapter 8 Simple Fault Maintenance

8.1 System Failure

8.1.1 Not able to recognise U-disk or SD card

Possible Reason:

- Disk partition information has problem, which cause no recognition, need formatting for the disk;
- Loose connection, re-plug U-disk/SD card and reboot the camera;
- For portable disk, it may fail when there is not enough power, need to check the power supply method to make sure enough power supply or change to use independent power supply disk.

8.1.2 No recognition on Wireless Network Card

Possible Reason:

- Static turn the network card into protection state, need to reboot the camera;
- Unstable condition on the network card, need to replace for new network card.

8.1.3 Straight connect is ok, but no connection on Switch

Possible Reason:

- NIC crystals prohibit or damage, need replace for new one.

8.2 Network Failure

8.2.1 Camera was power on but cannot be found on IP searcher

Troubleshooting steps:


- Check status of computer/host NIC, NIC driver, network wire, and network connection, make sure all are correct;
- Directly connect the camera to computer/host server to check it works or not, reset the computer/host server and try again;
- Try another camera or another computer/host server;
- Please contact us.

8.2.2 No image on IE

<IE setting>


It needs to download and install the ActiveX plug-in for IE browsing at first connection, and do the correct setting on IE as following:

- Open IE, click “Tools” — “Internet Options” — “Security” — “Internet” — “Custom Level”, enable all the items on ActiveX control and plug-in;

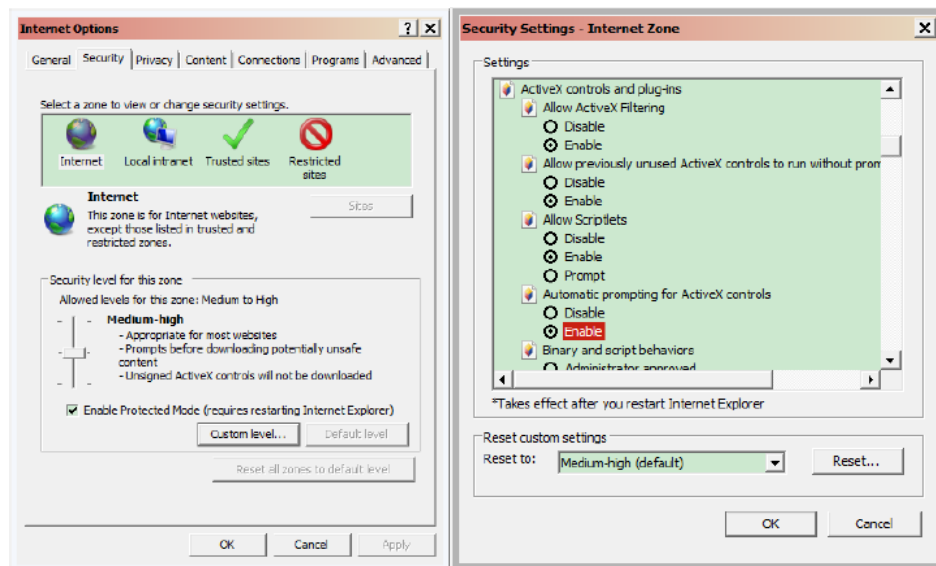

IE setting

- “Security”—“Local Intranet”—“Custom Level”, enable all the items on ActiveX control and plug-in;
- Add IP address of the camera into “Trusted sites”; “Security”—“Sites”— enter IP address, add and cancel the selection of “Require server verification” at the bottom.

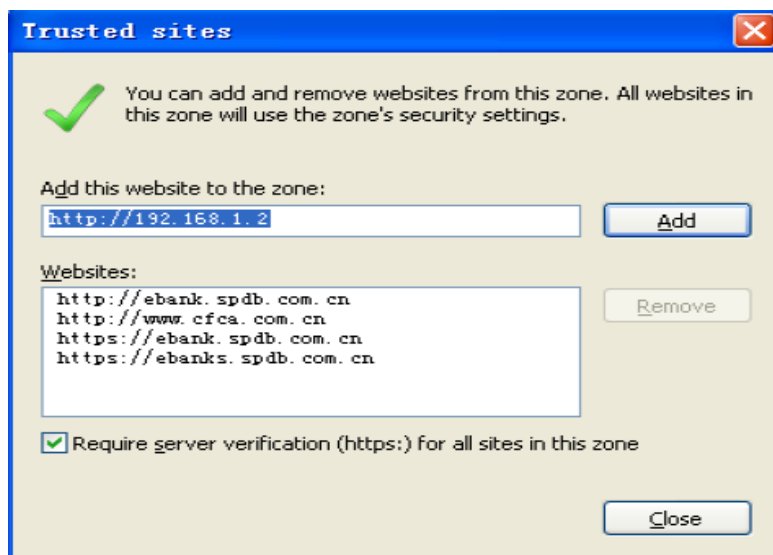

【Attention】 It is recommended to use IE browser with version higher than v6.0 to make sure cameras work properly.

8.2.3 Incorrect image after login

Possible Reason:

There is other device in the some network with same IP and Mac address.

Troubleshooting steps:

- Disconnect the camera, try to ping the network to check whether there is return package.

- Use the IP searcher to check whether there are devices with same IP address, then disconnect the other devices to make sure the IP address of the camera is unique.

8.2.4 It is ok to ping the server, but cannot properly login.

Troubleshooting steps:

- Port 3001 is banned by the firewall;
- Wrong port number is incorrect when logging in;
- Wrong ID and password;
- Too many access to the camera.
- Use IP searcher to check the listen port of the camera, make sure it is the same as the software.

8.2.5 UDP unable to connect video

Possible Reason:

- Other client already connect to the camera on the same computer;
- UDP port conflict with other application program on the same computer, revise camera IP address and test again.

8.2.6 Video of two camera appear alternately, or connect and disconnect in sometime

Possible Reason:

- Conflict on IP address, check on the IP searcher;
- Conflict on MAC address, check on IP searcher;
- Camera IP address conflict with other computer IP address

8.3 Operation Failure

8.3.1 No correct connection of video on IE

Troubleshooting steps:

Make sure host IP address is in the same network segment with the camera.

【Attention】 Make routing if in different network segment.

- Make sure to use IE at version 8.0 or higher;
- Make sure driver for graphic card and DirectX are installed properly, it is recommended to install the latest version driver;
- Make to enable ActiveX plug-in;
- Turn off Anti-virus software and firewall to test;
- Delete the installed plug-in, download again and re-install to test;
- Use another computer/host server to test;
- Contact us if still had problem.

8.3.2 Cannot connect sub-stream

Possible Reason:

- Resolution of sub-stream is higher than main-stream, need to set as default;
- Wrong firmware version, need to update;
- Access to camera are full.

8.4 Control Failure

It is able to control Pan/Tilt/Zoom in IE, but cannot control in the software.

Troubleshooting Steps:

Make sure the control protocol is correct.

Possible Reason:

- Make sure address for PTZ camera is correct set in software
- Please contact us if problem still remain.

8.5 Video Failure

8.5.1 Video display properly in the software, but it is unstable or intermittent, or lose frame.

Troubleshooting Steps:

- Exit the software, check the CPU utilization of the computer, make sure the computer configuration is capable to run the software and there is no virus;
- Ping the camera from the computer to check whether there is dropout;
- Test network bandwidth, if it is not enough or unstable, please contact the Internet Service Provider;
- Please lower down the resolution or image quality when need fluent video in narrow network bandwidth;
- Please contact us if it is not resolved.

8.5.2 Connection is correct but screen is black or video image is anamorphic

Other issues: No OSD, or image is anamorphic but go normal after full screen.

Possible Reason:

- DirectX version lower than 9.0c;
- Graphic card driver incorrect, which disable the accessory function of DirectX;
- Set full screen privacy mask.

8.5.3 Video display properly in IE but abnormal in software

Troubleshooting Steps:

- Please make sure software version is correct;
- Make sure IP address and server type is correct in software; It is suggested to use “Main stream + TCP” type in LAN, and “Sub-stream +TCP” in WLAN.
- Make sure video are all connected in the software main interface;
- Reboot the software to connect again;
- Please contact us if it is not resolved.

8.6 Audio Failure

8.6.1 Video display and control properly but no audio

Troubleshooting steps:

- Make sure the computer audio card driver and connection is correct, please try to play some

music to test;

- Make sure to selected Video/Audio not only Video in camera setting;
- Make sure the audio channel is correct;
- Make sure the microphone is connected properly;
- Please contact us if it is not resolved.

8.6.2 Weak Audio Signal

- Make sure using active microphone;
- Increase the sensitivity of the microphone;
- Use active loudspeaker for audio playing.

8.7 Alarm Failure

8.7.1 No Alarm Output

- Make sure output wiring is correct;
- Power input: voltage—AC110V/DC24V, electricity—1A;
- Check the setting for input/output port in IE;
- Make sure the alarm device is working properly

Charpter 9 After-sales Service

We provide 2 years warranty for all our IP cameras. We provide free repair service in the warranty period except the following circumstances:

- Not follow the User Manual and the incorrect operation cause cameras damage;
- Lightning, fire, and in case of irresistible natural disasters;
- Product damage caused by using poor design matching product from other manufacturers.

Statement

- As we will keep our technology up to date, product parameters change accordingly without prior notice.
- We reserves the right for final interpretation of this manual.

Chapter 10 Harmful Elements

Items name	<Electronic Product Pollution Control Management Measures>					
	(Pb)	(Hg)	(Cd)	(CrVI)	(PBB)	(PBDE)
Metal	×	○	○	○	○	○
Plastic	○	○	○	○	○	○
PCB	×	○	○	○	○	○
Glass(if has)	○	○	○	○	○	○
Power(if has)	×	○	○	○	○	○
Accessory(if has)	×	○	○	○	○	○
Remarks: 1.○ means the restricted substance content is lower than the SJ/T11363-2006 standard stipulated limit. 2.×means the restricted substance content is higher than the SJ/T11363-2006 standard stipulated limit.						