



Thinking of you
Electrolux



EB4GL70

EN STEAMER

USER MANUAL



CONTENTS

1. SAFETY INFORMATION	3
2. SAFETY INSTRUCTIONS	4
3. PRODUCT DESCRIPTION	6
4. BEFORE FIRST USE	7
5. CONTROL PANEL	7
6. DAILY USE	9
7. CLOCK FUNCTIONS	11
8. AUTOMATIC PROGRAMMES	12
9. USING THE ACCESSORIES	12
10. ADDITIONAL FUNCTIONS	13
11. CARE AND CLEANING	14
12. WHAT TO DO IF...	17
13. INSTALLATION	18
14. GARANTIE, GARANZIA, GUARANTEE	21

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.RegisterElectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.
When contacting Service, ensure that you have the following data available.
The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised by an adult or a person who is responsible for their safety.
- Do not let children play with the appliance. Children under 3 years must not be left unsupervised in the vicinity of the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 General Safety

- Only a qualified person must install this appliance and replace the cable.
- Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Do not use a steam cleaner to clean the appliance.

- Before maintenance cut the power supply.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized Service or similarly qualified persons in order to avoid a hazard.
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not pull the appliance by the handle.
- Keep the minimum distance from the other appliances and units.
- Make sure that the appliance is installed below and adjacent safe structures.
- The sides of the appliance must stay adjacent to appliances or to units with the same height.
- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shock-proof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable.
- Do not let mains cables to come in touch with the appliance door, specially when the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

2.2 Use



WARNING!

Risk of injury, burns or electric shock or explosion.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Always keep the appliance door closed when the appliance is in operation.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put ovenware or other objects in the appliance directly on the bottom.
 - do not put aluminium foil directly on the bottom of the appliance.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.
- Discoloration of the enamel has no effect on the performance of the appliance. It is not a defect in the sense of the warranty law.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.

Steam Cooking



WARNING!

Risk of burns and damage to the appliance.

- Do not open the appliance door during steam cooking. Steam can release.

2.3 Care and Cleaning



WARNING!

Risk of injury, fire or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Service.
- Be careful when you remove the door from the appliance. The door is heavy!
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Remaining fat or food in the appliance can cause fire.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive

cleaning pads, solvents or metal objects.

- If you use an oven spray, obey the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

2.4 Internal light

- The type of light bulb or halogen lamp used for this appliance, is only for household appliances. Do not use it for house lighting.



WARNING!

Risk of electrical shock.

- Before replacing the lamp, disconnect the appliance from the power supply.

- Only use lamps with the same specifications.

2.5 Disposal




WARNING!

Risk of injury or suffocation.


- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

3. PRODUCT DESCRIPTION

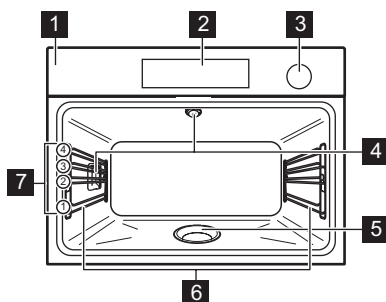


- 1** Control panel
- 2** Electronic programmer
- 3** Water drawer
- 4** Lamp
- 5** Steam generator with cover
- 6** Shelf support, removable
- 7** Shelf positions

3.1 Accessories

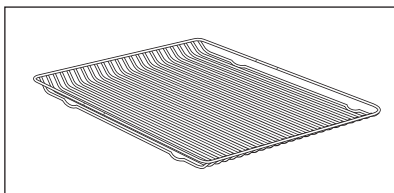

Wire shelf

For cookware, cake tins and roasts.

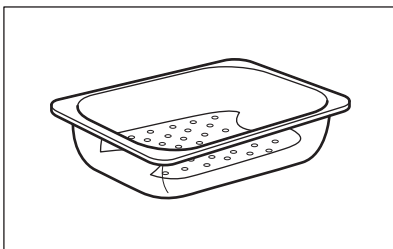

Glass dish with 1 grill insert

Sponge

For absorbing residual water from the steam generator.

4. BEFORE FIRST USE



WARNING!

Refer to the Safety chapters.



If the heating element hangs down, push it to the top of the appliance above the supports which are on the inner walls of the appliance.

4.1 Initial Cleaning

- Remove all parts from the appliance.
- Clean the appliance before first use.




Refer to chapter "Care and Cleaning".

4.2 First Connection

When you connect the appliance to the mains or after a power cut, you have to set the language, display contrast, display brightness and time of the day. Press **^** or **✓** to set the value. Press **OK** to confirm.

5. CONTROL PANEL


Electronic programmer

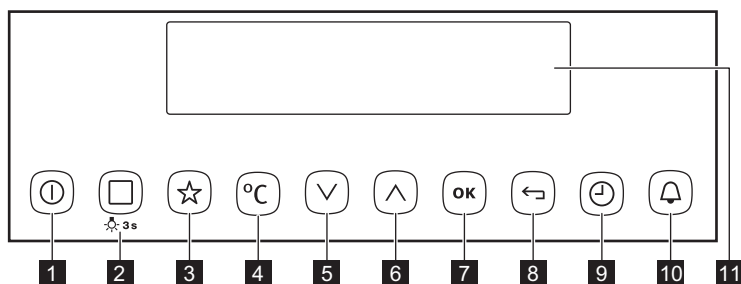

Use the sensor fields to operate the appliance

Number	Sensor field	Function	Comment
1		ON / OFF	To activate and deactivate the appliance.
2		Heating Functions or Assisted Cooking	To set a heating function or an Assisted Cooking function. To set the necessary function, touch the sensor field one or two times after you activate the appliance. To activate or deactivate the lamp, touch and hold the sensor field for 3 seconds (you can also activate the lamp after you deactivate the appliance).
3		Favourite Programme	To save your favourite programmes to use for a different time.
4		Temperature selection	To set the temperature or show the temperature in the appliance.
5		Down key	To move down in the menu.
6		Up key	To move up in the menu.
7		OK	To confirm the selection or settings.
8		Home key	To go back one level in the menu. To show the main menu, touch the field for 3 seconds.
9		Time and additional functions	To set different functions. When a heating function operates, touch the sensor field to set the timer, Function Lock , Favourite Programme memory or Set + Go .
10		Minute Minder	To set the Minute Minder .
11	-	Display	It shows the settings of the appliance.

5.1 Display

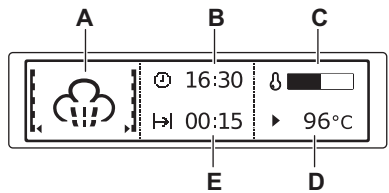

- A) Full Steam function
- B) Time of day
- C) Heat-up indicator
- D) Temperature
- E) Duration and End Time functions

Other indicators in the display

Symbol		Function
	Minute Minder	The function operates.
	Time of day	The display shows the time of day.
	Duration	The display shows the necessary time for cooking.
	End Time	The display shows when the cooking time is completed.
	Time Indication	The display shows how long a heating function operates. Press  and  at the same time to have the time go back to zero.
	Heat-up indicator	The display shows the temperature in the appliance.

6. DAILY USE



WARNING!

Refer to the Safety chapters.

6.1 Navigating the menus

Operation of the menus:

1. Activate the appliance.

2. Press  or  to select the menu option.

3. Press **OK** to move to submenu or accept setting.

At every point you can get back to the main menu with .

6.2 The menus in overview

Main menu

Sym- bol	Menu item	Application
	Full Steam	A heating function for vegetables, fish, potatoes, rice, pasta or special side - dishes.
	Assisted Cooking	Contains a list of automatic cooking programmes.
	Steam Cleaning	Contains the procedure for cleaning with steam.
	Basic Settings	Contains a list of other settings.
	Favourite Programme	Contains a list of favourite cooking programmes made by the user.

Submenus for: **Basic Settings**

Sym- bol	Submenu	Description
	Set Time of Day	Sets the current time on the clock.
	Time Indication	When ON, the displays shows the current time when you deactivate the appliance.
	Set + Go	When ON, you can activate this function when you activate the Full Steam function.
	Extra time	Activates and deactivates the function.
	Display Contrast	Adjusts the display contrast by degrees.
	Display Brightness	Adjusts the display brightness by degrees.
	Set Language	Sets the language for the display.
	Buzzer Volume	Adjusts the volume of press-tones and signals by degrees.
	Key Tones	Activates and deactivates the tone of the touch fields. It is not possible to deactivate the tone of the ON / OFF touch field.
	Alarm/Error Tones	Activates and deactivates the alarm tones.
	Cleaning Assistant	Guides you through the cleaning procedure.
	Service	Shows the software version and configuration.
	Factory Settings	Resets all settings to factory settings.

6.3 Activating a heating function

1. Activate the appliance.
2. Press **OK** to confirm.
3. Set the temperature. Press **OK** to confirm.



Use only water as the liquid. Do not use filtered (demineralised) or distilled water.

3. Activate the appliance.
4. Set the steam heating function and temperature.
5. If necessary, set the function Duration  or End Time .

6.4 Steam cooking



The water drawer cover is in the control panel.

1. Press the cover to open the water drawer.
2. Fill the water drawer with 700 ml of water.

The water supply is sufficient for approximately 30 minutes.

The first steam shows after approximately 2 minutes. An acoustic signal sounds when the appliance is at approximately the set temperature.

The signal sounds again at the end of the cooking time.

6. Deactivate the appliance.



CAUTION!

Do not put water directly into the steam generator!



When the steam generator is empty, an acoustic signal sounds. When the appliance is cool, soak up all remaining water from the steam generator with the sponge. If necessary, clean the steam generator with some vinegar. Let the appliance dry fully with the door open.

6.5 Heat-up indicator

When you activate a heating function, the bar on the display comes on. The bar shows that the temperature increases.

Residual heat

When you deactivate the appliance, the display shows the residual heat. You can use the heat to keep the food warm.

6.6 Energy saving



The appliance contains features which help you save energy during everyday cooking:

• Residual heat:

- When the heating function or programme operates, the heating elements are deactivated 10% earlier (the lamp and fan continue to operate). For this feature to operate, the cooking time must be longer than 30 minutes or you must use the clock functions (Duration , End Time).
- When the appliance is off, you can use the heat to keep food warm. The display shows the remaining temperature.

- **Cooking with the lamp off** - Touch and hold  for 3 seconds to deactivate the lamp during cooking.

7. CLOCK FUNCTIONS

7.1 Clock functions

Symbol	Function	Description
	Minute Minder	To set a countdown (maximum: 2 hours, 30 minutes). This function has no effect on the operation of the appliance. You can also activate it when the appliance is deactivated. Touch  to activate the function. Touch  or  to set the minutes and OK to start.
	Duration	To set the length of an operation (maximum: 23 hours, 59 minutes).
	End Time	To set the switch-off time for a heating function (maximum: 23 hours, 59 minutes).

If you set the time for a clock function, the time starts to count down after 5 seconds.

heat to continue the cooking procedure until the time ends (3 – 20 minutes).



If you use the clock functions Duration and End Time , the appliance deactivates the heating elements after 90% of the set time. The appliance uses the residual

Setting the clock functions:

1. Set a heating function.

2. Touch  again and again until the display shows the necessary clock function and the related symbol.
3. Touch  or  to set the necessary time. Touch **OK** to confirm.
When the time ends, an acoustic signal sounds. The appliance deactivates. The display shows a message.
4. Touch a sensor field to stop the signal.
 - With Duration and End Time , the appliance deactivates automatically.
 - With Duration and End Time , you must set the heating function and the temperature first. Then you can set the clock function.
 - You can use Duration and End Time at the same time if you want to automati-

cally activate and deactivate the appliance at a given time later.

7.2 Extra Time

The Extra Time makes the heating function continue after the Duration ends.

- Applicable for all heating functions with Duration .

Activating the function:

1. When the cooking time ends, an acoustic signal sounds. Press any sensor field.
2. The display shows the message for Extra Time for one minute.
3. Press  to activate (or  to cancel).
4. Set the Extra Time period. Press **OK** to confirm.

8. AUTOMATIC PROGRAMMES



WARNING!

Refer to the Safety chapters.

8.1 Assisted Cooking with Recipe Automatic

This appliance has a set of recipes you can use. Recipes are fixed and you cannot change them.

Activating the function:

1. Activate the appliance.

2. Select the Assisted Cooking menu. Press **OK** to confirm.
3. Select the category and dish. Press **OK** to confirm.
4. Select Recipe Automatic . Press **OK** to confirm.



When you use the Manual function, the appliance uses automatic settings. You can change them as with other functions.


9. USING THE ACCESSORIES



WARNING!

Refer to the Safety chapters.

9.1 Inserting the accessories

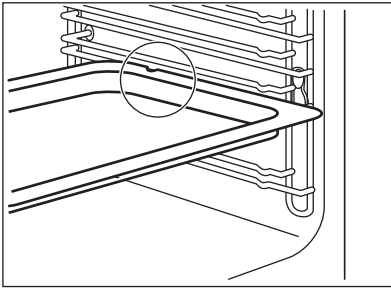

The wire shelf has side edges. These edges and the shape of the guide-bars are a special device to prevent the cookware from slipping.

10. ADDITIONAL FUNCTIONS

10.1 Favourite Programme menu

You can save your favourite settings, like duration, temperature or heating function. They are available in the Favourite Programme menu. You can save 20 programmes.

Saving a programme

1. Activate the appliance.
2. Set a heating function or an Assisted Cooking function.
3. Touch  again and again until the display shows **SAVE**. Press **OK** to confirm.
4. The display shows the first free memory position.
Press **OK** to confirm.
5. Enter the name of the programme. The first letter flashes.
Touch  or  to change the letter. Press **OK**.
6. Touch  or  to move the cursor to the right or to the left. Press **OK**.
The next letter flashes. Do steps 5 and 6 again as necessary.
7. Press and hold **OK** to save.

- You can overwrite a memory position. When the display shows the first free memory position, touch  or  and press **OK** to overwrite an existing programme.

- To change the name of a programme, select the Edit Programme Name sub-menu in the Favourite Programme menu.

Activating the programme

1. Activate the appliance.
2. Select the Favourite Programme menu. Press **OK** to confirm.
3. Select your favourite programme name. Press **OK** to confirm.

Press  to go to Favourite Programme directly. You can also use it when the appliance is deactivated (for selected models only).

10.2 Child Lock

The Child Lock prevents an accidental operation of the appliance.

Activating and deactivating the Child Lock function:

1. Activate the appliance.
2. Touch  and  at the same time until the display shows a message.

10.3 Function Lock

The Function Lock function prevents an accidental change of the heating function. You can activate the Function Lock function only when the appliance operates.

Activating the Function Lock function:

1. Activate the appliance.

- 2. Set a heating function or setting.
- 3. Press ⊖ again and again until the display shows Function Lock function.
- 4. Press **OK** to confirm.

Deactivating the Function Lock function:

- 1. Press ⊖ two times.
- 2. Press **OK** to confirm.

10.4 SET + GO

The SET + GO function lets you set a heating function (or programme) and use it later with one press of the sensor field.

Activating the function:

- 1. Activate the appliance.
- 2. Set the heating function.
- 3. Press ⊖ again and again until the display shows Duration .
- 4. Set the time.

- 5. Press ⊕ again and again until the display shows SET + GO .
- 6. Press **OK** to confirm.
To start SET + GO function, press any sensor field (except for ①). The set heating function starts.
When the heating function ends, an acoustic signal sounds.
 - When the heating function operates, the Function Lock function is on.
 - You can activate and deactivate the SET + GO function in the Basic Settings menu.

10.5 Automatic switch-off

For safety reasons the appliance deactivates after some time:

- If a heating function operates.
- If you do not change the steamer temperature.

Steamer temperature	Switch-off time
50 °C - 96 °C	12.5 h



The automatic switch-off works with all functions, except Light , Duration , End Time .

surfaces of the appliance cool. If you deactivate the appliance, the cooling fan can continue to operate until the appliance cools down.

10.6 Cooling fan

When the appliance operates, the cooling fan activates automatically to keep the

11. CARE AND CLEANING



WARNING!
Refer to the Safety chapters.

Notes on cleaning:

- Clean the front of the appliance with a soft cloth with warm water and a cleaning agent.
- To clean metal surfaces, use a usual cleaning agent.
- Clean the oven interior after each use. Then you can remove dirt more easily and it does not burn on.
- Clean all oven accessories after each use and let them dry.

- If you have nonstick accessories, do not clean them using aggressive agents, sharp-edged objects or a dishwasher. It can cause a damage to the nonstick coating.

11.1 Steam Cleaning

- 1. Remove the worst of the dirt manually.
- 2. Put 250 ml of water with 3 table-spoons of vinegar directly into the steam generator.


3. Activate the Steam Cleaning function in the main menu. The display shows the duration of the function.
4. An acoustic signal sounds when the programme is completed. Press a button to deactivate the signal.
5. Wipe out the appliance with a soft cloth. Remove the remaining water from the steam generator.

6. Keep the appliance door open for approximately 1 hour. Wait until the appliance is dry.


11.2 Shelf support

You can remove the shelf support to clean the side walls.


Removing the shelf support

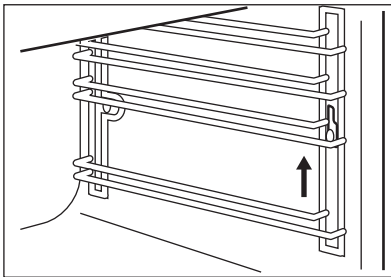

1. Carefully pull the support up and out of the front catch.

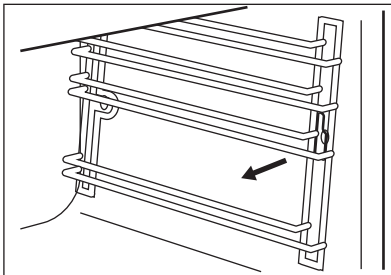

2. Lightly move the support on the front catch inwards.

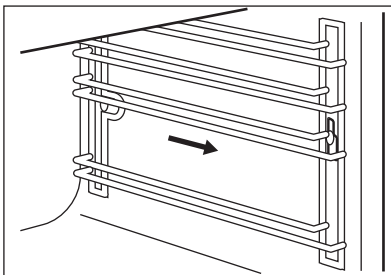

3. Pull the support out of the rear catch.

Installing the shelf support

To install the shelf support follow the procedure in the opposite order.

11.3 Steam generation system



CAUTION!

Dry the steam generator **after each use**. Soak up water with the sponge.



Remove the limescale residue with water and vinegar.

**CAUTION!**



Chemical de-scaling agents can cause damage to the enamel. Follow the instructions of the manufacturer.

Cleaning the water drawer and the steam generator:

1. Put the water and vinegar mixture (approximately 250 ml) **through the water drawer** into the steam generator.

Wait for approximately 10 minutes.

2. Remove the water and vinegar with the sponge.

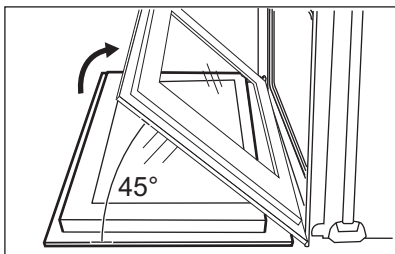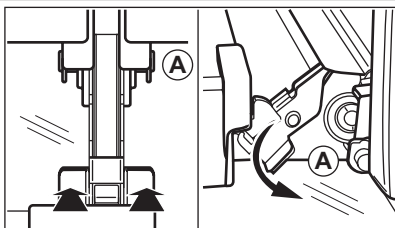

3. Put clean water (100 - 200 ml) into the water drawer to flush the steam generation system.
4. Remove water from the steam generator with the sponge and rub dry.
5. Keep the door open to let the appliance dry fully.

11.4 Removing / inserting the door

To clean the door remove it.

**CAUTION!**

Be careful when you remove the door from the appliance. The door is heavy. There is a risk of injury or damage to the appliance.

Removing the door

1. Open the door as far as it goes.
2. Press down the clamping levers (A) on the two door hinges.
3. Close the door until it is at an angle of approximately 45°.
4. Hold the door with one hand on each side and pull it away from the appliance at an upwards angle.



Put the door with the outer side down on a soft and level surface to prevent scratches.

Inserting the door

To insert the door do the above steps in the opposite sequence.

11.5 Lamp**WARNING!**

Danger of electrocution! Disconnect the fuse before you replace the lamp.
The lamp and the lamp glass cover can be hot.

Before you change the lamp:


- Deactivate the appliance.
- Remove the fuses from the fuse box or deactivate the circuit breaker.

**CAUTION!**

Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity.
Always use the same lamp type.

Replacing the top lamp

1. Turn the lamp glass cover counter-clockwise to remove it.

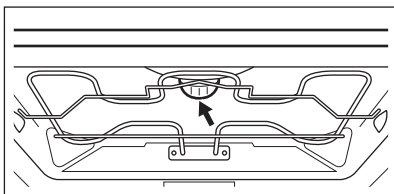

2. Remove the metal ring and clean the glass cover.
3. Replace the lamp with a halogen, 230 V, 40 W, 300 °C heat resistant oven lamp.
4. Attach the metal ring to the glass cover.

5. Install the glass cover.

Replacing the side lamp:

1. Remove the left shelf support.
2. Use a Torx 20 screwdriver to remove the cover.
3. Remove and clean the metal frame and the seal.
4. Replace the lamp with a halogen, 230 V, 25 W, 300 °C heat resistant oven lamp.
5. Install the metal frame and the seal. Tighten the screws.
6. Install the left shelf support.

12. WHAT TO DO IF...



WARNING!

Refer to the Safety chapters.


Problem	Possible cause	Remedy
The appliance does not heat up.	The appliance is deactivated.	Activate the appliance.
The appliance does not heat up.	The clock is not set.	Set the clock.
The appliance does not heat up.	The necessary settings are not set.	Make sure that the settings are correct.
The appliance does not heat up.	The Child Lock is activated.	Refer to "Activating and deactivating the Child Lock function".
The appliance does not heat up.	The fuse is released.	Make sure that the fuse is the cause of the malfunction. If the fuse releases again and again, contact an authorized electrician.
The lamp does not operate.	The lamp is defective.	Replace the lamp.
"Demo" comes on in the display and the appliance does not heat up. The fan does not operate.	The test mode is activated.	1. Deactivate the appliance. 2. Touch and hold ① until the appliance activates and deactivates. 3. Touch and hold ☆ and ② at the same time until an acoustic signal sounds and "Demo" goes out.

13. INSTALLATION



WARNING!

Refer to the Safety chapters.

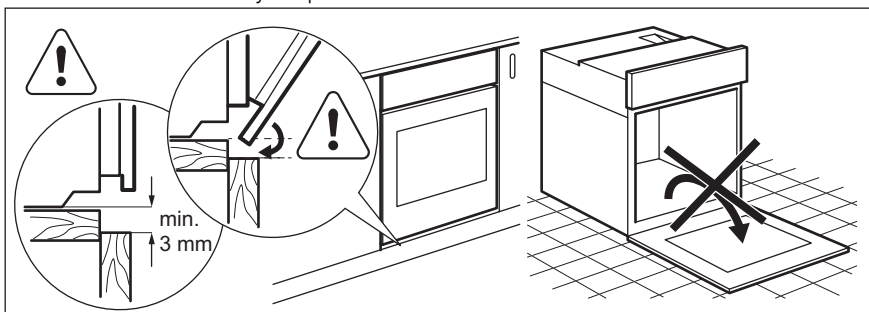




To lift the appliance, do not use the door handle.






WARNING!

During installation in combustible matter, NIN SEV 1000 and fire protection guidelines and regulations of the Association of Cantonal Fire Insurance shall be strictly adhered to.

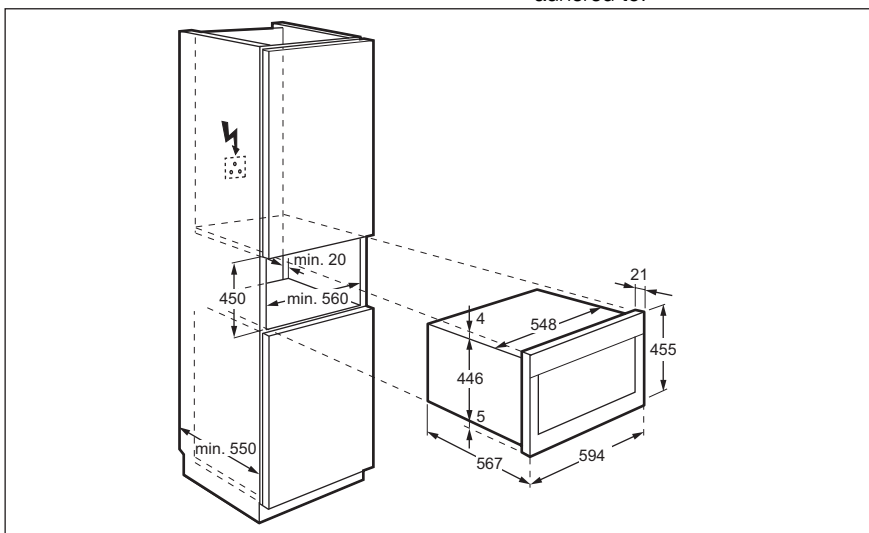

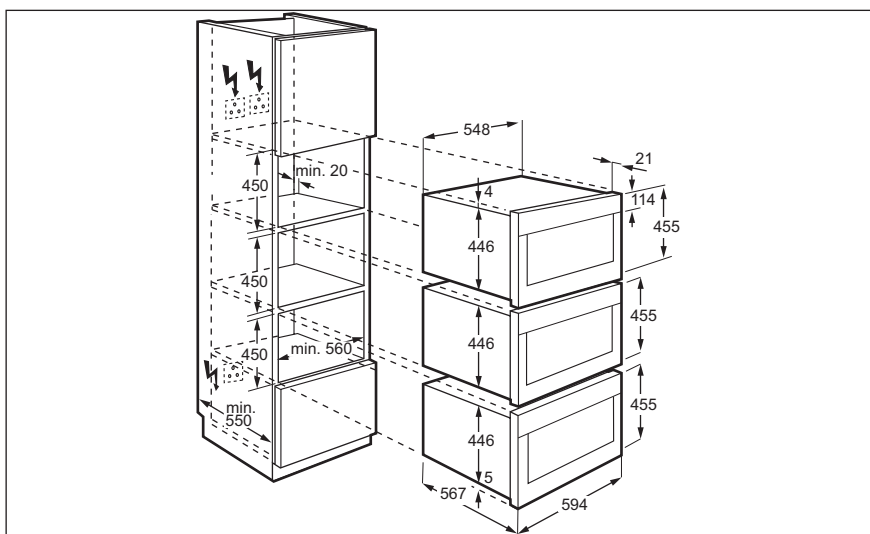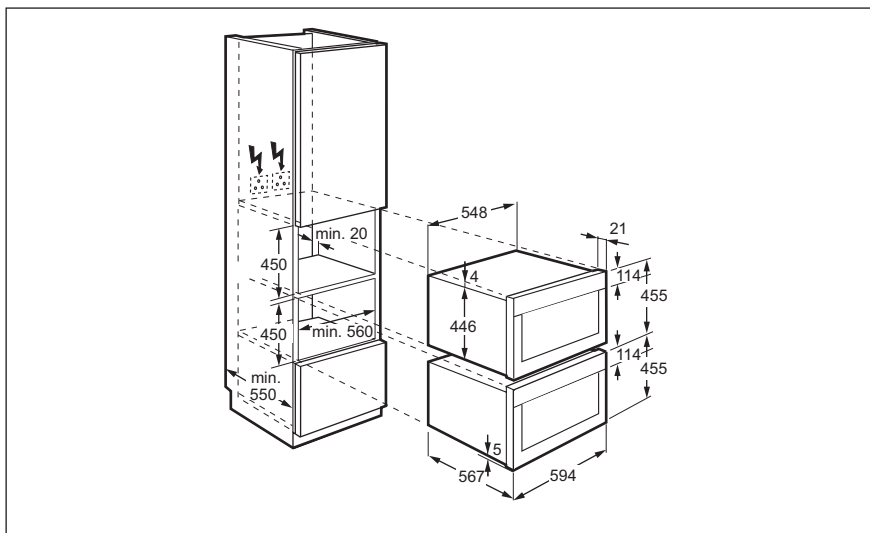

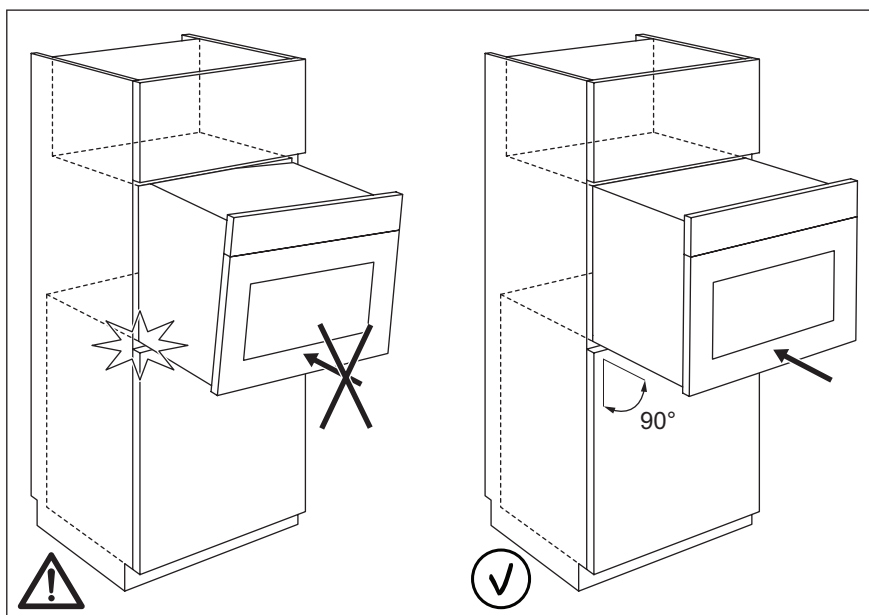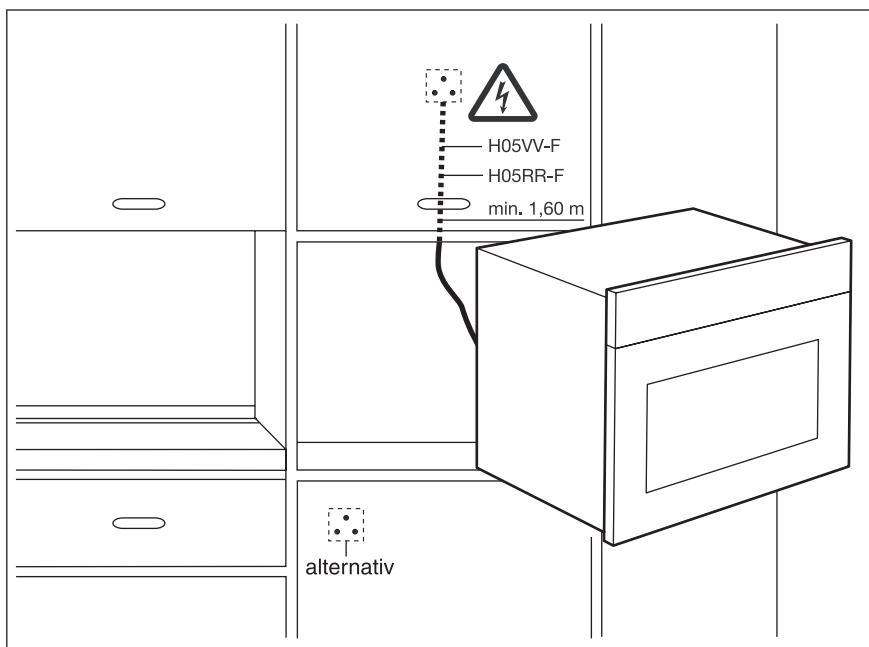

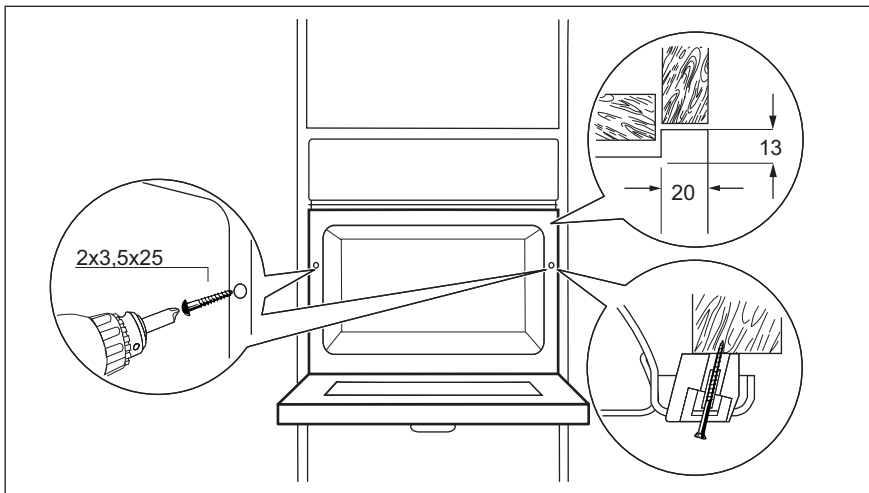

13.1 Electrical connection



Let a qualified electrician connect the appliance to the electricity supply.

Use a power cable of the type H05VV-F or higher.
Install the appliance with a socket supply line. If there is no socket supply line, the fixed home electrical system must include an isolating device with at least a 3 mm-contact separation to enable a simultane-

ous and all-pole cut off from the mains (according to NIN SEV 1000). The customer must have a socket for the electrical connection that is accessible and outside the coordination room. The length of the connection cable must be approximately 120 cm with lines connected directly to the mains.

1. Do the electrical connections according to connection diagram.
2. Secure the strain relief.

14. GARANTIE, GARANZIA, GUARANTEE

14.1 Kundendienst, service-clientèle, Servizio clienti, Customer Service Centres

Servicestellen	Points de Service	Servizio dopo vendita	Point of Service
5506 Mägenwil/Zürich Industriestrasse 10	3018 Bern Morgenstrasse 131	1028 Préverenges Le Trési 6	6928 Manno Via Violino 11
9000 St. Gallen Zürcherstrasse 204e			
4052 Basel St. Jakob-Turm Birsstrasse 320B			
6020 Emmenbrücke Seetalstrasse 11			

Servicestellen	Points de Service	Servizio dopo vendita	Point of Service
7000 Chur Comercialstrasse 19			

Ersatzteilverkauf/Points de vente de rechange/Vendita pezzi di ricambio/spare parts service:

5506 Mägenwil, Industriestrasse 10, Tel. 0848 848 111

Fachberatung/Verkauf/Demonstration/Vente/Consulente (cucina)/Vendita

8048 Zürich, Badenerstrasse 587, Tel. 044 405 81 11

Garantie Für jedes Produkt gewähren wir ab Verkauf bzw. Lieferdatum an den Endverbraucher eine Garantie von 2 Jahren. (Ausweis durch Garantieschein, Faktura oder Verkaufsbeleg). Die Garantieleistung umfasst die Kosten für Material, Arbeits- und Reisezeit. Die Garantieleistung entfällt bei Nichtbeachtung der Gebrauchsanweisung und Betriebsvorschriften, unsachgerechter Installation, sowie bei Beschädigung durch äussere Einflüsse, höhere Gewalt, Eingriffe Dritter und Verwendung von Nicht-Original Teilen.

Garantie Nous octroyons sur chaque produit 2 ans de garantie à partir de la date de livraison ou de la mise en service au consommateur (documenté au moyen d'une facture, d'un bon de garantie ou d'un justificatif d'achat). Notre garantie couvre les frais de mains d'œuvres et de déplacement, ainsi que les pièces de rechange. Les conditions de garantie ne sont pas valables en cas d'intervention

d'un tiers non autorisé, de l'emploi de pièces de rechange non originales, d'erreurs de maniement ou d'installation dues à l'inobservation du mode d'emploi, et pour des dommages causés par des influences extérieures ou de force majeure.

Garanzia Per ogni prodotto concediamo una garanzia di 2 anni a partire dalla data di consegna o dalla sua messa in funzione. (fa stato la data della fattura, del certificato di garanzia o dello scontrino d'acquisto) Nella garanzia sono comprese le spese di manodopera, di viaggio e del materiale. Dalla copertura sono esclusi il logoramento ed i danni causati da agenti esterni, intervento di terzi, utilizzo di ricambi non originali o dalla inosservanza delle prescrizioni d'istallazione ed istruzioni per l'uso.

Warranty For each product we provide a two-year guarantee from the date of purchase or delivery to the consumer (with a guarantee certificate, invoice or sales receipt serving as proof). The guarantee covers the costs of materials, labour and travel. The guarantee will lapse if the operating instructions and conditions of use are not adhered to, if the product is incorrectly installed, or in the event of damage caused by external influences, force majeure, intervention by third parties or the use of non-genuine components.

15. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.
Help protect the environment and human health and to recycle waste of electrical

and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



892946941-D-432013