



## Aastra Business Communication Solution

**Aastra**  
A Mitel Company

## Aastra 6863i and Aastra 6865i User's Guide

### Supported communication systems:

Aastra 415

Aastra 430

Aastra 470

This user's guide describes the functions, configuration and use of the Aastra SIP phones Aastra 6863i and Aastra 6865i on the communication systems mentioned above.



# Welcome...

Welcome to the user's guide for the desk phones Aastra 6863i and Aastra 6865i for Aastra 400 communication systems.

This user's guide will assist you with the use of your phone and introduce you step by step to the functions and configuration. If you require further technical support or information on other Aastra products, please refer to our webpages [www.aastra.ch](http://www.aastra.ch) and [www.aastra.com](http://www.aastra.com) or our *Aastra DocFinder*.

This user's guide is relevant only for Aastra SIP phones connected to a Aastra 400 communication system. Other user's guides are available for operation on other communication systems or for direct operation via a SIP provider. Consult your system administrator if you are unsure whether you have the correct user's guide for your requirements.

## Notes:

- Not all listed functions are available by default. Contact your system administrator to learn more about the available features and services in the Aastra 400 communication system.
- Your system administrator has the option to individually set some of the phone's features. In this case your default values will differ from the default values described in this user's guide.
- Some functions are offered both from the Aastra 400 communication system and locally from your Aastra SIP phone. Since the Aastra 400 communication system does not completely support the local functions we recommend making your system administrator do the configuration or using the Aastra Self Service Portal (see chapter "Aastra Self Service Portal", page 7).

## Safety information

Failure to observe this information can be hazardous and infringe existing laws.



### Connections

Always plug the phone cable connectors into the appropriate sockets. Do not modify the connections in any way.



### Power supply

Your phone can be supplied with power in various ways. Pay attention to the information given by the system administrator.

### Note:

The device will be inoperable when mains power of the communication system fails.



### Metal objects

Telephone receivers produce magnetic fields that can attract small metallic objects such as pins and staples. To avoid injury, do not place the handset where such objects can be picked up.



### Maintenance

Make sure all installation and repair work is carried out by a specially qualified technician.

Always use a soft, moistened, or antistatic cloth to clean your device. Do not use chemicals or other chemical products.



### Cost control and Data protection

You should protect your phone with a PIN so that no-one can make phone calls at your expense. A code will also protect your personal settings.



### Ambient conditions

Do not operate the device outside the temperature range of +5 °C to approx. +40 °C.

Avoid direct sunlight and other sources of heat. Protect your device against the wet, excessive dust, corrosive liquids and steam.



Do not expose your device to electromagnetic fields (electric motors, household appliances). The speech quality could be affected.



### Disposal

Be sure to dispose of your device, batteries and its packaging in an environmentally compatible way. Electrical equipment does not belong in domestic waste. Deposit it at a return centre.



### Accessories

Use original accessories or specifically approved accessories only. The use of other accessories may decrease performance or pose a risk to your health or safety.

## Document information

### Communication system and software versions

Some custom features are not supported on all communication systems or by all software versions. These sections are highlighted with a letter in square brackets. The following overview contains information on which software versions the affected custom features are supported on. Contact your system administrator for more information.

	R3.2							
[a]	x							
[b]								
[c]								
[d]								

### Document designation

- Document number: eud-1629
- Document version: 1.1
- Based on communication server software version: R3.2
- Valid as of communication server software version: R3.1
- Copyright © 10.2014 Aastra Technologies Limited
- In PDF Viewer, click on this link to download the latest version of this document:  
[https://pbxweb.aastra.com/doc\\_finder/DocFinder/eud-1629\\_en.pdf?get&DNR=eud-1629](https://pbxweb.aastra.com/doc_finder/DocFinder/eud-1629_en.pdf?get&DNR=eud-1629)

# Content

<b>Welcome.....</b>	<b>2</b>
Safety information .....	3
Document information .....	4
<b>Information as to the Aastra 400 communication system .....</b>	<b>7</b>
<b>Keys, display and menu guidance .....</b>	<b>8</b>
Key designations and sockets .....	9
Display symbols .....	13
Operating your phone .....	13
Using expansion key modules .....	18
Using labels .....	20
<b>Phoning .....</b>	<b>21</b>
Making calls .....	22
Initiating calls .....	24
Using functions before/while in a call .....	29
Using further functions .....	39
Overview of available functions .....	44
Organising absences from the desk .....	47
Operating call lists and voice messages .....	51
Organisation within the team (busy lamp field, Aastra 6865i only) .....	53
Line key on a key telephone .....	54
Using functions with OpenCount .....	56
Setting functions by remote control .....	57
<b>Personalizing your phone .....</b>	<b>58</b>
Configuring the display .....	59
Configuring the audio properties .....	59
Configuring general phone settings .....	62
Protecting yourself against calls .....	65
Phone books management .....	65
Configuring voice mail .....	66
Configuring presence profile .....	68
Configuring keys .....	69

---

<b>Product and safety information .....</b>	<b>71</b>
Safety information.....	72
Product information.....	72
Data protection .....	74
Limited Warranty (Australia only) .....	74
<b>Index .....</b>	<b>78</b>

# Information as to the Aastra 400 communication system

## One number user concept

Your system administrator can set up several phones for you that hold all the same phone number (one number user concept). You have only one name and phone number with which to identify yourself to your call partners, regardless of which of the phone you make your calls. The advantage is that you can always be reached under the same phone number, regardless of where you happen to be.

With personal call routing you can define where incoming calls shall be routed to (see chapter "[Activating personal call routing](#)", page 39).

You can determine the phone on which a call is acoustically signalled, with Ring Alone (see chapter "[Activating ring alone](#)", page 40). Your system administrator can set whether or not you are busy for further incoming calls (Busy if busy). You are still able to make further outgoing calls with the other terminals. Call lists and contacts stored on the Aastra 400 communication system are available on all your phones and are automatically synchronised. An announcement will be indicated on all phones which support announcements.

## Aastra Self Service Portal

The Aastra Self Service Portal is a web-based application for phones on a Aastra 400 communication system. The Aastra Self Service Portal helps you configure and adapt your personal phone settings (i.e. key configuration, labels for configurable keys, display language, etc.) directly and autonomously on your PC.

As soon as you receive an user account for the Aastra Self Service Portal from your assistant manager and after you have logged in, you are taken to the home page with the overview of all your phones. Refer to the Aastra Self Service Portal online help for further information on a specific topic.

Contact your system administrator to access to the Aastra Self Service Portal.

# Keys, display and menu guidance

The sections below provide an overview and usage on which keys and sockets are available on your phone.


---

<i>Key designations and sockets</i> .....	9
<i>Display symbols</i> .....	13
<i>Operating your phone</i> .....	13
<i>Using expansion key modules</i> .....	18
<i>Using labels</i> .....	20


---




 
 


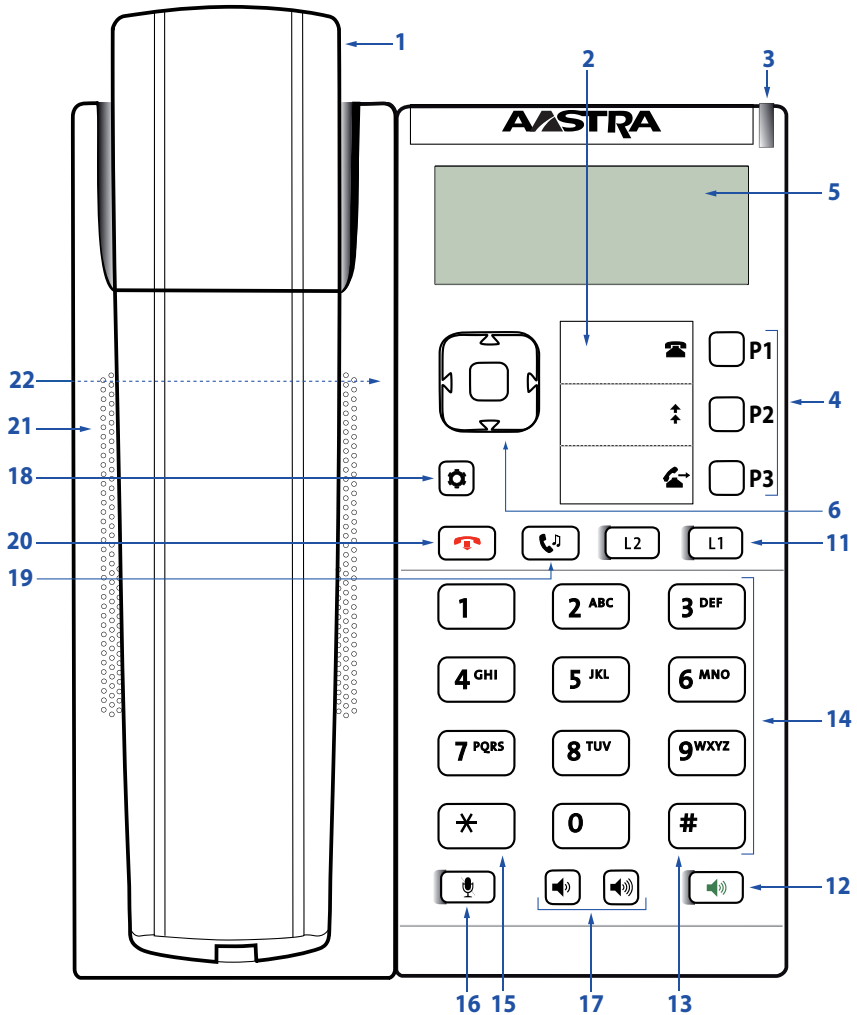


 


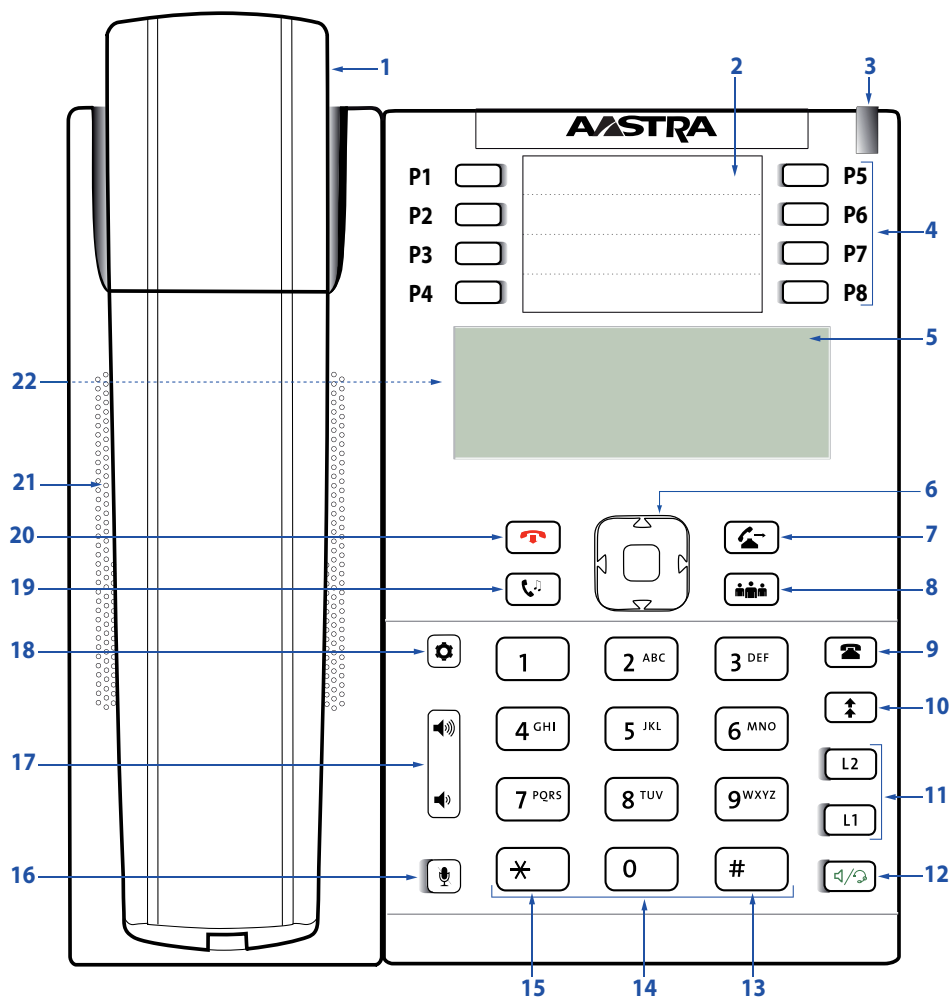
## Key designations and sockets









   
Aastra 6863i



Aastra 6865i

No.	Key	Description and use
1	<b>Handset</b>	
2	<b>Labels</b>	Labels for configurable keys
3	 <b>Message LED</b>	Colour and status signal a specific event.
4	 <b>Function keys P1 to P3 (Aastra 6863i)</b>	Free configurable keys. Preconfigured as: <ul style="list-style-type: none"> <li>• System menu</li> <li>• Redial list</li> <li>• Call transfer</li> </ul>
	 <b>Function keys P1 to P8 with LED (Aastra 6865i)</b>	8 free configurable keys (some preconfigured). An LED is located next to each function key signalling the functional state. The keys have a dual assignment.
5	<b>Display</b>	Monochrome screen
6	 <b>Navigation key with selection key</b>	<ul style="list-style-type: none"> <li>• Navigating through the menu</li> <li>• Switch line</li> <li>• Confirming menu selection</li> </ul>
7	 <b>Deflect key (Aastra 6865i only)</b>	Transferring a call
8	 <b>Conference key (Aastra 6865i only)</b>	Setting up conference calls
9	 <b>Call list key (Aastra 6865i only)</b>	Calling up the call list menu: <ul style="list-style-type: none"> <li>• unanswered</li> <li>• answered</li> <li>• Redial list</li> </ul>
10	 <b>Redial key (Aastra 6865i only)</b>	Using the phone number last dialled
11	 <b>Line keys L1 to L2 with LED</b>	Aastra 6863i: 2 line keys Aastra 6865i: 2 line keys. A total of 9 lines are available. <ul style="list-style-type: none"> <li>• Seizing a line</li> <li>• Answering a call</li> <li>• Brokering with simultaneous configuration of multiple line keys</li> </ul>
12	 <b>Loudspeaker key with LED (Aastra 6863i)</b>	<ul style="list-style-type: none"> <li>• Activating/deactivating open listening</li> <li>• Activating/deactivating handset microphone</li> </ul>
	 <b>Loudspeaker/headset key with LED (Aastra 6865i)</b>	<ul style="list-style-type: none"> <li>• Activating/deactivating open listening</li> <li>• Activating/deactivating handset microphone</li> <li>• Activating/deactivating headset microphone</li> </ul>
13	 <b>Hash key</b>	Entering # or special characters

No.	Key	Description and use
14		<b>Digit keys 1-9</b> Entering characters and digits
15		<b>Asterisk key</b> Entering * or space
16		<b>Microphone key with LED</b> <ul style="list-style-type: none"><li>• Activating/deactivating hands-free mode</li><li>• Activating/deactivating handset microphone</li><li>• Activating/deactivating headset microphone (Aastra 6865i only)</li></ul>
17		<b>Volume keys</b> Adjusting volume
18		<b>Option key</b> Calling up a local setting menu (options list)
19		<b>Hold key</b> <ul style="list-style-type: none"><li>• Holding an active call</li><li>• Taking back a call from hold</li></ul>
20		<b>End key</b> <ul style="list-style-type: none"><li>• Ending a call</li><li>• Back to display in idle state</li><li>• Exiting editor without changes</li></ul>
21	<b>Speaker</b>	
22	<b>Rear (Aastra 6863i):</b> <ul style="list-style-type: none"><li>• 100BaseT dual connection for PC and LAN</li><li>• Connection for power supply</li><li>• Connection for headset</li><li>• Connection for Power-over-Ethernet</li><li>• Connection for wall mounting</li></ul> <b>Rear (Aastra 6865i):</b> <ul style="list-style-type: none"><li>• Connection for expansion key module</li><li>• Connection for power supply</li><li>• Combined four-pin module connection with DHSg headset connection<sup>1)</sup></li><li>• GigE dual connection for PC and LAN</li><li>• Connection for headset</li><li>• Connection for Power-over-Ethernet, class 2</li><li>• Connection for wall mounting</li></ul>	

<sup>1)</sup> Use the headset connection for headsets only. Connecting another device may cause damage to your phone and void your warranty.

## Display symbols

### Call connection states, info



- Context-dependent softkey
- Scrolling back through the menu
- Navigate cursor
- Switching line



- Context-dependent softkey
- Goes forward one step in the menu
- Navigate cursor
- Confirming menu selection
- Switching line



- Context-dependent softkey
- Navigating through the menu
- Navigate to display in idle state



- Context-dependent softkey
- Navigating through the menu
- Confirming menu selection
- Navigating to display in idle state



Incoming call



Active connection



Aastra Hi-Q™ audio technology



Data/voice encryption



New voice message



Activated setting

## Operating your phone

**Most keys and functions are described in the key legend. Other overviews and operating aids can also be found here.**

### Overview system menu

Access to the system menu is made using the [Menu](#). This contains the following menu entries. Refer to the relevant chapters of this user's guide for further information on these menu entries.

Entry	System menu	Entry	System menu
1	<i>Call list</i>	5	<i>Presence</i>
2	<i>Directory Lookup</i>	6	<i>Call routing</i>
3	<i>Voice mail</i>	7	<i>Alarm melodies</i>
4	<i>Forwarding</i>	8	<i>Information</i>

### Using the softkey/navigation key

Softkeys are the keys that are automatically configured with context-dependent functions by the Aastra 400 communication system. The functions are displayed on screen and operated with the navigation key.

A menu can have several sub-menus. Press the *Execute* softkey (navigation key down or to the right) to access the sub-menu or the selection of the possible editing options, or to carry out the action.

### Free configurable keys

**Aastra 6863i:** Your Aastra 6863i has three free configurable keys that are preconfigured with the following functions as standard by your system administrator:

- System menu
- Redial list
- Call transfer.

You can configure these programmable keys with another function or call number.

**Aastra 6865i:** Your Aastra 6865i is equipped with freely configurable keys. Popular functions are set up on a specific configurable key as standard by your system administrator (see chapter "[Overview function key configuration \(default key setting\)](#)", page 15). The remaining configurable keys can be configured with a specific action type: Call number, function, busy lamp field.

The key configuration is not made directly on the phone. Available settings for the key configuration:

- **Aastra 400 communication system:** The configuration has already been made by your system administrator in the communication system.
- **Aastra Self Service Portal:** You can use the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7) where you can configure, change or delete the keys however you wish.

More information on the configurable keys can be found in the chapter "[Configuring keys](#)", page 69.

## Overview function key configuration (default key setting)

Aastra 6863i/Aastra 6865i phones on the Aastra 400 communication system are delivered with the following function key configuration. Please note that your system administrator may change this and your phone may therefore differ from this default configuration.

Function key	Aastra 6863i	Aastra 6863i if logged in as free seating phone
Key P1	System menu	System menu
Key P2	Call list: Redial list	Call list: Redial list
Key P3	Call transfer	Call transfer

Function key	Aastra 6865i	Aastra 6865i if logged in as free seating phone
Key P1	System menu	System menu
Key P2	Voice mail menu	Free seating: Log in/out
Key P3	Request a callback	Request a callback
Key P4	Empty <sup>1)</sup>	Empty <sup>1)</sup>
Key P5	Empty <sup>1)</sup>	Empty <sup>1)</sup>
Key P6	Empty <sup>1)</sup>	Empty <sup>1)</sup>
Key P7	Empty <sup>1)</sup>	Empty <sup>1)</sup>
Key P8	Empty <sup>1)</sup>	Empty <sup>1)</sup>

<sup>1)</sup> The key assignment is configured with an empty function.

## Overview alphanumeric keyboard

The alphanumeric keyboard can be used for entering digits and the password, for entering text and special characters, and also for quickdial. Press the relevant key repeatedly until the character you want is displayed.

The alphanumeric keyboard is configured with the characters from the following table. Please note that the actual character selection is dependent on the selected language.

1	1 .,:= _ , - ' & ( )	2 <sup>ABC</sup>	A B C 2 Ä Å Ä Å Æ Å Ç A Б В Г a b c 2 ä å ä å æ å ç а б в г
3 <sup>DEF</sup>	D E F 3 É Ê Ë Ì Í Î Ï Ñ Ò d e f 3 é ê ë ì í î ï ñ ò	4 <sup>GHI</sup>	G H I 4 Í Î Ï Й К Л g h i 4 ì í î й к л
5 <sup>JKL</sup>	J K L 5 M N O П j k l 5 м н о п	6 <sup>MNO</sup>	M N O 6 Ñ Ò Ó Ô Õ Ö Ø Р С Т У m n o 6 ñ ò ó ô õ ö ø р с т у
7 <sup>PQRS</sup>	P Q R S 7 Ъ Ф Х Ц Ч p q r s 7 ъ ф х ц ч	8 <sup>TUV</sup>	T U V 8 Û Ü Ý Þ ß Щ Ъ Ы t u v 8 ü ý þ ß щ ъ ы
9 <sup>WXYZ</sup>	W X Y Z 9 Ъ З Ю Я w x y z 9 ъ з ю я	0	0 +
*	* <Space>	#	# / \ @ \$

## Entering text

**Digit and letter input:** In text mode, press the key repeatedly until the desired character appears in the display.

**Correcting the input:** Use the navigation key to the left to correct any incorrect character.




**Confirming the input:** An input or selection can be confirmed using the *Execute* softkey.





**Exiting the editor without saving:** With the *Cancel* softkey or the done key, you can cancel the input without saving or go back to the idle state in the menu.






## LED overview

Depending on the situation or status, the message LED on the phone or the LED on the function key/line key lights up.

Message LED	State	Description
	Flashes fast	<ul style="list-style-type: none"> <li>Incoming call</li> <li>Appointment call</li> </ul>
	Flashes slowly	New voice messages
	Lit	Phone locked

LED on line key	State	Description
	Does not light up	Line free
	Flashes fast	<ul style="list-style-type: none"> <li>Incoming call</li> <li>Appointment call</li> </ul>
	Flashes slowly	Call party on hold. Call be answered on any phone.
	Lit	Active connection

LED function key or busy lamp field key <sup>1)</sup>	State	Description
	Does not light up	<ul style="list-style-type: none"> <li>Function is deactivated</li> <li>User free (busy lamp field)</li> </ul>
	Flashes fast	User is being called (Busy lamp field)
	Lit	<ul style="list-style-type: none"> <li>Function is activated</li> <li>User busy (busy lamp field)</li> </ul>

<sup>1)</sup> Aastra 6865i only

## Using expansion key modules

**The connection of expansion key modules to your phone (Aastra 6865i only) gives you additional, freely configurable keys.**

### Expansion key module Aastra M680i

You can connect up to three Aastra M680i expansion key modules next to each other on your phone. The Aastra M680i has the following properties:

- 16 configurable keys. Three expansion key modules would then give you an additional 48 configurable keys.
- Each key has an LED for visual signalling.
- The keys on the expansion key module support all key types that are supported by your phone's keys.
- The configurable keys of the expansion key module can be operated as the configurable keys of your phone.
- The key configuration must have been made either by your system administrator or by yourself in the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).
- Labels for key identification (see chapter "[Using labels](#)", page 20).



## Expansion key module Aastra M685i

You can connect a Aastra M685i expansion key module<sup>[a]</sup> to your phone. In addition, you can connect two Aastra M680is. The Aastra M685i has the following properties:

- Coloured touchscreen
- Three key levels of 28 configurable keys each (84 configurable key in total). One Aastra M685i and two Aastra M680i would then give you an additional 116 configurable keys.
- Each key has an LED for visual signalling.
- The keys on the expansion key module support all key types that are supported by your phone's keys.
- The configurable keys of the expansion key module can be operated as the configurable keys of your phone.
- The key configuration must have been made either by your system administrator or by yourself in the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).
- If you remove an expansion key module or if you modify the order of the connected expansion key modules, the keys configuration does not change.
- The display contrast setting and the display backlight is taken from your phone.



No.	Key	Description
1		<b>Function keys A1-A84</b> (3 key levels of 28 keys each)  Free configurable keys An LED is located next to each function key signalling the functional state
2		<b>Function key for level 1, 2, 3</b>  Call up the desired level.

## Using labels

### Printing and attaching the labels

Labels can be created and printed using the Aastra Self Service Portal (see chapter "Aastra Self Service Portal", page 7).

#### **Aastra 6863i / Aastra 6865i:**

1. Label the write-on labels via the Aastra Self Service Portal and print them (important printing setting: "Page scaling for printing: None").
2. Cut out the labels according to the crop marks.
3. Remove the cover and insert the label into the recess.
4. Re-insert the cover into the recesses on the keypad.

#### **Aastra M680i (Aastra 6865i only):**

1. Label the write-on labels via the Aastra Self Service Portal and print them (important printing setting: "Page scaling for printing: None").
2. Cut out the labels according to the crop marks.
3. Remove the cover and insert the label into the recess.
4. Re-insert the cover into the recesses on the keypad.

# Phoning

The following sections explain the supplementary features provided by your phone for more efficient use.

---

<i>Making calls.....</i>	<i>22</i>
<i>Initiating calls .....</i>	<i>24</i>
<i>Using functions before/while in a call.....</i>	<i>29</i>
<i>Using further functions.....</i>	<i>39</i>
<i>Overview of available functions .....</i>	<i>44</i>
<i>Organising absences from the desk.....</i>	<i>47</i>
<i>Operating call lists and voice messages.....</i>	<i>51</i>
<i>Organisation within the team (busy lamp field, Aastra 6865i only) .....</i>	<i>53</i>
<i>Line key on a key telephone.....</i>	<i>54</i>
<i>Using functions with OpenCount.....</i>	<i>56</i>
<i>Setting functions by remote control .....</i>	<i>57</i>

---

## Making calls

This section explains how to set your calls.

### Answering, ending or rejecting a call

**Answering a call:** The phone rings and the message LED and line key LED flash. If the caller's phone number is received, it is shown on the display. If the phone number is stored in the private phone book or in the Aastra 400 communication system, the display also shows the corresponding name.

**Open listening:** With the open listening mode function, the loudspeaker is activated in addition to the handset so that other people in the room can listen to the call. You can continue with the call as usual using the handset.

**Rejecting a call:** As long as you have not picked up a call, you can reject a call during the ringing phase.



#### Answering a call with the handset:

Pick up the handset.



#### Answer a call with the line key

Press the line key and pick up the handset.



#### Open listening during a call:

Activate: Press the Loudspeaker key<sup>1)</sup>.

Deactivate: Press the Loudspeaker key a second time.



#### End a call in open listening mode

Press the Loudspeaker key and pick up the handset.

#### Note:

If you merely replace the handset, the phone switches to the hands-free mode.



#### Ending a call:

Put the handset on-hook or press the End key.



#### Rejecting a call:

Press the End key during the ringing phase.

<sup>1)</sup> The Loudspeaker key shown corresponds to the key on the Aastra 6865i.

## Using your phone in handsfree mode

You want other people to join the conversation or to have your hands free while making the call.

The handsfree mode function activates the loudspeaker and the microphone. Make sure the hands-free microphone is not obstructed. The sound quality is improved if you set the volume of your phone to a low setting.



#### Answering/ending a call in handsfree mode:

Answer: Press the loudspeaker<sup>1)</sup> or the line key.  
End: Press the End key.



#### Handsfree during a call:

1. Press the Loudspeaker key.  
→ Open listening is activated.
2. Put the handset on-hook.  
→ Handsfree is activated.



#### To continue the call with the handset:

Pick up the handset.  
→ The loudspeaker and hands-free microphone are now deactivated.



#### Ending a call:

Put the handset on-hook.

<sup>1)</sup> The Loudspeaker key shown corresponds to the key on the Aastra 6865i.

## Muting the microphone

In the middle of a call you want to talk briefly with other persons in the room without your call partner hearing your conversation.

You can switch the microphone on and off during a call, regardless of whether you are using the handset, headset or handsfree system.



#### Switching the microphone on and off during a call:

Activate: Press Microphone key.  
Deactivate: Press the Microphone key once again.  
→ The microphone is activated/deactivated. The LED on the Microphone key flashes/does not flash (Aastra 6865i only).

## Using a headset (Aastra 6865i only)

To make a phone call with the headset.

If you answer a call in headset mode using the Loudspeaker key, the call is provided on the headset. Alternatively you can also answer the call by picking up the handset.

All the headset mode configuration possibilities can be found in chapter "[Setting the audio properties](#)", page 61. Further information can be found in the user's guide for your headset.



**Answering a call with the headset:**  
Press the key on the headset or the Loudspeaker key.



**Ending a call with the headset:**  
Press the key on the headset or the Loudspeaker key.

## Initiating calls

This section explains some convenient features provided by your phone for making a call.

### Dialling with the phone number

You want to call someone and key in that person's phone number.

With call preparation you can enter a phone number without it being dialled automatically, so you have time to check the number and, if necessary, correct it. The number is not dialled until you go off-hook, for example by picking up the handset.

<Call number>



**Dialling with the phone number:**  
Enter a phone number in call preparation.  
Use the navigation key to the left to delete any incorrect character.



Pick up the handset or press the *Dial* softkey.

### Dialling from the phone book (directory lookup)

You want to make a call by entering a name.

With directory lookup, you can search for an contact in your private phone book, system phone book or a connected external phone book. The response time may vary depending on the size and the number of phone books connected. The following search options are available:

Menu	Description
<i>Quickdial</i>	With Quickdial you only need to press the digit keys for each letter once, even though each key is assigned several letters. An efficient algorithm provides quick search results.
<i>Dial by name</i>	Enter the corresponding letter for dialling by name. The surname and first name have to be separated by a space (*-key).




Menu	Description
<i>Advanced search</i>	If you select <i>Advanced search</i> , you can search directly in the connected external phone books. This function is not available if no external phone book is connected. The surname, first name and town each have to be separated by a space, for example "no s so" for Noble Stephen in Solothurn.

Tips for search input:

- Press each of the corresponding digit keys once for the first few letters of the name you are looking for. For each letter, the display shows the corresponding digit, for example a "6" for the letter "n".
- Ask your system administrator whether you should start with the surname or the first name.
- The search function is not affected by upper/lower case and special characters.
- More information on the phone books can be found in the chapter "Phone books management", page 65.


Menu



**Directory lookup:**


Press the function key for *Menu*.

Directory Lookup




Scroll to *Directory Lookup* and press the navigation key to the right.

<Directory Lookup>



Scroll to *Quickdial*, *Dial by name* or *Advanced search* and press the navigation key to the right.

<Name>




**Directory lookup with quickdial:** Enter the first few letters of the name you are looking for using the corresponding digits.

**Directory lookup with dialling by name:** Enter the first few letters of the name you want.


**Directory lookup with advanced search:** Enter the first few letters of the name you are looking for and the town (each separated by a space).

Enter




Press the *Enter* softkey.

→ Names list (or *List empty*, if the phone is unable to find a matching user) is displayed.



Scroll through the list and select the user you want.



Pick up the handset.

→ The phone number displayed is dialled.

## Dialling from the call list

You want to call a user from one of the three call lists. You can choose from the following call lists:

 
Call list	Description
<i>Unanswered calls</i>	List of callers who tried to reach you when you were absent.
<i>Answered calls</i>	List of calls answered.
<i>Redial list</i>	List of calls made.

Your phone automatically stored the person's phone number and name in a call list in the Aastra 400 communication system. Within the one number user concept (see chapter "One number user concept", page 7) you can call back users through one of these call lists. The individual call lists include a maximum of 30<sup>[a]</sup> entries per list. Information on call lists can be found in the chapter "Editing options for the call list", page 51.

The call lists can be operated via the Call list key, the Redial key, the system menu, or a function key (see chapter "Configuring keys", page 69).

### Aastra 6863i:


Menu



**Call list for unanswered/answered calls:**


Press the function key for *Menu*.

Call list




Scroll to *Call list* and press the navigation key to the right.

Unanswered/Answered




Scroll to *Unanswered* or *Answered* and press the navigation key to the right.

→ The display shows a list of the last unanswered/answered calls.



Scroll through the list until the user you want is displayed.



Pick up the handset.

→ The call number of the user is dialled.


**Note:**

Once the call has been successfully connected, the entry is deleted from the unanswered call list.


### Aastra 6865i:

Call list for unanswered/answered calls:

Press the call list key.



Unanswered/Answered



Scroll to *Unanswered* or *Answered* and press the navigation key to the right.

→ The display shows a list of the last unanswered/answered calls.



Scroll through the list until the user you want is displayed.



Pick up the handset.

→ The call number of the user is dialed.

**Note:**

Once the call has been successfully connected, the entry is deleted from the unanswered call list.



**Redial list:**

Press the Redial key.

→ List of the last dialed entries is displayed.



To scroll through the call numbers last dialed, press the navigation key downwards.



Pick up the handset.

→ The call number of the user is dialed.

## Dialling with a configurable key

You want to call someone whose phone number is stored under a configurable key.

To find out how to configure a configurable key, refer to the chapter "[Configuring keys](#)", page 69.



**Phoning with the handset:**

1. Pick up the handset.

2. Press the desired configurable key.

→ The phone number is dialed.



**Using your phone in handsfree mode:**

Press the desired configurable key.

→ The phone number is dialed.

## Dialling with the line key

You want to make a call via a line key.

**Aastra 6863i:** You can make a call via a line key. Your phone is equipped with two dedicated line keys with LED (L1, L2).

**Aastra 6865i:** You can make a call via a line key. Your phone is equipped with two dedicated line keys with LED (L1, L2). Your system administrator can set up to seven additional line keys (making a total of nine). The actual number of line keys depends on the system configuration. Press a fix line key directly or select a line by pressing the horizontal navigation key to the right or left. The display will show the line number (L1, L2 etc.).

You can switch the line by pressing the key. The active call is automatically put on hold locally.

<Call number>



### Dialling with the line key:

Enter the phone number.

Press a free line key.

→ The phone number is dialled. The LED on the line key lights up.

### Holding the call and switching lines:

1. Press a second, free line key or select a new line key with the horizontal navigation key.

2. Enter the phone number.

→ The call is held on line key 1 and the call on line key 2 is active.

### Note:

Press line key 1 to return again to the call party on line 1 (see also chapter "Broker-ing between an enquiry call party and your call partner", page 32).

## Activating another Aastra phone for making calls

You want to make a call on another Aastra phone using your personal settings, for example on a colleague's phone or in a meeting room.

You can activate another Aastra phone to make an internal or external call using your personal settings, even if the phone is locked for external calls. You can activate the phone for a business or private call. Once you have activated the phone using a function code and your PIN, dialling by your private phone book is available. The called party's display shows your personal phone number and not the number of the phone from which you are making your call. Any call charges incurred will be charged to you.

<Function code>



### Business calls:

1. Enter function code #36 for a business call.

2. Enter your internal phone number.

3. Enter your PIN.

4. Enter the internal or external phone number with the exchange access digit.

Pick up the handset.

→ The phone number displayed is dialled.

### Note:

When you hang up, dialling by name and your private phone book remain available for a whole minute so you can make another call.

&lt;Function code&gt;

**Private calls:**

1. Enter function code #46 for a private call.
  2. Enter your internal phone number.
  3. Enter your PIN.
  4. Enter the external call number directly, without the exchange access digit.
  5. Pick up the handset.
- The phone is now enabled; the external user is called.

**Note:**

The default PIN setting '0000' is not accepted (for more information on the PIN, see chapter "Changing the PIN", page 63).

## Private call with PIN

You want to make a private call on your phone or on another Aastra phone.

With the aid of your PIN you can use any phone to make an external call with your own personal settings, even if that phone is locked for external calls. The called party's display shows your personal phone number and not the number of the phone from which you are making your call. Any call charges incurred will be charged to you. The call number dialled is not stored in the last-number redial list.

&lt;Function code&gt;

**Private call with PIN:**

1. Enter function code #46 followed by your internal call number.
2. Enter your PIN.
3. Enter the external call number directly, without the exchange access digit.



Pick up the handset.

→ The phone is now enabled. The external user is called.

**Note:**

The default PIN setting '0000' is not accepted (for more information on the PIN, see chapter "Changing the PIN", page 63).

## Using functions before/while in a call

**This section explains the special features provided by your phone before you make a (second) call or while you are in a call.**

### Requesting a callback

You want to talk to a certain person. The person is busy or does not answer. You can make callback requests to both internal and external users. Not all providers support this function.

If the called party is busy, you can activate an automatic callback. In this case, your phone will start ringing as soon as the party you are trying to reach goes on-hook. When you pick up the handset, the person you want to call is dialled directly. If the called party does not answer, you can also request a callback. The user then obtains a message indicating your callback request on his display.

This function must be stored under a function key (see chapter "Configuring keys", page 69).

## Notes:

- You can activate only one callback at a time.
- An unanswered callback request will automatically be cancelled by the system after about half an hour.

*Request a callback*



### Activating callback:

You called someone and hear the busy tone or the ring-back tone. Press the function key for *Request a callback*.

→ Depending on the communication system you hear the acknowledgement tone.



Put the handset on-hook.

→ The display shows *Call expected*. The LED of the function key is switched on (Aastra 6865i only).

*Request a callback*



### Clear callback:

Press the function key for *Request a callback*.

→ Callback request is deleted.

## To answer the callback request

Someone has asked you to call back. The display shows *Callback*.

You cannot automatically answer a callback request on your phone. You can either enter the call number manually or you use a CTI client as for example the Aastra OfficeSuite.

<Call number>



### Answering the callback request:

Enter a phone number in call preparation.



Pick up the handset or press the *Dial* softkey.

### Note:

You cannot delete a callback request.

## Hide number

You do not want your call number to appear on the terminal display of a called party in the public network. The following options are available here:

Menu	Description
<i>Permanent</i>	The call number is never displayed.
<i>Per call</i>	Call number should only be restricted for certain calls. This function must be activated before dialling the call number.

This function must be stored under a function key (see chapter "Configuring keys", page 69).

### Notes:

- Your call number can only be hidden if you select an external call number.
- This feature depends on the range of services offered by your provider.

*Hide number*



#### Activating/deactivating calling line identification restriction permanently:

Press the function key for *Hide number*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).

*Hide number*



#### Activating CLIR per call:

1. Press the function key for *Hide number*.

2. Enter the call number and press the *Enter* softkey.

→ Call number is dialled and your own number is not displayed to the called party.

## Putting a call partner on hold

You want to briefly interrupt the active call.

You can put the call party on hold and then take them back again on the same phone.



#### Putting the active call party on hold:

Press the Hold key.

→ The call party is put on hold. The LED on the line key flashes.



#### Take back the call party on hold:

Press the Hold key or the flashing line key.

→ The call is active again.

## Enquiry call during a call

You want to call someone else briefly without losing your current call partner. Then you want to resume your conversation with your original call partner.

With the Enquiry function you can call someone else in the middle of a call and put your original call partner on hold. You can make enquiry calls to both internal and external users.



<Call number>



### Setting up an enquiry call (you are in an active call):

Press a free line key (select using the horizontal navigation key, if necessary).

Enter the call number and press the *Dial* softkey.

→ Enquiry call party is called; first call partner is put on hold.

#### Note:

If the other user does not answer, you can cancel the enquiry call with the End key and take back the first call with the flashing line key.



### Ending the enquiry call:

Press the End key.



### Retrieving the first parked call party:

Press the flashing line key.

## Brokering between an enquiry call party and your call partner

You are talking with an enquiry call party and have your first call partner on hold. You want to be able to switch back and forth between the two.

In an enquiry call you can use the brokering function to switch back and forth between an enquiry call party and the party on hold. Brokering is possible with both internal and external users. You can also broker between conference parties as a group and an enquiry call party.



### Brokering (to switch back and forth between the callers):

You are in an active call and have set up a connect to another call party with the Enquiry function.

Press the flashing line key.

→ Your call partner changes. The other call party is put on hold.



### Terminating the active call:

Press the End key.



### Retrieving the first parked call party:

Press the flashing line key.



## Making a conference call

You want to make a conference call.

Three call parties can be connected using the conference function. From the conference call you can initiate an enquiry call to someone else. You can broker between the parties of the conference and the enquiry call party. Depending on the system configuration, a conference call can consist of up to 6 conference participants. You can hold a conference call with internal and external users.

**Aastra 6863i:** This function must be stored under a function key (see chapter "Configuring keys", page 69).

### Aastra 6863i:

Conference



#### Setting up a conference (you are in an active call)

1. Press the function key for *Conference*.
2. Enter the phone number of the conference call party.
3. Press the *Dial* softkey.  
→ The conference party answers the call.
4. Press the function key for *Conference*.

#### Leaving a conference call:

- Put the handset on-hook or press the End key.  
→ The other conference parties remain in the call.

### Aastra 6865i:



#### Setting up a conference (you are in an active call):

1. Press the Conference key
2. Enter the phone number of the conference call party.
3. Press the *Dial* softkey.  
→ The conference party answers the call.
4. Press the Conference key

#### Leaving a conference call:

- Put the handset on-hook or press the End key.  
→ The other conference parties remain in the call.

## Transferring a call

You want to put your call partner through to someone else.

With the call transfer function you can connect your call partner with someone else. You can connect internal and external users with one another. You can transfer the call with or without prior notice:

Menu	Description
Call transfer with prior notice	You only transfer the call after you have first talked to the second call party yourself.
Call transfer without prior notice	Without talking to the second call party, you transfer the call to them by hanging up the handset immediately after dialling the call number.

**Aastra 6863i:** This function must be stored under a function key (see chapter "Configuring keys", page 69).

**Aastra 6863i:**

Call transfer



**Call transfer with prior notice (you are in an active call):**

1. Press the function key for *Call transfer*.
2. Enter the call number of the second call partner and press the *Dial* softkey.  
→The second call party is called; first call partner is put on hold.
3. Wait until the person has answered the call.  
→If the other user does not answer, you can cancel the second call with the *Cancel* softkey or with the End key and take back the first call.
4. Announce the call party.
5. Put the handset on-hook.  
→Your first call partner and the other person are now connected with each other.

Call transfer



**Call transfer without prior notice (you are in an active call):**

1. Press the function key for *Call transfer*.
2. Enter the call number of the second call partner and press the *Dial* softkey.  
→The second call party is called; first call partner is put on hold.
3. Wait for the first ring tone.
4. Put the handset on-hook.  
→The other party is then called directly by your first call partner.  
→Recall: If the other party does not answer, the call comes back to your phone.

**Aastra 6865i:**



**Call transfer with prior notice (you are in an active call):**

1. Press the Deflect key.
2. Enter the call number of the second call partner and press the *Dial* softkey.  
→The second call party is called; first call partner is put on hold.
3. Wait until the person has answered the call.  
→If the other user does not answer, you can cancel the second call with the *Cancel* softkey or with the End key and take back the first call.
4. Announce the call party.
5. Put the handset on-hook.  
→Your first call partner and the other person are now connected with each other.

**Aastra 6865i:****Call transfer without prior notice (you are in an active call):**

1. Press the Deflect key.
2. Enter the call number of the second call partner and press the *Dial* softkey.  
→ The second call party is called; first call partner is put on hold.
3. Wait for the first ring tone.
4. Put the handset on-hook.  
→ The other party is then called directly by your first call partner.  
→ Recall: If the other party does not answer, the call comes back to your phone.

**Take (pick up own call)**

You want to transfer a call from one phone to another without interrupting the connection (for example, from a desk phone to a cordless phone).

The take function can be used to transfer calls between your phones.

Requirement: They are within the one number user concept (see chapter "Purpose and function", page 72).

This function must be stored under a function key (see chapter "Configuring keys", page 69).

*Take*

**Picking up your own call (you are in an active call):**

- Press the function key for *Take*.  
→ After a brief moment, you are connected with the caller on another phone.

**Starting announcement**

You want to speak directly to an internal user or an announcement group via the loudspeaker - where available - without expecting an answer (similar to an intercom). The recipient is alerted to the announcement by two short signal tones. You are immediately unilaterally connected via the loudspeaker.

If the internal user has secured their phone against announcements (configuration see chapter "Activating protection against call types", page 65), you cannot speak to them using an announcement. You will get the engaged tone.

The announcement function<sup>[a]</sup> must be stored under a function key (see chapter "Configuring keys", page 69). You can either configure the function key directly with a designated user or input the call number manually each time.

## Announcement to a group:

- The announcement will only be received by phones which both have authorisation to receive announcements and are not in use.
- As soon as a user in a group picks up the handset to answer the announcement, the announcement is ended for all other users in the group.
- If receipt of announcements is not authorised on any of the phones in the announcement group or all the phones are in use, you will hear the busy tone.
- Group announcements are always conducted with a one-sided connection.
- The group number must be entered as two digits.

<Announcement>



### Start announcement to a user:

Press the function key for <announcement to a user>. Depending on the settings, enter the call number.

→ The user is alerted to the announcement by two short tones on the loudspeaker. The one-sided connection is made, you can talk.

<Announcement>



### Start announcement to a group:

Press the function key for <announcement to a group>. Depending on the settings, enter the two digit group number.

→ The user group is alerted to the announcement by two short tones on the loudspeaker. The one-sided connection is made, you can talk.

## Receiving an announcement\

You will be alerted to the announcement with two short signal tones<sup>[a]</sup> and spoken to directly via the loudspeaker across a one-sided connection. The display shows *Announcement from*.

In order to be able to receive an announcement, your phone must be neither in use nor locked against announcements (configuration see chapter "[Activating protection against call types](#)", page 65). To answer the announcement, the following options are available to you:

- You can continue the announcement as a phone call by picking up the handset.
- You can stop the announcement.

## Announcement to a group:

- The announcement will only be received by phones which both have authorisation to receive announcements and are not in use.
- As soon as a user in a group picks up the handset to answer the announcement, the announcement is ended for all other users in the group.

- If receipt of announcements is not authorised on any of the phones in the announcement group or all the phones are in use, you will hear the busy tone.
- Group announcements are always conducted with a one-sided connection.

**You will be alerted to the announcement with two short signal tones and spoken to directly via the loudspeaker.**



**Continue an announcement as a phone call:**

Pick up the handset.

→ You are on the phone with whoever started the announcement.

**Note:**

If the announcement was started to the group, all other recipients of the announcement will be excluded.



**Stop announcement:**

Press the End key.

## Recording a call

You want to record an active call with your call partner.

You can record an active conversation if you have been authorized to do so by your system administrator. Your call party can be an internal or an external user. The recordings are made and backed up only as .wave files in your individual e-mail boxes. For this, you must configure at least one e-mail address in the Aastra 400 communication system. You can find a call recording overview in your e-mail box. Contact your system administrator for more information.

You can start recording calls in the following situations:

- during an active call;
- During a conference call (with maximum two participants)
- During an incoming/outgoing call
- in call preparation;
- During dialling with a busy line.

Call recording only starts when the connection is set up. Therefore, no ring-back tones or wait tones are recorded.

Call recording is temporarily interrupted during an enquiry and an e-mail is sent with the recording made up till then. Recording restarts automatically once the call connection with the enquiry call party is set up and/or once the call connection with the first correspondent is restored.

 
The maximum recording time for each .wave file depends on the system configuration. When the predefined or maximum recording time is reached, the recording stops automatically, the file is sent to your e-mail address and a new recording starts at the same time. Contact your system administrator for more information.

This function must be stored under a function key (see chapter "Configuring keys", page 69).

**Notes:**

- Recording calls may infringe on your national data protection provisions or be permitted only under certain circumstances. If you intend to use this function notify your call party in advance.
- You cannot record a conversation involving more than two call parties (enquiry call, conference). The recording is automatically stopped if you park your call party or put him on hold.

Call recording: Start/stop




**Recording a call:**

Press the function key *Call recording: start/stop* as soon as you have an incoming/outgoing call or an active call.

→ The call is recorded. The LED on the function key is switched on (Aastra 6865i only).

Call recording: Start/stop



**Stopping the call:**

End the recording using also the *Call recording: start/stop* function key.

→ The recording is sent to your e-mail address.

**Note:**

The LED on the function key remains lit while the recording is in progress. The LED starts to flash before the recording reaches its maximum preset duration. Once the maximum duration is reached (or the memory is full), the recording is stopped and the LED goes off (Aastra 6865i only).

## Activating do not disturb

You do not want to receive any calls for the time being.

With the do not disturb function, you can stop calls being made to you if you are busy in a call or are not otherwise able to take any calls. Your incoming calls are automatically forwarded to a corresponding destination that has been configured by your system administrator.

Menu	Description
<i>Do not disturb (busy) on/off</i>	Your phone does not ring and is set to busy for incoming calls.
<i>Do not disturb (forwarding) on/off</i>	Your phone does not ring and is set to busy for incoming calls. Incoming calls are automatically forwarded to a destination that has been configured by your system administrator.

This function must be stored under a function key (see chapter "[Configuring keys](#)", page 69).

*Do not disturb on/off*



#### **Activating/deactivating do not disturb:**

Press the function key for *Do not disturb (busy) on/off* or *Do not disturb (forwarding) on/off*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only). Your callers hear the busy tone.

## **Using further functions**

**This section explains some more convenient features provided by your phone. All the functions you can save under a configurable key can be found in chapter "[Overview of available functions](#)", page 44.**

### **Activating personal call routing**

You want to specify which of your phone shall ring when you receive a call.

If your system administrator has set up a phone number with several phones for you as well as the five call routings (One-number user concept, see chapter "[One number user concept](#)", page 7), you can specify which of your phones shall signal a call by using the personal call routing. You can only answer a call on phone where the call is signalled. Contact your system administrator for more information.

You can activate a call routing for all phones. If you have not configured a call routing, the default setting (all phones are ringing) is used as standard.

Operation of personal call routing is available via the system menu. The function can also be configured to a function key by your system administrator (see chapter "[Configuring keys](#)", page 69) or by yourself in the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).

The following options are available for further editing of the personal call routing:

Menu	Description
<i>Activate</i>	Activating personal call routing.
<i>Modify</i>	Renaming personal call routing.
Change settings	The personal call routing settings can only be changed by your system administrator or yourself in the Aastra Self Service Portal.
Delete	A personal call routing can only be deleted by your system administrator or yourself in the Aastra Self Service Portal.

Menu



Press the function key for *Menu*.

Call Routing



Scroll to *Call routing* and press the navigation key to the right.

→ A list of your routings is displayed.

Activate



### Activating/deactivating personal call routing

Select the call routing you want and confirm with the *Activate* > *Enter*.

→ The selected routing is activated and another is deactivated.

Modify



### Renaming personal call routing:

1. Select the call routing you want and confirm with the *Modify* > *Enter*.

2. Enter the name and confirm with the *Enter* softkey.

You can also store your individual call routing profiles on a function key and quickly activate or deactivate your desired call routing profile by simply pressing that key.

<Call routing profile>



Press the function key for the desired call routing profile.

→ Call routing is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).

## Activating ring alone

You want to specify which of your phone shall ring when you receive a call.

When your system administrator has set up a phone number with several phones (One-number user concept, see chapter "[One number user concept](#)", page 7), you can define on which phones a call shall acoustically be signalled using ring alone. When you have activated ring alone on a phone, the acoustic ringing tone is deactivated for all other phones. An incoming call is signalled in the display of all phones. You can answer the call on each of your phones.

### Note:

When you have activated ring alone but deactivated the personal call routing for a phone in parallel, an incoming call is not acoustically but only visually signalled.

This function must be stored under a function key (see chapter "[Configuring keys](#)", page 69).

Ring Alone on/off



### Activating/deactivating ring alone

Press the function key for *Ring Alone on/off*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).



## Locking/Unlocking your phone

You need to leave your desk and want to ensure that no-one can alter your phone's settings, look at your private data, or make calls from your phone.

You can lock your phone with a PIN consisting of two to ten digits, (see chapter "[Changing the PIN](#)", page 63).

This function must be stored under a function key (see chapter "[Configuring keys](#)", page 69).

*Phone lock on/off*



*Phone lock on/off*



### Activate the phone lock:

Press the function key for *Phone lock on/off*.

→ The phone is locked and can only be unlocked using your PIN.

### Deactivate the phone lock:

1. Press the function key for *Phone lock on/off*.
2. Enter the PIN and confirm with the *Enter* softkey.
3. Unlock the security prompt with the *Unlock* softkey.

### Note:

Use the following function codes (see also "User's Guide Function Codes" on the [Aastra DocFinder](#)) to activate or deactivate the phone lock for all phones within the one number user concept (see chapter "[Purpose and function](#)", page 72):

- Activate the phone lock: Enter the function code \*33\* <PIN> #
- Deactivate the phone lock: Enter the function code #33\* <PIN> #

## Acknowledging an appointment call

You can set a call to remind you about an appointment, for example [Appointment call](#) is displayed as soon as it is received. Without an acknowledgement the appointment call will ring for 1 minute.

The following options are available options: You have to enter or change the time in the Aastra Self Service Portal.

Menu	Description
<i>Single appointment call on/off</i>	Activate appointment call on a one-off basis.
<i>Repeat appointment call on/off</i>	Activate appointment call permanently

This function must be stored under a function key (see chapter "[Configuring keys](#)", page 69).

### Notes:

- If you activated forwarding, the appointment call is not forwarded.
- If you are in call, the appointment call is made as soon as you end the call.

*Appointment call*



### Activates/deactivates appointment call permanently:

Press the function key for *Appointment call*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).

*Appointment call*



### Activate single appointment call:

Press the function key for *Appointment call*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).



### Confirming an appointment call:

Pick up the handset and then hang up immediately.

→ The appointment call is confirmed and ended.

## Free seating

Free Seating is proposed for workplaces/phones shared by several employees. It allows you to log in on each free free seating phone and to use it with your personal settings as long as your logged in. Ask your system administrator which phones are proposed for free seating.

### Log in:

You log in with your call number and your PIN on a free seating phone. Once you are logged in, your personal call lists, phone book and all your other personal settings and Hotkeys are available to you immediately. If your profile contains expansion key modules, but the phone you have logged in to does not, the keys in question will not be available to you. Various sequences of expansion key modules are correctly recognised.

### Notes:

- You can only log in to a phone if no other user has yet logged in to that phone for free seating purposes.
- You can only log on once to a Free Seating phone. The moment you log in to another free seating phone, you are automatically logged off the original phone.

**Log out:**

To free up a phone, you need to log off again. To ensure a phone is not blocked for other users if you forget to log off, your system administrator can set up a logoff process with an automatic time limit:

- After a certain amount of time after login (e.g. after 6 hours and 30 minutes).
- At a certain time (e.g. 6.30pm)

**Notes:**

- If no user is currently logged in a free seating phone possibly only allows emergency calls.
- As long as you do not have your own phone or are not logged on to a Free Seating phone, your caller will obtain either the busy signal or be forwarded to a preconfigured destination, depending on the system configuration.

Free seating: Log in/out



<Call number, PIN>

**Log in free seating:**

Press the *Free Seating: Log in/out* softkey.

Enter phone number and PIN and confirm with the *OK* softkey.

→ You are now logged in and can use the free seating phone with your personal settings. The LED on the function key lights up (Aastra 6865i only).

**Note:**

The default PIN setting '0000' is not accepted (for more information on the PIN, see chapter "Changing the PIN", page 63).

Free seating: Log in/out

**Log out free seating:**

Press the *Free Seating: Log in/out* softkey.

→ The display with the call number is displayed.

Depending on the system configuration enter the PIN and confirm with the *Ok* softkey.

→ You are now logged off; the free seating phone is now available again to other users.

**Note:**

You are automatically logged off if your system administrator has set up an automatic logoff process.

**Hotline**

The hotline is typically used for lift phones, emergency phones, or for baby alarms or hotline in the hospitality/hotel branch.

A user needs help and picks up the handset or presses the Loudspeaker key. The user is automatically routed to the preconfigured hotline destination number stored in the Aastra 400 communication system. The person responsible answers the call and is connected with the user seeking help.

**Alarm cancellation delay:** Your system administrator can set a delay (0-60 seconds, depending on the Aastra system phone). During this delay the user can enter another call number in order not to trigger a call on the hotline destination number. If the user does not dial another phone number during this predefined time or puts the handset back down again, a connection with the Hotline number is automatically set up. Contact your system administrator for more information.



**Using the hotline:**

User needs help. He picks up the handset of his phone or presses the Loudspeaker key.

→ A connection with the hotline number is automatically set up after a predefined time without the user having to do anything else.

## Overview of available functions

This section contains a list of all the functions you can store under a configurable key via the Aastra Self Service Portal.

More information on how to store functions under a configurable key using function commands and function codes can be found in the Aastra Self Service Portal online help (see chapter "Aastra Self Service Portal", page 7).

Function	Description
<i>Announcement to group</i>	Speak directly to a group of internal users via the loudspeaker - where available - without them having to first pick up the call. An announcement is a one-sided connection and is indicated by two short signal tones on the recipient phone. Announcement groups will be defined by your system administrator. The group number must be entered as two digits.
<i>Announcement to user</i>	Speak directly to an internal user via the loudspeaker - where available - without them having to first pick up the call. An announcement is a one-sided connection and is indicated by two short signal tones on the recipient phone.
<i>Appointment call: Repeat on/off</i>	Activates/deactivates an appointment call (see chapter "Acknowledging an appointment call", page 41).
<i>Appointment call: Single on/off</i>	Activates/deactivates an appointment call on a one-off basis (see chapter "Acknowledging an appointment call", page 41).
<i>Call forw. (CFU) to pager on/off</i>	Incoming calls are automatically forwarded to a specific destination.
<i>Call forw. (CFU) to user on/off</i>	Incoming calls are automatically forwarded to a specific destination.
<i>Call forw. (CFU) to VM on/off</i>	Incoming calls are automatically forwarded to a specific destination.
<i>Call forw. if busy (CFB) to user on/off</i>	If you are busy, incoming calls will be forwarded to specific destination (user).

Function	Description
<i>Call forw. if busy (CFB) to VM on/off</i>	If you are busy, incoming calls will be forwarded to specific destination (voice mail).
<i>Call forw. on no reply (CFNR) to pager on/off</i>	Incoming calls are automatically forwarded to another destination (pager).
<i>Call forw. on no reply (CFNR) to user on/off</i>	Incoming calls are automatically forwarded to another destination (user).
<i>Call forw. on no reply (CFNR) to VM on/off</i>	Incoming calls are automatically forwarded to another destination (voice mail).
<i>Call forwarding menu</i>	Direct access to the <i>Forward</i> system menu (see chapter " <i>Call forwarding</i> ", page 49).
<i>Call forwarding protection on/off</i>	Call forwarding to your phone is not allowed.
<i>Call list menu</i>	Direct access to the system menu <i>Call list</i> .
<i>Call list: Answered calls</i>	Call list for answered calls.
<i>Call list: Redial list</i>	Call list for dialled call numbers.
<i>Call list: Unanswered calls</i>	Call list for unanswered calls.
<i>Call recording: Start/stop</i>	Record a call. The recordings are stored in your individual e-mailbox only ( see chapter " <i>Recording a call</i> ", page 49).
<i>Call transfer</i>	Transfer a call to another user with or without prior notice.
<i>Conference: Set up</i>	Set up a conference with two call parties.
<i>Control output on/off</i>	You can control external electric equipment or installations using control outputs. For example you can use your phone to open and close electric gates or to switch the lights on or off throughout a building.
<i>Do not disturb (busy) on/off</i>	Your phone does not ring and is set to busy for incoming calls.
<i>Do not disturb (forwarding) on/off</i>	Your phone does not ring and is set to busy for incoming calls. Incoming calls are automatically forwarded to a destination that has been configured by your system administrator.
<i>Empty</i>	The key assignment is configured with an empty function. The key is not overwritten by the following key assignments.
<i>Free configurable</i>	You can use function commands to define a function to suit your personal requirements. A function can consist of one or more function commands, function codes, and the phone number. You can either carry out a function directly or store it under a key.
<i>Free seating: Log in/out</i>	Log in/out on a free seating phone (see chapter " <i>Free seating</i> ", page 42).
<i>Hide number on/off</i>	Permanently prevents your call number from being displayed to the caller (see chapter " <i>Hide number</i> ", page 31).
<i>Hide number per call</i>	Prevent your call number from being displayed to the caller once (see chapter " <i>Hide number</i> ", page 31).

Function	Description
<i>Home Alone on/off</i>	If calls to a user group can only be answered by one user, the user in question can activate Home Alone on the user group. Then if the user is already in a call, all subsequent internal or external calls to the user group obtain a busy tone.
<i>Personal call routing menu</i>	Direct access to the system menu <i>Call routing</i> (see chapter " <a href="#">Activating personal call routing</a> ", page 39).
<i>Personal call routing on/off</i>	Activate/deactivate call routing profile (under the one number user concept).
<i>Phone book: Local</i>	Access to your local phone book. Contacts in the local phone book are stored on the phone only (see chapter " <a href="#">Phone books management</a> ", page 65).
<i>Phone book: System</i>	Direct access to the <i>Directory Lookup</i> system menu. Contacts in the system phone book are integrated in the Aastra 400 communication system (see chapter " <a href="#">Phone books management</a> ", page 65).
<i>Phone lock on/off</i>	Activate/deactivate phone lock. Outgoing calls are not possible, but incoming calls can be answered (see chapter " <a href="#">Locking/Unlocking your phone</a> ", page 41).
<i>Picking up a call from a user group</i>	Pick up a call for another user in the user group.
<i>PIN call</i>	Function with OpenCount. Independently from the phone you can make external calls for a fee. The credit may be limited (see chapter " <a href="#">Activating PIN telephony</a> ", page 56).
<i>PIN call rebook</i>	Function with OpenCount. You can charge the charges and the call information of your outgoing and incoming calls to specific projects (see chapter " <a href="#">Activating PIN telephony</a> ", page 56).
<i>Presence menu</i>	Direct access to the system menu <i>Presence</i> (see chapter " <a href="#">Controlling the presence status</a> ", page 47).
<i>Presence profile on/off</i>	Activate/deactivate presence profile. You can select a presence profile (profile number 1-4, see chapter " <a href="#">Controlling the presence status</a> ", page 47).
<i>Remote maintenance on/off</i>	Allow permanent remote management access on your phone.
<i>Remote maintenance onetime on/off</i>	Allow one-time remote management access on your phone.
<i>Request a callback</i>	Request a callback if the called party is busy or cannot be reached (see chapter " <a href="#">Requesting a callback</a> ", page 29).
<i>Ring Alone on/off</i>	This function lets you specify which of your phones signals incoming calls acoustically (as part of the one-number user concept, see chapter " <a href="#">Activating ring alone</a> ", page 40).
<i>Show alarm state</i>	Display of the current alarm state.
<i>Switch group x, position 2</i> <i>Switch group x, position 3</i>	This function lets you route calls and functions via switch groups (with two switch positions).
<i>System menu</i>	Access to the Aastra 400 system menu.

Function	Description
<i>Take (pick up own call)</i>	Take a call from your phone on another phone under the one number user concept (see chapter " <a href="#">Take (pick up own call)</a> ", page 35).
<i>Transparent data</i>	This function takes charge of the transparent exchange of data between the communication server and external applications.
<i>User group all: Log in/out</i>	Log in/out of all user groups. In the user group incoming and internal calls are routed to a group of internal destinations according to a preconfigured call distribution.
<i>User group: Log in/out</i>	Log in/out of a user group. In the user group incoming and internal calls are routed to a group of internal destinations according to a preconfigured call distribution.
<i>Voice mail greeting on/off</i>	Activates/deactivates a selected voice mail greeting.
<i>Voice mail greeting: Play</i>	Plays back a selected voice mail greeting.
<i>Voice mail greeting: Record</i>	Records a selected voice mail greeting.
<i>Voice mail menu</i>	Direct access to the <a href="#">Voice mail</a> system menu.
<i>Welcome announcement on/off</i>	Announcement service for incoming internal and external calls. If you do not answer an external call after a set delay, the user who is calling will obtain an announcement. After the announcement the caller will then hear the ring-back tone again.
<i>XML function: Run</i>	You system administrator creates customer-specific XML services (weather report, stock exchange, etc.) which you can use on your SIP phone.

## Organising absences from the desk

This section explains the different options provided by your phone when you want to leave your desk.

The presence function enables you on the one hand to quickly set your personal presence state and hence to route the incoming calls to the destination you want. It also tells you directly whether the user you want is reachable or absent without you having to call him. The information details depend on the type of telephone.

### Controlling the presence status

You have a choice of 5 presence profiles for controlling your presence status:

Profile number	Presence profile
0	Available
1	Absent
2	Meeting
3	Busy
4	Not available


You can call up the presence of the user you want in the following situations.

- in the phone book or in a call list;
- during dialling by name;
- in presence menu.

**Notes:**

- Connected CTI applications can affect your presence status. Contact your system administrator for more information.
- All configuration options for a presence profile can be found in chapter "Configuring presence profile", page 68.

Operation of the presence status is available via the system menu, a function key (see chapter "Configuring keys", page 69), or the Aastra Self Service Portal (see chapter "Aastra Self Service Portal", page 7).

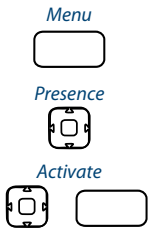

**To deactivate the presence profile:**  
Press the function key for *Menu*.  
  
Scroll to *Presence* and press the navigation key to the right.

1. Select the presence profile you want and press the *Enter* softkey.
2. Press the *Activate* > *Enter* softkey.

Absence information

You wish to give your caller detailed information about your absence.

If you have configured call forwarding to voice mail in your presence profile, you can choose whether the currently active greeting, the global greeting, one of your personal greetings or an absence information should be played back to the caller.



Absence information is available for each presence profile, with the exception of *Available*. Absence information consists of a language-dependent, predefined audio text. The time and/or date are also given as an option. Depending on the voice mail configuration your caller then has immediately the possibility of leaving a message.

**Example:** "The person you have called is not available until 31st January, at 14:00. Please leave a message after the tone".

The absence information is an integral part of a presence profile. All the relevant configuration possibilities can be found in chapter "Configuring presence profile", page 68.

### Note:

If your Outlook calendar is not synchronised via Open Interfaces Platform (OIP) with your communication server, you have to manually enter and delete the time and date.

Menu



### Set up the absence information:

Press the function key for *Menu*.

Presence



Scroll to *Presence* and press the navigation key to the right.

Modify



1. Select the presence profile you want and press the *Execute* softkey.
2. Scroll to *Modify* and press the *Enter* softkey.

<Absence information>



1. Scroll to *Time* respectively to *Date* and press the *Enter* softkey.
  2. Make the changes and confirm with the *Enter* softkey.
  3. Scroll to *Call forwarding* and press the *Enter* softkey.
  4. Select *Voice mail* and confirm with the *Enter* softkey.
  5. Scroll to *VM greeting* and press the *Enter* softkey.
  6. Select *Absence info* and confirm with the *Enter* softkey.
  7. Activate the presence profile.
- ➔ Settings are saved. Your caller hears the selected absence information, followed, if applicable, by time and date.

## Call forwarding

You want to leave your desk. Calls for you are to be forwarded to a different destination (e.g. another user, your voice mail). With a call forwarding you can forward incoming calls directly to a different destination.

### Notes:

- One call forwarding applies to all connected phones, in one number user concept.
- Only one call forwarding variant at a time is possible.

Available call forwarding types possibilities:


Menu	Description
No call forwarding ( <i>Call forwarding off</i> )	No CFU is carried out.
Always call forwarding, CFU ( <i>Always (CFU)</i> )	Incoming calls are automatically forwarded to another destination.
Call forwarding if busy, CFB ( <i>If busy (CFB)</i> )	Incoming calls are forwarded directly to a different destination if you are busy.
<i>Call Forwarding on No Reply</i>	Incoming calls are automatically forwarded to another destination. Both your own phone and the other destination will then start ringing. The system configuration determines whether or not there is a ringing delay at the other destination. Whoever goes off-hook first, answers the call. Depending on the system configuration, Call Forwarding on No Reply can also be activated when your phone is busy.

Available call forwarding destinations:

Menu	Description
<i>User</i>	Incoming calls are forwarded to an internal user or a call number.
<i>Voice Mail</i>	Incoming calls are forwarded to your voice mail, providing it has been set up by your system administrator. You can use the global greeting or your own greeting (see chapter " <a href="#">Configuring voice mail</a> ", page 66). For further information on voice mail refer to the "User's Guide Voice Mail Systems" on the <a href="#">Aastra DocFinder</a> .


Operation of the call forwarding is available via the system menu, a function key (see chapter "[Configuring keys](#)", page 69), or the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).

Menu



 

**Activate call forwarding:**  
Press the function key for *Menu*.

Forwarding



Scroll to *Forwarding* and press the navigation key to the right.

<Call forwarding>



Select the call forwarding variant you want and confirm with the *Enter* softkey.

&lt;Destination&gt;



Select or enter the forwarding destination you want and confirm with the *Enter* softkey.

→ The call forwarding is activated.

**Note:**

You can also enter the call number of the user you want manually or find it in a call list.

**Deactivate call forwarding:**

Call forwarding unconditional can be deactivated via: *Menu* > *Forwarding* > forwarding variant *Forwarding off*.

## Operating call lists and voice messages

In this section you will learn how to use call lists and voice messages which are stored in the Aastra 400 communication system.

### Editing options for the call list

The call lists (unanswered/answered calls and redial list) include a maximum of 30 entries each. The following options are available for further editing of the entries:

Call list	Description
<i>Delete all</i>	Deleting all entries from a specific call list.
<i>Detail</i>	Available detailed information: <ul style="list-style-type: none"> <li>• Call number / name</li> <li>• Call date and time</li> <li>• Number of call attempts</li> <li>• Presence status of the user</li> </ul>
<i>Delete</i>	Delete entry. <b>Note:</b> If you delete an entry in the unanswered calls list, then any voice messages for this entry are also deleted. Entries with voice messages that have not been retrieved cannot be deleted.
<i>Dial</i>	Calling a user back.

The call lists can be operated via the Call lists key, the system menu or a function key, or via the Redial key (see chapter "[Configuring keys](#)", page 69).

Information on call lists can be found in the chapter "[Dialling from the call list](#)", page 26.

**Options in the call list:**

Press the call list button.

&lt;Call list&gt;



1. Scroll to the call list you want and press the *Enter* softkey.
2. Scroll through the list until the user you want is displayed.



**Calling a user from the call list:**

- Pick up the handset.
- The call number of the user is dialed. Once the call has been successfully connected, the user is deleted from the unanswered call list.

*Detail*



*Delete*



*Delete all*



**Calling up detailed information on an entry:**

1. Select the entry you want and press the *Enter* softkey.
2. Call up detailed information with the *Detail* > *Enter* softkey.

**Deleting an entry from the call list:**

1. Select the entry you want and press the *Enter* softkey.
2. Delete the entry with the *Delete* > *Enter* softkey.

**Deleting all entries from the call list:**

1. Select an entry and press the *Enter* softkey.
2. Delete all entries with the *Delete all* > *Execute* softkey.

## Editing options for voice messages

Your display shows the envelope symbol and the number of new voice messages. The message LED flashes red slowly.


The following options are available for further editing of the voice messages:

Menu	Description
<i>Detail</i>	Available detailed information: <ul style="list-style-type: none"><li>• Call number / name</li><li>• Call date and time</li></ul>
<i>Delete</i>	Delete voice message
<i>Forward</i>	Forwards a voice message to another user. You can decide whether to keep a copy of each voice message.
<i>Play</i>	Play voice message.

**Notes:**

- Depending on the system configuration your system administrator can specify that you are notified by e-mail whenever you receive a new voice message (with the voice message attached). Contact your system administrator for more information.
- To find out how to configure a voice mail, refer to the chapter "[Configuring voice mail](#)", page 66 or to the "[User's Guide Voice Mail Systems](#)" user's guide on the [Aastra DocFinder](#).

Operation of the voice messages is available via the system menu, a function key (see chapter "[Configuring keys](#)", page 69), or the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).

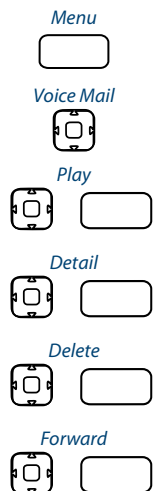**Options in the voice mail:**

Press the function key for *Menu*.

Scroll to *Voice Mail* and press the navigation key to the right.

→ The list of received voice messages is displayed.

**Play voice message:**

1. Select the entry you want and press the *Enter* softkey.
2. Play the entry with the *Play > Enter* softkey.

**Calling up detailed information on a voice message:**

1. Select the entry you want and press the *Enter* softkey.
2. Call up detailed information with the *Detail > Enter* softkey.

**Delete voice message:**

1. Select the entry you want and press the *Enter* softkey.
2. Delete the entry with the *Delete > Enter* softkey.

**Forwarding voice messages:**

1. Select the entry you want and press the *Enter* softkey.
2. Press the *Forward > Enter* softkey.
3. Select the call number you want and press the *Enter* softkey.
4. If you wish to keep a copy of the voice message, answer the questions with the *End > Yes > Enter* softkey.

## Organisation within the team (busy lamp field, Aastra 6865i only)

**This section explains the different options provided by your phone to communicate in a team.**

### Using the busy lamp field key

You and your team partners want to be reachable at all times as a team and be able to communicate with one another as quickly as possible.

By pressing a single key you can call a team partner or answer a call for anyone in the team. When a team partner makes a call, the LED for the corresponding busy lamp field key lights up. This tells you when a team partner is busy. The busy lamp field key LED flashes to indicate that the team partner is receiving a call.

To be able to use the busy lamp field key, it must have been configured as such with the call number of the team partner, either by your system administrator or by yourself in the Aastra Self Service Portal (see chapter "Configuring keys", page 69).

### Calling a team partner

You want to call a team partner as quickly as possible.



#### Calling a team partner:

Press the busy lamp field key of the team partner.

→ The phone number and possibly the name of the team partner appear on the display. The team partner is called.

### Answering a call for a team partner

Your team partner is called. The LED on the busy lamp field key flashes. You know that your team partner is not at his desk at present and therefore decide to answer the call.

You take over the call by pressing the busy lamp field key. As soon as you have answered the call, your team partner is free again.



#### Answering a call for a team partner:

Pick up the handset as long as the busy lamp field key LED is flashing.

→ You hear the dialling tone.



Press the busy lamp field key.

→ You are through to the person who is calling your team partner.

## Line key on a key telephone

**This section explains the different options provided by your phone when your system administrator has assigned one of more configurable keys as KT line keys. KT line keys make your phone a key telephone.**

A KT line<sup>[a]</sup> has a number which can be used for internal or external calls. One or usually multiple phones can be connected to this KT line, for example in all employees in a travel agency who work with Europe as a destination. The KT line key belonging to the KT line shows the status of the KT line through an LED and allows you to accept calls which are made to this KT line.

Your phone becomes a key telephone as soon as your system administrator has assigned a KT line to a configurable key. With the configuration of a KT line key, your system administrator will also set up a personal line on which you can make your personal calls.

KT lines are only possible on function keys T1 to T20 (Aastra 6867i) or T1 to T40 (Aastra 6869i).

## Answering a call on the KT line key

You are being called on one or more KT line keys. The KT line key(s) flash quickly. You want to answer a call on a KT line key.

If you want to answer a call on another KT line key first, press this KT line key in order to pick up the call. If you pick up the handset without pressing a KT line key, you will be connected to the highest priority KT line.



Pick up the handset.

→ Connection to the KT line with the highest priority.

**Or:**

1 Press a KT line key.

→ KT line is selected.

2 Pick up the handset.

→ Connection to the selected KT line.

## Initiating a call via a KT line key

You want to make a call via a KT line key.

You can call via any free KT line key. Each KT line key has its own call number. This means that, by phoning, you transmit the call number associated with the active KT line key.

Charges are accrued separately for each KT line key.

<Call number>



Enter the phone number.



Press a free KT line key.

→ The LED on the KT line key lights up. KT line is selected.



Pick up the handset.

→ The phone number is dialled.

## Using functions with OpenCount

OpenCount is a software package used for the call logging management on the communication system. The application can be integrated into your Aastra 400 communication system and enables the logging, the administration, and the analysis of all call and connection data.

If an OpenCount is integrated in your Aastra 400 communication system, the following additional features are also available on your phone.

### Activating PIN telephony

The PIN telephony is part of OpenCount. The possible applications of the PIN telephony depend on the area of use, for example in the area of health care and accommodation/hotel:

- Independently from the phone you can make external calls for a fee. The credit may be limited.
- You can charge the charges and the call information of your outgoing and incoming calls to specific projects.

This function must be stored under a function key (see chapter "Configuring keys", page 69).

For further information refer to the product-specific OpenCount user's guides on our website ([www.aastra.com](http://www.aastra.com)) or contact your system administrator.

*PIN call / PIN call rebook*



#### Activating/deactivating PIN call:

Press the function key for *PIN call / PIN call rebook*.

→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).



## Setting functions by remote control

**This section explains how you can alter your phone's settings even if you are not directly at your phone.**

You are not at your desk and want to set various functions on your phone from a different phone.

You can activate/deactivate many of your phone's functions by remote control from a different phone.

The remote control is initiated using a special function code. You can then enter the function commands and function codes.

<Function code>



### Using remote control from a third-party phone:

1. Enter function code #06.
2. Enter your phone number.
3. Enter your PIN.
4. Enter the function code for activating/deactivating the function you want.

Pick up the handset.

→ You hear the acknowledgement tone.

Put the handset on-hook.

→ The function is activated/deactivated.

### Note:

The default PIN setting '0000' is not accepted (for more information on the PIN, see chapter "Changing the PIN", page 63).

# Personalizing your phone

These sections explain how to adapt the phone’s basic settings to suit your personal requirements.

---

<i>Configuring the display</i> .....	59
<i>Configuring the audio properties</i> .....	59
<i>Configuring general phone settings</i> .....	62
<i>Protecting yourself against calls</i> .....	65
<i>Phone books management</i> .....	65
<i>Configuring voice mail</i> .....	66
<i>Configuring presence profile</i> .....	68
<i>Configuring keys</i> .....	69

---

## Configuring the display

This section explains how to set display properties.

### Setting the display

You may find the display is too bright or too dark.

You can adapt the display to suit your personal requirements with the following settings:

Display	Description
<i>Contrast level</i>	Setting the display contrast.
<i>Backlight</i> (Aastra 6865i only):	Setting the backlight:
<ul style="list-style-type: none"> <li><i>Off</i></li> <li><i>Auto</i></li> </ul>	<ul style="list-style-type: none"> <li>The backlight is always deactivated.</li> <li>The backlight is switched on automatically when the phone is used and switched off automatically when the phone is in an idle state for a certain period of time.</li> </ul>



Press the Option key.

*Preferences*



Scroll to *Preferences* and press the navigation key to the right.

*Display*



Scroll to *Display* and press the navigation key to the right.

*Contrast level*



#### Setting the contrast:

1. Scroll to *Contrast level* and press the navigation key to the right.
2. Set the desired contrast using the horizontal navigation key and confirm with the *Select* softkey.

*Backlight*



#### Setting the backlight:

1. Scroll to *Backlight* and press the navigation key to the right.
2. Select the required setting and confirm with the navigation key to the right.

## Configuring the audio properties

 
This section explains how to set audio properties.

### Adjusting the volume

You want to change the volume of the ring tone or the handset during a call.

**Ring volume:** You can adjust the volume when in the idle state or when the ring tone sounds. Press and hold the volume down button to switch off the ring tone completely.

**Handset volume:** You have to set the volume of handset and loudspeaker separately. The new volume will remain stored even after the call is ended.



**Adjusting the volume (in idle state, during ringing phase/call):**  
Quieter: Press the key.  
Louder: Press the key.

## Setting the ringing properties

You want to change the way in which your phone rings. Available settings:

Ring tones	Description
<i>Tones:</i>	
<ul style="list-style-type: none"><li>• <i>Ring tone 1...15</i></li><li>• <i>Silent</i></li></ul>	<ul style="list-style-type: none"><li>• Selection of available ring melodies.</li><li>• If you do not want to be disturbed during a certain time, you can set your phone not to ring with Suppress ring tone.</li></ul>
<i>Tone set</i>	Country-specific ring tone settings. This menu is set by your system administrator.



**Setting the ring:**  
Press the option key.

*Preferences*



Scroll to *Preferences* and press the navigation key to the right.

*Tones*



Scroll to *Tones* and press the navigation key to the right.

*Ring tone*



1. Scroll to *Ring tones* and press the navigation key to the right.
2. Select the setting you want and confirm with the *Set* softkey.

**Note:**

A list of alarm melodies is available for playback: *Menu > Alarm melodies > Test*.

## Setting the audio properties

Using your phone, you can make and answer calls using the handset, headset or hands-free system. The audio settings allow the use of different combinations of these three operation modes in order to achieve maximum flexibility in phone operation. The following options are available for selection:

Audio settings	Description
<i>Audio Mode</i> <sup>1)</sup> : <ul style="list-style-type: none"> <li>• <i>Speaker</i></li> <li>• <i>Headset</i></li> <li>• <i>Speaker/Headset</i></li> <li>• <i>Headset/Speaker</i></li> </ul>	Setting possibilities: <ul style="list-style-type: none"> <li>• The connection is made via loudspeaker. The LED on the loudspeaker key stays lit.</li> <li>• The connection is made via headset. The LED on the loudspeaker key flashes slowly.</li> <li>• The connection is made via handsfree system. The LED on the loudspeaker key lights up. Press the handsfree key to switch to the headset.</li> <li>• The connection is made via headset. The LED on the loudspeaker key lights up. Press the handsfree key to switch to handsfree mode.</li> </ul>
<i>Headset Mic Vol</i>	Sets the volume of the headset microphone.
<i>DHSG</i>	Activate/deactivate DHSG. Phoning using a cordless headset based on the DHSG standard allows you to set up and to end calls from the headset. Ask your dealer which headsets are particularly well suited for this phone. To avoid damages on the phone always disconnect the phone from the mains power first before you install a DHSG headset.

<sup>1)</sup> All setting possibilities for the headset only apply to the Aastra 6865i.

### Notes:

- To find out how to make phone calls with the headset, refer to the chapter "Using a headset (Aastra 6865i only)", page 23.



Press the Option key.

*Preferences*



Scroll to *Preferences* and press the navigation key to the right.

*Set Audio*



Scroll to *Set Audio* and press the navigation key to the right.

Audio mode



Setting the audio mode:

- 1. Scroll to *Set Audio* and press the navigation key to the right.
- 2. Select the setting you want and confirm with the *Set* softkey.

Headset Mic Vol



Setting the headset volume (Aastra 6865i only):

- 1. Scroll to *Headset Mic Vol* and press the navigation key to the right.
- 2. Select the setting you want and confirm with the *Set* softkey.

## Configuring general phone settings

This section explains other settings you can make on your phone.

### Selecting the language

You wish to select a different user language for your display.

The user language on your phone is configured using the Aastra Self Service Portal. For more information about the Aastra Self Service Portal, please refer to chapter "[Aastra Self Service Portal](#)", page 7.

The language selection is limited to five languages. If the language you want is not available, then your system administrator can upload additional language packs. English is the standard language and is contained in every language pack.

### Selecting the time and date

The settings for the time and date are made by your system administrator. The following chapter is thus intended for your system administrator or technician, who will then set the time and date for you.

As system administrator or technician, you can make global settings for the time and date for all Aastra SIP phones in the Aastra 400 communication system. If no NTP time server is entered in the communication system, then you can also make these settings over the phone. Available settings:

Setting	Description
<i>Time format</i>	12-hour or 24-hour clock format.
<i>Daylight savings</i>	List of available summer time formats.
<i>Date format</i>	List of available date formats.
<i>Time zone</i>	List of available global time zones.

Setting	Description
<i>Time server 1-3</i>	Setting menu for the IP address or domain name of the time server. If a valid time server is set, then the phone synchronises the displayed time with the specified configuration server. The phone adopts the time from time server 1. If this is not configured or cannot be reached, then the phone queries first time server 2 and then 3.



Press the Option key.

*Preferences*



Scroll to *Preferences* and press the navigation key to the right.

*Time/date*



Scroll to *Time/date* and press the navigation key to the right.

<Setting>



Scroll to the setting you want and press the navigation key to the right.

*Set*



Select the setting you want and confirm with the *Set* softkey.

## Using Live Dialpad (single-digit dialling)

Activates or deactivates the Live Dialpad. This local function is not supported by the Aastra 400 communication system.

## Using speed dial edit

Menu for configuration of the keypad speed dial. This local function is not supported by the Aastra 400 communication system.

## Changing the PIN

You want to change the PIN used to lock/unlock your phone and protect your phone settings (more information about locking/unlocking your phone can be found in chapter "[Locking/Unlocking your phone](#)", page 41).

The digit combination "0000" is set as default. You can select any 2 to 8-digit combination for your new PIN. The PIN on your phone is changed using the Aastra Self Service Portal. For more information about the Aastra Self Service Portal, please refer to chapter "[Aastra Self Service Portal](#)", page 7.

**Note:**

The PIN you have locally changed in your phone cannot be overwritten via the Aastra Self Service Portal.

### Enter the display text for the idle state

You want to change the text displayed by your phone in the idle state.

The display text shown in the idle state on your phone is configured using the Aastra Self Service Portal. For more information about the Aastra Self Service Portal, please refer to chapter "[Aastra Self Service Portal](#)", page 7.

### Local IP settings

The specific data for your phone, such as IP address or memory, is stored in the option key menu > or [Menu](#) > [Information](#). The input of this data is password-protected; it can therefore only be carried out by your system administrator. You can however call up the data.

**Calling up the phone status:**

Press the Option key.

[Phone status](#)



Scroll to [Phone status](#) and press the navigation key to the right.

→ Settings are displayed.

[Menu](#)

**Calling up the system menu:**

Press the [Menu](#) softkey.

[Information](#)



Scroll to [Information](#) and press the navigation key to the right.

→ Settings are displayed.

### Restarting the phone

You want to restart your phone. You have to restart your phone after the following actions:

- Uploading a new language pack or updating a newly selected language.
- Uploading new phone software.
- Confirming new settings.





Press the Option key.

*Restart phone*



1. Scroll to *Restart phone* and press the navigation key to the right.
2. Answer the security question with *Yes*.  
→ The phone is restarted.

## Protecting yourself against calls

**The protection function helps to protect yourself against other users applying telephony features on you via menu guidance or using function codes.**

### Activating protection against call types

You want to protect yourself against certain types of calls.

A function key can be configured for the call forwarding protection function (see chapter "[Activating do not disturb](#)", page 38).

Protection for all other call types is configured using the Aastra Self Service Portal. For more information about the Aastra Self Service Portal, please refer to chapter "[Aastra Self Service Portal](#)", page 7.

## Phone books management

**This section includes important information on your phone books.**

### Selection

If your phone is connected to an Aastra 400 communications system, then the following phone books can be selected:

#### System phone book:

The system phone book contains the contacts of the users on the Aastra 400 communication system and your private contacts, to which only you have access. It is integrated into the Aastra 400 communication system by your system administrator.

With the help of quickdial and dialling by name in the system phone book, you can search for and call both a contact in the Aastra 400 communication system and in your private phone book.

#### Local phone book:

Aside from the system phone book, your phone also has a local phone book. This can be assigned to a function key.

The local phone book is not supported by the Aastra 400 communication system. This implies that contacts saved in this local phone book are only available on your Aastra SIP phone. The search function in the system phone book (quickdial and dialling by name) does not search in the local phone book.

**Private contacts:**

We recommend using the following products to manage your private contacts:

- Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).
- Aastra OfficeSuite
- External directories, such as Microsoft Exchange (provided your Aastra 400 communication system is synchronised with external directories).

**Note:**  
Searching using the phone books is explained in more detail in the chapter "[Dialling from the phone book \(directory lookup\)](#)", page 24.

## Configuring voice mail

**This section explains how to set your voice mail.**

### Managing personal voice mail greeting

Depending on the system configuration you have the possibility to record up to 3 different greetings (e.g.for Absent or Vacation). Give each greeting the relevant name. Depending on the system configuration a caller may or may not be able to leave a message (for the symbols see mode).

If no personal greeting is activated or if none is available, the global greeting is activated automatically, provided it has been recorded. For further information on voice mail refer to your system administrator or the "User's Guide Voice Mail Systems" on the [Aastra DocFinder](#).

The following options are available for further editing of your voice mail greetings:

Menu	Description
<i>Record</i>	Record voice mail greeting.
<i>Select</i>	Activating the voice mail greeting.

Menu	Description
<i>Edit</i>	Renaming the voice mail greeting.
<i>Mode:</i> <ul style="list-style-type: none"> <li><i>Recording allowed</i></li> <li><i>Recording not allowed</i></li> </ul>	Selecting the mode: Caller can leave a message. Caller cannot leave a message.
<i>Play</i>	Play voice mail greeting

Operation of voice mail is available via the system menu, a function key (see chapter "Configuring keys", page 69), or the Aastra Self Service Portal (see chapter "Aastra Self Service Portal", page 7).

## Menu



Press the function key for *Menu*.

## Voice mail



Scroll to *Voice Mail* and press the *Enter* softkey.



Select any entry and press the *Execute* softkey.

## Settings



Scroll to *Settings* and press the *Enter* softkey.



## Renaming the voice mail greeting:

1. Select the greeting you want and press the *Enter* softkey.
2. Press the *Edit* > *Enter* softkey.
3. Enter the name and confirm with the *Enter* softkey.

## Record



## Recording voice mail greeting:

1. Select the greeting you want and press the *Enter* softkey.
2. Press the *Record* > *Enter* softkey.
3. Pick up the handset and record your own personal greeting.
4. Stop the recording using the *Done* softkey.

## Play



## Playing voice mail greeting:

1. Select the greeting you want and press the *Enter* softkey.
2. Press the *Play* > *Enter* softkey.
3. You can monitor your personal greeting text and re-record it if necessary.

## Mode



## Selecting the mode:

1. Select the greeting you want and press the *Enter* softkey.
2. Press the *Mode* > *Enter* softkey.
3. Select the mode you want and confirm with the *Enter* softkey.

## Select



## Activating the voice mail greeting:

1. Select the greeting you want and press the *Enter* softkey.
2. Confirm with the *Select* > *Enter* softkey.

## Configuring presence profile

Do you want to manage your incoming calls taking your current presence status into account (see chapter ["Organising absences from the desk"](#), page 47).

You have a choice of 5 presence profiles for controlling your presence status: [Available](#), [Absent](#), [Meeting](#), [Busy](#), [Not available](#). Presence profiles contain action commands that are executed when the presence status is activated. This may be a call forwarding to a voice mail and/or a predefined personal call routing.

For each of these presence profiles you can make the following settings:

Menu	Description
<i>Description</i>	Type in the text to be displayed to other users as detailed information when they poll your presence status (e.g. "meeting until 4 pm"). You can also leave this input field blank.
<i>Time/Date</i>	Type in the time and/or date of your absence: This information is played to your caller, providing you selected the <a href="#">Absence information</a> setting for call forwarding to voice mail. You can also leave this input field blank.
<i>Personal call routing:</i>	Specify the phones on which a call is to be signalled (see chapter <a href="#">"Activating personal call routing"</a> , page 39).
<ul style="list-style-type: none"><li>• <i>Keep settings as is</i></li><li>• <i>Call routing-ID &lt;1...5&gt;</i></li></ul>	<ul style="list-style-type: none"><li>• Calls are routed according to your settings.</li><li>• Your personal call routing number.</li></ul>
<i>Call forwarding:</i>	Specify where you want a call to be forwarded to (see chapter <a href="#">"Call forwarding"</a> , page 49).
<ul style="list-style-type: none"><li>• <i>Keep settings as is</i></li><li>• <i>Forwarding off</i></li><li>• <i>User</i></li><li>• <i>Voice mail</i></li></ul>	<ul style="list-style-type: none"><li>• Calls are routed according to your settings.</li><li>• Any configured call forwarding operation is deleted.</li><li>• A call is channelled to the defined forwarding destination.</li><li>• A call is forwarded to voice mail. The greeting to be played can be configured with voice mail greeting.</li></ul>
<i>Voice Mail greeting:</i>	Activate the greeting you want.
<ul style="list-style-type: none"><li>• <i>Keep settings as is</i></li><li>• <i>Absence information</i></li><li>• <i>Standard greeting</i></li><li>• <i>Personal greeting</i></li></ul>	<ul style="list-style-type: none"><li>• Your currently defined greeting is used.</li><li>• Your caller is given an absence information (as well as time and date, if this has been configured as such in the presence profile). This setting is not available in the <a href="#">Available</a> presence profile. More information can be found in the chapter <a href="#">"Absence information"</a>, page 48.</li><li>• The global greeting is played back to your caller.</li><li>• If you renamed your personal greeting, your greeting name is displayed here. Your caller obtains one of the personal greetings.</li><li>• The time and date are never played in the global greeting and personal greetings.</li></ul>

Operation of the presence settings is available via the system menu, a function key (see chapter "[Configuring keys](#)", page 69), or the Aastra Self Service Portal (see chapter "[Aastra Self Service Portal](#)", page 7).



Press the function key for *Menu*.



Scroll to *Presence* and press the *Enter* softkey.



### Changing the presence profile:

1. Select the presence profile you want and press the *Enter* softkey.
2. Press the *Modify* > *Enter* softkey.
3. Select the setting you want and press the *Enter* softkey.
4. Make the changes and confirm with the *Enter* softkey.

## Configuring keys

This section explains how to assign call numbers, functions, and busy lamp fields to a key.

### Available keys

You can assign the configurable keys of your phone with a specific action type so you can trigger a particular action by simply pressing that key. The following choice is available:

Action type	Designation	Description
<i>Call number</i>	Number key	Configure a key with a call number and name.
<i>Function</i>	Function key	Configure a key with a function in order to run or activate/deactivate a function.
<i>Busy lamp field</i> <sup>1)</sup>	Team key	Configure a key with your team partner's call numbers.
<i>KT line</i>	Line key	<p>A line key has a call number which can be used for internal or external calls. In general, multiple phones can be connected to this line. Your phone becomes a key telephone as soon as your system administrator has assigned the first KT line to a configurable key. You can make the personal settings for the KT line in the Aastra Self Service Portal.</p> <p>KT lines are only possible on function keys T1 to T20 (Aastra 6867i) or T1 to T40 (Aastra 6869i). For more information on KT line keys, refer to chapter "<a href="#">Line key on a key telephone</a>", page 54.</p> <p><b>Note:</b> Your phone can be either a key telephone or an operator phone.</p>

Action type	Designation	Description
Operator	Operator phone	<p>An operator phone has a line key with a call number on which both external and internal incoming calls can be connected. Your phone becomes an operator phone as soon as your system administrator has assigned the first line key on your phone. You can make the personal settings for the operator phone in the Aastra Self Service Portal.</p> <p>Lines for operator phones are only possible on function keys T1 to T20 (Aastra 6867i) or T1 to T40 (Aastra 6869i). For more information on KT line keys, refer to chapter "Line key on a key telephone", page 54.</p> <p><b>Note:</b> Your phone can be either a key telephone or an operator phone.</p>
Personal line	Personal call key	<p>Personal line on key telephones and operator phones on which you can make personal calls. The personal line is created automatically as soon as your system administrator has assigned a key on your phone as a KT line or operator.</p>

1) Aastra 6865i only

## Configuring or deleting a key assignment

You want to configure a configurable key with a call number, function or busy lamp field, or to delete the key configuration.

The key configuration must have been made either by your system administrator or by yourself in the Aastra Self Service Portal (see chapter "Aastra Self Service Portal", page 7). An overview of the available functions can be found in the chapter "Overview of available functions", page 44.

## Operating a key with key configuration

A key with a key configuration can be operated as follows:

<Call number>



**Calling the call number of a number key:**

Press the key for <Call number>.  
→ The contact for this call number is called.

<Function>



**Activating/deactivating the function:**

Press the function key for <Function>.  
→ The function is activated/deactivated. The LED on the function key is switched on/off (Aastra 6865i only).

<Busy lamp field>



**Calling the call number of a busy lamp field key:**

Press the function key for <Busy lamp field>.  
→ The call number of the busy lamp field key is called.

# Product and safety information

The product and document information is available here. You will also find notes on safety, data protection and legal notes. Please read through this product and safety information carefully.

---

<i>Safety information</i> .....	72
<i>Product information</i> .....	72
<i>Data protection</i> .....	74
<i>Limited Warranty (Australia only)</i> .....	74

---

# Safety information

The safety information can be found in the chapter "Safety information", page 3.

# Product information

## Purpose and function

This product is part of the Aastra 400 communication solution.

The software can only be launched if a communication server, configured accordingly, is detected.

Aastra 400 is an open, modular and comprehensive communication solution for the business sector with several communication servers of different output and expansion capacity, a comprehensive telephone portfolio and a multitude of expansions. They include an application server for Unified Communications and multimedia services, an FMC (Fixed Mobile Conversion) controller for integrating mobile phones, an open interface for application developers and a multitude of expansion cards and modules.

The business communication solution with all its components was developed to cover in full the communication requirements of businesses and organisations, in a way that is both easy to use and maintenance-friendly. The individual products and components are coordinated and must not be used for other purposes or replaced by third-party products or components (unless it is to connect other approved networks, applications and telephones to the interfaces certified specially for that purpose).

## User information

Document portal:	<a href="http://www.aastra.com/docfinder">www.aastra.com/docfinder</a>
© The information, graphics and layouts featured in the user information are subject to copyright and may not be duplicated, presented or processed without the written consent of Aastra Telecom Schweiz AG.	

Your product is supplied with a Quick User's Guide, safety information and, where applicable, with other product-specific information.



These and all other user documents are available for download from the [Aastra DocFinder](http://www.aastra.com/docfinder) ([www.aastra.com/docfinder](http://www.aastra.com/docfinder)) as individual documents or as documentation set. It is your responsibility to keep up to date with the scope of functions, the proper use and the operation of your product.

- Make sure you have all the user documents required to operate your product efficiently and correctly.
- Make sure that the versions of the user documents comply with the software level of the Aastra 400 products used and that you have the latest editions.
- Always read the user documents first before you put your product into operation.
- Store the user information within easy reach and refer to it whenever uncertainties arise in connection with the use of the product.
- When handing over your product to others, make sure you enclose the relevant user information.

## Trademarks

Aastra® is a registered trademark of Aastra Technologies Limited.

All other trademarks, product names and logos are trademarks or registered trademarks of their respective proprietors.

The designations used in this manual for software and hardware are registered trademarks and are thus subject to the relevant regulations.

## Exclusion of liability

This exclusion of liability is not valid for Australia. For more information about exclusion of liability in Australia refer to chapter "[Limited Warranty \(Australia only\)](#)", page 74.

All parts and components of the Aastra 400 communication solution are manufactured in accordance with ISO 9001 quality guidelines.

The relevant user information has been compiled with the utmost care. The functions of the Aastra 400 products have been tested and approved after comprehensive conformity tests. Nonetheless, errors cannot be entirely excluded. The manufacturers shall not be liable for any direct or indirect damage that may be caused by incorrect handling, improper use, or any other faulty behaviour. Potential hazards are mentioned in the relevant places in the user information. Liability for loss of profit shall be excluded in any case.

### About Aastra

Aastra Technologies Limited, A Mitel Company (Nasdaq: MITL) (TSX: MNW) is a leading company at the forefront of the corporate communications market. Aastra has its headquarters in Concord, Ontario, Canada. Aastra develops and distributes innovative business communication solutions for companies of all sizes. Aastra's operations are truly global with more than 50 million installed lines around the world and a direct and indirect presence in more than 100 countries. In addition to multi-functional call managers, the large portfolio also offers all other elements for complete unified communications applications in small, medium and large businesses. The portfolio is rounded off by integrated mobility solutions, call centre solutions and a large selection of phones. With its sharp focus on open standards and customized solutions Aastra enables companies to achieve more efficient communications and co-operation.

For additional information on Aastra, visit our website: [www.aastra.com](http://www.aastra.com).

### Data protection

#### Protection against listening in and recording

The Aastra 400 communication solution comprises features which allow calls to be monitored and recorded without the call parties noticing. Please note that these features can only be used in compliance with national data protection provisions.

### Limited Warranty (Australia only)

The benefits under the Aastra Limited Warranty below are in addition to other rights and remedies to which you may be entitled under a law in relation to the products.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, Aastra warrants this product against defects and malfunctions in accordance with Aastra's authorized, written functional specification relating to such products during a one (1) year period from the date of original purchase ("Warranty Period"). If there is a defect or malfunction, Aastra shall, at its option, and as the exclusive remedy under this limited warranty, either repair or replace the product at no charge, if returned within the warranty period.

## **Repair Notice**

To the extent that the product contains user-generated data, you should be aware that repair of the goods may result in loss of the data. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. If it is necessary to replace the product under this limited warranty, it may be replaced with a refurbished product of the same design and colour.

If it should become necessary to repair or replace a defective or malfunctioning product under this warranty, the provisions of this warranty shall apply to the repaired or replaced product until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement product, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all products returned for warranty repairs.

## **Exclusions**

Aastra does not warrant its products to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the product is in your possession. Aastra will not accept liability for any damages and/or long distance charges, which result from unauthorized and/or unlawful use.

To the extent permitted by law, Aastra shall not be liable for any incidental damages, including, but not limited to, loss, damage or expense directly or indirectly arising from your use of or inability to use this product, either separately or in combination with other equipment. This paragraph, however, is not intended to have the effect of excluding, restricting or modifying the application of all or any of the provisions of Part 5-4 of Schedule 2 to the Competition and Consumer Act 2010 (the ACL), the exercise of a right conferred by such a provision or any liability of Aastra in relation to a failure to comply with a guarantee that applies under Division 1 of Part 3-2 of the ACL to a supply of goods or services.

This express warranty sets forth the entire liability and obligations of Aastra with respect to breach of this express warranty and is in lieu of all other express or implied warranties other than those conferred by a law whose application cannot be excluded, restricted or modified. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable

loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Repair Services

Procedure: Should the product fail during the warranty period and you wish to make a claim under this express warranty, please contact the Aastra authorized reseller who sold you this product (details as per the invoice) and present proof of purchase. You will be responsible for shipping charges, if any.

Limitation of liability for products not of a kind ordinarily acquired for personal, domestic or household use or consumption (e.g. goods/services ordinarily supplied for business-use).

Limitation of liability	
1.1	To the extent permitted by law and subject to clause 1.2 below, the liability of Aastra to you for any non-compliance with a statutory guarantee or loss or damage arising out of or in connection with the supply of goods or services (whether for tort (including negligence), statute, custom, law or on any other basis) is limited to: <ul style="list-style-type: none"><li>a) in the case of services:<ul style="list-style-type: none"><li>i) the resupply of the services; or</li><li>ii) the payment of the cost of resupply; and</li></ul></li><li>b) in the case of goods:<ul style="list-style-type: none"><li>i) the replacement of the goods or the supply of equivalent goods; or</li><li>ii) the repair of the goods; or</li><li>iii) the payment of the cost of replacing the goods or of acquiring equivalent goods; or</li><li>iv) the payment of the cost of having the goods repaired.</li></ul></li></ul>
1.2	Clause 1.1 is not intended to have the effect of excluding, restricting or modifying: <ul style="list-style-type: none"><li>a) the application of all or any of the provisions of Part 5-4 of Schedule 2 to the Competition and Consumer Act 2010 (the ACL); or</li><li>b) the exercise of a right conferred by such a provision; or</li><li>c) any liability of Aastra in relation to a failure to comply with a guarantee that applies under Division 1 of Part 3-2 of the ACL to a supply of goods or services.</li></ul>

## After Warranty Service

Aastra offers ongoing repair and support for this product. If you are not otherwise entitled to a remedy for a failure to comply with a guarantee that cannot be excluded under the Australian Consumer Law, this service provides repair or replacement of your Aastra product, at Aastra's option, for a fixed charge. You are responsible for all shipping charges. For further information and shipping instructions contact:

Manufacturer:	Note:
Aastra Telecom Australia Pty Ltd ("Aastra") Level 12, 45 William Street Melbourne, Victoria 3000, Australia, ABN: 16 140 787 195 Phone: +61 3 8628 9500	Repairs to this product may be made only by the manufacturer and its authorized agents, or by others who are legally authorized. Unauthorized repair will void this express warranty.

# Index

## A

Aastra M680i .....	18
Aastra M685i .....	19
Aastra Self Service Portal .....	7
Absence information, setting .....	48
Accessories <i>see</i> : Safety information .....	3
Advanced search .....	24
Alarm melodies .....	60
Alphanumeric keyboard .....	16
Ambient conditions <i>see</i> : Safety information .....	3
Announcement:	
receiving .....	36
starting .....	35
to group .....	36
Appointment call, acknowledging:	
Repeat appointment call .....	41
Single appointment call .....	41
Audio properties, setting .....	61

## B

Backlight .....	59
Brokering .....	32
Busy lamp field .....	53

## C

Call forwarding:	
always (CFU) .....	49
if busy (CFB) .....	49
on no reply (CNFR) .....	49
to voice mail .....	49
Call list:	
calling a contact .....	51
deleting an entry .....	51
detailed information .....	51
of answered calls .....	26
of dialled call numbers .....	26
of unanswered calls .....	26
Call logging management <i>see</i> : OpenCount .....	56
Call partners, holding <i>see</i> : Hold .....	31
Call protection, activating .....	65
Call routing:	
activating .....	39
profile .....	40

Call transfer:	
with prior notice .....	33
without prior notice .....	33
Callback:	
answering .....	30
requesting .....	29
Calls:	
answering .....	22
answering for a team partner .....	54
ending .....	22
initiating .....	24
making .....	22
private call with PIN .....	29
recording .....	37
rejecting .....	22
take (pick up own call) .....	35
with another Aastra phone .....	28
CLIR <i>see</i> : Hide number .....	31
Communication system .....	4
Conference call, making .....	33
Configurable key, using .....	14
Connect <i>see</i> : Call transfer .....	33
Connections <i>see</i> : Safety information .....	3
Contrast <i>see</i> : Display contrast .....	59
Cost control <i>see</i> : Safety information .....	3

## D

Data protection .....	74
Date, setting .....	62
Deflect <i>see</i> : Call transfer .....	33
DHSG standard, audio properties .....	61
Dialling:	
by name .....	24
from call list of answered calls .....	26
from call list of unanswered calls .....	26
from phone books .....	24
with configurable key .....	27
with line key .....	27
with phone number .....	24
with redial list .....	26
Dialpad <i>see</i> : Live Dialpad, using .....	63
Directories, managing <i>see</i> : Phone book .....	65
Directory Lookup .....	24

Display contrast .....	59	KT line key .....	54
Display symbols .....	13	KT line:	
Display text for idle state .....	64	answering call on KT line key .....	55
Disposal <i>see</i> : Safety information .....	3	phoning via KT line key .....	55
Do not disturb, activating:			
busy .....	38		
forward .....	38		
Document information .....	4		
<b>E</b>		<b>L</b>	
Enquiry call during a call .....	32	Labels:	
Exclusion of liability .....	73	attaching .....	20
Expansion key module Aastra M680i .....	18	printing .....	20
Expansion key module Aastra M685i .....	19	Language, selecting .....	62
<b>F</b>		LED .....	17
Forwarding <i>see</i> : Call forwarding .....	49	Legend <i>see</i> Key legend .....	9
Free seating .....	42	Limited Warranty (Australia only) .....	74
Function .....	72	Line key .....	27, 54
Function key configuration (default setting) .....	15	Listening <i>see</i> : Data protection .....	74
Function selection for configurable key .....	44	Live Dialpad, using .....	63
<b>G</b>		Local IP settings <i>see</i> : IP settings .....	64
Group announcement <i>see</i> : Announcement .....	36	Local phone book <i>see</i> : Phone book .....	65
<b>H</b>		Locking <i>see</i> : Phone lock .....	41
Handset volume <i>see</i> : Volume .....	59	<b>M</b>	
Handsfree .....	22	Mains power <i>see</i> : Safety information .....	3
Headset:		Maintenance <i>see</i> : Safety information .....	3
operation .....	61	Making calls <i>see also</i> : Calls, initiating .....	24
using a .....	23	Making calls:	
Hide number:		in handsfree mode .....	22
per call .....	31	with headset .....	23
permanent .....	31	Menu guidance <i>see</i> : Operation .....	13
Hold .....	31	Message LED <i>see</i> : LED .....	17
Hotline .....	43	Metal objects <i>see</i> : Safety information .....	3
<b>I</b>		Microphone, muting .....	23
Icons <i>see</i> Display symbols .....	13	Mute .....	23
Information <i>see</i> : IP settings .....	64	<b>N</b>	
IP settings .....	64	Navigation key, using .....	14
<b>K</b>		<b>O</b>	
Key telephone .....	54	One number user concept .....	7
Key:		Open listening .....	22
assignment, configuring .....	70	OpenCount .....	56
assignment, deleting .....	70	Operating elements .....	9
designations .....	9	Operation .....	13
legend .....	9	<b>P</b>	
selection .....	69	Personal call routing <i>see</i> : Call routing,	
		activating .....	39
		Phone book:	
		external .....	24
		local .....	65
		system .....	65

Phone lock .....	41
Phone status .....	64
Phone, activating .....	28
PIN:	
changing .....	63
telephony, activating .....	56
Presence profile:	
configuring .....	68
selection .....	47
Presence status, controlling .....	47
Product information .....	72

## Q

Quickdial .....	24
-----------------	----

## R

Recording <i>see</i> : Calls, recording .....	37
Recording <i>see</i> : Data protection .....	74
Redial list .....	26
Remote control .....	57
Restart phone .....	64
Ring Alone, activating .....	40
Ring tones .....	60
Ring volume <i>see</i> : Volume .....	59
Ringtone properties, setting .....	60

## S

Safety information .....	3
Silent <i>see</i> : Ringing properties .....	60
Singel-digit dialling <i>see</i> : Live Dialpad, using .....	63
Softkey, using .....	14
Software version .....	4
Speed dial edit, using .....	63
Standard key configuration .....	15
Switching between 2 call parties	
<i>see</i> : Brokering .....	32
Symbols <i>see</i> : Display symbols .....	13
System menu .....	13
System phone book <i>see</i> : Phone book .....	65

## T

Take .....	35
Team organisation <i>see</i> : Busy lamp field .....	53
Team partner:	
answering a call .....	54
calling .....	54
Text:	
correcting .....	16
entering .....	16
Time, setting .....	62
Trademarks .....	73

## U

Unlocking <i>see</i> : Phone lock .....	41
User information .....	72

## V

Voice mail <i>see also</i> : Voice message .....	52
Voice mail:	
configuring .....	66
greeting, managing .....	66
Voice message:	
deflecting .....	52
deleting .....	52
detailed information .....	52
playing .....	52
Volume .....	59







## **CE conformity**

Aastra Telecom Schweiz AG hereby declares that

- the Aastra 400 products conform to the basic requirements and other relevant stipulations of Directive 1999/5/EC.
- all our products are manufactured in conformity with RoHS according to 2011/65/EU.

The product-specific declarations of conformity can be found on the Aastra 400 DocFinder:

[www.aastra.com/docfinder](http://www.aastra.com/docfinder).

## **Exclusion of liability**

Aastra® is a registered trademark of Aastra Technologies Limited. Technical modifications and product availability subject to change without notice.

Copyright © 2014 Aastra Technologies Limited

