 


INSTRUCTION MANUAL



S • DIGITAL

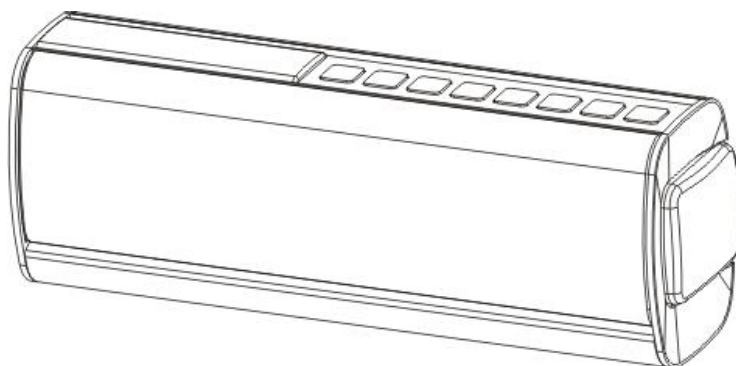

Portable Bluetooth® speaker
MODEL : SP-3000-BTHF



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT.
PLEASE REFER TO INSTRUCTION MANUAL.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE REAR OF THE UNIT.



CAUTION
DO NOT EXPOSE TO DRIPPING
OR SPLASHING LIQUIDS!

 
THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

BATTERY SHOULD NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.



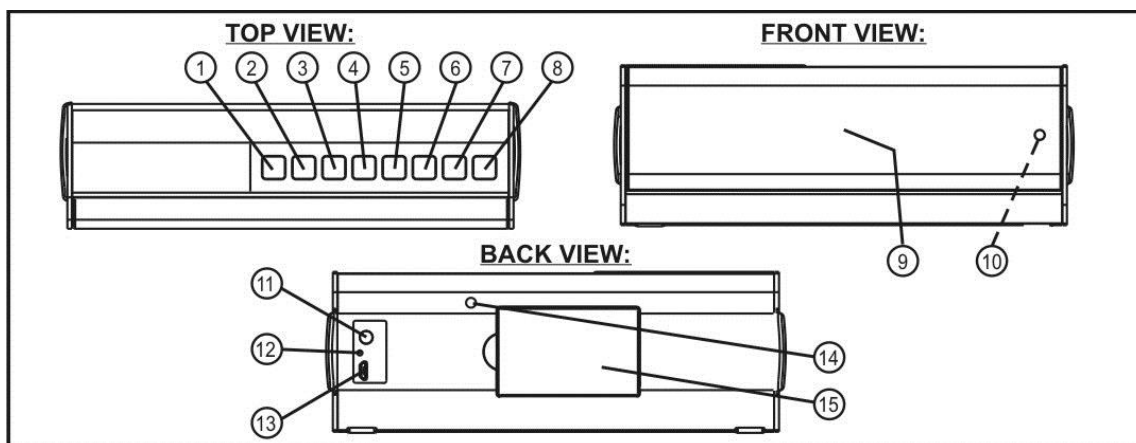


LOCATION OF CONTROLS

1. VOLUME DOWN KEY
2. VOLUME UP KEY
3. BASS KEY
4. BACK KEY
5. NEXT KEY
6. SOURCE KEY
7. PAIR/ PLAY/ PAUSE/ HANDS FREE KEY

8. ON/ STANDBY/ CALL REJECT KEY
9. SPEAKER
10. LED INDICATOR
11. AUX IN SOCKET
12. CHARGING LED INDICATOR
13. MICRO USB CHARGING SOCKET
14. MICROPHONE (FOR HANDS FREE)
15. BATTERY COMPARTMENT

SPEAKER CHARGING

 FOR BEST RESULTS, FULLY CHARGE YOUR SPEAKER SYSTEM BEFORE USE.

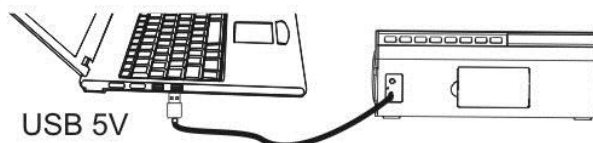

SPECIFICATIONS

POWER SUPPLY : RECHARGEABLE LITHIUM BATTERY 3.7V/1000mAh x 1PC
 RECHARGE POWER: USB DC 5V, 500mA (OR HIGHER)

BLUETOOTH® WIRELESS PLAYBACK

THE UNIT CAN WIRELESSLY STREAM AUDIO FROM ANY *BLUETOOTH®* DEVICE WITHIN 30 FEET. SIMPLY PAIR THE DEVICE AND ENJOY WIRELESS PLAYBACK AND CONTROL FROM YOUR *BLUETOOTH®* DEVICE.

PREPARE THE UNIT:

- PRESS AND HOLD THE ON/STANDBY KEY ABOUT 2 SECONDS TO TURN THE UNIT ON.
- THE LED INDICATOR WILL FLASH TO INDICATE THE UNIT IS ON AND WAITING FOR PAIRING.
- THE LED INDICATOR WILL KEEP REMAIN LIT WHEN PAIRED.

***NOTE ONLY ONE DEVICE CAN BE PAIRED AT ANY GIVEN TIME.**

PREPARE YOUR PHONE OR OTHER *BLUETOOTH®* DEVICE:

- TURN ON THE *BLUETOOTH®* FUNCTION, THIS IS USUALLY FOUND UNDER GENERAL SETTINGS OR OPTIONS.
- PLEASE REFER TO YOUR DEVICE'S MANUAL FOR FURTHER *BLUETOOTH®* DETAILS.

MAKE THE CONNECTION:

- GO TO YOUR DEVICE'S *BLUETOOTH®* SETTINGS
- ADD OR SEARCH FOR DEVICES
- IF ASKED FOR A PASS CODE, ENTER "0000"

***THIS IS A ONE-TIME EVENT PER DEVICE. TO PAIR YOUR UNIT TO ANOTHER DEVICE, REPEAT THE ABOVE PREPARATION AND CONNECTION STEPS.**

DISABLING THE CONNECTION:





TO UNPAIR A *BLUETOOTH®* DEVICE THAT IS ALREADY PAIRED, PRESS AND HOLD THE PAIR KEY FOR A FEW SECONDS.

VOLUME CONTROL:

INCREASE AND DECREASE VOLUME USING THE VOLUME UP AND VOLUME DOWN KEYS ON THE UNIT OR USING THE VOLUME CONTROLS ON YOUR *BLUETOOTH®* ENABLED DEVICE.

***NOTE THAT IF THERE IS NO PLAYBACK, ENSURE THAT NEITHER THE UNIT NOR YOUR *BLUETOOTH®* DEVICE ARE SET TO ZERO VOLUME AND THE CORRECT DEVICE FOR PLAYBACK IS PAIRED.**

SPEAKER OPERATION

- PRESS THE PLAY/PAUSE KEY  TO START PLAYBACK.
- AT ANYTIME DURING PLAYBACK, PRESS THE PLAY/PAUSE KEY  TO PAUSE OPERATION. PRESS AGAIN TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE NEXT OR BACK KEY :  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE A STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- SELECT THE FUNCTION TO "AUX IN" BY PRESSING THE SOURCE KEY ONCE.
- SWITCH ON THE EXTERNAL DEVICE (eg. MP3-PLAYER).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE UNIT AND THE EXTERNAL DEVICE WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.
- SWITCH BACK TO *BLUETOOTH®* MODE ANYTIME BY PRESSING THE SOURCE KEY AGAIN.

HANDS-FREE OPERATION

- THE UNIT INCLUDES A VERY USEFUL HANDS-FREE FUNCTION WHICH ENABLES YOU TO USE IT AS A SPEAKER PHONE.
- MAKE SURE THE UNIT IS ON AND PAIRED WITH YOUR PHONE DEVICE AS DESCRIBED.

TO RECEIVE A CALL: PRESS THE HANDS-FREE KEY (7) ONCE.

TO END A CALL: PRESS THE HANDS-FREE KEY (7) AGAIN WHEN THE CALL IS FINISHED.

TO REJECT A CALL: PRESS THE ON/ STANDBY/ CALL REJECT KEY (8).