

OPERATING INSTRUCTIONS

- By rocking your foot back and forth on the pedal, you can change the effect that the CRYBABY® has on the tone of your instrument instantaneously. Toe down will give you more treble, heel down will give you more bass. The speed and amount of effect you use depends on your style of playing.
- When placing the pedal in one position, you will hear a boost in that particular frequency. This boost can be used to add sustain and create feedback of a desired overtone.

TIPS

- Listen to the classic recordings of Jimi Hendrix and Eric Clapton where the CRYBABY® is used extensively. After listening to the sound you will begin to recognize the CRYBABY® in just about every rock player's repertoire.
- When Wah is placed after distortion, the Wah effect is very dramatic. Placing the Wah before distortion provides a subtler effect. Try setting the pedal in one position. This will help in making artificial harmonics and controlling the amount of feedback.

cry baby®

The CRYBABY® has been a standard in the world of music since its introduction in the late 1960's. Its rugged construction and efficient design will give years of outstanding performance.




CRYBABY® SET-UP INSTRUCTIONS

1. To power your CRYBABY® either insert a 9-volt battery, plug in an ECB003 AC adapter, or plug into a Dunlop DC Brick® multi-power supply 9-volt output.

Notice: This unit is shipped from the factory without a battery to prevent possible damage from leakage. A 9-volt battery must be installed for operation if an AC adapter is not going to be used. We recommend a high quality battery. The adapter jack requires a 5.5/2.1mm coax plug. We recommend the Dunlop ECB003 AC adapter. Most standard 9VDC AC adapters with greater than 20ma current capability will work.

Plug Polarity (+) — (•) — (—) DC in 9 volts

Before installing a battery, be sure to disconnect the pedal from your amplifier. To install the battery, remove the battery door from the bottom cover, connect the battery to the battery clip, and insert the battery. Replace battery door. To conserve battery life, disconnect plug from the Input jack when not in use for extended periods of time.

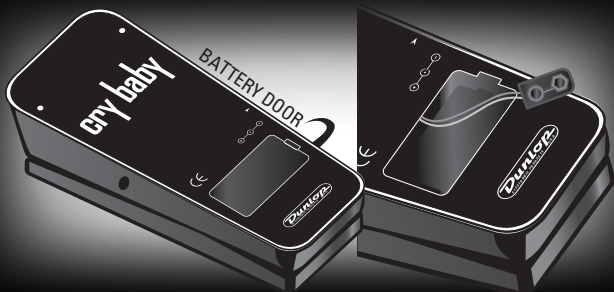

2. With your amplifier turned off, run a cord from your instrument to the CRYBABY'S® Instrument jack.
3. Run a cord from the CRYBABY'S® Amplifier jack into your amplifier input.
4. Turn on the amplifier and begin playing.
5. To turn the pedal on and off, push the toe of the pedal down until you feel a "click". For the 95Q CRYBABY® Wah Wah and 105Q CRYBABY® Bass Wah, rock the pedal down to engage the effect. To turn the effect off, rock the pedal to the heel-down position or take your foot off the pedal, enabling the Auto-Bypass feature.

JIMI HENDRIX'S PREFERRED HOOKUP WAS:

Guitar to Fuzz to CRYBABY® to Amplifier.

