


User Manual for Refillable Compatible Ink Cartridge

Mimaki JV2/JV4 Series, Roland 400/500/600

! Caution: Please remove the sealing film before installing cartridge onto the printer.

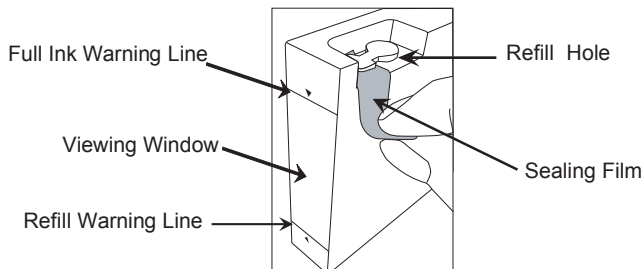

I. INSTALLATION

1. Remove the used/empty cartridge from printer according to the printer user manual.
2. Tear off the sealing film from the vent hole.
3. Install the new cartridge onto the printer.
4. When 'LOCAL' is displayed on the panel of printer, you can conduct the normal printing process.

NOTE

Please check regularly on the ink consumption of cartridge from the transparent Viewing Window. Once the ink level goes below the Refill Warning Line, please replace or refill the cartridge.

II. REFILLING

1. Unplug the rubber plug from the Refill Hole, then, use a refill kit (e.g. funnel, large-sized syringe, etc) to fill the ink into the cartridge (Fig.1). Please unplug the rubber plug gently when refilling the ink, or else the ink on the plug will spill out and pollute the surroundings.
2. While refilling ink into the cartridge, please pay attention to ink level displayed on the Viewing Window of the cartridge. Please stop filling when the ink level reaches the Full Ink Warning Line.
3. Use tissues to wipe off the residual ink around Refill Hole, and reset the rubber plug.
4. You are ready for printing again!

