 


User Manual

Main function

Recording still photo/AVI, Recording sound, Removable disk.

Appearance

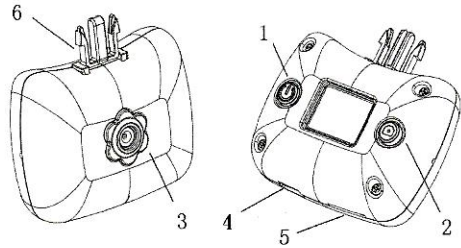

1. Power/Mode key
2. Shutter key
3. LENS
4. USB port
5. TF card slot
6. Belt buckle

Using the Pet camcorder

Turn on/Turn off the camera

 
Turn on: Press and hold Power/Mode key for 3 seconds to turn on the camera;

Turn off: Press and hold the Power/Mode key for 3 seconds to turn off the camera;

Note:


- 1 While the battery energy is very low, the LCD will display icon , and the camera will be quickly turn off automatically and that is indicate you must charge the internal lithium battery
- 2 If you want to charge for battery, connect it to computer's USB port with USB cable .the icon will flash , after charging about1-2 hours , the battery will full, and the icon will stop flash.

Mode switched chart

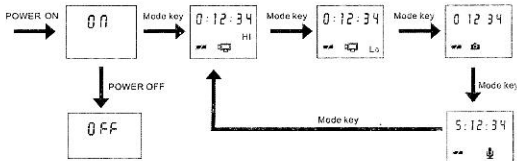

Recording AVI:

 After turning the camera on by Power key to enter preview mode: Press the shutter button once under the preview state to begin recording, save a segment for recording every 10 minutes, then start to record the next segment of video.



When the TF card is full ,or the battery runs out, the recording will stop automatically, and the recorded video will be saved before the DV turns off.

If no extended card in camera, the LCD will flickering for several seconds "00:00:00". Like as below and the camera will turn off automatically.



Take AVI:

After turning the camera on, Press Mode key until LCD display the icon and then press Shutter key to start recoding the AVI, until the SHUTTE key was press again will stop recording.

Note:

At AVI mode, you can take VQA(640x480 pixels) mode video while "HI" icon was selected and you can take QVGA(320x240 pixels) mode video while "Lo" icon was selected.

Snap photo:


After turning the camera on, Press Mode key until LCD display the icon Then press Shutter key to snap one photo, and the camera will automatically take a photo every 1 minutes.

Recording sound:

After turning the camera on, Press Mode key until LCD display the icon and then press Shutter key to start recoding the sound, until the SHUTTE key was press again will stop recording.

Connect camera to computer:

Connect the camera to computer with USB cable, LCD will display:

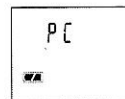

Removable disk mode

And the camera will enter removable disk mode, you can find the record photos in I:\RECORD(I is removable disk icon).

Set the system date and time:

You can set the system date and time by as below operation:

1. Connect the camera to computer.
2. In the root directory of TF card to automatically create a new file, File's name is: time.txt and you can modify the time.
3. Save and exit the file.
4. Reboot the device, the system date and time will is news.

Product specification

Image sensor	0.3 Mega Pixels
Video resolution	HI: VGA(640x480 pixels) 30fps LO: QVGA(320x240 pixels) 30fps
photo resolution	HI:1 Mega Pixels (1280 X 1024) LO:0.3Mega Pixels (640x480)
Video format	AVI
Sound format	WAV
External memory	TF card (Max. 32GB)
Display	Monochromatic LCD Display
USB SPEC	2.0 High Speed
Power Source	3.7V rechargeable lithium battery