# Infrastructure WAN Mode Step by Step Tutorial



# Step 1: Connect your PC/Mobile Devices to your Ai-Ball



- 1) Switch to " / " on your Ai-Ball and wait for about 10 seconds. Right click on the network icon on the system tray.
- 2) Connect your PC or mobile phone (with Wi-Fi) to the Ai-Ball.
- 3) Enter http://ai-ball.com or http://192.168.2.1 on your web browser.

# Step 2: Configure Ai-Ball settings

1) Select "Infrastructure" under **Wireless Mode**. Configure the settings as seen below.



2) Save the settings before exiting.

3) Turn off the Ai-Ball and turn it on again for the above settings to take effect.

### Step 3: Setting up a DDNS account

1) You need to choose and setup an account with a DDNS service provider. (we will use the free DynDNS service for our subsequent examples).



2) Login to your DDNS service account.

# Step 4: Configure your DDNS account

1) Go to My Services, select Add Host Services and configure the DDNS accordingly.

	I NNS.com	)			
Why DynDNS.com?	Services & Pricing Support	Hostname:	trek2000.dyndns.org		
	Use Dynamic DNS with yo	Wildcard: only for DynDNS Pro users	<ul> <li>create "*.trek2000.dyndns.org" alias (for example to use same settings for www.trek2000.dyndns.org)</li> </ul>		
My Account	My Services View, modify, purchase, and delate your services	Service Type:	Host with IP address     WebHop Redirect (URL forwarding service)     Offline Hostname		
Account Settings Billing	My Zones/Domains	IP Address:	203.117.239.18 Your current location's IP address is 203.117.239.18		
My Cart <u>O items</u>	Add Zone/Domain Services My Hosts Add Host Services	TIL:	4 hrs. Static record with benefits of DNS caching		

2) By connecting your PC/Mobile devices to Internet via the same Wireless AP Router, the DynDNS site (after you login) is able to detect the actual IP address of your Wireless AP Router (as shown in the above example). You can then enter this address in the **IP Address** entry.

3) It is also recommended to select "4 hrs Static record" under the TTL entry.

# Step 5: Configure your Wireless AP router (**DDNS**)

1) Configure the **DDNS** (Dynamic DNS) settings in your Wireless AP Router base on details from your DDNS account. (check your router manual for details on how to configure your router)



### Step 6: Configure your Wireless AP router (**Port Forwarding**)

1) For port forwarding, configure the **Virtual Servers** settings accordingly. Note that you should use the same static IP address and port number assigned to the Ai-Ball in Step 2 ("192.168.3.222" and "8888" respectively for example).

TP-LINK File Edit View Favorites	-1/ X Tools Hel	p				⊌ ×5≊ - ۹	- • • € ∩ ☆ 6
TP-LIN	K.				5 Model No. 1	4M Wireless Ro rL-wR340g/TL-wR	outer 340GD
Status — Basic Settings —	Virtu	al Servers					v
Quick Setup Network Wireless		Service Ports	IP Address	Protocol	Status	Modify	Ĥ
Advanced Settings	1	8888	192.168.3.222	ALL	Enabled	Modify Delete	Vi SE Ca
Forwarding - Virtual Servers - Port Triggering	Add Ne	ew Enable All	Disable All Delet	e All	ß		be us fo se
- DMZ - UPnP			Previous	Next			pi se
Security Static Douting	_						yo
IP & MAC Binding							A
Dynamic DNS							SE
— Maintenance — System Tools							is de as se pc ar al re

# Step 7: Long Distance Viewing/Recording!

- 1) From remote location, use a web browser (on a PC/Mobile devices with Internet access) and enter the address accordingly. In our example, the address is: "http://trek2000.dyndns.org:8888"
- \* Note that trek2000.dyndns.org is the hostname of your DDNS account and "8888" is the port number we have chosen in Step 2.





You can now view/record over a long distance through Infrastructure WAN mode!