
Client software user manual

the introduction

the introduction

system requirements

over Window 2,000

CPU: over Inter Pentium 4 2.4G

Memory: over 512M

Monitor : support 1024*768 and the higher resolution

Card : support directdraw to accelerate and opening.

1.3 engagement

In order to the simplify describe in this manual ,will describe as following .

client software called software

DVR DVS called equipment

Click to the left mouse button click

double click

Right click the right mouse button click

Second : installation and unloading


double click

Third: software running

3.1Running and login

3.11 Double-click The shortcut or the TLClient.exe star to running the software


First of all to use the software needs super user registration. Double-click , The dialog box as following

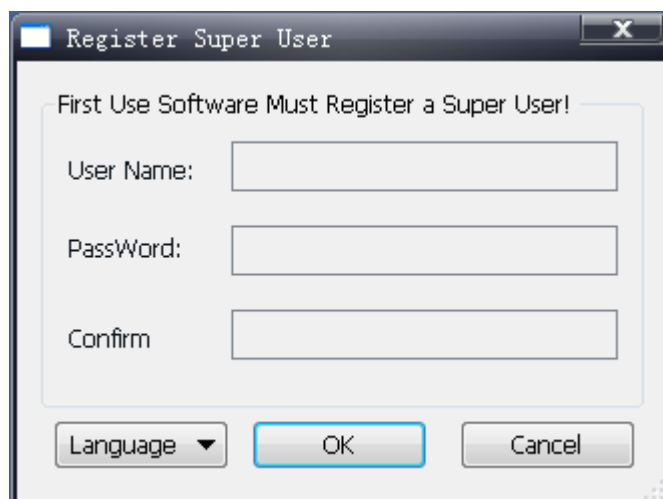A screenshot of a Windows-style dialog box titled "Register Super User". The dialog box has a close button (X) in the top right corner. Inside the dialog, there is a message: "First Use Software Must Register a Super User!". Below this message are three text input fields labeled "User Name:", "PassWord:", and "Confirm". At the bottom of the dialog, there is a "Language" dropdown menu, an "OK" button, and a "Cancel" button.

Enter the user name, user password and reconfirmed password, Password with a minimum of six.


and must and reconfirmed password. After successful Registration it will pop up dialog windows

 1.13 login

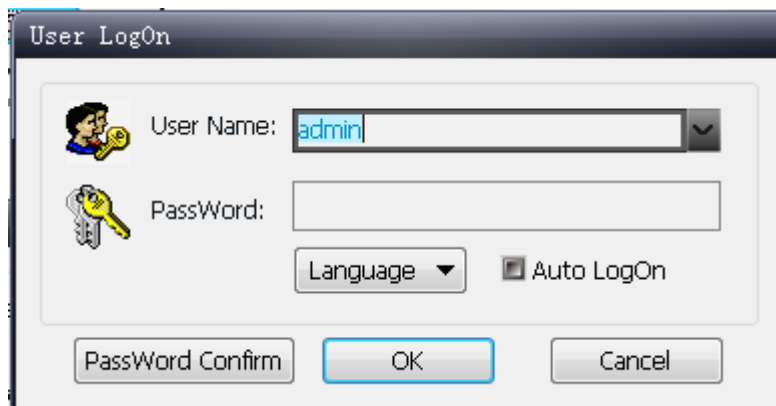

Choose the user name ,enter the password click to enter the program. Or can choose “automatically logged on,” so will not appear on the window next time.

 3.2 introduction of the Software interface

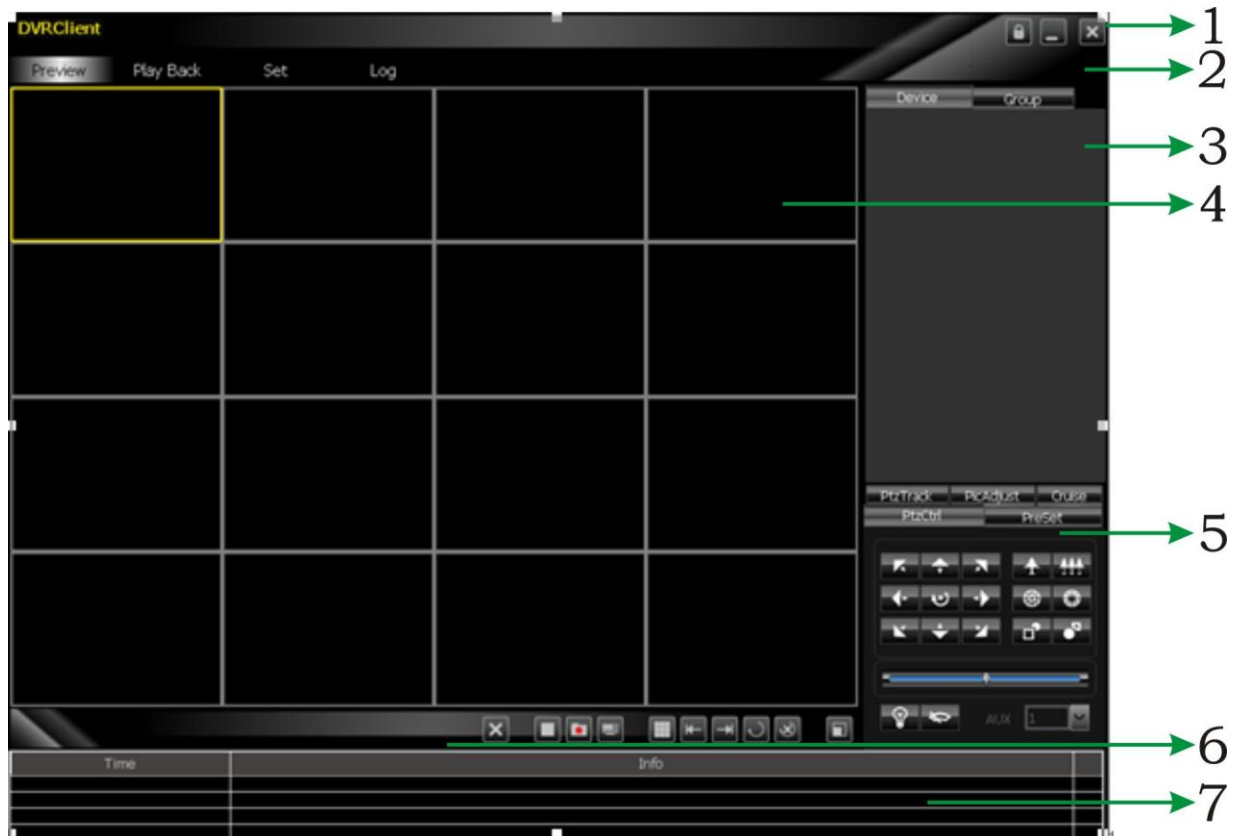

introduction of the Software interface

1:system and the button bar

Interface can be locked, minimize the window to the taskbar, close program operation.

2:Tab bar

Contain the function of the different software models

preview : Real-time preview on the device

playback :Local video playback and remote playback

Configuration: device management, remote device configuration and the local parameters set remote and local video playback

Log: Local and remote Inquiry

Map: Electronic Map

3 device tree

Show all equipment and to add management group

4 Preview Display Window

Real-time preview of the device channel

5 PTZ control window

For PTZ control, adjust the picture

6 Preview Control Bar

Preview control to stop, the client video, drawings, switching screen modes, full screen, rotation, etc.

7 alarm information list

Displays short messages and other alerts

Fourth:Equipment Management

Before using the software to operate, need to add and configure the device operation.

Click the tab bar "Configure" tab to enter configuration mode

Click on the left navigation bar "Device Manager" item to enter the device management interface.

 


Interface Description

- 1: 1 navigation bar
- 2: device tree
- 3: Packet group Control
- 4: packet tree

4.1 device tree configuration

When the initial run the software, the list defaults to an empty tree, right-click any blank space can be a list of trees to add the region.

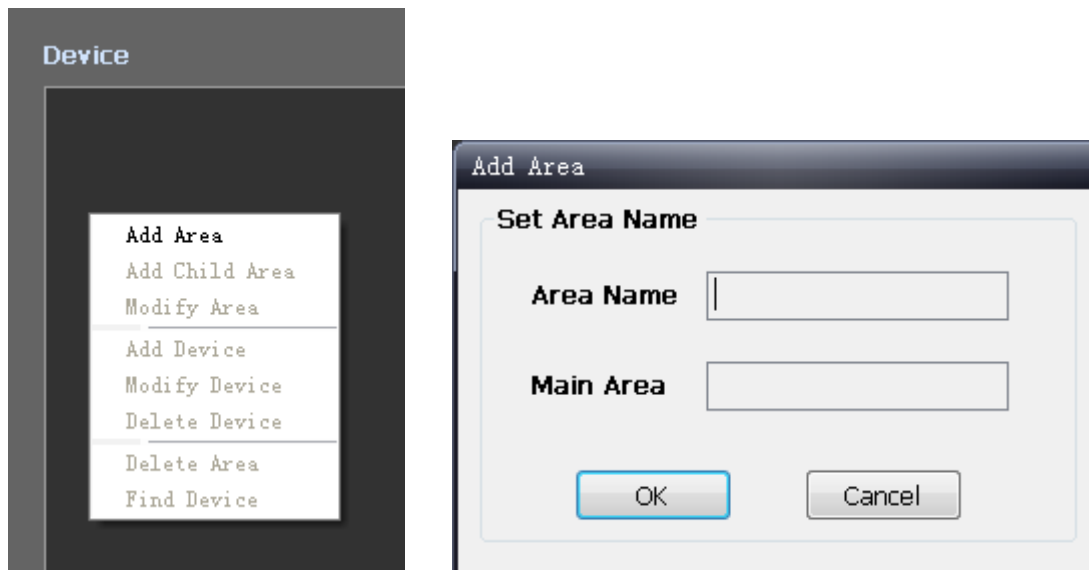

Fill in the name of the regional title bar and click OK you can add a tree to the list area, and because of this added area as the first area, there is no higher in the region area, the higher the regional name column blank.

Regional add is complete, right-click the regional nodes may choose to sub-region, add the operation of equipment

Right-click the Add area, pop-up regional management menu.

Select "Add a sub-regional" sub-regions can be added.

Select "Delete area" will be removed in a selected state area.

Note: If you remove the region contains other regions under, equipment or channels, then delete operation will not only delete the selected area, but will remove all of the regions under the region, equipment or channels; if the region is under the preview channel or Video will be given a warning.

4.11 Manually add the device

Right-click the Add area, pop-up regional management menu, select "Add Device."

Modify Device Information

Device Information

ESee-Net

ESee-Net ID

☒ Tradition Mox

Device

Device Port

Device Name

Channel

UserName

User Password

In Area


OK Cancel

Options	Specifications
Esee_ net	it can be linked via setting ID of Esee_ net
Traditional	only IP address of DVR can be available
Device address	IP of equipment or domain adress
Device port	port number
Device name	user-defined
Access number	according the fact
Name	registered name
Password	password of user
Area	area of user

4.2 Grouping tree configuration


If the group did not contain any node in the tree, then to be add the node first

 Right at the grouping column shows the space group management menu, click on "Add Group" item

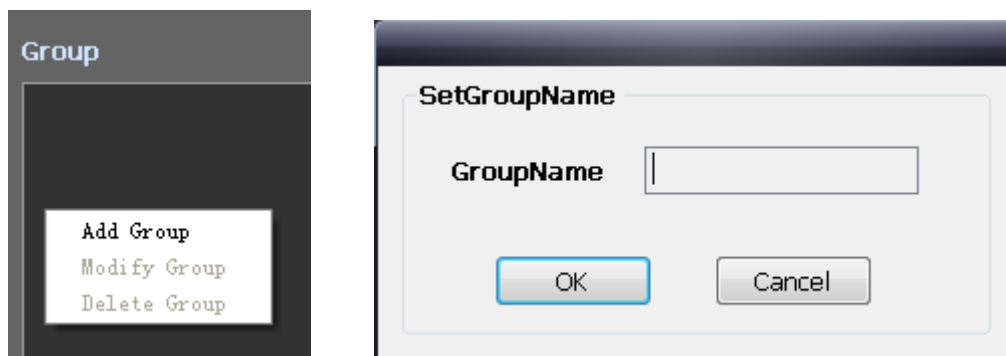

Enter a group name, click OK to add group.

 Group added successfully, you can access the list in the tree node to the next selected group

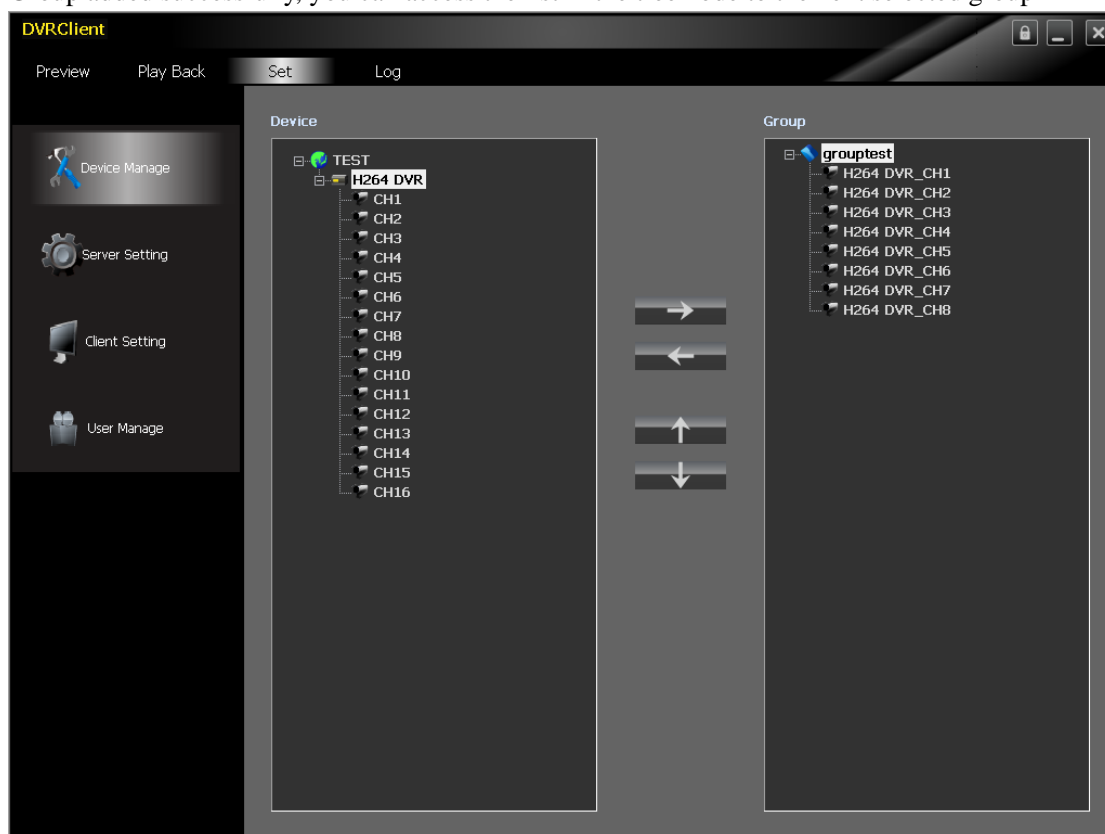

Select the channel list tree node, click the Device Configuration window, configure the button bar "add" to select the channel added to the group tree is selected

Group, the channel name to "device name _ channel name" in the form of shows after the success of adding a channel list tree automatically select the next channel of the device node.

Select the device list tree, click Device Configuration window, configure the button bar "add" button under the selected equipment, add all channels.

Add to select the group. When a device successfully added all the channels, then select the next

window select list of a device tree node.

Configured using the device configuration window button bar "Move" and "Down" buttons can be grouped under the channel to adjust the order of nodes.

 
Channels in the grouping tree node, click Device Configuration window, configure the button bar of the "delete" button to select the channel to remove from the group. Remove the channel, the group tree will automatically select the next group in the channel.

Select the group node group tree, click Device Configuration window, configure the button bar of the "delete" button to display the warning message dialog window. Click "OK" to delete all the channels under the selected group node.

Note: Adding a group can not repeat under the same channel, but you can also add a channel to a different group under.

Fifth :Image Preview

Non-Robin Preview

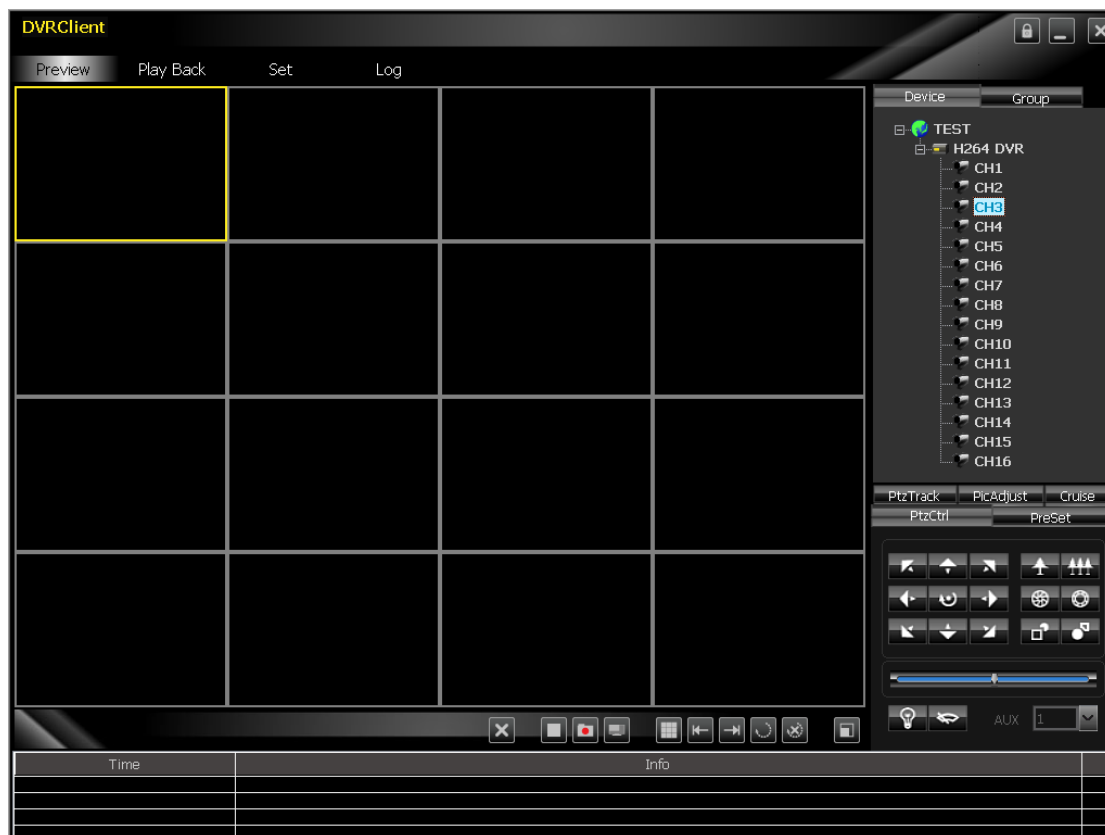

5.1.1 Double-click the Start Preview

Click to play a player window panel, window frame is selected at this time will become light blue. Double-click the device list or grouped under a channel, the channel will be broadcast in this window.

5.1.2 Drag to preview

Drag the equipment list or group under a channel to a broadcast window, this time in this window broadcast channel, while the player will become the selected window

5.1.3Close the preview

Right-click the playback window, the menu appears, click on "Stop Preview" or click the preview control bar of the "stop" button.

5.2 Round Robin Preview

Please drag the device node or group node to broadcast window, and then begin round robin play .. Will Enable Round Robin and Round Robin time to set the page settings on the client. or not .

5.3 Preview Control

Stop: Stop the currently selected window preview.

Video: Click the video button to start the currently selected client video playback window, click again to stop recording

Drawings: Save the currently selected window screen shot

5.4 Sound control

Right click in the player window, pop-up player menu, select "open voice" to open the window of the audio preview, again right click and choose "turn off the sound" to close the preview.

Note: The software can also open a window of the audio, if the next window to open the voice will automatically turn off the audio on a window.

5.5 Other features

Double-click to enlarge: In the multi-screen mode, double-click the playback window will enlarge the window, double-click again to return

Screen mode: multi-screen mode can be switched.

Full Screen: hidden part of the program, to maximize the player window panel.

In the current window mode shows the remaining window. A total of 64 Preview window shows each page. Page number depends on the window screen mode

Sixth: PTZ control

6.1 Sixth: PTZ control

Control the direction of head rotation, speed, aperture, focus, focus. As well as lighting, wipers and other auxiliary functions.

6.2 Locus

Setting and control PTZ locus

Pre-set locations

Set PTZ preset point

6.3 Cruise

Set point head cruise, cruise path.

6.4 Screen adjustment

Set the screen brightness, contrast, color, saturation.

Seventh :video and playback

7.1 Client local video

Client video is divided have two parts, namely and the client manually recording video and program.

Manual control of the client video in the preview column, click on the video, then start recording.

Program video configuration page to set the client program recording time.

All clients and package size of the video path set by the client settings page.



 
7.2 remote playback

Click the Software tab bar's "Playback" button, select "Remote Playback", then enter the remote playback interface.

7.2.1 Remote video file retrieval

The device tree on the right to select the equipment needed query, the search panel below to select the channel search, select the type and start time of recording, click "File Search", you can file search results appear.


In the search results on the right, flip and jump can be controlled.

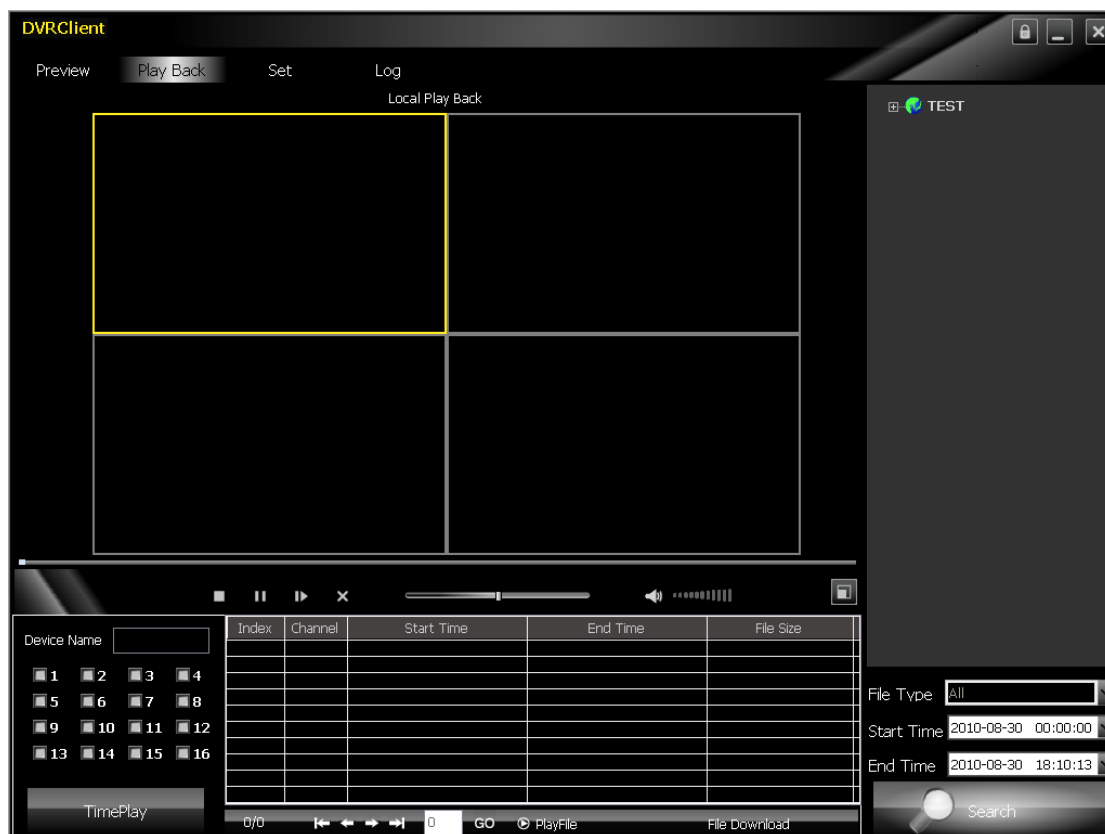

7.2.2 remote file playback

Select the window to play the playback, and select the file in the search results, double-click or right click on "File Playback" to start the file playback.

 
Select query, click the "intervals", you can playback video by time.

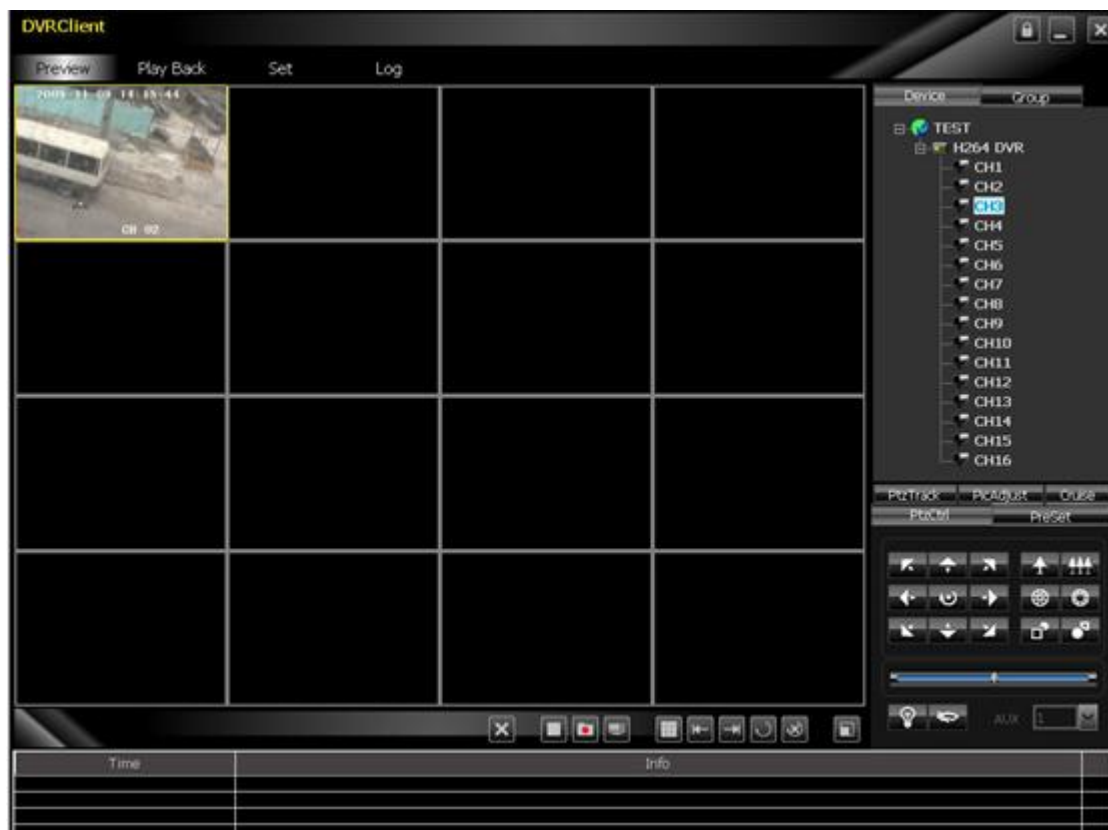

Note: according to time intervals for up to four channels, but when the start time of playback, playback will start turning off all windows and then start playback.

7.2.3 remote file download

 Select the file in the search results, click on the right of "File Download", you can start downloading files, and download progress bar will appear below.

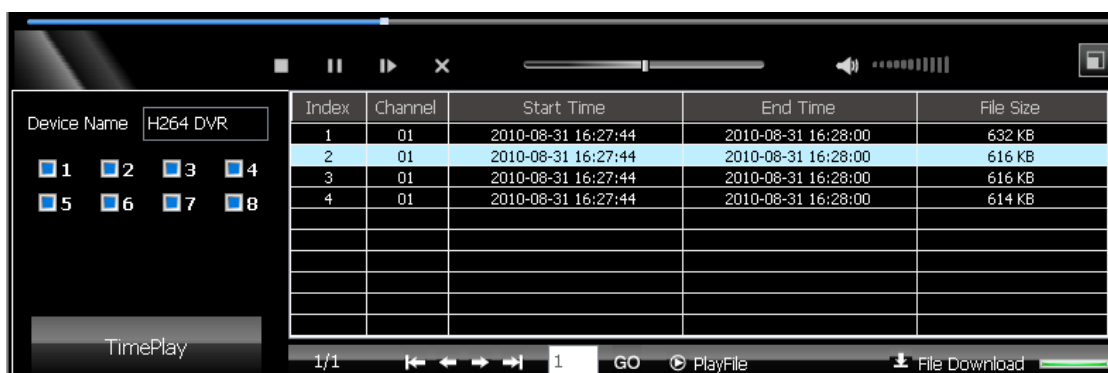

7.2.4 Playback Control

First select the window to control, and playback control bar displays the current release of the progress, and rate.

May be drag on the currently selected playback, pause, stop, drawings, quiet, rate control

Click "Full Stop" to stop all the playback window.

7.3 local playback

Click the Software tab bar's "Playback" button, select the "local playback", you can enter the local playback interface.

Search playback and remote playback control and operate the same can not be downloaded ..
locally playback file, the file type is not optional.

Eighth: server configuration

Click "Configuration" - "server configuration", enter the server configuration page.

First of all, the right side of the device tree to select configuration page, modify the configuration on the page after click Save to save the parameters.

The screenshot displays the 'DVRClient' application window. The top menu bar includes 'Preview', 'Play Back', 'Set', and 'Log'. The 'Set' menu is expanded, showing sub-options: 'ServerInfo', 'ChannelInfo', 'AlarmInfo', 'UserInfo', 'RecordInfo', 'VideoInfo', and 'Other'. The 'ServerInfo' sub-option is selected, leading to the 'Server Configuration' page. On the left, a sidebar contains icons for 'Device Manage', 'Server Setting' (highlighted), 'Client Setting', and 'User Manage'. The main configuration area is divided into three sections: 'Device Info' with fields for 'DeviceName', 'DeviceModel', and 'Mac Addr'; 'System Info' with dropdowns for 'DiskFull' (No), 'Lock Time' (Never), 'Auto Switch' (Never), 'Transparency' (Opaque), 'State Display' (checkbox), 'Resolution', 'Standard' (PAL), and 'Language' (Chinese); and 'Network Info' with checkboxes for 'DHCP' and 'PPPOE', and fields for 'Device Port', 'IP Addr', 'NetMask', 'Gateway', 'HTTP Port', 'DDNS Addr', 'PPPoE User', 'PPPoE Password', 'DDNS User', 'DDNS Service' (3322), 'DDNS Domain', and 'DDNS Password'. 'OK' and 'Cancel' buttons are at the bottom right.

8.1 System configuration information

ServerInfoChannelInfoAlarmInfoUserInfoRecordInfoVideoInfoOther

TEST

Device Info

DeviceName

DeviceModel

Mac Addr

System Info

DiskFull

No

State Display

☐

Lock Time

Never

Resolution

Auto Switch

Never

Standard

PAL

Transparency

Opaque

Language

Chinese

Network Info

☐ DHCP

Device Port

0

HTTP Port

0

IP Addr

.

.

.

NetMask

.

.

.

Gateway

.

.

.

DDNS Addr

.

.

.

☐ PPPOE

PPPoE User

PPPoE Password

DDNS User

DDNS Service

3322

DDNS Domain

DDNS Password

☐ DDNS

OK

Cancel

8.2-channel configuration information

CAMERA SHOP 24

ServerInfo
ChannelInfo
AlarmInfo
UserInfo
RecordInfo
VideoInfo
Other

Channel Param

ChnName

Channel

01

Image Param

☐ Show Name

ChannelPos

☐ Show Time

TimePos

☐ Overlay

Area

Record Param

Bit Rate

64Kbps

Stream Type

Video

Bit Type

CBR

Quality

Best

FrameRate

25 fps

SubStream Param

Bit Rate

64Kbps

Stream Type

Video

Bit Type

CBR

Quality

Best

FrameRate

25 fps

Resolution

PTZ Param

Baudrate

115200

Data Bit

8

Stop Bit

1

Check

No

Control

No

Protocol

Pelco-d

DecoderAddr

0

Copy To Other Channel

☐ 01
☐ 02
☐ 03
☐ 04
☐ 05
☐ 06
☐ 07
☐ 08
☐ 09
☐ 10
☐ 11
☐ 12
☐ 13
☐ 14
☐ 15
☐ 16

All Yes/No

OK

Cancel

8.3 Alarm Configuration Information

ServerInfo
ChannelInfo
AlarmInfo
UserInfo
RecordInfo
VideoInfo
Other

AlarmIn Info

AlarmIn ID
01
Type
High
TreatAlarm
☐

PTZ LinkAge

LinkAgeID
01

☐ EnableTrack
☐ EnableCruise
☐ EnablePreset

CruisePathNum
0
PresetPoint
0

AlarmOut Info

AlarmOut ID
01
Type
Normal Open
Email Addr

Trigger AlarmOut

☐ 01
☐ 02
☐ 03
☐ 04

Trigger Info

Email Alarm
☐
Sound Alarm
☐
Delay
5s

Trigger Record Channel

☐ 01
☐ 02
☐ 03
☐ 04
☐ 05
☐ 06
☐ 07
☐ 08
☐ 09
☐ 10
☐ 11
☐ 12
☐ 13
☐ 14
☐ 15
☐ 16
All Yes/No

Copy To Other Channel

☐ 01
☐ 02
☐ 03
☐ 04
☐ 05
☐ 06
☐ 07
☐ 08
☐ 09
☐ 10
☐ 11
☐ 12
☐ 13
☐ 14
☐ 15
☐ 16
All Yes/No

OK
Cancel

8.4 User Management Configuration

ServerInfo ChannelInfo AlarmInfo **UserInfo** RecordInfo VideoInfo Other

UserInfo

User ID01

▼

UserName

Password

Confirm

Remote Right

Ptz Ctrl

☐

Record

☐

PlayBack

☐

SetParam

☐

Log

☐

Tool

☐

Preview

☐

Alarm

☐

VOIP

☐

Local Right

Ptz Ctrl

☐

Record

☐

PlayBack

☐

SetParam

☐

Log

☐

Tool

☐

Del User

OK

Cancel

8.5 video deployment

ServerInfo
ChannelInfo
AlarmInfo
UserInfo
RecordInfo
VideoInfo
Other

Record Schedule Info

RecordChannel
01
Day
Mon

Mon

0

6

12

18

Timing
Alarm
MD
Combined
Empty

Schedule

RecordTime

18:02
18:02
18:02
18:02

Timing
MD
Alarm

Copy To Other Week

Mon
Tues
Wednes
Thurs
Fri
Satur
Sun

Copy To Other Channel

01
02
03
04
05
06
07
08
09
10
11
12
13
14
15
16

All Yes/No

OK
Cancel

8.6 Video detection configuration

ServerInfo ChannelInfo AlarmInfo UserInfo RecordInfo VideoInfo Other

VideoDetection Info

Video Channel01Area

Detection TypeMD

Trigger AlarmOut

☐ 01☐ 02☐ 03☐ 04

Trigger Info

Email Alarm☐ Sound Alarm☐

Delay5sSenseNoDetect

Trigger Record Channel

☐ 01☐ 02☐ 03☐ 04☐ 05☐ 06☐ 07☐ 08

☐ 09☐ 10☐ 11☐ 12☐ 13☐ 14☐ 15☐ 16All Yes/No

OKCancel

8.7 Other configurations

ServerInfo
ChannelInfo
AlarmInfo
UserInfo
RecordInfo
VideoInfo
Other

Manual Record

☐ 01
☐ 02
☐ 03
☐ 04
☐ 05
☐ 06
☐ 07
☐ 08

☐ 09
☐ 10
☐ 11
☐ 12
☐ 13
☐ 14
☐ 15
☐ 16

Set
All Yes/No

Disk Info

SATA_01	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_02	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_03	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_04	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_05	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_06	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_07	DM /DM	00:00-00:00	Formatted	Dormancy
SATA_08	DM /DM	00:00-00:00	Formatted	Dormancy

System Time

2010-08-30 18:02:05

Refresh
Set

RemoteCtrl

Clear Alarm
Restart

FactorySet
Update

Ninth: the Client Configuration

9.1 Local Configuration

Local Setting

Record Setting

Warning Linkage

Loop Play

☐ Enable Loop

Loop Time[s]

5

Snap Picture Setting

☐ Snap JPEG Picture

Path Setting

Remote Download File Path

C:\DownLoad

Browse

Save Snap Picture Path

C:\PictureFile

Browse

Advanced Setting

Warning Linkage

☐ Warning Sound Out

Warning Time delay [s]

Log Setting

Save Warning Log Time

One Month

Save Operator Log Time

One Month

System Time

One Month

Other Setting

☐ Automatic LogOn

Save

Local configuration options can be configured as follows: Robin, capture, save path. Alarm client configuration, log maintenance, and automatic login.

9.2 Video Configuration

Local SettingRecord SettingWarning Linkage

Local Record Setting

☐ Circulation Record

Start DriverC:\

End DriverC:\

Max File Size32M

Save

Set Record Planning

☐ Plan Record

TEST

☐ All Day Records

	Start Time	End Time
Time Section 1	00:00	00:00
Time Section 2	00:00	00:00
Time Section 3	00:00	00:00
Time Section 4	00:00	00:00

Save

Note: After saving the local video configuration parameters need to restart the client to take effect, and the plan is the premise of the video stream must have a preview..

9.2.1 Video save path

Set the starting end drive, set the video save path, set the file package size, the largest single file size limit.

9.2.1 Plan Video

Check "program video" to open the program video.

In the left side of the device tree, select the video channel to program, set the right time to the video, click Save.

9.3 Alarm Linkage

Client option set alarm linkage.

Tenth: Log

