

# Kameleon series LED PAR 64 RGB - 36X3W USER MANUAL



## **CAUTION!**

Keep this device away from rain and moisture!  
Unplug mains lead before opening the housing!

For your own safety, please read this user manual carefully before your initial start-up!

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- include every supplementary update with the original manual

Before your initial start-up, please make sure that there is no damage caused during shipment. Should there be any, do not use the device and consult your supplier.

## **SAFETY INSTRUCTIONS**

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

**Important:** Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

Always plug in the power unit last.

Keep away from heaters and other heating sources! Keep away children and amateurs from the

device! Never leave the device running unattended!

If the device has been exposed to drastic temperature fluctuation (e. g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class III. It always has to be operated with an appropriate transformer. Check the device, the power cord and transformer from time to time. Make sure that the transformer is the correct type as that stated on the rear panel.

Always disconnect from the mains, when the device is not in use or before cleaning it.

There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are not subject to warranty.

## **OPERATING DETERMINATIONS**

This device is an LED lighting for color decoration in discotheques, on stages etc. It is allowed to be operated with an AC of 200 - 250 V, and is designed for indoor use only.

Do not shake the device. Avoid brute force when installing or operating.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!



Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!

Please use the original packaging if the device is to be transported.

Please consider that unauthorized modifications on the device are forbidden due to safety reasons!

If this device will be operated in any way different to the one described in this manual, it may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, etc.

## REAR PANEL

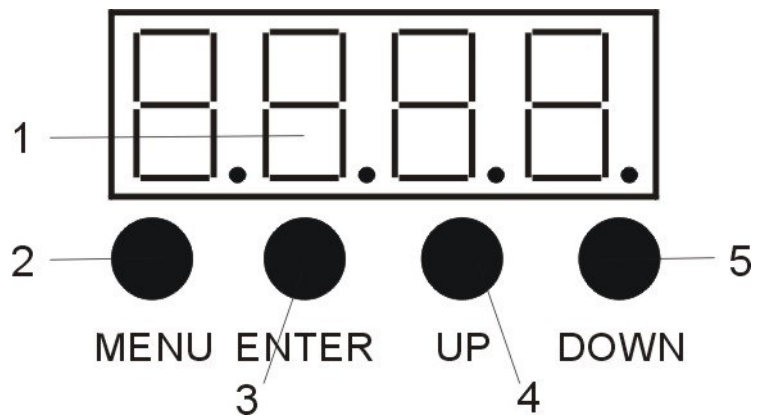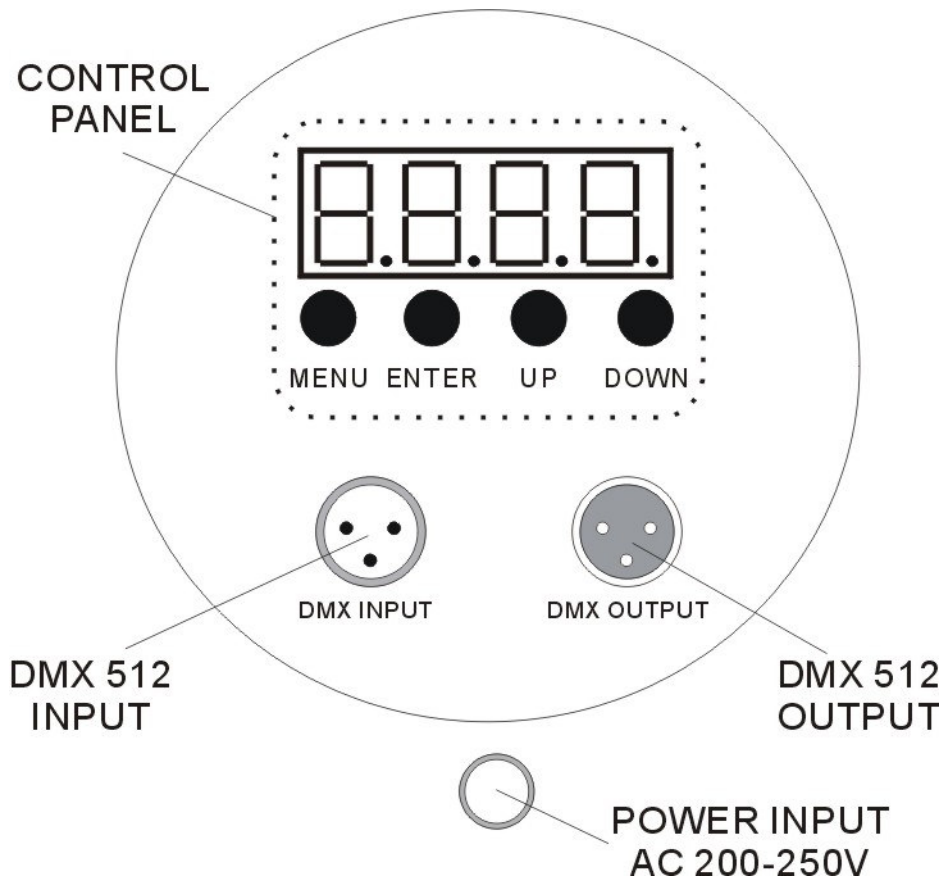





## CONTROL PANEL

1. LED DISPLAY
2. MENU BUTTON
3. ENTER BUTTON
4. UP BUTTON
5. DOWN BUTTON

## SETUP

1. Rigging the device

	<b>DANGER OF FIRE!</b> Make sure there is no inflammable material nearby during installing. Follow the instructions stated on the bottom of the base of this device.	
	<b>WARNING!</b> Use 2 clamps to rig the fixture onto a truss. Make sure it is fixed properly! Ensure the structure (truss) is secure.	

This device can be installed directly onto a truss, wall or stage floor in any orientation without altering its operation characteristics.

Use proper bolts to mount the device via its brackets. The brackets should be attached to the device with proper bolts!

Always use a secondary safety rope that can hold at least 10 times the weight of the device.

The minimum distance between the device and illuminated surface is 1 meter. There should not be any flammable materials 10 meters around the device!


2. Connection to mains

Connect the device to mains with the enclosed power plug. The occupation of the connection cables is as below:


Cable color	Pin	Internation code
Brown	Live	L
Blue	Neutral	N
Yellow / Green	Earth	

The earth has to be connected.

### 3. Master-slave / DMX 512 connection




The wires must not come into contact with each other, otherwise the fixtures will not work at all, or will not work properly.




Only use a stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

#### Occupation of the XLR-connection:

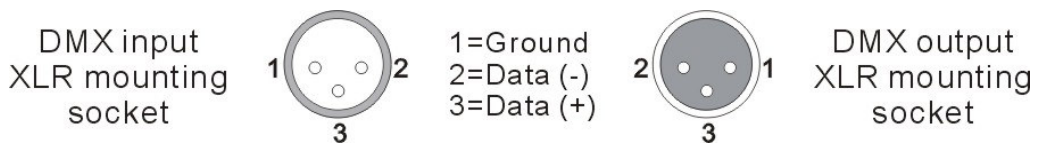

If you are using controllers with this occupation, you can connect the DMX-output of The controller directly with the DMX-input of the 1st device in the DMX-chain. If you wish to connect DMX-controllers with other XLR-outputs, you need to use adapter-cables.

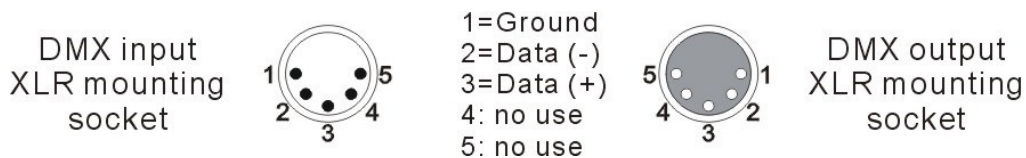


#### ***Building a serial Master-slave / DMX-chain:***

For Master-slave connection, you need to set a device as the Master device. All other devices will be the slave devices.

Connect the DMX-output of the first device (Master) in the chain with the DMX-input of the second device (the first slave device). Connect the DMX-output of the second device (the first slave device) with the DMX-input of the third device (the second slave device). Always connect one output with the input of the next device until all devices are connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120Ω resistor between Signal (-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of

the last fixture.

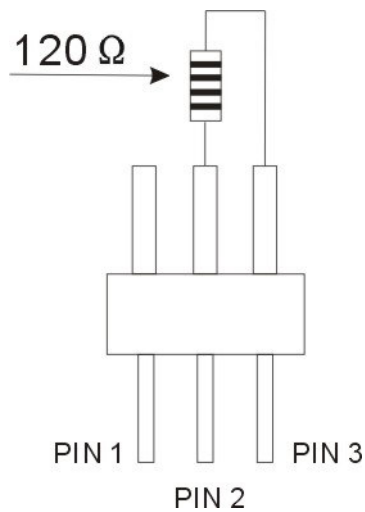

#### 4. Control panel and display

The control panel on the device allows you to control the device, including DMX start address setting, Automatic operation setting, Manuel dimmer, Rainbow effect setup, etc.

##### *Display window*

The device use a 4-digits red color LED display module for displaying your setting. The module can display some simple letters and figures.

##### *Buttons for setup*

MENU button: Prepare to select the menu or exit without saving

UP / DOWN: Select the menu or select your desired value

ENTER (SAVE): Enter main menu / Save your selected value

##### **Menu extension**

The LED display allows you to extend or abbreviate the menu.

Press the Menu button.

Press the Up or Down buttons until it shows -Menu- in the display.


Press Enter button to enter setting.

Press the Up or Down buttons to select -on- or -oFF-.

Then press the Enter button to save or press the Menu button to exit.

If you select -on-, then the menu is complete.

If you select -oFF-, then the menu is incomplete. The display will only show the -AXXX- for DMX control mode and -Menu- for Menu extension.

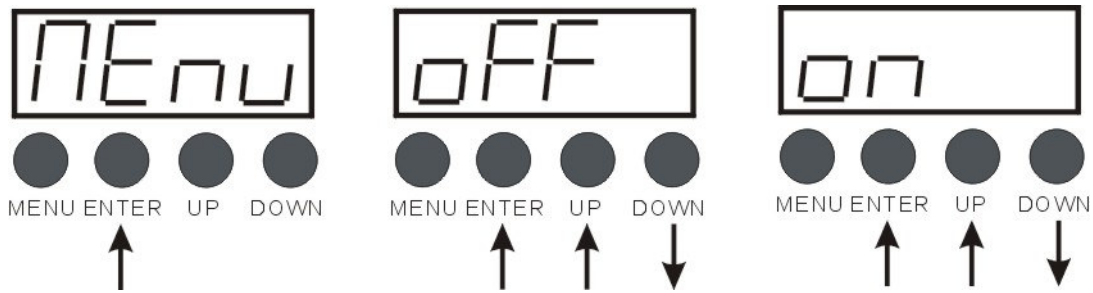


**Complete Main Menu**

Press The Menu button, then press Up or Down button, the display will show below:

- 1) [Axxx]. This is the DMX starting address. See page 8.
- 2) [Menu], This is the Menu extension setting. See above.
- 3) [FLAS] or [FADE] or [ACC-]. This is automatic operation. See page 7.
- 4) [SOUD] or [SOUF]. This is sound-active operation. See page 7.
- 5) [C1--], [C2--], or [C3--]. This is manuel dimmer of the 3 colors. See page 8.
- 6) [xr--]. This is the Red color setting for the rainbow effect. See page 10.
- 7) [xG--]. This is the Green color setting for the rainbow effect. See page 10.
- 8) [xb--]. This is the Blue color setting for the rainbow effect. See page 10.
- 9) [tESt]. This is the test running of your programmed rainbow effect by the menu 6- 9. See page 10.
- 10) [LoAd]. This is the loading of the factory default settings. See page 11.

**OPERATION**

**Auto operation**

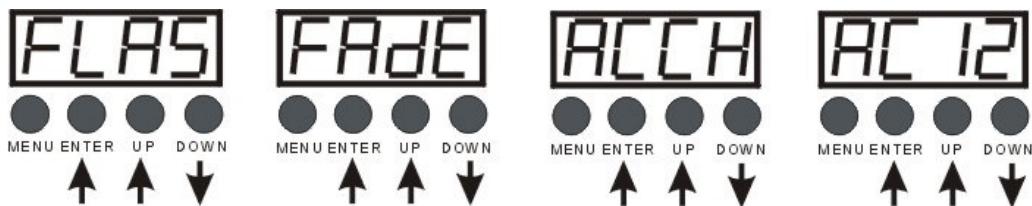

Press the Menu button. Press the Up or Down button until it shows one of the following:

- FLAS: means strobe effect.
- FADE: means fade in and fade out effect.
- ACCH-: means automatic color changing effect.

Press Enter button to enter.

Press Up or Down button to select one of them, the device will be operated automatically by the

built-in programs.


Press Enter button, the last two digits in the display will show 00-12. This is the speed or different built-in programs.

The first two digits in the display will not change.

Press Up or Down button to select.

Press Enter button to save or press Menu button to exit.

### ***Music operation***

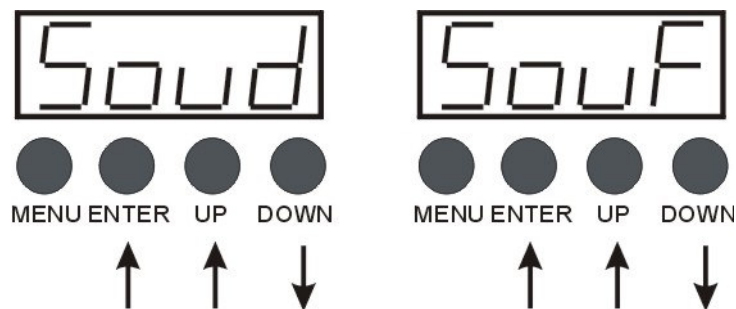

Press the Menu button.


Press the Up or Down button until it shows one of the following:

- SOUF: means sound-active effect (mode 1).
- SOUD: means sound-active effect (mode 2).

Press Enter button. Press Up or Down button to select one of them.

Press Enter button to save (the device will be operated by the music signal received by the built-in micro-phone) or press Menu button to exit.

### ***Manual operation***

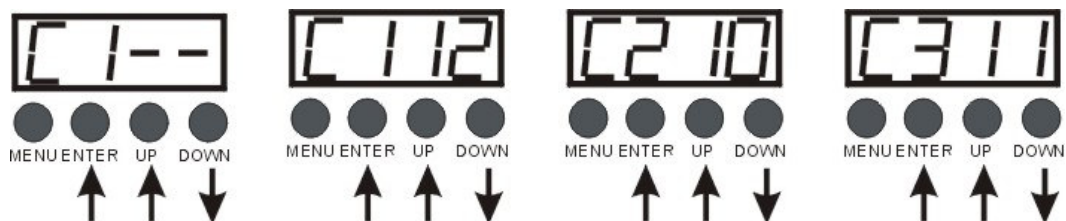

Press the Menu button.

Press Up/Down button until it shows C1-C3 in the display. C1, C2, C3 means Red, Green and Blue color respectively.

Press Enter button.

Press Up or Down button to select C1, C2, or C3.

Press the Enter button, the last 2 digits in the display will show 00-12. This is the level of the



manual dimmer.

Press Enter button to save or press Menu button to exit.

## ***DMX operation***

### **DMX start address setting**

This device has 8 DMX channels. If you set, for example, the DMX start address to channel 1, the device will use the channels # 1st to 8th for control. The first available channel for the next fixture will be the 9th. Please be sure that you do not have any overlapping channels in order to control each device correctly and independently from any other fixture on the DMX chain.

If two, three or more devices are addressed similarly, they will work similarly.


Press the Menu button.

Press the Up/Down button until it shows AXXX in the display.

XXX is the address you set last time.

Press Enter button. Press Up/Down button to select your desired address, e.g. A001.

Press Enter button to save or press Menu button to exit.

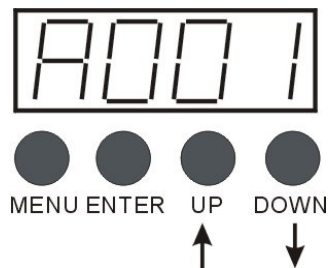


## DMX channel Values

Channel	Value	Function
1	000-255	Master dimmer (0% - 100%)
2	000-255	Red color dimmer (0% - 100%)
3	000-255	Green color dimmer (0% - 100%)
4	000-255	Blue color dimmer (0% - 100%)
5	000-255	Strobe effect, speed adjustable (slow to fast)
6	000-127 128-255	Preset Programs Blackout Fade Program: Use ch 5 to adjust speed
7	000-127 128-191 192-255	Preset Programs Blackout Color Chase: Use ch 5 to adjust speed Color Chase: Random speed unadjustable
8	000-007 008-015 016-023 024-031 032-039 040-047 048-055 056-063 064-071 072-079 080-087 088-095 096-103 104-111 112-119 120-127 128-135 136-143 144-151 152-159 160-167 168-175 176-183 184-191 192-199 200-207 208-215 216-223 224-231 232-239 240-247 248-255	Macro of colors Off Red 100%    Green 20%    Blue Red 100%    Green 40%    Blue Red 100%    Green 60%    Blue Red 100%    Green 80%    Blue Red 100%    Green 100%    Blue Red            Green 100%    Blue Red            Green 100%    Blue 20% Red            Green 100%    Blue 40% Red            Green 100%    Blue 60% Red            Green 100%    Blue 80% Red            Green 100%    Blue 100% Red            Green            Blue 100% Red 20%      Green            Blue 100% Red 40%      Green            Blue 100% Red 60%      Green            Blue 100% Red 80%      Green            Blue 100% Red 100%     Green            Blue 100% Red 100%     Green 25%      Blue 100% Red 100%     Green 50%      Blue 100% Red 100%     Green 75%      Blue 100% Red 100%     Green 100%     Blue 100% Red 100%     Green 100%     Blue 25% Red 100%     Green 100%     Blue 50% Red 100%     Green 100%     Blue 75% Red 100%     Green 100%     Blue 100% Red 20%      Green 100%     Blue 100% Red 40%      Green 100%     Blue 100% Red 60%      Green 100%     Blue 100% Red 80%      Green 100%     Blue 100% Red 20%      Green 100%     Blue 100% Red 50%      Green 50%      Blue 50%

### *Rainbow effect setting*

The control panel allows you to program a rainbow effect up to 16 scenes. In each scene you may set the dimmer level of up to 4 colors. After your setting, all scenes you set can be run continuously by pressing the [tESt] menu.

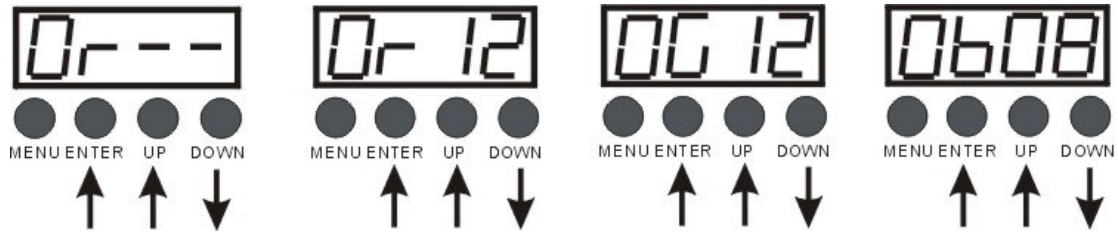

- A. Press the Menu button.
- B. Press the Up/Down button until it shows [0r--], [0G--], or [0b--] in the display.  
The first digit is a figure or letter between 0 - F, means the 16 scenes of rainbow effect. Usually it will be 0. The r, G, b means Red, Green, Blue color respectively.
- C. Press the Enter button. It will show [0xYY]. X means the color you selected (r, G, or b). YY is a figure between 00-12. This is the dimmer level of the current color for the first scene you set last time. The first time you will see 00.
- D. Press the Up/Down button to select the last 2 digits from 00 to 12.
- E. Press Enter button to save. In the display, the first digit will show the number of the next scene automatically.
- F. Press the Up/Down button to select the last 2 digits from 00 to 12.

Repeat the steps E-F until you set the dimmer level for the current color for all scenes (scene 0 to scene F).


Repeat the above steps until you set the dimmer level for all 3 colors for all scenes (scene 0 to scene F).

To set different value for all 16 scenes of 4 colors, you will get different rainbow effect at different speed.

E.g. 0r00, 1r01, 2r03, 3r04,4r05, 5r06...0G12, 1G11, 2G10, 3G09, 4G08, 5G07... You will get a slow rainbow effect, the red color fade in while the green color fade out.

***Rainbow effect operation***

After your setting of all the 16 scenes of the rainbow effect, the device can work in the Rainbow effect operation.

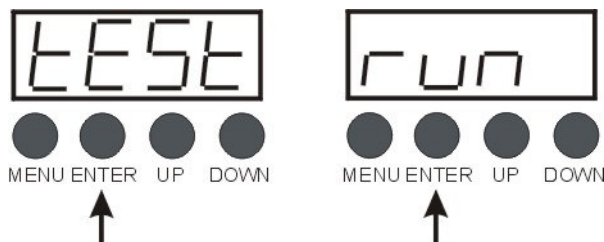

- Press the Menu button.
- Press the Up/Down until it shows [tEst] in the display.

Press the ENTER button. It will show [ run] in the display.

Press the Enter button.


The device will now work in the Rainbow operation with the scenes you set.

### ***Factory default setting***

Press the Menu button. Press the Up/Down button until it shows [LoAd] in the display.

Press the ENTER button. It will show one of following:

- [Addr]: only the DMX start address will be preset to default.
- [Auto]: only the FLAS/FADE/ACCHvalues will be preset to default.
- [Clor]: only the C1-C4 values will be preset to default.
- [rAin]: only the rainbow scenes you set will be preset to default.
- [ALL ]: all data will be preset to default.

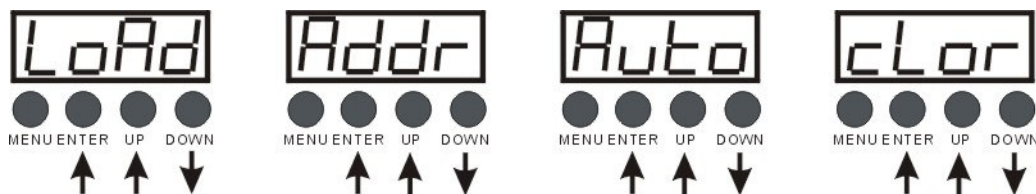

Press Up/Down button to select one of them.

Press the Enter button.

### ***Master-slave operation***

More devices can work synchronizely when there is no DMX signal input.

For Master-slave operation, you need to use one device as the master. The master device can be any one in a DMX (Master-slave) chain.

The Master device must be set to Auto, Sound, Rainbow or Manuel operation. The slave devices must be set to work in DMX mode.

## CLEANING AND MAINTENANCE



The operator has to make sure that safety-relating and machine-technical installation are inspected by

- an expert after every four years in the course of an acceptance test.
  - a skilled person once a year.
1. All screws used for installing the devices or parts have to be tightly connected and must not be corroded.
  2. There must not be any deformations on the housing, fixations and installation spots (ceiling, suspension, trussing, etc.)
  3. The electric power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

The interior of the device need to be cleaned at least annually by an air-jet or a vacuum cleaner.

There are no serviceable parts inside the device except for the lamp and fuse. Maintenance and service operation can be only carried by authorized dealers.

Should you need any spare parts, please use genuine parts.

Should you have further questions, please contact DGM.

## TECHNICAL SPECIFICATIONS

<b>Power supply:</b>	<b>AC 200-250V, 50Hz ~</b>
<b>Power consumption:</b>	<b>110W</b>
<b>LED quantity:</b>	<b>36x3W RGB-in-1 LEDs (red 1w + green 1w + blue 1w)</b>
<b>Service life:</b>	<b>Exceed 50,000 hours</b>
<b>Working mode:</b>	<b>Sound-activated via built-in microphone</b>
	<b>Auto programs / Manuel setting</b>
	<b>DMX 512 control, 8 channels</b>

<b>Dimmension:</b>	<b>230x230x330mm</b>
<b>Carton size:</b>	<b>240x240x340mm</b>
<b>Net weight:</b>	<b>2 kgs</b>
<b>Gross weight:</b>	<b>2.5kgs</b>

Please note: Every information is subject to change without prior notice.

DGM is a trademark from de Grooth audio & Light Service. The Netherlands.

**[www.d-g-m.nl](http://www.d-g-m.nl)**