

Brava User Manual

Claims

We reserve our right to make changes and improvements to any of the products described in this manual without prior notice. Under no circumstances shall we be responsible for any loss of data, income, or any special, incidental, consequential or indirect damages howsoever caused.

The content of this manual is provided "as is". To the fullest extent permissible by law, we make no representations or warranties of any kind, either express or implied, for, but not limited to, the accuracy, merchantability, and fitness of this manual for a particular purpose

Contents

For Your Safety	1
Brief Introduction	3
Your phone's label	3
Phone image	3
Key definition	5
Touch screen	6
Silent mode	7
Screen sleep	7
Screen lock	8
Shortcuts	9
Wireless off	10
Making phone calls	11
Power on/off	11
USB storage	12
Home screen	13
Home screen	13
Extended home screen	14
Create Home screen shortcuts and widgets	14
Remove items from the Home screen	15
Move objects on the Home screen	15
Create and delete folders on the Home screen	15

Customize Home screen wallpaper	16
Notification and connection status icons	17
Getting Started	21
Installing the battery	21
Installing the SIM card	22
Installing a memory card	23
Charging the battery	23
Battery tips	24
Use and maintenance	25
System settings	27
Wireless controls	27
Call settings	28
Sound & display	29
Security & location	31
Applications	32
SD card & phone storage	33
Date & time	34
Locale & text	34
About phone	35
Bluetooth	36
Turn on Bluetooth services	36
Discoverability	36
Name your Bluetooth device	37

Pair & connect with Bluetooth devices	37
Rescan for Bluetooth devices	38
Contacts	39
Your contact list	39
Search for a contact	40
Add a contact	40
Assign favorites	41
Edit contact details	41
Delete contact	41
Communicate with a contact	42
Display a contact group	44
Contacts settings	44
Email and Messaging	45
Email	45
SMS and MMS messaging	49
Browser	57
About the Browser	57
Zoom and navigation in Web pages	57
The Browse screen	58
Open pages in separate windows	59
Manage bookmarks	61
Set your home page	63
Links in Web pages	63

Browser history	65
View the most visited webs	65
Download Web files and applications	66
View your downloads	66
Browser settings	67
Dialer & Voice Dialer	70
About the dialers	70
Make a call by dialing	71
Answer an incoming call	73
In-call options	74
Multiple calls	75
Call log	79
Call settings	80
Calendar	83
Calendar views	83
Create an event	86
The View event screen	88
Event reminders	89
Edit an event	90
Go to today	91
Calendar settings	91
Camera, Camcorder & Gallery	92
Before you begin	92

Camera	93
Video Recorder	95
Settings of Camera	95
Gallery	96
Music & Video player	102
Music	102
Video player	107
Tools	109
Alarm Clock	109
Calculator	112
File Manager	114
Spare parts	115
FM radio	116
General Information	118
Accessories	118
GPRS/EDGE	118
Battery Care	118
Charger Attention	120
Care and Maintenance	120
Important Safety Information	122
Access Codes	122
Electronic Devices	124
Potentially Explosive Atmospheres	125
Driving	126

Emergency Calls	127
Battery Information	128
Accessories	129
Safety of the battery	129
Rapid travel charger	129
Data cable	129
Condition of Warranty	130

Welcome

Thank you for purchasing **(customer's name)** Mobile phone. We built our Handset to give user what we believe user really want from a wireless phone, clear sound, and fashion outlook.






Our advanced technology is designed to grow with user's communications needs so that one day you will be able to rely entirely on users Handset to stay connected.




 

This guide will familiarize user with our technology and new Handset phone through simple, easy to follow instructions. If users have already reviewed the Quick Start Guide, which was packaged with new Handset, then user is ready to explore the advanced features outlined in this guide.

If users have not read "Quick Start Guide", go to Section One Getting Started. This section provides the entire information user needs to quickly activate phone, and much more.

We congratulate on your choice.

For Your Safety

	SWITCH ON SAFELY Do not use in prohibited areas or when it may cause any interference or danger.
	SWITCH OFF IN HOSPITALS Follow any restrictions. Switch the phone off near medical equipment.
	SWITCH OFF WHEN REFUELING Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	SWITCH OFF IN AIRCRAFT Follow any restrictions. Switch off the phone during the flight as wireless devices can cause interference in aircraft.
	ROAD SAFETY Obey all local laws. Please use the hands-free kit while driving.

	ACCESSORIES AND BATTERIES
	Use only approved accessories and batteries. Do not attempt to connect incompatible products.
	BACKUP IMPORTANT INFORMATION
	Remember to make backup copies or keep a written record of all important information.
	CONNECTING TO OTHER DEVICES
	When connecting to any other device, read its user manual for detailed safety instructions. Do not try to connect incompatible products.
	MAINTENANCE
	Only authorized and qualified personnel may repair this product.
	WATER RESISTANCE
	Your phone is not water-resistant. Keep it dry.
	INTERFERENCE
	All wireless devices may be susceptible to interference, which could affect its performance.

Damage to the security seal will invalidate the warranty.

Warning : Improper use will invalidate the warranty.

Brief Introduction

Your phone's label

The barcode label includes important information about services and customer support. Please keep it properly.

Phone image

Note: All the illustrations, simulated screen and related images in the manual are for reference only.



1	Volume up key	8	Charge indicator light
2	Volume down key	9	Power & End key
3	Receiver	10	USB port
4	Touch screen	11	Microphone
5	Menu key	12	Camera key
6	Home key	13	Loudspeaker
7	Back key	14	Camera lens



Key definition

A few simple keys make it easy to operate.

Home key

- Press to return to the home screen from anywhere on your phone (except home screen and Contacts, Dialer, Call log and Favorites).
- Press & hold to bring up the recent applications window.
- When there is an incoming call, press to answer the call.
- Press to open the **Dialerpad**.

Back key: Press to go back to the previous menu, or to dismiss a dialog box or menu.

Menu key

- Press to open a list of actions you can take on the current screen.
- Press to wake up the screen, and press again to unlock the screen.

Volume keys: Press to adjust the volume.

Camera key

- When on the Home screen, press & hold to go to the capture screen.
- When in the Camera application, press half-way down to focus, then complete the press to take a picture.

Power & End key

- When on a call, press to hang up.
- When not on a call, press to lock the screen and put the phone to sleep.

- When not on a call, press & hold to open the phone context menu, from which you can power off or put your phone in silent mode.
- When the phone is off, press and hold to power it on.

Touch screen

Selection

To select an item or button on the screen, touch the item directly with your fingertip. You will know when an item on the screen is selected when its color changes.

Context menus

To open the context menu for an item on the screen, touch & hold the item on the screen with your fingertip. You must hold for one full second before the context menu appear.

Scroll

To scroll up or down in a list or page on the screen, you can Slide your finger up/down on the screen.

Crop pictures

When creating wallpaper or an icon from a picture, you can control how the picture is cropped. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it with the picture.

Drag items

In some contexts you can drag items on the screen with your fingertip. Moving the cropper frame within a picture is one example.

Screen orientation

Your screen's orientation always switches automatically when the phone orientation changes. Press the **Menu** key in the home screen, then select **Settings > Sound & display > Orientation**. Unselect the check box to let your screen keep the portrait orientation.

Silent mode

To silence your phone quickly, press and hold the **Power & End** key to open the option menu, and select **Silent mode**.

Other ways to silence your phone:

Press and hold the **Volume down** key to zero volume.

Screen sleep

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your phone uses less battery power. You can control this behavior:

Set screen timeout period

1. Return to the **Home** screen, then press the **Menu** key to select **Settings > Sound & display**.
2. Select **Screen timeout**, then select a time or never timeout from the menu.

Prevent sleep while charging

1. Return to the home screen, then press the **Menu** key to select **Settings > Applications**.
2. Select **Development**, then select the **Stay awake** check box.

Lock screen & put phone to sleep (immediately)

Except when on a phone call, from any screen, press the **Power & End key**.

 
Screen lock

While not on a call, to lock your control buttons and screen from accidental touch activation, press the **Power & End key**. To unlock your screen, press the **Menu key**.

You can increase the security of your phone by setting a screen unlock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:

1. Return to the **Home** screen, then press the **Menu key** and select **Settings**.
2. Select **Security & location**, then scroll down to the Screen unlock pattern section.
3. Select the **Require pattern** check box.
4. Set or change your unlock pattern by selecting either **Set unlock pattern** or **Change unlock pattern**, as applicable.
5. Follow the prompts to define your pattern.

Note: You must slide your finger along the screen to create the pattern, not select individual dots. Connect at least four dots.

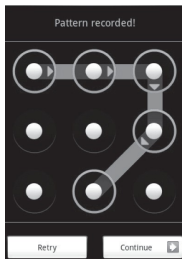

- When you unlock your screen, if you want your pattern to be hidden as you draw it, clear the **Use visible pattern** check box.

Shortcuts

Use these control buttons from anywhere on your phone:

Lock screen and put phone to sleep

Press the **Power & End key**.

Open dialer

 
Press the **Home key**, and select **Dialer** tab or press  to enter **Dialer** directly.

Open voice dialer

Select **voice dialer** in the **Home** screen.


Open the recent applications window

From any screen, press and hold the **Home Key** to open the recent applications window. The window displays (up to) the last six applications you used since last restarting your phone. Select an application to open it.

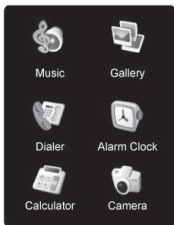


Wireless off

When you need to turn off all your phone radios, switch to "airplane" mode:

1. Return to the **Home** screen, then press the **Menu** key and select **Settings**.
2. Select **Wireless controls**, then select the **Airplane mode** check box. When selected the airplane mode icon  displays in the status bar and all wireless connections are disabled.
3. To enable wireless connections again, return to this settings screen and clear the **Airplane mode** check box.

Tip: To set your handset as Airplane mode quickly, press and hold the **Power & End** key to open the option menu, and select **Airplane mode**.

Making phone calls

To dial a number, press the **Home** key or the icon  to open the call logs and touch the **Dialerpad** or To answer an incoming call, press the **Home** key. To end a call, press the **Power & End** key or **Back** key.

While in a call, press the **Menu** key to reveal the in-call options.

Show dialpad: Displays the on-screen dial pad.

Add call: Put current call on hold and displays the on-screen dial pad so you can dial another number.

Speaker: Turns on the speakerphone.

Mute: Mutes your side of the conversation.

Hold: Puts call-in-progress on hold.


Power on/off

To power off your phone, press and hold the **Power & End** key. On release, the phone options menu opens. Select **Power off**.

To power on again, press and hold the **Power & End** key.

Tip: The phone will vibrate after you press and hold the **Power & End** key, and please be patient to wait for the phone to power on.

USB storage

1. Connect your phone to your computer via USB, and your phone will prompt "USB connected", then the status bar will display a USB icon .
2. Touch the status bar and slide your fingertip down the screen. Touch **USB connected**, and select **Mount** if you want to copy files between your computer and your phone's memory card.
3. To turn off the USB storage, touch the status bar and slide your fingertip down the screen, then select **USB connected** > **Turn off**.

 
Tip: While you mount the USB storage, you can not view pictures or play any media stored on the memory card from your phone.

Home screen

Home screen

The **Home** screen is your starting point for using all the applications on your phone. You can customize your **Home** screen to display applications, shortcuts and widgets as you like.

Note: To enter the Home screen, press the icon in the initial screen.

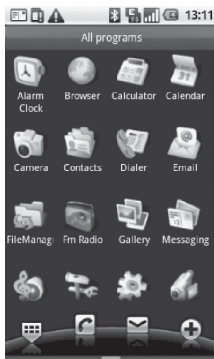

Tip: To hear a sound when an item is selected, select the **Audible Selection** check box in **Settings > Sound & display**.

Extended home screen


The home screen actually extends beyond the screen width. Slide your fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize **Home** with applications, shortcuts, and widgets.

Create Home screen shortcuts and widgets

1. Start from the Home screen, then touch & hold the screen with your fingertip. The **Add to Home screen** menu opens.
2. Select a **Shortcut** to applications or some of your saved information (such as a music playlist, a Web bookmark, or folder, etc), **Widgets** (analog clock, calendar, or music, etc), **folders** (all contacts, contacts with phone numbers, or starred contacts), or **Wallpapers** for your Home screen.
3. The application, shortcuts, folders, or widgets appear on the screen. If you select Wallpaper, you'll be asked to select a picture.

Tip: To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application icon. Its shortcut is added to the Home screen.

Remove items from the Home screen

To remove a shortcut or widget from your Home screen, touch & hold the item. The application tab turns into a Trash button. Drag the item to the Trash button  and release. You'll know when your item is in the Trash because the item and the tab will turn red:



Move objects on the Home screen

1. To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.



2. Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

Create and delete folders on the Home screen

You can add folders to hold application icons or shortcuts:

1. From the Home screen, press the Menu key and select Add, or touch & hold the screen to open the Add to Home screen menu.

2. Select **Folders > New folder**. A new folder appears on the screen.
3. Touch & hold any of the application icons or shortcuts to enter move mode (the icon will magnify), then drag the item to the top of the new folder.
4. Touch the folder once to open it; touch the folder's title bar to close it.
5. To rename a folder, first open the folder. Then touch & hold the folder title bar to open the Rename folder dialog box. Type your new folder name, then select **OK**.
6. To delete a folder, touch & hold the folder to enter move mode. Drag the folder to the Trash button  and release.

Customize Home screen wallpaper

Wallpaper your Home screen with pictures you have stored on your memory card, or select a picture from the Wallpaper gallery that comes preinstalled on your phone:

1. From the Home screen, press the **Menu** key and select **Wallpaper**. Alternatively, you can touch & hold the Home screen to open the **Add to Home screen** menu.
2. Select **Wallpapers**, then select either **Pictures** or **Wallpaper gallery**.
3. If you select **Wallpaper gallery**, then scroll through the gallery. Touch a thumbnail to highlight it and view a larger version. When you've decided on a wallpaper, make sure it's highlighted, then select **Set wallpaper**.

4. If you select **Pictures**, your picture album opens. Note that if this is the first time you have viewed the pictures stored on your memory card from your phone, it may take a while for the pictures to load.

Navigate to find the picture you want to use, then select it.

The cropper appears. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.






























When you're happy with the cropped area, select **Save** or press the **Back** key.

Tip: You can also set a picture as wallpaper in camera capture mode. Press the **Menu** key to select **Gallery** to view the pictures you captured. Touch and hold a thumbnail to open the context menu, and select **Set as > Wallpaper**. Crop the picture, and select **Save** to confirm.

Notification and connection status icons


Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, alarm, or something else you should notice. On the right side of the status bar, you'll see connection status icons.

- New email message
- New SMS or MMS
- Problem with SMS or MMS delivery
- New instant message
- New voicemail

-  Upcoming event
-  Alarm is set
-  Song is playing
-  Data is syncing
-  SD card full!
-  More (undisplayed) notifications
-  Call in progress
-  Missed call
-  Call on hold
-  Call forwarding is on
-  Speakerphone is on
-  Ringer is off (Silent mode)
-  Ringer on vibrate only
-  Phone on mute
-   Uploading/downloading
-  Content downloaded
-  Sign-in/sync error
-    GSM signal, roaming, no signal  
-   GPRS service connected, data flowing   Edge service connected, data flowing   Wi-Fi service connected, network available

 Battery charge indicators: full, half-full, low, very low!

 Battery is charging

 Wireless services are off (Airplane mode)

  Bluetooth® is on, Bluetooth device connected

 No SIM card in phone

No memory card in phone

USB connected

Shortcut to Home screen

Shortcut to Dialerpad

Shortcut to message

Shortcut to **Add to Home screen**

Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.

- **Ongoing notifications** report activities such as call forwarding ON, current call status, song playing.
- **Notifications** report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting **Clear notifications** at the top of the notifications window.

Touch the item to open the message, reminder, or other notification. To close the notifications window, slide your finger up the screen. You can also open the notifications window by pressing the **Menu** key and selecting **Notifications**.

Wireless operator

To view the network your phone is currently using, slide to open the notifications window. The name of the wireless operator's network appears at the top of the list in bold.

Call voicemail

If you have a new voicemail message, you will see this icon  in the status bar. To call your voicemail number:

1. Open the notifications window to reveal the **New voicemail** notification.
2. Select the notification.
3. Your voicemail number is dialed.

Getting Started

Installing the battery

1. Push the back cover towards right side and remove it.



2. Position the battery with the contacts aligned to the metal contacts of the phone. Insert the battery into the battery slot.



3. Place the back cover on the phone and slide it up to lock it.



Installing the SIM card

Warning: Do not bend, scratch your SIM card; avoid exposing your SIM card to static electricity or dirt.

Push the SIM card into the SIM card slots, which is at the bottom-right of the corner.

Installing a memory card

Insert the memory card into the card slot, which is at the bottom-left of the corner.



Charging the battery

Warning: To avoid damaging the phone, please do not remove the battery when the phone is charging.

To ensure the best performance of your phone's battery, please charge the battery fully before using it for the first time (Approx. 12 hours), using the method described below. Please note: some batteries require several full charge/discharge cycles to reach their best performance.

1. Make sure the battery has been installed properly before charging.
2. Plug the travel charger into the USB connector, and then plug the other end of the travel charger into the electrical outlet.

Tips:

- If your phone is off, there will be a yellow light at the upper right corner of the phone's front side when being charged. When the phone is fully charged, the blue light will appear. It may take 4-5 hours to fully charge.
- If your phone is on, there will be a charging indicator on the status bar while charging.
- When your phone is on, try to avoid making or answering calls while charging.
- The phone also can be charged from your PC when it is connected with the USB cable, but it will take a longer time to charge if you mount USB storage.
- If your battery energy is too low, your phone may be unable to be switched on. Please charge your phone for a few minutes before you switch it on.

Battery tips

- Use only the batteries, data cable and chargers approved by the original manufacturer. Do not use a non-approved data cable or chargers, as it may damage the battery.
- Do not short-circuit the battery. Please store the battery inside the battery box to prevent accidental short-circuiting of the battery contacts.
- Do not place or charge the battery in very hot or very cold locations as extreme temperatures can adversely affect the battery.

- Please keep the charger and handset out of the reach of young children.
- Please ensure that the metal contacts of the battery are kept clean and free of dirt.
- The battery can be charged and discharged hundreds of times, but it will be eventually worn out. Please replace the battery when the battery capacity falls to approximately 50% of its original storage capacity.

Use and maintenance

The following suggestions will help you use and maintain your mobile.

- Please keep dry. Rainwater, humidity, and any kinds of liquid or moisture might contain minerals which could corrode the circuit. Moving parts may be damaged if you put or use the phone in a dirty or dusty place.
- Please do not use or store the phone in a high temperature environment, as this may result in damage to the electronic or plastic parts.
- Please do not use or store the phone in a very low temperature environment.
- Please do not use any chemicals, detergent, or caustic detergents to clean the mobile. If you want to clean it, please wipe it gently using a soft cloth made damp with some soapy water.
- Please do not paint the phone. Paint might clog the moving parts and prevent proper operation.

- Only use the headset provided, or an approved spare.
- If the mobile has gotten wet, please switch it off immediately and remove the battery. Leave it to dry thoroughly before using it again.
- To get the maximum talk and standby times from your battery, please turn down the volume and reduce the backlight and contrast.
- Please keep all metal objects away from the charger port located at the bottom of the phone to avoid damaging the electronic circuits.

System settings

Control phone-wide settings from the Home settings screen: Press the **Home key**, then press the **Menu key** to select **Settings**. You can also select the **Settings** icon from the Home screen.

Wireless controls

Wi-Fi on/off

Select this check box if you prefer to use Wi-Fi for your data connection.

Wi-Fi settings screen

Open the Wi-Fi settings screen to:

1. View and scan for available networks - Press the **Menu key** and select **Scan**.
2. Connect to a network - Select it from the network list. Provide your username or password if required.

Bluetooth on/off

Use this check box to turn Bluetooth services on or off.

Bluetooth settings

With Bluetooth services on, you can open the Bluetooth settings screen to:

1. Rename your device.
2. Select to be discoverable, or not discoverable.


3. Pair or unpair with one of the Bluetooth devices in range - You will be asked to type a password before pairing. Refer to the manufacturer's documentation for the password.
4. Rescan for devices – Press the **Menu** key and select **Scan for devices**.
5. FTP Server – when selected, you can receive files by Bluetooth.

Mobile network settings

1. Select data roaming capability.
2. Select a wireless operator network - Scan for all available networks, or select a network automatically.
3. Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator!

Airplane mode on/off

When airplane mode is selected, all wireless connectivity is off.

This icon  will display in the status bar when airplane mode is selected.

Call settings

Fixed Dialing Numbers

This feature allows you to restrict outgoing calls to a fixed set of numbers.

To enable this feature you must know the SIM PIN2 code for your phone.

You can get this number from your wireless operator if this feature is supported.

Voicemail

Select to set a voicemail number that isn't being read from the SIM card.

GSM Call Settings

From selecting this, you can choose **Call forwarding**, **Caller ID** and **Call waiting**.

Sound & display

Sound settings

Silent mode

Select to open the silent mode. All sounds except media&alarms are silenced.

Ringer volume

Select to open the volume control, then slide your finger along the volume bar to set incoming call volume and notification volume.
Media volume

Select to open the volume control, then slide your finger along the volume bar to set the volume for playing back music, videos, FM

Media volume

Select to open the volume control, then slide your finger along the volume bar to set the volume for playing back music, videos, FM or voice recordings.

Phone ringtone

Select to set your default incoming call ringtone.

Phone vibrate

Select to have your phone vibrate for incoming calls.

Notification ringtone

Select to set your default notification ringtone.

Audible touch tones

Select to have a tone sound when you use the onscreen Dialer.

Audible selection

Select to have a sound play when you select an item on the screen.

SD card notification

Select to have a tone sound if your phone does not detect the memory card when the phone powers on.

Display settings

Orientation

Select to switch orientation automatically when the phone orientation changes (except the home screen)

Animation

Select to show animation when opening/closing windows.

Brightness

Select to open the brightness control, then slide your finger along the brightness bar to set the level. In sunlight, increase the level.



Screen timeout

Select to decide how long your phone must be inactive before the screen turns off. Select **Never timeout** if you wish, but battery life will decrease.

Security & location

My location

Use wireless networks

Select to use wireless networks

Share with Google

Allow Google to use location for improved

Screen unlock pattern

Create a pattern you will be asked to draw before your screen is unlocked. You can select to make the pattern visible or invisible as you draw it.

SIM card lock settings

Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN, you can obtain it from your wireless operator.

Visible passwords

Select to have your password display as you type it.

Set Password

Select to Set or change the credential storage password for the phone.

Applications

Unknown sources

Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Android Market. To ensure your personal data and phone remain secure, it is recommended you not select this check box.

Manage applications

View all the applications stored on your phone and how much space they occupy. If you've downloaded an application from Android Market, you can uninstall it from this screen.

Select a specific application to:

1. Clear your user data (if you have any associated with a particular application).
2. Disassociate the application with any actions. For example, you may have selected to use YouTube to open any Browser links to videos. If you'd like to use another application to open video links, simply select the **Clear defaults** button. The next time you try to perform that action, you'll be shown a dialog box so you can select an application. To make it the default, make sure you select the **Use by default for this action** check box on this dialog box before you select the application.
3. Uninstall - If you've downloaded an application from Android Market, you will be able to uninstall it from this screen by selecting **Uninstall**.

Development

If you are an application developer, you may be interested in these settings:

USB debugging

If you want be able to communicate with your phone directly via USB, select the **USB debugging** check box.

Stay awake

To prevent your phone from sleeping while charging (via power adapter or USB), select the **Stay awake** check box.

Allow mock location

To allow mock location, select the **Allow mock location**, select the **Allow mock location** check box.

SD card & phone storage

View and manage the data storage on your phone

SD card

Monitor and manage the use of your memory card from this screen:

1. View the total space of your memory card.
2. View how much space you are using on your memory card.
3. Unmount your memory card from your phone.

Note: When you mount the USB storage, you cannot view pictures or play any media stored on the card from your phone.

4. Format your memory card

Internal phone storage

Available space: Report how much internal storage is free.

Factory data reset: You can also select to reset your phone to factory settings. This will erase all your data and downloaded applications.

Date & time

Set time, time zone, and date - Use **Automatic** unless you need to override the network values.

Time format - Select from 12- or 24-hour formats.

Date format - Select from a variety of formats.

Locale & text

Locale setting

Select language and region.

Text settings

Thai Keyboard settings

To choose vibrate on keypress or sound on keypress

Android keyboard settings

Vibrate on keypress - When selected, your phone will vibrate while you touch the characters.

Sound on keypress - When selected, your phone will make a sound while you touch the characters.

Auto-capitalization - When selected, automatically capitalizes the first letter in a text field, or the first letter after a period (.), question mark (?), or exclamation point (!).

Quick fixes - This feature is not a spell-checker, but automatically corrects commonly-mistyped words when selected.

Show suggestion - When selected, automatically display suggested words while typing in case of Android keyboard.

Auto-compet - When selected, automatically inserts a period (.) when you type two spaces in succession.

Note: You can change to Thai keyboard by pressing and hold "Type to compose" then select "Input Method" and select "Thai Keyboard" respectively.

User dictionary

You add or delete words in the user dictionary. When you type words, your phone will predict the word you have ever saving in the user dictionary.


About phone

1. View your phone **Status**. This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any Wi-Fi addresses you're connected to, and more.
2. Select **Legal information** for copyright and licensing information, as well as the Google Terms of Service for the Google applications on your phone.
3. View the model number and version information for your phone.

Bluetooth

You can use Bluetooth to send and receive calls using a headset or hands-free car kit.

Turn on Bluetooth services

1. Press the **Menu** key to select **Settings** in the home screen
2. Select **Wireless controls**, then select the **Bluetooth** check box to turn on Bluetooth services.
3. When it on, the Bluetooth icon  appears in the status bar.

Discoverability

By default, your phone is not “discoverable”. This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices. If you make your phone discoverable, it will be visible to other Bluetooth devices.

To make your phone discoverable:

1. Make sure you have turned Bluetooth on, as described in “Turn on Bluetooth services”.
2. Press the **Menu** key to select **Settings** > **Wireless controls** > **Bluetooth settings** in the home screen.
3. Select the **Discoverable** check box to make your phone visible to other Bluetooth devices for 120 seconds. You must stay on the Bluetooth settings screen to remain discoverable.
4. Select **Discoverable** check box again to make your phone undiscoverable.

Name your Bluetooth device

1. Make sure you have turned Bluetooth on, as described in "Turn on Bluetooth services".
2. Press the **Menu key** to select **Settings > Wireless controls > Bluetooth settings > Device name** in the home screen.
3. Type the name for your device in the dialog box, then select **OK**.
4. Your new device name appears on the Bluetooth settings screen.

Pair & connect with Bluetooth devices

Before your phone can communicate with a Bluetooth headset or hands-free car kit, the devices must "pair", then "connect":

1. Make sure you have turned Bluetooth on, as described in "Turn on Bluetooth services".
2. Press the **Menu key** to select **Settings > Wireless controls > Bluetooth settings** in the Home screen.
3. Your phone starts scanning for Bluetooth devices within range. As they are found, the devices appear in the list of Bluetooth devices.
4. To pair with a device in the list, select it.
5. Type the device's password, then select **OK**. (Read the manufacturer's documentation if you don't know the password.)
6. Once paired, select the device name to connect. You can also touch & hold the name to open the context menu, then select **Options > Connect**.

7. Pairing and connection status appear under the device name.
8. Once the other Bluetooth device shows “connected” status, you can start using it to make and receive phone calls.
9. To disconnect or unpair with a device, touch & hold the device to open the context menu. Select **Unpair**, as appropriate. If you select **Unpair** when connected, you will be disconnected as well.

Notes:

- The phone supports only the headset and hands-free Bluetooth profiles, so if you try to connect to a device that is not a headset or hands-free car kit, then you will receive an “unable to connect” message.
- If you pair with a second headset while connected to the first, the first headset will remain connected. To switch connection to the second headset you must manually select that headset again after pairing.

Rescan for Bluetooth devices

If you want to update the list of Bluetooth devices, press the **Menu** key to select **Scan for devices**.

Contacts

Your contact list

To view the contacts on your phone, select **Contacts** in the **Home screen**. You can also press the **Home key** to select the **Contacts** tab.

Contacts belonging to a specific group (you can choose which group) are listed in the **Contacts** tab.

Only those contacts you star as “favorites” are listed in the **Favorites** tab. (Read “**Contacts settings**” to learn how to change which contact group displays in **Contacts**.)

From the **Contacts** tab, you can:

Take action on a contact

Touch & hold the contact’s name to open the option menu. From the menu you can select to **View contact**, **call Mobile**, **Send SMS/MMS**, **Add to favorites**, **Edit contact** or **Delete Contact**.

Go to Contact details screen

Select the contact’s name to open the **Contact details** screen, where all the information you’ve saved for this contact is displayed.

To edit a contact’s details, press the **Menu key** to select **Edit contact**.

Tip: Only the contacts stored in your phone can be displayed. You can import the contacts from your SIM card. In the **Contacts** main menu, press the **Menu key** to select **Import contacts**.

Search for a contact

1. Browse through your contacts by sliding your fingertip up and down on the screen. A rapid brush movement in either direction accelerates the scrolling. Touch the screen to stop the scrolling.
2. Or press the **Menu** key to select **Search** in the Contacts main menu, type the keywords in the text box, then tap the magnifier beside the text box to start searching.

Add a contact

1. Press the **Menu** key to select **New contact** in the Contacts main menu.
2. Add all the information you want to store for this contact in the appropriate fields. You must add some information to save a contact.
To add more fields, select +.
3. Assuming you have a memory card inserted with pictures in it, you can assign a Caller ID icon to your contact by selecting the caller ID icon beside the name text box. The Pictures application opens. Navigate to a picture and select it, size the cropper with your fingertips. When finished, select **Save**. The picture is associated with your contact.
4. To associate this contact with a ringtone for incoming calls, select the **Ringtone**. Select a ringtone, then select **OK**. When you select a ringtone, it plays briefly.
5. If you want all calls from this contact to go directly to voicemail, select the **Incoming calls** check box.
6. To save your contact, press the **Back** key, or press the **Menu** key to select **Done**.

Assign favorites

Use **Favorites** as a way to display only those contacts you contact most frequently. To add a contact to **Favorites**:

1. From **Contacts**, touch & hold the contact you want to add to **Favorites**. The context menu opens.
2. Select **Add to favorites**.
3. Now your contact will be listed in **Favorites** and display with a colored star. Their details screen will also display the colored star.

Edit contact details

You can always make changes to the information you've stored for a contact:

1. From **Contacts**, touch & hold the contact whose information you want to edit. The context menu opens.
2. Select **Edit contact**. The Edit contact screen appears.
3. Make your edits, then select **Save**. To cancel, select **Revert**.

Delete contact

1. From **contacts**, touch & hold the contact. To context menu opens. Select **Delete contact** to delete the selected contact.
2. Or in contact detail menu, press the **Menu** key to select **Delete contacts**.

Communicate with a contact

From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you've stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

Call a contact

From the contact list

1. Highlight the contact you want to call.
2. Press the **Home** key to dial that contact's primary number.
3. To dial a different number for the contact, select the contact's name, and then select the number on their details screen.

From the contact details

1. In the Call mobile section, select the number you want to dial.
2. The number is dialed.

Send a text or multimedia message to a contact

To send a text or multimedia message to a contact, you must have a mobile number stored for them in contact details.

From the contact list

1. Touch & hold the contact's name to open the context menu.
2. Select **Send SMS/MMS**. A Compose screen opens for your new message.

From the Contact details screen

1. In the Text mobile section, select a phone number.
2. A Compose screen opens for your new message.

Send email to a contact

To send an email message to a contact, you must have an email address stored for them in their contact details.

1. Select the contact you want to email. Their Contact details screen opens.
2. In the email section, select the email address. If you are fetching POP3 or IMAP email accounts to your phone, then select the account you wish to use to send. A Compose screen opens for your new message.
3. Complete your message and select **Send**.

Map a contact's address

To map a contact's address, you must have a postal or physical address stored for them in their contact details.

1. From your contact list, select the contact whose address you want to map.
2. On the contact's details page, in the **Map address** section, select the address.
3. The Maps application opens and locates the address. Press the **Menu** key to see your options.

Display a contact group

To select which contact group to display in Contacts, press the **Menu key** and select **Display group**. You can select from the following:

All contacts Displays every contact you've created or that has been added automatically.

Contacts with phone numbers Displays only contacts with phone numbers, regardless of whether you've created them on the phone or Web.

My Contacts Displays a group created automatically based on those contacts you communicate with most frequently.

Contacts settings

To set Contacts preferences, from **Contacts** or **Favorites**, press the **Menu key** to open the option menu:

SIM contacts importer

If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option **Import contact**. Once the list of names and numbers appears you can:

1. Import all names/numbers in the list – Press the **Menu key** and select **Import all**.
2. Import only certain names/numbers in the list - Select the name/number you want to import, then repeat for others as you wish. (As soon as you select the name/number, it is imported.)

Email and Messaging

Email

POP3 and IMAP email accounts

Add an email account

You can fetch messages from up to five POP3 or IMAP accounts. Follow these steps:

1. Open the Application menu to select the **Email** application.
2. The Set up new account screen appears.
3. Type your account email address and password.
4. If you want, select the **Send email from this account by default** check box. This setting only applies if you have more than one POP3 or IMAP account set up.
5. Select **Next**.
If you have a popular email account, the application will set everything up for you! Before you go to your Inbox, you can name the account (if you don't, your email address will be used). You are also asked to type your name as you want it to display on outgoing messages. You must complete this field before you can select **Next** and go to your Inbox.
For less popular accounts, follow the prompts to type the email server, protocol, and other account information yourself. After your account settings have been verified, select **Next** to go to your Inbox.
6. To add more accounts (up to five), from your Accounts screen, press the **Menu** key and select **Add account**.

Use your POP3 and IMAP email account

Once you've set up an account, you can do the following:

Refresh Inbox

From the Inbox, press the **Menu** key and then select **Refresh** to update your Inbox with any previously-unfetched email.

Read email

You can display or collapse the messages in your Inbox by selecting **Inbox**. Unread messages display with a colored band. (Each account you add will use a different color.)



To open an email for reading, select it.

Forward, Reply, Reply all, Delete, Mark as unread

You can forward, reply, reply all, delete or mark as unread to an email message from either the Inbox or the read view:

1. From the read view, press the **Menu** key and select the action you want to take.
2. From the Inbox, touch & hold the message to open its context menu. Select the action you want to take.

Compose new

From the Inbox or your accounts screen:

1. Press the **Menu** key and select **Compose**.
2. Add recipients by typing a name or address in the **To** field. Matching contacts will appear. Select the recipient or continue typing the address. Add as many as you wish.
3. Type a subject and message.
4. Select **Send**, **Save as draft**, or **Discard**. Pressing the **Back** key will also save as draft unless you have not typed anything.

Empty Trash

Once you've moved a message to the Trash, a Trash folder will display below your Inbox. To empty messages in the Trash you must delete each message individually:

1. Expand the Trash folder to display the messages.
2. Touch & hold the message you want to delete to open the context menu.
3. Select **Delete**.

Note: The message is only deleted from your phone, not from the account server.

Remove an email account

You can always remove a POP3 or IMAP email account from your phone by doing the following:

1. Go to your Inbox.
2. Press the **Menu** key and select **Accounts**. Your Accounts screen opens.

3. Touch & hold the account you want to remove to open the context menu.
4. Select **Remove account**.
5. You will be asked to confirm before the account is removed.

Edit account settings

To open your Account settings screen, do the following:

1. From your account Inbox, press the **Menu key** and select **Account settings**.
2. The Account settings screen appears. You can do the following from this screen:

Account name Select to change the name of your account as it appears on your Accounts screen.

Your name Select to change your name as it appears in outgoing email.

Email check frequency Select this pop-up menu to set how frequently your email account is checked for new messages. Note that whenever you open a folder, email is refreshed, regardless of this setting.

Default account If you have more than one POP3 or IMAP email account set up on your phone and want to use this account by default when selecting **Compose** from the Accounts screen, select this check box.

Email notifications If you want an icon to appear in the status bar when a new message arrives, select this check box.

Select ringtone Select to decide on a ringtone to use for incoming email.

Vibrate Select to have your phone vibrate when email arrives.


Incoming settings Select Incoming settings if you need to edit the username / password, server, port, or option to delete email from server.

Outgoing settings Select Outgoing settings if you need to edit the SMTP server, port, security type, option to require sign-in, or username / password.

Add another account To add another account (you can add up to five), select Add another account.

3. To save your settings, press the **Back** key.

SMS and MMS messaging

Press the icon  to open the SMS & MMS Messaging application.

About text and multimedia messages

SMS messages are also known as “text” messages and can each be around 160 characters. If you continue to type after the limit is reached, your message will be delivered as one, but count as more than one message. These are called “concatenated” messages.

MMS messages are also known as “multimedia” or “picture” messages and can contain text, picture, audio, and video files. When you compose a message, the phone will automatically convert a text message into a multimedia message as soon as you add a subject or an attachment, or if you address the message using an email address rather than a phone number.

The message list

Text and multimedia messages are grouped with the replies you receive into conversations or “message threads” or just “threads”. Message threads are listed in order of when you received them (newest at the top). To open a thread for reading, select it. Read more below.

Unread messages appear with a green band on the left.

The Read view

Select a message in the list to open it for reading.

Note: Messages you send are also listed in the Read view.

Reading multimedia messages

If you have selected to auto-retrieve your multimedia messages, then both the message header and body will be downloaded. To view your message, select the “play” button.

If you are downloading only the headers, then you must first select the Download button to retrieve the message body. If you are concerned about the size of your data downloads, you can check the message size before you download.

Once the message has been downloaded, select the “play” button to view the message.

From a message read view, you can do the following:

Reply to a message

1. Simply start typing your message in the text box at the bottom of the screen to reply to a message.
2. You can always press the **Menu key** and select to add a subject or an attachment to convert it to a multimedia message.

Links in messages

If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.

Forward messages

In the message read view, touch & hold the message to open the context menu, then select **Forward** to forward it to others.

Delete messages

Your messages will be saved until you explicitly delete them.

1. Delete one message in a thread: With the message thread open in Read view, touch & hold the individual message you want to delete to open the context menu. Select **Delete message**.
2. Delete all messages in a thread: With the message thread open in Read view, press the **Menu key** and select **More > Delete thread**. You can also delete an entire thread from the message list by pressing & holding the thread to open the context menu, then selecting **Delete thread**.
3. Delete all message threads: From the message list, press the **Menu key** and select **Delete threads**.

Delivery problems


If a message you sent appears with this icon  on the right, there was a delivery problem. Touch & hold the message to open the context menu. You can edit, retry sending, or delete the message.

To see all your undelivered messages (assuming there is at least one), from the message list, press the **Menu** key and select **Undelivered messages**.

View message details

To view details about a particular message, in the Read view, touch & hold the message to open the context menu. Select **View message details**.


View message delivery or read reports

If a message contains a delivery or read report (you would have requested it in Settings), you'll see this icon  to the right of the message.

Touch & hold the message to open the context menu. Select **View report**. Status icons are shown and mean the following:

- Delivery problem
 - Message delivered
 - Message is being delivered
- Read more about delivery and read reports in "Text and multimedia message settings" on page 54.

Compose text and multimedia messages

1. Press the **Menu** key and select **Compose**. The Compose screen opens.
2. Add recipients by typing a name, phone number, or email address in the **To** field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as you wish. If you send the message to an email address, the message will automatically convert from a text to a multimedia message.
3. To add a subject, press the **Menu** key and select **Add subject**. If you add a subject, the message will convert to a multimedia message.
4. To add an attachment, press the **Menu** key and select **Attach**.
Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture if you want, or record an audio file. Any recordings you make will be stored automatically in the Music application in a playlist named "My recordings".
To remove an attachment, select the attachment's **Remove** button.
5. Type your message. As you type, you'll be able to track how many characters/messages you're creating. Remember that text messages have a limit around 160 characters. Once you go over that limit, a new message is actually created but automatically joined into one when received.
6. You can also save a draft.
7. As your message sends, progress displays in the title bar. If you see this icon  to the right of the message, it means your message is still being delivered.

Save message as draft

1. While composing, press the **Back** key.
2. Your message automatically saves as a draft.
3. To resume composing, in the message list, touch to open the message to edit.

Text and multimedia message settings

To set text and multimedia message preferences, from the message list, press the **Menu** key and select **Settings**. You can set the following from this screen:

Text message settings

Delivery reports: To receive a report on the delivery status of your message, select this check box. Status can be:

- Successful delivery
- Temporary delivery failure; an attempt to deliver will be made again
- Unsuccessful delivery; no attempt to re-deliver will be made

Manage SIM card messages: Text messages can also be stored on your SIM card. The exact number depends on your card, but it is usually around 25-50. To view messages on your SIM card, delete them, and copy them to your phone memory, select this setting.

Multimedia message settings

Delivery reports: To receive a report on the delivery status of your message, select this check box. Status can be:

- Successful delivery
- Temporary delivery failure; an attempt to deliver will be made again
- Unsuccessful delivery, where no attempt to re-deliver will be made

Read reports: To receive a report on whether each recipient has read or deleted the message without reading it, select this check box.

Auto-retrieve: To retrieve all your Multimedia messages automatically (the header plus the message will download to your phone), select this check box. If you clear this check box, then only the message headers will be retrieved and display in your message list. You can retrieve the full message by selecting the **Download** button that displays in the header. Once the message has downloaded, select the "play" button to expand the message.

Roaming auto-retrieve: If you are concerned about data traffic and just want the message headers to download while roaming, clear the **Roaming auto-retrieve** check box. Otherwise, you can select this check box to have your messages download even while roaming.

Notification settings

Notifications: To display message notifications in status bar.

Select ringtone

You can set a ringtone from the default ringtone of the handset for new messages.

Vibrate

If you turn the handset into vibration mode, When a new notification and message arrive, the handset will remind you.

Browser

About the Browser

To open the Browser, select the **Browser** application in the **Home** screen.

The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display. You can change your home page by pressing the **Menu** key and selecting **More > Settings > Set home page**.

Zoom and navigation in Web pages

While viewing a Web page, take advantage of the following zoom and navigation techniques:

Zoom in

1. Touch the screen to open the zoom-in and zoom-out controls



2. Touch the + control to zoom in. With each touch you zoom in closer .


Zoom out

1. Touch the screen to open the zoom-in and zoom-out controls



2. Touch the – control to zoom out. With each touch you zoom out further.

Navigate

1. Slide your fingertip in any direction to shift your page view.
2. Touch the screen to reveal the zoom controls and the “scale & scroll” icon  at the bottom left of the screen. Touch the icon. The entire Web page will display in the screen and the magnifying window will open. Drag the window to the portion of the Web page you want to view, then release.

The Browse screen

From the Browse screen you can do the following:

Go to a Web page

1. You can press the **Menu** key and select **Go** to open the Go to window opens. Possible matches appear in the drop-down menu. Select a match or continue typing the URL.
2. Select **Go** beside the URL to go to the page.

Add a bookmark

Bookmark the Web page you are currently viewing:

1. Press the **Menu** key and select **Bookmarks**.
2. From the Bookmarks screen, select **Add bookmark**.
3. Confirm the URL and name, then select **OK**.

Bookmark a highlighted link on a Web page: Press & hold the link to open the context menu, and select **Bookmark link**.

To view all your bookmarks, press the **Menu** key and select **Bookmarks**.

Refresh a Web page

To refresh the contents of the current page, press the **Menu** key and select **Refresh**.

Open pages in separate windows

You can keep more than one Web page open by using multiple windows to display the pages. You can open up to eight windows.

Open a new window

1. From a Web page, press the **Menu** key and select **New Window**. The Current windows screen opens, showing the Web page you started from, plus a "new window".
2. Your home page opens in a new window.
3. To return to one of the other windows, press the **Menu** key and select **Windows**. Select the page you want to view.

View the page in a window

Select a window to view it full-screen. Alternatively, you can use the context menu:

1. From a Web page, press the **Menu** key and select **Windows**. The Current windows screen appears.
2. Touch & hold the window you want to view. The context menu opens.
3. Select **View**.

Close a window

Touch the "X" in the lower-right corner of the window you want to close. Alternatively, you can use the context menu:

1. From a Web page, press the **Menu key** and select **New Windows**.
2. Touch & hold the window you want to close. The context menu opens.
3. Select **Close**.

Bookmark the page displayed in a window

1. From a Web page, press the **Menu key** and select **New Window**. The Current windows screen appears.
2. Touch & hold the window whose page you want to bookmark. The context menu opens.
3. Select **Bookmark**.
4. Confirm the URL and name, then select **OK**.

View page info

1. From a Web page, press the **Menu key** and select **Windows**. The Current windows screen appears.
2. Touch & hold the window whose page you want. The context menu opens.
3. Select **Page info**.
4. When you're finished reading the information, select **OK**.

Go to Bookmarks screen

From the Current windows screen, press the **Menu key** and select **Bookmarks** to go to your list of bookmarks.

View Browser history

From the Current windows screen, press the **Menu key** and select **History** to go to your Recently-visited pages screen.

Manage bookmarks

You can store as many bookmarks as you want on your phone.

Bookmark any page

1. Press the **Menu key** and select **Bookmarks**. The Bookmarks screen opens.
2. Select **Add bookmark**.
3. Type a name and location (URL) in the dialog box.
4. Select **OK**.

Send bookmarked page's URL

1. Press the **Menu key** and select **Bookmarks**. The Bookmarks screen opens.
2. Touch & hold the bookmark you want to send. The context menu opens.
3. Select **Share link**.
4. Send the link via email or message, and then a Compose screen opens with the URL as the message.
5. Address your message and finish composing.

View bookmarked page

1. Press the **Menu** key and select **Bookmarks**. The Bookmarks screen opens.
2. Touch & hold the bookmark you want to open. The context menu opens.
3. Select **Open** or **Open in new window**.

Edit bookmark

1. Press the **Menu** key and select **Bookmarks**. The Bookmarks screen opens.
2. Touch & hold the bookmark you want to edit. The context menu opens.
3. Select **Edit bookmark**. The edit bookmark dialog box opens.
4. Type your change and select **OK**.

Delete a bookmark

1. Press the **Menu** key and select **Bookmarks**. The Bookmarks screen opens.
2. Touch & hold the bookmark you want to delete. The context menu opens.
3. Select **Delete bookmark**. You will be asked to confirm.

Bookmark current page

1. Go to a Web page you want to bookmark.
2. Press the **Menu** key and select **Bookmarks**. The Bookmarks screen opens.
3. Press the **Menu** key and select **Bookmark last-viewed page**. The Bookmark link dialog box opens. Confirm or edit the information, then select **OK**.

 
Set your home page

You set your home page from the Settings screen:

1. Press the **Menu** key and select **More > Settings**. The Settings screen opens.
2. In the **Page content settings** section, select **Set home page** to open the dialog box.
3. Type the URL of the page you want to set as home, then select **OK**.

Links in Web pages

Links are outlined in yellow when highlighted.

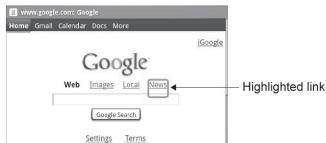

To go to a link, touch the link with your fingertip.

Tip: When links are too small to touch directly on the screen, press & hold the link to open the link's context menu.

URLs

Touch & hold a link to open the context menu and:

- Open link in the current window
- Open link in new window
- Bookmark the link
- Save the link
- Share link via email or message
- Copy the link to the clipboard

Phone numbers

Select a linked phone number to:

- Call the number - The Dialer opens, ready for you to send the call.
- Add the number to your Contact list - Opens the New contact screen for you to complete and save.

Email addresses

Select a linked email address to:

- Send email - Opens an email Compose screen with the email address added for you to complete and send.
- Copy email address to clipboard.

Streaming audio

Select a link to a streaming audio file to play the file using the Music application.

Browser history

The **Recently-visited pages** (history) screen lists the recent sites you've visited on the Web.

From the Browser screen, press the **Menu** key to select **Bookmarks**, then select the History tab to view your Web site history.

Select a Web site from the Recently-visited pages list to go to the site.

View the most visited webs

From the Browser screen, press the **Menu** key to select **Bookmarks**, then select the Most visited tab to view the webs you most visited.

Download Web files and applications

Before you download any files or applications using the Browser, note the following:

- Before you download Web applications, you must explicitly “allow” downloading from the Settings screen in Home screen:
 1. Press the **Menu** key and select **Settings**.
 2. Select **Applications**, then on the Application settings screen, select the **Unknown sources** check box.
- All items downloaded from the Web are stored on your memory card, so be sure you have a card installed in your phone before you download from the Browser.
- The Browser will only allow you to download items that are supported by an application installed on the phone.

Warning: Applications downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download applications from sources you trust, such as Android Market.

View your downloads

To see which files or applications you’ve downloaded:

1. From the Browse screen, press the **Menu** key and select **More > Downloads**.
2. The Download history screen appears with the list of downloads. If you have no downloads, nothing will be shown on this screen.

Browser settings

From the Browser screen, press the **Menu** key and select **More > Settings** to set Browser preferences.

Page content settings

Text size

Select to open the **Set text size** menu. Default setting is **Normal**, but you can increase the size to **Large** or **Huge**, or decrease to **Small** or **Tiny**. Note that this text size setting only affects pages you view through the Browser.

Text encoding

Select a text encoding for your web browser.

Block pop-up windows

Select this check box if you want pop-up windows to be blocked.

Load images

Select this check box if you want images on Web pages to load. For faster page loading, clear this check box.

Auto-fit pages

Select to size pages to the screen automatically.

Enable JavaScript

Select to enable JavaScript on pages. Disabling JavaScript may cause some Web pages to not work properly.

Open in background

Select if you want links to new pages to open in a new window in the background.

Set home page

Your currently-set home page is shown on the Settings screen. To change your home, select **Set home page**, type the URL for your home page, then select **OK**.

Privacy settings

Select one of the privacy settings to clear the following:

- Browser cache
- Browser page-visited history
- stored cookie data
- saved form data

Accept cookies

Select this check box if you want the Browser to save cookies. Some Web sites might not work properly with cookies disabled.

Remember form data

Select this check box if you want the Browser to remember text you have typed in forms, so that you can select the same text later rather than retyping it.

Security settings

Remember passwords

Select this check box to save usernames and passwords to various Web sites.

Clear passwords

Select **Clear passwords** to clear all your saved passwords.

Show security warnings

Select this check box if you want a warning to be displayed when you are going to an insecure Web site.

Advanced settings

Enable Gears open source browser

Select to enable the Gears Browser plug-in. Gears extends the Browser with APIs to create a richer platform for Web applications.

Gears settings

View permissions granted to Web sites to use Gears.


Reset to default

Select if you want to reset all Browser settings to factory default values, except for your home page.

Dialer & Voice Dialer

About the dialers

You can use your phone to make phone calls by using either the Dialer or the Voice Dialer:

1. To dial a number using the on-screen dial pad, touch  or press the **Home** key in the initial screen and select the **Dialer**.
2. To dial by speaking either a number or contact name, select the **Voice Dialer** in the home screen

Bluetooth devices



You can place and receive calls using a hands - free Bluetooth headset or hands - free car kit. Before you can use your Bluetooth device, follow these steps:

1. Turn Bluetooth "on".
2. Get your headset or hands-free car device ready for pairing by following the manufacturer's instructions. (Read more in "Bluetooth")
3. Pair and connect your phone to the Bluetooth headset or car kit.
4. You are ready to use your headset or car kit to place and receive calls.

Make a call by dialing


1. In the **Home** screen or Initial screen, press the **Home** key to open the **Call log**. Select the **Dialer** tab to open the Dialer.



2. You have several choices for placing a call:
 - Dialer tab** Touch the on-screen dial pad to enter a number. Select  to delete numbers you've entered. Touch & hold  to delete all the numbers in the field.
 - Call log tab** Select an entry listed in the log to call the number.
 - Contacts tab** Contacts with phone numbers are listed. Select a contact, then select the phone number to dial the call.
 - Favorites tab** Favorite contacts with phone numbers are listed. Select a favorite, then select the phone number to dial the call.
3. Press the **Home** key to dial the number.

Make a call by speaking

 
You can make a phone call by opening the Voice Dialer and speaking:

1. Touch  to enter the Home screen, to select the **Voice Dialer**.
2. Wait until you hear a tone and the Voice Dialer reports on the screen that it is **"listening"**.



3. You can tell the Voice Dialer any of the following:
 - "Dial number", where number can be 3 digits (e.g., 911), 7 digits (e.g., 555-0123), or 10 digits (e.g., 205-555-0123). If you're speaking a phone number, then always say "Dial" before the number.
 - "Call name", where name is a contact stored on your phone in Contacts. If you're speaking a name, then always say "Call" before the name.
 - "Call voicemail" to dial your voicemail number.
 - "Redial" to dial the last outgoing call.

4. Regardless of what you tell the Voice Dialer, you will be asked to confirm your choice from a menu. If you spoke a name with more than one match in Contacts, or if you've stored more than one number for the contact, you'll be asked to select the number.

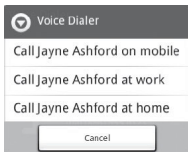

You can always cancel the call at this point by selecting **Cancel** on the dialog box.

 
5. Once you select or confirm your choice, your call is placed.

Answer an incoming call


To answer a call, simply press the **Home** key, and the Call-in-progress screen appears. Press the **Back** key to reject the incoming call.

In-call options


While on a call, press the **Menu** key to reveal the in-call options: Speaker, Mute, and Hold. Note that if Bluetooth services are on and you are connected to a hands-free device, the menu indicator will show Bluetooth on.

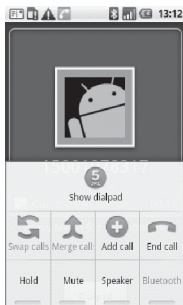


Speaker

To use the speaker, press the **Menu** key and select **Speaker** so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon  when the speaker is on.


Mute

To mute your side of the conversation, press the **Menu** key and select **Mute** so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon  when Mute is on.

Hold

To put an active call on hold, press the **Menu** key and select **Hold** so it shows a green bar. To resume the call, or take the call off hold, select it again so the bar is unfilled. If you take a call while already on a call, the first call will be placed on hold automatically. The status bar will display this icon  when a call is on hold.

Show dial pad

If you need to enter numbers while on a call (such as to select in-call menu options) slide the dialer tab up .

 
Multiple calls

Incoming call during call in progress

1. If you are on a call ("call in progress") when another call comes in ("incoming call"), you have a few choices:

Answer incoming, hold call in progress

The incoming call will display in the foreground.

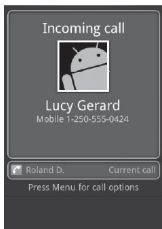

Press the **Home** key to answer the incoming call and place the call in progress on hold. You can also press the **Menu** key and select **Hold current call & answer**.

To switch calls at any time, press the **Menu** key and select **Swap calls**.

Reject incoming

If you don't want to interrupt your call in progress, then press the **Back** key.

Answer incoming, end call in progress

To end the call in progress and answer the incoming, press the **Menu** key and select **End current call & answer**.

2. If you are on a call with a second call on hold when another call comes in, you can:

Press the **Home** key to end the call in progress and answer the incoming call (the call on hold remains on hold).

Press the **Back** key to reject the incoming call and continue the call in progress (call on hold remains on hold).

 
End all calls

If you have one call in progress and one caller on hold, to end both calls, press & hold the **Back** key.


Conference calling

While on a call, you can conference up to six callers, counting yourself. Note that you can also have an additional caller on hold during a conference call, regardless of how many participants are on the conference.

1. Dial the first conference participant as instructed in "Make a call by dialing".
2. Press the **Menu** key and select **Add call**. The call in progress is put on hold. Dial the number.
3. When your new caller is on the line, press the **Menu** key and select **Merge calls**.

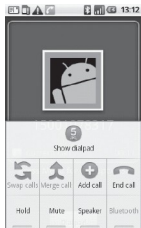

 
4. The conference begins. To add more participants, repeat steps 2 and 3, up to a total of six.
5. If you want to drop any of the callers from the conference, press the **Menu** key and select **Manage conference call**. The list of conference participants appears.

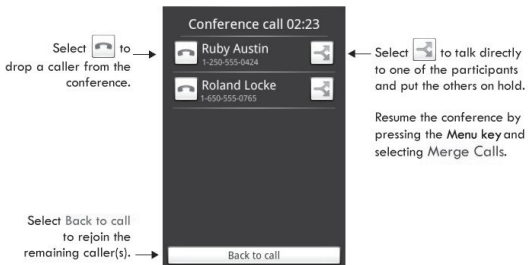

- To end the conference call and disconnect all callers, press the **Back key**.

Call log

 The call log is one of the tabs on the Dialer. The Call log displays by default.

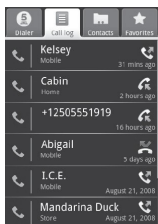

The call log lists all incoming  and outgoing  calls, including missed  calls.

- To call any of the numbers in the list, simply select the name or number.
- To clear the entire call log, press the **Menu key** and select **Clear call log**.
- To clear one call log entry, touch & hold the entry, then select **Remove from call log**.

Select an entry to start dialing the number. Touch & hold an entry to open the context menu and take these actions:

Call number

Select to dial this number.

View contact (if stored in Contacts)

Select to open their Contact details screen.

Edit number before call

Select to open the dialer with this number pre-populated and ready for edit.

Send SMS message

Select to open an SMS/MMS message Compose screen, with the message already addressed to this caller.

Add to contacts (if not stored in Contacts)

Select to add the phone number to your Contacts list. You can select to add a new contact, or add the number to an existing contact.

Remove from call log

Select to remove only this entry from the call log.

Call settings

1. Press the the **Menu** key in the initial screen and select **Settings > Call settings**.
2. Wait a few moments while your current call settings are fetched from the service.
3. The following settings are available:

Fixed Dial Number (FDN) list

Select this setting to manage your FDN list of numbers. When you enable FDN, you can only call numbers are stored on your SIM card. To add numbers to your SIM card:

1. Enable FDN. You must type your PIN2 to enable FDN. (The PIN2 is provided by your wireless operator.)
2. Select **FDN list**. If you have no numbers on your SIM card, then press the **Menu key** and select **Add contact**.
3. Type the name and phone number in the fields, then select **Save**. You will be asked to type your PIN2 again.
4. The FDN list now contains this name and number.
5. To add another contact or edit/delete an existing contact in the list, press the **Menu key** and select the appropriate menu item.

You can always change your PIN2 by selecting **Change PIN2**, but you must know your existing PIN2 before you can change it.

Voicemail

Select this setting to set or change your voicemail number. Note that this number is usually set by your wireless operator and is stored on your SIM card.

GSM call settings

Call forwarding

Set the following:

- **Always forward** - Select to specify a forwarding number and to enable this feature. When this feature is enabled, the following three features are disabled.
- **Forward when busy** - Select to enable this feature. When enabled, incoming calls are forwarded to voicemail or the valid number you ever set when you are on a call.
- **Forward when unanswered** - Select to enable this feature. When enabled, incoming calls are forwarded to voicemail when unanswered.
- **Forward when unreachable** - Select to enable this feature. When enabled, calls are forwarded to voicemail or the valid number you ever set if an incoming call cannot connect.

Caller ID - Select to open a menu of options: use the Network default setting, Hide number, or Show number. When your number shows, your phone number and Caller ID picture will display to people you call, assuming the call recipient's device supports this feature.

 
Call waiting - Select this check box to display incoming calls when you are on a call. Clear the check box to ignore incoming calls when you are already on a call. Note that the routing of the ignored call is determined by your Call forwarding setting.

Calendar

To open Calendar service, select the Calendar application in the home screen. You can view calendar, view month, edit event, etc.

Calendar views


You can view multiple calendars on your phone, so each calendar event is coded with a color.



Note: To create new calendars, you must go to Google Calendar on the Web.

You can view your calendar in a variety of ways. Press the **Menu** key to select from **Month**, **Agenda**, **Week**, or **Day**.

Month view


Days are shown in a month grid. Busy time slots are shown as vertical bars in the corresponding part of the day . An all-day event is shown as a small vertical bar at the top of the slot (it does not fill the entire slot).

- **View event details** - Select a day to view all the events in that day. This will take you to either the Agenda or Day view, depending on which you last visited. Select the event to view its details.

- **Edit an event** - First select a day to go to either the Day or Agenda view. From there, select the event to view its details. Press the **Menu** key and select **Edit event** to open the event for editing.
- **Navigate months** - Slide your fingertip up/down through the days and past the beginning/end of the month to move to the previous/next month.
- **Create new event** - Touch & hold a day to open the context menu. Select **New event**. You can also press the **Menu** key and select **New event**.
- **Jump to current day** - Press the **Menu** key and select **Today**.

Agenda view

Events in the current month are shown vertically in a list, one event after the other. Days with no events are not displayed.

- **Repeating events** - Marked with  icon following the time or date.
- **View event details** - Select the event to view its details.
- **Edit an event** - First, select the event to view its details. Press the **Menu** key and select **Edit event** to open the event for editing.
- **Navigate within the current month** - slide your fingertip up /down.
- **Jump to current agenda** - Press the **Menu** key and select **Today**.

Week view

Days are shown vertically within the Week view. Time slots are defined horizontally in rows. Events are shown as blocks.

- **View event details** - Highlight an event to open a small pop-up window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while it's open, or select the event itself. You can also touch & hold the event to open the context menu, then select **View event**.
- **Edit an event** - Touch and hold the event to open the context menu, then select **Edit event**.
- **Navigate within the current week** - slide your fingertip up / down.
- **Navigate to a past or future week** - slide your fingertip left / right.
- **Jump to current day** - Press the **Menu** key and select **Today**. The current time is highlighted.

Day view

Days are divided into hour time slots. Events are shown tiled and span the time they last. All-day events are displayed at the top of the day list.

- **View event details** - Highlight an event to open a small popup window in the lower part of the screen that provides more event information. This window will stay open for three seconds. (Note that highlighted events are outlined in orange.) To view the full event details, touch the pop-up window while the pop-up window is open, or select the event itself. You can also touch & hold the event to open the context menu, then select **View event**.
- **Edit an event** - Touch and hold the event to open the context menu, then select **Edit event**.
- **Navigate within the current day** - slide your fingertip up / down.
- **Navigate to a past or future day** - slide your fingertip left / right.
- **Jump to current day** - Press the **Menu** key and select **Today**. The current time is highlighted.
- **Create new event** - Touch an empty time slot to open the new Event details screen.

Create an event

From any of the views, press the **Menu** key and select **New event** to open the new Event details screen.

1. Type the information in the fields.

Event details

What

Event name

From

Thu, Aug 21, 2008 5:00 pm

To

Thu, Aug 21, 2008 6:00 pm

All day

Where

(Scroll down to see all fields *)

Event location

Description

Event description

Calendar

Default

Repetition

One-time event

Reminders

Default

Press the **Menu** key and select Show extra options to set Presence and Privacy:

Presence

Busy

Privacy

Default

Name that appears in Day view.

Select date & time from the pop-up menus.

2:00 PM

+ +

2 00 PM

Set Cancel

Thu, July 30, 2009

+ + +

Jul 30 2009

Set Cancel

Hint: You can type directly in the date fields if you don't want to step through using the + and - buttons.

Description can be as long as you like.

Select a calendar if you display more than one.

Set a default reminder time in Calendar Settings.

Reminders are not required. Select - to remove; select + to add.

Set online presence: available or busy.

Select calendar privacy from Default (as defined when calendar was created), Private, or Public.

2. When finished, select **Save** or **Discard** changes. Press the **Back** key also saves the events.

The View event screen

In the Day and Week views, when you highlight an event, a pop-up window with more details opens (the window stays open for three seconds). To see even more details, open the View event screen by touching the pop-up window.

From the Agenda view, simply select an event to open the View event screen. From the Month view, first select the day of the event to go to either the Agenda or and Day view, then select the event (Agenda view) or pop-up window (Day view).

From the View event screen, you can do the following:

View details All the information you've entered about the event is displayed on the View event screen.


Reset reminder Select the **Reminders** pop-up menu to select a new reminder time.

Add reminder Either select the + to the right of a reminder, or press the **Menu** key and select **Add reminder** to create another reminder for the event. This will not replace existing reminders. You can have up to five reminders per event.

Delete reminder Either select the - to the right of a reminder, or press the **Menu** key and select **Delete event** to remove the event from your calendar. If this is a repeating event, you will be asked if you want to delete this & future events, or all events.

Edit event Press the **Menu** key and select **Edit event** to open the event for editing. If this is a repeating event, you will be asked if you want to change just this & future events, or all events.

Event reminders

If you have set at least one reminder for an event (you can set up to five), the upcoming event icon  will appear in the left side of the status bar to remind you. To view, dismiss, or snooze the reminder, do the following:

1. Touch the status bar and slide your finger down the screen to open the notifications list. The upcoming event name is displayed. If you have only one reminder, the place is also displayed.



Select Clear notifications to dismiss the reminder.

To read more details about the event or see additional reminders (if applicable), select the reminder.

- To read more details about the event, select the reminder. If you have other reminders pending, they will be listed on this screen as well. You can snooze or dismiss the reminder(s), or press the **Back** key to keep the reminder(s) pending in the notifications bar. The snooze time is five minutes.



Select either Snooze all or Dismiss all. Press the **Back** key to do neither and keep the reminder icon in the bar.

Edit an event

To edit an event, you must have the View event screen open.

- Press the **Menu** key and select **Edit event**.

Note: If your event repeats, you will be asked to choose which events you want changed (all events in the series, or the current event plus future events).

- Once you have finished your edits, select **Save**.
- To delete the event, from the View event screen, press the **Menu** key and select **Delete event**.

Go to today

From any view, to jump to the screen that shows “today”, press the **Menu** key and select **Today**. If you are in the Day or Week view, the current time will be highlighted.

Calendar settings

Reminder settings

Alerts & notifications

Select to set the type of event reminder you want:

Alert - A dialog box will appear to remind you of the event.

Status bar notification - An icon appears on the left side of the status bar.

Off - You will receive no reminder.

Ringtone

Select ringtone to open the ringtone menu and select a ringtone specific to new event notifications. Note that when you check a ringtone, it plays briefly.

Vibrate

Select this check box to have your phone vibrate when you are reminded of an event.

Default reminder

Select to open the default reminder menu. The time you select will appear by default in the Reminder section when you create a new event.

Camera, Camcorder & Gallery

Before you begin

All the pictures you can capture or view and all the videos you can record or play on your phone are stored on a memory card, which must be installed in your phone. Before you can use the Camera or Camcorder, or view pictures/videos in Gallery, make sure you have a card installed.

Load pictures and videos onto your memory card


Read the instructions below to add pictures or videos to your memory card.

1. Mount your memory card to your computer by doing the following:
Remove the memory card and insert it into a card reader attached to your computer.
2. On your computer, find the mounted USB drive and open it.
3. Copy image or video files into this folder.
4. When finished, close the USB drive window and unmount or eject the drive as required by your computer's operating system.

Camera

Take a picture

Captured pictures are saved to the "DCIM/Photo" folder on your memory card.

1. To open the Camera, select **Camera** in the **Home** screen or press & hold the **Camera** key as a shortcut.
2. The Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Press half-way down on the **Camera** key to focus (a green circle will appear in the upper-right of the screen once focused), then press the key fully to capture. Continue to hold the camera steady for a second after you hear the shutter sound. Or touch  in the screen to take a picture.



Tip: In capture mode, press the **Menu** key to select **Switch to video**, the screen switch to video recording mode.

View your pictures

To view the pictures you've captured, go to the **Gallery** application, or in capture mode, press the **Menu** key to select **Galley**.

Setup options

In capture mode

1. Select **MENU** to set the exposal index, white balance, color style and flicker control.
2. Touch  to select the picture size.
3. Touch  to select the time for self-timer.
4. Select **DISP** to open a setting window.

Display setting

Select **Plain** to show a whole screen which contains useful buttons and the free memory of the memory card.

Select **Simple** to show a simple screen which just contains useful buttons.

Select **Movie** to show a movie screen which hide all the buttons and information on the screen.

Show last picture


Select **ON** or **OFF** to open or close a small screen which fills in the last picture you captured.

5. Select **Home** to open a context menu:
 - Select **REC video** to switch to video record mode.
 - Select **Picture Preview** to view the picture you captured.
 - Select **Video Preview** to view the video you recorded.

Video Recorder

Record a video

Recorded videos are saved to the "DCIM/Video" folder on your memory card.

1. To open the Camcorder, select **Video Recorder** in the home screen.
2. The Camcorder opens in record mode. Press the **Camera key** or touch  in the screen to record a video.

Play your videos

To view the videos you've captured, go to the **Gallery** application, or in record mode, press the **Menu key** to select **Gallery**. The newest video you recorded will display as a small window on the screen, touch the small window, and select **Play** to play the video.

Settings

In capture mode, press the **Menu key** to select **Settings**,

Select photo quality

Select the photo quality from **Low** (for MMS message) and **High** (for SD card).

Gallery

View pictures and videos in Gallery

To view the pictures you've captured, the video you've recorded, as well as any you've stored on your memory card, go to the **Gallery** application.

1. To open **Gallery**, select the **Gallery** in the home screen.
2. Depending on how many pictures and videos you've stored, they may take a few minutes to load.
3. If you've stored your pictures and videos in folders on your memory card, then the folders will display as separate "albums". The top album always contains all the pictures in all the albums, and the second one always contains all the videos in all the albums.

Select an album to view the pictures and videos.

4. To open a picture in full-screen view, touch the picture. Once in full-screen, select the arrows to scroll through the pictures within that album.

Zoom and navigate

When viewing a picture in full-screen view, you can zoom in and out, and navigate around the picture when it doesn't fit within the screen:

Zoom in

1. Touch the screen to open the zoom-in and zoom-out controls



2. Touch the + control to zoom in. With each touch you zoom in closer.

Zoom out

1. Touch the screen to open the zoom-in and zoom-out controls



2. Touch the – control to zoom out. With each touch you zoom out further.

Navigate in zoomed-in view

Slide your fingertip in any direction to shift your view.

Scroll through pictures in full-screen view

Touch the screen to reveal the left and right arrows, then touch an arrow to go to the previous or next picture.

Picture options

You can do the following while in Gallery.

Note: In all the instructions below, you can touch & hold a picture to open the context menu to access all actions, rather than open the picture in full-screen view.

View full-screen

Select a picture to open it in full-screen view.

Play slideshow

1. In full-screen view, press the **Menu** key and select **Slideshow**.
2. Your slideshow begins.
3. To stop the slideshow you can do one of the following:
 - Press the **Back** key - Takes you to thumbnail view.
 - Touch the screen - Shows picture in full-screen view.
4. To begin the slideshow again, press the **Menu** key and select **Slideshow**. If you stopped the slideshow, it will resume where you left off.

Share a picture

1. In full-screen view, press the **Menu** key and select **Share**.
2. Select to share your picture via Bluetooth, Messaging (MMS).
3. The relevant compose screen opens.
4. Complete your message and send it.

Rotate picture

1. In full-screen view, press the **Menu** key and select **Rotate**.
2. Select from **Rotate left** (counter-clockwise) or **Rotate right** (clockwise).
3. Your picture rotates and is saved automatically.

Delete picture

1. In full-screen view, press the **Menu** key and select **Delete**.
2. The picture will be removed from the memory card after you confirm.

Crop picture

1. In full-screen view, press the **Menu** key and select **Crop**.
2. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.
3. When you are happy with the cropped area, select **Save**. Select **Discard** to cancel the crop.
4. The cropped picture is saved to **Gallery** as a copy. Your original is not touched.

Set as wallpaper or contact icon

1. In full-screen view, press the **Menu** key and select **More > Set as**.
2. From the menu that opens select **Wallpaper**. Or select **Contact icon** to open the contact list, and then select the contact you want to associate with the picture.
3. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.
4. When you're happy with the cropped area, select **Save**.

View picture details

1. In full-screen view, press the **Menu** key and select **More > Details**.
2. The picture details window opens. You can see the title, resolution, file size, and date of the picture.

Settings

In the Gallery main screen, press the **Menu** key and select **Settings**.

Display size

The individual pictures and videos display in a grid in thumbnail format.

You can select the picture or video display sizes from **Large** or **Small**.

Sort order

You can select to sort pictures and videos with the newest one first or newest one last.

Confirm deletions

Select this check box if you want a confirmation dialog box to appear after you select to delete a picture or video.

Slideshow interval

Select how long each slide plays: two, three, or four seconds.

Slideshow transition

Select the transition you want to use between each slide during the slideshow: **Fade in & out**, **Slide left-right**, **Slide up-down**, and **Random selection** (uses all transitions in random order).

Repeat slideshow

Select this check box to repeat the slideshow until you explicitly stop it.

Shuffle slides

Select this check box to shuffle your pictures in the slideshow.

Music & Video player

Music

Your library of music

Press the Home key and select the **Music** to open your music library.

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order. If you select an artist, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Supported music formats

Your phone will play the following music file formats:

- MP3
- MIDI
- AAC
- AAC+
- AMR

Load music onto your memory card

All the music you can listen to on your phone is stored on a memory card. Read the instructions below to add music to your memory card.

1. Mount your memory card to your computer by doing one of the following:

Remove the memory card and insert it into a card reader attached to your computer

2. On your computer, find the mounted USB drive and open it.
3. Although your phone will find all music files on your memory card, it's advisable to keep the number of files or folders at the root level to a minimum. So, if you wish, create a folder at the top-level called "music" (or whatever you want) to store your files.
4. Open this folder and copy music files into it. If you want, create folders within "music" to organize your music further.


When finished copying, close the USB drive window and unmount or eject the drive as required by your computer's operating system.

Play back music

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select **Play** to begin play and go to the Playback screen.


You can do the following using the Playback screen:

Shuffle songs

Shuffle plays songs in random order. Touch  to toggle shuffle on and off. When the icon is grey, shuffle is off.

Repeat mode

Touch  to step through repeat modes:

Repeat all songs:  (green icon)

Repeat current song: 

Don't repeat:  (grey icon)

Go to any point in song

Slide fingertip in progress bar to desired point in a song.

Pause/resume play

Touch  to pause;  to resume play.

Fast forward

Touch & hold 

Go to next song

Touch once 

Rewind

Touch & hold 

Go to beginning of song

Touch once 

Go to previous song

Touch twice 

View current playlist

Touch 

Party shuffle

To start "party shuffle" (all the songs in your library are added to a playlist in random order), press the **Menu** key and select **Party shuffle**. To exit party shuffle, press the **Menu** key and select **Party shuffle off**.

If a song is playing while you are on the Library screen, you can switch to the Playback screen quickly by selecting the lower song bar.

Playlists

You can create as many playlists as you wish. Note that the "Recently added" playlist is a system playlist and cannot be deleted or renamed. Also, if you make any voice recordings as part of a MMS message, they will be stored automatically in a playlist called "My recordings".

Create a playlist on your phone

1. From the Library, select a category.
2. From the list that appears, touch the artist, album, or song that you want on a playlist.
3. Touch & hold the song to open the context menu.
4. Select **Add to playlist**.
5. In the Add to playlist menu that opens, select **New** to create a new playlist, or one of the existing playlists.
6. The song(s) are added.

Manage your playlists

1. Go to the Library screen and select **Playlists**.
2. All your playlists appear. You can do the following from this screen:

Play songs in list

Select the playlist.

Delete playlist

Touch & hold the playlist to open the context menu.
Select **Delete**.

Rename playlist

Touch & hold the playlist to open the context menu.
Select **Rename**.

Open the keyboard (if not already open) and type the new name.
Select **Save**.

Create ringtones from songs

You can set any of your songs as a phone ringtone:

1. From the Library, select a song you want to use as a phone ringtone.
2. Touch & hold the song in the list to open the context menu.
3. Select **Use as phone ringtone**. The ringtone is set as your default incoming call ringtone.
4. Or in the play mode, Press **menu** to select **Use as ringtone**.

Delete music from memory card

All the music you play on your phone is stored on the inserted memory card. From your phone, you can delete music stored on the card:

1. From the Library screen, select either the **Artists**, **Albums**, or **Songs** category.
2. Go to the screen that shows the artist, album, or song that you want to delete.
3. Touch & hold the item to open the context menu.
4. Select **Delete**. You will be asked to confirm that you want to delete the item from your memory card.

Video player

Select **Video player** in the home screen to open the Video player application. The video list appears.

Watch videos

To play a video, touch it with your fingertip.

While you are watching a video, touch the screen to reveal the transport controls.

Pause/resume play

Touch to pause ;  to resume play.

Fast forward

Touch 

Rewind

Touch 

Progress bar

Slide your fingertip along the progress bar to go to a particular point in the video.

Go to next video

Touch once 

Go to previous video

Touch once 

Adjust volume

Press the Volume keys to adjust the volume.

Search for videos

To find a video by typing a keyword, press the **Menu** key and select **Search**. The search window appears. Type your keyword, then tap the magnifier to start to search.

Settings

Screen pixel: Set the size of video-playing.

Refresh media store: Update the media store manually.

Play circularly: Set to play the videos circularly.

Select play settings: Set to play all the videos or only one video.

Local search: to search for a video in your handset or SD card.

Tools

Alarm Clock

To open alarm clock, select the **Alarm Clock** in **Home** screen. The Alarm clock offers as many alarms as you want.

Set an alarm

Three alarms are set up for you, ready to customize. All three alarms are turned off by default.

To begin, select one of the default alarms to open Alarm settings. Set the following options:

Alarm

Select the check box to turn alarm on (checked) or off (cleared). This is the same check box that appears on the main Alarm Clock screen.

Time

The time the alarm will go off is shown. To change this time, select **Time** to open the time selector. Tap the + or – buttons and the AM/PM button to set the time you want, then select **Set**.

Tip: Touch & hold the + or – buttons to move through the numbers quickly.

Ringtone

The current ringtone selection is shown. Select **Ringtone** to pick another ringtone that will play when the alarm rings. (When you select a ringtone, it plays briefly.)

Vibrate

Select this check box to have your phone vibrate when it goes off.

Repeat

The current repeat selection is shown. To change the setting, select **Repeat** and make a selection from the menu. To have your alarm will only go off once at the set time, don't select any of the options. A one-time alarm is shown on the Alarm Clock screen without any days under the set time.

Label

To name an alarm, select **Label**, then touch the textbox to change the label, then select **OK** to save it.

Delete alarm

To delete the alarm, press the **Menu** key and select **Delete alarm**.

Once your alarm goes off, you will receive an alert with the options to **Snooze** (for 10 minutes) or **Dismiss**.

Add more alarms

To add more than three alarms, from the main Alarm Clock screen, press the **Menu** key and select **Add alarm**.

Change clock display

You can change the appearance of the clock displayed on the main Alarm Clock screen:

1. Go to the main Alarm Clock screen.
2. Touch the clock with your fingertip to open the Clock selection screen.
3. Slide your fingertip horizontally along the bottom clock face row and touch the face you want to display.
4. To hide the clock, press the **Menu** key and select **Hide clock**.

Change date & time display

You can change the format of the time displayed in your alarms from the global Settings screen:

1. Go to the home screen, then press the **Menu** key and select **Settings**. Scroll down and select **Date & time**. The Date & time settings screen appears.
2. Use the network-provided values by selecting the **Automatic** check box.
3. Select the 24 hour format check box if you wish to use that rather than 12 hour format.
4. Select the **Select date format** option to open the menu of various date formats.

Alarm in silent mode

Go to the main Alarm Clock screen, then press the **Menu** key and select **Settings**. Select the check box to make the alarm clock play alarm even when the phone is in silent.

 
Calculator

To open Calculator, select the **Calculator** application in the **Home** screen.

The Calculator offers two panels: basic and advanced. Switch back and forth between panels by pressing the **Menu** key and selecting **Advanced panel** or **Basic panel**, as you wish.

Calculator panels

Two calculator panels are available: basic and advanced. Use the Basic panel to enter numbers and perform basic addition, subtraction, multiplication, and division. Use the Advanced panel to insert advanced operators or delimiters, such as sine, cosine, tangent, square root, parentheses, etc.

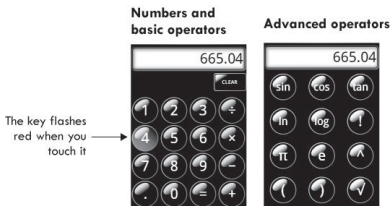

Switch back and forth between calculator panels by pressing the **Menu** key and selecting **Advanced panel** or **Basic panel**, as you wish. As soon as you select an advanced operator, the panel switches back to Basic, where your operator appears.

- When you touch a key on the screen, the key flashes red to let you know the selection was made. Make sure you see the red flash before entering your next number or completing the operation.
- To delete numbers, one at a time, touch **CLEAR** on the screen.

File Manager

Select **File Manager in the Home** to view the files in your phone or memory card.

Note: The files in your phone can not be operated.

1. Touch **SD card** to open the folder. Touch and hold the screen to open the context menu, select **New Folder** to create a new folder. Or touch and hold a folder to open the context menu, then you can copy, cut, paste, rename, or delete the folder.
2. Touch and hold a file to open the context menu, you can copy, cut, paste, rename the file or delete the content in the file.

Search file

The directory of the folder you visited shows on the upper side of the screen. Touch the rightmost icon to open the search textbox, input the file name you want to search in this folder, then press the magnifier to start searching.

Back to pre-directory

Touch the icon of the pre-directory on the upper side of the screen to go back to pre-directory.

Spare parts

Select **Spare parts** in the **Home** screen

Device info

Battery history: To view the summary of how battery has been used.

Battery information: To view the current battery status information.

Usage statistics: To view the summary of application usage.
General info

Window animations: To select the speed of animations in individual windows.

Transition animation: To select the speed of animations moving between screens.

Font size: To select the overall size of fonts.

End button behavior: To select action for the **Power & End key**. Select **Nothing**, and your phone will have no reaction when you press the **Power & End key**. Select **Go to home**, you will go to the home screen by pressing the **Power & End key**. Select **Go to sleep**, and your phone will be locked and go to sleep when you press the **Power & End key**. Select **Home, then sleep**, and your phone will be locked and go to the home screen when you press the **Power & End key**.

Compatibility Mode

Select to improve the compatibility to operate older application.

FM radio

Tip: The FM radio uses the headset wires as an aerial, so the radio will not work unless the headset is connected.

To open FM radio, select the **Fm radio** application in the **Home** screen.

Background play mode

1. In FM radio, press the **Menu** key to select **Play in Background**, or press the **Back** key to return to the home screen and play the FM radio in background mode.
2. If you want to turn off the FM radio, open the Fm radio application first, then press the **Menu** key to select **Exit** to turn off the radio.

Turn on/off the speaker

In FM radio, press the **Menu** key to select **Speaker** to listen to the radio with speaker; select **Speaker** again to listen to the radio with headset.

To listen to the radio

In FM radio, touch  and , to switch among the channels you saved in the channel list.

In FM radio, touch  and , to search channel back and forth.

Search channel

In FM radio, press the **Menu** key to select **Seek**, enter the frequency of the radio channel, and select **OK** to search.

Adjust the volume

In FM radio, press the Volume keys to adjust the volume.

Settings

Channel settings

Auto save channel – Select to auto save channel when current channel is valid.

Show channel list – Select to view the channels you saved.

Stereo settings

Auto stereo-It will be better in a weak signal area to Disable this option.

General Information

Accessories

There are various accessories for your mobile phone. Your pack will include standard battery x 1, headset x 1, and travel adapter x 1. Please note:

- Use only accessories and charging devices approved by the phone manufacturer otherwise you would risk serious damage to health and property.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions.

GPRS /EDGE

Support GPRS /EDGE functions.

Battery Care

Your phone is powered by a rechargeable battery.

- The voltage range of the phone battery is 3.2 V - 4.2 V.
- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk and standby) is noticeably shorter than normal, you should buy a new battery at the time.
- Unplug the travel charger when not in use, and don't leave the battery connected to a travel charger for longer than a week, since overcharging may shorten its lifetime.

- Overcharging may shorten its lifetime, and if left unused a fully charged battery may discharge itself over time.
- Never store or charge battery in extreme hot or cold temperature, since extreme temperature can shorten the life of your mobile phone and damage battery.
- Use only the charger and batteries that are approved for use or recommended by the manufacturer. Use any unqualified charger or batteries may cause damages to your mobile phone.
- Use only the charger and batteries that are approved for use or recommended by the manufacturer. Use any unqualified charger or batteries may cause damages to your mobile phone.
- Use the battery only for its intended purpose.
- Do not leave the battery inside of your car or in extreme weather conditions, since extreme temperature might cause damage to your battery.
- Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- Dispose of used batteries according to local regulations or manufacture's instructions. Do not dispose of batteries in a fire.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Charger attention

Attention: Please check the model of charger firstly before using with this mobile phone.

Warning: Only use batteries, chargers, and enhancements approved by **the Seller** with the particular model. Using any other types of batteries, chargers and enhancements will invalidate the approval or warranty, and may be dangerous. Please check with your dealer for availability of approved enhancements. Please grasp and pull the plug, not the cord when you disconnect the power cord of any enhancement.

Care and maintenance

Your mobile phone is a highly sophisticated electronic device. Please read this information before using your mobile phone. If any device is not working properly, take it to the nearest authorized service center.

Product Care

- Keep your mobile phone and all its parts out of young children's reach.
- Keep your mobile phone dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Avoid exposing your mobile phone to extreme hot or cold temperatures.
- The temperature range for using the phone is 0°C - 40°C
- Avoid placing your mobile phone close to lit cigarettes, naked flames or any heat source.
- Do not attempt to disassemble it. Only qualified personnel may install or repair your mobile phone.
- Do not drop, knock or shake your mobile phone. Rough handling can break internal circuit boards.
- Do not paint your mobile phone. Paint could obstruct the earphone, microphone or any moveable parts and prevent proper operation.
- Treat your mobile phone with care and keep it in a clean and dust free place.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a light burn. Please contact the nearest authorized service center to replace the damaged antenna.
- Use chargers indoors.
- Your mobile may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting

or receiving. Contact with such an antenna affects the communication quality and may cause your mobile to operate at a higher power level than proper operation needed and may reduce the battery life.

- Avoid using the phone at an altitude higher than 3000 meters.

Important Safety Information

Access Codes

PIN code

The Personal Identification Number (PIN code) protects your SIM card against unauthorized use. Your SIM card usually supplies the PIN code. The password can be obtained from your service provider. If the incorrect PIN code occurred three times in succession, you may need to key in PUK code.

PIN2 code

The PIN2 code may be supplied with the SIM card. Some functions will require PIN2 support, such as Set tariff. The password can be obtained from your service provider.

PUK code

The Personal Unlocking Key (PUK code) is required to change a blocked PIN code. The PUK 2 code is required to change a blocked PIN2 code. The password can be obtained from your service provider. If you key in an incorrect PIN2 code three times in succession, you may need to key in the PUK2 code. If incorrect PUK or PUK 2 code occurred for ten times in succession, then SIM card cannot be used anymore. You might need to contact your service provider for a new card.

Phone code

Phone code protects the phone against unauthorized use. It is not enabled when you buy the phone. You can change the phone code (0000) to any four to eight-digit personal codes.

Radio frequency energy

Your mobile phone is a radio transmitter and receiver. When the phone is turned on, it receives and transmits radio frequency (RF) energy. Depending on the type of mobile phone you possess, it operates on different frequency ranges and employs commonly used modulation techniques. The system handles your call when you are using your phone and it also controls the power level at which your phone transmits.

Specific Absorption Rate (SAR) information.

Your phone has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted by using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various (customer's name) phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) grams of tissue.
- The highest SAR value for this mobile device when tested at the ear was as following:

Band	900	1800	1900
max SAR 10 g	0.554	0.275	0.244

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone, therefore:

- Do not use your mobile phone near medical equipment without requesting permission.

Pacemaker

Mobile phones may affect the operation of some implanted cardiac pacemakers and other medically implanted equipments. Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) should be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with independent research by the Wireless Technology Research Association.

Persons with pacemakers

- Should always keep the phone more than 20 cm (6 inches) from their pacemakers when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite to the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some hearing aids might be disturbed by mobile phones. In the event of such disturbance, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Aircraft

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

To prevent interference with communication systems, you must not use your mobile phone while the plane is in the air.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include fuelling areas, such as petrol station, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Driving

Check the laws and regulations on the use of mobile phones in the areas where you drive. If you are going to use your phone while driving, please:

- Give full attention to driving.
- Use the “handsfree” setting. (Required by law in many countries).
- Pull off the road and park before making or answering a call if driving conditions so require.

RF energy may affect some electronic systems in motor vehicles such as the car stereo, safety equipment etc. In addition, some vehicle manufacturers do not allow use of mobile phones, unless the installation is supported by a handsfree kit with an external antenna in their vehicles. Check with your vehicle manufacturer's representative to be sure that your mobile phone will not affect the electronic systems in your vehicle.

Emergency Calls

Important:

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with your local service provider.

Battery Information

Type	Capacity
Li-ion	1,200 mAh

- The battery life depends on many factors, including the SIM card, network conditions, settings, usage and environment.
- Making calls, turning on the backlight and multimedia player will consume more battery power.
- The standby time is shorter when the network is not available than in the standard status.
- For power saving, the backlight turns off automatically if your phone stands idle for an assigned time.
- The performance of battery varies with the charging status, temperature, local radio wave and backlight status.

Accessories

Safety of the battery

1. Please use the battery provided by the original manufacturer. Use of any other battery will invalidate the warranty and the manufacturer of the phone will take no responsibility in repairing the phone damaged by the use of unapproved fittings.
2. Please keep any metal things (e.g. Keys in your pocket) away from the contact point of your battery to avoid short circuits.
3. Do not bend or open the battery by force
4. Please keep the battery away from water or fire.
5. The battery can not be charged in very hot or very cold locations as extreme temperatures can adversely affect the battery.

Rapid travel charger

The rapid travel charger can help you to quickly charge the battery. Plug the charger to an AC wall socket and plug the other end into the charger port of the phone. Please make sure the battery is correctly inserted on the phone before charging. Please do not remove the battery while charging.

Data cable

Only use the data cable approved by the phone manufacturer. The use of any other types would invalidate any approval or warrant applying to the phone and could be dangerous.

Condition of Warranty

1. The Warranty Period is twelve (12) months for the mobile device, travel charger, desktop stand, memory card, and wireless headset starting from the time of the product's original purchase by the first end-user.
2. The Warranty Period is six (6) months for the battery, headset, and data cable starting from the time of the product's original purchase by the first end-user.
3. The Warranty covers the (customer's name) mobile device and accessories purchased from an (customer's name) by Samart shop; authorized (customer's name) dealer, or (customer's name) authorized service center.
4. The warranty condition of the (customer's name) mobile device and accessories purchased outside of (Country) shall follow the warranty condition specified for that country. For products purchased in (Country), the end-user acknowledges and recognizes the expiry of the warranty period from the warranty sticker and the purchased date recorded by the (customer's name) point-of-sale system.
5. During the Warranty Period, (customer's name) or authorized (customer's name) service centers will remedy the defects in materials and workmanship free of charge by repairing or replacing the defective part(s).

6. (customer's name) warrants the mobile device and accessories where the warranty and conditions shall follow the applicable national law(s). To the extent permitted by the applicable law(s), (customer's name) does not warrant any commercial aspect and satisfactory of functionalities and does not assume any liability for any loss of benefit or profit, loss or damage from personal rights intrusion on conversation, loss of use of the product, or loss of or damage to or corruption of data, due to use or loss of use of the product.
7. As the mobile cellular system/ video and audio signal which operate with the (customer's name) mobile device and accessories are provided by a third party (independent operator) therefore, (customer's name) will not accept responsibility under this warranty for the operation, availability, coverage, or services of other networks or systems.
8. For any (customer's name) mobile device and accessories that have been repaired or have part(s) replaced, the repaired part(s) will be warranted for the remainder of the original warranty period from (customer's name) or ninety (90) days from the date of repair, whichever is longer.
9. For repair service outside warranty condition(s), the repairing charge and repair part(s) cost shall be customer's responsibility.
10. The warranty sticker on the mobile device and accessories must not be torn, removed, erased, defaced, or made illegible.

*THIS WARRANTY IS VOID UNDER THE
FOLLOWING CONDITIONS*

1. Damage to the mobile device and accessories resulting from unusual operation, misuse including the use that is contrary to the instructions provided by (customer's name) (e.g. as indicated in the user guide), inappropriate storage, exposure to moisture, to dampness or extreme thermal or environmental conditions or rapid changes in such conditions, corrosion, oxidation, spillage of food or liquid or to influence from chemical products, or from any action that causes the damage of the mobile device and accessories.
2. The damage of the mobile device and accessories resulting from natural disaster.
3. The mobile device and accessory has been opened, repaired, part(s) replaced, modified, adjusted, connected, or altered by anyone other than an authorized service center from (customer's name).
4. The mobile device and accessory has been used with or connected to a product, accessories, software and/ or service not supplied or authorized by (customer's name) including the use of device(s) inappropriate to use with the mobile device and accessory.
5. A variation of the brightness and display color between each mobile device and accessory may be found.
6. The modification, removal, alteration, or made illegible of the serial number, the date code, or the IMEI number of the mobile device and accessory result in void of warranty.
7. The damage and ruin of warranty sticker on the mobile device and accessories result in void of warranty.

