

Camera - Car User guide



SISTEMI DI COMUNICAZIONE

CAMERACAR

MOBILE OFFICE
ver. 2.6

User guide

1 Index

- 1 Content
- 2 Description of product
- 3 Specifications
 - 3.1 Technical specifications
 - 3.2 Turning On and Off
 - 3.3 Connectivity
- 4 Features CameraCar
 - 4.1 Cameras
 - 4.2 Navigator
 - 4.2.1 Navigation Bar Buttons
 - 4.2.2 Navigation
 - 4.2.3 Using the Keyboard
 - 4.2.4 Menu key
 - 4.3 Statement
 - 4.4 VOIP / Skype
 - 4.4.1 Compose
 - 4.4.2 Field
 - 4.4.3 Register
 - 4.5 Messages
 - 4.6 Crew
 - 4.7 Internet
 - 4.8 Destinations
 - 4.9 Day / Night
 - 4.10 assistance
 - 4.11 Restart
 - 4.12 Switching off
- 5 Warnings
 - 5.1 Background
 - 5.2 Coverage UMTS
 - 5.3 GPS Coverage
 - 5.4 WLAN Coverage

Camera - Car User guide

5.5 Troubleshooting

6 Maintenance

6.1 external enclosure

6.2 Touch screen

7 Appendix A

8 References

Read this manual carefully before installing and using the system Cameracar. Keep the manual for future.

2 Product description

CameraCar is a multimedia platform open and modular, capable of providing a package of info focusing on the safety of people and goods during the transport vehicle.

 
Etheria CameraCar system allows you to record locally and continuously in all that happens inside a vehicle, through a network of cameras located properly in the vehicle. These devices regularly send a video signal to a central unit (device embedded automotive type) that stores this information locally.



The CameraCar system is constantly connected to a central server through a communication channel digital UMTS / HSDPA. This allows an operator to access in real time to all information relating to the vehicle, such as GPS location and viewing of the cameras placed aboard the same.

Upon the occurrence of particular events, such as activating an alarm, the system will convey them to alert the operations center. The operator can then decide whether to enable real-time viewing of the cameras in order to have an objective assessment of the situation on the ground and able to act accordingly.

Camera - Car User guide

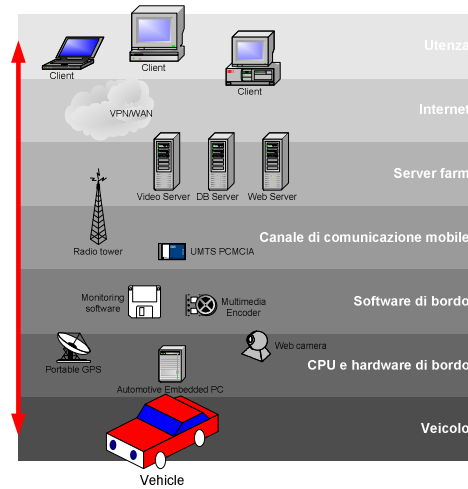

Camera car architecture

During normal operation the system is in passive mode, that is run by independent operations by the user. The mobile unit placed in the vehicle, in fact, receives the digital video from network cameras located inside the vehicle, hence the system develops continuously captured video streams and ensure their storage on local hard drive.

Otherwise, if during the transportation of special events occur (situations of danger to passengers or goods, activation of alarms, etc..) The system switches into active mode, which will immediately open a connection (UMTS or GPRS) with the central control and reporting of the incident in question.

The system can be programmed so that the center receives the registration of the cameras for a few seconds before activating the alarm. This allows for more complete information on the events that have occurred within the means at the time of reporting.

Besides the display, the system provides the recording of images from the cameras. For privacy reasons, typically those records remain on the mobile for not more than 24 hours. Where provided, you can program the transfer of records from the mobile to the server via a wireless network wi-fi 802.11.

3 Specifications

3.1 Specifications

3.1.1 General

- Operating system based on Windows XP Home Edition.
- Server and web interface for communication between the nodes included, requires no software installation on the PC front-end.
- Powerful function of geographical location of nodes.



3.1.2 Activation

Just connect the server to the network and turn it on. The nodes are self: just turned the vehicle is recognized by the system.

3.1.3 Camera

- Digital (USB, FireWire, Ethernet)
- Analog (BNC - B / W or color)

3.1.4 Video

- Up to 15 (6) frames per second with a resolution of 320x240 (640x480)
- Codec Video Compression MPEG-4 and Windows Media 10
- Video compression codec based on last generation able to withstand changes in the conditions of band
- There are 3 levels of compression. The size of a compressed video stream varies depending on the actual content of the images. The following table shows the average size of a video (10 seconds to 10 Fps), calculated from tests performed under real conditions

Camera - Car User guide

Resolution	Level of compression		
	Low	Medium	High
QCIF 320x240	175 Kb	110 Kb	50 Kb
PAL 352x288	205 Kb	130 Kb	65 Kb
VGA 640x480	340 Kb	225 Kb	105 Kb
PAL 720x576	390 Kb	255 Kb	120 Kb

- Adjusting the maximum bandwidth to prevent saturation of the network. A frame rate of 15 frames per second normally requires 45Kbit / s (audio and video).

3.1.5 I / O General

- NTSC / PAL TV OUT, 1 x S-Video and RCA jacks
- 1 x S-Video and RCA TV-IN jack
- Ethernet 10/100 Mbit Base-T with RJ45
- 2 x RS232, 1 LPT, 1 PS2 mouse, 1 AT keyboard, 1 VGA, 2 x USB 2.0
- Receives and conducts operations through web interface
- Storing images remotely via FTP or manually programmed

3.1.6 System Requirements

- Server: power and connection to the Internet with public IP. The bandwidth needed is proportional to the number of vehicles to be monitored simultaneously (1 vehicle = 45 Kbit / s)
- Front-End: any PC with a browser Explorer 5.0 + and Windows Media Player installed
- Vehicle: 12v DC power supply and housing black box
- Supported Protocols
- TCP / IP, HTTP, FTP, MMS, RTSP and more

3.1.7 Security

Restricting access to the vehicle via username / password, encoding of audio / video and access to the authentication server.

3.1.8 Hardware automotive

Camera - Car User guide

- Chassis made of aluminum, with fins for passive facilitated dissipation of heat produced
- Mini Flex ATX Motherboard with VIA CLE266 Chip Set, with PCI Riser Card for PCI
- CPU VIA C3 1 GHz, Technology "LowPower" a passive dissipation
- RAM 1 DIMM DDR 128MB, PC2100
- Graphic Chip VIA VT8623, 4x AGP, 128bit, 3D Graphics Engine
- AC97 2.2 compliant
- Minimum 6GB Hard Disk, 2.5 "slim
- PCMCIA Card UMTS / GPRS

3.1.9 Software

Support for auto-update software remotely. The system updates wherever the vehicle is positioned.

3.1.10 Portal

- Management and Authentication vehicles
- Automatic vehicle
- Local and remote recording
- Access via cell phone video
- Sending information to the vehicle
- Mapping and localization
- Access video archive

3.1.11 Power Automotive

- On board power DC 12V + - 5% input / adapter east. 220Vac / 12Vdc, 60W

3.1.12 Operating conditions

- Requires a waterproof housing suitable for outdoor use
- Temperature: 5-50 ° C (40-122 ° F) (depending on the camera)
- Humidity: 20-80% RHG, non-condensing
- The aim in the direct control should be used and configured correctly when used in environments where lighting conditions are extreme

3.1.13 Dimensions / Weight

Camera - Car User guide

- Height: 7.5 cm
- Width: 30 cm
- Length: 17.2 cm
- Weight: 4.5 kg (excluding accessories)

3.1.14 Included

- Camera BNC
- Environmental Microphone
- Loudspeaker mono (jack 3.5 ")
- The GPS sensor with a serial adapter
- Power cable 12V

3.2 Turning On and Off

The onboard computer is equipped with a control unit, which controls the phase on-off switch of the vehicular system. Usually the signal on-off switch is provided by "locked up" the vehicle, then the user to turn the power Cameracar will simply insert the ignition key. Where provided, may be provided a switch, unencumbered by any other mechanism, which controls the time the only device.

Start-up operations have execution times that can vary from a few seconds to a few tens of seconds, it depends on the number of cameras installed and the feature activated.

In the table below is given an estimated time of ignition in a standard configuration.

ACTIVITY	TIME (second)
Operating System	60
Sw UMTS network connection software	60
Sw Client	30
TOTAL	150

The shutdown of the system may be acting on a switch or parading the ignition key of the vehicle. There are situations in which the system is shut down automatically, this is the typical case that

Camera - Car User guide

occurs when the battery, which is connected to the onboard computer, is about to download. Before proceeding when the onboard computer is necessary to recharge or replace accumulator.

3.3 Connectivity

The system provides CameraCar at least three different types of connection: UMTS / HSDPA, GPS, WI-FI (or WLAN).

	UMTS/HSDPA	GPS	WLAN
Description	Description digital mobile radio network with national coverage, allowing the device to be constantly connected to the operations center at any point in the territory	Receive signal from the GPS satellite network for the location of the vehicle and the onboard navigator	802.11bg wireless network allows the transfer of mobile data to the central server on local network
Bandwidth	384 kbit/s – 7.2 Mbit/s	-	11 Mbit/s - 54 Mbit/s
Coverage	Global	Global	Local

The status of each connection is displayed in a text box, placed in the bottom left in the main menu (see picture). In the table below are the description corresponding to the color of each LED.

	UMTS/HSDPA	GPS	WLAN
Gray	Functionality not planned	Functionality not planned	Functionality not planned
Red	Not connected	GPS signal not found	Absent Network
Yellow	Conn. The secondary server	-	-
Green	Linked to UMTS network	-	Connected to the network WLAN

3.4 Configuration

The products of Etheria S.R.L. with server-side functionality available through the web browser Internet Explorer, on Windows operating systems. The correct delivery of these services is linked to the use of browser versions and operating system specified in the documentation in support of

Camera - Car User guide

individual products. Ether assumes no responsibility for any malfunctions associated with the use of incorrect versions of the web browser, operating system, due to the presence on the customer's computer programs that interfere with the normal operation of the Internet Explorer (such programs blocking pop-ups, Fast shipping, etc.), incorrect configuration of the network firewall, antivirus, presence of Trojans, worms or incorrect configuration of the navigation tools provided. web services provided along with Etheria's products are available, except with the express different mode ASP (Application Service Provider) without any guarantee on the SLA (Service Level Agreement). The aim of Ether is to provide its customers services in ASP mode "best effort".

Etheria assumes no responsibility for any lack of signal, discontinuity of service, lack of bandwidth or connectivity problems of any kind, related to mobile phone carriers use in their products, even if reflected in a partial or total lack of operation of same products. This lack of responsibility extends to all types of transmission channels (ex. GSM, GPRS, UMTS, HSDPA, Wi-Fi) and any mobile operator (ex. Vodafone, TIM, H3G, Wind), used by products Etheria. Etheria disclaims any responsibility for any delays, errors or problems of service, related to instant messaging systems (SMS, MMS), used in the apparatus to be provided due to the level of service quality provided by third party providers.

4 Features CameraCar

CameraCar comes with various functions, which are made available through an initial screen menus very simple and straightforward. Below each of them individually is shown.

Note that the lower left corner is always possible to monitor the status of connections in use (GPS, UMTS and WLAN) and space for the messages coming from Central Asia.

 


4.1 Cameras

The first button in the top left of the main menu, provides access to the vision of the cameras mounted on the vehicle. It's possible that the button is temporarily disabled, which may happen if the installation does not provide for the use of cameras, or during the activation and loading of video streams. In the latter case, waiting a few seconds to obtain the approval of the buttons.

Pressing a button in the menu "Preview" you can see the preview of what the camera is filming at the time. You can switch from one room to another without special arrangements, always bearing in mind that a slight delay because the system is able to make the change of the screen.

Camera - Car User guide

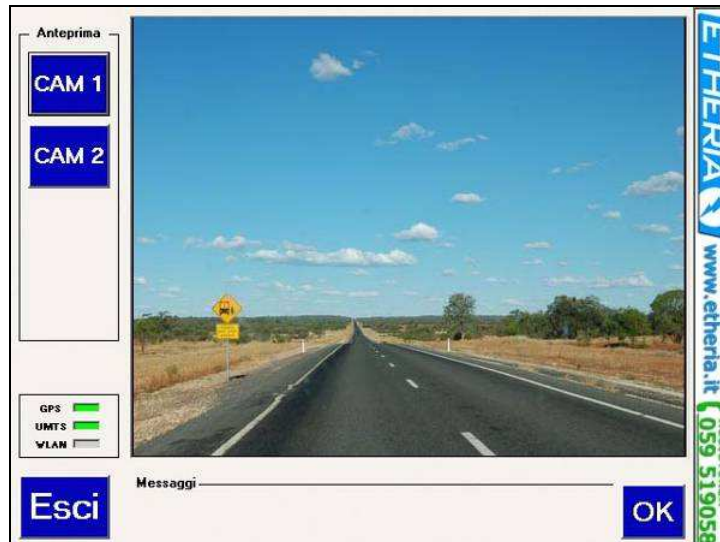

At any time you can return to the initial menu by pressing the button "Exit."

The bottom text field called "Messages" key with "Ok" is currently used by the user.

4.2 Navigator


By choosing the option "*Navigator*" displays the road map, focused in the area where the satellite receiver is locating the vehicle. The position of the vehicle is marked with a shaded arrow is placed at the center of the screen, indicating the required direction. *The arrow is green if the current GPS position is valid, otherwise red.* The red arrow at top right indicates the direction of North.

The map shows the names of the main streets, colored in orange, the secondary roads are shown in white with no words. In the bottom of the screen shows the name of the street where there is moving, and on the right side is a box that displays various information (speed, time required to reach a destination, time of arrival, distance to destination). Clicking on this you can see all the information cycle.

The buttons marked with the symbols "+" and "-" respectively, allowing the magnification (zoom-in) or reduce (zoom out) the map below, keeping fixed the center of the image, coincident with the icon vehicle. Note that between the two buttons shows the scale factor used in the map.

The maps can be changed with a drag, or pointing a finger on the touch screen and dragging on the screen in any direction. Even in this case acting on the buttons "+" and "-" you can zoom. In some cases, for example when you are near a point where the user communicates a change of direction, you can not use the zoom.

Camera - Car User guide

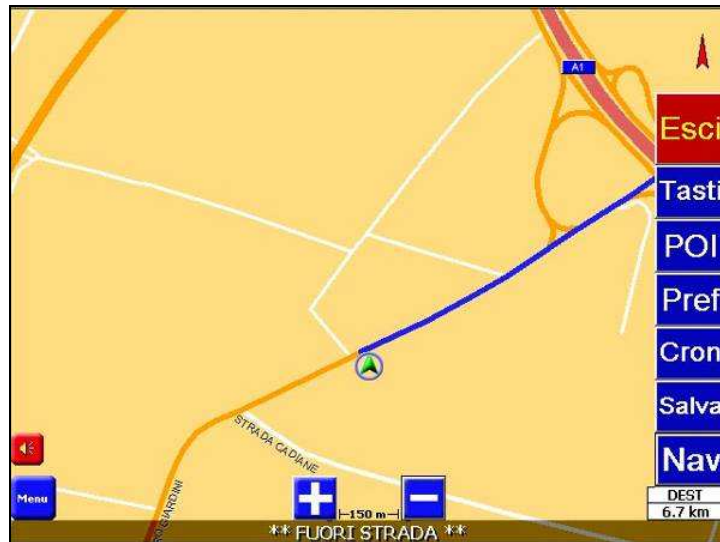

Also at the bottom of the screen you can see two other buttons. The first shows a loudspeaker on a yellow background red, and is merely an option to enable or disable the sound. The second, "Menu", you can open a window containing all commands give the navigator. Bar buttons to the right of the screen you can draw some of the same functions, placed in a different configuration aimed at simplifying the use of navigation by the user.

IMPORTANT: when started, *the navigator automatically sets the direct route to the last selected destination*. This is because the user could at any moment return to the main panel to perform other operations. This path is erased once the user types a command on the button bar.

4.2.1 Navigation Bar Buttons

On the right side of the browser screen you can select a few quick commands, available also within the more comprehensive "menu" below left, which will be explained in detail in the next paragraph. This is a "summary" of the functions of the browser, put in graphics adapted to the use of the touch screen, thus allowing the driver to easily perform some basic commands.

Via the button "Exit", you can exit the browser at any time.

Camera - Car User guide



IMPORTANT: Pressing the button "*Keys*", a keyboard with a blue background with white writing that occupies half of the screen. Pressing this button again, the keyboard disappears. This, of little use in this context, it is necessary when it comes to type the name of a street or a city of destination within the browser, the keyboard base, smaller, was designed for handheld and not for a touch screen, which appears to be impractical. The overlap of a second keyboard, more comfortable to use for the driver, it is so necessary and automatic in the case where no such mechanism were carefully, you can then force the appearance of the great keyboard by pressing the button "Keys."

NOTE: The mechanisms of appearance of graphics devices (toolbars, menus, lists) are all automated in the function selected. The "Keys" is intended to be a further tool to ensure a feature particularly important as the keyboard in full screen.

 
The key "POI" means specific areas such points of interest (points of interest), in various pre compiled lists divided by genre and demonstrated on the map quickly. The user can choose the type of POI to be displayed in a list that includes attractions, business, government, emergency, hotel, recreation, restaurant and transportation. The user can then specify a submenu in your request with details depending on the type chosen.

Camera - Car User guide



The selection screen allows the destination more commands: **arrows** to move through the list of possible destinations, the "**Nav**" key, which calculates the fastest route between the current position and the selected destination, "**Edita**" that allows you to rename the section of interest by changing the word "**Map**", which displays a new screen where the focus is placed instead of the selected destination of the vehicle, "**Info**", which shows all the data on the selected destination, "**X**", which closes the screen and return to the main.

Pressing the button "**Pref**" access to your **favorite destinations**. The list, which you can scroll up and down through the appropriate arrows, can be modified: Pressing the button "**Edit**" you can edit a selected entry from the keyboard through research and through "**Delete**" the entry is cleared. After selecting the desired destination, through the "**Nav**" the navigator sets the path to be followed starting from the current position of the vehicle, pressing the "**Map**" The map is centered code on selected. You can always return to the screen centered on the vehicle through the "**X**", appeared at the bottom right within the map.

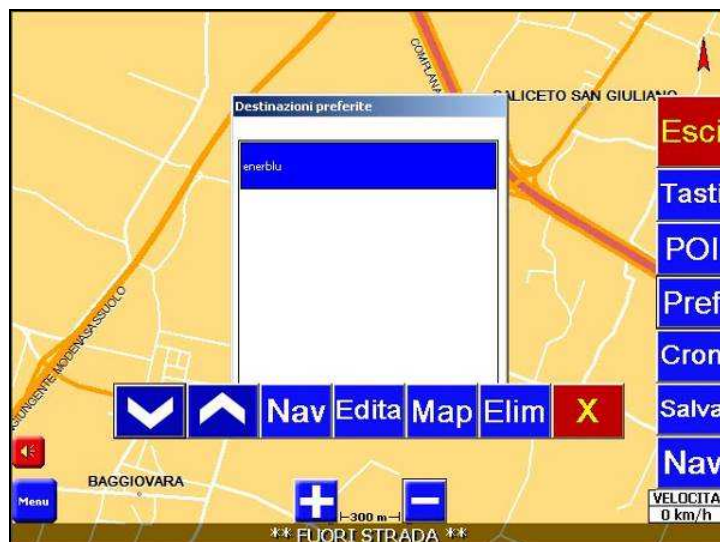

Camera - Car User guide



The "**Cron**" opens the history of previously selected destinations. This list is shown exactly as the favorite, and consists of the same commands except the button "**Pref**" instead of "**Edit**": with it you can scroll through the chronological list and save between destinations for one to fit between those previously released.

The button "**Save**" button allows the operator to automatically save your current location as a Favorite.

The "**Nav**" allows you to access the basic function of the navigator, which indicate a rapid route to the destination you want. This destination is selected by keyboard in a manner which will be shown in the next paragraph. Failure to comply with the guidelines from the voice of the sailor, there is no need to redo the procedure: is a function of the navigator automatically recalculate a new path to follow and communicate it to the driver.

4.2.2 Navigation

 
 
We show below the correct sequence of operations required to search for the desired destination and displays the path to follow.

Pressing the button "**Nav**" you access the menu of the destination city. The keypad will display automatically after a while. The list shown is updated automatically as you type, showing a list of possible destinations that contain in their words the string entered, even if partial.


The inclusion of the road you are running in the same way in the city.

Camera - Car User guide

In the case of house number is incorrect or unavailable, the user will notice the mistake and return to the screen for entering the number.

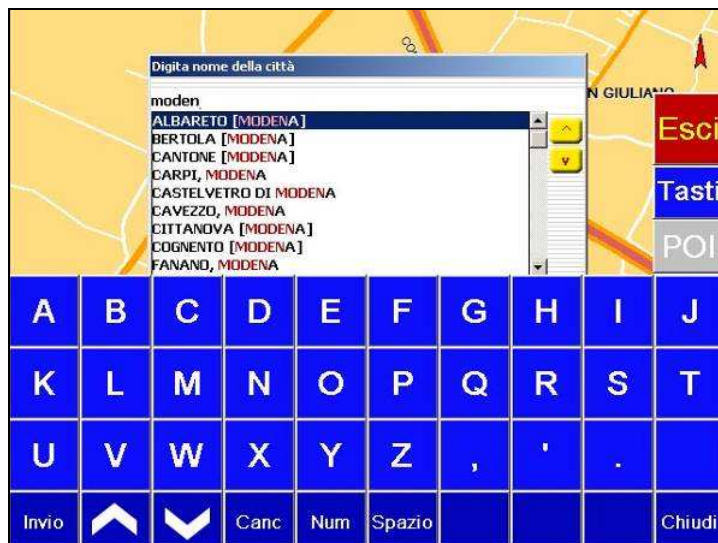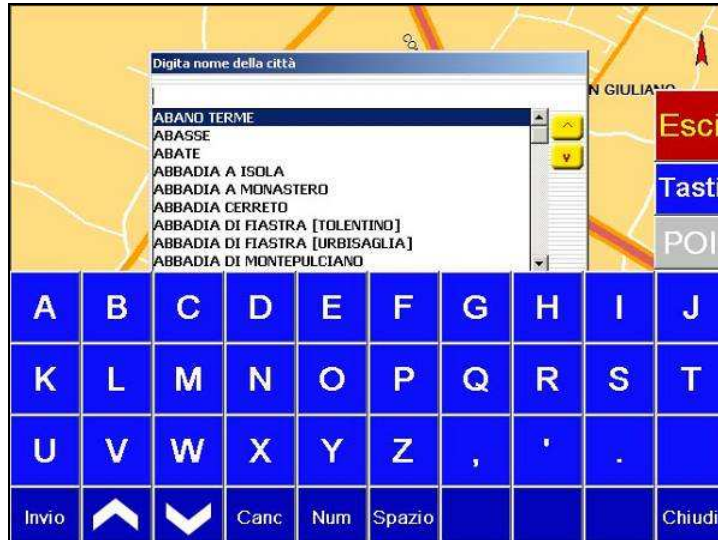

Camera - Car User guide

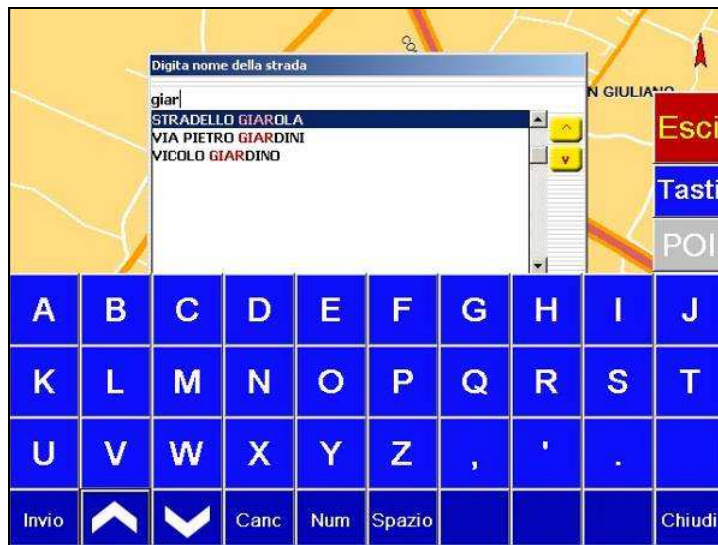 

4.2.3 Using the Keyboard

The keyboard includes the usual alphabet keys, plus a narrow amount of transactions: "**Delete**" to delete the last character typed, "**Space**", to create a space in the string input, "**Num**", to go through the numeric keys; the arrow keys to navigate within the result list temporary, "**Enter**" to confirm the selection. Once past the numeric keypad, you can return to the alphabet by pressing "**Num**".

Please note that in a search screen of the destination is possible, in addition to typing the name of the city or address you want, any time and view a list of possible results for a partial string included: the list is updated automatically every time you typed in the text is modified, thus being a help to the user, who can scroll up or down temporarily by their yellow arrows, to select the destination as quickly as desired. The outcome selected is highlighted with a blue bar with white text. At any time you can exit the keyboard by pressing the "x" at the bottom right corner.

4.2.4 Key Menu

 
Pressing the button "Menu" in the bottom left of the screen of the Navigator, you can view a window containing all the operations available to it in full mode. Please see the discussion of the duties of navigator to the appropriate manual.

4.3 Intervention

The right of the "**Navigator**" is the "**State Intervention**", through which you access a screen composed of several buttons bearing a serial number and a statement below. Each button is associated with a particular **state or event**. The operator can update in real time the status of your comment by pressing the appropriate button to associate achieved. *A message containing time and object of the command is sent instantly to the operations center, which receives real-time so the situation of the individual intervention.* The same message appears in the current state bar at the bottom of the screen and simultaneously press the button changes color, thus allowing the operator to receive immediate feedback on the message sent.

Pressing the button "**Exit**", you can return to the main screen.

Camera - Car User guide

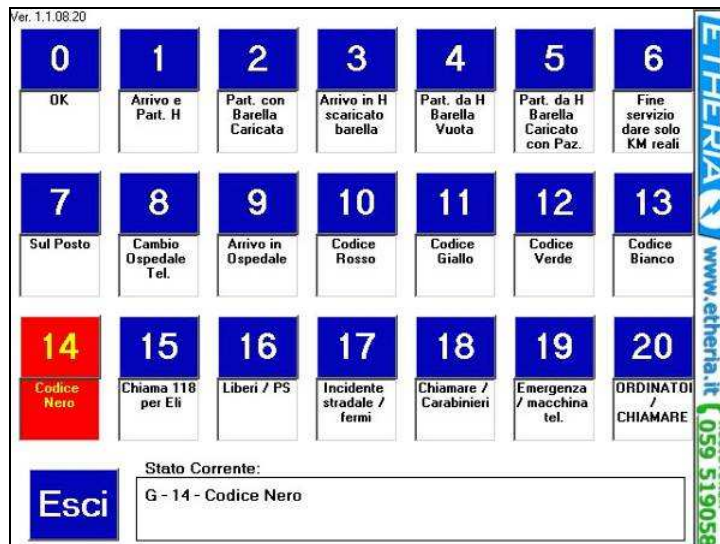

4.4 VOIP / Skype

From the main menu, pressing the button "**Skype**" you can access the Voice Over IP (VOIP) that allows you to make phone calls via the data network such as the Internet. With this feature, you can contact either numbers or mobile phones, both users of the Skype network.

Skype panel is divided into three sections which give a brief description below.

NOTE: It's possible make VOIP calls only if there is a connection-quality data type UMTS or HSDPA.

 
4.4.1 Compose

Represents the opening of the interface module Skype. The user must simply enter the phone number, including area code, and pressing the green button at top left to start the call.

To end the call is sufficient to act on the red button in the top left, which indicates re.

The "**Compose**" is always available within the module VOIP simply on the same button.

Camera - Car User guide

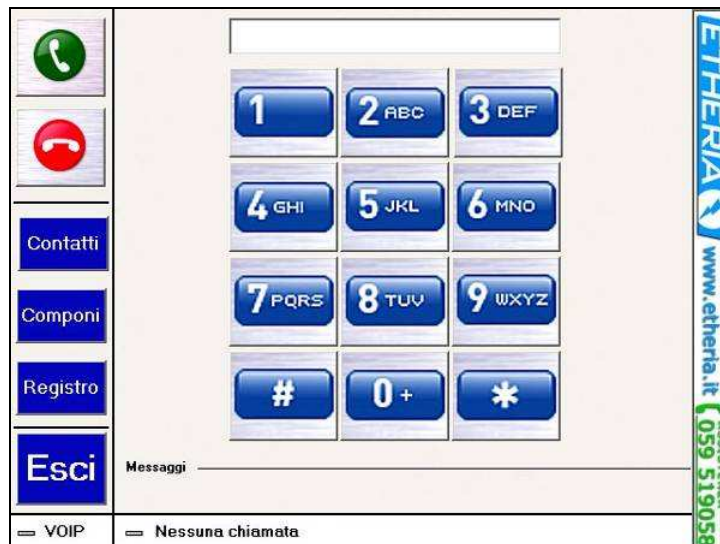

NOTE: It 'can call traditional telephone numbers (fixed / mobile) if you have activated the service Skype-Out offered by Skype for the client installed. For more information please visit www.skype.com .

4.4.2 Contacts

Pressing the button "**Contact**" you can access the address book of contacts pre-recorded on the client. In this case, to make a call simply select the contact and act on the green button in the upper left.

The phone book contacts can be modified only by the center out by the section provided on the portal Cameracar.

 


Camera - Car User guide

4.4.3 Register

See "Log" shows all the previous calls made and received, with date and time. Symbology specify whether the call was incoming or outgoing.

The user can call a contact in the registry, simply by selecting the item and pressing the green button to initiate the call.

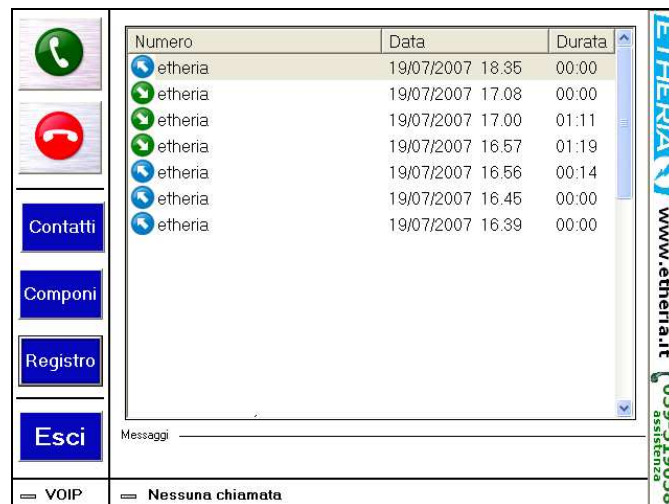


4.5 Slewing (optional)

It is the section dedicated to the control of the movement of motorized cameras (PTZ or swing).

From the main panel by clicking on "swing", you can access the control panel.

 If the installation does not provide for the use of cameras or slewing the system is being started, the "swing" can be disabled.

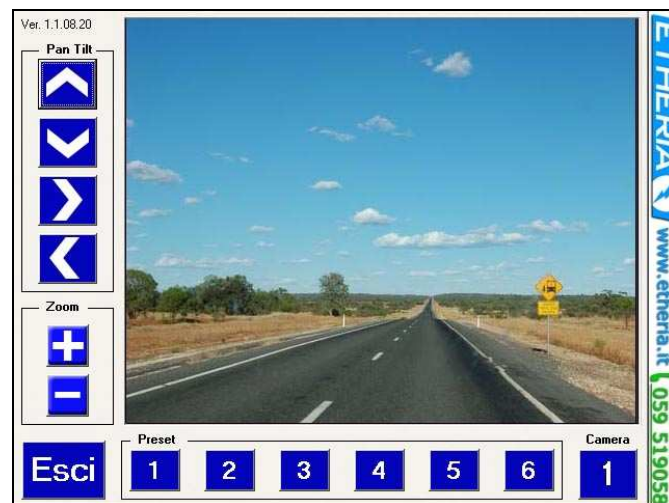

Camera - Car User guide

In the bottom right there is a button with a number (1 to 4) that identifies the camera on which you want to operate.

Acting on that button the operator can switch from one camera to the next. The cameras that do not provide control of the swing are all other controls disabled.

On the left side, in an upright position, there is a series of buttons that control the movement of the camera in the horizontal direction (with the arrow buttons pointing left and right), vertical (buttons with arrow pointing up and down) and zoom (buttons with the symbol "+" zoom in, and symbol "-" zoom out).

Below, from left to right are six preset positions. Through these buttons you can orient the camera in a predefined direction. This position can be saved simply by holding more than three seconds, the preset button.

4.6 Media Player

The button "Multimedia" opens the screen media player, that is a reproduction of audio and video. On start up, the player loads the initial list with audio tracks found in the default system.



Camera - Car User guide

The vertical bar of commands allows you to play the selected song to stop it or put it into temporary break through the "**Play / Pause / Stop**", while on the top menu "**Play-list**" is allowed to move from one track to another through the "**Prev / Next**".

The "**Video**" from the list switches audio tracks to movies in the folder by default. To go back just click on the button "**Audio**".

The "**USB**" allows the search for songs within a USB key inserted into the device. The command will load the audio files available if the list is audio, or video if the list includes only video file.

The button "**Mode**" is not currently in use.

The buttons "**Volume**" need to act to adjust the volume, raising, or lowering the same to eliminate the source. It's always recommend, however, use the function keys on the back of the monitor to not run into unexpected decreases or increases in other functions of Camera-Car.

NOTE: The audio file extensions are recognized: **mp3 and wav**. For the video, **mpg, avi and wmv**.

4.7 Messages

The Messages screen is simple and intuitive interface: it provides an alphanumeric keyboard including special keys. They have the same functionality described in paragraph 3.2.1, the item "**buttons**". The operator can write the message to be sent to the central button and then confirm with "**Enter**." The message will be delivered immediately. The button "**Close**" will allow a return to the main screen.

Camera - Car User guide



NOTE: If the device is connected to central control, acting on the button "**Enter**" will appear the words "**Message sent**", and simultaneously on the portal will appear Camera-car the text together supra-impress the icon of the vehicle from which it arrived.

Otherwise, if the device is not connected to central control, central bar will appear on the "**Message saved.**" In this case, the text will be stored locally and transferred as soon as connectivity is restored.

4.8 Crew

The screen "**Crew**" allows the operator to specify the components of the intervention team officer. It provides the specific for up to three users for each intervention, identified by their personal code. The operator, by pressing on each code, may show orange number and update it using this keyboard.

Camera - Car User guide

The screenshot displays the 'MENU EQUIPAGGIO' interface. On the left, there are three input fields for user codes: 'COD. UTENTE 1' with the value '2', 'COD. UTENTE 2' with the value '1', and 'COD. UTENTE 3' with the value '21'. To the right is a numeric keypad with buttons for digits 1-9, 0, 'Canc', and 'Mem'. At the bottom left is an 'Esci' button. On the right side, there is a vertical banner for 'ETHERIA' with the website 'www.etheria.it' and the phone number '059 519058'.

The button "**Delete**" undo the code in the box, inserting a zero in the field, which indicates no carrier selected for that role. In addition, to confirm the code entered and sent to the central reporting crew on board is just press the button "**Mem.**" This data can be updated in the course of work, each message was sent to the central go below the current composition of the crew in a given time.

The button "**Exit**" allows the return to the main screen.

4.9 Internet

The "Internet" allows you to access the Web through Internet Explorer. Next to the browser window on the left of the screen are four buttons bearing the address reset to the four sites visited most frequently.

 
On the top bar are included for convenience some recognizable symbols in the context of a usual web browsing: the arrows let you move back and forth between pages you visit, the house allows you to return to the main page, the arrows in a circle update the current page and the Red Cross will stop loading.

Inside the center box, you can move around on the web page through the sidebars.

The text field called "**Country Current**" with key "**Ok**" is currently used by the user.

The button "**Exit**" allows the return to the main screen.

Camera - Car User guide

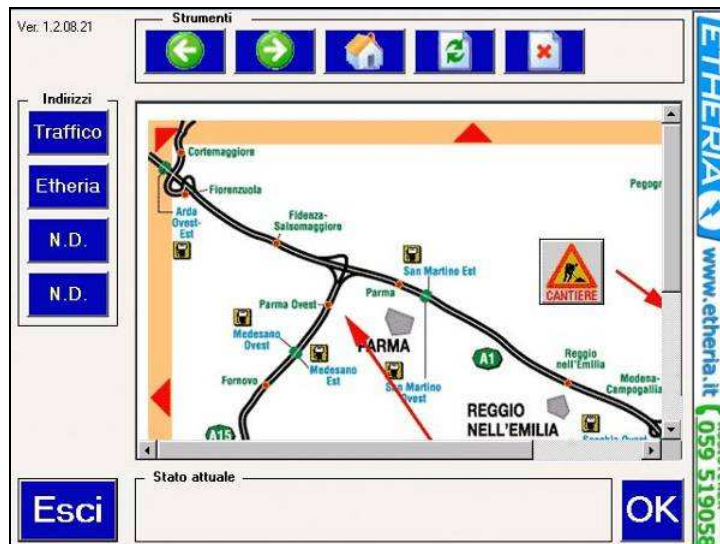

4.10 Destinations

The screen "**Destinations**" will save the place of departure and the place of destination of the route affected by. I see two lists of geography, one relating to same and one on the back. This selection is **not related in any way to your browser**, which must be configured separately using the command (section 3.2). The two lists may be past vertical through the green arrows or vertical bar, a choice of the place you want from those available to the operator.



You must be sure to correctly specify the nature of the route selected: the case of a one-way (button "A"), only to return (button "R") or both (button "A / R").

Through the "**Mem**" the selected route is saved and sent to central control.

Camera - Car User guide

The button **"Exit"** allows the return to the main screen.

4.11 Day / Night

The bottom **"Day"** allows you to set the screen mode during the day, while its corresponding **"Night"** set the graphics in an alternative way to allow proper display of Camera-Car even in low light situations.

Selecting this command does not open other screens, unlike the other buttons, but it reverses the state so invisible to the user.



4.12 Service

The "Help" is dedicated only to the personnel in this task. Contact your supplier if necessary.


NOTE: This feature does not perform any call or send a message to a request for central assistance.



4.13 Restart

In case you needed a reboot after a malfunction, please use always and the special control. Clicking on "Restart" is applied to the confirmation of this decision: by pressing "Yes" the system will be used again, while "No" allows you to withdraw and return to the main screen.

You must not cause a restart of the system via the manual button, you may experience failures.

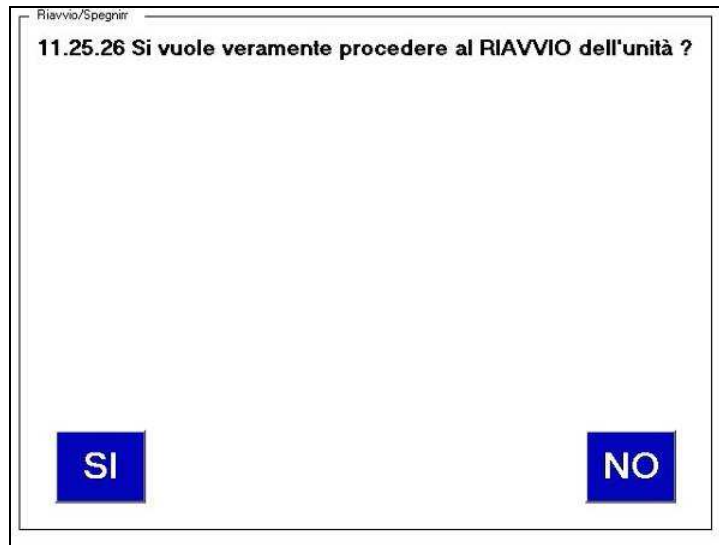

NOTE: This button is present only in facilities that do not have the power to control the ignition and shutdown. Otherwise, when this device is the "Restart" is disabled.

4.14 Shutoff

 
It is recommended to shut down the system only through this command. No other operation is necessary.

Do not touch it for any reason, the housing system in the vehicle to cause it to shutdown. As above, under the pressure of the button, the operator is asked for confirmation of this decision: by pressing "Yes" the system will be arrested, while "No" allows you to withdraw and return to the main screen.

Camera - Car User guide

You must not cause a restart of the system via the manual button, you may experience failures.

NOTE: This button is present only in facilities that do not have the power to control the ignition and shutdown. Otherwise, when on this device is present the bottom "**Off**" it is disabled.

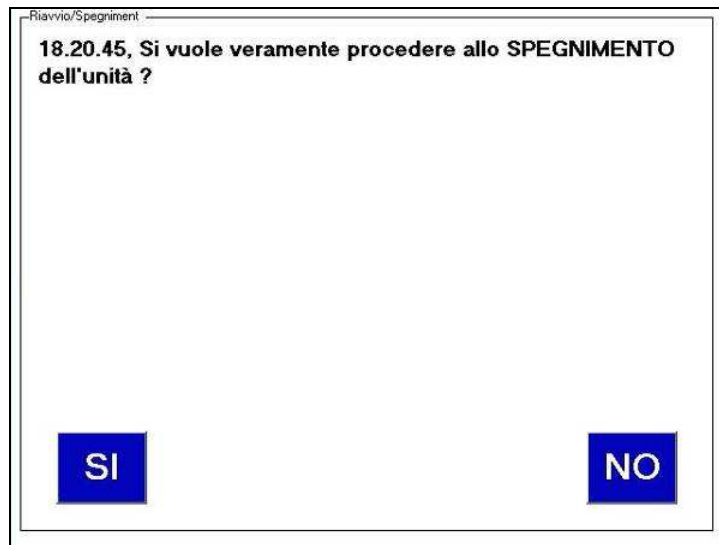

5 Warnings

5.1 Background

This system is designed to provide information support to the driver. However, some information used in this system, are not always updated and therefore can not be guaranteed as secure, accurate.

For safety while driving NOT make settings or manoeuvring ! Before preparing to use this system, the vehicle must be stationary and parked in an appropriate place. The manufacturer of this system is not responsible for any accident resulting in the use of this system while the vehicle is in motion.

While driving, observe the traffic signs and the real state of the road to ensure safe driving and proper. Please do not drive relying solely on voice commands given by the navigation system, to avoid any accident.

Do not disassemble and do not change this system to avoid damage to it, short circuits and principles of fire.

If any abnormality is noted on the system, such as a spill of liquid, smoke or smell, immediately stop the use of disconnecting the power. Get in touch with the manufacturer's representative for a closer inspection.

5.2 UMTS Coverage

The function of broadcasting depends on the coverage offered by the UMTS network operators (Three, Vodafone, Tim): you can not perform real-time monitoring in cases where the service is absent. Additional restrictions caused by the lack of connectivity to the UMTS network concern the possibility of failure to send remote commands to boot the local registration. However in the case of weak signal to send remote commands (via web) to the device is possible.

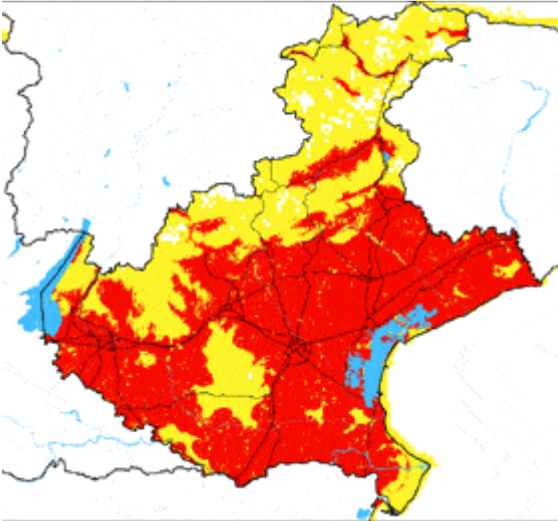


Fig. 1: Coverage UMTS operator TRE/H3G - Veneto

The current situation provides a good coverage in the centers of Italian cities, and strengthening the network is rapidly expanding. However, in the peripheral service broadcasting can not be considered fully reliable.

In Figure 1, displaying the map of the coverage offered by the Veneto "TRE/H3G" as an example:

red: UMTS coverage

yellow: GPRS coverage

5.3 GPS Coverage

The signal comes from a GPS constellation of satellites that orbit the Earth and provide almost global coverage. This may occur notwithstanding the particular conditions in which the GPS signal is weak or absent. In particular, these conditions are:

- Areas with a very dense forest;
- Areas covered, such as galleries, tunnels, under viaducts, garage, underground parking, etc.;
- Narrow streets lined by high buildings.

5.4 WLAN Coverage

Camera-car The system has an interface for communication on wireless network wi-fi be 802.11 g. The extent of this signal is around 100 meters, but that distance, in certain configurations, can be reduced.

5.5 Bug reports

It's possible that when you use Camera-Car there are problem or malfunction. The following are some simple case on.

- **The system is locked, or is very slow.** In this case, make sure that the delay is not due to a lack of receipt of network connectivity, or that has not been asked too rapid a transition from a camera to another. The possibility exists that the system has overheated in that case you will need to shut it down, or, if the problem persists, restart the system by command from the main screen (paragraph

Camera - Car User guide

3.10). If the system is permanently locked, press the power button manually. This will reboot the system.

- **The greatest keyboard does not overlap with that small.** Press the "Keys" in the top bar of the "Navigator". This will force the appearance of the keyboard bigger.

- **The current screen is locked.** Press the button to return to the screen and repeat the operation.

6 Maintenance

6.1 External enclosure

Cleaning and maintenance of the outer:

1. Use a soft, dry cloth to remove dirt.
2. If the dirt is not removed, dampen the cloth and apply a mild detergent to clean the unit. Then use a dry cloth to remove moisture.
3. Do not use solvents, cleaning products for the automobile, or organic products to clean the unit. These substances damage the housing of the system.

6.2 Touch screen

Cleaning and maintenance of the LCD:

1. Use a soft cloth and dry.
2. Turn off the system while it cleans up the display to prevent the static electricity damage.
3. The surface of the display can easily scratches, do not use a hard object to scrape the surface.
4. Do not use a pointed object, such as a pencil, to touch the surface of the display.

Notes:

 
1. The LCD operates normally between 0 and 60 ° C.
2. A high temperature can damage the display, thus avoiding exposing the LCD display to direct sunlight.
3. Do not drink or spill liquid into the shipping. Excess moisture can damage the electronic circuit.
4. Do not open or modify the unit, damaging the internal circuitry.
5. Do not let a cigarette or other hot objects come in contact with the LCD display. This might be damaged.
6. Do not insert foreign objects in the cavities of the connectors.
7. If you have problems during the operation, contact your dealer.
8. If the temperature is too high and prevents the normal operation of the LCD display, stop feeding momentarily and wait for the unit to cool. Once the temperature has returned to acceptable levels, the unit will operate normally.

Camera - Car User guide

9. Occasionally you can see more dark pixels or bright pixels on the LCD screen. This is normal consequence of the production process of the display and does not compromise the use of the navigation.

7 Appendix A

Electric scheme (version MB890)

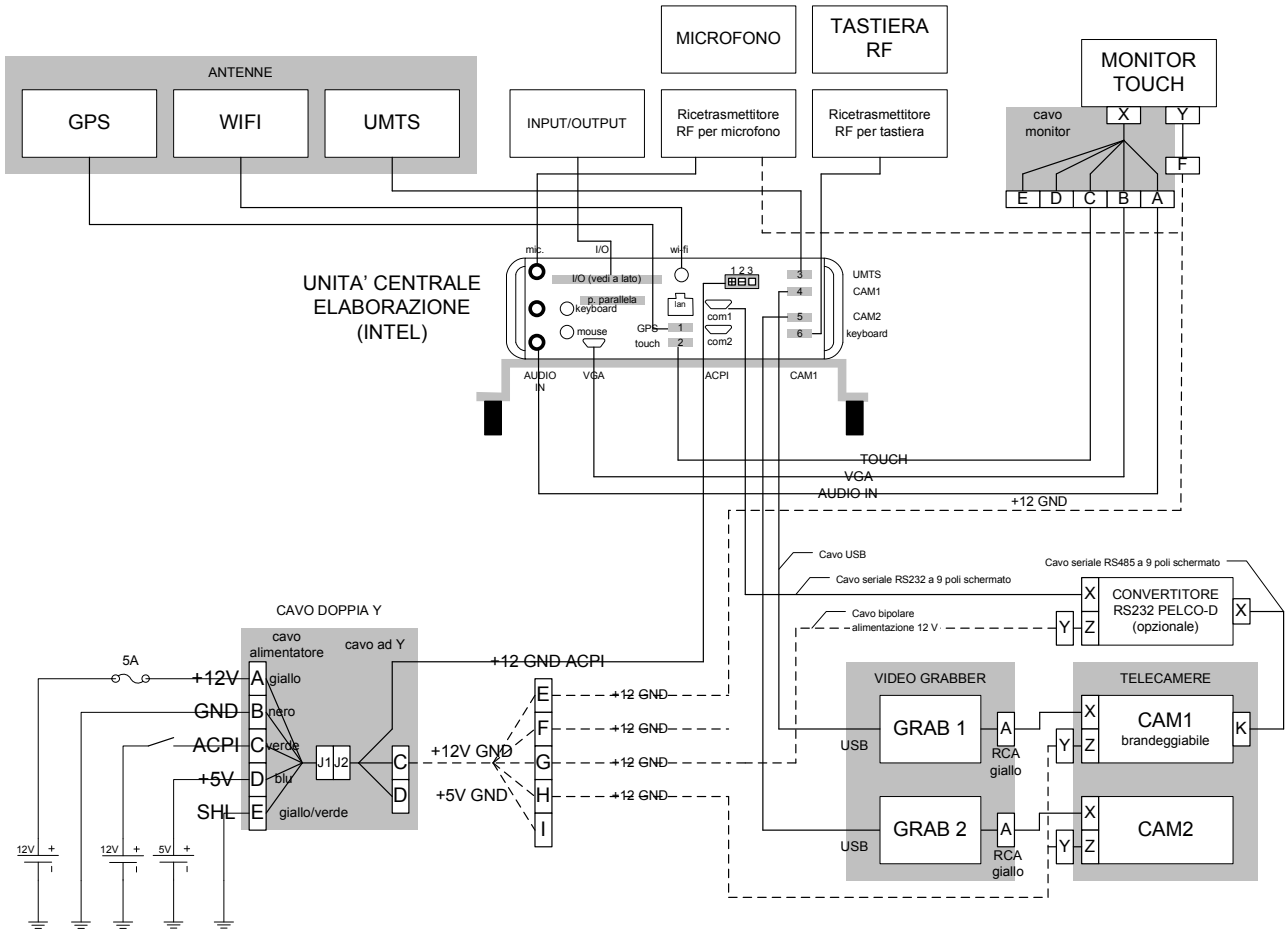

8 References

ETHERIA Srl
SCE Group Company
e-mail: info@etheria.it
web: www.etheria.it

Modena:

Via Giardini, 1271/A
41100 MODENA
Tel: (+39) 059.519 058
Fax: (+39) 059.515 242

Parma:

Parco Area delle Scienze, 181/A
43100 - PARMA
Tel: (+39) 0521.906 121
Fax: (+39) 0521.406 9915