


# HEATOR

## SRE 704 injection

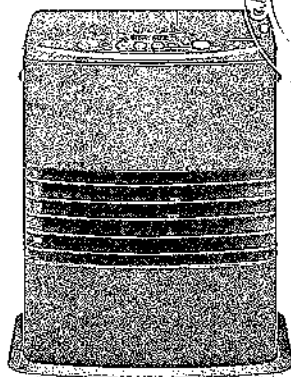

<b>F</b>	<b>MANUEL D'UTILISATION</b>	<b>2</b>
	<b>GEBRAUCHSANWEISUNG</b>	<b>12</b>
<b>E</b>	<b>ISTRUCCIONES DE USO</b>	<b>22</b>
	<b>OPERATING INSTRUCTIONS</b>	<b>32</b>
<b>I</b>	<b>ISTRUZIONI D'USO</b>	<b>42</b>
	<b>GEBRUIKSAANWIJZING</b>	<b>52</b>

Dear Sir, Madam,

Congratulations with your purchase of a portable domestic heater. You have purchased a quality product, which will serve you for many years to come. This, of course, provided you use the heater correctly. Please read these Directions for Use first, to ensure maximum lifetime for your heater.

Your heater comes with a 24-month manufacturer's warranty on all defects in materials or workmanship.

We wish you a warm and comfortable time with your heater.

Yours sincerely,

PVG International b.v.  
Customer Service Department

**1 READ THE DIRECTIONS FOR USE FIRST.**

**2 IN CASE OF ANY DOUBT, CONTACT YOUR DEALER.**

**3 BEFORE YOU START READING, FOLD OUT THE LAST PAGE.**

## GENERAL DIRECTIONS FOR USE

Below you will find the main steps to be taken for using your heater. For more details, please refer to the MANUAL (pages 35 ff.).

- 1 Remove all packaging materials (refer to Section A, Fig. A).
- 2 Fill the removable tank 7 (refer to Section B, Fig. C).
- 3 Insert the plug into the wall-socket.
- 4 Ignite the heater using the  $\odot$  key 14 (refer to Section D).
- 5 If required, change the temperature using the adjustment keys (refer to Section E).
- 6 Switch off the heater by pressing the  $\odot$  key 14.

- The first time you ignite your heater it will smell like new for a short time.
- Store your fuel in a cool and dark place.
- Fuel has a limited shelf life. Start every heating season with renewed fuel.
- The right quality of fuel will be assured when you use Zibro Plus for your heater.
- If you change to another brand and/or type of paraffin oil, you must first finish up all the remaining fuel in the heater.

## MAIN COMPONENTS

- 1 Front plate
- 2 Grid
- 3 Base plate
- 4 Lid for removable tank
- 5 Operation panel
- 6 Handle
- 7 Removable tank
- 8 Fuel gauge removable tank
- 9 Air filter
- 10 Vent filter
- 11 Thermostat
- 12 Plug + cord
- 13 Information display
- 14  $\odot$  key
- 15 Childproof lock
- 16 Adjustment keys (time and temperature)
- 17 Timer
- 18 Indicator lights

## WHAT YOU NEED TO KNOW IN ADVANCE

### ALWAYS MAKE SURE THAT THERE IS SUFFICIENT VENTILATION

For each model the minimum size of space is specified in which you can use the heater safely, without additional ventilation (*refer to Section O*). If a particular room is smaller than the specified space, always put a window or door slightly ajar ( $\pm 2.5$  cm). We also recommend doing this in highly insulated or draught-free rooms and/or at altitudes above 1,500 metres. However, if there is insufficient ventilation (i.e. oxygen), the heater will automatically switch off. Do not use your heater in cellars or other underground areas.



*Only the use of the correct fuel will ensure safe, efficient, and comfortable use of your heater.*



### THE RIGHT FUEL

Only use Class C1 paraffin fuel in accordance with BS2869; Part 2, or equivalent. Your heater has been designed for use with high-quality water-free pure paraffin oil, such as Zibro Plus. Only fuels of this kind will ensure clean and proper burning. Lower quality fuel may result in:


- ▶ increased possibility of malfunctioning
- ▶ incomplete burning
- ▶ reduced heater lifetime
- ▶ smoke and/or smells
- ▶ deposits on the grid or mantle

Using the right fuel is therefore essential for safe, efficient, and comfortable use of your heater.

Always refer to your local dealer for the right fuel for your heater.



*This transportation cap is packed separately in the box. Only this cap ensures trouble-free transportation of the heater after use. Store it well!*

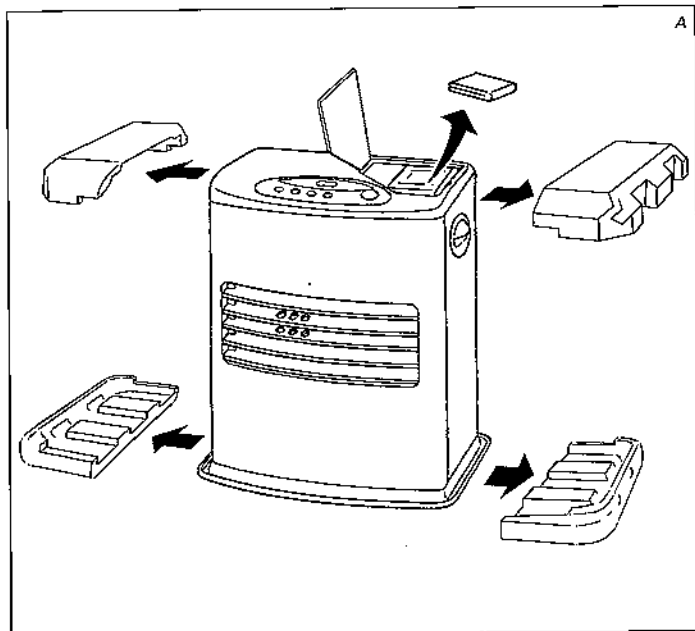

## A INSTALLING THE HEATER


- 1 Carefully remove your heater from the box and check the contents. In addition to the heater you also need to have:
  - ▶ a manual fuel pump
  - ▶ a transportation cap
  - ▶ these directions for use

Keep the box and the packaging materials (Fig. A) for storage and/or transportation.


- 2 Open the lid of the removable tank ④ and remove the piece of cardboard.
- 3 Fill the removable tank as indicated in Section B.
- 4 The floor should be firm and completely level. Reposition the heater, when it is not level. Do not try to correct the situation by placing books or other goods under the heater. Please refer to the separate instructions in the carton box for fixing of the heater.
- 5 Insert the plug ⑫ into the wall-socket (220/230 Volts - AC / 50 Hz) and set the correct time using the adjustment keys ⑩ (refer to Section C).
- 6 Your heater is now ready for use.

## B FILLING FUEL


Do not fill the removable tank in the living room, but in a more suitable place (there can always be some spillage). Follow the procedure below:

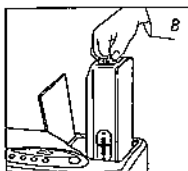

- 1 Make sure that the heater is switched off.
- 2 Open the lid ④ and lift the removable tank ⑦ out of the heater (Fig. B). Note: Some drops may leak from the tank. Put down the removable tank (cap pointing upwards) and screw off the fuel cap.

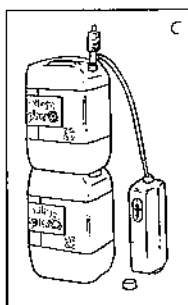

- 3 Take the manual fuel pump and insert the smooth, most rigid tube into the jerrycan. Make sure that it is in a higher position than the removable tank (Fig. C). Insert the ribbed hose into the opening of the removable tank.
- 4 Lock the switch button on top of the pump (turn clockwise).
- 5 Squeeze the pump a few times, until fuel starts flowing into the removable tank. As soon as this happens, there is no need to press any longer.

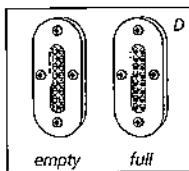

6 Check the removable tank fuel gauge ④ while filling the tank (Fig. D). Stop filling by loosening the switch button on top of the pump (turn anti-clockwise), once the gauge indicates that the tank is full. Never overfill the tank, especially not when the fuel is very cold (fuel expands when it heats up).

7 Let the remaining fuel in the pump flow back into the jerrycan and carefully remove the pump. Carefully screw the fuel cap back on the tank. Clean off any spilled fuel.


8 Check whether the fuel cap is straight and tightened properly. Reinstall the removable tank in the heater (cap down). Close the lid.

## C SETTING THE CLOCK

It is only possible to set the correct time, when the heater is connected to the mains and not burning. Use the adjustment keys ⑩ to set the time. First press either of the two keys to switch on the function (the CLOCK light and the information display ⑪ will start blinking). Next, set the hours using the key on the left (▼hour) and the minutes using the key on the right (▲min.). Press once to increase the value by one step. When you hold down the key, the value will continue going up, until you release the key again. After approximately 10 seconds the light will stop blinking and the setting will be locked. 5 minutes after switching off the heater, the information on the display will disappear and the heater will automatically switch into the stand-by position.



E: When the CLOCK indicator light stops blinking, the setting has been locked to the indicated value.

 When the heater has been unplugged (or after a power failure), the time needs to be set again.

## D IGNITING THE HEATER

When used for the first time, a new heater may give out a smell for a short while. You should therefore provide extra ventilation. Always ignite the heater with the ⑫ button. Never use matches or a cigarette lighter.

Just press the ⑫ button ⑫ to ignite the heater. The button will start blinking, indicating that the ignition procedure has started. This will take a short while. Once the heater is burning, the ⑫ button ⑫ will remain lit (yellow). The information display ⑬ will show two numbers. The light next to them indicates that these numbers refer to the temperatures (Fig. F). The actual room temperature is indicated below ROOM, while the temperature setting is indicated below SET. The latter can be changed with the adjustment keys (refer to Section E).

Prior to igniting the heater, always check for sufficient fuel in the removable tank.



F: The required temperature on the left, the measured temperature on the right.


 

 



## E SETTING THE REQUIRED TEMPERATURE

The temperature setting can only be adjusted, when the heater is burning. Use the adjustment keys ⑩ to adjust the temperature. First press either of the two keys to switch on the function (the TEMP light next to the information display ⑬ will start blinking). Next, adjust the temperature using the key on the right (▲min.) to set the temperature to a higher setting and the key on the left (▼hour) to lower the temperature. Press once to increase the value one step. After approximately 10 seconds the light will stop blinking and the setting will be locked (Fig. F).

The available temperature settings range from 6°C minimum to 28°C maximum. When the heater has been unplugged (or after a power failure), the temperature will reset to the factory setting of 20°C.

## F USING THE TIMER

The timer allows you to switch on the heater automatically at a preset time. In order to switch on the timer, the correct time must have been set (refer to Section C) and the heater should be off. Follow the procedure below:

- 1 Press the  button  and then the TIMER key  immediately after that. The TIMER light and the information display  will start blinking.
- 2 Use the adjustment keys  to set the time at which the heater must ignite. Use the key on the left ( hour) to set the hours and the key on the right ( min.) to set the minutes (interval of 5 minutes).
- 3 After approximately 10 seconds the information display will show CLOCK again and the TIMER indicator light will light up, indicating that the timer function has been activated (Fig. G).
- 4 The timer will ensure that the room will have been heated to approximately the required temperature at the set time.



G: The TIMER indicator light indicates that the timer function has been switched on.

 
 

 


When you want to switch off the heater and ignite it again with the timer, all you have to do is press the TIMER key (refer to Section G).


Press the  button  once to clear the timer setting.

## G SWITCHING OFF THE HEATER

There are two ways to switch off the heater.

- 1 Press the  button . The information display will show the CLOCK signal. Within approximately one minute the flame will have extinguished.
- 2 Press the TIMER key , when you want to switch off the heater and ignite it again with the timer the next time. This not only switches off the heater, but it also activates the timer function. You can change the required time with the adjustment keys  (refer to Section F).

## H THE INFORMATION DISPLAY

The information display  not only serves as an indicator of the (set) time and temperature (Sections C, E, and F), it also indicates any malfunctioning of the heater. The code on the information display tells you what is the matter:

CODE	INFORMATION	WHAT TO DO
E - 0	Temperature within the heater too high.	Cool-down and re-ignite.
F - 0	Power interrupted.	Re-ignite the heater.
E - 1	Faulty thermostat.	Contact your dealer.



In case of any malfunctioning the information display will tell you what is the matter.

<i>F - 1</i>	Faulty burner thermistor.	Contact your dealer.
<i>E - 2</i>	Starting problems.	Contact your dealer.
<i>E - 5</i>	Tipping-over protection.	Re-ignite the heater.
<i>E - 6</i>	Poor burning.	Contact your dealer.
<i>E - 7</i>	Room temperature above 28°C.	If necessary, re-ignite the heater.
<i>E - 8</i>	Defective booster.	Contact your dealer.
<i>E - 9</i>	Air filter dirty; or Fuel pump dirty.	Clean filter. Contact your dealer.
<i>48 Hr</i>	The heater has been in operation continuously for a period of 48 hours and has turned itself off automatically.	Switch the heater back on. Refill removable tank.
<i>-- : --</i> (& blinking FUEL-light)	Out of fuel.	
<i>-- : --</i> (& blinking VENT-light)	Too little ventilation.	Ventilate better.

Always contact your dealer for any malfunctioning not listed above.



#### AUTOMATIC DEACTIVATION

This heater is fitted with a safety system that ensures that it switches off automatically after 48 hours continuous operation. The following will then appear in the display: *48 Hr*. If desired, you can switch the heater on again by pressing the **⊖** button **(1)** (see chapter D).



#### AUTOMATIC CLEANING MODE

When the heater has been burning continuously for two hours at its highest setting, the burner will automatically start an autoclean procedure. The display will show the autocleaning code *CL:05* running back to *CL:00*. The procedure takes 5 minutes, during which the heater will burn at its lowest setting, while the burner autocleans. When the burner is clean again, the heater will automatically switch back to the highest setting again.



*H:* When the KEY-LOCK light lights up, the childproof lock has been activated.

#### I CHILDPROOF LOCK

The childproof lock can be used to prevent children accidentally changing the heater settings. When the heater is burning and the childproof lock is on, the heater can only be switched off. Other functions are blocked then. If the heater has already been switched off, the childproof lock also prevents accidental ignition of the heater.

Activate the childproof lock by pressing the appropriate key **(1)** and holding it down for more than 3 seconds. The KEY-LOCK indicator light will light up (Fig. H), indicating that the childproof lock has been activated. Switch off the childproof lock by pressing the key **(1)** and holding it down for more than 3 seconds once again.

#### J THE 'FUEL' INDICATOR LIGHT

When the FUEL indicator light lights up, there is enough fuel left for another 10 minutes of heater use. The count-down of the remaining heating time can be seen in the information display **(1)** (Fig. I). Every two minutes an alarm signal is sounded, warning you to refill the removable tank. If you do not react, the heater







I: When the FUEL indicator light is lit, the information display will show the number of minutes of fuel left in the tank.



J: A blinking VENT indicator light is a sign that you need extra ventilation.

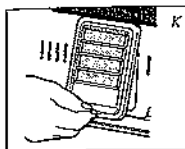

Fuel filter

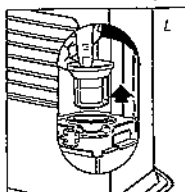

Do not remove any heater components yourself. Always contact your dealer for repairs. When the power cord is damaged, it may only be replaced by an authorised fitter. Use a new cord of the type H05 VV-F.

will extinguish by itself. The heater will also sound a warning signal, when it switches off. The FUEL indicator light will blink, while four lines are blinking in the information display. You can stop this by pressing the button once. Once the heater has used up all its fuel and is extinguished it will take some time, after the refill, before the heater is completely ready for use again.

## K THE 'VENT' INDICATOR LIGHT

When the VENT indicator light starts blinking, this is a sign that the room is not vented sufficiently (Fig. J). If you do not provide additional ventilation, the heater will switch off automatically after some time. If the indicator light continues blinking after extra ventilation, please contact your dealer.

## L MAINTENANCE

Switch off the heater and let it cool down, before you start any maintenance work. Also disconnect the plug from the mains.

Your heater needs hardly any maintenance. It is, however, important that you clean the air filter and the vent filter with a vacuum cleaner and the grid with a damp cloth, both on a weekly basis. Remove the air filter occasionally (Fig. K) and clean it with soapy water. Prior to reinstallation, make sure that the air filter cap has fully been dried.

Regularly inspect the fuel filter as well:

1. Remove the removable tank from the heater and remove the fuel filter (Fig. L). Some drops may leak from the filter; keep a cloth at hand.
2. Remove the dirt by tapping the fuel filter upside-down against a hard surface. (Never clean it with water!)
3. Reinstall the fuel filter into the heater.

We recommend that you remove dust and stains from time to time with a damp cloth, because otherwise these may cause stains that are hard to remove.

## M STORAGE (END OF THE HEATING SEASON)


At the end of the heating season, you must store the heater in a dust-free place, if possible in its original packaging. Unused fuel cannot be used in the next heating season. We therefore recommend that you burn up all fuel. If there is still some fuel left, do not throw it away, but dispose of it in accordance with the local regulations for the disposal of domestic chemical waste.

Always start the new heating season with fresh fuel. When you start re-using the heater follow the instructions again (starting from section A and as specified).

## N TRANSPORTATION

Take the following measures to avoid fuel leakage during the transportation of the heater:

- 1 Let the heater cool down.
- 2 Remove the removable tank ⑦ from the heater and remove the fuel filter (refer to Section L, Fig. L). Some drops may leak from the filter; keep a cloth at hand. Store the fuel filter and the removable tank outside the heater.
- 3 Place the transportation cap into the position of the fuel filter (Fig. M). Press it tight.
- 4 Always move the heater in an upright position.

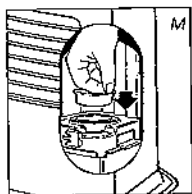

transportation cap

## O SPECIFICATIONS

Ignition	electrical	Dimensions (mm)	width	374
Fuel	paraffin	(including base plate)	depth	280
Capacity (kW) max.	3.0		height	430
Capacity (kW) min.	0.8	Accessories	manual fuel pump	
Suitable space (m <sup>3</sup> )*	30-120		transportation cap	
Fuel consumption (l/hr)*	0.313	Mains	220V/230V	
Fuel consumption (g/hr)*	250		-- AC/50 Hz	
Burning time per tank (hr)*	12.8	Electrical consumption	igniter	320 W
Capacity removable tank (litres)	4.0		continuous	32 W
Weight (kg)	9.5	Fuse rating		250V, 5A

\* At maximum setting

\*\* Specified values are indicative

## P WARRANTY PROVISIONS

Your heater comes with a 24-month warranty starting on the date of purchase. Within this period all defects in material or workmanship will be repaired without any charge. The following provisions shall apply regarding this warranty:

- 1 We expressly dismiss all other claims for damages, including consequential damages.
- 2 Any repairs or replacements of components within the term of warranty will not result in an extension of the term of warranty.
- 3 The warranty shall no longer apply, when the heater has been modified, non-original parts have been used, or when it is repaired by third parties.
- 4 The warranty shall not apply to parts that are subject to normal wear, such as the burner mat and the manual fuel pump.




5. The warranty shall only apply, when you present the original, dated proof of purchase, provided no changes have been made to it.
6. The warranty shall not apply to damages caused by actions not in compliance with the Directions for Use, neglect, and the use of an incorrect type of fuel, or fuel past its use-by date. The use of incorrect fuel can even be dangerous\*.
7. Transportation costs and the risks involved during the transportation of the heater or heater components shall always be at the expense of the purchaser.




In order to avoid unnecessary costs, we recommend that you always read the 'Directions for Use' carefully first. In case they offer no solution, please take the heater to your dealer for repair.

\* Highly inflammable substances may induce uncontrollable burning, causing flames to break out. Should this happen, never try to move the heater, but always switch off the heater immediately. In case of emergency you may use a fire extinguisher, but only a type B extinguisher: a carbon dioxide or powder extinguisher.

## 10 TIPS FOR SAFE USE

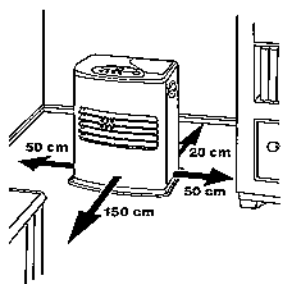

1. Make sure that children are always aware of the presence of a burning heater.
2. Do not move the heater when it is burning or still hot. Do not refill nor service the heater when it is burning or still hot.
3. Position the front of the heater at a distance of minimum 1.5 metres from walls, curtains, and furniture.
4. Do not use the heater in dusty rooms or places with strong draughts. In either situation you will not have optimum burning. Do not use the heater in the immediate surrounding of a bath, a shower or a swimmingpool.
5. Switch off the heater before you leave or go to sleep. Unplug the heater as well when you go away for a longer period of time (e.g. holidays).
6. Store and move fuel only in suitable tanks and jerrycans.
7. Make sure that the fuel is not exposed to heat or extreme temperature changes. Always store the fuel in a cool, dry and dark place (sunlight will affect the quality).
8. Never use the heater in places where harmful gasses or fumes may be present (e.g. exhaust gasses or paint fumes).
9. Beware that the grid of the heater becomes hot. If the appliance is covered there is a risk of fire.
10. Always make sure that there is sufficient ventilation.

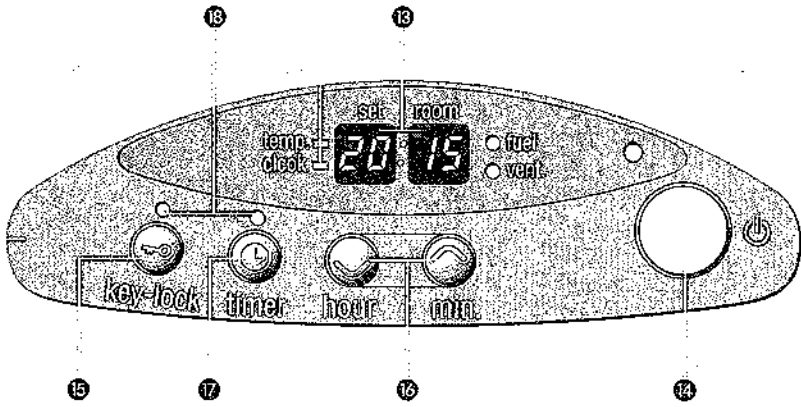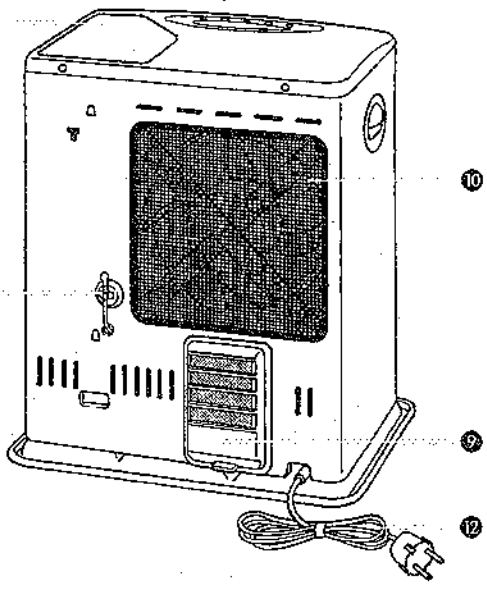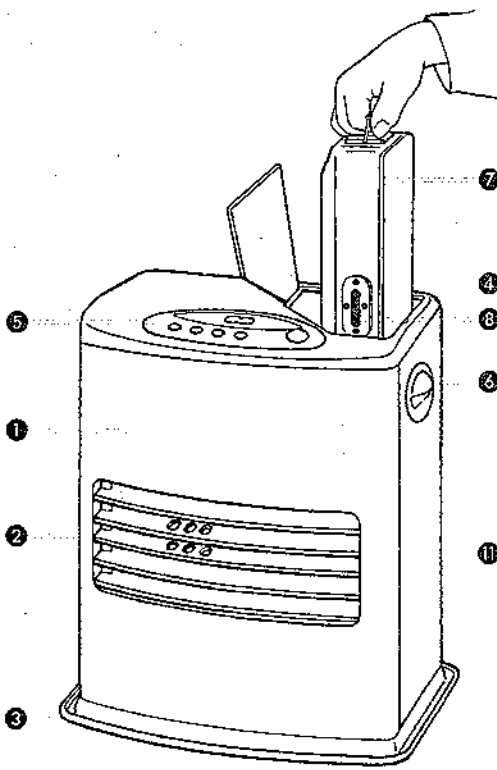

## DISTRIBUTED IN EUROPE BY PVG INTERNATIONAL BV

**(FR) France**  
PVG France SARL  
4, Rue Jean Sibélius  
B.P. 185 - 76410  
SOTTEVILLE SOUS LE VAL  
tel: +33 2 32 96 07 47  
fax: +33 2 32 96 07 77  
email: pvgfrance@zibro.com

**(A) Austria**  
PVG Austria Vertriebsgmbh  
Salaberg 49  
3350 HAAG  
tel: +43 7434 44867  
fax: +43 7434 44868  
email: pvgaustria@zibro.com

**(B) Belgium**  
PVG Belgium NV/SA  
Industrielaan 55  
2900 SCHOTEN  
tel: +32 3 326 39 39  
fax: +32 3 326 26 39  
email: pvgbelgium@zibro.com

**(CH) Switzerland**  
PVG Schweiz AG  
Genuastrasse 15  
4142 MÜNCHENSTEIN  
tel: +41 61 337 26 51  
fax: +41 61 337 26 78  
email: pvgint@zibro.com

**(D) Germany**  
PVG Deutschland GmbH  
Beiersdorfstraße 4  
46446 EMMERICH  
tel: +49 2821 76713  
fax: +31 412 648385  
email: pvgint@zibro.com

**(DK) Denmark**  
PVG Scandinavia A/S  
Niels Bohrsvej 10  
6100 HADERSLEV  
tel: +45 73 53 02 02  
fax: +45 73 53 02 04  
email: pvgdenmark@zibro.com

**(E) Spain**  
PVG España S.A.  
Pol. Ind. San José de Valderas II  
Comunidad "La Alameda"  
C/ Aurora Boreal, 19  
28918 LEGANÉS (Madrid)  
tel: +34 91 611 31 13  
fax: +34 91 612 73 04  
email: pvgspain@zibro.com

**(GB) United Kingdom**  
Lister Gases  
Bridge Street  
Holloway Bank, Wednesbury  
West Midlands WS10 0AW  
Tel.: +44 121 506 1818  
Fax: +44 121 505 1744  
email: gases@lister.co.uk

**(I) Italy**  
PVG Italy SRL  
Via Niccolò Copernico 5  
50051 CASTELFIORENTINO (FI)  
tel: +39 571 628500  
fax: +39 571 628504  
email: pvgitaly@zibro.com

**(N) Norway**  
Sunwind - Gylling A/S  
Løxaveien 17 - P.O. Box 64  
1351 RUD  
tel: +47 67 17 13 70  
fax: +47 67 17 13 80  
email: pvgdenmark@zibro.com

**(NL) The Netherlands**  
PVG International b.v.  
P.O.Box 96  
5340 AB OSS  
tel: +31 412 694694  
fax: +31 412 622893  
email: pvgnl@zibro.com

**(PL) Poland**  
PVG Polska Sp. z o. o.  
Kolonja Promna 58  
26-803 PROMNA  
tel: +48 48 615 16 33  
fax: +48 48 615 16 33  
email: pvgpoland@zibro.com

**(P) Portugal**  
Markt (Portugal), Lda  
Recta da Granja do Marquês  
ALGUEIRÃO  
2725 MEM MARTINS  
tel: +351 21 922 8530  
fax: +351 21 922 8536  
email: pvgint@zibro.com