

MULTIMEDIA NAVIGATION RECEIVER

USER MANUAL

M-OF7060




MACROM

Safety Precautions

Thank you for purchasing this product. Please read through these operating instructions so you will know how to operate your model properly. After you've finished reading the instructions, keep this manual in a safe place for future reference.

Only connect the unit to a 12-volt power supply with negative grounding.

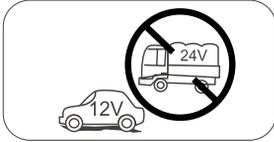

Never install this unit where the operation & condition for safe driving is impaired.




Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident except for using rear view video camera.




Never expose this unit, amplifier, and speakers to moisture or water to prevent electric sparks or fire.



Please don't change the fuse on the power cord without professional guidance, using improper fuse may cause damage to this unit or even cause fire.

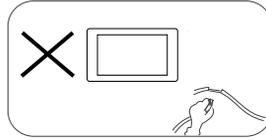

Please contact your nearest dealer if one of the following symptoms is experienced:

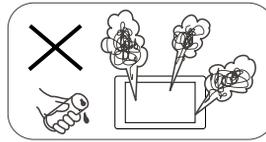


- (a). Water or other objects enters the unit.
- (b). There is smoke.
- (c). Peculiar smell.

To ensure safe driving, please adjust the volume to a safe and comfortable level in case of emergency situations.

Safety Precautions

1. Never disassemble or adjust the unit without any professional guidance.
For details, please consult any professional car shop / dealer for inquiry.
2. If the front panel or TFT monitor is dirty, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in scratching or decoloration to the monitor.
3. If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
4. If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
5. Using the car heater in low temperature environment may result in moisture inside the unit, DO NOT use the unit in this situation. Eject the disc and wipe off the moisture on the disc. If the unit still doesn't work after a few hours, please contact the service center.
6. Do not impact the LCD monitor which could cause damage.
7. To prevent damage to the screen, avoid touching it with sharp objects.
8. To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used.
However, some illustrations are different from the actual images displayed on the screen.
9. Operate the unit correctly according to this manual to prevent unnecessary problem. The guarantee won't be valid if the problem is caused by inappropriate operation.

Expanding System

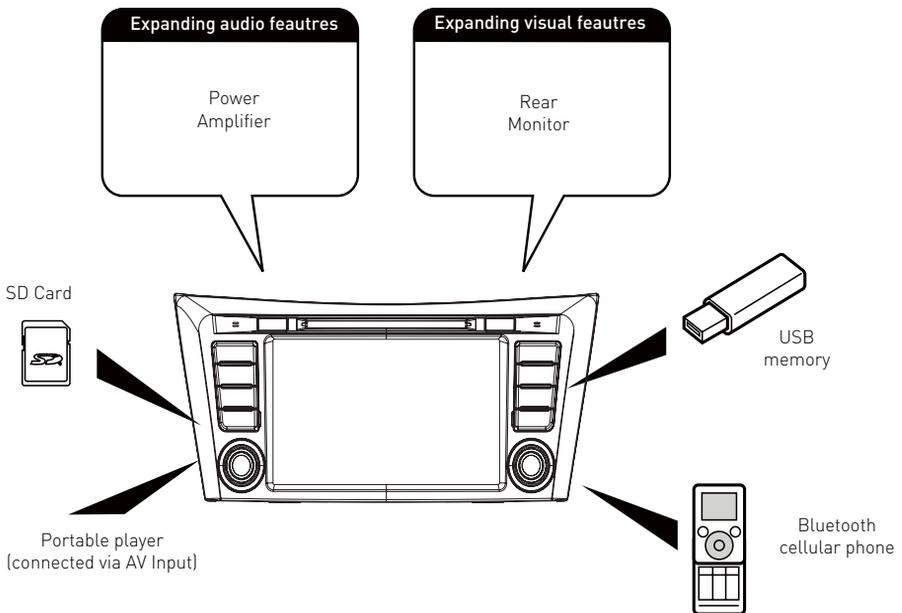

Note:


The items listed outside of the frame are the commercial products generally sold.

Contents

Safety Precautions	1-2	Search for a Folder	14
Contents.....	3	Repeat.....	14
Product overview	4	Repeat A-B	15
Front Panel.....	4	Shuffle (Random) Play.....	15
Remote control overview	5	Select Audio Mode.....	15
Remote battery.....	6	Select Subtitle Language.....	15
Basic Operations	7	Playback Information.....	16
Detect parking brake.....	7	Direct Track Entry	16
Mute.....	7	Rotate Pictures.....	16
Power On / Off	7	Zoom	16
Audible Beep Confirmation.....	7	Video Setup.....	16
Playing Source Selection	7	Bluetooth Mode	17
EQ Menu.....	8	Pair the Bluetooth-enabled Devices.....	17
Select Preset Equalizer.....	8	Disconnect Bluetooth Device.....	17
Adjust EQ Parameters.....	8	Make a Call.....	17
Adjust FAD BAL	8	Receive a Call	18
Setting Super Sound	9	Adjust Bluetooth Settings	18
Setting Date/Time.....	9	Bluetooth Musci Mode	18
Set Date	9	Settings.....	19
Set Clock Mode.....	9	General	19
Set Time.....	9	Calibration	19
Radio Mode.....	10	Video.....	19
Tuner TFT Display	10	Sound.....	20
Select Radio as Playing Source	10	Time	20
Select One Radio Band.....	10	Language.....	20
Tune the radio.....	10	Bluetooth.....	20
Preset Station.....	11	DVD	21
Local Seeking	11	Volume.....	21
RDS Basics	11	Other Modes	22
Adjust RDS Settings	11	Other Devices	22
RDS (Radio Data System).....	12	Reset.....	22
AF Function.....	12	Replace a Fuse	22
EON (Enhanced Other Networks).....	12	Navigation (GPS).....	22
TA Function.....	12	Specifications	23
CT (Clock Time)	12	Region Code	24
PTY Function.....	12	Cautions when using Discs.....	24
Playback Mode	13	Troubleshooting	25
Load a Disc	13	Wire Connections	26
Eject a Disc	13		
Touch Screen Controls	13		
Controlling Playback.....	13		
Connect a USB Device.....	13		
Remove a USB Device.....	13		
Insert a SD/MMC Card	13		
Remove a SD/MMC Card.....	13		
Play/Pause.....	13		
Previous/Next.....	13		

Product overview

Front Panel

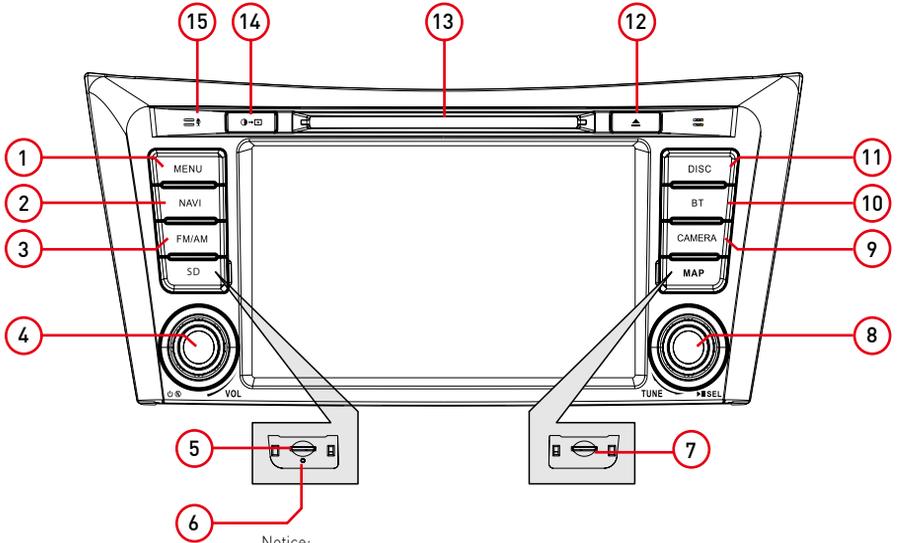


Notice:
The graphic in this manual is for reference only, and may be different from the actual unit.

1. [MENU] button
Press to switch between the available audio/video sources applied to the unit.
2. [Navigation] button
Press to switch to navigation mode.
3. [FM/AM] Button
Press to enter the radio Mode. Press to switch radio band.
4. [VOL/⏸/MUTE] Knob
Press to turn the unit ON. Press and hold to turn the unit OFF.
Rotate to adjust the volume. Press momentarily to activate the MUTE function. Press again to resume normal listening.
5. SD/SDHC card slot: Insert an SD card for playback of music/video/picture files.
6. Reset Button
Press to reset system settings to factory default (except password and parental lock settings).
7. Map Slot: The SD card is used for the Navigation Map only, not for music or other files.
8. [TUNE / SEL/▶▶] knob:
Rotate to select next/previous track or preset station.
Play/pause(press). Enter EQ setting(long press).
9. Button [CAMERA] to display the rear view camera. (Only available with rear camera installed)
10. [BT] Button: Enter the Bluetooth Mode.
11. Press the DISC to access the disc mode
12. [▲] Button: Press to eject a disc.
13. Disc slot
14. [☀️/⏻] Button: Adjust screen brightness (press) Black screen (long press).
15. Microphone: Internal microphone for Bluetooth calls.

Remote control overview

Front view

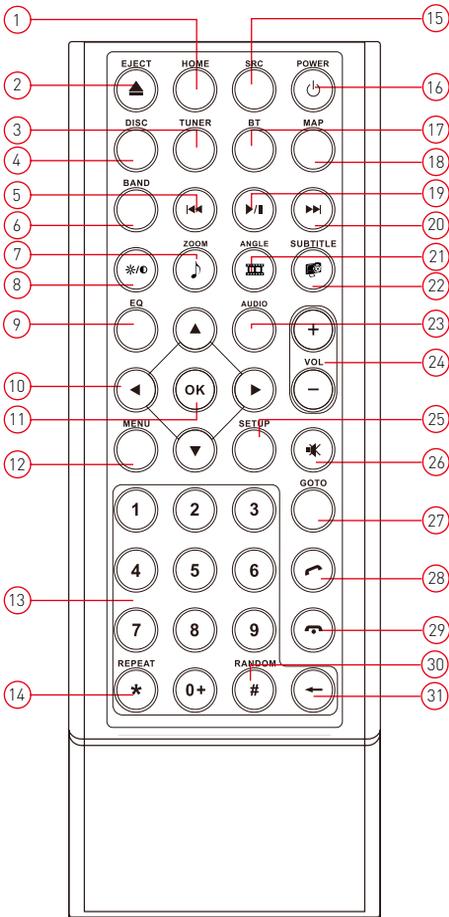

1. Return to the home menu
2. Eject the disc
3. Access to tuner source
4. Access to disc source
5. Search an available radio station by decreasing tuning frequency
4. Access to disc source
5. Search an available radio station by decreasing tuning frequency
6. Select the previous chapter/track for playback
6. Select radio band
7. Zoom in (Picture menu)
7. Access to music list
8. Adjust screen settings
9. Open EQ menu
10. Menu cursor
11. Enter
12. Open route menu (DVD)
12. Turns on/off PBC (VCD)
13. Digit area
14. Repeat playback
15. Change to next source
16. Power on/off
17. Access to Bluetooth source
18. Access to navigation source
19. Pause playback/Start playback
20. Search an available radio station by increasing tuning frequency
20. Select the next chapter/track for playback
21. Playback disc in different angle for a scene (DVD)
21. Rotate (photo playing)
21. Access to video list
22. Language selection for subtitle (DVD)
22. Access to photo list
23. Change the audio language for disc playback (DVD)
24. Increase/Decrease volume
25. Access to settings source
26. Mute on/ off audio output
27. Activate direct access mode
28. Dial/Receive a call
29. Hang up
30. Play all chapter/tracks in random order
31. Press to clear the number one by one
31. Hold to clear all the numbers

Remote battery


Notes of remote control using

- 1) Aim the remote control at the remote sensor on the unit.
- 2) Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
- 3) DO NOT store the remote control under direct sunlight or in high temperature environment, or it may not function properly.
- 4) The battery can work for 6 months under normal condition. If the remote control can't work, please change the battery.
- 5) Use "button shaped" lithium battery "CR2025"(3V) only.
- 6) DO NOT recharge, disassemble, heat or expose the battery in fire.
- 7) Insert the battery in proper direction according to the (+) and (-) poles.
- 8) Store the battery in a place where children cannot reach to avoid the risk of accident

Back view

Uninstall Battery


Slide out the battery compartment tray at the bottom on the back of the remote control.

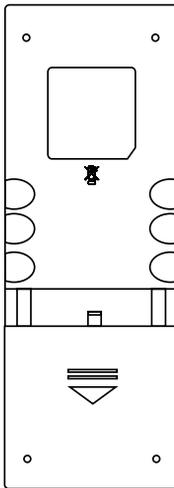

↓ PULL OUT

Install Battery

Use button-shaped lithium battery CR2025 (3V) only. Insert the battery to the battery tray with proper direction according to the (+) and (-) poles.

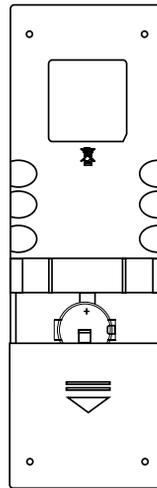

PUSH IN ↑

Basic Operations

Detect parking brake

- Connect the cable "BRAKE" to the parking brake switch to view video files on the TFT monitor. Engage the parking brake for viewing videos.
- When the parking brake is not engaged, the monitor displays "Warning!!!, Video playback is disabled for your safety. Engage parking brake to watch video.", preventing the driver to watch content while driving. The rear screens are not interested in this inhibition.

Mute

Press [VOL/⏸] knob to mute the volume from the unit. Press again to restore the volume. [⏸] is displayed on the LCD. Adjusting the volume or using any of the audio setup features cancels the mute function.

Power On / Off

Press the [VOL/⏻] knob on the unit to turn the unit on. The buttons on the front of the unit light up for a moment and the current mode status appears in the LCD. Press and hold the [VOL/⏻] knob to power off the unit.

Audible Beep Confirmation

An audible beep tone confirms each function selection. The Beep tone can be disabled through the Setup menu.

Playing Source Selection

Press the [MENU] button on the front panel to change between available playing sources. The playing mode is displayed on the screen.

1. 1/2 or 2/2: Touch this page button to view the first or second page of on-screen buttons
2. Function icons
3. Clock
4. Touch for quick access to Equalizer level settings



Basic Operations

EQ Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Select Preset Equalizer

1. Enter the EQ setup mode
Touch the [EQ icon] in the user interface and the EQ setup interface will display on the screen.
2. Select EQ mode
Touch the desired EQ selection: [Optional] / [Classic] / [Rock] / [Jazz] / [Techno] / [Pop], and the EQ mode will change.



Adjust EQ Parameters

To adjust EQ parameters, touch and drag the parameters adjustment bar.

- [User]: Set the desired audio effect.
- [Flat]: Select the original audio effect.
- [Reset]: Cancel the equalizer function settings.
- [Loud: On/Off]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

Adjust FAD BAL

You can adjust front/back/left/right balance of the speaker and the subwoofer volume to get balanced listening effect according to the surroundings and your interest.

1. Enter the EQ setup mode
Touch the [EQ icon] in the user interface and the EQ setup interface will display on the screen.
2. Adjust subwoofer volume
Touch [▲] / [▼] or drag [Sub] to adjust subwoofer volume from -12 to +12.
3. Adjust fader / balance value
Touch [▲] / [▼] / [◀] / [▶] to adjust fader / balance value from -20 to +20.
 - [▲]: Front speaker
 - [▼]: Rear speaker
 - [◀]: Left speaker
 - [▶]: Right speaker



Notes:

1. The parameters of the EQ modes has been preset and you can not change them besides 'User'.
2. The EQ mode will change to 'User' automatically when you adjust the frequency value under the modes besides 'User'.
3. The value of Sub is independent of EQ mode and can be adjusted separately.

Setting Sound effect

1. Touch [S1] in the EQ setting, to turn On or Off "Sound effect function.

The Red [S1] icon to turn the super sound on
The gray [S1] icon to turn the super sound off



Setting Date /Time

1. Touch [Settings].
2. Touch [Time].
The date/time setup menu is displayed.

Set Date

1. Touch [Date].
2. Touch the date information on the screen .
A submenu is displayed.
3. Touch [▲] or [▼] to set year, month and day.



Set Clock Mode

1. Touch [Clock mode].
2. Touch [12Hr] or [24Hr] to switch clock mode.


Set Time

1. Touch [Time].
2. Touch the time on the screen, a submenu is displayed.
3. Touch [▲] or [▼] to set hour and minute.
4. When date/time is set, touch [Save] to confirm or [Cancel] to exit.

Radio Mode

Tuner TFT Display

1. Touch to view the MENU and select a new playback source
2. Strong Local signal broadcasting indicator
3. Stereo broadcasting indicator
4. Current radio band indicator
5. Broadcaster information stored at the preset
6. Touch to view more on-screen buttons
7. Touch to seek backward
8. Touch for quick access to EQ level settings
9. Touch to seek forward
10. Touch to change between AM/FM bands
11. Clock
12. Current preset radio station
13. Current radio information
14. AF: Alternative Frequency indicator
15. TA: Traffic Announcement indicator
16. RDS setting options
17. Save the desired radio station
18. Touch to change between Local and Distance
19. Enter frequency directly
20. Search stations automatically

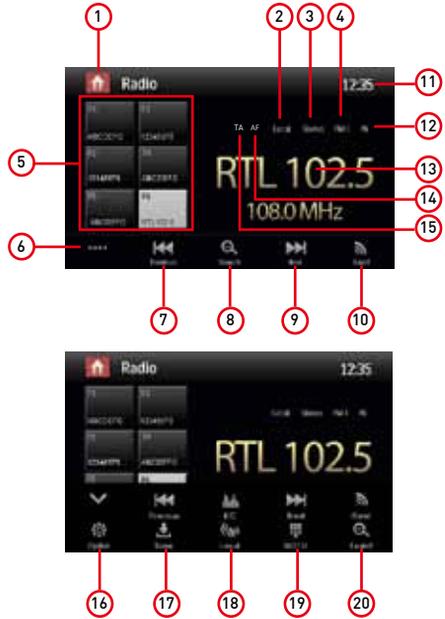

Select Radio as Playing Source

Open the Source Menu and then touch [Radio].

Select One Radio Band

Touch the [Radio] icon on the user interface to select one radio band among FM1, FM2, FM3, AM1 and AM2.

Tune the radio

Auto Tuning

During auto tuning, the frequency will be changed in seek mode.

Touch the [Seek Back] / [Seek Forward] icon on the user interface to tune in a higher / lower station.

Note: When a station is received, searching stops and the station is played.

Manual Tuning

Method 1:

Touch and hold [Seek Back] / [Seek Forward] icon on the user interface more than 1 second to changed in steps higher / lower station. Repeat the operation to change step by step.

Method 2:

1. Touch the numeric keypad icon [Keypad].
Numeric keyboard is displayed, touch number to input frequency.
2. Touch [Delete] to delete the input number step by step.
3. Touch [OK] to enter.



Radio Mode

Preset Station

The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; the unit can store 30 stations in total.

Search Stations Automatically

Touch [🔍] to search station and store 6 strongest stations in current band automatically.

Manual Store

1. Tune to a station.
2. Touch [⬇️].
3. Touch one of the channels P1 to P6 to save the select band.



Tune to a Preset Station

1. Touch [Radio].
2. Select a band (if needed).
3. Touch one of the preset channels (P1 to P6) on the screen.

Local Seeking

Touch the [📶] icon and choose the Radio Local or Distance.

When the [📶] icon turns bright, only stations with a strong signal strength will be detected . Default is "Distance".

RDS Basics

RDS transmits data to the radio which displays information such as name station, song artist, and song title.

RDS service availability varies with areas.

Adjust RDS Settings

1. In Radio menu, touch [⚙️].
The option menu is displayed.
2. Touch on the selected option to change the setting.
[RDS]: To turn on or off "RDS" function.
[CT]: To turn on or off "Clock Time" synchronization function.
[EON]: To turn on or off "EON" function.
[TA]: To turn on or off "TA" function.
[PTY]: To show PTY list.
[VOL]: Touch [🔊] / [🔊] to adjust TA volume.



Radio Mode

RDS (Radio Data System)

The unit provides basic functions of RDS.

RDS service availability varies with areas. Please verify if RDS service is available in your area.

AF Function

Alternative Frequencies Lists are used in conjunction with the PI code (Program Identification code) to assist automatic tuning.

Using this information, the radio can automatically search out another frequency of the same station.

Note:

- During auto switching radio frequency, some interference may be heard..
- Turning off AF function can settle this problem.

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are enhanced.

TA: Traffic information can be received from the current station or stations in other network.

AF: The frequency list of preset RDS stations is updated by EON data. EON enables the radio to make fuller use of RDS information. It constantly updates the AF list of preset stations, including the one that currently tuned into.

TA Function

The TA (Traffic Announcement) function lets the unit receive traffic announcements automatically.

The TA function can be activated by a TP (Traffic Program) station broadcasting traffic information.

When TA is activated and a traffic announcement is received, the current playing source will be overridden by the traffic announcement. The unit returns to the original source after the traffic announcement has been received.

CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

PTY Function

PTY is an abbreviation for the type of program defined by a code to define the program being broadcast (eg news or Rock).

The Options of PTY is displayed on the screen. To see the options PTY, tap the scroll bar and arrows on the screen.

When an option is selected PTY (eg News), the radio unit, the PTY search available. If the PTY requested was not found, the unit returns to the original radio frequency.

Playback Mode

Load a Disc

You can play video, audio or images stored on the following discs:

- DVD Video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

Note: Ensure that the disc contains playable content.


Eject a Disc

Press the [▲] key on the front panel to eject the disc. When the disc is ejected, the unit switches to the previous source.

Touch Screen Controls

The touch key areas for DVD playback are outlined below:

- A: Return to the main menu
- B: Play the video and display playback information
- C: Display onscreen control menu
- D: Time display

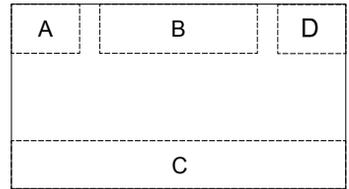

Controlling Playback

To access the on-screen controls, touch the screen except upper left corner, and touch again to cancel display. Touch [••••] to view all function icons.

Connect a USB Device

1. Open the USB door.
2. Insert the small end of the USB cable to mini USB socket, then connect the other end of the cable to your USB device.

Remove a USB Device

1. Select other source on the main menu.
2. Remove the USB device.

Insert a SD/MMC Card

1. Open SD/MMC card cover.
2. Insert the SD/MMC card into the SD/MMC card slot.
Play starts automatically.

Remove a SD/MMC Card

1. Select other source on the main menu.
2. Press the SD card to remove it.

Play/Pause

1. Once a disc, USB or SD/MMC card is inserted, play starts automatically.
For DVD movie, if a menu appears, press [▶] to start play.
2. To pause, touch [⏸].
To resume play, touch [▶].
3. Skip to previous / next track / chapter, press [⏮] / [⏭] key.

Previous/Next

Touch [⏮] / [⏭] key on the screen to skip to previous / next track / chapter.

Playback Mode

Search for a Folder

For Audio Files

1. Touch [🎵] to display all available audio folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Video Files

1. Touch [📺] to display all available video folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Picture Files

1. Touch [🖼️] to display all available picture folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Folder Control

1. Touch [📁] to display all available folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



Repeat

For DVD/VCD movie disc:

1. Touch bottom half of the screen to display menu on the screen.
2. Touch [⋮] to display the 2nd menu.
3. Touch [↺] repeatedly to select:

DVD

[↺] Repeat chapter: Play the current chapter repeatedly.

[↺] Repeat title: Play all chapters in the title repeatedly.

[↺] Repeat off: Play all in the all repeatedly.

[↺] Repeat off: Cancel repeat play.

VCD

[↺] Repeat single: Play the current single repeatedly.

[↺] Repeat all: Play all in the all repeatedly.

[↺] Repeat off: cancel repeat play.



Playback Mode

For CD/MP3 files:

1. Touch anywhere except the upper left corner to display menu on the screen.
2. Touch  repeatedly:
 -  Repeat single: Play the current single repeatedly.
 -  Repeat all: Play all in the all repeatedly.
 -  Repeat off: Cancel repeat play.

Repeat A-B

You can repeat a specific of video file (from A to B).

1. Touch the screen to display control menu, if necessary.
2. Touch  to display the 2nd menu.
3. Touch  repeatedly to mark:
 - Repeat A-: the start of the section to repeat.
 - Repeat A-B: the end of the section to repeat.The selected section plays repeatedly.
4. To exit A-B repeat mode, touch A-B repeatedly,  is displayed.

Shuffle (Random) Play

You can play audio tracks/files in random order.

1. Touch the screen to display control menu, if necessary.
2. Touch  to display the 2nd menu, if necessary.
3. Touch  on the screen repeatedly to turn random play on or off.

Select Audio Mode

When you play VCDs, you can select an audio mode (R/L/Stereo).

1. During play, touch bottom half of the screen to display menu on the screen, if necessary.
2. Touch  to display the 2nd menu.
 - Touch  repeatedly until the audio mode is selected.

Select Subtitle Language

For DVD or Divx discs that contain two or more subtitle languages.

1. During play, touch the screen to display menu on the screen, if necessary.
2. Touch  to display the 2nd menu.
3. Touch  repeatedly to select a language.
 - The selected language is displayed.

 
Playback Mode

Playback Information

Touch the screen when playing back DVD and VCD discs and the playback information will be displayed on the top area of the TFT.


For DVD

1. Disc type.
2. DVD Title information. "01/08" indicates that this DVD has 8 titles and the title playing back now is the first title.
3. DVD Chapter information. "005/012" indicates that current title has 12 chapters and the chapter playing back now is the fifth chapter.



For VCD

 1. Disc type.
2. VCD Track information. "01/08" indicates that this VCD has 8 tracks and the track playing back now is the first track.



Elapsed Time

1. Elapsed time of the current track.
2. Total time of the current track.



Direct Track Entry

To select a track directly, touch the [] icon on screen control to display the direct entry menu. Enter the desired track using the on-screen number pad. Press [OK] to the selected track.



Rotate Pictures

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] repeatedly to rotate the picture.

Zoom

You can zoom in pictures for a close view.

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] repeatedly to zoom in the picture.

Video Setup

Touch [] to access video setup mode, touch [] or [] to set the desired effect.

You may set the brightness, contrast, saturation, and hue of the video output from 1 to 20.



Bluetooth Mode

You can make or receive phone calls with Bluetooth-enabled phones through the unit. You can also listen to music from a Bluetooth-enabled device.

Pair the Bluetooth-enabled Devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once. You can pair up to five devices.

1. Turn on the Bluetooth function on the device.
2. Touch [] to search for Bluetooth device with the unit.
3. Start scanning on the Bluetooth device and select the unit "M-OF7060"
4. Enter default password "0000".



Tip:

- The operational range between this unit and a Bluetooth device is approximately 5 meters .
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth device is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.

Disconnect Bluetooth Device

To disconnect one device, touch [] .

Tip

- The device will also be disconnected when the device is moved beyond the operational range.
- If you want to reconnect the device to the unit, place it within the operational range.
- If you do not want to reconnect the device to the unit automatically, touch [], then set [Auto connect] to [Off]. For details, see the "Adjust Bluetooth Settings" section.

Make a Call

1. Select Bluetooth function in the home menu.
2. Pair the phone with the unit.
3. Search for phone number from the following list:
[Phone Book]
[Call Log]
[Missed calls]
[Received calls]
[Dialed calls]



Or touch the number pad directly, then touch [] to dial.



Bluetooth Mode

Receive a Call

By default, all incoming calls are received automatically.

1. If there is an incoming call, the screen will appear "Incoming".
2. You may touch the screen to select [hang up] or [Answer].



Tip

- You can select to receive calls manually by set [Auto answer] to [Off] status.

Adjust Bluetooth Settings

1. In Bluetooth menu, touch [⚙️].
The option menu is displayed.
2. Touch on the selected option to change the setting.
 - [Bluetooth]: To turn on or off "Bluetooth" function.
 - [Auto connect]: To turn on or off "Auto connect" function.
 - [Auto answer]: To turn on or off "Auto answer" function.
 - [Pairing code]: To set pairing code.
 - [Phone book sync]: To synchronize phone book, touch [OK] on the sub-menu popped out.
Phonebook sync may take several minutes to load on initial setup.



Tip

- You can also adjust Bluetooth settings in the "Settings" menu.

Bluetooth Music Mode

A2DP

A2DP is short for Advanced Audio Distribution Profile. The mobile phones supporting this function can transmit stereo audio, whereas the ones not supporting this function can transmit mono audio only.

AVRCP

AVRCP is short for Audio/Video Remote Control Profile. The mobile phones supporting this function can control the playback of a Bluetooth audio player.



In the mode of the music player working, if you want to make a phone call, you can press the number keys on the mobile phone. At the same time the music player will stop. The TFT screen will display "Calling", after the call received, the voice will be transferred to the unit. When the call ends, the screen will display music playing menu.

If there is an incoming phone call, the music player will stop, and the screen will display "Incoming". When the call ends, the screen will display music playing menu.

Settings

General Settings


1. Touch [General] in the settings page.
2. Touch to highlight a setting.
3. Touch on the option to display/select an option.
4. Touch [] or press the Menu button on the front panel to exit.

General settings	Options	Description
Radio region	USA	Select one that matches your location.
	China	
	Japan	
	Europe	
	Europe (LW)	
	OIRT	
Radio range	Local	
	Distance	
Blackout	Off/10s/20s	
Dimmer mode	Low/Medium/Normal/High	Adjust the display brightness.
Beep	On	Turn on the beep sound. Each time you press a button, the unit beeps.
	Off	Turn off the beep sound.
Calibration	Start	Calibrate the touch screen.

Calibration

When the touch operation is not sensitive or valid, you should calibrate the touch screen through calibration setting function. Adjust the response positions of the touch panel as followings:

1. Press the [Calibration] option on the setup menu to enter.
2. Touch [Start] to enter.
3. Aim at center of [+], follow the path as shown of the figure, after steps from 1 to 5, touch anywhere on the screen to save and exit from calibration. Or wait for 30 seconds to exit without making changes.

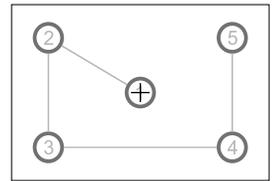

Video Settings

1. Touch [Video].
2. Touch an option repeatedly to select:
3. Touch [] or press the Menu button on the front panel to exit.

Video settings	Options	Description
Detect parking brake	On/Off	Disable or Enable video.
Rear Camera view	On/Off	When you drive in reverse, the rear view displayed or not.

Tips:

- When detect parking brake is set to "On", the screen will display [Warning!!! " Video playback is disabled for your safety. Engage parking brake to watch video] The above warning screen will prevent the driver watching images.
- The vision of the rear view camera is available only if the rear camera is installed.

Settings

Sound settings

1. Touch [Sound].
2. Touch an option repeatedly to select:
3. Touch [] or press the Menu button on the front panel to exit.

Sound settings	Options	Description
Subwoofer	On	Turn on the subwoofer.
	Off	Turn off the subwoofer
Subwoofer filter	80Hz	Select subwoofer filter criteria.
	120Hz	
	160Hz	

Time settings

1. Touch [Time].
2. Touch an option repeatedly to select:
3. Touch [] or press the Menu button on the front panel to exit.

Time settings	Options	Description
Date	Y/M/D	Touch [] or [] to set year, month and day.
Clock	12Hr/24Hr	Touch [12Hr] or [24Hr] to switch clock mode.
Time	H/M/AM/PM	Touch [] or [] to set hour and minute. Touch [] or [] to set AM/PM (only for 12Hr).

Language settings

1. Touch [Language].
2. Touch an option repeatedly to select.
3. Touch [] or press the Menu button on the front panel to exit.

Language settings	Description
OSD	Select on-screen display language.
DVD audio	Select DVD audio language. Options available depend on DVD disc.
DVD subtitle	Select DVD subtitle language. Options available depend on DVD disc.
Disc menu	Select DVD menu language. Options available depend on DVD disc.

Bluetooth settings

1. Touch [Bluetooth].
2. Touch an option repeatedly to select.
3. Touch [] or press the Menu button on the front panel to exit.

Bluetooth settings	Options	Description/Note
Bluetooth	On	Turn on the Bluetooth function.
	Off	Turn off the Bluetooth function.
Auto connect	On	If the pre-paired device is within the effective range, the unit re-connects to pre-paired device automatically.
	Off	Need to re-connect manually.
Auto answer	On	Answer paired phone call automatically.
	Off	Answer phone call manually.
Pairing code		Set the password for pairing the unit with other Bluetooth device.
Microphone setting	Internal or External	Before setting, make sure that the external microphone is installed.

Settings

DVD settings

1. Touch [DVD].
2. Touch an option repeatedly to select.
3. Touch [] or press the Menu button on the front panel to exit.

DVD settings	Options	Description
Set password		Set password to restrict the play of discs. The default password is 0000.
Rating level	Kid safe	Acceptable for children.
	G	Acceptable for general viewers.
	PG	Parental guidance suggested.
	PG-13	Unsuitable for children under age 13.
	PG-R	Recommend parents to restrict children under 17 to view.
	R	Restricted recommend parents to guide children under 17 to view.
	NC-17	Unsuitable for children under age 17.
	Adult	Acceptable for adults only.
DRC	On/Off	Dynamic range compression on or off.
Load factory		Restore to default settings.

Volume settings

You can set different volume for different modes.

1. Touch [Volume].
2. Touch on a source.
[DVD] [AV-IN]
[SDHC] [Aux]
[Radio] [Navigation]
[Bluetooth] [USB]
3. Touch [] or [] to assign value: -6 to 6.
When switching to the source, the volume increases or decreases automatically.
4. Touch [] or press the Menu button on the front panel to exit.

Other Modes

Other Devices

You can connect an external audio/video device to the unit.

1. Connect the external device with the supplied AV cable.
2. Touch the upper left corner to display the main menu.
3. Touch [AV-IN] for auxiliary audio video input input.


Reset

When the unit hangs up, you can reset it.

Press [RESET] with a ball-point pen or similar tool.

Tip:

When the unit has been reset, all the settings will return to default settings.

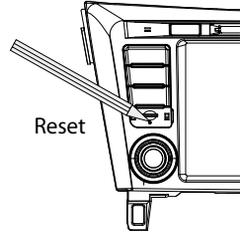

Replace a Fuse

If there is no power, the fuse may be damaged and need to be replaced.

1. Take out the unit from dashbord.
2. Check all electrical connections.
3. Buy a fuse that matches the amperage of the damaged fuse.
4. Replace the fuse while the units power is disconnected.

Navigation (GPS)

1. Touch the upper left corner to display home menu.
2. Touch [Navigation], to start the navigation software.
3. For instructions on using of navigator, refer to the manufacturer's user manual.

Nota:

While Navigation is running, you can view the previously selected source by holding the [MENU] button. Press again and hold the [MENU] button to return to the navigation mode.

Where it was used the Bluetooth function you can display the navigation following the procedure described above.

Specifications

General

Reference Supply Voltage	12V(DC)
Operating Voltage Range	10.5 - 15.8V(DC)
Max Operating Current.....	15A
Grounding System	Car Battery Negative Pole
Dimensions(WXHxD)	338x173x179mm
Weight(main unit)	2.3kg

FM

Signal Noise Ratio	≥55dB
Residual Noise Sensitivity (S/N=30dB)	18dB μ V
Frequency Response (\pm 3dB)	20Hz~12.5KHz
Station Seeking Level.....	20~28dB μ V
Distortion	≤1.0%
Stereo Separation (1KHz).....	≥25dB
Antenna Impedance.....	75 Ω

AM

Residual Noise Sensitivity (S/N=20dB)	30dB μ V
Selectivity (\pm 9KHz)	≥50dB

LCD

Screen size.....	8 inches(16:9)
Display resolution.....	800X480dots

DVD Player

Signal / Noise Ratio	80dB
Dynamic Range.....	80dB

Output Power

Maximum Output Power	4x45W
Load Impedance	4 Ω
Distortion (line out).....	≤0.1%
Frequency Response (\pm 3dB)	20Hz~20KHz

AUX IN

Distortion	≤0.5%
Frequency Response (\pm 3dB)	20Hz~20KHz
Audio Input Level	0.5 Vrms

Audio

Audio Output Impedance.....	100 Ω
Audio Output Level	2 Vrms

Video

Normal Video Input Level (CVBS)	1.0 \pm 0.2V
Video Input Impedance.....	75 Ω
Video Output Impedance	75 Ω
Video Output Level.....	1.0 \pm 0.2V

Environment

Operating Temperature.....	-10°C ~ +60°C
Storing Temperature	-20°C ~ +70°C
Operating Humidity.....	45%~80%RH
Storing Humidity.....	30%~90%RH

Notice:

When the unit is operated to extremes, such as with maximum power output for a long time, or the temperature is over 70°C, it will enter heat protection mode, the volume will be reduced automatically. This is normal.

Specifications

Supported Formats:

- USB or memory file format: FAT16,FAT32
- Mp3 bit rate(date rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8(maximum length:128 bytes)

Unsupported Formates:

- Empty albums:an empty album is an album that does not contain MP3 files,and is not be shown in the display.
- Unsupported file formats are skipped.For example,Word documents(.doc) or Mp3 files with extension.dlf are ignored and not played.
- AAC,WMV,PCM audio files

Supported MP3 Disc Format:

- ISO9660,Joliet
- Maximum title number: 512(depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32kHz,44.1kHz,48kHz
- Supported Bit-rates: 32-320Kbps and variable bit rate

Supported Video Formats:

- DVD
- AVI extension with video codec: MP4 or Xvid

Region Code

According to DVD sale region, the whole world is divided into six regions. A DVD disc can be played back only when its region code is compatible with that of the player in use.

Region 1: USA, Canada, East Pacific Ocean Islands;

Region 2: Japan, West Europe, North Europe, Egypt, South Africa, Middle East;

Region 3: Taiwan of China, Hong Kong of China, South Korea, Thailand, Indonesia, South East Asia;

Region 4: Australia, New Zealand, Mid & south America, South Pacific Ocean Islands/Oceania;

Region 5: Russia, Mongolia, India, Middle Asia, East Europe, North Korea, North Africa, North West Asia;

Region 6: Chinese Mainland.

Cautions when using Discs

1) DO NOT use irregular shaped disc.

2) Disc Cleaning

Use a dry, soft cloth to wipe the disc from center to edge, only neutral detergent can be used.

3) When playing a new disc


New disc may have some rough spots around the inner and outer edges. If such a disc is used, remove these rough spots with a pencil or ball-point pen, etc.

Troubleshooting

What appears to be trouble is not always serious. Please check the following points before calling a service center.

Problem	Cause	Corrective action
General		
Unit can not power on	Unit fuse blown.	Install new fuse with correct rating.
	Car battery fuse blown.	Install new fuse with correct rating.
	Illegal operation	Reset the unit.
No/low audio output	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion	Pirated disc is in use.	Use original disc.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off	Incorrect connection between ACC and BATT.	Check wiring and correct.
TFT monitor		
Warning information is shown at all times	Parking break wiring is not correct.	Check wiring and correct.
Flashing image or interference appears on screen	The color system of DVD disc does not match the monitor.	Adjust the color system of the DVD disc playing back or the monitor in use.
	Pirated disc is in use.	Use original disc.
	Video cable damaged.	Replace cables.
	Improper video signal connections.	Check wiring and correct.
Disc playback		
Cannot insert disc	A disc is already inside the unit.	Eject current disc and insert new one.
Disc does not play back	Disc is warped or scratched.	Use disc in good condition.
	Disc is dirty or wet.	Clean disc with soft cloth.
	Incompatible disc is used.	Use compatible disc.
	Disc is inserted upside down.	Insert disc with label side up.
	Disc region code is not compatible with unit.	Use disc with proper region code.
PBC cannot be used during VCD playback	PBC is not available on the disc.	Use disc with PBC available.
Repeat or search function is invalid during VCD playback	PBC is on.	Turn PBC off.

Wire Connections

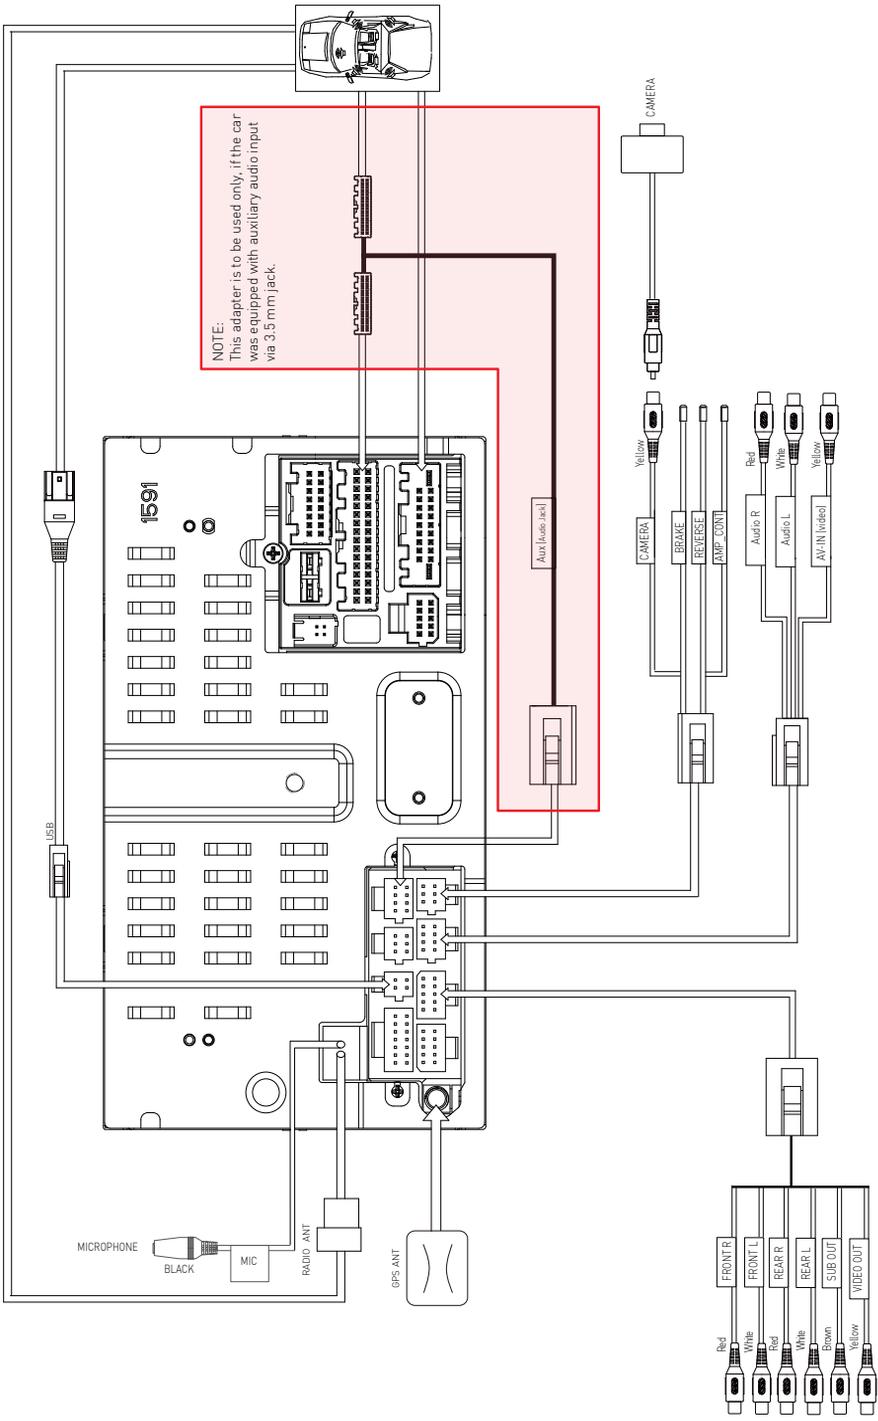

The BLUETOOTH ® world mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ALDINET S.p.A. is under license.

The MACROM brand is a registered trade mark of MALDINET S.p.A.



Declaration of Conformity



MACROM

ALDINET S.p.A

Viale C. Colombo, 8 - 20090 Trezzano s/N (MI) - Italy

Tel. +39 02 484781

w w w . m a c r o m . i t