





CATUION: Do not expose the batteries or the remote control with batteries installed to excessive heat(direct sunlight, fire, etc.).



ம	Power ON/Standby		
OK ▶\II	Start or stop playback To confirm selection		
▲▼ Moves	▲▼ ₩ ₩ Moves the highlight to select a displayed item.		
не н	(previous / next) Skips to the previous/next chapter, track, or file.		
☆	Display the home menu		
MENU	Enter the browser menu		
り	Back to previous screen		
ZOOM	Zoom in on an image		
i	Display the media information		
4	Open the Setup Menu		
н	Fast / Slow / Freeze frame		
4.4	Volume +/-		
DEL	Deleted		
4	Music shuffle		
remote control.			

AirBox connect to broadband AP/Router Wirelessly

PC or smart phone connect to AP/Router Wirelessly

AirBox connect to broadband AP/Router Wired

PC or smart phone connect to AirBOX Wirelessly

Once the Wireless is successfully set up, Press 🏠 Navigate to the Home, the Wireless Show "AP

NAS device or shared computer located on the same network as your media player.

Please select a media source

USB DISK (/mnt/usb81)

— 04 **—**









 Press ▲/▼ to select "Setting"-->"Networks Controls", Select "Wi-Fi Connect your AP", then press of to Enable.

Thank you for purchasing this Wireless HDTV Media Player. Please read the following instructions

• Prevent friction with hard objects, or it may lead to surface abrasion, components fall off or

· When the product is operating, the surface temperature will increase slightly. This is normal.

At the end of its serviceable life, this product should not be treated as household

or general waste. It should be handed over to the applicable collection point for

The picture above depicts a sample household media player use environment. To setup the

and power it on. Then it could be Access media anywhere on your home network, See your

device, simple plug it into the network or connect the wireless network under the same router

Once these steps have been completed the media player is ready to use, Wait a few seconds for your TV to detect the media player. If it is not detected, you may need to change the input source on your TV to HDMI. Check the user documentation of your TV for more information. Once the media player is detected, the splash screen displays to indicate system bootup, then

• Do not use the product in the extreme hot, cold, dusty or humid environments.

• Do not wipe the surface of the product with alcohol, benzene or thinners.

the recycling of electrical and electronic equipment.

or returned to the supplier for disposal.

 Avoid the product falling down from a high place, or it may damage the hardware. • The product is not water proofed so please do not get any liquid into the unit.

carefully for your safety and prevention of property damage.

• Do not dismantle, assemble or alter the product arbitrarily.

WEEE Directive & Product Disposal

Hardware Installation

To connect the Media player:

1.Connect the Media player to your HDTV.

the home screen of the user interface opens.

2. Connect the Media player to a router or network switch.

Note: Make sure your wire or wireless network is working properly.

3. Plug the Media player power cable to a power source.

personal media and Internet content on your HDTV

hardware damage

— 01 —

- Use the navigation ▲/▼ buttons to select "Wi-Fi settings" then select your AP/Route press or
- Use the navigation buttons ▲▼ ₩ ₩ to key in password for the access point, select Connect,

Once the network is successfully set up, Press & Navigate to the Home, the Wireless Show "Connected to: your SSID"



— 09 —

Important: A broadband Internet connection is required to use Internet services. Availability varies by country. These services may be changed, terminated or interrupted at any time. After connecting to a network, you can use the media

After connecting to a network, you can use the media player to access media content from the following Internet services:

The above services are fully integrated with their web-based counterparts when accessed via the media player. If you are a registered user of any of these services, everything you create, rate, or bookmark when using the media player shows up on your account the next time you sign in to that service from your computer or mobile computing device.

1. Navigate to the Home | Application menu bar and press 🔐 2. The list of Internet services display in alphabetical order. Press 🕪 to make a selection, then press ok



The Player is a connected to your TV HDMI input that turn your TV to a multifunction smart TV with Wi-Fi build in, TV is smart from now on

The Player is using ARM CPU, based on android operating system, supporting wire and wireless networking access, USB external hard disk, and single hand keyboard, mouse as well as easy like a normal remote control.

See your personal media and Internet content on your HDTV, Play YouTube™ videos, access

Features

• Powered by Android OS

Facebook® and other online content

- · Wired or wireless Internet connection for access to online media content.
- See your personal media and Internet content on your HDTV
- Access media anywhere on your home network
- HDMI video output, connect to HDTV for 1080P video playback
- DLNA standards for Digital Living Network Alliance
- Smart phone, Pad, PC, Notebook (with DLNA Software) to your HDTV • Support a wide variety of the most popular file formats.
- USB interface, support USB Storage, mouse and keyboard operation
- Support simple IR remote control function
- Support music player, picture player and more family entertainment

Package Contents

- HDTV Media Player AC adapter
- · Compact remote control
- HDMI Cable

Using the Remote Control

— 02 —

wifi

- · Quick Install Guide

Operating the Media Player

The media player remote control lets you navigate the Home screen, browse for media files, $enable\ playback\ options,\ and\ customize\ the\ system\ settings.\ The\ infrared\ sensor\ detects\ infrared$ signals from the remote.

<u>(i)</u>.....

Important: Make sure there are no obstructions between the remote control and the infrared sensor on the media player

Using a USB Keyboard / Mouse As an alternative to using the remote control, you can plug a USB keyboard or Mouse into either

of the two USB ports on the media player.

Using the Media Player Menu

— 06 **—**

Ethernet Network (Wired) Setup

Ethernet Configuration:

Playing from a USB Device

— 10 —

DHCP is the recommended selection

Press A Navigate to the Home menu bar.

The Home screen menu is displayed when you press 🏫 on the remote control. The icons on this screen let you browse your media library and configure the media player's settings.



1. Plug an Ethernet cable into the Ethernet connector on the media player.

Select your wired LAN Setup type form DHCP, Static IP or PPPOE

You can play video/music/photo files on the connected USB device

1. Connect the USB device to the USB jack on the right of the player.

2. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network

4. Press ▲/▼ to select "Setting"-->"Networks Controls", Select "Ethernet", then press ﷺ to Enable ..._____

2. Navigate to the Home screen, and select the Media Player icon for media content you wish to

— 03 **–**

wifi

USB Po

Product Overview

IR Sensor

Media Player: The Media Player icons represent folders for the different media types. Media contents will be displayed either as file/file folders in a USB drive directory or as a media library compilation list based on metadata information. For example, music files can be categorized based on their genre or the artist's name.

Application: When there is a network connection, Application provides links to a variety of Internet services are also displayed.

LED Indicator

Settings: Settings lets you customize the way you use the media player and set preferences for media playback For more information, see "Settings and Advanced



HDMI OUT

wifi

wifi

wifi

DC 5V IN

Setting	Description
Menu Language	Multi-Language supported
	Wireless or Wire Networking setting
Networks controls	Wireless default Mode "WiFi Soft AP",
	Default SSID is AirBox without password
Display	Video Out/Brigheness/Contrast/Over scan adjust
Sountd	Audio digital output
Storage	USB Storage and Internal storage information
Firmware upagrad	Update Firmware from USB Storage
Privacy	Factory data reset
DLNA	Change DMR Name (Default "HDTV AirBox")
About	System information

3. Press ▲/▼ to select ∠ , then press OK.



4. You can play media on your TV using the media player.



Use Play To in Windows Media Player

— 15 —

Windows Media Player makes it easy to manage your media, find items that you want to play, and open Play To. To select items that you want to play, follow these steps:

1. Click the Start button 💿 , click All Programs, and then click Windows Media Player. If the Player is currently open and you' re in Now Playing mode, click the Switch to Library button prin the upper-right corner of the Player.

- 2. If the list pane is closed or if the Burn or Sync tabs are exposed, click the Play tab.
- 3. Find the items that you want to play in the Player Library, and then drag those items from the details pane into the list pane
- 4. Click the Play to button **a** at the top of the list pane, click the device on your network that
- 5. In the Play To dialog box, use the playback controls to play, pause, or stop the media stream, and to change to the next or previous item in the list.

For more information about the Play tab, the list pane, and playback controls, see :

http://windows.microsoft.com/en-US/windows7/using-the-play-to-feature-to-stream-media http://windows.microsoft.com/zh-CN/windows7/using-the-play-to-feature-to-stream-media

Play from Internet Media



Play on a Home Network (DLNA)

access. It can be Video , Music , or Photo

To control the player using another DLNA compatible product via a network.

When you play files from a DLNA Server on the player, you can use a DLNA Controller compatible product (PC, Notebook, Smartphone, PAD, etc.) to control playback.



2. Install DLNA Software on a DLNA compatible product

update to Windows Media Player 11.0

	Windows Phone:	to Windows Phone Market search the DLNA Player	
	Andriod OS:	to Google Android Market install the iMediaShare	
	iOS:	to App Store Install iMediaShare	
Connect the other necessary DLNA compatible products.			

 
Refer to the instruction manual supplied with the product.

— 14 —

















Put the batteries into th








 

  











SSID: your SSID Note. : The password will change automatically when you change setting contents, but you can find it from above screen

— 08 **—**

Playing from Network Services Accessing Media Content from the Network Once the media player has an active network connection, you can access media content from a

To access media content from a network share or media server: 1 . Navigate to the Home screen, and select the Media Player icon for media content you wish to access. It can be Video ,Music , or Photo 2. Press ▲/▼ to select "Network Shares" or "Media Servers", then press

3. Press the navigation buttons to select the network resource where the media content you wish to access is located, then press 4. Type in your user name and password to access the network resource. For further information

5. Press to select $\frac{o\kappa}{|\kappa|}$, then press ENTER. Supported content for the selected media type 6. Select the content you wish to access, then press ENTER to start media playback

— 12 —

regarding password setup, refer to your NAS device documentation.





— 13**—**