



Spac Automazione **2013**

User Manual



September 2012

Tutti i diritti riservati. Tutti i prodotti SDProget sono marchi registrati.

Altri marchi o nomi di prodotto citati nel testo sono marchi registrati o marchi commerciali delle rispettive case.

SDProget Industrial Software

Via delle Industrie, 8

10040 ALMESE (TO), ITALIA

Tel. +39, 011, 9346666

Fax +39, 011, 9351193

Internet E-mail :

sdproget@sdproget.it

Internet WEB pages :

<http://www.sdproget.it>

Summary

SUMMARY	1
1 INSTALLATION.....	13
1.1 HARDWARE AND SOFTWARE REQUIREMENTS	13
1.2 INSTALLATION	14
<i>Setup</i>	15
<i>HASP</i>	17
<i>Smartkey</i>	18
Stand-alone hardlock	18
Network hardlock	18
<i>Data migration and customization utility</i>	21
File Migration	21
Library Migration	22
Dictionary Migration.....	22
<i>Installation changes</i>	23
<i>Restore installation</i>	23
<i>Uninstall</i>	23
1.3 NEW IN THE RELEASE 2013	24
2 BASICS	25
2.1 WORKING	25
2.2 START WORKING.....	26
2.3 THE JOB ORDER	28
2.4 THE MULTISHEET	29
<i>The sheet</i>	29
2.5 JOB ORDER MANAGEMENT	30
<i>Selecting the Job Order</i>	30
New Job Order	31
Open Job Order.....	32
New Multisheet	33
Open Multisheet	34
Job order Path.....	35
Update Master Title Block	35
<i>Table of Job Orders</i>	36
Table	36
File.....	36
Find functions	37
<i>Customer management</i>	38
Fields	39
<i>Start settings</i>	40
<i>Job Order copy</i>	40
<i>Job Order sharing</i>	41
<i>Job Order files</i>	42
3 SHEET MANAGEMENT	43

3.1 CREATE MULTISHEET	43
<i>Sheets processing</i>	46
<i>Sheet title</i>	48
<i>Summary</i>	48
3.2 CHANGE SHEET	49
3.3 NEXT SHEET	50
3.4 PREVIOUS SHEET	50
3.5 LAST SHEET	50
3.6 DELETE SHEET	51
3.7 SHIFT SHEET	52
<i>Forwards</i>	52
<i>Backwards</i>	53
<i>Checking</i>	53
3.8 STORE SHEET	54
<i>Lista.dat file</i>	55
<i>Sheet classification</i>	55
3.9 INSERT STORED SHEETS	56
Save Association	57
Open Associations	57
3.10 EXPLODE (BOOM)	57
3.11 SPLIT MULTISHEET	58
<i>Unsplit</i>	59
3.12 COPY BETWEEN SHEETS	60
3.13 MOVE BETWEEN SHEETS	61
3.14 CLEAR SHEET	61
3.15 NUMBER SHEETS	62
3.16 PRINT SHEETS	63
<i>Print page setup</i>	64
Plot area	64
Grouping	65
Assign Pens	65
3.17 SHEET REVIEW	66
<i>Management</i>	66
<i>Delete Revisions</i>	67
<i>Revision Symbol</i>	68
<i>Revision Legend</i>	69
Table	69
Drawing	70
Sheet sequence	70
Revision sequence	70
3.18 SHEET UTILITIES	71
<i>Sheet title</i>	71
<i>Sheet legend</i>	72
Table	73
File	73
Drawing	74
<i>Location Symbol</i>	75
<i>Master title blocks</i>	76
<i>Sheet slides</i>	76
4 GENERAL COMMANDS	77
4.1 SETUP	77
4.2 SETTINGS	78
<i>Export Settings</i>	79
New Original Cfg	79
Change Original Cfg	79
<i>Import Settings</i>	80

<i>Sheet Dimensioning</i>	81
<i>Cross Reference</i>	82
Save Pin.....	83
<i>Symbol Configuration</i>	84
Pin association	86
Prefix archive	86
New prefix archive	87
Materials association	87
<i>Symbol referencing</i>	88
Incremental identification	88
Sheet – Prefix in Absolute incremental identification	89
Sheet – Prefix in Relative incremental identification.....	89
Prefix – Sheet in Absolute incremental identification	89
Prefix – Sheet in Relative incremental identification.....	89
Positional identification	90
Free referencing.....	90
Panel Prefix	91
Absolute Prefix.....	91
Incremental Format	91
<i>Returns</i>	92
Automatic Positioning.....	92
Power returns	92
Connection returns	93
Insert Start + Destination.....	93
<i>Preferences</i>	94
Insert blocks with fence	94
Snap-to-segment block insertion	94
Number wires after inserting symbol	95
File preview.....	95
Program test	95
Intelligent delete.....	95
Selection Preview.....	96
Functions near contacts.....	97
Dialogue windows state.....	97
Location Manager	98
Same component references	99
<i>Symbol attribute features</i>	100
<i>Wire and Terminal numbers</i>	101
Positional numbering.....	101
Wire properties.....	102
Terminal properties	102
Color management	102
Options	103
Advanced options	104
Wires Labels.....	106
<i>Automatic numbering</i>	108
<i>Terminal box</i>	108
<i>Cable database</i>	109
New cable	110
Duplicate Cable	111
Set Default	111
Color codes	112
Import \ Export Cables.....	112
<i>Terminal and Connectors Database</i>	113
Terminals Archive	114
Connectors Archive	116
Poles Management	118
Accessories Archive.....	119
Wires' Terminals Archive	120
<i>Loop Diagram</i>	121

Terminal block.....	122
Sheet title legend.....	124
Revision legend.....	124
Function legend.....	125
Symbol legend.....	125
Cross-reference legend.....	126
Legend Bit I-O Plc.....	126
4.3 PANEL SETTING.....	127
Location setting.....	128
Table.....	129
4.4 POWER FEEDS.....	130
Power returns.....	132
4.5 CONNECTIONS.....	133
Connection returns.....	135
Quick Wire.....	136
4.6 DRAWING UTILITIES.....	137
Connection.....	137
Automatic Connection.....	137
Shield.....	138
Multisheet Scan.....	138
Updating Lists and Tables.....	139
4.7 COMPONENT REFERENCES.....	142
Reference duplicated Parents.....	143
Use current Prefix Archive.....	143
Automatic (1).....	144
Manual (2).....	144
Incremental referencing.....	145
Absolute incremental Sheet - Prefix referencing.....	145
Relative incremental Sheet - Prefix referencing.....	146
Absolute incremental Prefix - Sheet referencing.....	146
Relative incremental Prefix - Sheet referencing.....	147
Positional referencing.....	147
5 WIRE NUMBERING.....	149
5.1 NUMBER WIRES.....	149
Numbering.....	149
Renumbering.....	151
Number wires connected to terminals.....	152
Numbering wires connected to returns.....	152
5.2 AUTOMATIC WIRE NUMBERING.....	153
Numbering.....	154
Wires already numbered.....	155
Positional numbering.....	156
5.3 USED NUMBERS LIST.....	157
File.....	157
5.4 INTERNAL PANEL WIRING.....	158
Checks.....	159
Table.....	160
File.....	160
5.5 NUMBER SUMMARY.....	161
5.6 DELETE NUMBERS.....	161
5.7 DDATEF.....	162
Ddattef Wires.....	162
Ddattef Power feeds.....	163
Ddattef Terminals.....	164
5.8 COPY WIRE NO.....	165

5.9 LOOP DIAGRAM	166
<i>Configuration</i>	168
5.10 DATA INDICATIONS	169
6 TERMINALS AND CONNECTORS	171
6.1 INSERT TERMINALS.....	171
<i>Terminal Box</i>	173
<i>Multiple terminals</i>	174
<i>Terminal for Matrix Patching</i>	175
6.2 INSERT CONNECTORS.....	176
6.3 TERMINALS AND CONNECTORS.....	178
<i>Terminal block drawing</i>	180
<i>Terminal block table</i>	181
<i>Terminal usage drawings</i>	181
<i>Connector drawing</i>	182
<i>Connector table</i>	182
<i>RailDesigner 2</i>	183
<i>File</i>	183
<i>Terminal block List</i>	184
List (Table).....	184
List (File).....	184
<i>Edit terminal block</i>	185
Change terminal.....	186
Add terminal	187
Terminal repositioning.....	187
Sort terminals	188
Sort by usage	188
Renumber NumM	189
<i>Edit connectors</i>	190
Modify Connector	191
Insert Accessories	192
<i>Update terminals</i>	193
<i>Rename</i>	194
<i>Checks</i>	194
6.4 USAGE	195
<i>Panel Hierarchy</i>	196
<i>Assign usage</i>	196
Automatic	196
Manual	196
Check Usage not Assigned	196
Delete Usage.....	196
6.5 DDATTEF TERMINALS.....	197
6.6 NUMM NUMBERING	198
<i>NumM = NumI</i>	198
6.7 NUMI AND NUMO SETTINGS	199
6.8 DELETE TERMINALS	199
7 CROSS-REFERENCING	201
7.1 CROSS-REFERENCE.....	201
<i>Cross-Reference Components</i>	202
Editing.....	203
Parent symbol.....	205
Child Symbol	205
<i>Cross-Reference Returns</i>	206
Return Signal.....	207
7.2 PIN REFERENCE	208
<i>Save Pin</i>	210

7.3 ERRORS.....	211
<i>Component symbols errors</i>	211
<i>Return symbols errors</i>	215
7.4 REAL-TIME CROSS-REFERENCE	216
7.5 CROSS-REFERENCE LEGEND	217
7.6 CROSS UTILITY	218
<i>Change by Cross</i>	218
<i>Delete Cross Reference</i>	218
8 BILL OF MATERIALS	219
8.1 MATERIALS DATABASE	219
<i>Database information</i>	220
<i>File Import/Export</i>	220
<i>Database print</i>	221
<i>Inserting a code</i>	222
<i>Edit code</i>	222
General	223
Technical Notes.....	224
Layout	225
Electrical BLK.....	226
Unravelling.....	227
<i>Tools</i>	228
Define a filter	228
Associating filters	229
Apply filter	229
Find codes	230
Hide information.....	230
Hidden component management.....	230
Import file Terminals (DAT).....	230
Options	230
<i>Database utilities</i>	231
<i>Edit macro</i>	231
<i>Edit Macro Connectors</i>	232
8.2 MATERIALS FEATURE	233
<i>Materials Supply</i>	235
<i>Estimated Bill of material codes</i>	235
8.3 INTERNAL BILL OF MATERIALS.....	236
Edit	237
Delete.....	237
<i>Bill sorted by reference</i>	238
<i>Bill sorted by panel and reference</i>	238
<i>Bill sorted by type</i>	239
Compact View	239
<i>Bill sorted by panel and type</i>	240
Compact View	240
Table.....	241
Save (DMW File).....	241
File	242
Overtemperature	243
Technical Manual	243
<i>Bill of Materials Settings</i>	243
8.4 EXTERNAL BILL OF MATERIALS	244
Import/Export Bill	244
View rows	245
Free codes.....	246
Codes tied to a materials database.....	246
Update from a file.....	247
Print.....	247

<i>Table</i>	248
<i>Import CSV file</i>	248
<i>DSS File</i>	249
Extraction by external module.....	249
Importing by external module	249
8.5 ANNOTATION MATERIALS	250
8.6 DBCENTER	251
<i>Tab – Materials Database</i>	252
<i>Tab – Used</i>	253
<i>Tab - Estimated Bill of material</i>	253
<i>Tab – eShop</i>	254
<i>Associated materials list</i>	254
<i>Drawing mode</i>	255
<i>Filters</i>	256
<i>DbCenter Toolbar</i>	257
8.7 LIBCENTER	258
8.8 FILTER MATERIALS DATABASE.....	259
8.9 DISASSOCIATE MATERIALS	259
8.10 BILL COMPARISON USING CSV FILE	260
9 OVERTEMPERATURE	261
9.1 OVERTEMPERATURE CALCULATION	261
<i>Starting the program</i>	261
<i>Panel window</i>	262
Calculate	262
Print	262
Export to drawing	263
<i>Panel component window</i>	264
<i>General info</i>	264
<i>Results</i>	265
9.2 DESIGN INFORMATION.....	266
<i>Panel database</i>	266
<i>Components database</i>	266
<i>Panel constants database</i>	267
9.3 CALCULATION – BASIC CONCEPTS	268
<i>Basic concepts</i>	268
<i>Ventilation</i>	269
9.4 OVERTEMPERATURE TABLE.....	271
10 SINGLE FEED DRAW	273
10.1 SINGLE FEED DRAW	273
10.2 SINGLE FEED NUMBER WIRES.....	275
10.3 SINGLE FEED DATA TABLES	276
10.4 EDIT SINGLE FEED CIRCUIT	277
10.5 IMPORT SINGLE FEED	278
Order of Returns	278
11 CABLES.....	279
11.1 CABLES	279
<i>Cable selection</i>	281
Automatic Association	282
Wire details.....	282
<i>Controls</i>	282
<i>Draw cables</i>	283
<i>Cable table</i>	284
<i>File</i>	284
11.2 CABLE DEFINITION	285

Cable table.....	285
Table.....	286
File.....	286
11.3 CABLE DATABASE.....	286
11.4 CABLE INFORMATION	287
12 TRANSLATOR	289
12.1 TRANSLATOR BLOCKS	289
12.2 INSERT PHRASES	290
Insert Phrases toolbar	291
12.3 TRANSLATION	292
12.4 TRANSLATOR SETTINGS.....	294
Color text processing.....	295
Translated text features.....	295
Translation position.....	296
Processed blocks.....	296
Associate Tag	297
Force style	298
Language–Style association	298
Constant phrase	299
12.5 PHRASE DATABASE.....	300
Phrase filter	301
Update existing phrases.....	301
Enter new phrases.....	301
"Wild card" symbol.....	302
Dictionary management	303
Create new.....	303
Copy dictionary	303
Change dictionary	304
Import file	304
Export file.....	304
12.6 IMPORTING PHRASES.....	305
12.7 SHIFT WITHIN BLOCK	307
12.8 DELETE TRANSLATION.....	307
12.9 LANGUAGE EXTENSIONS.....	308
Installing on Windows® XP.....	308
12.10 EDIT TRANSLATION.....	309
Installing a keyboard layout.....	309
Using on-screen keyboard.....	310
13 PLC.....	311
13.1 PLC I/O BITS.....	311
Individual bits	311
Board.....	312
Board terminals.....	312
Bit numbering.....	313
Numbering examples	314
13.2 SYMBOLS LIBRARY.....	315
13.3 PLC DATABASE	317
Available series	318
Modules.....	319
Related blocks.....	320
Advanced settings.....	321
13.4 PLC CONFIGURATION.....	322
PLC – Electric Draw.....	324
PLC – Synoptic Draw.....	325
PLC – Layout Draw	325

<i>PLC – Summary Draw</i>	326
<i>Unity Pro interface</i>	326
13.5 BIT MANAGEMENT	327
<i>BIT – Electric Draw</i>	329
13.6 PLC UTILITY	330
<i>Same name</i>	330
<i>Assign element</i>	330
<i>Summaries</i>	331
Prepare summaries	331
<i>I-O Import/Export</i>	331
<i>I-O Bit legend</i>	333
14 UTILITIES.....	335
14.1 LEGENDS	335
<i>Function legend</i>	335
Drawing.....	336
File.....	336
<i>Symbol legend</i>	337
14.2 ATTRIBUTE CHANGES.....	338
<i>Graphic changes</i>	338
<i>Attributes visibility</i>	339
<i>Value substitution</i>	340
<i>Force value</i>	341
<i>Fast Attedit</i>	341
<i>Copy attributes</i>	341
<i>Fit width (T+ and T-)</i>	341
<i>Import attributes</i>	342
<i>Export attributes</i>	342
14.3 SUBSTITUTION OF A BLOCK	343
<i>Single block</i>	343
<i>List</i>	343
Exchange files	344
14.4 MARKING.....	345
<i>Manual Marking</i>	346
Update	346
Delete.....	346
<i>Automatic Marking</i>	347
Update	347
Delete.....	347
<i>Show\hide Wire Numbers</i>	347
14.5 LABELS.....	348
<i>Wire extraction</i>	348
Wire extraction by panel	349
<i>Terminal extraction</i>	350
<i>Reference extraction</i>	350
<i>Function extraction</i>	350
<i>Cables reference extraction</i>	350
14.6 NAVIGATOR.....	351
14.7 IGNORE SYMBOLS	353
<i>File</i>	354
14.8 OUTPUT TABLE AND FILE	355
<i>Table</i>	355
<i>File</i>	356
<i>Edit CSV document</i>	357
15 LAYOUT.....	359
15.1 CABINET EXTERIOR	359

<i>Cabinet layout scale</i>	359
<i>Accessories</i>	360
15.2 CABINET INTERIOR	361
<i>Plate</i>	361
<i>Raceway</i>	361
Database	362
<i>Component</i>	362
<i>Terminal block</i>	363
<i>Options</i>	363
Size table	363
15.3 TOPOGRAPHIC MANAGER	364
<i>Component Management</i>	367
<i>Dimensions and Block Choice</i>	369
Block Specifications	370
15.4 PUSHBUTTON PANEL	371
<i>Configuration</i>	371
<i>Panel wiring</i>	372
Drawing	374
Update	374
<i>Panel front</i>	375
<i>Panel rear</i>	375
15.5 PANEL SYMBOLS	376
<i>Symbols – Pushbutton panel front</i>	376
<i>Symbols – Pushbutton panel rear</i>	376
15.6 PANEL UTILITIES	377
15.7 TeSys U	378
<i>TeSys U – Configuration</i>	379
<i>TeSys U – Draw</i>	380
15.8 UNRAVEL PANEL WIRES	381
<i>See Wiring</i>	383
<i>Edit Wiring</i>	384
Modify Track	384
Force Tracks	385
Set Forbidden Raceways	385
<i>Export Wiring Data</i>	385
<i>Unravel Settings</i>	385
15.9 INSTALLATION LAYOUT	386
<i>Tracks length</i>	388
<i>Cable labels</i>	388
<i>Installation Layout Report</i>	388
16 SYMBOLS	389
16.1 SYMBOL INSERTION	389
<i>Insert Parent symbol</i>	390
Entering blocks with fence	392
Snap-to-segment block insertion	392
<i>Insert Child symbol</i>	393
Real-time cross-reference OFF	393
Real-time cross-reference ON	394
Functions near contacts	394
<i>Insert Element symbol</i>	395
16.2 CHANGE SYMBOLS	396
<i>Delete</i>	396
<i>Copy</i>	397
<i>Clone</i>	397
<i>Edit</i>	397
<i>Move</i>	398

<i>Stretch</i>	399
16.3 LOCATION LABELS	400
16.4 FAVORITES SYMBOLS	401
16.5 LAST USED SYMBOLS	402
16.6 BLK LIBRARY	403
16.7 CATALOGUE SYMBOL LIBRARIES	405
<i>Inverter & Modules Library</i>	405
<i>DataBase Management</i>	406
Series available	407
Modules	408
Associated Blocks	408
16.8 CUSTOM BLK SUITE	409
<i>Registration Reference Structure</i>	412
16.9 BLACK BOX	413
17 CUSTOMIZATION	415
17.1 CATEGORIES OF SYMBOLS	415
<i>Parent symbol</i>	416
<i>Registration reference symbol</i>	418
<i>Child symbol</i>	420
Pres identification for child symbols	421
<i>Element symbol</i>	422
<i>Return symbol</i>	423
<i>Accessory symbols</i>	424
Terminal symbol	424
Plug symbol	426
Terminal block symbol	427
17.2 SYMBOL CREATION	428
<i>Graphics</i>	428
<i>Attributes</i>	428
Attribute modes	429
<i>Slide</i>	429
17.3 BLK SYMBOLS	430
17.4 MBLK MACROSYMBOLS	432
17.5 MENU CUSTOMIZATION	433
<i>Normal direct insert</i>	434
<i>RFSS direct insert</i>	434
<i>Normal insert via a window</i>	435
<i>Inser RFSS via a window</i>	435
<i>Inser automatic by dialogue</i>	436
18 CANECO	437
18.1 CANECO	437
<i>Export data from planimetric</i>	438
<i>Import data to Caneco</i>	438
<i>Export data from Caneco</i>	439
18.2 IMPORT SINGLE-FEED DIAGRAM	439
Return order	440
<i>Import directly from planimetric drawing</i>	440
19 MACHINERY OPTIONS	441
19.1 MACHINERY OPTIONS	441
<i>Options marking</i>	442
<i>Highlight marks</i>	443
<i>Remove marks</i>	443
<i>Export Data</i>	443
19.2 CONFIGURATION GENERATOR	444

19.3 MACHINERY CONFIGURATOR	445
19.4 SCHEME GENERATOR.....	446
19.5 SCADA	447
20 CABLE MODULE.....	449
20.1 CABLE MODULE	449
20.2 LAY CABLES.....	450
<i>Enable New Cable</i>	451
<i>Enable Existent Cable</i>	453
<i>Definition</i>	455
<i>Cable Label block</i>	456
<i>Cable Data Info</i>	457
<i>Disassociate</i>	458
<i>Twist</i>	458
<i>Spares</i>	458
<i>Rebuild cable file</i>	458
20.3 CUSTOMIZE WIRES	459
<i>Wire Label block</i>	461
20.4 DDATEF WIRE DATA	462
20.5 CABLE PROCESSING	463
<i>Cable choice</i>	466
Wire detail	468
View conductor.....	468
View cable.....	468
<i>Update</i>	468
<i>Cable bundle choice</i>	469
<i>File</i>	470
<i>Table</i>	471
<i>Bi-directional Table</i>	472
Table Customization	473
<i>Drawing</i>	475
Cables Module version 3.0.....	476
Customization of the Cable Drawing block	476
<i>Cables</i>	478
<i>Draw bundles</i>	479
<i>Bundles</i>	479
20.6 HIDE LABELS	480
20.7 CONVERT ABB FILE	480
20.8 UNCONNECTED CABLES	480
20.8 ERROR MESSAGES.....	481
<i>Errors during cable scanning</i>	481
<i>Ddattef wire data errors</i>	481
<i>Cable processing errors</i>	482
<i>Wire customization errors</i>	484
INDEX	485

1 Installation

1.1 Hardware and Software requirements

- **AutoCAD** 2010 / 2011 / 2012 / 2013
- **AutoCAD Electrical** 2010 / 2011 / 2012 / 2013
- **AutoCAD Oem** 2013

Hardware requirements:

- Personal computer processor: **Intel® Pentium® 4** (or higher) with **technology SSE2**
AMD Athlon™ (or higher) with **technology SSE2**
- Video board resolution: **1024x768** (minimum) with 16.8 million colours.
- RAM Memory: **2 GB** (recommended **4 GB**)
- DVD reader (for installation).
- USB port for a hardware protection key.
- Internet access (for installation and on-line update).

Software configuration:

Administrator access is necessary for installation purposes. Authorisations of the domain administrator are not necessary. For information, apply to the system administrator.

- **Operating system:** Windows® XP (32bit) Service Pack 3 (or higher)
Windows® 7 (32 / 64 bit)
- **Web Browser:** Microsoft® Internet Explorer 6.0 (or later).
- **AutoCAD 2010 / 2011 / 2012 / 2013 must be installed and working.**
- **AutoCAD is not required for the OEM version.**



Always refer to the Hardware requirements necessary for the AutoCAD release in your possession.



WARNING: AutoCAD LT versions are not considered valid for this installation.

Installation on Windows® XP 64 bit and Vista 64 bit operating systems is not allowed.

1.2 Installation

Spac Automazione 2013 guides you through the installation process, with all instructions appearing on screen. The program transfers files from the release DVD to one or more sub-directories created on the hard disk and creates a new program group in the Start menu.

Before using the installation program, you will need to have a general idea of how your computer operates and a working knowledge of Windows, and verify that your computer complies with recommendations in paragraph “[1.1 Hardware and Software requirements](#)”.

If you are installing the **Applicative software version** to AutoCAD, ensure that the proper AutoCAD version is installed and working correctly.

If you are installing the **Oem software version**, CAD engine is merged in the software itself, so it doesn't need a separate installation.

To install **Spac Automazione** you must have administrator rights.

If you want to install a single/independent seat, choose “**Master Installation**” during [Setup](#).

Installation of many seats in a LAN, sharing libraries and job orders, requires a “Master installation” for the main seat, and “Slave Installation” for remaining ones.

“**Slave Installation**” doesn't involve libraries and common files, being them already copied during “Master” installation; you have only to select folders where they are located and shared inside the LAN.



- **Setup (installation)**
- **Installation changes**
- **Restore installation**
- **Uninstall**



The software release files are compressed. The installation program ([Setup](#)) is required to install.



WARNING:

Spac Automazione 2013 can coexist with previous versions, **you are not required to uninstall previous version(s)**.

(See “[Data migration and customization utility](#)”).

It's not allowed to have more than one installation of the same software version on a single PC: each setup run after the first installation will ask for maintenance only.

Setup



 
Only insert hardlock key USB when the installation program asks for it.

The installation program is run from a DVD unit.

(The procedure described below refers to unit D. If necessary, change "D" to the appropriate letter for the configured DVD unit).

Insert DVD in disk unit D and run the install **SpacAutomazione2013.exe** application file and follow the instructions which appear in the dialogue windows.


Or select **Run** from the Windows **Start** menu, then key in the command "D:\SpacAutomazione2013".




Choose the installation language you prefer.



 Choose the type product to be installed.



 Read **Information** concerning the installation you are running.



Read the "**Software License Agreement**", installation will continue only after accepting terms and condition exposed hereby.



The hardware protection driver is installed or updated, verify you are connected to the Internet before proceeding.

Now insert the hardlock key.


If the key cannot be found, you are asked to indicate the type of key you have, or install the driver manually.

Fill in the form:

- **User Name.**
- **Company Name.**
- **Serial Number (*).**

(*)

is provided by SDProget, you must specify the **INSTALLATION CODE** shown (see the location highlighted in the figure).

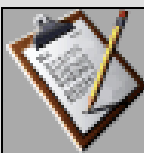


The **Serial Number** (12 digits) is released from SDProget, the request automatically (only if connected to Internet) or by fax using the registration form inside the package, specifying the **INSTALLATION CODE** that appears in the dialogue box.



Press button **“Master Installation”** to continue a single seat installation (or the LAN master installation). This installation includes Libraries and common files.

 
Press button **“Slave Installation”** to install the other LAN seats. This installation doesn't involve libraries and common files, being them already installed by “Master” one.



Select installation folder for the main program (if you have no particular requirements you are advised to use the default).

C:\Programs\SPAC Automazione 2013

 
Select installation folder for job orders:



...\Projects


(In case of “Slave Installation” choose the libraries folder shared in the LAN).

 Select installation folder for libraries and archives:



...\Libraries

 (In case of “Slave Installation” choose the libraries folder shared in the LAN).




Choose program group name (default **Spac Automazione 2013**).

Select a **Full** or **Customized installation** (“Master” installation only):

Full : installation with all graphic libraries and archives.

 
Custom : you can choose components to install.




Installation can now begin following your choices.



 Select the constructors to insert in the database of the materials.



 If a preceding version of SPAC Automazione is already installed, the program **“Data migration and customization utility”** starts up automatically at the end of setup, allowing you to automatically save any Customization or changes made in the previous version.



Shortcuts to the program and its utilities appear on Windows desktop.

The **Spac Automazione** installation has finished.



At the end of the process Windows have to be restarted in order to apply system changes and execute the program correctly.

You can now start the program and begin working (with the hardlock key inserted). If the key is not in at program start-up, the error message *“Failed to recognize hardware protection”* will appear.



- Hardware key **HASP**
- Hardware key **Smartkey**

This pictures are for sample use, the producer can modify or improve the installation program without notice.

HASP



HASP key


The hardware key Sentinel HASP can be of 2 types:

- **Stand-alone (green USB key)**
- **Network (red USB key)**

The hardlock (both parallel and USB) usually doesn't need any configuration, if connected **during** software installation.

The hardlock can be checked and configured any time after the installation:

- 1 – From your internet browser in the address <http://localhost:1947> or from program group **Spac Automazione > License key Tools > HASP > HASP Configuration and report**
- 2 – Choose the language you prefer (**More Languages...**)

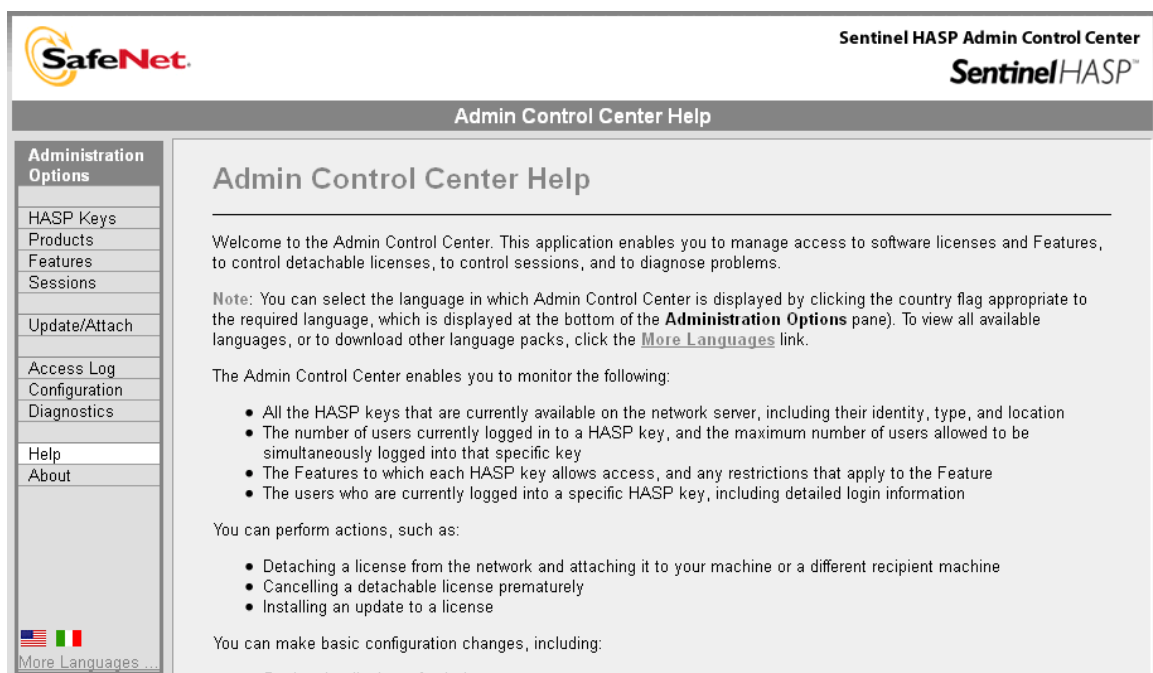

Admin Control center



If necessary in the folder \Key Utility of the installation DVD, is present the complete setup of the driver (run HASPUserSetup.exe).

Stand-alone hardlock



LPT - (Figure 1)



USB - (Figure 2)

The hardware key Smartkey can be USB or LPT:

- **Parallel Port (LPTn:)** (Figure 1)
- **USB Port** (Figure 2)

The hardlock (both parallel and USB) usually doesn't need any configuration, if connected **during** software installation.

If the "New hardware guided installation" for the "**SmartKey USB**" peripheral driver window appears during installation, proceed with the suggested choices until selection of a driver search path. Select only the "Specify path:" option and use the "Browse" button to locate D:\Key Utility.

(Replace "D" with the letter of the configured DVD unit).

The hardlock can be checked and configured any time after the installation:

- 1 – From the installation DVD run **SDI.Exe** in folder \Key Utility.
- 2 – Use **Parallel** or **USB** section depending on your key.
- 3 – Press "Install" to update or install "SmartKey" drivers.
- 4 – Then press "Update" to check version and activity of the driver.
- 5 – Sometimes it's necessary to press the "Uninstall" button before proceeding from point (1).



Run Test32.exe or SPInfo.exe in folder \Key Utility of the installation DVD to get all information about the installed SmartKey.

Network hardlock

Network hardware protection key with multiple floating license means:

- **Network hardware protection** = The hardware protection (key) for the program is installed on a different computer to that on which the program runs.
- **Multiple** = A single hardware key enables several sessions of the protected program to run simultaneously, according to the maximum number of authorized licenses.
- **Floating** = The program user license can be used (blocked) by any computer on which the software has been installed and configured.

The Network hardware protection key is configured TCP/IP or ANP.



WARNING:

The following operations must be performed **only if there is a network hardware key**; doing so with a local hardware key will impair software operation (**if in doubt, you are advised not to proceed**).

Installation and configuration of the licensed server (TCP\IP)

1. Logon as "**Administrator**".
2. Insert DVD and run SDI.EXE from \Key Utility folder.
3. Use **Parallel** or **USB** section depending on your key.
4. Press "Install" to install the local driver concerning the "SmartKey" plugged in.
5. Then press "Update" to check version and activity of the driver and close SDI.
6. Run SCC.EXE from the DVD from \Key Utility folder.
7. Open the "Multilan Service" section.
8. Enable the **TCPIP** option.
9. Set the "**P**ort" value with the number of a port not used by any other applications (for example 5500).
10. Set the Timeout(s) value to 15.
11. Press "**A**pply" and then "OK".



If there is a firewall on the licensed client computer, remember to open the port to be used for both the TCP and the UDP protocols.

Installation and configuration of the licensed client (TCP\IP)

1. Logon as "**Administrator**".
2. Insert the DVD.
3. Run SCC.EXE from \Key Utility folder.
4. Open the "Client" section.
5. Select Windows program category from the "Configuration settings for".
6. Press "Add", select "**TCPIP**", "OK".
7. Enter in the field "Server name or IP address" computer name (**licensed server**) configured in the preceding section if the server IP address varies as it is obtained automatically (DHCP service enabled), or enter the IP address if a fixed setting for the licensed server.
8. Enter the "**S**erver **p**ort" value identical to the "**P**ort" value set on the licensed server, press "OK" then "**A**pply".
9. Disable option "Use local protocol as last resource"; "OK".



If there is a firewall on the licensed client computer, remember to open the port to be used for both the TCP and the UDP protocols.



WARNING: If a computer is intended to function either as a licensed network server (in which the protection key is to be installed physically) or as a client (on which will run), follow the instructions for the Licensed SERVER and then for the Licensed CLIENT.

Installation and configuration of the licensed server (ANP)

1. Logon as "**Administrator**".
2. Start Explorer.
3. Create a directory entitled ANP on the hard drive.
4. Share usage of this directory using shared name ANP, thereby giving complete control rights to enabled users.
5. Insert DVD and run SDI.EXE from \Key Utility folder.
6. Use **Parallel** or **USB** section depending on your key.
7. Press "Install" to install the local driver concerning the "SmartKey" plugged in.
8. Then press "Update" to check version and activity of the driver and close SDI.
9. Run SCC.EXE from the DVD from \Key Utility folder.
10. Open the "Multilan Servicer" section.
11. Enable the **ANP** option.
12. Press the "Browse ..." button is enabled in the same group as ANP.
13. Select, from the hard drive, the sub-directory entitled ANP (see point 3) and press "Open".
14. A composite path (example **c:\Anp**) should appear in the Edit control box to the left of "Browse...".
15. Set the Timeout(s) value to 15.
16. Press "**Apply**" and then "OK".



If the errors "ANP error" or "ANP or network error" appear, you need to configure server and client via the TCP\IP protocol.

Installation and configuration of the licensed client (ANP)

1. Logon as "**Administrator**".
2. Insert the DVD.
3. Run SCC.EXE from \Key Utility folder.
4. Open the "Client" section.
5. Select Windows program category from the "Configuration settings for".
6. Press "Add", select "ANP" (shared directory), "OK", "Browse...".
7. "Search in:" select "Network resources".
8. Select the name of the computer (**licensed server**) on which you have shared the ANP directory.
9. Select the shared directory ANP, press "Open", "OK" and then "**Apply**".
10. Disable option "Use local protocol as last resource"; "OK".



If the errors "ANP error" or "ANP or network error" appear, you need to configure server and client via the TCP\IP protocol.



WARNING: If a computer is intended to function either as a licensed network server (in which the protection key is to be installed physically) or as a client (on which will run), follow the instructions for the Licensed SERVER and then for the Licensed CLIENT.

Data migration and customization utility

Migrator

When you have finished installing **SPAC Automazione 2013 (Setup)**, customization and changes set on previous versions are saved automatically.

The purpose of this utility is to enable a rapid version change (update installation) by saving existing settings.



The migration utility only acts in relation to the following versions :

Spac Automazione 2004 updated with Service Pack 14.0.4

Spac Automazione 2005 updated with Service Pack 15.0.4

Spac Automazione 2006 updated with Service Pack 16.0.2

Spac Automazione 2007, 2008, 2009, 2010, 2011, 2012

(Updates are available from the Downloads area on our website www.sdproget.it).



WARNING: for migration carried out after installation, use the program **Migrator.exe** located in the Program\Migrator folder.

The migration utility saves :

- ✓ **Files** (See *"File Migration"*)
- ✓ **Libraries** (See *"Library Migration"*)
- ✓ **Dictionaries** (See *"Dictionary Migration"*)

File Migration

Materials Files	The amw files are copied from the folder Librerie\Archivi in the previous version.
Cable File	The file ArcCavi.mdb is integrated with Manufacturers, Codes and Cable data that has been changed in or added to the previous version file.
Inner Cabinet Layout File	Component file in the current Armadi.ini file is replaced by the previous version. Raceway files in the current Canaline.dat file are integrated by the changes and additions in the previous version
Over-temperature data Files	The files Armadi.dat , Compon.dat and kQuadri.dat are integrated by changes and additions to the previous version.
Terminal Archives	The amw files are copied from the folder Librerie\Archivi in the previous version.
PLC Manager User Files	The file Utenze.mdb is integrated by the changes and additions to the previous version.
PLC Database	The file CatalogoPlc.mdb is integrated with the Manufacturers, Models and Codes changed or added in the previous version. Any new symbols are imported if associated with codes added by the user. Any customized symbols are imported if associated with codes added by the user.
Symbol Configuration	The file Description-Lib.mdb is integrated by the "Prefix Files" generated by the user in the previous version. Changes and/or additions to existing files are also saved. If these are additions, new symbols are also imported

Library Migration

Blk Symbols	All Blk* and MBlk* symbols (dwg and sld) are saved from the Librerie\Blk folder in the previous version.
Cfg Folder	The *.ini files in the previous version are saved, but only those with a different name to the standard ones installed in the current version
Clienti Folder (Customer)	The current file is replaced by those in the previous version, (current version renamed as .bak).
Common Symbols	All *.dwg and *.sld files are copied without overwriting.
Configurator Folder	All *.cm files are copied, only overwriting those installed by the current version.
Documenti Folder (Document)	All *.doc and *.pdf files are copied, only overwriting those installed by the current version.
Sheet Folder (Stored sheets)	All *.dwg, *.sld and *.abb files are copied, only overwriting those installed by the current version. The Lista.dat list is updated based on Sheets saved
LoopDiagram Symbols	All *.dwg and *.sld files are copied without overwriting.
Panel Symbols	All *.dwg and *.sld files are copied without overwriting
Control Panel Symbols	All *.dwg and *.sld files are copied without overwriting.
GestTop Symbols (Quadri folder)	All *.dwg and *.sld files are copied without overwriting.
Aus\Cnt\Tsa Symbols (Referim folder)	All *.dwg and *.sld files are copied without overwriting
Card symbols	All *.dwg and *.sld files are copied without overwriting. Those associated with codes added by users in the PLC Database are copied by overwriting.
Input\Output Symbols (Schede\UtenzePlc)	All *.dwg and *.sld files are copied without overwriting.
Symbols Folder	All *.dwg and *.sld files are copied without overwriting.
Return Symbols (Simboli folder)	All *.dwg and *.sld files are copied without overwriting.
Tesys_U Folder	The current dbTesys.mdb file is updated and integrated with changes to the Template made in the previous version.
Symbols (*)	Symbols regarding records modified in Symbol Configuration of the previous version (Description-Lib.mdb), are saved by copying the *.dwg file with no overwriting. Please Note: The slidelib slb file containing the slide sld is not saved. (*)CEI15, CEI25, ELETTR, FIAT15, FIAT25, FLUIDI, IEC, JIC, UNIF, VDE15.

Dictionary Migration

Dictionary Folder	All translator configuration files *.cfg are copied without overwriting
Phrase File (Translator)	The current Trad.mdb file is integrated with new dictionary generated by the user in the previous version. All changes and/or additions to standard dictionary are saved using the Italian version as reference (comparison key). If new languages have been added (database columns), these are only saved by the migration procedure if there is a related Italian translation.

Installation changes

Running again the **installation** procedure (**Setup**) when Spac Automazione is already installed, cause the execution of the maintenance tool.

Pressing "**Modify**" when Spac is installed as "**Master**", lets you add new components to the program, or remove existing.

Changing the current installation is useful especially to add symbol libraries or archives (material, PLCs) not installed the first time.

Pressing "**Modify**" when Spac is installed as "**Slave**", lets you change the path of Job Orders and Libraries folders, shared inside the LAN.

Restore installation

Running again the installation procedure (**Setup**) when Spac Automazione is already installed, causes the execution of the maintenance tool.

Pressing "**Repair**" you obtain a check of the current installation, then found components are restored in case they have been removed or damaged.

Uninstall

Spac Automazione is removed using the automatic **uninstall** process. The function is run from the "Control Panel" by clicking on the "Add/Remove programs" icon and then selecting "**SPAC Automazione**" from the list of removable applications.

Choose "**Remove**" and press "Next" to start the uninstallation procedure.

Choose the item "SPAC Automazione" including installation folder and language (IT or EN) :



This process removes from the disk all files belonging to the installation, except for new ones (created by the User) and those changed from their original state.



WARNING:

Choose the item "SPAC Automazione" including installation folder and language (IT or EN) to completely uninstall the product.

1.3 New in the release 2013

AutoCAD OEM 2013 Version, Add-on AutoCAD 2010, 2011, 2012 and 2013.

Differences of **Spac Automazione® 2013** compared to the previous 2012 version. (*) New command.

OEM Version		OEM Autodesk OEM 2013 Engine. New Autodesk Engine and new DWG format.
2.5 Job Order management		New command “ Update Master title Block ”, allows the modification of the data contained on the Master Title Block associated to the Multi-Sheet on the Job Order.

COMMANDS

Function		Description
7.1 Cross-Reference		Command completely renewed and enhanced with the immediate preview of the processed data. New treeview structure to “Edit” errors: Schemes’ processing and corrections without closing the command. On-Line management of the Returns.
8.2 Materials feature	*	DbCenter unified with all association types of materials codes and components on the drawing.
8.3 Internal Bill of Materials		Command completely renewed: Reduction of the processing time, new dynamic Filters, customizable fields view. Edit with the new “Materials Feature” directly on the DbCenter.
8.5 Annotation Materials	*	Command to write the information related to the material associated to each component on the drawing . The “Annotation” tables are completely customizable.
8.6 DbCenter		Materials centralized management. Possibility to insert new materials’ codes without opening the archive and integration of the new “Materials Feature”.
PLC Symbols library		The library was enhanced with new models as: B&R system X20 and X67.
16.1 Symbol insertion		Integration of the new “Materials Feature”.
Schneider Electric Catalogue	*	eShop Catalogue: Set of functions that simplify the access to the information about Schneider Electric products on the web. eXteem: Consents the design of the panel designed with eXteem.

2 Basics

2.1 Working

Draftsmen use this program to draw up electrical documentation rapidly and securely.

To simplify the numerous operations typical of an electrical design, the software provides specific functions created and developed according to precise industry requirements.

A document created using this software is not merely a drawing but a kit of useful information to obtain a series of design checks and controls.

Correct use of the program enables it to be used to its full potential, so it is advisable to read this manual carefully.

Suggest essential reading route :

1 – “2.2 Start working”	<i>(Commands for loading the program)</i>
2 – “2.3 The Job Order”	<i>(Structure of design)</i>
3 – “2.5 Job Order management”	<i>(Opening a new design)</i>
4 – “4.1 Setup”	<i>(Opening a new design – Setting-up)</i>
5 – “3.1 Create multisheet”	<i>(Create new design pages)</i>
6 – “16.1 Symbol insertion”	<i>(Diagram – Symbol insertion)</i>
7 – “4.5 Connections”	<i>(Diagram – Symbol connections)</i>
8 – “7.1 Cross-Reference”	<i>(Symbols – Cross-References)</i>
9 – “5.1 Number wires”	<i>(Connections – Numbering)</i>



All instructions for commands in this manual assume a good knowledge of the AutoCAD on the part of the user.

After positioning yourself on sheet 1 (or by choice on the first page available) you can start drawing the electrical diagram using the specific functions.

In the pop-up menu “product name” you will find all the drawing commands needed to lay the wires and power feeds, while all electrical symbols are available in the pop-up menu named from the symbol (e.g.. “IEC”).

You can start by either laying wires or inserting symbols:

- **Wires and power feeds stop automatically in the presence of symbols.**
- **Symbols interrupt wires and power feeds automatically.**

In the “product name” pop-up menu you will find all the wire management commands (numbering and lists) and for inserting terminals and connectors, while symbol management commands are found in the pop-up menu “*Modify Symb*”.

Finally, the pop-up menu for “UTIL” commands contains all final design processing commands (Cross-Reference, Materials Bill, Lists, etc.).



Pop-menu > *Sheet*

This manual symbol identifies command position in the pop-up menus.

The producer reserves the right to modify or improve the program at any time.


2.3 The Job Order

For the purposes of the program, all drawings and documents belonging to the same job belong to the same job order. The job order is, consequently, a directory that contains all the files necessary to draw up a specific electrical design. The most important files in the order are the drawings (files with .DWG extension); **each drawing file is identified by the name of the multisheet** (see Sect. 2.4).

For each new job order, a new directory is created automatically, with the same name as specified by the user (20 characters max.). The new directory is created in the "Job Order Path" specified during installation.

Position of example Job Order

The drawing file path can only be modified through the specific function "**Job order Path**".

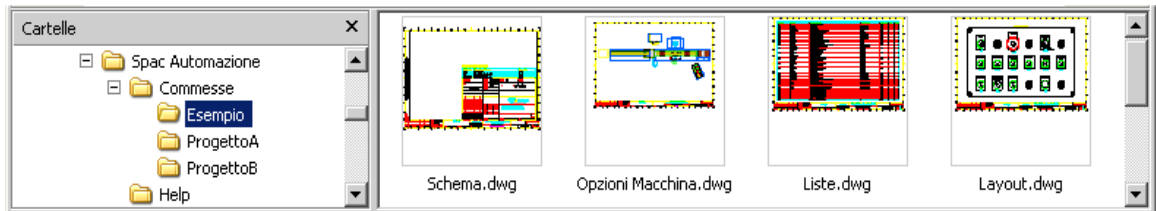

To correctly view the list of job orders indicated in the figure (Example, ProjectA, ProjectB etc...) the Path has been set up in Spac Automazione\Commesse.

Example Job Order Structure

This structure is managed by the specific command "**2.5 Job Order management**".

Job Order	Multisheets (dwg files)	Description
EXAMPLE	1° multisheet: Schema.dwg	Electrical scheme
	2° multisheet: Layout.dwg	Cabinet \ Pushbuttons topography
	3° multisheet: Liste.dwg	Material list and BOM
	4° multisheet: Opzioni Macchina.dwg	Machinery Configurator sample



WARNING: If drawings are moved manually to other folders (or sub-folders) they are no longer visible through the function "Job Order Management".

2.4 The multisheet

The software stores graphics from several electrical drawing sheets within a single file with a .DWG extension; this is called a multisheet. This structure enables the simultaneous management of a large number of sheets, avoiding the need to create numerous files.

A drawing is organized in an unlimited number of layers, with each layer (or level) corresponding to a sheet in the electrical documentation, thus ensuring that **sheet 1** is drawn on the **layer with name 1**, **sheet 2** is drawn on **layer 2** and so on. This multisheet structure, in theory, has no page limits.

The program manages this structure so that the screen displays only one sheet at a time, freezing all the others to render them invisible. The only layer that is never frozen is the layer called 0 (the name of this layer may not be changed).

Features common to all sheets, e.g. the title block box, are inserted on sheet 0.

If you wish to draw 50 sheets of documentation, you can create a single multisheet file containing 50 layers, or two files of 25 layers, or one file of 10 and another of 40 sheets, etc. This is permitted in the sense that there are no limits concerning multisheet structure, however **it is advisable to use a single multisheet file** as far as possible. Choose one of the following two options according to requirements:

Single multisheet The job order requires a limited number of sheets (up to 50 sheets, or no more than 100).

A single multisheet enables a clearer, more immediate view of the design.

All processing occurs more rapidly, as all necessary data are available immediately.

N multisheets An excessive number of sheets in a single multisheet creates files so large that they can cause delays in handling graphics.

Dividing the work into several multisheets allows for work on several areas simultaneously.

Dividing the work into several multisheets makes it possible to structure the job order into separate sections.

Several multisheets enable the numbering of sheets that are identical but distinguished by alphabetical prefixes.

The best option must be decided according to each case, in order to optimize work organization with respect to the above factors.



Multisheets are created by using the “2.5 Job Order management” command followed by the “3.1 Create multisheet” command.

The sheet

Each multisheet contains as many layers as have been created with the Create multisheet command; each Layer bears the number of the corresponding sheet.

When you request to view a sheet, layer 0 (where the title block has been inserted) and the layer bearing the name of the specified sheet are **unfrozen** simultaneously. All other layers remain **frozen** so that they are invisible. Each sheet has available all the colors and line types available with the AutoCAD.

Each sheet can be stored in such a way that it can be re-used for future jobs (*see Sect. 3.8*), or it can be detached for different uses by applying command “3.11 Split multisheet” which permits individual files to be created in .DWG format.



If a layer is re-named, the name of the sheet also changes; the software does not accept alphabetical names, except in specific cases (*see Sect. 3.2*).

2.5 Job Order management



- **Selecting the Job Order**
 - **New Job Order**
 - **Open Job Order**
- **Table of Job Orders**
- **Customer management**

This function is activated automatically when the software is started, permitting the user to view a list of all existing job orders and create new ones.


The function may be called from the first command pull-down menu (File) or by entering **SP_START** from the keyboard.



Pop-menu > **File**

Selecting the Job Order

The dialogue window lists all existing job orders. By clicking on the name, it is possible to access and view the contents of the multisheets, while pressing the **New Job Order** button creates new ones.

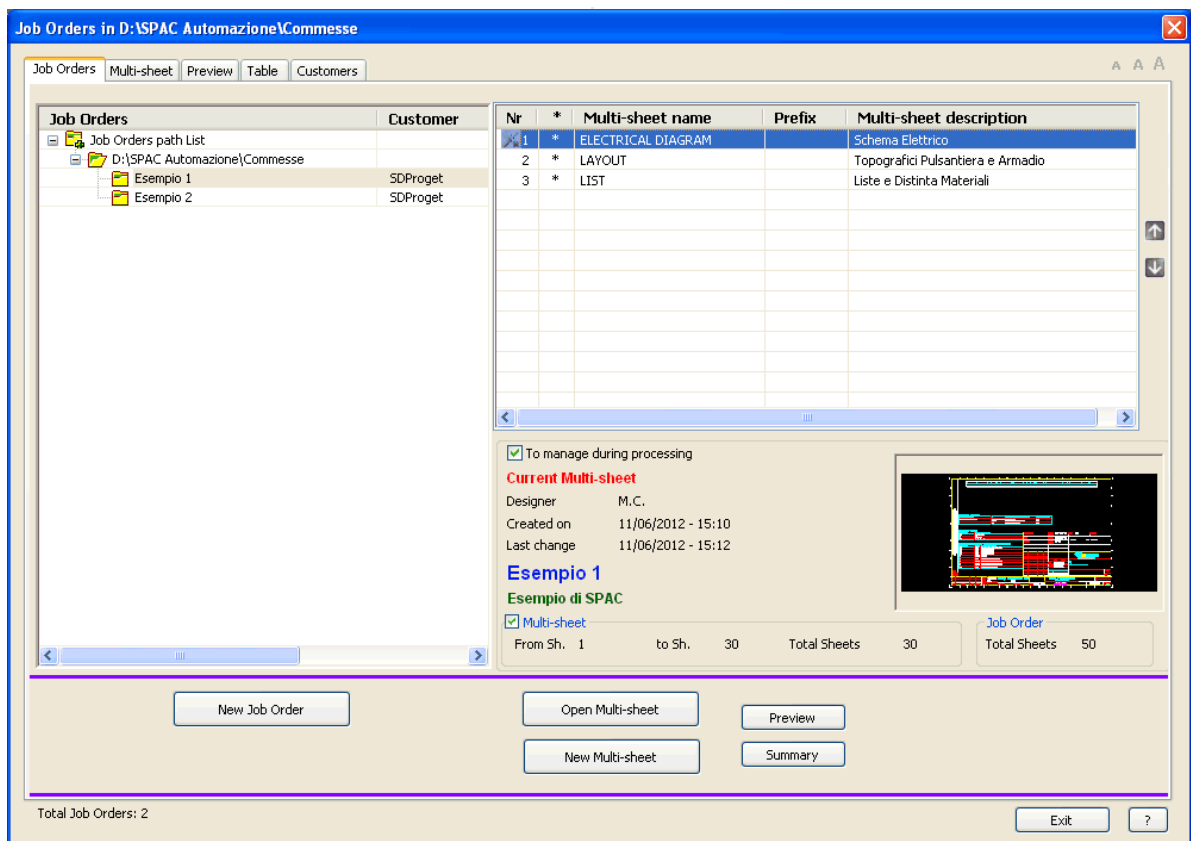

Main "Job Orders" dialogue window.

Every job order corresponds to a directory configured using the **job order path**. When working with several stations linked together on a network, it is convenient to have the same path configuration for all operators, in order to handle a single database common to all.

The job order list can be sequenced in different ways, pressing **Job orders** or **Customer** (columns title) sorts the list into alphabetical order.




The job order list can be exported in file (XLS or CSV format) or shown in table form by selecting the **Table** tabs. The button is not enabled the first time is accessed. A multisheet must first be opened and the "Job order management" command called up.

New Job Order

All data relating to a new job order must be entered in this dialogue window, starting with the name, comprising a maximum of 18 characters (see Sect. 2.2), and the description (40 characters max.).

The next step is to add the name of the customer (see “*Customer management*”) for which the new design is being developed and select a Start setting:


If OK, the new job order is entered in the list containing existing jobs.

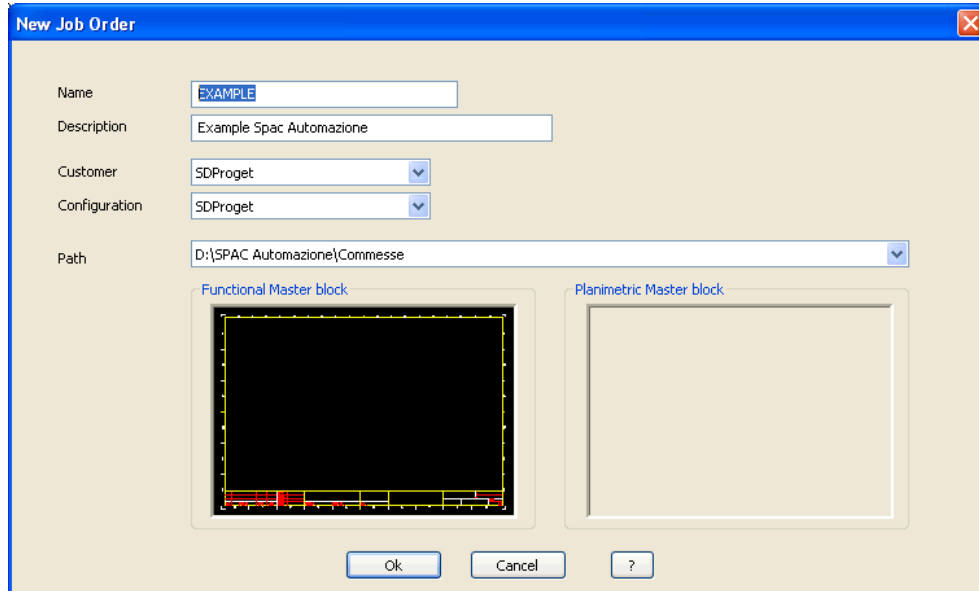

"New Job Order" window



The name and description must not contain punctuation marks. Special characters such as comma, apostrophe, percentage, etc. are not permitted either. Blanks are allowed.

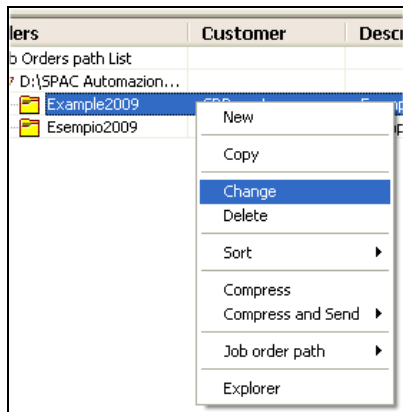

Pressing **C**hange (from menu on the right button of the mouse) changes the description and the customer for existing job orders. These data are stored in the **Job-Description._SP** file contained in each job order directory.

Customer selection implies automatic association with a master title block, and this data may only be changed by accessing the "Customer Management" section. It is possible to define customers not associated with title blocks. In this case, the symbol must be inserted manually (in Layer 0) immediately after entering a “*New Multisheet*” (see Sect. 3.18). Moreover, customer selection implies automatic association of the Start setting (when a setting exists which has the same name as the customer).

Start setting selection enables you to begin a new drawing using the “4.1 Setup” and “4.2 Settings” parameters already established.


If you start a new job order associated with the customer, the Start setting for it will be suggested (only if it exists).

Creating a Job Order also automatically generates a directory bearing the same name. This directory will store not only the drawings but also all other configuration and support files created for that job order.



The Planimetric Master block configuration, if present, exists only on grounds of compatibility with Spac Start (to be shared by the same customers) and is never used by Spac Automazione.

This window is accessed after selecting a job order and lists any existing drawings. It is possible to access one of these (using the **Open** button) or create new ones (using the **New** button).

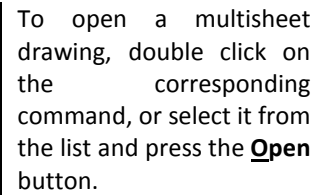

"Job order multisheet" list.

Each multisheet is numbered progressively starting from No.1. This numbering order determines the file sequence, hence processing priority and order of sheets with the same name (same number but with a different prefix). To change this priority you need to use the **Move** functions (move Up and Down the selected multisheet one position at a time).

Multisheets marked with an asterisk * are considered by default by product processing functions. Multisheets to process may be selected as required by changing the default list. This configuration is enabled on creation of a “New multisheet” with the setting **“To manage during processing”**.

☒ Multi-sheet

Job Order

from Sh. 1 to Sh. 26 Total sheets 26

Total sheets 63



Preview D:\SPAC Automazione\Commesse\Wese...

Electrical wiring diagram showing various components and connections.

Navigation buttons: -, OK, +


The right mouse button moves the current view (pan).

New Multisheet

Creating a new multisheet means creating a new .dwg file: **the name of the file may be chosen freely** (or be in the form of "job order name" + number), it's possible to associate information like description and draftsman name to the new multisheet.

There are three ways to name a new multisheet:

1. **Number** (requires to input a number only).
2. **Free Name**
3. **Use template** (requires to choose a file).

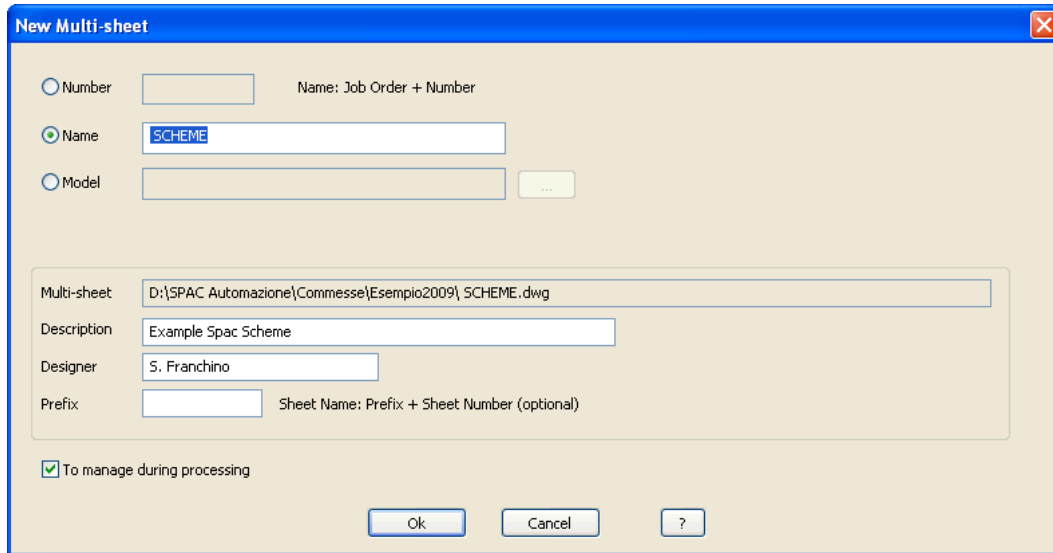

"New multisheet" dialogue window.

Data relating to "description" and name of "draftsman" are stored in the **Job-Description._SP** file in the job order directory.

"Number" mode requires to input a number (from 1 to 99) only, typing e.g. n° 1, you get automatically the multisheet name made of 'Job Order' + Number (2 digits), so: Example2005**01** ("0" is added automatically).

"Free Name" mode lets you specify a free name whose maximum length is 20 characters, with the limitation of all file names: punctuation characters, special characters as double quotes, single quote, percentage, etc. are not allowed. Blanks are accepted.

"Use template" mode let you start on the basis of an already existing file (the file to be used must be selected by pressing the "... " button). This mode is useful in case of many similar drawing to do.

A prefix (6 characters max.) can be associated with the new multisheet: this will be associated with all the page numbers generated using the appropriate command (see Sect. 3.1). With prefix **A**, for example, by creating 10 sheets starting with no. 1 you obtain: **A1, A2, A3**, etc.

The prefix is used when it is necessary to differentiate between equivalent page numbers on separate multisheets, for example:

Multisht. No.1	EXAMPLE200301	Prefix: A	Sheet nos.: A1, A2, A3, etc.
Multisht. No.2	EXAMPLE200302	Prefix: B	Sheet nos.: B1, B2, B3, etc.
Multisht. No.3	LAYOUT	Prefix: LY	Sheet nos.: LY1, LY2, LY3, etc.



The *prototype drawing* used to create new multisheets is Spac2013.dwt, stored in folder Spac Program\Utente and can be customized.

Multisheets marked with an asterisk *

Depends on the setting **"To manage during processing"**, which establishes whether the drawing is included during processing by various commands.

☒ To manage during processing

Processed Multisheets ()*.

Enabling this setting means that, when processing is initiated, the multisheet is selected (by default). Manual selection is still possible at any time.

Open Multisheet

To open a multisheet drawing, double click on the corresponding command, or select it from the list and press the **Open** button.

A multisheet can be opened for the first time, or an existing drawing can be opened.

Open new	When a multisheet is opened the first time, the following commands are run automatically (in order): 1 – “4.1 Setup” to choose symbols set and master title block. 2 – “3.1 Create multisheet” to add the desired number of pages. 3 – “3.15 Number ” to number pages created at point 2. If New Multisheet is a template, the title block and related data are already present.																											
Open existing multisheet	Job OrdersMulti-sheetPreviewTableCustomers <table><tr><th>Layer</th><th>Sheet</th><th>Title</th></tr><tr><td>0</td><td>0</td><td>Cartiglio/Master</td></tr><tr><td>1</td><td>01</td><td>Dati progetto</td></tr><tr><td>2</td><td>02</td><td>Lista fogli</td></tr><tr><td>3</td><td>03</td><td>Alimentazione generale</td></tr><tr><td>4</td><td>04</td><td>Alimentazioni ausiliarie</td></tr><tr><td>5</td><td>05</td><td>Motori</td></tr><tr><td>6</td><td>06</td><td>Circuiti di emergenza</td></tr><tr><td>7</td><td>07</td><td>Ausiliari 110 VAC</td></tr></table> To open the Multi-sheet double-click on a sheet of the list.	Layer	Sheet	Title	0	0	Cartiglio/Master	1	01	Dati progetto	2	02	Lista fogli	3	03	Alimentazione generale	4	04	Alimentazioni ausiliarie	5	05	Motori	6	06	Circuiti di emergenza	7	07	Ausiliari 110 VAC
Layer	Sheet	Title																										
0	0	Cartiglio/Master																										
1	01	Dati progetto																										
2	02	Lista fogli																										
3	03	Alimentazione generale																										
4	04	Alimentazioni ausiliarie																										
5	05	Motori																										
6	06	Circuiti di emergenza																										
7	07	Ausiliari 110 VAC																										

WARNING:



The "Open.." command may not be used to open multisheet drawings.

You must always use the appropriate function **"2.5 Job Order management"**.

The icons

The Multi-Sheet's visualization is facilitated with the next icons:



Identifies the **Multi-Sheet being use**.

It could be the current Multi-Sheet or a Multi-Sheet opened by a user that shares the Job Order folder.



Identifies a **Multi-sheet memorized in a newer DWG version**.


The Multi-Sheet could not be opened by the current version.



Identifies a **Planimetric diagram** (Spac Start).


Job order Path

By pressing this command you modify search path and job order position. Is allowed to display at the same time more Job Order Path (**Add path**).

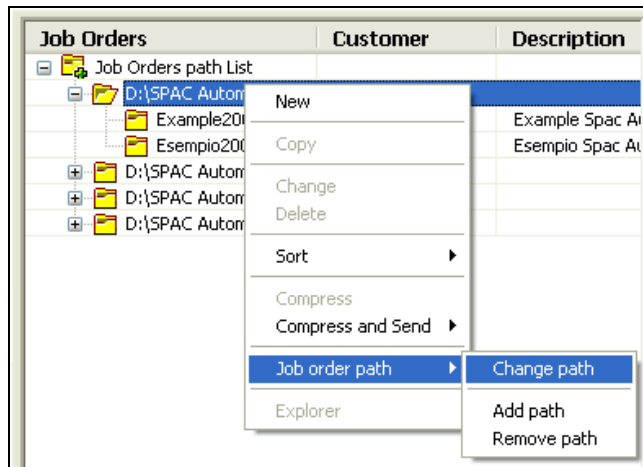

The position of drawings within the database **cannot** be changed, unless **Job Order Path** is used.

Each job order corresponds to a directory.

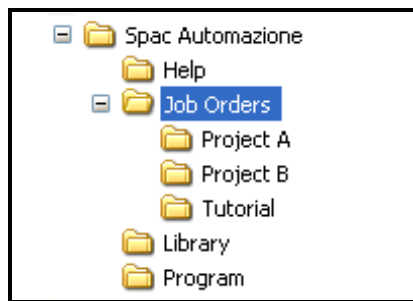

This directory stores all the drawings (multisheets) created for a job order together with all other configuration and support files necessary for that design.



The Job orders Path must not contain any spaces or punctuation characters.



WARNING: If drawings are moved manually to other directories (or sub-directories), they will no longer be visible through the "Job order management" function.

Update Master Title Block

This command allows the modification of the data contained on the Master Title Block associated to the Multi-Sheet on the Job Order.

The function identifies the data contained on the attributes of the MASTER*.dwg blocks (Master symbol on Layer 0) and OPT-MASTER*.dwg blocks (accessory symbols) consenting the introduction of new values.


Introducing <Clear> on the "New Value" field, the attribute content is cancelled (select <Clear> using the right button of the mouse).

ATTRIBUTE	Current value	New Value
IMPIANTO1	Esempio di SPAC Automazione	
IMPIANTO2	Schema elettrico	
CLIENTE	SDProget Industrial Software S.r.l.	
CLIENTE-RIGA1	ITALY	
CLIENTE-RIGA2	www.sdproget.it	

On the Planimetric drawings (SPAC Start) are identified the attributes of the Planimetric Master blocks A4_ORIZ*.dwg, A4_VERT*.dwg, A3_ORIZ*.dwg, A3_VERT*.dwg etc..

Table of Job Orders

This function enables you to draw or export in file (XLS or CSV format), a list of all existing job orders. You must select the job orders to be processed and use this option to obtain either a list of specific job orders or a complete list of all those selected (recommended option).

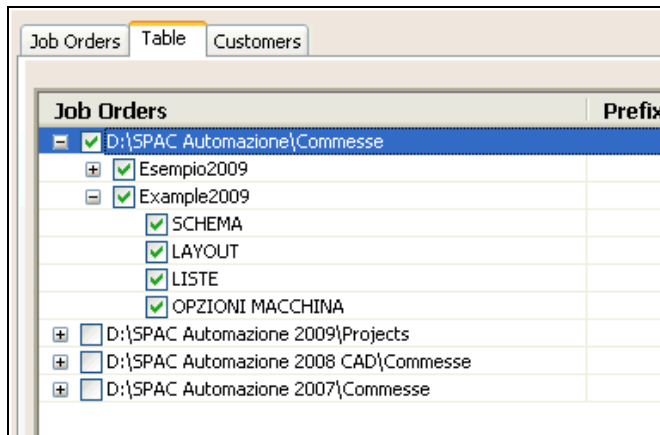

Only the selected job orders are then presented in a list with all the details available on the multisheets contained.

Table

By selecting **Table** you can continue the job order drawings in table form (parametric mode). The function requests parameters for the drawing (see Sect. 14.8).

By pressing **Default**, the current setting is saved in local mode (see Sect. 4.2) for later use. If confirmation occurs without pressing Default, the setting will be considered temporary and used only once. The function requests:

Select table insertion point:

350


Commissa	Descrizione	Cliente	Multifoglio	Descrizione Disegno	Disegnatore	Data
01-2000	Impianto in frazione CONDERA	FL. & Figlio	01-200001			20/04/2000 - 17:09
ESEMPID10	Commissa di Esempio	SDProget	ESEMPID10-01	Distribuzione e Potenza	S. Franchino	19/11/1999 - 12:51
		SDProget	ESEMPID10-02			20/04/2000 - 17:11
		SDProget	DISTINTE			20/04/2000 - 17:11
		SDProget	LAYOUT			20/04/2000 - 17:11
FR-01	Implantation a Porric (Bretagne)	Viking	FR-0101			20/04/2000 - 17:11

Example of job order table

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT).

 The setup process is the same as that described for table mode (see Sect. 14.8).



Enabling **File preview** the file is saved and then opened automatically.

Find functions

This function consents to search **a material code, a symbol name or even a component's ID** inside the Job Orders selected.

First, it is necessary to select the Job Orders to be considered during the search process; then, by clicking the **"Find"** button, you will see the next window:

Find

Find

☐ Material Code

☐ Component Label

☒ Symbol

KM1

Find

Results

Job Order	Multi-sheet	sheet
D:\SPAC Automazione\Commesse\Esempio2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Esempio2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Esempio2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Esempio2009	SCHEMA	19
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	10
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	10
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	14
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	14
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	14
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	12
D:\SPAC Automazione\Commesse\Example2009	OPZIONI MACCHINA	11
D:\SPAC Automazione\Commesse\Example2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Example2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Example2009	SCHEMA	6
D:\SPAC Automazione\Commesse\Example2009	SCHEMA	19

Job Orders: 145 Selected: 2 Results: 15 Without dbSpac.mdb: 14

Open Multi-sheet CSV File Cancel

Select the element you want to find by inserting the whole name (the "*" character is not accepted in this field). When you click on the **"Find"** button, all the data corresponding to the text inserted is displayed.

Clicking on the **"Open Multi-Sheet"** button, the Software opens directly the page with all the items found.



The search process is executed by processing the file dbSpac.mdb on the Job Order's folder.

For the Job-Orders without the dbSpac.mdb file, the search function is not enabled.

Customer management

Each job order is associated with a customer. This association enables automatic functions, like automatic title block insertion and related filling in of attributes with job order data, by running the command “4.1 Setup”. Moreover, initial setup can be set to coincide with each customer.

We shall now look at the procedures, in sequence, for entering a new customer:

1. Select **Customer** tabs to access the specific window.
2. Press **New**: enter the name of the new CUSTOMER.
3. Select in the list the **Functional Master Block**: select the most suitable one for the new customer (see “Master title blocks” Sect. 3.18).

Select in the list the **Planimetric Master Block** for sharing with customers Spac Start (the Planimetric Title block is not used by Spac Automazione).

4. Press **Change** (or **Associate** from the contextual menu) to access the specific window: select one of the data items available from the **Fields** List, then select from the Tag list the attribute of the title block with which you wish to associate it. To confirm, press **Save**.

Example of "Association of title block attributes".

Data is stored in the **Customers.mdb** file in the Librerie\Archivi directory.

If the attributes in the title block symbol are changed press **Update Tag Master**, this setting must be updated the same way.



The association remains valid for successive customers using the same Title Block.

Fields

New values can be inserted in the Field List. This is necessary when there are Tags that have not been associated.

If you intend to fill in several title block attributes directly in this phase (rather than setting them up on the drawing using the command “Ddatte”), a new field must be added, completed and associated with each Tag. *Example:*

Adding fields

Fields

Add Field

Customer (10 - Example)

Delete Field

Value

****Insert text****

Apply

Pressing **Add Field** accesses the option of adding new fields available for all customers; in the example opposite, the new "Customer (10 – Example)" field is generated and inserted in list.

All new fields are then displayed in the main “Customer management” window and are available for each customer and for all types of title block.

The added Fields must then be associated with a Tag, and the contents (Value) must be entered manually. The "Value" (different for each customer) are assigned to field by pressing the "Apply" button or <Enter> on the keyboard.



NOTE: It is not possible to delete fields associated with Tags. The relevant association must be removed first.

Certain system fields are fixe (the buttons Delete and Apply are frozen), their “Value” is retrieved automatically from Job Order and Multi-sheet data (these are completed automatically according to the names and descriptions associated with the job order and multisheet and they cannot be changed during the active working session).

Fields	Block/Attribute tag	Value
[-] Functional Master block	MASTER3	
... Customer	CLIENTE	SDProget
... Customer (1 - Products)	CLIENTE-RIGA1	Industrial Software
... Customer (2 - Location)	CLIENTE-RIGA2	ITALY
... Customer (3 - Address)		Via delle Industrie 8
... Customer (4 - City)		10040 Almese (TO)
... Customer (5 - Phone 1)		Tel. (+39) 011 934.66.66
... Customer (6 - Phone 2)		Fax (+39) 011 935.11.93
... Customer (7 - Email)		sdproget@sdproget.it
... Customer (8 - Website)		www.sdproget.it
... Customer (9 - Name)		
... Designer	DISEGNATORE	
... Job order description	IMPIANTO1	
... Job order name	COMMESSA	
... Multisheet description	IMPIANTO2	
... Multisheet name	NOME-FILE	
... Planimetric Master block		

Fields

Add Field

Customer (8 - Website)

Delete Field

Value

www.sdproget.it

Apply

Example of manual association of an additional field value.

Start settings

Each job order is associated with a customer (see “*Customer management*”), a start setting can be made to coincide with each customer.

When a customer is associated during the creation of a new job order, the function searches for a start setting saved under the same name as the customer, in order to propose it as a default setting. In any case, you may choose a different start setting from that proposed by the program.

The start setting stores not only the setting relating to the customer title block, i.e. dimensions, segments, position of sheet numbers (see Sect. 3.15), etc., but also all settings relating to symbols, numbering, terminals, tables (see Sect. 4.2), etc.

Aligned Customer and Setting

The example shows the customer *SDProget* aligned with the setting *SDProget*.

Customer	SDProget
Configuration	SDPROGET

This is the ideal condition under which to start a new job order. All settings are immediately configured according to the specific requirements of the customer.

Unaligned Customer and Setting

The example shows the customer *SDProget* and the setting (*Basic*).

Customer	SDProget
Configuration	[BASIC]

This condition enables a new job order to be started, but **not configured according to the requirements of the customer**.

This compels the user to check all settings on starting a new drawing.

The start settings are stored in files with INI extensions in the Librerie\Cfg directory. When a new job order is started, the start setting is automatically copied and stored in "local" mode.

The "local" setting is represented by the file **SPAC_cfg.ini** in the job order Cfg directory, so all changes made after setup remain in force only, and exclusively, for the current job order, leaving the Start settings unchanged.



To create new settings or to change existing ones, use the “**Export Settings**” (see Sect. 4.2).



The BASIC setup contains the settings which tend to be used most frequently. You may use this setting when starting job orders associated with "No Customer".



WARNING: When there is no start setting, the program uses its own default settings.

Job Order copy

This function enables you to **copy an existing job order**. A new job order directory is created (with contents identical to the one selected originally) with the address indicated in the **Job Order Path**.


Only the name of the "New job order" is requested, but it is also possible to change the description and the path.

Job Order sharing

When a directory shared on a network is configured as a **Job Order Path**, work may be carried out concurrently on the same Job Order from several stations.

Naturally, the job order must be broken down into several multisheets, as it is not possible to open the same drawing from several workstations at the same time:

- Each user may create new multisheets with due attention to page numbering.
- Each user may change the "local" setting, whilst the start setting is selected by the user who first created the Job Order.
- Each user may use the data contained in the multisheets opened by other users in read-only mode.

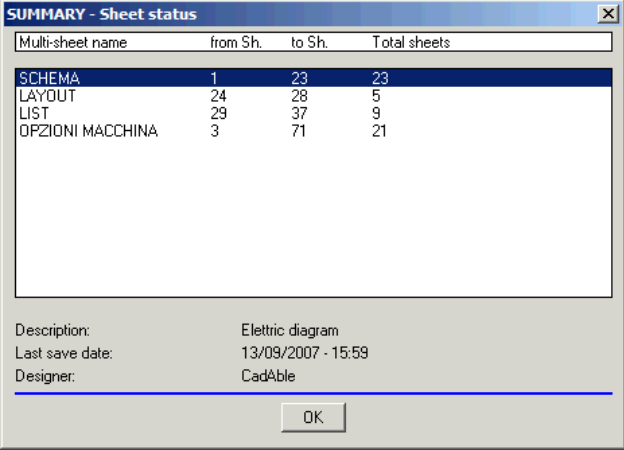

Multi-sheet name	from Sh.	to Sh.	Total sheets
SCHEMA	1	23	23
LAYOUT	24	28	5
LIST	29	37	9
OPZIONI MACCHINA	3	71	21

Description: Elettric diagram
Last save date: 13/09/2007 - 15:59
Designer: CadAble

OK

When a drawing is opened, the "**Multisheets in use**" list appears; this warning appears before each operational command.

The setting "Do not show this window in future" must be cleared every time you return to the drawing.



Identifies the **Multi-Sheet being use**.

It could be the current Multi-Sheet or a Multi-Sheet opened by a user that shares the Job Order folder.

To give a practical example, data relating to the "Internal bill of materials" (*see Sect. 8.3*) can be scanned even when all multisheets in the job order are opened by respective users (**data are taken directly from the last saved drawings "in use"**).

Once scanning (data collection) is complete, the "Internal bill of materials" presents the list complete with all information collected, and the table is easily drawn (even on sheets from the current multisheet).



The information collected might not be reliable or updated if the last saved drawings "in use" is not recent enough.

There are, however, certain restrictions which must be noted: for example, the "Internal bill of materials" enables information collected to be changed using the Edit function, but the changes made cannot be transferred to multisheets which are in use.

All the "Update" functions (involving drawing) are limited to multisheets that are not being used by other users.



Certain commands, such as "Print Sheets" (*see Sect. 3.16*), immediately warn the draftsman of multisheets being used by others, thereby excluding these sheets.



WARNING: The **Job Orders Path** must not contain any spaces or punctuation characters.

Job Order files

File Name	Ext.	Description
Job-Description	_Sp	Description of job order (backup copy).
Multisheet name	Dwg	Multisheet (CAD drawing).
DbSpac	Mdb	Database storing general job order data.
Job-Description	Csv	Job order descriptions in Ascii mode.
IdSymbol-List	Csv	List of component references in ASCII format.
Terminal-List	Csv	Index of panels, terminals and connectors.
CrossRef-Data	Crp	Cross-reference scan. Data_Save for saving changes.
CrossLine-Data	Crp	Real-time cross-reference scan.
CrossRef-E	Csv	Cross-reference output (-M, -R, -S, -X).
Cross Reference	Nav	File of errors for Navigator cross.
Tesys	Crp	Tesys U configuration (motor starters).
IdWires-List	Csv	List of wire numbers used in ASCII format.
Wiring-Internal	Cab	Internal panel wiring.
Wiring-Internal	Csv	List of internal panel wiring in ASCII format.
Wiring-Internal-Data	Crf	Scan cable and wiring connections (temporary BLK working file).
Loop-Diagram	Mdb	Scan loop diagram.
Cables-Used	Csv	List of used cables in ASCII format.
Cables-List	Csv	List of available cables in ASCII format.
Mcables-Data	Mdb	Scan cable module.
Materials-Data	_Ds	Scan internal bill of materials.
Last-Materials	Mat	List of last materials associated.
Last-Estimated	Mat	List of materials to be associated with the estimate list.
Materials-List	Dss	Export internal bill of materials.
Materials-List	Csv	List of internal bill of materials in ASCII format.
Wires-List	Dss	Export internal wire list.
Wires-List	Csv	List internal wire list in ASCII format.
SheetTitles-Data	Blk	Scan sheet titles.
SheetTitles-List	Csv	Output sheet title legend in ASCII format.
Revision-Data	Txt	General description of revisions.
Revision-List	Csv	Output Revision Legend in Ascii format.
Plc-List	Csv	Output PLC Legend in Ascii format.
UseType-List	Csv	Output Function Legend in Ascii format.
Panel-Data	Crc	Scan pushbutton panel layout (temporary BLK working file).
Find-Terminal	Crn	Navigator, scan terminals.
Find-Connector	Crn	Navigator, scan connectors.
Find-LYBlock	Crn	Navigator, scan layout symbols.
Find-Block	Crn	Navigator, scan components.
IgnoredSymbol-List	Csv	ASCII file of "Ignore symbols" list.
NotAssign-Usage	Csv	List of terminals without usage (during automatic assignment).
Drawing-Check	Csv	ASCII file of errors (Sp_Verif).


3 Sheet management

3.1 Create multisheet



Pop-menu > *Sheets*

This command is used to create pages within a drawing. This function runs automatically after creating a "New Multisheet" using the "2.5" command.

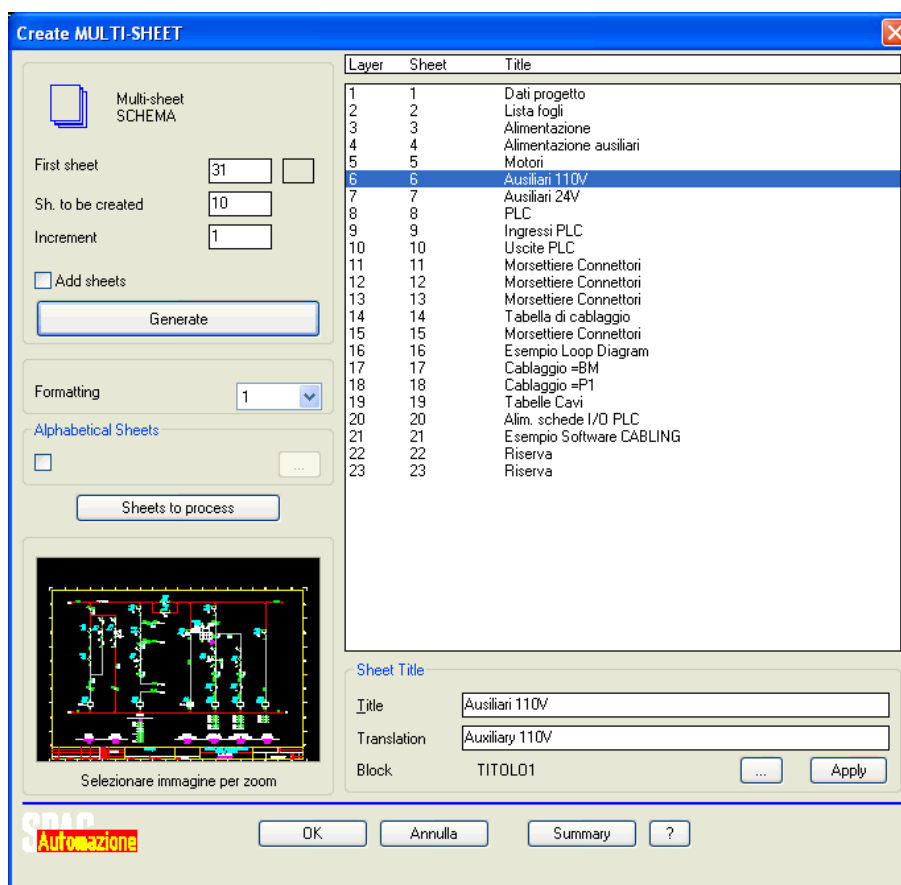

Example of multisheet page generation.

Enter the approximate number of sheets required for the current multisheet under the "Sheets to Create" item in the dialogue window. The system automatically prompts the starting number in the "First Sheet" box. This number can be changed as required (the system prompts number 1 for the first multisheet in the job order, with subsequent sheets numbered according to the sheets already created).

Press "Create" to confirm and obtain a drawing in which the number of layers is equivalent to the number of sheets to be created (in addition to layer 0). The command can be repeated to add more new groups of sheets.

In the example shown above, when **Create** is pressed, 10 new sheets will be created, from number 31 to number 40 (with Increment = 1).

With **Increment** = 2 in the previous figure, 10 new sheets would be generated starting from number 31 to number 49 (31, 33, 35 ...).

Add Sheet

The **Add Sheet** command has been integrated in command “3.1”. It can be used to increase the number of sheets in the current multisheet and to add intermediate sheets, which are associated with alphanumerical names (number followed by a letter).

If **3A** is set, as shown in the example, **a new intermediate sheet is created between 3 and 4** (as usual by pressing Create).

3A, 3B.... 3Z are, consequently, all diagram sheets which the program considers to be inserted between sheets 3 and 4.

To add (non-intermediate) sheets at the end of the current multisheet, simply enter the number that immediately follows the last existing page and remove the additional character.



(See “3.6 Delete sheet”).

Formatting

Is used to set the number of characters (4 max.) for the sheet number.

The configured format is used by all commands.

1	No. 1, 2, 3 ... 10, 100 etc.
01	No. 01, 02, 03 ... 10, 100 etc.
001	No. 001, 002, 003 ... 010, 100 etc.
0001	No. 0001, 0002, 0003 ... 0010, 0100 etc.

Literal Sheets

The software allows sheet name change by simply using a list contained in an external file.

Activating the function “Literal Sheets” activates the search button “...” to choose files with an .ini extension.

Layer	Sheet	Title
1	Info1	Project Information
2	Info2	Index
3	PS1	Power Supply
4	PS2	Auxiliary circuit power supply
5	MT1	Motors
6	Aux1	Auxiliary 110V
7	Aux2	Auxiliary 24V
8	TS	PLC
9	Inp	PLC Input
10	Out	PLC Output

Example of transformation into Literal Sheets.

[SHEET_CONVERSION]

1=Info1

2=Info2

3=PS1

...

No Sht = Literal Name

Example of configuration file for Literal Sheets.



Setting up of “Literal Sheets” should only be used when absolutely necessary, thereby avoiding conflict with other program settings.

 
The sheet conversion file content is used in the condition it is found in.



WARNING:

Keeping the ini conversion file in the job order folder is recommended. If the file is moved (or lost) the sheets convert back to the original layer name.


Select Image for Zoom



By clicking on the preview image, the picture is magnified and offers a display check option. The – and + buttons reduce and increase the magnification factor.

The **Reset** button restores the default values.

The sheet preview image depends on “Sheet Preview” under “3.2 Change sheet”.

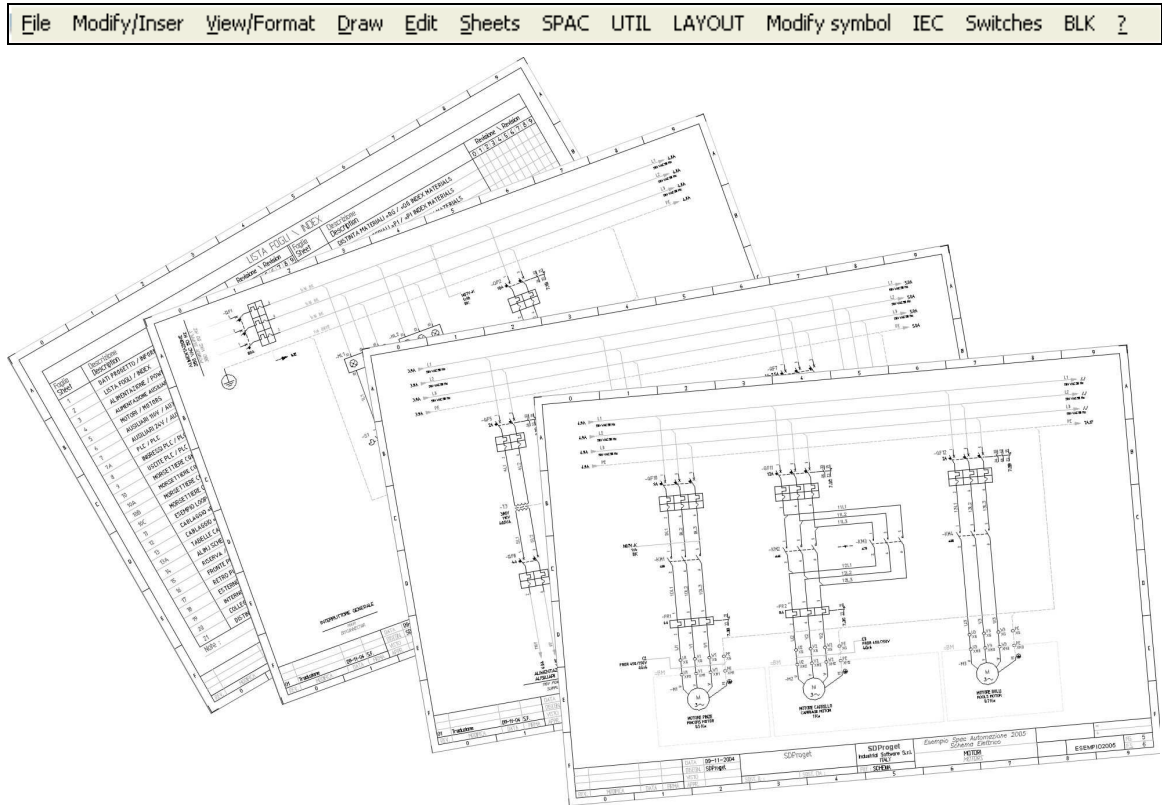

The Multisheet



The group of drawings and documents belonging to the same job order are considered by the program as belonging to the same job order.

Therefore the job order is a folder containing all necessary files in order to create specific electrical documentation.

The most important job order files are undoubtedly the drawings (files with extension dwg), each drawing file is identified by the multisheet name.

Sheets processing

It is a configuration that allows the user to **indicate which pages must be really be considered when processing** the various commands.

Current Configuration	FILTER 01	Cross Reference Sh. 01-15	▼
Configuration Name	FILTER 01		
Description	Cross Reference Sh. 01-15		
	Add	Change	Delete

This function can exclude sheets when the user intends to exclude all the pages of a multi-sheet and it is best to use directly the parameter **“Manage during processing”** (this states if the multi-sheet is processed or not by the various commands).

☒ To manage during processing	 (See <i>“New Multisheet”</i>).

With this configuration of “Sheet Processing”, it is possible to act in a detailed way inside the various multi-sheets.

Add

Used to store to memory a new configuration (**filter**).

Each filter consists of two lists:

- *List of enabled commands*
- *List of sheets to be processed*

☒ Activate Sheet to process use

In the **“Current configuration”** list, all stored filters are available, press **“Activate Sheets Processing”** to enable the desired filter.

☒ Activate Filters message

It is advisable to activate warning messages.

(The warning window “Filters Activated” appears each time a command in the list of “Enabled Commands” is called).

Change

Pressing “Change”, the variations made to the two lists are applied to the current configuration.

Delete

Used to delete the current configuration.

The filter configurations are stored to “local” memory in the **Spac_cfg.ini** file contained in the Cfg folder of the job.

List of Enabled Commands

The list is built by selecting a command “Available” and by pressing the “Add” key.

Comandi Disponibili		Comandi Abilitati
Cross Reference	Aggiungi >	Cross Reference
Distinta dei Fili e dei Cavi		
Distinta Materiali	< Togli	
Elaborazione CAVI		

The sheet filter is only applied to the enabled commands

It is best to keep the “Filters Activated” warning setting enabled

List of sheets to be processed

The list is built by selecting the sheets (the sheets to be taken into consideration by the command scan) and by pressing the “Add” key. The selected sheets are placed in the following list.

Multi-sheet	Sheet	Title
SCHEMA	1	Dati progetto
SCHEMA	2	Lista fogli
SCHEMA	3	Alimentazione
SCHEMA	4	Alimentazione ausiliari
SCHEMA	5	Motori
SCHEMA	6	Ausiliari 110V
SCHEMA	7	Ausiliari 24V
SCHEMA	8	PLC
SCHEMA	9	Ingressi PLC

☒ Activate Sheet to process use ☒ Activate Filters message

- Delete**

Pressing “Delete”, a sheet is cancelled from the list.

Pressing “Change”, the variations made to the two lists are applied to the current configuration.
- Empty**

Used to cancel all the sheets on the list.

The list of sheets to be processed is used only for “Enabled” commands. For “Un-enabled” commands scanning is performed normally on all sheets.

Press “Activate Sheets Processing” to enable the desired filter.



Use of “Filters for Sheets to be processed” is a function for expert users.



WARNING:

It is best to always keep a copy of the **Spac_cfg.ini** file (found in the Cfg folder of the job).
If the file is not delivered with the project, tracking of the filters used for processing is lost.

Sheet title

Sheet Title

Title: ...

Translation:

Block: ... Apply

A title can be associated with each sheet in the job order. Titles consist of symbols which are selected by pressing the "..." button.

To insert a title, first select a sheet number from the list, then enter the relative description in **Title**. To confirm, press either **<Enter>** from the keyboard or **Apply**. Existing titles can be changed in the same way.

Pressing the "..." button opens the title list used in the job order. You can also access phrases from the translator dictionary directly.

Impianto	Commissa di Esempio Schema Elettrico (Simbologia IEC)	Ordine
Denominazione	ALIMENTAZIONE AUSILIARI AUXILIARY CIRCUIT POWER SUPPLY	Commissa
		Esecutore

The normal Windows Copy and Paste functions (Ctrl+C and Ctrl+V) can be used to insert identical titles.

Titolo1 is used for managing translations.

Example of TITOL00.dwg symbol application

Sheet titles (and translations, where applicable) are summarized in drawing tables using the "Sheet legend" command (see Sect. 14.1). No additional attributes or Tags can be managed other than those indicated.



Sheet title symbols can also be inserted manually using the corresponding "Sheet title" command (see Sect. 3.18).

Summary

This option enables you to see the multisheet "sheet situation" in the current job order. It is also used to check whether there are any **multisheets "in use"** by other users (see Sect. 2.5 "Job Order sharing").

Summary

Multi-sheet name	.From Sh	.to Sh	Total Sheets	
ELECTRICAL DIAGRAM	1	30	30	Current
LAYOUT	31	37	7	
LIST	38	50	13	
OPZIONI MACCHINA	3	71	21	

Description: Schema Elettrico
Last save date: 16/02/2009 - 15:32
Designer: M.C.

Current Multi-sheet

Job Order
Job Order Total sheets: 71

OK

In this example, the job order comprises 4 multisheets.


The highlighted one is **currently** being worked on.

3.2 Change sheet



Pop-menu > **Sheets**

This command enables a sheet from the current job order to be displayed quickly, whichever multisheet it belongs to; it can be called up from the keyboard by entering the "F" command.

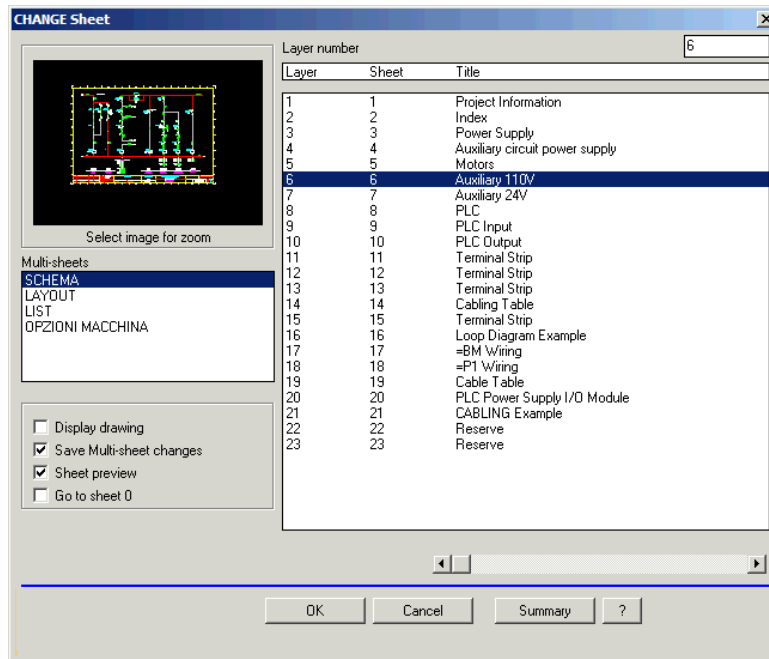

Enter the number of the desired sheet or select it from the sheet list relating to the multisheet shown at bottom. If the sheet in question belongs to a multisheet other than the current one, check the status of the **"Save Multisheet Changes"** option. If this is enabled, the system will save the current drawing before loading the multisheet file that contains the desired sheet (this option is enabled by default).



Summary (see Sect. 3.1).



Change by Cross (see par. 7.6).


The system displays a preview of the destination sheet. This function uses an .SLD file (slide) resident in the Slide directory in each job order directory. These images are automatically generated by the "Change sheet", "Next sheet" and "Previous sheet" functions, i.e. a snapshot of the first page is taken when moving from one sheet to another.

If the image box is empty, or the image is obsolete, a request can be sent to update all the slides in the .SLD files, using the **"Sheet slide"** command (see Sect. 3.18).

Select

Click on preview image to magnify and enable the display check function. Use – and + to reduce and increase the magnification factor.

 Image for zoom



The **Reset** button restores the default values.

Go to sheet 0

Select this item to move directly to sheet 0 of the current multisheet, to edit drawing constants (e.g. title block or logo) or to create new blocks.

To move to sheet 0 of a different multisheet, you must first access the multisheet that contains it.

Display layout only

This function optimizes framing (zoom on sheet) in relation to the co-ordinates defined in **"Sheet Dimensioning"** configuration (see Sect. 4.2.) to make the best use of monitor dimensions.

Sheet preview

This can be used to disable the preview image (slide) of the sheet selected, in order to speed up the procedure.

This parameter also affects the "Previous sheet" and "Next sheet" commands, which, under normal conditions, create and update the slide image at each sheet change.



WARNING: Text styles which use the **TTF** character fonts often slow down the sheet change process. The **Sheet Preview** function should therefore be disabled when these text styles are used.

3.3 Next sheet



Pop-menu > *Sheets*

This command is used to move to the next sheet. It can also be enabled by pressing **+** on the keyboard.

Intermediate sheets are considered to be sequential, for instance, 3, 3A and 4; in case of any missing sheets, the command jumps to the next available sheet. "Next Sheet" cannot be used to jump from the last sheet of the current multisheet to the first sheet of the next multisheet. In this case, a warning message is displayed.



(See "3.4 Previous sheet").



WARNING: The keyboard command **"+"** cannot be repeated by pressing **<Enter>**. The command can only be repeated by entering **"_+"**.

3.4 Previous sheet



Pop-menu > *Sheets*

This command is used to move to the previous sheet. It can also be enabled by pressing **"-"** on the keyboard.

Intermediate sheets are considered to be sequential, for instance, 4, 3A and 3; in case of any missing sheets, the command jumps to the previous sheet available. Previous Sheet can be used to jump from the first sheet of the current multisheet to sheet 0.



(See "3.3 Next sheet").

3.5 Last sheet



Pop-menu > *Sheets*

This command is used to return to the sheet used before the current one.

"Last Sheet" can operate to pass through sheets belonging to different multisheets, and in this case this warning message appears: **"Save when you change multisheet"**. By clicking on **"Yes"** the current drawing is saved before the multisheet file containing the page required is loaded.



(See "3.3 Next sheet").

(See "3.4 Previous sheet").



You can recall the function quickly by keying in the command **"FB"**.


3.6 Delete sheet



Pop-menu > *Sheets*

This command is used to **delete sheets** from the current multisheet.

From the list of sheets present in the multisheet, choose the sheet to be deleted. Multiple choices can be made to delete several sheets at the same time.

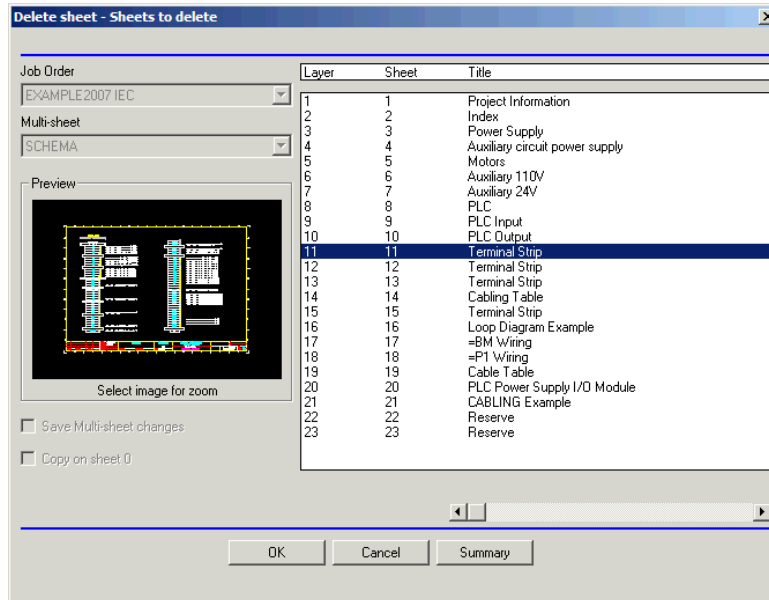

Before removing a sheet, the command asks for confirmation.

To restore a page just deleted use the command “Cancel”.

If a multiple choice is used (several sheets chosen), the command asks for confirmation for each individual removal.

By answering “No” to the question “Do you want to confirm deletion for each sheet selected?”, the next confirmation (“Are you sure?”) is valid for all sheets.

To delete a page quickly double click on the page number to be deleted and confirm the operation. Go back to the previous sheet if you have deleted the current worksheet.

You cannot delete “Sheet 0”.



(See “3.5 Last sheet”).



Note that this command does not “clear” the page content, but physically removes the drawing file.



WARNING: The “Cancel” command does not allow you to restore pages after closing a Multisheet.

3.7 Shift sheet



Pop-menu > *Sheets*

This command is used to **shift the entire contents of all pages**, starting with the highlighted sheet, onto previous or subsequent sheets.



- Shift **Forwards**
- Shift **Backwards**
- **Checking**

The current sheet is the first to be shifted, by default. The user must specify the first sheet to shift. Shifting affects all subsequent sheets.

The number of positions indicates by how many sheets the contents of drawings must be shifted.

Caution is necessary when using this function, as it changes page numbers.

Forwards

This parameter defines the type of shift. Assuming 5 sheets numbered from 1 to 5:

1	2	3	4	5

Shift forward by 1 position from sheet 1 to obtain:

2	3	4	5	6

System prompts creation of empty sheet No. 1

1	2	3	4	5

Shift forward by 10 position from sheet 3 to obtain:

1	2	13	14	15

System prompts creation of empty sheets Nos. 3 to 12



Any missing sheets are not compressed during forward shifts and are considered empty sheets.

In the following example, there are 4 missing sheets:

1	2	3	4 Shts	8

Shift forward by 1 position from sheet 3 to obtain:

1	2	4	4 Shts	9

System prompts creation of empty sheet No. 3

Backwards

This parameter defines the type of shift. Assuming 5 sheets numbered from 11 to 15:

11	12	13	14	15

 Shift backward by 1 position from sheet 11 to obtain:

10	11	12	13	14

System prompts creation of empty sheet No. 15

In this case (from sheet 11) it is not possible to carry out a backward shift by more than 10 positions (max. up to sheet 1).



Any missing sheets preceding the sheet to be shifted are compressed; subsequent sheets are not compressed.

In the following example, there are 4 missing sheets:

1	2	3	4 Shts	8

 Shift backward by max. of 4 positions from sheet 8 to obtain:

1	2	3	4	5

System prompts creation of empty sheets from Nos. 6 to 9

In the following example, there are 2 missing sheets in 2 positions:

1	2 Shts	4	2 Shts	7

 Shift backward by max. of 2 positions from sheet 4 to obtain:

1	2	2 Shts	5

System prompts creation of empty sheets Nos. 6 and 7

Checking

After executing the "Shift sheets" command, check the state of the document:

You must repeat command "**3.15 Number**", If positional symbol references have been used, these must be updated (*see Sect. 4.7*); likewise, wires with a prefix the same as a page number must also be renumbered (*see Sect. 4.2*).

If cross-referencing has already been run, it must always be repeated (*see Sect. 7.1*).



Summary: (*see Sect. 3.1*).



Check the contents of all pages for which page number has altered and restore any references to page numbers.

3.8 Store sheet



Pop-menu > *Sheets*

The Store Sheet command is used to handle and store sheets containing duplicate drawings, so that these can be reused as and when required, even in different job orders.

Use command “**3.9 Insert stored sheets**” to retrieve a stored sheet.

Name	Classification	Description
ES-0001	POWER FEED	General power feed
ES-0002	POWER FEED	Auxiliary power feed
ES-0003	POWER	Motors
ES-0004	AUXILIARY	110V Auxiliary
ES-0005	AUXILIARY	24V Auxiliary
ES-0006	PLC	Input type 1
ES-0007	PLC	Output type 1
ES_JIC-0001	POWER FEED	Power Supply
ES_JIC-0002	POWER FEED	Auxiliary Circuit Power Supply
ES_JIC-0003	POWER	Motors
ES_JIC-0004	AUXILIARY	Auxiliary 110V
ES_JIC-0005	AUXILIARY	Auxiliary 24V

Current sheet: 1 ☒ Entire sheet

File name: ES-0004

Description: 110V Auxiliary

Classification: AUXILIARY

Class. List: AUXILIARY

Buttons: Change, Delete, Select <, Store, Annulla, Save changes, ?

Sheets which do not contain any processed data or wire and terminal numbers should be stored, so that they are completely neutral and can be used as master sheets. **Master** can also be used as the name of a file in which to classify and store these neutral sheets.

The command affects the current sheet (shown highlighted).

Whole sheet

"Whole" is used to store the entire contents of the current sheet, except the title block and other entities on sheet 0. The symbol containing the sheet title is also stored, while page numbers are automatically excluded.

Use "Select <" to define the parts of the current sheet to be stored, except the title block and other entities on sheet 0, which are discarded in any case.

"Select" can only be enabled when "Whole" has been disabled.

File Name



Key in the name of the sheet to be stored (max 20 characters) with its description, the sheet is stored in .dwg format in the sheet folder.

Pressing the “...” browse key it is possible to set a sub-folder of Library\Sheets.

Description

When the drawing is saved, the related image displayed during insertion is also stored (in an .SLD file).

Classification

The classification is a name (15 characters max.) that may be used to divide the sheets in the database into various groups, in order to facilitate the search process.

Classification List

When entering data concerning a sheet to be stored, the user should scroll this list to select the name of the classification directly from the existing list of names.

Change	Change the description and group to which it belongs by pressing the Change button. All changes are only effective when confirmed with the "Save changes" button.
Delete	Use this function after selecting the sheet to be deleted from the list of existing sheets. The file is only deleted after confirming with "Save changes".

When clicking on "Save" or "Save Changes" the contents are updated in the [Lista.dat file](#).



The asterisk (*) indicates sheets which are present in the Lista.dat file but not in the Fogli directory.

Lista.dat file

As explained previously, this file contains all information concerning stored sheets. The structure of the file is illustrated below:

```
("SHEET1" "CLASS A" "Distribution")
("SHEET2" "CLASS B" "Motor power")
```

Each time data are stored, the system creates a new record, consisting of 3 fields: File name, Classification and Description. Data can also be edited manually, providing the above syntax is maintained.



WARNING: If the **Lista.dat** file is removed, the list of stored pages is set to zero.

Sheet classification

Classification is essential to ensure that pages stored periodically are classified in an orderly manner. This parameter can be used to display only certain classes during the operation, to facilitate the search for the sheet required.

Example of classification according to machine type:

Interlocking	All pages (power and auxiliary circuits) relating to interlocking circuits.
Machining	All pages (power and auxiliary circuits) relating to machining circuits.
Load shedding	All pages (power and auxiliary circuits) relating to load shedding circuits.
Etc.	

Example of classification according to type of drawing:


Sheet0	Customized master title block sheets to be inserted on 0 sheets.
Distribution	Power feed distribution sheets.
Power	Sheets with motor starters and power feeds in general.
Auxiliaries	Auxiliary circuits and PLC diagrams.
Single-feed	Single-feed diagrams.
Etc.	

3.9 Insert stored sheets



Pop-menu > *Sheets*

This command is used to **access the stored sheets database with “3.8 Store sheet”**, in order to open these and insert them in the relevant worksheets.

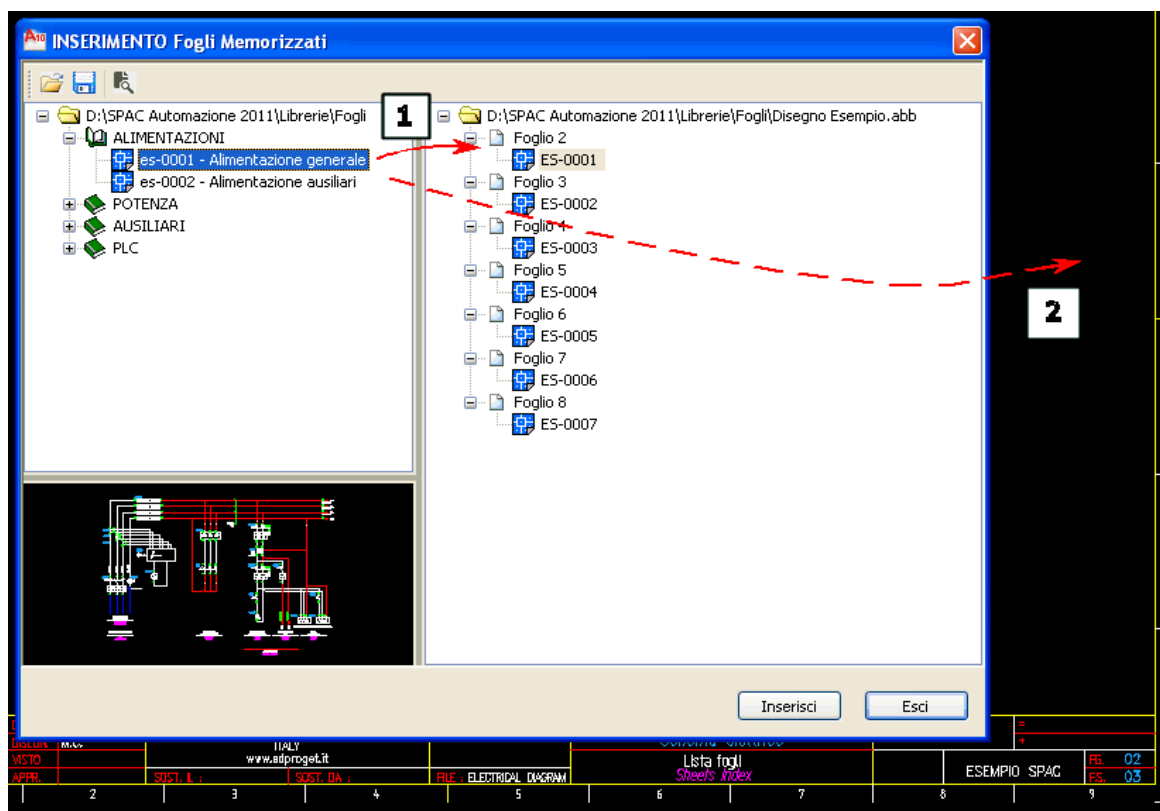

The list of saved sheets is presented sorted by classification. When a Sheet is selected it can be associated using a **Drag&Drop on the destination page** as indicated on point **1** in the previous figure.

It is possible to use Drag&Drop several Sheets in the same destination page.

The list of pages to be designed is obtained repeating the previous steps to “associate” Saved Sheets to Destination Sheets. The resulting list can also be saved.

If it is required to insert only one Sheet it is better to use the **Drag&Drop on the drawing**, as indicated on point **2** of in the previous figure.

It is required to define the insertion point coordinates of for the direct introduction of the saved Sheet on the drawing, (the source position corresponds to 0,0).

Press OK – Insert to confirm. A prompt requests the method of insertion in associated sheets:

Replace	The entities on the sheet where the new one is to be inserted are automatically removed to make room for the new sheet.
Add	The entities on the sheet where the new one is to be inserted are not removed and the new sheet overlaps existing contents .
Keep Cross-Ref.	The stored sheet is inserted with or without registration references. This function is useful when inserting a sheet that was stored after cross-referencing.
Keep wire numbers	The stored sheet is inserted with or without wire numbers. This function is useful when inserting a sheet that was stored with normal or automatic wire numbering.
Keep Sheet Titles	The stored sheet is inserted with or without the symbol Sheet Title.

Save Association

The current composition (that is the association of Saved Sheet and Destination Sheet) is saved with the defined name in a file with .ABB extension by pressing the “**Save**” button. The file is located by default on folder Librerie\Fogli

Open Associations

The composition created previously is loaded pressing the “**Open**” button (associated file .ABB).

The Sheets that are eventually present on the composition (ABB) but not in the current Multi-Sheet are created automatically.

3.10 Explode (Boom)



Pop-menu > *Sheets*

This command enables a block (or a stored sheet inserted without the "Explode (Boom) on sheet" option) to be exploded whilst keeping it on the current layer, unlike the "Explode" command, which brings exploded entities onto the original layer on which they were created (usually Layer 0).




WARNING: If the Explode command is used incorrectly exploded entities are displayed concurrently on all sheets. Use command “[3.13 Move between sheets](#)” to restore the original condition and transfer the entities concerned from sheet 0 to the correct destination sheet.

3.11 Split multisheet



Pop-menu > *Sheets*

This command is used to create an individual file for each sheet in the current multisheet. These files are created in either **DWG** or **DXF** format depending on the AutoCAD version.

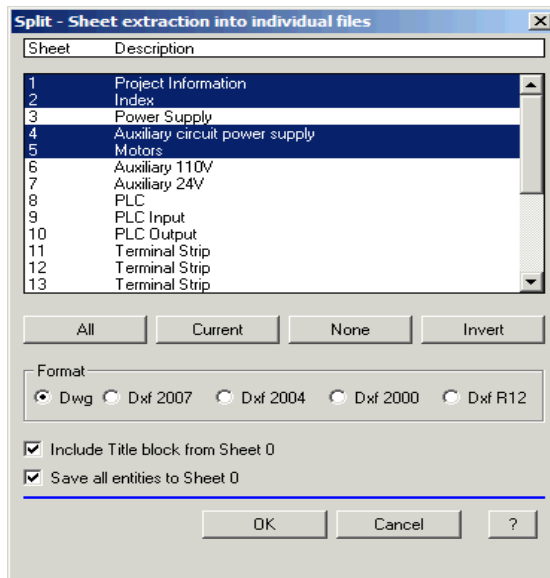

See **Unsplit**.

To create a customized list of the sheets to be extracted, select these from the list of sheets in the current multisheet.

Use **All** to select all sheets in the current multisheet.

Use **None** to remove all sheets to be processed from the extract list.

Include Sheet 0 Title Block option is used to save sheets complete with title blocks (on sheet 0).

If **Save all entities to Sheet 0** is enabled, the title block and all entities on the sheet are extracted to an individual layer 0 (recommended).

Extracted files (DWG and DXF) are placed in the SPLIT directory located under each job order directory, and the following check prompts are displayed:

Sheet 1 saved in ... \SPLIT\1.DWG (200x)
Sheet 2 saved in ... \SPLIT\2.DWG (200x)
Sheet 4 saved in ... \SPLIT\4.DWG (200x)
Sheet 5 saved in ... \SPLIT\5.DWG (200x)

Each newly extracted file replaces any files extracted previously, without further prompts.



WARNING : Individual files extracted using this procedure contain graphic representation, but not all hidden information stored in the original multisheet. In case of

Unsplit you don't get back a file equivalent to the original.

Original multisheet must be preserved always.



When "Save all entities to Sheet 0" is disabled, each DWG file comprises 2 layers: the original layer with the sheet number and the 0 layer, which is always present, whether the sheet is empty or contains the title block.

Unsplit




Pop-menu > *Sheets*

Operates in opposition to “3.11 Split multisheet”, that extracts individual pages of the multisheet to individual dwg or dxf drawings, saving them in Job Order folder named Split.

Unsplit lets you rebuild a multisheet importing individual files, whose location is chosen pressing button “...”.

Unsplit doesn't check file content, in case more than one file you are going to import was saved (during Split) with option “**Include sheet 0 master title block**”, you get as many master title blocks overlapped as these files are (one per page).

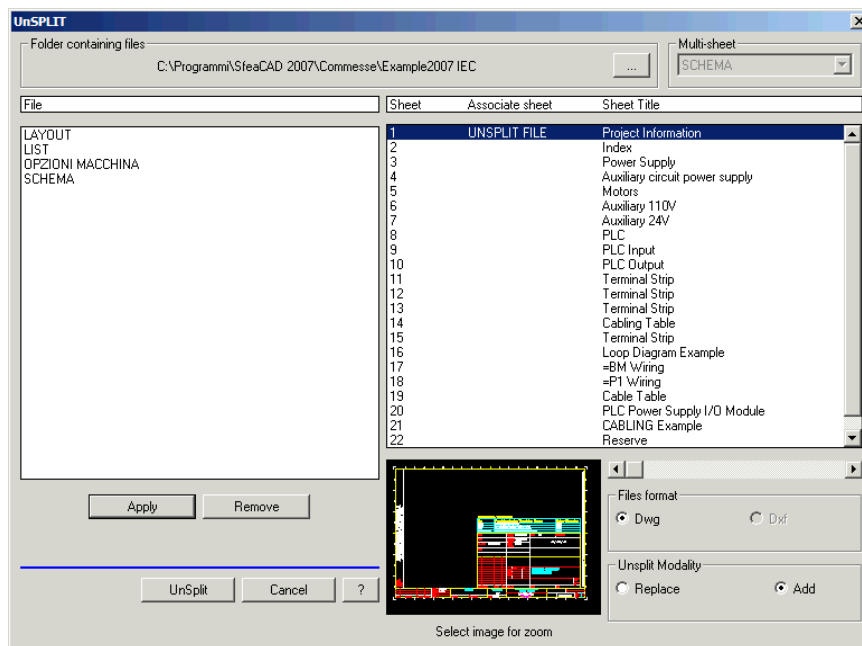

To create the multisheet you have to associate individual files to available sheets:

- Associate**
1. Select the chosen file from the list (to the left).
 2. Select the page you want to associate it with (list to the right).

The two are then associated by pressing “**Associate**” the function shows the association between the file and the folder available in the column “Sheet associated”.

- Associate Multiple**
- You can also associate a multiple selection to add several files at the same time:

1. Select the chosen files from the list (to the left).
2. Select the starting page, from which to start adding the chosen files:

The two are then associated by pressing “**Associate**”.

- Remove**
- To cancel association press the “**Remove**” button.

- Preview**
- Allows you to preview the content of a dwg file.
- The left mouse button zooms between 2 chosen points.
- The scroll button performs the zoom In and zoom Out function.
- The right mouse button gives the current view (pan).

The function only works on sheets belonging on the current multisheet worksheet.

Once the composition has taken place (between individual files and available folders) you need to set the “Unsplit Mode” valid for all pages added:

Replace	What is present on the sheet involved is removed to make room for the new sheet automatically (including sheet number and title).
Add	What is present on the sheet involved is not removed, file content will be placed over existing drawing parts.

This function is launched by pressing “Unsplit”, the **files are added to the associated pages in the mode chosen**.



The individual files (Dwg e Dxf) used for associating are kept in the original folder, in which the file Last_Unsplit.csv is generated containing the list of associations carried out.



WARNING : Individual files extracted using “3.11 Split multisheet” contain graphic representation, but not all hidden information stored in the original multisheet.

Unsplit doesn't create a file equivalent to the original.

3.12 Copy between sheets



Pop-menu > *Sheets*

This command is used to copy objects from one sheet to another.

Variable position

In this case, the positions of the objects on the destination sheet are to be different to that on the starting sheet.

After choosing the items to be copied you need to indicate the sheet they are to be copied to (you can do multiple selections to copy on several sheets at the same time).

Indicate the starting point with your mouse and then the destination on the chosen page:

First point of movement:

Destination point:

In the case of multiple selection (several destination sheets selected), the command is cyclical for all the following sheets.

The “Variable Position” copy type only works on sheets belonging to the current multisheet.

Fixed Position

This is the case when the items on the destination sheets must be copied to the same position as the starting one.

After choosing the items to be copied you need to indicate the sheet they are to be copied to (you can do multiple selections to copy on several sheets at the same time).

To copy quickly, double click on the destination page number.

If the destination sheet (where the copy is going) belongs to a multisheet that is not the current one, you must check the status of the “**Save at multisheet change**” option:

☒ Save Multi-sheet changes

If active, the current drawing is saved before the multisheet file where the chosen page is resident is loaded (by default).



You can only copy between sheets belonging to different multisheets by using “Fixed Position”.

3.13 Move between sheets



Pop-menu > *Sheets*

This command is used to move selected entities from one sheet to another.

Select the entities to be moved and then specify the destination sheet. Use the mouse to indicate the starting point and then the destination point on the selected sheet:

First shift point:

Destination point:

To move quickly, double click on the destination page number.

The function only affects sheets belonging to the current multisheet.


3.14 Clear sheet



Pop-menu > *Sheets*

Select this command to delete the entire contents of a sheet, including sheet number and related title symbol.

From the lists of sheets present in the multisheet, choose the sheet to be cleared; you can make multiple choices to clear several sheets at the same time.

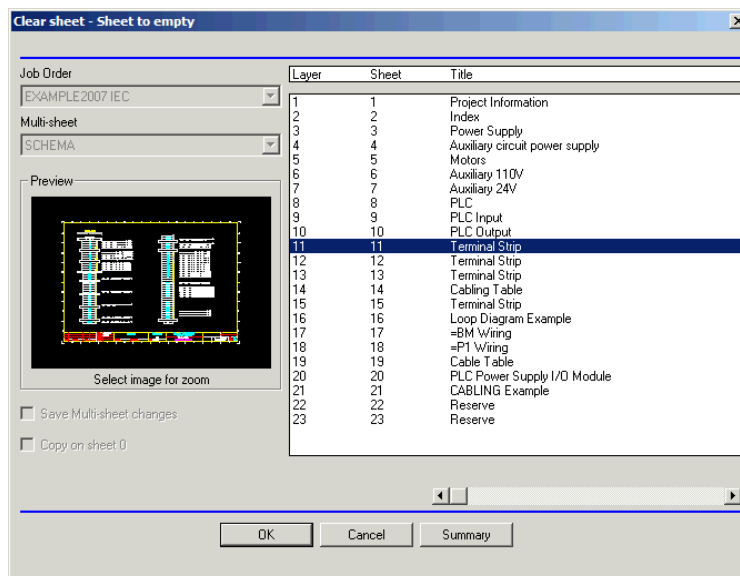

Before “clearing” a sheet, the command asks for confirmation.

To restore a page that has just been cleared, use the “Cancel” command.

In the case of multiple choice (several sheets chosen), the command suggests confirming each time.

By responding “**No**” to the question “*Do you confirm the clearing operation for each individual sheet chosen?*”, the next confirmation (“**Are you sure?**”) is valid for all sheets.

If the page to be cleared should have no erasable parts the command answers with “Clear Sheet”. Therefore, the confirmation request means sure deletion of items.

To clear a page quickly, double click on the page number to be cleared and confirm.

The function only works on sheets belonging to the current multisheet.



Note that this command does not physically remove the drawing file pages but “clears” them of their content.



WARNING: The “Cancel” command does not restore the pages after a Multisheet has been closed.

3.15 Number sheets



Pop-menu > **Sheets**

This command is used to **number all sheets in the job order automatically**, via user-defined co-ordinates, for sheet number, next sheet number, previous sheet number and total number of sheets.

The dialog box is titled "Sheet NUMBERING". It contains several sections:

- Data:**
 - ☒ Sheet NUMBER
 - ☐ PRIOR to Sheet
 - ☒ CONTD on Sheet
 - ☐ TOTAL Sheets
- Data position:**
 - X: 408.5 Y: 22.5 Select < Height: 3
 - X: 382.5 Y: 30 Select < Height: 3
 - X: 408.5 Y: 17.5 Select < Height: 3
 - X: 382.5 Y: 15 Select < Height: 3
- Assign numbers:**
 - ☐ Sheet
 - ☒ Multi-sheet
 - ☐ Job order
- Options:**
 - Rotation: ☒ 0 ☐ 90
 - Total sheets: 71
 - ☐ Adds Multi-sheet prefix
- ☐ Delete sheet numbering

Buttons at the bottom: OK, Cancel, Summary, ?

Renumbering entails the substitution of previous page numbers, even if these are in a different position (only on drawings using 8.x or later releases).

Define a position for each item of data ("center" text) by configuring co-ordinates X and Y using the "Select <" button.

Text heights range from 2 to 10.



Summary: (see Sect. 3.1).

Rotation 0 – 90

Defines number orientation. The setup is common for all 4 data.

Total sheets

This value is only considered if the "Total sheets" number is enabled. The system prompts the highest existing sheet number.

Delete sheet numbering

Select this option to delete all existing sheet numbers. Renumbering automatically results in the replacement of existing data on drawings.

Sheet, Multisheet or Job order

This option is used to define whether "Sheet numbering" or "Delete sheet numbering" must be carried out on the current sheet only, on the current multisheet or on the entire job order (all multisheets).

Add prefixes

Inserts the multisheet prefix (see ""). In the following example, with prefix "A":



On: produces: **A1, A2, A3**, etc.



Off: produces: **1, 2, 3**, etc.

Numbering Examples

=		
+		
FG.	1	
F.S.	2	di: 15

ORDINE N./ORDER NO.	FOGLIO/SHEET
	1
COMMESSA/ORDER:	SEQUE/FOLLOW
	2
DISEGNATORE/DESIGNER:	TOT./SHEETS
	50

The color or style of numbers must be edited in the size 1 blocks called NUMFG, NUMFGP, NUMFGS and NUMFGT.dwg in the Symbols directory (these symbols have a center insertion point in cyan 4, Roman font and style).




This function is often called up automatically by the functions which require it, such as "3.1" or by the "Table" drawing command when new pages have been created.

3.16 Print Sheets



Pop-menu > *Sheets*

This command manages the **automatic sequential printing** of sheets belonging to multisheets from the same job order.

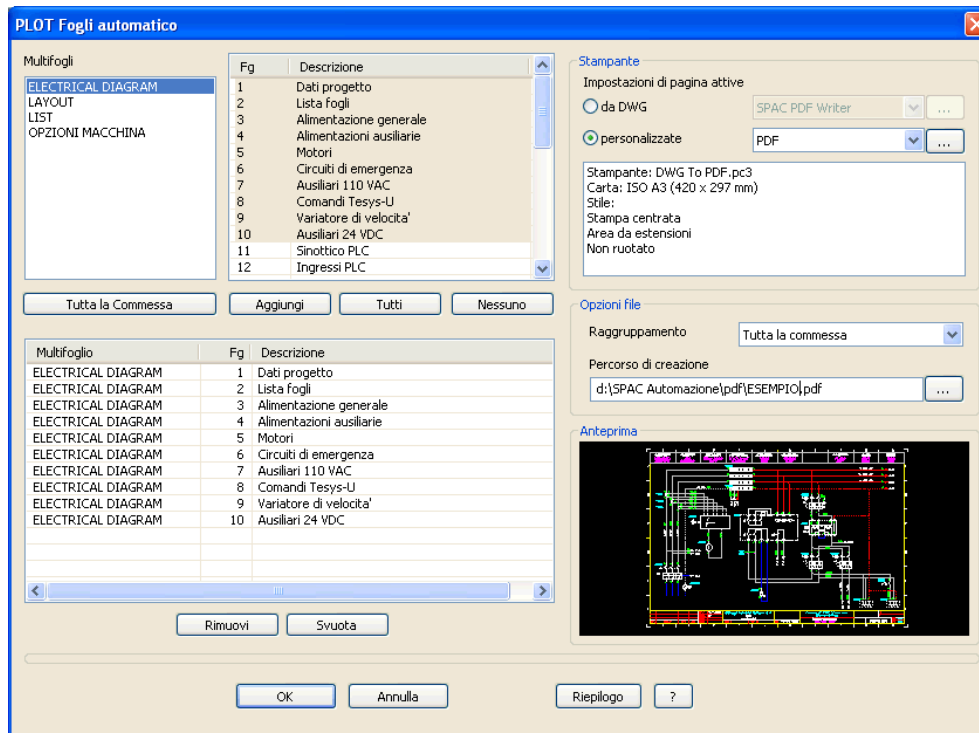

Summary: (see 3.1).

"All of the job order" can be printed directly (all sheets are automatically included in the list).

Alternatively, the list of sheets to print can be customized and the sheets required can be selected from the various multisheets. The following buttons operate on the multisheet sheet list:

- Add** To create a customized list of sheets to print, select a multisheet and highlight the list of sheets it contains. Click on the sheets required.
Press "**Add**" to include all the selected sheet numbers in the list of sheets to print. Repeat the procedure for each multisheet in order to obtain a customized print list.
- All** All sheets in the selected multisheet are highlighted. Press "**Add**" to include these in the print list.
- Delete** To delete previous selections.

The following buttons operate on the list of sheets to print:

- Remove** Removes selected sheets from the print list.
- Clear** Removes the entire list of sheets to be printed.


Press OK to save automatically the drawing before printing.



The system used to manage sheet images is that described for command "**3.2 Change sheet**". Use "**Sheet slide**" to handle obsolete or missing images (see Sect 3.18).

Print page setup

List of the page settings available for the automatic printing “Print Sheets”.

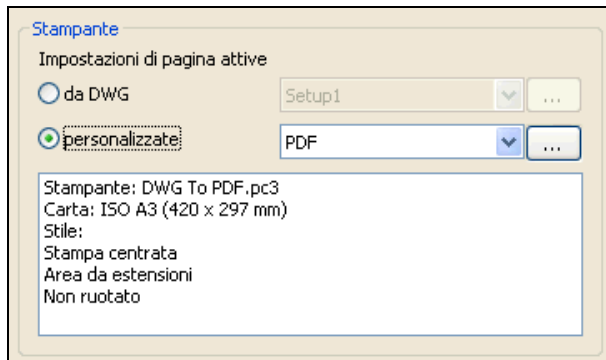


From DWG:

This is the list of the page settings memorized on the drawing.

It is possible to create or modify them with the AutoCAD command “**Page Settings Management**”, or pressing the “...” button (Browse).

Customized : This is the list of page settings memorized on SPAC.

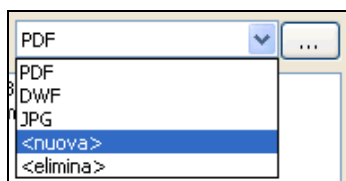

The PDF, DWF and JPG settings are fixed, it is not possible to modify or delete the print driver associated. It is only possible to edit pressing the “...” button (Browse).

To create a new “customized” setting, select the item **<New>** from the list.

DWG

These are the “Page Settings” for the classic AutoCAD printing.

It is possible to copy the settings from one drawing to the other.

Customized

These are the predefined settings for the printing in **PDF, DWF and JPG** file formats.

These settings are memorized on the file FilePlotStd.ini on the SPAC folder Program\utente\Settaggi.



To print with different line thickness, it is possible to associate the default configuration “SPAC Default.Ctb”.

Plot area

Extension

The valid print area is equivalent to the Zoom Extension command carried out on the drawing.

This is the most commonly used option in that it enables optimization of the print area on paper.

Limits

The valid print area is equivalent to the Zoom All command applied to the drawing.

Screen

The valid print area is equivalent to the current Zoom to the drawing.



WARNING: The Windows setting cannot be used.

If the default setting is Windows, **printing is aborted after the first sheet.**

Grouping

This functionality is enabled only for the printing of **PDF and DWF** file formats.

It consents to print the schemes in a single file (for the Job Order), in one file for each multi-sheet and in one file for single scheme.

Single Sheet The file name is managed automatically:

NameMultiSheet_NumberSheet.pdf (or dwf)

A Pdf (or Dwf) file is created automatically on the Job Order directory to store all the files created.

Multi-Sheet I The file name is managed automatically:

NameMultiSheet.pdf (o dwf)

A Pdf (or Dwf) file is created automatically on the Job Order directory to store all the files created.

Job Order The file name is proposed by default:

NameJobOrder.pdf (or dwf)


The file name and directory could be modified by the user.



Indicating an existing file name, it is possible to add the pages to the existing file or to overwrite the existing file.

Assign Pens

Each item in the drawing is associated with a color. Depending on the type of plotter, each color can be printed using a different pen and a different type of line and width. The software **features a default configuration, "Default.ctb"**.

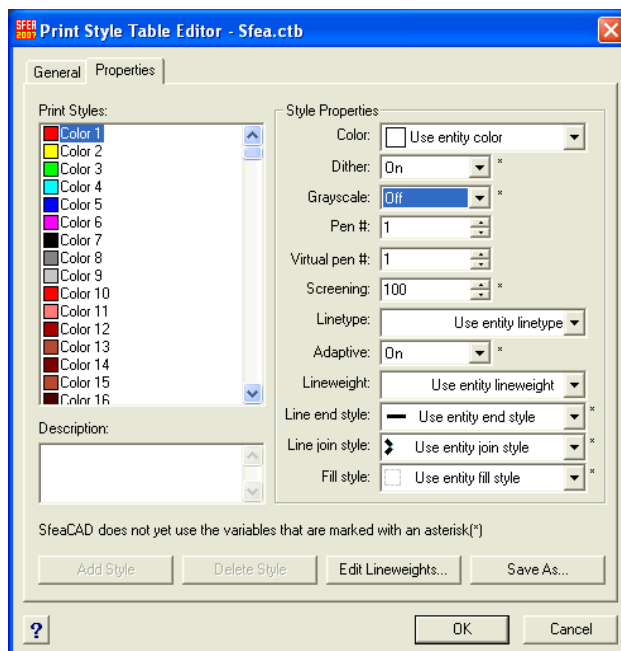

Some devices, such as laser or electrostatic printers, can print lines that vary in thickness or density.

To load the default configuration, press "...", then select **Default.ctb** from the Plot Style table (pen assignments).

To view or edit default configurations, access the AutoCAD command "**Plot Style Manager**".



The software has no print configurations using stored STB styles.

3.17 Sheet review



Pop-menu > *Sheets*

This function is used to **manage job order sheet review**, store the progress status of changes and save pages that have been changed. You may access the revised sheets at any time to view or print them.

To create new revisions or view existing ones, use the "**Management**" command. It is also possible to manage revisions "manually" using the "**Revision Symbol**" and "**Revision Legend**" commands; in this case, the revised sheets are not stored.



WARNING: The use of revisions significantly **increases the size of the** multisheet DWG file.

Management

This command is used to create new revisions or to view existing ones. Creating a revision basically means saving the current sheet status within a **revision sheet**.

The dialog box is titled "Revision management". It contains several sections:

- Create new current sheet revision:** Includes a "New revision number" dropdown set to "02" and a "Create" button.
- General description:** A text input field.
- Change:** A text input field with a browse button "...".
- Data:** A text input field.
- Signature:** A text input field.
- Current-sheet revision summary:** A table with columns: Sheet, Rev., Change, Data, Signature.

Sheet	Rev.	Change	Data	Signature
2	01		September 04 2007	Fornaro
2_REV_00				
- Using Create sheet contents 2 will be copied onto sheet 2_REV_01**
- Revision block:** A text input field with "_REVISO" and a "Selection" button.
- Review of sheets to be displayed:** A dropdown set to "Last revision" and a "Set" button.
- Buttons: "Cancel" and "?".

The revision sheets are saved in the layers under the revision name "**sheet no_REV_no**".

Example: Making two revisions of sheet 1, as pictured, obtains the following layers:

Layer 2_REV_00:

Revision **00**, equivalent to the first draft of the drawing.

Layer 2:

Revision **02**; in this case it also coincides with the "Last revision" command.

New revision **02**, if applicable, entails the creation of new layer **2_REV_01**, on which sheet 1 is stored in its current working state (Last revision), also corresponding to the status of revision 01.

To create a sheet revision, select the desired "**new revision number**" and press "**Create**". The selected revision number may correspond to the last one already used for other sheets, or may be the value immediately following it.

This is a detailed view of the form fields:

- New revision number:** Dropdown set to "02", with a "Create" button.
- General description:** Text input field containing "Upgrade symbols graphics".
- Change:** Text input field containing "Modify description sheet list", with a browse button "...".
- Data:** Text input field containing "September 04, 2007".
- Signature:** Text input field containing "Fornaro".

All new revision data must be inserted:

Description, date and "signature" (change author) relating **to the change you wish to implement**.

The "General Description" is stored in the job order file **Revision-Data.txt**



This button enables the extraction of data inserted in other sheets that correspond to the same revision number. The data can also be inserted directly (even manually) in **“Revision Symbol”**.

Pressing **“Create”** produces a copy of the current sheet on the revision layer **“sheet no_REV_no”**, and the revision symbol is inserted (or updated) automatically; **the drawing sheet must then be changed as described in the newly created revision.**

The **Revision Legend** command allows access to the documentation for all updated sheets.



WARNING: The description of a new revision describes the change that will then be made to the drawing sheet, and **not the content of the sheet that is stored.**



If there are no revision symbols on the drawing (or on initial use), you must select blocks by pressing the **“Select”** button in order to access inserted data.

Selection	The “Select” button enables you to select the “Revision symbol”; this choice is limited to symbols corresponding to the Master title blocks in use. The button is disabled when there is already a symbol on the multisheet used automatically by default.
Set	The list contains all existing job order revisions and enables you to restore a previous job order status. Revised sheets may be accessed, viewed or printed at any time. The example shows the last revision number 02, which, in this case, also corresponds to the “Last revision”.
Delete	Press the “Cancel Last revision” key to delete the latest revision only. To cancel all revisions, use the specific command available.

When a revision is effected, only commands **“3.2 Change sheet”**, **“3.3 Next sheet”**, **“3.4 Previous sheet”** and **“3.16 Print Sheets”**.

It is not possible to access any processing when viewing revisions.

Delete Revisions



Pop-menu > **Sheets**

This command deletes all revisions from the multisheet. It removes and deletes all **“sheet no_REV_no”** sheets saved on the CAD layer. The **“Revision Symbol”** is kept to enable access to the **“Revision legend”** (for manual intervention).

To run the command, you must first call up the **“Last revision”** window.

Deleted revisions can only be restored by using the **“Cancel”** command, and only up until the drawing is saved or closed.



WARNING: Removing revisions significantly **reduce the size of the DWG** in the multisheet.

Revision Symbol



Pop-menu > *Sheets*

Each sheet in the job order can be associated with the relative revision symbol. This is useful for identifying updated sheets in complex documentation.

These symbols have 1, 2, 3, 4 or a maximum of 5 groups of attributes (hence, a maximum of 5 revisions):

REV_NUM_n	Indicates the revision number or progressive revision (change) code.
REV_MOD_n	Brief indication of the type of change effected on the sheet in question.
REV_DAT_n	Date of change
REV_FIR_n	Name of person who made the change.

Contents can be entered (or edited) manually using the "Ddatte" command.

The block is inserted automatically at the 0,0 co-ordinate. **Each type of title block consequently corresponds to a customized Revision block.** The **Revision Legend** command can be used with these blocks to obtain a list of all revisions made.

Revision Symbol (with 3 groups of attributes for 3 revisions)

02	Data revision	09/02	SDP
01	Index revision	09/01	SDP
REV.	MODIFY	DATE	Signature

_REVIS symbol with 2 updates

Revision blocks are stored in the Librerie\Simboli directory.

Each .DWG block corresponds to an .SLD image (slide) with the same name to be displayed in the dialogue window.

New blocks can be customized and stored in the same directory as existing blocks. The name of the block must follow on consecutively from existing names (_REVIS4, _REVIS5, _REVIS6, etc.), with a maximum of 20 blocks (the dialogue box can display a maximum of 20 windows).



If a symbol is deleted, symbols with subsequent numbers cannot be displayed.



WARNING: The **_Revis1** symbol consists of attributes only (the graphic part is drawn on the Master3 title block for which the block has been adapted). In the first attribute group, REV_NUM_1 is predefined as **00** so that at least one visible part can be selected using "Ddatte".

Revision Legend



Pop-menu > *Sheets*

The Revision legend function can only be used if the drawing contains "Revision Symbol", which are used to indicate the changes and revisions effected on the various sheets of the design.

Each time a new revision or a change to an existing revision is inserted, the user must update the legend.

First of all, select the drawing file to be processed, in order to obtain the specific legend for each multisheet, or select the complete legend for the entire job order (recommended choice).

Revisions may be sorted according to **Sheet Number** or **Revision Number**.

The legend sorted by "Revision number" can only be obtained parametrically (by pressing **Table**). The Drawing with table block option is not available (**Drawing** button).



Summary: (see Sect. 3.1).

The legend sorted by "Revision number" only considers sheets containing a revision symbol that has been drawn and filled in correctly. For legends sorted by "Sheet number", the sheets without revisions and sheets with empty revision symbols (attributes not prepared) may be excluded.

Revisions are also taken into account in the **Sheet legend** (see Sect. 3.18).

After processing (**scanning**), all revisions found are listed, together with the name of the multisheet, in order to distinguish the position of any sheets with the same sheet number.

Table

Press **Table** to draw the revision list in table form (parametric mode). The function prompts for drawing parameters (see Sect. 14.8).

Fg/Sh	N.	Modifica/Modify	Data/Date	Firma/Signature
4	01	Aggiornamento dati	09/2001	SDProget
	02	Aggiornamento dati	09/2002	Franchino S.
5	01	Corretto Collegam. PE	09/2001	Maritano C.
	02	Aggiornamento Utenze	09/2002	Franchino S.
6	01	Circuito della marcia	09/2001	Arcobelli A.
	02	Aggiornamento Utenze	09/2002	SDProget
7	02	Aggiornamento Utenze	09/2002	Maritano C.
7A	01	Aggiunta Sinottico PLC	09/2001	Arcobelli A.
8	01	Sostituzione PLC	09/2001	SDProget

Example of Revision Legend (sorted by sheet).

Drawing

Press **Drawing** to draw revisions using a block. The table and the position of the data it contains can be customized using the appropriate configuration (see "[Revision legend](#)" Sect. 4.2).

The system defines 24 revisions for each sheet. The sheets needed to complete the legend follow on consecutively from the first sheet, which is shown as the starting number.

Number of first sheet for Revision Legend:

If the destination sheet is full, the function asks whether to continue on regardless or abort and prompt for the selection of a new sheet number. Confirmation is requested each time for each subsequent sheet. "**Clear current sheet**" deletes all entities contained before drawing.

If the destination sheet is new, the function continues without further prompts. Each sheet after the first is generated automatically in consecutive sequence. The numbers for new sheets are prompted automatically.

The default table symbol is **LegendR.dwg**, which resides in the symbol directory. Customized tables may be used, provided these are present in the same directory.



The color chosen during configuration (see Sect. 4.2) for inserting text is important for translating into a foreign language (see "[Color text processing](#)" Sect. 12.4).

Sheet sequence

All revisions contained in each sheet are entered consecutively. This system automatically excludes from the list any sheets without revisions or with empty revision symbols.

The **Drawing** and **Table** graphic options are permitted (in addition to **Files**).

Multisheet	Sheet	Revision	Change	Date	Change author
EXAMPLE10-01	1				
EXAMPLE10-01	2				
EXAMPLE10-01	3				
EXAMPLE10-01	4	1	GD1 Replaced	06/04/99	S. Franchino
		2	Control Lamps	06/04/00	C. Maritano
EXAMPLE10-01	5	1	External Line Deleted	16/05/99	S. Franchino
		2	Control Lamps	06/04/00	C. Maritano
EXAMPLE10-01	6	1	GD1 Replaced	06/04/99	S. Franchino
EXAMPLE10-01	7				

Example of Revision Legend on file (sorted by sheet).

Revision sequence

All sheets containing a revision number are entered consecutively for each number. This system automatically excludes from the list any sheets without revisions or with empty revision symbols.

The **Table** graphic option is permitted (in addition to **Files**).

Revision	Multisheet	Sheet	Change	Date	Change author
1	EXAMPLE10-01	4	GD1 Replaced	06/04/99	S. Franchino
	EXAMPLE10-01	5	External Line Deleted	16/05/99	S. Franchino
	EXAMPLE10-01	6	GD1 Replaced	06/04/99	S. Franchino
2	EXAMPLE10-01	4	Control Lamps	06/04/00	C. Maritano
	EXAMPLE10-01	5	Control Lamps	06/04/00	C. Maritano

Example of Revision Legend on file (sorted by revision number).

3.18 Sheet utilities



- Sheet title
- Sheet legend
- Location Symbol
- Master title blocks
- Sheet slide

Sheet title



Pop-menu > *Sheets*

A title can be associated with each sheet in the job order, by using either the command "3.1 " or by selecting the title manually from the shortcut menu.

These blocks have two Title attributes: one for inserting the description of page contents, the other for translating into a foreign language, where applicable.

Contents can be edited manually using the "Ddatte" or "Create multisheet" command. When the same drawing contains different types of symbols, these can be standardized using Create multisheet ("Various" is displayed).

The "sheet title" block is inserted at the 0,0 co-ordinate. **Each type of title block thus corresponds to a customized title block.** The **Sheet legend** command can be used with these blocks at the end of the job order to obtain a list of all descriptions associated with the pages.

'Titolo' Symbol

_TITOLO

_TITOL01

Symbol Titolo0.dwg

Title blocks are saved in the Librerie\Simboli directory.

Each .DWG block corresponds to an .SLD image (slide) with the same name to be displayed in the dialogue window (the symbol in the diagram is exploded).

The Titolo attribute is used for the main description, whilst Title1 is used for translations, where applicable.

New blocks can be customized and saved in the same directory as existing blocks. The block name must follow on consecutively from existing names (Titolo3, Titolo4, etc.), with a maximum of 20 blocks (the dialogue box can display a maximum of 20 windows).




When a symbol is deleted, symbols with subsequent numbers cannot be displayed.

Sheet legend



Pop-menu > *Sheets*

The Sheet Title legend function must only be used after ensuring that the titles associated with each sheet (preferably when the job order is complete) are present and correct and contain the description of sheet contents insert title symbols on the drawing using the “*Sheet title*” and “*3.1*” commands.

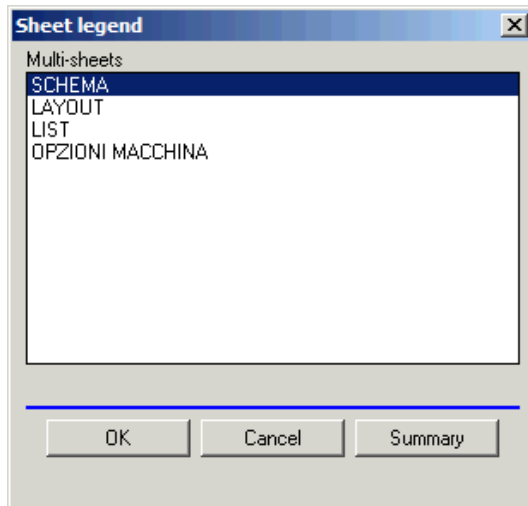


Each time changes are made to existing titles the legend must be updated by the user.

The content of the last sheet revision, under “*Revision Symbol*”, is also taken into consideration for each page.

First, select the drawing file to be processed, to obtain the specific legend for each multisheet or the complete file for the entire job order (recommended choice).

Processed sheets are then listed as shown in the example below. The first column contains the name of the multisheet, in order to distinguish the position of any sheets bearing the same page number.

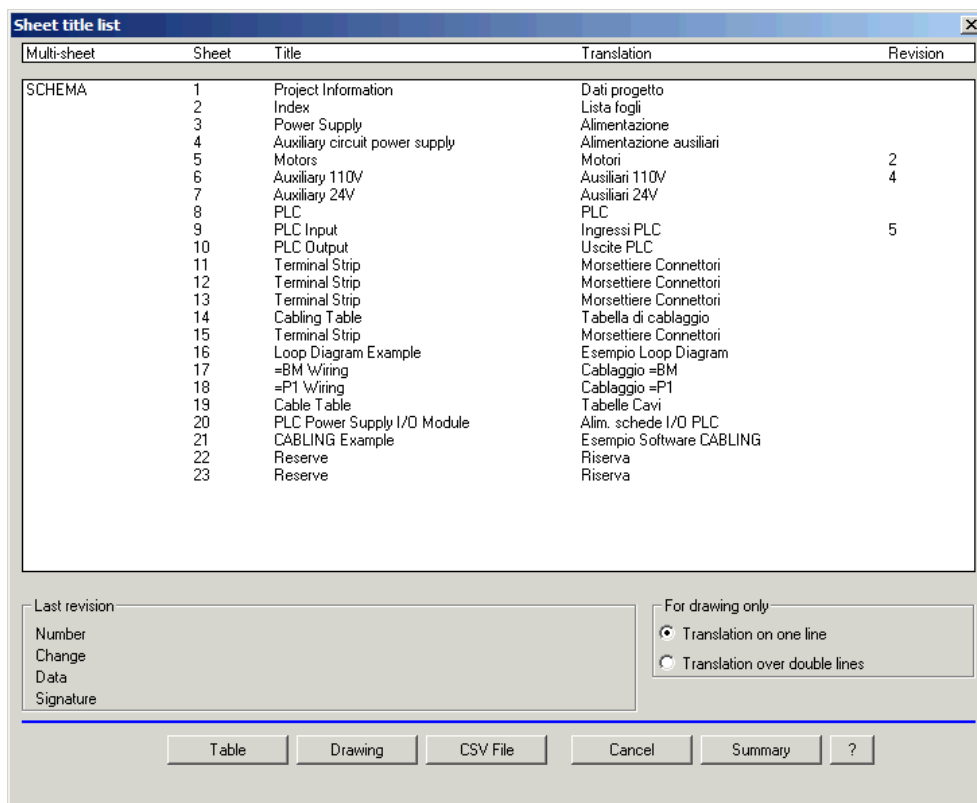

Sheet title list.

Table

Press **Table** to draw the sheet list in table form (parametric mode). The function prompts for drawing parameters (see Sect. 14.8)

Press **Default** to store the current configuration in "local" mode (see Sect. 4.2) for future use. If confirmed without pressing Default, the configuration is considered to be temporary and is only used once. The function prompts:

Select table insertion point:

190

Multifoglio/File	Fg/Sh	Descrizione	Description
ESEMPIO-01	1	DESCRIZIONE	DESCRIPTION
	2	LISTA FOGLI	INDEX
	3	ALIMENTAZIONE	POWER SUPPLY
	4	ALIMENTAZIONE AUSILIARI	AUXILIARY CIRCUIT POWER SUPPLY
	5	MOTORI	MOTORS
	6	AUSILIARI 110V	AUXILIARY 110V
	7	AUSILIARI 24V	AUXILIARY 24V
	8	INGRESSI PLC	PLC INPUT
	9	USCITE PLC	PLC OUTPUT
	10	MORSETTIERA	TERMINAL STRIP
	11	CABLAGGIO	WIRING
	12	CABLAGGIO	WIRING
	13	LISTA PARTI	PART LIST
	14	LISTA PARTI	PART LIST
	15	LAY-OUT PULSANTERA	
	16	RETRO PANNELLO PULSANTERA	

Example of Sheet Legend table



A maximum width of 190mm has been selected to enable at least 2 tables to be drawn on the same sheet (valid for A3 format or larger).

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).

☐ File Preview

Enabling **File preview** the file is saved and then opened automatically.

Drawing

Press **Drawing** to draw the sheet list using a table block. This option enables the user to decide whether to write the title in the main language and the translation, where applicable, on the same line (separated by "\"), or on different lines. In the first case, 52 titles are listed for each sheet, in the second case, 26 (using the default table).

The table and position of the data it contains can be customized using the relevant configuration (see *"Sheet title legend" Sect. 4.2*).

Foglio Sheet	Descrizione Description
1	DESCRIZIONE / DESCRIPTION
2	LISTA FOGLI / INDEX
3	ALIMENTAZIONE / POWER SUPPLY
4	ALIMENTAZIONE AUSILIARI / AUXILIARY POWER SUPPLY


Example of Legend with translation on same line.

LegendT.dwg is the default table symbol.

This resides in the symbol directory. Customized tables may be used, providing these are stored in the same directory.

The pages required to complete the legend follow on consecutively from the first page:

Number of first sheet for sheet list:

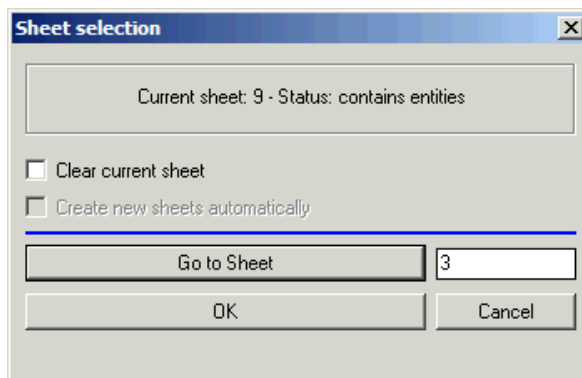

If the destination sheet is full (**Status: contains entities**), the function displays a prompt asking whether to continue or go to a different sheet (the sheet number could be defined).

Enabling **"Clear current sheet"** deletes all entities contained before drawing.

A prompt requests confirmation for each subsequent sheet.

If the destination sheet is new, the function continues without further prompts. Subsequent sheets are automatically created in consecutive sequence. Page numbering for new sheets is prompted automatically.



The color selected during configuration (see Sect. 4.2) for inserting text must be selected bearing in mind that these descriptions might already have been translated into a foreign language (see *"Color text processing" Sect. 12.4*).


Location Symbol



Pop-menu > *Sheets*

For each sheet of electrical scheme in the job order you can associate a “Location Symbol”, used to **set the default location level** of the current page.

The information stored in this symbol is used working on projects where option “**Location Manager**” (of Preferences) is set.

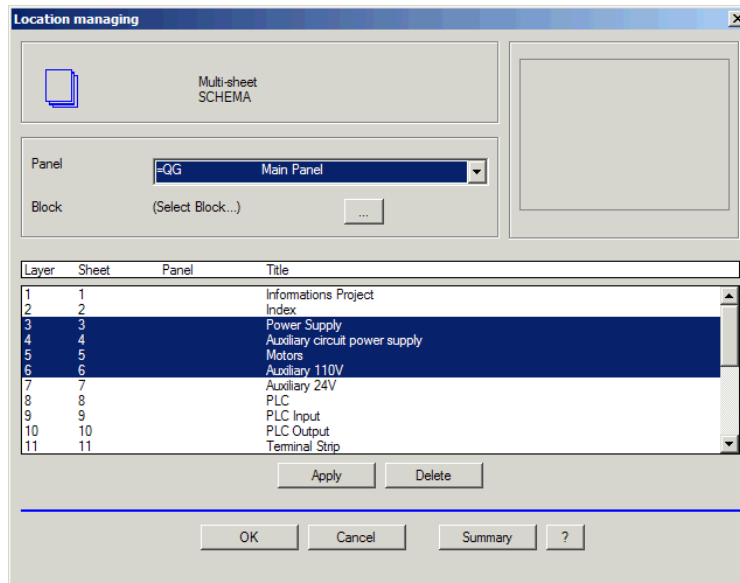

This command shows the list of sheets belonging to the current multisheet.

Pressing button “...” to browse symbols you can choose the one fitting better current master title block.

Pressing “**Apply**” the location (made combining Location, Panel and Function Gr.) is associated to all selected pages.


Pressing button “**Delete**” you delete the location symbol from selected pages.



See “16.3 Location”.

The existence of location symbol **has consequences on “location marks”** contained in sheets with it: default symbol labels are automatically set invisible in order to hide excessive and repeated information.

Location Symbol

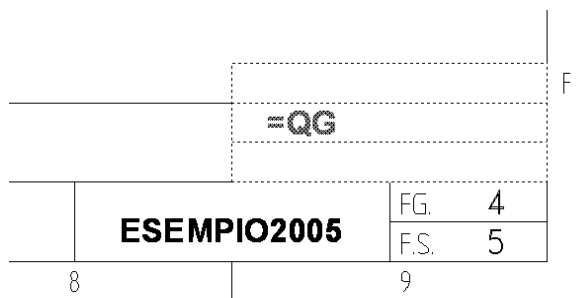

Symbol Location1.dwg

These symbols are provided of three attributes to insert Location, Panel and Function Group, and are stored in Libreria\Simboli folder.

Each symbol (.dwg file) has its equivalent slide image (.sld file) with same name, loaded as thumbnail in the dialogue.

Insertion point is automatically set to 0,0 , **for each new master title block you must associate a customized location symbol.**

You can create new blocks saving them in the same folder. Block name must be consecutive to existing names (Location3, Location4 etc.) with a maximum of 20 blocks (dialogue box can show max 20 items).



If you delete a symbol, all following ones by name order are not shown in the dialogue.




WARNING : it's better not to use CAD command “Ddatte” to modify “location symbol” data, because they don't trigger the visibility of “location marks” symbols present on the sheet.

Master title blocks



Pop-menu > *Sheets*

The title block is usually inserted automatically by the command “4.1 Setup” when opening a new drawing, depending on the user configuration associated with the job order (see Sect. 2.5). In other cases, this function is used for manual insertion.

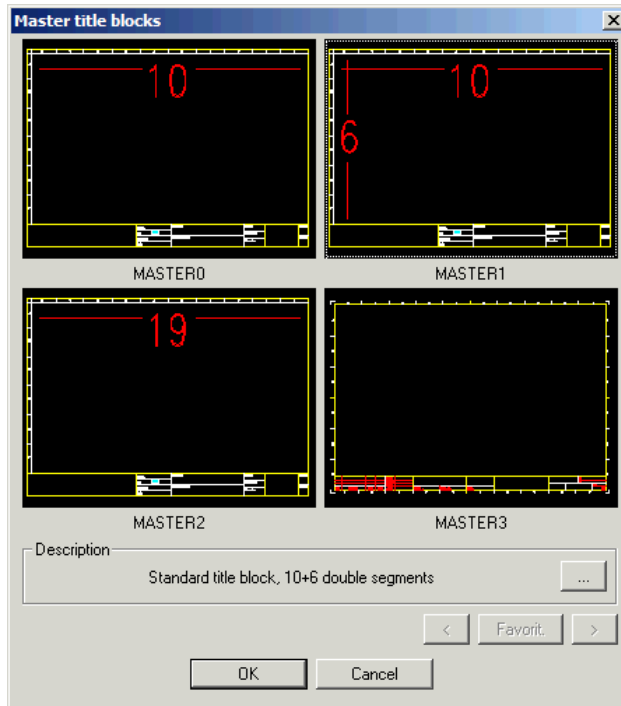

The command presents 4 sample master title blocks to be inserted manually in sheet 0 of each multisheet. These blocks feature attributes for rapid insertion of table data (which can then be changed using the CAD "Ddatte" command).

Title blocks are inserted at the 0,0 co-ordinate. Once inserted, it is advisable to check “**Sheet Dimensioning**” (see Sect. 4.2) under Settings, i.e. configuration of useable space and title block characteristics (segments).

Master title blocks are stored in the Libreria\Simboli directory. Each .DWG block corresponds to an .SLD image (slide) with the same name to be displayed in the dialogue box.

New title blocks can be customized and stored in the same directory as existing ones. The name of the block must follow on consecutively from existing names (Master4, Master5, etc.), with a maximum of 20 title blocks (the dialogue box can display a maximum of 20 windows).



If a master block is deleted, masters with subsequent numbers cannot be displayed.



WARNING: Master3 is the only available title block of a suitable size for producing single-feed drawings.

Sheet slides



Pop-menu > *Sheets*

This utility is used to enable the automatic creation of images (slides) used as previews by commands such as "Change sheet", "Print sheets", "Automatic wire numbering", etc.

Select "**Sheets**" to create slides relating to the current multisheet. Select "**Multisheet**" to create slides for the entire job order.

When this operation is carried out, a new sub-directory called Slide is automatically created under the job order directory. This contains the .SLD files. File names consist of the multisheet name, separator () and sheet number:

Layout_100.sld, for instance, is the file that contains the slide for sheet 100 in the Layout.dwg multisheet.

4 General commands

4.1 Setup



Pop-menu > *Product name*

This command starts automatically when a new multisheet is accessed.

This loads the symbol format that has been selected (IEC format, by default), and associates these symbols with the most appropriate values for operating, snap and grid pitches. It is also used to configure the file containing the reference prefixes to associate with symbols.

Enter **SETUP** to call up the command from the keyboard.

If there is already a title block (see Sect. 3.18) in the drawing (on sheet "0"), this can be updated with information concerning the Customer associated with the job order (see Sect. 2.5) by selecting **"Update title block"**.

When accessing the drawing for the first time, enable **"Insert title block"** to insert the title block (configured for the Customer).

If these two items are disabled, title block data must be entered and updated manually (no Customer).

Symbols

Select one of the symbol formats available. Menu file is loaded, containing the requested pull-down symbols menu (**the system presents IEC symbols, by default**). Recommended values for wire pitch, power feed pitch, help and prefixes have been predefined for each set of symbols. Setup can also be used to change the symbol command menu (to avoid using CAD commands).

Wires

Wire pitch and color affect wire connection commands (see Sect. 4.5); the wire color is also used as the BYLAYER color on all sheets in the multisheet, except for sheet 0 (with the title block).

 
Power feeds

The pitch and color of power feeds are variables which affect power feed drawing commands (see Sect. 4.4). The default color setting is 1 red.

Prefixes

Use this function to choose "Prefixes" archive containing symbol configuration, this prefixes setting is essential to facilitate the insertion of symbols in drawings. The contents of the .pre file can be viewed from **"Symbol Configuration"** (see Sect. 4.2).

4.2 Settings




The program Settings can be used to customize program functions.
These settings are stored at 2 levels in two configuration environments:

- Original Configuration
- Local Configuration

When a new job order is created, the “Start settings” (see Sect. 2.5) is used as the basis for “local configuration” (of job order).

Original	There may be many original configurations. For instance, there may be one for each type of job or for each customer. These are stored in .ini files in the Librerie\Cfg directory. Files often have the same name as the customer, so that these are automatically associated when a new job order is created. When starting a new job order, the original configuration is automatically copied and stored locally. Use “Export Settings” to change or create new configurations.
Local	When starting a new job order, the original configuration is copied locally in the SPAC_cfg.ini file in the job order Cfg directory, in order to obtain the basic settings. Subsequent customizations of settings for the specific design are only saved “locally” and the original settings remain unchanged.

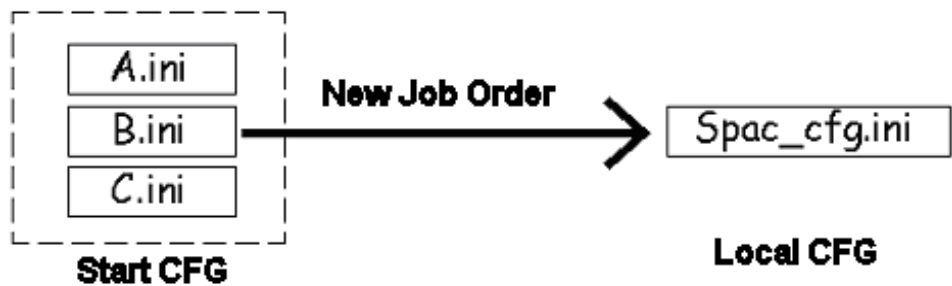

Configuration must include sheet set box parameters (title block), co-ordinates and number of divisions (segments); the correct operation of all commands depends on these values.

Always check these configurations before starting to draw a new design, to ensure that the reference variables necessary for the specific use and operation of the various functions have been configured according to construction requirements and applicable standards.




When no original configuration is available, the program uses its default settings and stores the empty SPAC_cfg.ini local configuration file.




WARNING: Any text editor can be used to read and edit ini configuration files, which are in ASCII format. These changes should not be carried out by inexperienced users.

Export Settings

Use this function to save or change "Start settings", starting with the local settings in the **SPAC_cfg.ini** file in the job order Cfg directory.

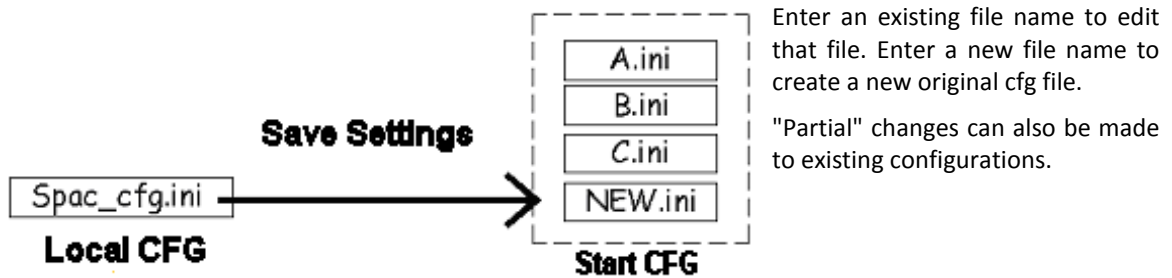

New Original Cfg

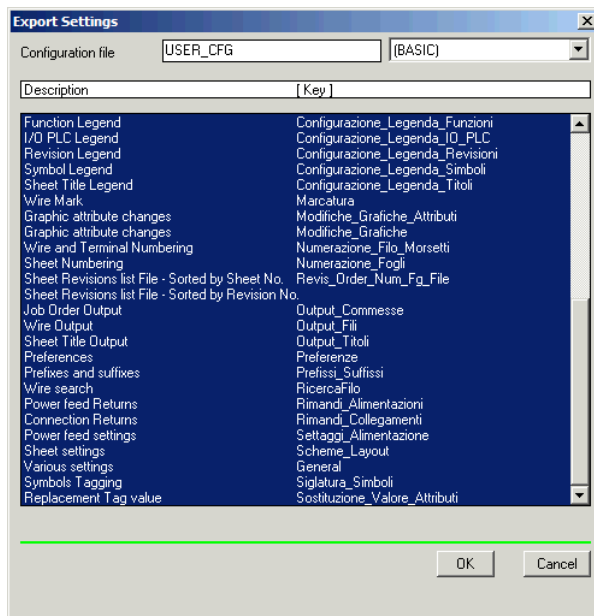


This command opens the list of all "local" configurations:

Enter the name of the new configuration to be created and select the settings (keys) to be transferred to the original configuration (usually all).

The figure shows an example of how to create a new original file, called **User_Cfg.ini**.

If there is already a customer with that name, the association is made automatically when the new job is opened.

Change Original Cfg

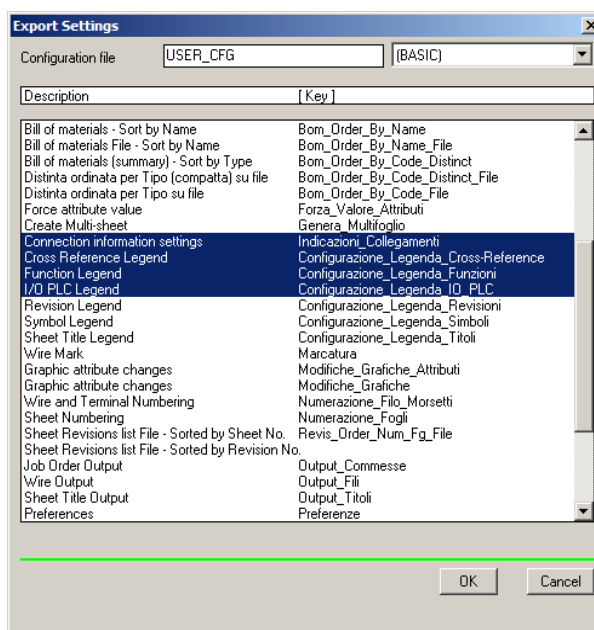

This command opens the list of all "local" configurations:


Select the name of the configuration to be edited and the settings (keys) to be transferred to the original configuration.

The figure shows an example of partial "change" of the settings for all Legends in the original configuration called **(BASE).ini**.

Import Settings

This command is used to import partially or completely the settings stored in "Start settings" into **Spac_cfg.ini** file.

It's possible to import the same data from a "Local Configuration" of a job order, selecting the Spac_cfg.ini file existing in Cfg job order folder.

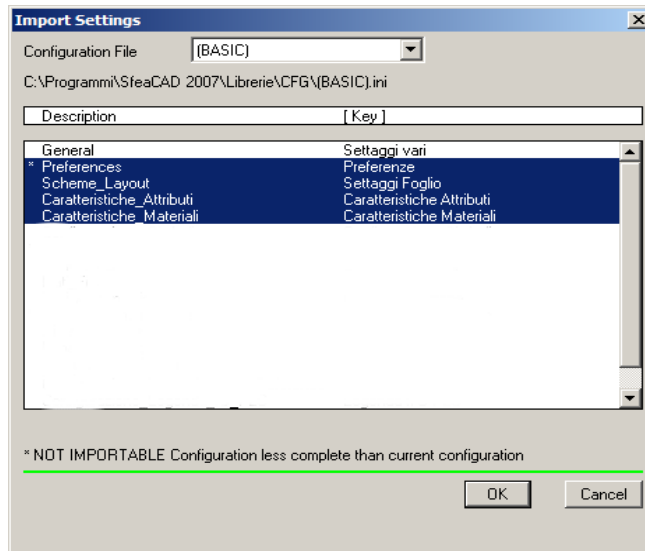

Command asks you to choose the configuration file; default list point to Libreria\Cfg folder where you can find "Original configuration" files.

To select a local "Configuration File" browse for job order folders pressing button "Other...".

After the file choice, it's loaded the [chiavi] (settings) list there stored:

choose from the list settings to transfer to the current local configuration.

Message " * **CAN'T IMPORT:** Configuration with less parameters than current one " warns that's impossible to import highlighted keys (the ones marked with an asterisk), because they appear to be older or incomplete respect to the ones in current job order Spac_cfg.ini file.




After importing settings, always ensure that these are correct. In case of partial import, verify compatibility between imported and existing data.

Sheet Dimensioning

Carry out (or check) dimensioning for each new drawing, or immediately after inserting the master title block in sheet 0.

This setting affects most commands, so it is essential to check that the data is correct each time.

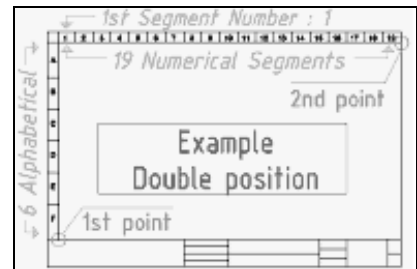

- Segment Position** Defines the position of the segments dividing the sheet; on **abscissa** means the numerical segment of the master title block lies on the x-axis (divided into columns); on **ordinates** means the segment lies vertically on the y-axis (divided into rows). Set **double segment** if the title block is divided both horizontally (numerically) and vertically (alphabetically). It is not possible to manage the alphabetical segment only.
- Click on Example to obtain help for each of the three positions.
- Segment numbers** Define the number of divisions on the sheet. In case of numerical segments, also specify whether numbering starts from **0** or **1**. Alphabetical segments start with the letter **A** and proceed in alphabetical order from top to bottom.
- Segment increment** This setting indicates the type of numbering on segments. With increment **1**, segments are consecutive: 0, 1, 2, etc.; with increment **2** segments are numbered 0, 2, 4, etc.
- Number of last segment** The number assigned to the last segment is calculated according to the number of divisions and the "increment" setting.
- Formatting** It is possible to format the numbers of segments up to 4 characters:
1 produces numerical segments: **1, 2, 3, etc.**
01 produces numerical segments: **01, 02, 03, etc.**
- Useable area** Always enter (or select on the drawing) the co-ordinates of the points that define the area within the segments. This area, divided by the number of segments, determines sheet configuration. **Click on "Example" to display the help image.**



See *"Snap-to-segment block insertion"*.



It is essential that the "Sheet dimensioning" be correctly configured in the *"Start settings"* settings (see Sect. 2.5).

Cross Reference




The general parameters of function “7.1 Cross-Reference” are configured.



See “7.1 Cross-Reference”

Cross with pin marking

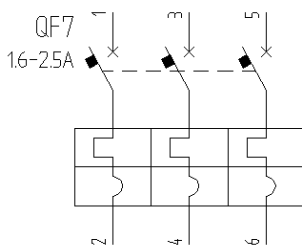

Q11 Parent symbol with pin identification

Pin marking on parent and child components and on elements are inserted according to the “Symbol Configuration” settings (see Sect. 4.2).

The example shows the configuration required to obtain the graphic result of the Pins on symbol Q11 (IEC).

PIN	Valore
PINA1	1
PINA2	3
PINA3	5
PINB1	2
PINB2	4
PINB3	6

PIN: PINA1
Valore: 1

<- Aggiungi
<- Cancella
<- Modifica

OK Annulla

On-Line Cross for Contacts

Enables the instantaneous processing of the information concerning contacts (or **Child symbol**) to make the Cross immediately and directly whilst inserting them in the drawing. It also allows the user to select the position of the contact according to coil availability (or **Parent symbol**).

The Pin value and the position of the parent symbol (or coil) are processed and written immediately both on the contact (child symbol) and on the registration cross-reference of the coil (parent symbol).



“On-Line Cross for Contacts” updates on-line the contacts and registrations. The use of AutoCAD commands to change the Cross Reference information could cause data incongruences. In this case it is required to make a check executing the complete command “7.1 Cross-Reference”.


Automatic insertion of Registration Reference

When working with the "On-Line Cross for Contacts", the insertion point of the **Registration reference symbol** (cross) on the drawing can be selected manually or automatically during the insertion of the **Parent symbol** (based on the co-ordinates of the Offset attribute).

On-Line Cross for Returns

Allows the instantaneous processing of the information related to the References (Starts and Destinations with the same signal name) directly during the introduction on the drawing.

Add segment

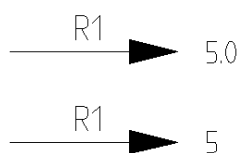

When disabled, the position on the Parent and Return symbols is simplified and described using the sheet number only.

In this example, the second return R1 has no segment (only sheet number); "Add Segment to Returns" is enabled on the upper line.

Separator

5.2 5-2 5/2

This character is used to compose the registration data.

To ensure compatibility with drawings designed using earlier SPAC versions, the use of the "dot" character is recommended.

See PLC Bit

Allows to filter the **PLC Bits** from the components list (symbols with attribute value Pres = F_PLC).

Save Pin

The Pin values on the design are completely updated after each processing.

During the schemes modification some Pin values could be assigned to other components. To avoid this situation, it is required to enable the function called "Save Pin".

The save "Pin on Childs" is mandatory to maintain the information introduced with the **"On-Line Cross for Contacts"** (See par. 7.4).

When "Pin on Childs" is enabled, the function keeps the previous values only on the symbols of this category.

When "Pin on Components" is enabled, the function keeps the previous values on all Parents and Elements Symbols.

To remove entirely the pins from the drawing, it is required to make a schemes processing disabling the "Cross with Pin" feature from the settings and both functions "Save Pin".




See **"7.1 Cross-Reference"**

Symbol Configuration

When opened, this configuration loads the contents of the prefix file associated during “4.1 Setup”, for each symbol library exists at least one “**Pref**”, but you can generate other and different archives, in order to comply graphical rules depending on chosen norm.

Archives are stored in **Description-Lib.Mdb** database file in Librerie\Archivi folder, each archive contains prefixes to associate to symbols and Cross Reference registration, Pin configuration, multilanguage description, material features and graphical matching used in Loop Diagram and Panel.

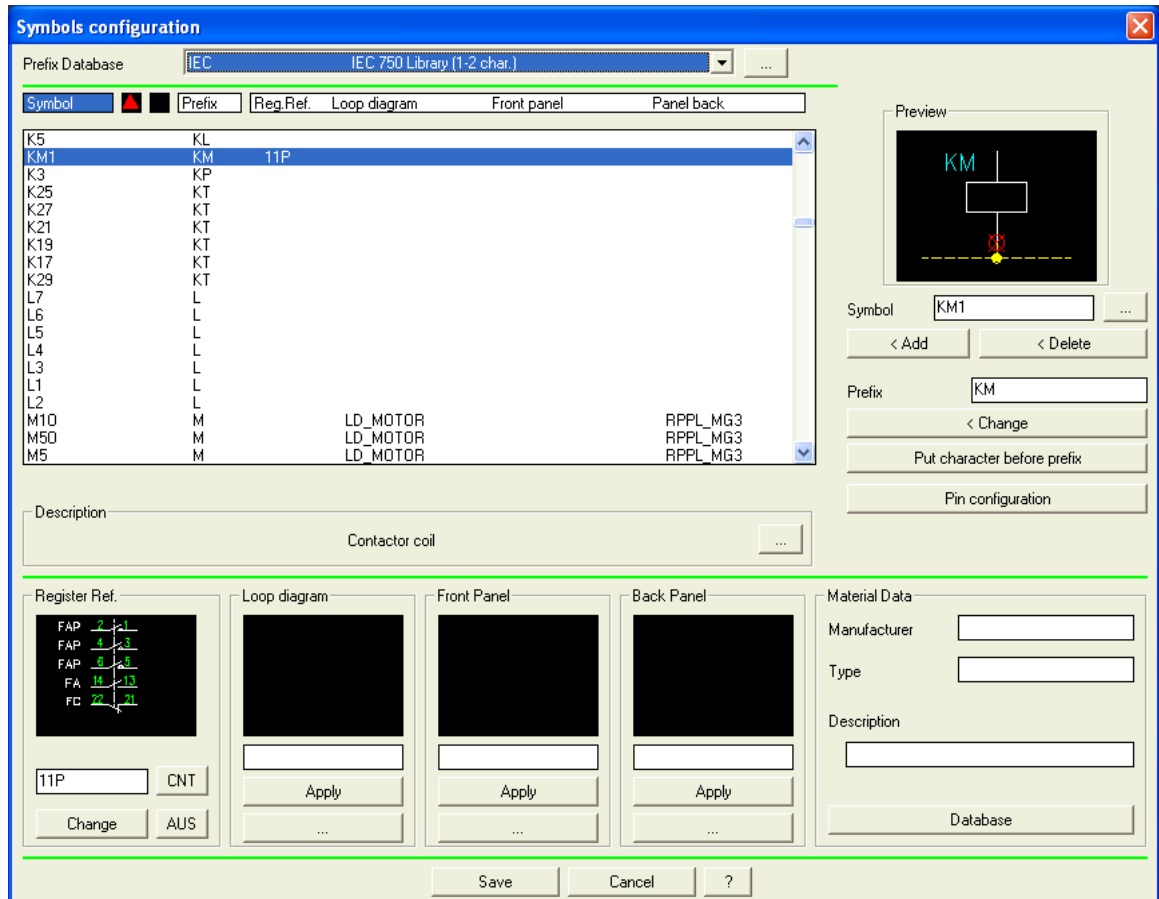

Set graphical parameters of “5.9 Loop Diagram” and “15.4 Pushbutton panel” commands.

Symbol

It's the electrical symbol name (.dwg file) you are going to associate parameters. Pressing “...” you browse Librerie folder, if you select a “*Insert Child*” symbol “ is allowed insertion or modification of generic description only.



Pressing “**Symbol**” (or the arrow) name list is sorted alphabetically. Pressing again order toggles from ascending to decreasing.

(See “*Insert Parent*” symbol” and “*Insert Element*” Sect. 17.3)

Prefix

It's the component reference: KM1 symbol is a relay coil with prefix **KM**, so on the drawing it will be referenced with names like:

KM1, **KM2** etc. (if incremental), **1KM1** or **KM1.1** (if positional) etc...



Pressing “**Prefix**” (or the arrow) prefix list is sorted alphabetically. Pressing again order toggles from ascending to decreasing.

Description

It's the generic symbol description (in 10 languages plus Italian), pressing “...” the string edit dialogue appears.

Character Before Adds or removes (with a single scan) a character before all listed prefixes (e.g.: +, --, =, etc.)

Reference Defines the "Registration reference symbol" to associate to Parent symbols (defining pins on related child symbols).



Reference 11P

This data is written inside Codice attribute existing in all Parent symbols. As a matter of facts it marks the availability to store Child symbols registration.

With symbol **11P** (see picture at left) relay coil KM1 is now available to be associated with three open power contacts (FAP) + 1na (FA) + 1nc (FC). Choice is done pressing "CNT" and "AUS" buttons (see Sect. 7.2 and Sect. 15.2).

Press "Change" to confirm a name typed manually.

CNT (Contactors) Chooses a "Registration reference symbol" (contactors family) among the ones stored in Librerie\Simboli\Riferim\Cnt folder.

AUS (Auxiliary) Chooses a "Registration reference symbol" (auxiliary family) among the ones stored in Librerie\Simboli\Riferim\Aus folder.

Loop Diagram



LD_Motor symbol

Associates each symbol in library to a layout block used in Loop Diagram graphic.

Press "..." to browse Librerie\LoopDiagram folder, press "Change" to confirm a name manually typed.

(See Loop Diagram "Configuration" Sect. 5.9)

Front-Panel

Rear-Panel



LYPlt_8 symbol

Associates each symbol in library to layout blocks used in Front and Rear Panel graphic.

Press "..." to browse Librerie\Pannello folder, press "Change" to confirm a name manually typed.

(See Pushbutton Panel "Configuration" Sect. 15.4)

Pin

Applies only to symbols of family Parent and Element, configures the cabling numbers (pin) of modules.

Pins configured in prefix archive are associated to the symbols during Cross Reference process.

(See "7.2 Pin reference").

Materials association

Applies only to symbols of family Parent and Element, assigns a material code with manufacturer and description.

(See "8.2 Materials feature").



WARNING : If you insert a symbol not previously configured, or with an empty "Prefix", you are asked for a temporary reference. In case of unspecified "Reference", default value is **RIF1**.





Blk and Comuni symbol library can have a single prefix archive only, always in use as the one set for symbols.

Pin association

This can be carried out on all parent and element symbols and consists of the configuration of wiring numbers (pins) on components. **These are visible upon completion of cross-referencing with pin identification** (see Sect. 7.2).

The following example illustrates configuration of the KM1 relay coil symbol pins. Two pin attributes are visible on the exploded symbol (PinA1 and PinB1):

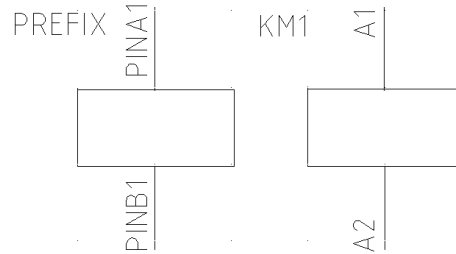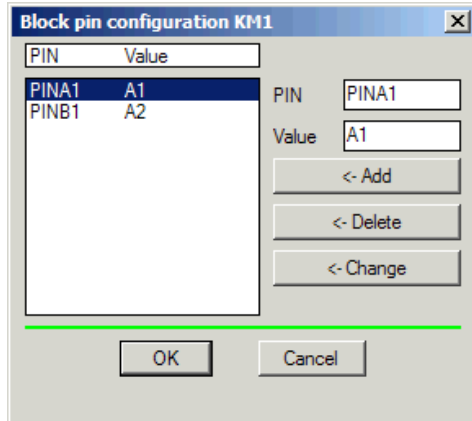

If A1 is attributed to the first pin and A2 to the second, after cross-referencing (with pin identification option), the values shown in the example appear on the component.



See “7.2 Pin reference”.

Prefix archive

For each symbol library, there is at least one Prefix Archive with the same name. This archive is automatically prompted by default when the command “4.1 Setup” is used to define (or change) the symbol format currently in use.


From [Symbol Configuration](#) you can customize or create new archives, pressing button “...” as shown in picture below, you can import files with extension **Pre**, **Pfr**, **Lpd** and **Des** containing customizations of previous versions.



See “New prefix archive”.

Following picture shows archives associated to IEC symbol library, note that archive name begins with the same name of the related library, this relationship is a rule for creating new archives. Example:

 IEC library can have archives named IEC (standard), IECn, IEC_name, etc. (it's not allowed the character “—” in the archive name).



Choosing prefix archive during setup


Having more archives for each symbol set let you preset numerous combinations of material codes and pin: this let you easily group features used more frequently for some customers, or associate features of a specific manufacturer to the symbol library.



All prefix archives are tables of Description-Lib.Mdb database file, stored in Librerie\Archivi folder.

New prefix archive

From **Symbol Configuration** open “Archive management” pressing button “...”. To create a new archive select one of the existing, it will be used as template to copy the symbol list.

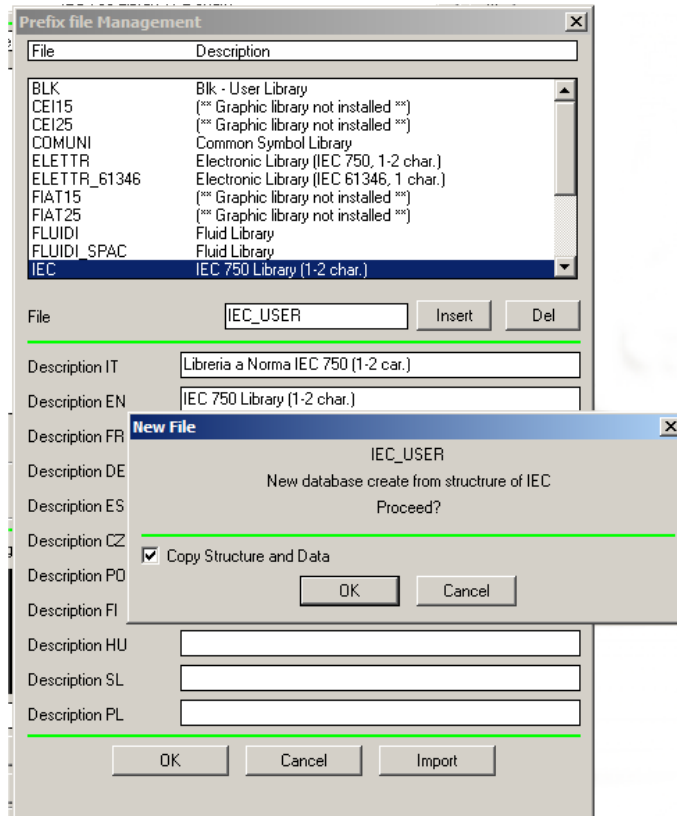

Creating a new IEC symbol archive.

The archive used as template must belong to the same symbol set of the one you are going to create

After filling in the new archive name (max 16 characters) and its description (for the languages you want), press button “Ins”:

After that choose if you want to copy structure only or both structure and data.

Structure only

From template archive are copied symbol list and prefixes only.

Copy structure and data

Template archive is cloned: symbol list and prefixes are copied with pin configuration, material codes, Loop Diagram configuration, Panel etc.

To delete an existing archive press button “Del”.



Pressing button “Import” you can recover customizations of previous program versions importing files with Pre, Pfr, Lpd and Des extension.



WARNING : character “—” is not allowed in archive names.

Materials association

This can be performed on parent and element symbols and consists of assigning a material code with description and related manufacturer. **These codes are used to process the bill of materials** (see Sect. 8.1).

The code assigned to the symbol during this configuration is prompted as the default value when the symbol is inserted in the drawing; **prompted values can be accepted, changed or deleted each time** (see Sect. 17.3).

Configuration can be carried out in 3 ways:

Database

Press the button to associate the symbol with the code (or macro code) selected directly from the materials database (see Sect. 8.1). The manufacturer’s name and description of the item are also included.

Manual

The name of the manufacturer, material code (from catalogue) and description of the product are entered manually if these are not present in the external materials database.

Symbol referencing

This configuration is used to define the type of component identification, according to requirements and specific standards. These parameters are used when inserting symbols in drawings and by command “4.7 Component”.

Main referencing systems :

- Incremental
- Sheet – Prefix in Absolute increments
- Sheet – Prefix in Relative increments
- Prefix – Sheet in Absolute increments
- Prefix – Sheet in Relative increments
- Positional

Component referencing in **Free** mode is always possible with any configuration; in fact, when symbols are inserted, the system prompts a reference that can be replaced or changed by entering any value (see Sect. 17.3).

Symbol Referencing

Referencing

- ☐ Incremental
- ☐ Sheet-(P) in Absolute increments
- ☐ Sheet-(P) in Relative increments
- ☒ (P)-Sheet in Absolute increments
- ☐ (P)-Sheet in Relative increments
- ☐ Position
- ☐ User

Options

- ☐ Panel prefix
- ☒ Absolut prefix

Reference make-up by position

- ☒ Prefix-Sheet-Separator-Segment
- ☐ Sheet-Prefix-Separator-Segment

User Configurations

Description:

Composition:

%SH	Foglio
%PM	Prefisso Multifoglio
%FA	Prefisso simbolo
%PA	Quadro
%RA	Catenaria
%DR	Multifoglio
%A1	Numero assoluto 1
%A2	Numero assoluto 01
%A3	Numero assoluto 001
%A4	Numero assoluto 0001
%R1	Numero relativo (si azzera al cambio del foglio) 1


Equal Component references if pertaining to various Panels

- ☐ Reference with same name
- ☐ Panel

Selecting referencing system “User”, it is possible to compose the configurations and save them providing a name and a description. It is mandatory to select the sorting order of the parameters (%SH, %FM etc.) and press “Apply”. Press “Add” to save the **new referencing system User**.

Incremental identification

This is the simplest referencing system, suited to small projects.

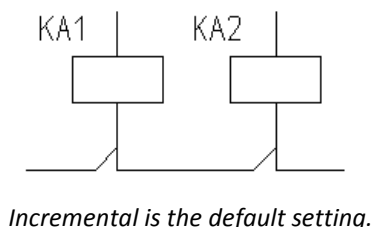

When symbols are inserted in a drawing, the system prompts an incremental reference:


this is associated with the symbol prefix and is automatically incremented by one unit each time.

For example, the prefix of symbol C1031 is configured in the Cei15.Pre file as “KA”; references will therefore be KA1, KA2, KA3, etc.

Incrementing re-starts from 1 for each new prefix.

Sheet – Prefix in Absolute incremental identification

The characteristics are the same as those for "Incremental Identification" above.

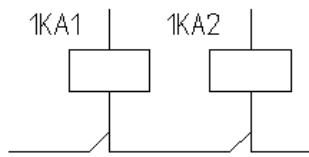

Absolute sets one increment for all sheets.


The only difference is in the addition of the sheet number before the symbol prefix. The number is incremented by one unit each time (absolute).

For example, the references on sheet **1** with the "KA" symbol prefix will be: 1KA1, 1KA2, 1KA3, etc.

On sheet **2**, references will follow on consecutively: 2KA4, 2KA5, etc.

Incrementing re-starts from 1 for each new prefix and is not set to zero when the sheet is changed.

Sheet – Prefix in Relative incremental identification

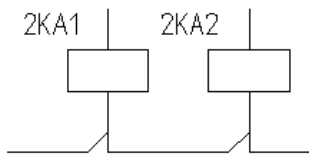

Relative set increment that re-starts for each sheet.

The characteristics are the same as those for "Sheet - Absolute Incremental Identification" above. The difference is that the increment is not absolute but **re-starts from 1** for each sheet (not absolute).

 

For example, the references on sheet **1** with the "KA" prefix will be: 1KA1, 1KA2, 1KA3, etc.

On sheet **2**, incrementing is reset to zero, thus: 2KA1, 2KA2, 2KA3, etc.

The increment re-starts from 1 for each new prefix.

Prefix – Sheet in Absolute incremental identification

Same features as the previous "Absolute Incremental Sheet-Prefix".

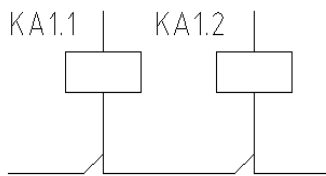

Single increment for all sheets.

The only difference consists in the reversed position of sheet number and symbol prefix.

To avoid same name risks, we advise using a separation character placed between sheet and increment.

The increment is one unit each time (absolute).

 

Example: on sheet no. **1** with symbol prefix "KA" and separator ".", the codes will be: KA1.1, KA1.2, KA1.3 etc..

On sheet no. **2** they will be consecutive: KA2.4, KA2.5 etc..

The increment starts from 1 again for each new prefix, and is not zeroed when the sheet changes.

Prefix – Sheet in Relative incremental identification

Same features as the previous "Relative Incremental Sheet-Prefix".

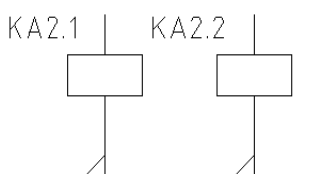

Increment relative to sheet.


One difference consists in the positions exchanged between sheet number and prefix symbol, the other in the increment, which is not absolute, **but starts from 1 again** for each sheet (not absolute).

To avoid same name risks, we advise using a separation character placed between sheet and increase

Example: on sheet no. **1** with symbol prefix "KA" and separator ".", the codes will be: KA1.1, KA1.2, KA1.3 etc..

On sheet no. **2** increments are zeroed thus: KA2.1, KA2.2, KA2.3 etc.. The increment starts from 1 for each new prefix.

Positional identification

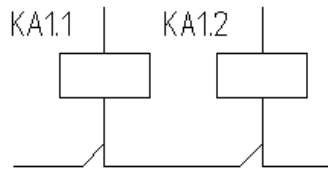

Positional PFC with "." separator

When symbols are inserted in the drawing, the system automatically creates the positional references:

this configuration can be used to define the parameters for creating references **according to the position on the drawing**. "Sheet Dimensioning" must therefore be configured correctly.

If, for example, the C1031 symbols (in the figure) have been drawn on sheet 1: the first is in segment 1 (KA1.1) and the second in segment 2 (KA1.2):

The positional mode features a number of configuration parameters:


Composition	The prefix is a variable defined in "Symbol Configuration" according to the type of element: for example, "KA" for relay coils and "SB" for pushbuttons; Sheet and Segment are the sheet and segment numbers (see example in "Sheet Dimensioning"); PFC and FPC are the abbreviations for Prefix, Sheet and Segment.
Separator	The separator character is essential in PFC composition (the dot is usually used) but unnecessary for FPC (see Sect. 4.7).
Final zero	The final zero is an additional suffix. <u>It is optional and not incremental.</u>



Prefix archive (see "Symbol Configuration") associated during **"4.1 Setup"** affects variable P (prefix), while **"Sheet Dimensioning"** affects the variable Cat (segment).

Free referencing

When symbols are inserted in the drawing, the system prompts a reference deriving from one of the previous settings. This reference can be edited (manually) by entering any value.

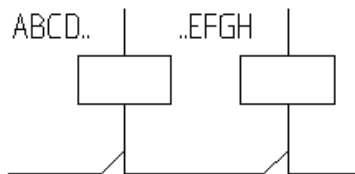

Manual reference (free).

References entered manually **are not kept when the program is requested to recreate all references** (see Sect. 4.7).

References entered manually are kept only using **"Ignore in commands"** list, where you can exclude components from main processes as manual and automatic Referencing (see **"14.7 Ignore symbols"**).



See **"16.1 Symbol insertion"**.

If the symbol prefix is not configured in the .Pre file, no reference is prompted when symbols are added to the drawing and references must be entered by hand (entered as required from keyboard).

Panel Prefix

Name	=QG-KM1
Panel	=QG
Name	=BM-KM1
Panel	=BM

This option enables the component reference to be associated with the panel name. The character "-" (default) is used to separate the panel prefix from the component reference.

The two examples illustrate the same incremental reference (KM1) associated first with panel **=QG (MAIN PANEL)** and then with panel **=BM**.



You can't activate "Panel Prefix" option while "Location Manager" or "Same component" are active in preferences.



WARNING: If the following string, contained in the SPAC_cfg.ini configuration file (*see Sect. 2.5*), is edited manually, the separator can be redefined:

```
[Siglatura_Simboli]
Prefisso_PrefissoQuadro=
Suffisso_PrefissoQuadro=-
```

Absolute Prefix

Options	
☐ Panel prefix	
☒ Absolute prefix	(PA)
Name	(PA)KM1
Panel	=QG Main Panel

Option allowing you to associate component references to an absolute prefix value, thus placed before any other potential prefix from the various possible combinations.

The example figure shows application of an absolute prefix, **(PA)**, used together with the Panel prefix **=QG** with incremental reference **KM1**.



Maximum length for an absolute prefix is 4 characters.

Incremental Format

"Format" is used to set the character number (max 4) of the incremental value.


Example with prefix "KA" associated to Incremental Referencing.

1	KA1, KA2 ... KA10, KA100 etc..
01	KA01, KA02 ... KA10, KA100 etc..
001	KA001, KA002 ... KA010, KA100 etc..
0001	KA0001, KA0002 ... KA0010, KA0100 etc.



"Incremental Format" is ignored while "Positional Referencing" is in use.

Returns

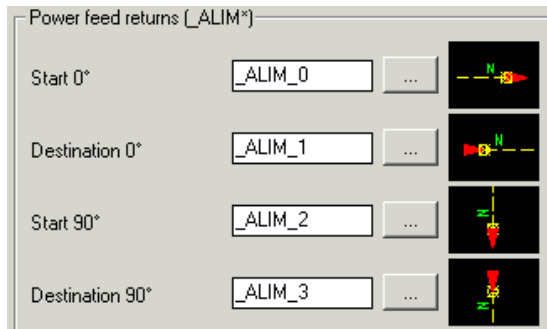

Press the relative "..." buttons to select the symbol to be used as horizontal or vertical start and destination arrows.

The symbols are contained in the directory Librerie\Simboli\Rimandi.

There are two symbol families:

- **Power returns**
- **Connection returns**



Enables configuration of the return symbols to be used when drawing “4.4 Power feeds” and “4.5 Connections”.

New return symbols can be customized and saved in the same directory as existing symbols. Block names must bear the prefix **_ALIM for power feeds** and **_SIGN for connections**.

The different behaviour of the two families is fundamental especially during “5 Wire numbering” (see Sect. 5.1). Return symbols are **independent** from symbol set in use and from options chosen in “4.1 Setup”.

Automatic Positioning


Return symbol is placed in the final point nearest to the one used to select the line; **this method is not applicable to symbols rotated by 180° and 270°**. On the other hand each time a dialogue prompts for the appropriate symbol to use.

When a wire or horizontal line is selected, symbols with 0° rotation are used; selecting a wire or vertical line means using symbols rotated by 90°.

	When a line is selected in a point nearest to its start point (top or left) start returns are inserted (0° or 90°).		When a line is selected in a point nearest to its end point (right or bottom) destination returns are inserted (0° or 90°).

Power returns

A distinction should be made in drawings between Power and Connection returns.

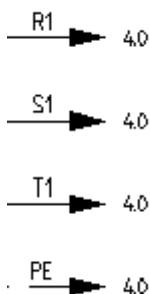

These are the power feed return arrows. If this return is present, the number of the connected wire can never be different to the value already defined on the return.

The wire receives the number from the return. When drawing and/or numbering wires, "Power feed returns" are easily recognizable because the wire color changes (default 1 red). The "power feed color" parameter is defined from “4.1 Setup”.


Use this type of return to "block" the numbering of power lines.



On drawings produced using earlier versions, names of symbols had the prefix **_FREC**; these are compatible. They operate similarly to power returns, so **_FREC = _ALIM**.

Connection returns

A distinction should be made in drawings between Connection and Power feed returns.

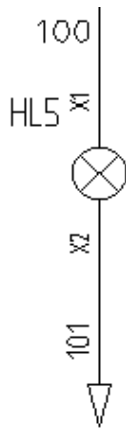

These are returns on connecting wires that continue on other sheets. The value on the return depends on the wire number. The return automatically assumes its value when the wire is already numbered. In any case, the number of the wire that is connected always defines the value on the return.


The return receives the number from the wire. When drawing and/or numbering wires, these stay the same color (default 9 grey), The "wire color" parameter is selected from ["4.1 Setup"](#).

Use this type of return to make wire or power line values modifiable.



This return family was not available in earlier program versions.

Insert Start + Destination

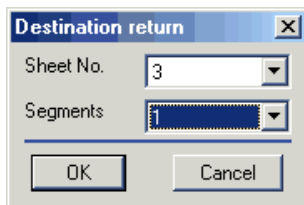


Position selection for destination return



See ["Intelligent delete"](#).

This configuration is enabled **during insertion of a start return** (both Power Feed and Connection), and enables immediate insertion of the corresponding destination return on a selected page (see ["Power returns" Sect. 4.4 and 4.5](#)).

The setup is also enabled with the ["Delete Symbol"](#) command when a start return is deleted, as the user is asked whether he also wishes to immediately delete the corresponding destination return (see [Sect. 17.4](#)).

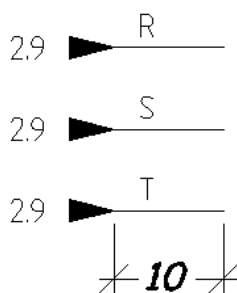

Destination return

Cross-reference along Return line:

On the sheet and in the segment established (at the centre), apart from the destination return, a part of wire or of power feed (10 mm in length) is also drawn, already correctly numbered and **already bearing a cross-reference**.

It is, therefore, sufficient to lengthen the existing lines (directly with Grips or with the "Stretch" command) in order not to have to intervene with a new wire numbering process.



"Cross-reference along return line" updates, on-line, the Start and Destination return situation. Using CAD commands to run changes or shifts calls up potentially conflicting information. In these cases, it is necessary to run a check through a complete processing of command ["7.1 Cross-Reference"](#).

Preferences

Enables customization of some command functions.



- Insert blocks with fence
- Snap-to-segment block insertion
- Number wires after inserting symbol
- File preview
- Program test
- Intelligent delete
- Functions near contacts
- Selection Preview
- Dialogue windows state
- Location Manager
- Same component

Insert blocks with fence

Enabled by command “**16.1 Symbol** insertion” o insert a symbol in a space (not on wire).



On

This enables a 2nd point to be entered to create a fence for **inserting multiple symbols** (on all lines intercepted by the fence).

Press Enter to confirm the 1st point in space.



Off

The 1st point in space is automatically confirmed without pressing Enter.



“Entering blocks with fence” (see Sect. 17.3).

Snap-to-segment block insertion

Enabled only on insertion of a symbol in a space (not on wire).



On

In relation to the point selected on the drawing, **the symbol is moved to the centre of the segment** nearest the indicated point. This means the automatic alignment of the symbols corresponding with the segments during “**16.1 Symbol insertion**”.



Off

The symbol is inserted at the point indicated on the drawing, independently of the form and sub-division of the segments.



“Snap-to-segment block insertion” (see Sect. 17.3).



WARNING: The setup “**Sheet Dimensioning**” setup is essential.

Number wires after inserting symbol

This works during **insertion or deletion of a symbol**, only on a wire or wires that have already been numbered.



On

During scanning **all processed data are displayed in sequence**, so that it is possible to intercept the point that is the cause of an interruption (debug).



Off

The program does not assist the user in the re-numbering of wires interrupted by the new symbol inserted. You must then use "**5.1 Number wires**" or "Ddattef".

File preview

This works as default for all commands having a CSV or XLS file output (preview XLS files require Microsoft® Excel installed).



On

The file is written and then **opened in preview mode** (recommended choice).



Off

The file is written, but not opened and shown.



See Sect.14.8.

Program test

This can be used whilst scanning or processing certain functions.



On

During scanning **all processed data are displayed in sequence**, so that it is possible to intercept the point that is the cause of an interruption (debug).



Off

Scanning is much faster because no data are displayed (recommended choice).

Intelligent delete

Enabled with the "**Delete Symbol**" command (see Sect. 17.4).



On

Prevents deletion of parent symbols if the relative child symbols are still present in the diagram.

This setting is also used to delete Start returns, as it asks whether the user wishes to delete the corresponding destination return immediately.



Off

No check during deletion of parent symbols.



"**Insert Start + Destination**" (see Sect. 4.2).

Selection Preview

Activated when the **mouse cursor is placed over any component** or over any connection, by opening **automatically the details window**.



Components

Activates the Selection Preview on **components (Parent, Child and Element), terminals and connectors**. The details window is opened after a delay time that can be set with the "Delay" parameter.

Example of the Selection Preview on a component:

Componente: -QF10

Ubicazione:

Quadro:

Gr. Funz.:

Funzione 1:

Funzione 2:

Q.	Costr...	Tipo	Descrizione
1	Teleme...	LUB32	Base di Potenza 32A per ...

The window is closed by moving the cursor away from the component, or by pressing the "Modify" button (XS or **Edit**) or the "Navigator" button (*see par. "14.6 Navigator"*).



Wires & Cables

Activates the Selection Preview **on connections (wires, cables, power supply lines or returns)**. The details window is opened after a delay time as set on the "Delay" parameter.

Example of a Selection Preview on Wires and Cables:

Filo Multipolare

Numero:

Costruttore:

Tipo:

Formazione:

Sezione:

Colore:

Sigla Cavo:

The window is closed by moving the cursor away from the connection line, or by pressing the "Modify" button (XS) (*see par. "5.7 Ddattef"*).

Delay

A delay time set to **0** causes the immediate opening of the window.

Functions near contacts

Set the visibility of attributes Funzione1 and Funzione2 of Child symbols. This works while **a child symbol is inserted**.



On

Aside contacts is shown the function associated to Parent symbol. Command **“Update”** executed from **Function Legend** updates possible modifications done to the parent symbols.



Off

Attributes Funzione1 and Funzione2 are invisible



“Function legend” (see Sect. 14.1).

Dialogue windows state

Records the state of dialogue windows (dcl). As example open dialogue window of command **“Internal Bill of Materials”**, having default order set to **“Reference”**, now set it to **“Type”** and have a look to possible behaviours:

Do not record

Next time you recall this command, order is set to **“Reference”** again.

Record for job order

Next time you recall this command, order is set to **“Type”**, but only if using current job order.

Set as default

Order is set to **“Type”** always.



Dialogue state is stored only if command is confirmed and/or it is executed completely.

Location Manager

Set operating mode of command “**4.3 Panel setting**”, defining location levels (or Panel structure) of every component, terminal or connector.

This setting changes the behaviour and appearance of many commands.



On

Structure is set to 3 levels: **Location**, **Panel** and **Function Group**.

This is a hierarchical structure, where a Location contains one or more Panels, and each Panel contains one or more Function Groups.

Erasing a Location implies erasing automatically all related Panels and Function Groups.

If no Location is specified, the system uses the default name.

If no Panel is specified, the system uses as default **=QG (Main Panel)**.

If no Function Group is specified, the system uses the default name.

To remark the exact components location on the drawing, a label (MText format) is automatically drawn on symbol Parent and Element, describing their belongings.


Refer to Norm CEI-EN 61346 for details about three level structure.




Off

Structure is set to 1 level : **Panel** (default setting).

Default Panel name is **=QG (Main Panel)**.

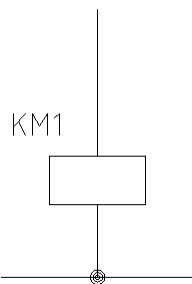

One level structure

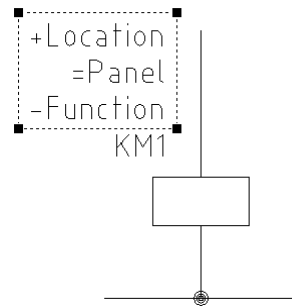

Three level label

You can modify visibility of automatic location labels (MText format) using command “**16.3 Location**”.



See “**16.1 Symbol insertion**”.

See “**Location Symbol**” (Sect. 3.18).



It's not allowed to activate “Location Manager” while “Panel Prefix” is set active in “Symbol referencing” preferences.



WARNING:

A project drawn using **3 level setting** cannot be converted to **1 level**.

Same component references

Components references may be unique in the entire project (in all multisheets of the job order), or be unique only inside a Panel (or Panel and Function Group if "Location Manager" is set to 3 levels).



On

Each Panel has its own reference index, in fact reference numbering restarts from 1 for each new Panel.

To remark the exact components location on the drawing, a label (MText format) is automatically drawn showing the Panel who belongs the component.

Components with same name (but belonging to different Panels) are **not** considered a "Duplicated Reference" error".



WARNING:

Activating "Same component references " when the job order has been partially developed (or on existing multisheets) implies the **conversion** of the entire **project**, including the automatic labelling and referencing of all components (Parent, Element and Child symbols).



Off


Component references are unique in the project (unique reference index).

Components with same name (although belonging to different Panels) are considered as "Duplicated Reference" error (standard behaviour).




WARNING:

When a project has been developed with option "**Same component references**", avoid deactivating this option, or you risk to have duplicated names.

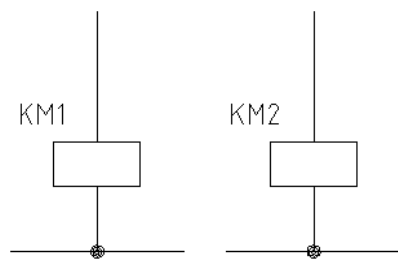

Unique referencing

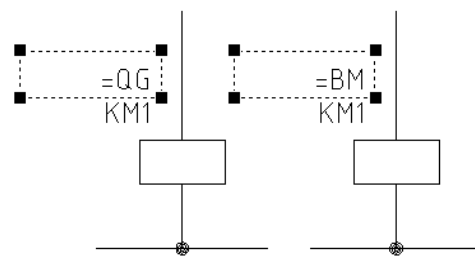

Automatic labelling for components with same reference (but different Panel)

You can modify visibility of automatic location labels (MText format) using command "[16.3 Location](#)".



See "[4.3 Panel setting](#)"

See "[16.1 Symbol insertion](#)"

See "[Location Symbol](#)" (Sect. 3.18).



It's not allowed to activate "Same component references " while "Panel Prefix" is set active in "Symbol referencing" preferences.



WARNING:


While "Same component references" is active, you can't input free names inserting a Child symbol.

Symbol attribute features

This enables you to **configure the graphic features of symbol attributes**, in relation to the default status configured in the block creation phase.

When inserting the symbol in the drawing, the attributes assume the “new” configured features; otherwise, the attributes maintain the standard (default) aspect configured during the block creation phase.

With “**Activate change**”, the function is enabled only for the attributes in the list.

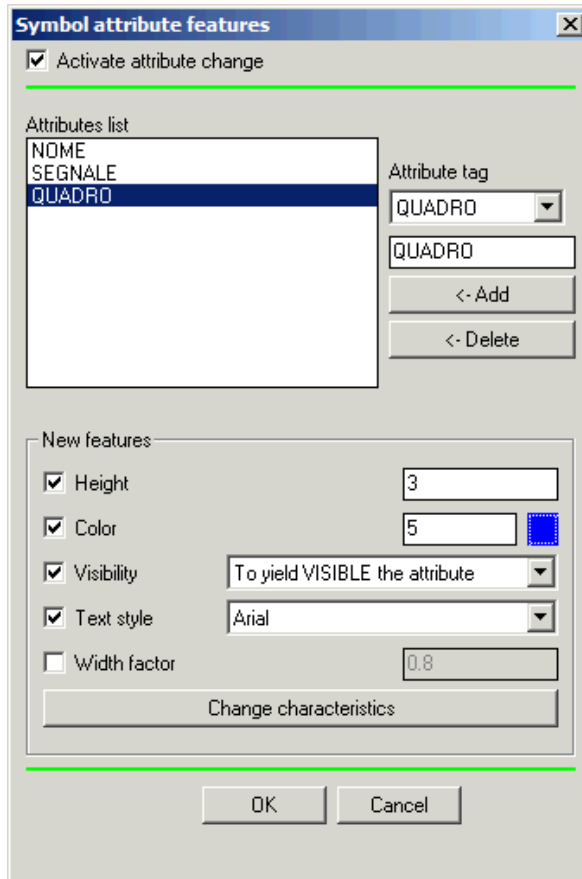


In order to create the list, you must first select the attribute, associate it with features (Height, Color, Visibility, etc.) and then press the “< Add” button.

The “**Change**” button is used to change the features of an attribute already on the list.

Pressing “**Save**” stores the configuration in the SPAC_cfg.ini “local” file.

The configuration in the example shows: new Height, Text style and Visibility.

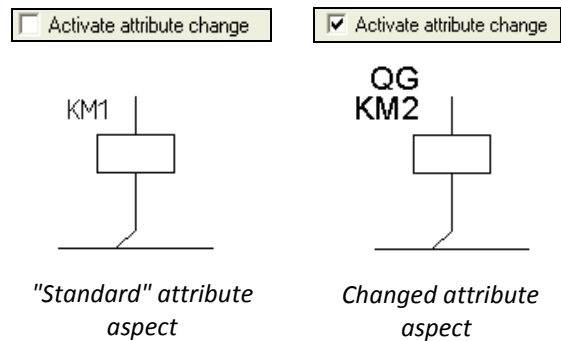

(See “17.1 Categories of symbols”).



Symbols inserted in the drawing before enabling “Activate change” can be converted to “new characteristics” using the “**Graphic changes**” (see Sect. 14.2).



WARNING:

It's recommended **not to modify** visibility status of **Panel attribute** if “**Location Manager**” or “**Same component**” options are in use (see “16.3 Location”).

Wire and Terminal numbers



This configuration can be used to customize commands “5.1 Number wires” and “6.1 Insert terminals”.

Height refers to the wire number (usually 2 mm).

To change the color or type of character used to write numbers, edit the Bldcor_Dx and Bldcor_Sx.dwg size 1 blocks in the Libreria\Simboli directory.

Distance is the space between the wire number and the line that represents that wire (usually 1 mm).

Position is used to configure the number to the right or left of the wire. This variable is only valid for vertical wires; **on horizontal wires the number is always placed above the line and is not rotated.**

NumI	Represents the terminal input wire number.
NumO	Represents the terminal output wire number
NumM	Represents the terminal number.

Rotate only affects numbers on vertical wires. On horizontal wires the number is always placed at 0 degrees.



In some cases, the 90° Right combination of is not accepted.

Positional numbering

This type of wire numbering is based on the "Positional referencing" of elements, i.e. the value assigned to the wires is derived from the sheet number, the segment on which the wire is placed and an incremental numerical value.

For example, with positional numbering on **sheet 3** of wires drawn in **segment 5**, wire numbers will be **351, 352, 353, etc.**

On **sheet 3**, **segment 6**, wire numbers will be **361, 362, 363, etc.**

With positional numbering, an infinite number of spare numbers is available for each sheet. This is especially useful for any changes to the electric diagram.



As the rules governing this numbering system impose a number of limitations, it should only be used if absolutely necessary.



WARNING: The use of positional numbering is **not recommended** if master title block contains more than 9 segments.

Wire properties

- Increment** Set a whole number. This is the automatic increment of the values that are forced in the NumI and NumO terminal attributes when inserting terminals on wires which are not numbered. The same increment is used by non-positional wire numbering (usual increment setting is 1).
- Force number to wire** This option determines the priority for numbering a wire already connected to terminals. The Force condition is the most common, as it enables a more uniform distribution of numbers.
- When the wire selected is connected to terminals, these receive the new updated value, whether or not they are already numbered.**
- If "Same" is enabled in the terminal properties (same or different input/output), the wire number is forced in the NumI attribute (input number) and the NumO attribute (output number) of the terminal.
- If "Different" is enabled during numbering, the upstream wire and the downstream wire of the terminal must both be selected.
- Receive wire number** This option determines the priority for numbering a wire already connected to terminals.
- The "Receive" condition is used to block the values on the terminals inserted before numbering wires. Data on terminals are not changed or updated with new values.
- When a wire upstream of the terminal is selected, the wire receives the input number (contained in the terminal "NumI" attribute). When the downstream wire is selected it receives the value contained in the "NumO" attribute.




The best method to simplify work and maximize automatic operation is to combine "Force wire in terminal" with "Same Input as Output".

Terminal properties

- Same Input as Output** When inserting terminals on wires that have not yet been numbered, the same values can be configured for **NumI** (terminal input wire number) and **NumO** (output wire).
- Under normal operating conditions the input wire is always the same as the output wire.
- Different Input Output** When inserting terminals on wires that have not yet been numbered, different values are configured for **NumI** and **NumO**. NumO is increased by the "Increment" value (usually 1).

Color management

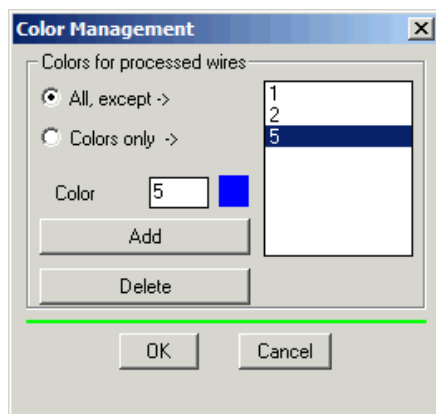

This is simply a filter used to define the selection of wire colors to be numbered.


With "All except", **lines drawn using the colors in the list are not considered as wires**, so that wire and terminal numbering functions and various processing routines, etc. do not affect these lines.

With "Only colors", **lines drawn using colors other than those in the list are not considered as wires** so that wire and terminal numbering functions and various processing routines, etc. do not affect these lines.

Options

Accessories Reference During the terminals insertion, if they are associated with any accessory (see *“Accessories Archive”*), then they are **identified as a normal component**.

Example:

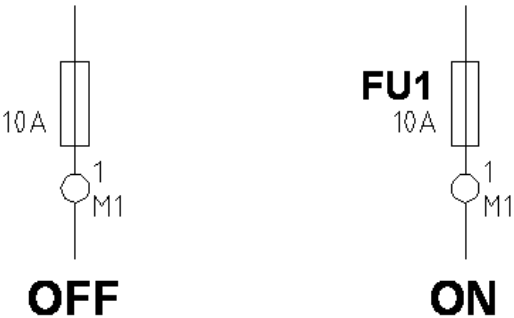

Terminal with fuse in 2 different conditions

The accessories identified as a normal component are considered independently in the Bill of Materials.

Generale | Technical notes | Layout | BLK elettrico | Sbroglio |

Blocchi per schema elettrico

Blocco IEC

An accessory is identified only if the article code is associated to an electrical block in the Materials' Archive. (see *“8.1 Materials database”*)



The Identification of the accessories is executed only if the accessory's code belongs to the category “Identifiable” (associated to an electrical block).

Modular Connectors

The management of the Modular or Composd Connectors is done according to the connector's name.

This option consents the activation of the recognition of a character (according to your choice) in the connector's name, then it is possible to know if they are independent or modular connectors; the character works as a separator, that is *../1. ../2* etc..

Plug / Connector

Xcn/1
Xcn/2
Xcn/3

Example with the separator character “/” :

If we design 3 connectors with the names indicated in the figure, the program will recognize them as modular.

They will be managed as a **unique connector during the design and edit functions** (see par. 6.3 *“Edit connector”*).


Collegamenti		Materiali							
		Locazione	Sigla	Pin	NumI	NumM	NumO	Pin	Sigla
△					1.02	 Xcn/1	1	1.02	
					1.03		2	1.03	
△					1.04	 Xcn/2	1	1.04	
					1.05		2	1.05	
△					1.08	 Xcn/3	1	1.08	
					1.09		2	1.09	

The chassis for the 3 modules must be inserted as an accessory code from the Materials' tab (sheet). (*“Accessories Archive”*)

Example of “Edit modular connector”

Advanced options

Since wire numbers must be consistent with the related data on the terminal, the settings configured here affect the characteristics of both items.

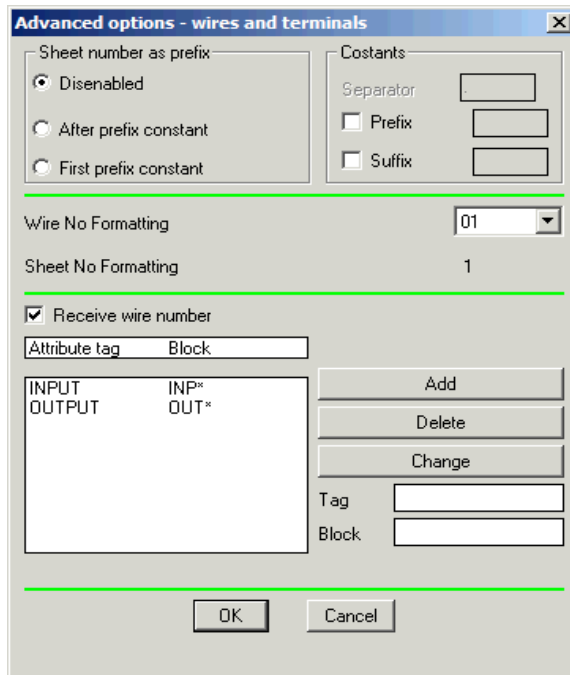

When "Sheet number as prefix" is enabled, the current sheet number is automatically associated with the wire number (and therefore with the terminal number).

When enabling this, select the position **Before** or **After** the Constant value (if there is no Constant this is irrelevant).

For example, when numbering **sheet 3**:

Starting with number 1, the following values are assigned to wires: **3.1, 3.2, 3.3, etc.**

When this parameter is enabled, **Sh.** is displayed in the main dialogue window.

With this numbering method, the spare number variable available for each sheet (during automatic wire numbering) is not enabled, since numbering always re-starts from 1 on each sheet.

Separator

The character (or string) that is inserted between the sheet number and the wire value. This is usually a "dot". For example, on sheet 3:

Separator "-": **3-1, 3-2, 3-3, etc.**

Separator "AB": **3AB1, 3AB2, 3AB3, etc.**

Constants

A prefix and/or suffix with any constant value can be associated with the wire number (and therefore with the terminal NumI and NumO): 24V, IN, OUT, etc.

In the example, "P" and "S" are displayed in the main dialogue window when this parameter is enabled.

Wire number formatting

Progressive wire numbers with up to 4 characters can be formatted.

With **1**, example of numbers: **1, 2, 3, 10, 11, 100, 999, 1000, etc.**

With **01**, example of numbers: **01, 02, 03, 10, 11, 100, 999, 1000, etc.**

With **001**, example of numbers: **001, 002, 003, 010, 011, 100, 999, 1000, etc.**

With **0001**, example of numbers: **0001, 0010, 0100, 1000, etc.**

Sheet Prefix, separator and constants are not counted.

Sheet number formatting

This option is only available when the "Sheet number as prefix" parameter is enabled. This value is configured using command "**3.1**".

Example on sheet 3 with separator ".":

With **1**, example of numbers: **3.1, 3.10, 3.999, 3.1000, etc.**

With **01**, example of numbers: **03.1, 03.10, 03.999, 03.1000, etc.**

When wire formatting is enabled concurrently to 0001:


With **1**, example of numbers: **3.0001, 3.0010, 3.0999, 3.1000, etc.**

With **01**, example of numbers: **03.0001, 03.0010, 03.0999, 03.1000, etc.**

When constant prefix **A** and suffix **24V** are enabled concurrently:

With **01**, example of numbers: **A03.000124V, A03.001024V, A03.099924V, etc.**

Receive number

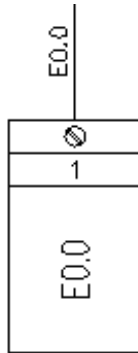


When the starting point of a wire coincides with a symbol, this configuration can be used so that the wire number is the same as the contents of any attribute in the symbol.

In the example, the symbol name, **INP1**, contains several attributes. The one containing the text E0.0 to be used as the wire number is the **INPUT** attribute.

The configuration to obtain this result is **Tag=INPUT** and **Block=INP1**.

To apply this configuration to all symbols of the same type (with INP prefix) you can insert **Block=INP***.

When “**Positional**” is configured, the advanced options are reduced to the following:

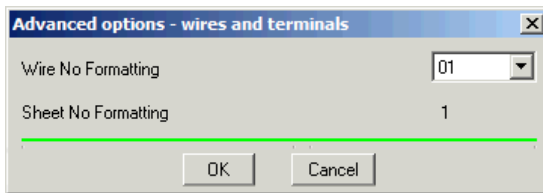

The rules imposed by this numbering system exclude the “**Wire properties**” and “**Terminal prop**” settings, as well as the preceding “Advanced options” parameters.

Wire number formatting

It is possible to format progressive wire numbers up to 4 characters.

Wire numbers like the following are assigned to **segment 6** on **sheet 3**:

With **1**, number examples: **361, 362, 363, etc.**

Con **01**, number examples: **3601, 3602, 3603, etc.**

Sheet number formatting

This is considered only when the “Sheet number as prefix” parameter is enabled. The value is configured using command “**3.1**”.

Wire numbers like the following are assigned to **segment 6** on **sheet 3**:

With **1**, number examples: **361, 362, 363, etc.**

With **01**, number examples: **0361, 0362, 0363, etc.**

Wires Labels



This configuration enables you to customize the command **“14.4 Marking”** for the EC116-1 standard Marking System **IEC391 Norm**.

Activate Output marking the processing (lists, tables and drawings) of Terminal boards and Connectors taking into account identifiers found on the drawing.

Do not show double markings: specifically with “Standard1” and “Standard2” when there are several connections on the same component pin (or terminals) you have identical marking values. This setting sets just one, single identifier for all conductors with the same marking.

Marking Connections Standard: you can choose one of the following 6 configuration types, not modifiable by the user:

- **Standard 1 - Pin of the component it is connected to**
- **Standard 2 - Reference and Pin of the component it is connected to**
- **Standard 3 - Pin of the 2 components connected**
- **Standard 4 - Reference and Pin of the 2 components connected**
- **Standard 5 - Reference and Pin of the opposite components**
- **Standard 6 - Pin of the 2 components and wire numbering**



The example in “Preview” is only available for the “Standard” configuration (the preview is not available for the “User” configurations).

Marking Connections User



Choosing the “User” marking style allows you to choose one of the customized user configurations (not standard).

To create a new “user” configuration you have to type in the name (in the “**Description**” field), the “**Composition**” (see marking composition parameter tables) and press “Add”. The configuration “Example1” (in the figure) is as follows:

The dialog box titled "User Configurations" contains three rows. The first row has a dropdown menu with "Example1" and a "Modify" button. The second row has a "Description" label, a text field with "Example1", and an "Add" button. The third row has a "Composition" label, a text field with "%S1:%P1-%NF", and a "Delete" button.

%S1(Name 1st component)

: (separation character)

%P1 (Pin 1st component)

- (separation character)

%NF (No. wire)

“User” configuration (%S1:%P1-%NF)

HL1:X1-100

In the section “Text features” you set the text style, position and features to be associated with the wire identifier.

- Height** Enter the text height.
- Color** Enter the text color code (clicking the colored rectangle you enter the color choice window directly).
- Width factor** 1 corresponds to the width factor of the original font, with values less than 1 you compress the text (values allowed between 0.5 and 1).
- Offset** The distance between the identifier text and the line of (normally 1 mm).
- Style** The text style list (created with the command “Style”).

Table of marking composition parameters


Parametr (%)	Description
%S1	Reference of first component
%S2	Reference of second component
%P1	Pin first component
%P2	Pin second component
%U1	Position first component
%Q1	Panel first component
%F1	Function group first component
%U2	Position second component
%Q2	Panel second component
%F2	Function group second component
%NF	Wire number



Changes to the list by pressing Add, Modify or Delete are stored “locally” in the job order file SPAC_cfg.ini (see “*Export Settings*” Sect. 4.2).

Automatic numbering

This window contains parameters used only by the automatic wire numbering function.

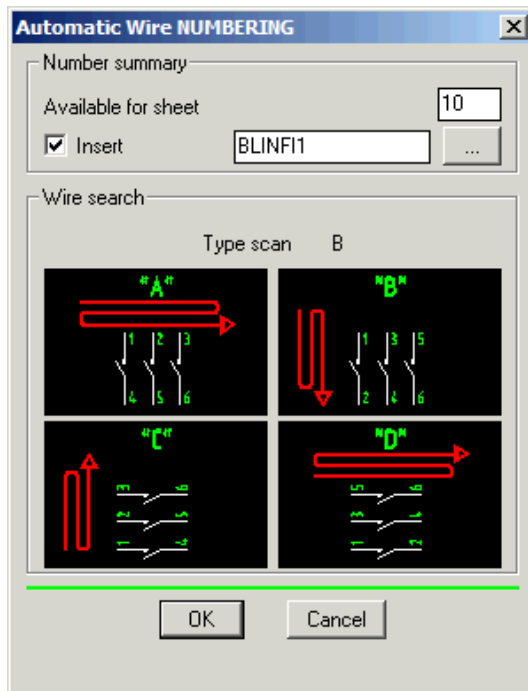

The main parameter for automatic numbering is search scanning:

Type A scanning is generally used on power diagrams, while **type B** scanning is used in all other cases.

Types C and D are only used when numbering on vertical drawings (JIC).

The "Spares for sheet" value is ignored when numbering with "sheet prefix" enabled (as numbering re-starts from the first value for each sheet).

The **Number summary** option enables the automatic operation that inserts a block specifying the first and last wire numbers on the current sheet. This block is called Blinfi and can also contain the last useable number in case of changes (calculated according to the "Spares for sheet" configuration). Press "..." to access the pull-down menu to select the block to be inserted.

Number summary

Wire number	
Start	100
End	134
Reserv.	144


Blinfi1.dwg symbol

"Blinfi" blocks are saved in the Libreria\Simboli directory. Each .DWG block corresponds to an .SLD image (slide) with the same name to be displayed in the dialogue window.

New blocks can be customized and saved in the same directory with existing blocks. The name of the block must follow on consecutively from existing names (Blinfi4, Blinfi5, etc.), with a maximum of 20 blocks (the dialogue box can display a maximum of 20 windows).

Note: If a block is deleted, blocks with subsequent numbers cannot be displayed.

Terminal box

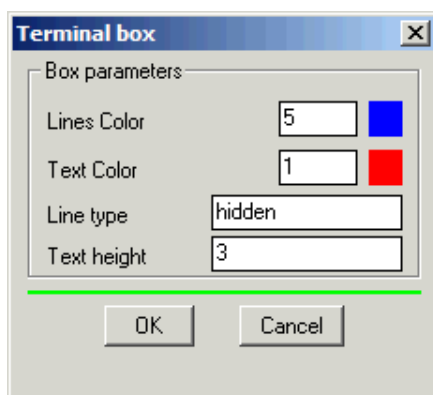


The box is a method for accelerating the insertion of terminals on components that belong to panels other than the default panel.

In addition to inserting terminals, a rectangle is drawn around the component, with color and type defined by the graphic features that have been configured.

During the running of command "6.1 Insert terminals" with the **box option**, the system requests the name of the panel to which it belongs. This value is text with the settings configured in "Height" and "Text Color".

Cable database

When opened, the configuration highlights the database of cables saved in the **DbCables.Mdb** file resident in the Librerie\Archivi directory. **During manual or automatic wire numbering and drawing of Power feeds, cable properties are attributed to the wire.** This configuration can be used to edit the database and define values and default settings.

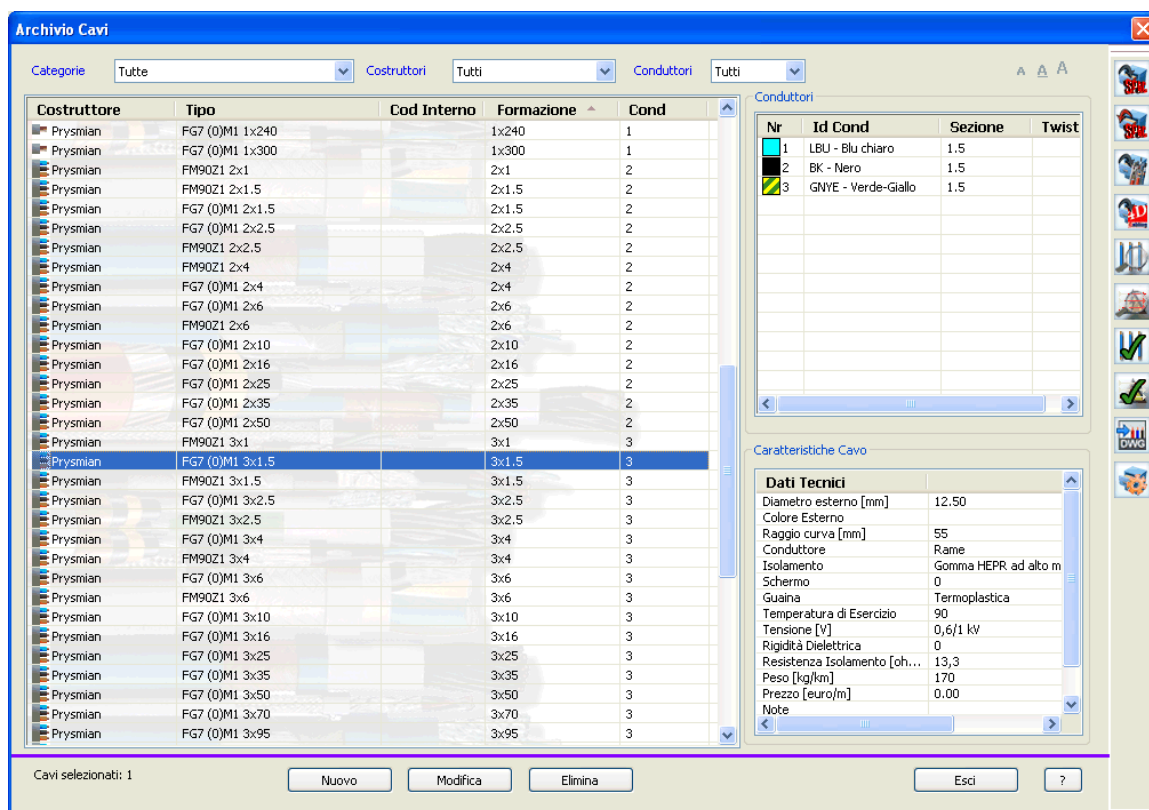

This database is also used during “Cable selection” (see Sect. 11.1), “11.2 Cable definition” and “20.2 Lay cables”.

Before adding a new cable to the database, at least one manufacturer, one category and the relevant colors must be configured.

Category Useful for the subdivision of cables according to a specific type:

Example: Favorites, Low Voltage, etc..

The “All” category is always present and cannot be deleted.

Manufacturers Filter on the Manufacturer's name.

The “All” category is always present and cannot be deleted.

Wires Filter on the quantity of wires (it acts on the cable's composition).

The “All” category is always present and cannot be deleted.



Cables associated with wires and power feeds can also be viewed with “5.4 Internal panel wiring” and “5.9 Loop Diagram”.

New cable

Press **New** to open the following window. To add a new code to the database, first select the **Category**, then the **Manufacturer**, and then enter the **Code**, **Description**, **Formation**, **Conductors** and **Outside Diameter** (data obtained from manufacturers' catalogues).

Code (Type)	CEI 20-27 and CEI-UNEL 35011 standard codes used to identify cable construction characteristics.
Description	Description of the item, useful for bill of materials.
Conductors	Set the total number of wires (or threads) in the cable. This value is used for the execution of the "Composition".
Formation	The make-up summarizes the number of wires and the diameter: the make-up of a 3-wire cable with a 1.5 mm diameter is 3x1.5 .
Diameter	The approximate outside diameter (in mm).

Each wire must be associated with an **ID** (number or color) and **Diameter** (in mm²). The **Remarks** and **Technical Notes** fields are optional.

ID Cond	Name: each cable conductor has a numerical or alphanumeric code.
Section	The diameter in mm must be assigned to each cable conductor.
Twist	Indicator of "twisted" wires.

The fields identified with () are mandatory..*

The **Id Cond** (ID or cable's thread) could be both a color or a numeric value.

To facilitate the compilation you can use the **"Wires Numbering"** button for a progressive numbering, or the commands on **"Insert\Modify Wires"**.

Insert\Modify Conductors

Select first the **Id Cond** (ID or wire's thread) to be associated to a color, then select the code to associate from the colors' list and finally press the **"Insert\Modify"** button.

Repeat the previous operation for all the wires on the cable to obtain a result as the one illustrated in the figure.

During the color association, it is possible to insert the section value.

Nr	Id Cond	Sezione	Twist
1	BK - Nero	1.5	
2	GY - Grigio	1.5	
3	BN - Marrone	1.5	
4	GNYE - Verde-Giallo	1.5	

The **"Section"** could be easily modifies by selecting **all the wires** (that have the same value) and pressing the **"Insert\Modify"** button.

Press the browse **"..."** button to add the colors and colors' combinations missing.

Inserisci/Modifica Conduttori

Id Cond\Colore: GY - Grigio ...

Sezione: GN - Verde, GNYE - Verde-Giallo, GY - Grigio, LBU - Blu chiaro, OG - Arancio

Twist:

Inserisci/Modifica

To manage the **"twisted"** cables, it is required to select the **"Id Cond"** of the wire to be twisted, then the conductor to be used from the **"Twist"** list and finally press the **"Insert\Modify"** button.



"Twisted" Cable

Duplicate Cable

This function is used **to save a new cable** using data that already exist for a cable in the database.

Use the right-hand mouse button to highlight the line containing the specific cable and open the command menu, as shown in the example.

Manufacturer	Type	Make-up
General Cavi		
None	N07V-K	1x1
None	N07V:	
None	N07V:	
None	N07V:	
None	N07V:	

New, Change, Delete, Duplicate

Set Default

This is used to configure the default cable to be used during drawing.

Wire



The configured wire is prompted by default during **"5.1 Number wires"**.

New values can be assigned from time to time without entering the database.



Show Default:

the cable configured as the **"Default wire"** is highlighted in the database.

Press the button to set values. To check settings at a later date, use **Show Default**.

Power feed



The configured cable is prompted by default when **"4.4 Power feeds"** are drawn.

New values can be assigned from time to time without accessing the database.



Show Default:

the cable configured as the **"Default Power feed"** is highlighted in the database.

Color codes

The color of wires in cables can be written in full or using abbreviations as specified by CEI-UNEL 00722.

CABLO\CABLE	TIPO\TYPE	NR. FLO. CONDUCTOR				
		100	101	203	204	205
C1	H07RN-F 3G15	BK	BU			
C2	H07RN-F 4G4			BK	BU	BN

The abbreviated form is always used automatically during "Cable table" (see Sect. 11.1).

The relative abbreviated form must always be configured for each color (or color composition).

Import \ Export Cables



Import Cables' Archive:

Consents to import an archive of cables registered on file **DbCables.Mdb**, and contained usually on the Spac folder "Librerie\Archivi".



Export Cables' Archive:

Consents to export an archive of cables registered on file **DbCables.Mdb**, and contained usually on the Spac folder "Librerie\Archivi".



Import Cables' Archive from previous versions to 2010:

Consents to import the cables archives from the previous versions of Spac, and registered on file **ArcCavi.Mdb**. Usually, this file is located on Spac folder "Librerie\Archivi".



Import Cables' Archive from CABLING:

Consents to import the cables archives from Cabling Software.



Update Cables on the drawing:

This command allows the **fast modification of the cables' codes contained in one or several multi-sheets**, creating a substitution table.

On one side you get all the cables obtained from the design, and on the other, the new cables that must substitute the selected codes.



Pressing this button you execute the scanning of the selected multi-sheet, in order to create the list of "Cables on the drawing".



Opens the "**Search Cables**" window: Consents the selection of a new cable to substitute another one selected previously from the list "Cables on the drawing".




Removes an associated cable.



Activates the procedure to modify the cables associated on the substitution table. The unassociated codes remain unchanged.


Terminal and Connectors Database

The terminals and connectors database is divided in 4 groups:

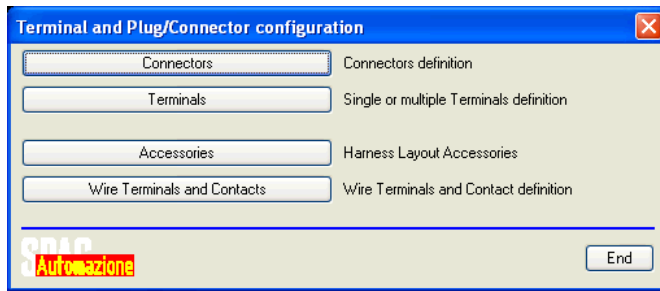

- Terminals Archive
- Connector
- Accessories
- Wires' Terminals Archive


The data in this archive is read and memorized in the **.amw** file of the general materials archive (refer to section *“8.1 Materials database”*), the file set by default is used as **Starting Archive**.

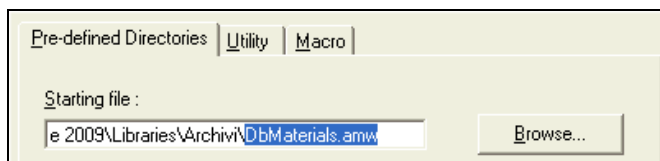


The **.amw** starting file is configured on the Materials Archive options.

This feature **does not consent to add or modify the materials codes**, but only to manage them properly for the insertion on the schemes and for the association to the graphical specifications.

Example: to add a new terminal code it is required to work as for any other material code, that is, it is required to access the general materials archive (refer to section *“8.1 Materials database”*), **associating to the new catalogue code the Terminal “Type”** (or the most convenient), as indicated in the figure.

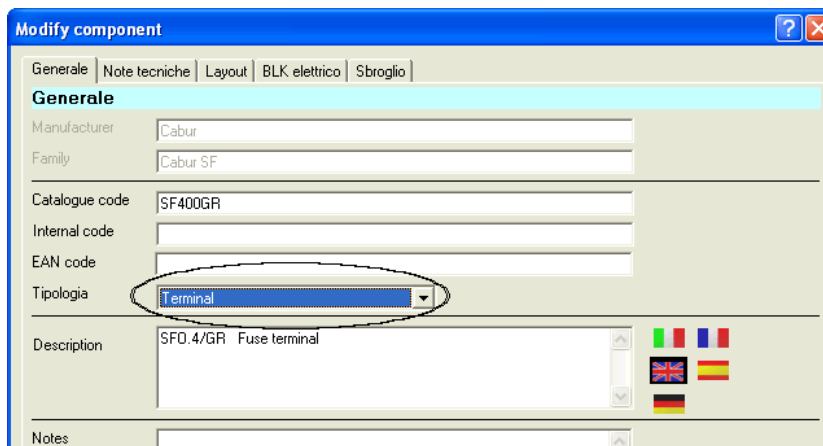

Types available:

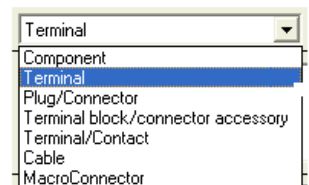

The scope of the terminals and connectors database is the association of further characteristics, as the Category (Normal, Multiple, Switch, etc.), the Section, the Levels, the Terminal and Terminal Block Symbol, and the accessories if any.



The archive is used on commands *“6.1 Insert terminals”* and *“6.2 Insert connectors”*.



The codes on the general materials archive could be imported by clicking on the “Add” button (one single code at a time).



WARNING: The terminals and connectors database of the previous versions of Spac (up to version 2008) were memorized in the **Morsetti.Dat** file (refer to section *“8.1 Materials database”*).

Terminals Archive

The terminals archive shows a list of all the codes present in the general materials archive (*refer to section “8.1 Materials database”*) associated to the Terminal **“Type”**.

Type	Costruttore	Tipo	Description	Section	Livelli	category
Cabur SF	Cabur	SF400	SFD.4 Fuse terminal	4	1	NORMAL
Cabur SF	Cabur	SF400GR	SFD.4/GR Fuse terminal	4	1	FUSE
Cabur SF	Cabur	SF410	SFD.4/V/S Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF410GR	SFD.4/V/S/GR Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF850	SFR.4(Ex) Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF900	SFR.4 Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF900GR	SFR.4/GR Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF910	SFR.4/V/S Disconnect terminal	4	1	ISOLATE
Cabur SF	Cabur	SF910GR	SFR.4/V/S/GR Disconnect terminal	4	1	ISOLATE
Cabur TE	Cabur	TE110	TE.16/D PE terminal ATEX CQ403	16	1	NORMAL
Cabur TE	Cabur	TE210	TE.16/D PE terminal ATEX CQ403	16	1	NORMAL
Cabur TE	Cabur	TE310	TE.50/D PE terminal ATEX CQ403	35	1	NORMAL
Cabur TE	Cabur	TE500	TE.10/D PE terminal ATEX CQ403	10	1	NORMAL
Cabur TL	Cabur	TL100	TLS.2 Initiator and actuator terminal	2.5	3	Multiple
Cabur TL	Cabur	TL100GR	TLS.2/GR Initiator and actuator terminal	2.5	3	Multiple
Cabur TO	Cabur	TO110	TE.6/D PE terminal ATEX CQ403	6	1	NORMAL
Cabur TO	Cabur	TO210	TE.16/D PE terminal ATEX CQ403	16	1	NORMAL
Cabur TO	Cabur	TO310	TE.50/D PE terminal ATEX CQ403	35	1	NORMAL
Cabur TO	Cabur	TO430	TE0.4 PE terminal ATEX CQ403	4	1	NORMAL
Cabur TO	Cabur	TO500	TE.10/D PE terminal ATEX CQ403	10	1	NORMAL
Cabur TO	Cabur	TO910	TE0.2 PE terminal ATEX CQ403	2.5	1	NORMAL
None	None	1.5 mm	No builder 1.5 mmq Feed-through terminal block	1.5	1	NORMAL
None	None	10 mm	No builder 10 mmq Feed-through terminal block	10	1	NORMAL
None	None	120 mm	No builder 120 mmq Feed-through terminal block	120	1	NORMAL
None	None	16 mm	No builder 16 mmq Feed-through terminal block	16	1	NORMAL

The codes present on the general materials archive, could be imported pressing the **“Add”** button.

- Add** To import one code from the general materials archive (a single code at a time).
- Mod** To modify or define the terminal specifications.
- Del** To delete a terminal code (only from the terminals archive in use).

Every terminal should have the following specifications:

Category You can select from “Normal”, “Multiple”, “Diode”, “Fuse” (with fuse embedded), and other terminals. Each category has a specific symbol group.

For the “Multiple” terminal, you have to specify the data related to the *levels*.

Section This is the value of the cross-sectional area in mm². For articles already present in the archive, the section was obtained from the manufacturer’s catalogue.

Terminal Symbol This is the graphical symbol to be associated to a new code inserted on the archive. Each category “Normal”, “Multiple”, “Diode”, etc. has its own group of symbols with a specific graphic.

The symbol associated is used by the command that inserts the component in the drawing, and it is selected according to the normative you are working with (IEC or JIC).

It is possible to personalize new blocks for terminals memorizing them in the same folder of those already present (SPAC\Library\Symbols), the block name should be consecutive to those in the folder (Example: _Mors-n3 , _Mors-n4, etc. for the “Normal” category IEC).

Each .dwg block must be associated with an image (slide) with the same name of the block for the visualization of the dialogue box. The image could be created using the command **“_Mslide”** (from the keyboard) to highlight the visible attributes.

NOTE: By deleting a symbol you can make not visible other symbols identified with consecutive numbers.

Terminal-Block Symbol	Configures the graphical block to represent the terminal on the terminal block (see section 6.3).
(Return Block)	The “Terminal Block Symbol” can be selected from the blocks on the folder Symbols\Terminals . New blocks could be personalized and memorized in the same directory of those already present in the system.

NOTE: The terminal block symbols have the file name with a prefix MO- .

(MOA- prefix is used for the accessories and MOC- for the constructive connectors).

For the multiple terminal codes, it is required to specify the levels list:

Add	To add a new level (type first the level name).
Mod	To modify a selected level (type first the new level name).
Del	To delete a level (verify the terminals already designed with this code).

Levels In this list it is required to make a description of the numbers or names of the levels on the multiple terminals. Let’s see an example of a double terminal:

1 2 or

A B

It is not allowed to insert level names with spaces.

NOTE: For multiple terminals it is required to associate adequate “Terminal Symbols” according to the levels quantity.

Some models (inserted as examples) are available on the folder Symbols\Terminals\Common block: MO-Ass-2LEV (2 levels), MO-Ass-3LEV (3 levels) etc.

Each terminal code is compatible with a list of potential accessories :

Add	Opens the “Accessori” to add a compatible accessory.
Del	To delete an accessory (<u>only from the terminals archive in use</u>).

The accessories could be of different types: fuses, diodes, labels, etc. All the accessories that are internal to the terminal must be considered on the Bill of Materials (but are not designed in the terminal block).

The list of “compatible accessories” is proposed during the insertion of the terminal on the scheme. The designer could select from time to time the accessories to be associated to the terminal.



The archive is used with feature “**6.1 Insert terminals**”.



WARNING:

The “Accessori” is composed by accessories for terminals and terminal blocks. It is important to associate only codes that are compatible with the terminals.

The accessories for the terminal block must be used exclusively during the personalization of the terminal blocks with command “**Edit terminal block**”.



The codes on the general materials archive, could be imported pressing “Add” button.



Neutral material codes are contained in the archive associated to manufacturer “None” or “Nessuno”.

Connectors Archive

The Connectors archive (Plugs \ Connectors) for terminals shows the list of all the codes present on the general materials archive (see “[8.1 Materials database](#)”) associated to the “**Type**” Plug\Connector.

The codes present on the general materials archive, could be imported by pressing the “**Add**” button.

- Add** Imports a code or a connector macro code (see “[Edit Macro Connectors](#)” from the general materials archive (a single code at a time).
- Mod** To modify or define the connector specifications.
- Del** To delete a connector code (only from the connector’s archive in use).

Every Plug / Connector code must have the following specifications:

- Category** The possibilities are “Plug” (with M+F), “Plug-M” (male) and “Plug-F” (female). Each category has a specific symbol group.
- Nr. Poles** This is the quantity of poles (pins); the value is obtained on section “**Poles and related Contacts**” (see “[Poles Management](#)”).
- Symbol** This is the graphical symbol to be associated to the connector’s poles (pins). There are specific graphical symbol groups to every category “Plug”, “Plug-M”, “Plug-F” etc.
- Connector Pin** The symbol associated is used by the command that inserts the element on the scheme; it is selected according to the normative used in the Job Order (IEC or JIC).

It is possible to personalize new blocks and memorize them on the same folder of those already present in the system (SPAC\Library\Symbols). The name of the block must be consecutive to those in the folder (Example: _MorsZ12 , _MorsZ13 etc. for the category “Plug” IEC).

Each .dwg block must have an image (slide) associated with the same name of the block to visualize it on the dialogue box. The image could be created using the command “**_Mslide**” (from the keyboard) to highlight the visible attributes.

NOTE: By deleting a symbol you can make not visible other symbols identified with consecutive numbers.

Connector Symbol Configures the graphical block to represent completely the connector with all the poles (see section 6.3).


(Return Block) The “Connector Symbol” is selected from the blocks structure on the folder **Symbols\Terminals**. It is possible to personalize new blocks and memorize them on the same directory of those already present in the system.

NOTA: The symbols for the connector have the file name with a MO- prefix.

(MOA- prefix is used for the accessories and MOC- for the constructive connectors).

Connector Symbol It is a graphical symbol to be associated (optional) to the connectors in the archive. There is a specific design by each brand, model and code.

(Constructive) The “Constructive Symbol” is selected from the blocks on the structure of folder **Symbols\Terminals**. It is possible to personalize new blocks and memorize them on the same directory of those already present in the system.

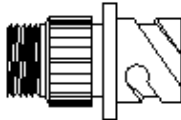

NOTE: The symbols for the constructive have the file name with the MOC- prefix.

For each Plug / Connector code it is required to specify the **list of poles and related contacts**:

Add To add a new pole (opens the window “**Poles Management**”).

Series To add a series of poles (opens the window “**Poles Series**”).

Mod To modify the characteristics of one or more poles.

Del To delete one or more poles.

Poles In this list it is required to make a description of the numbers or names of the poles (pins) on the connector. Let’s see an example of a plug of 6 pins + Ground:

1 2 3 4 5 6 PE or

RED BLACK YELLOW GREEN BLUE WHITE PE

It is not possible to insert poles names with spaces.

NOTE: For the connector’s jack to be crimped it is possible to specify the possible contact crimp types compatibles (optional).

Each connector code is compatible with a list of possible accessories :

Add Opens the “**Accessori**” to add a compatible accessory.

Del To delete an accessory (only from the terminal archive in use).

The accessories could be if different types: covers, cases, etc.

The list of “compatible accessories” is proposed during the insertion of the connector on the design. The designer can select from time to time the accessory to be associated, to be counted on the Bill of Materials (they are not designed on the graphical representation of the complete connector).



The archive is used by function “**6.2 Insert connectors**”.



WARNING:

The codes of the **metallic contacts to crimp** are contained on the “**Wires’ Terminals Archive**”.



It is possible to manage the accessories from command “**Edit connector**”.

Neutral material codes are contained in the archive associated to manufacturer “None” or “Nessuno”.

Poles Management

The management of the **“Poles and related Contacts”** is used to define the quantity of poles (pins) on the connector.

Series

First pole (A.. a.. 1.. A1.. 1A..)	1
Poles Number	5

Pressing the **“Series”** button you import only the name of the first pole and the **quantity of poles** to be created.

NOTE: Eventual contact codes to be crimped are indicated in the same way for every pole.

Add

Id Poles	PE

Pressing the **“Add”** button you can define the name of a new pole.

NOTE: Often used for the poles with a non-consecutive name (PE for example).

For the jacks of the multi-polar connectors (or similar) it is possible to make a description of the type of the **metallic contact to be crimped** that are compatible with it (optional),

Poles and associated contacts		
	IdPolo	Nr. Contatti
1	1	10
2	2	10
3	3	10
4	4	10
5	5	10
6	PE	No

The **“Number”** highlighted on the poles list represents the quantity of codes that are potentially compatible for the pole type (interchangeability of contacts).

The codes of the **metallic contacts to be crimped** are contained on the **“Wires’ Terminals Archive”**.

NOTE: For the Male+Female connectors, the quantity of compatible contacts to be crimped is doubled.

Available Contacts



Example of a jack for contacts to be crimped



Example of a contact to be crimped

Press the **“Add”** button to create the list of contacts available.

Costruttore	Tipo	Descrizione
Cabur	1105100	Contatto argentato a crimpare Maschio 0.5 mmq
Cabur	1105101	Contatto argentato a crimpare Femmina 0.5 mmq
Cabur	1108756	Contatto argentato a crimpare Femmina 1.5 mmq
Cabur	1108757	Contatto argentato a crimpare Maschio 1.5 mmq

Add Del

Contatti disponibili

Costruttore: Tipologia:

< Filtri < Ricerca

Costruttore	Tipo	Descrizione
Cabur	1050502	Contatto dorato a crimpare Maschio 0.14-0.37 mmq
Cabur	1050512	Contatto dorato a crimpare Femmina 0.14-0.37 mmq
Cabur	1105050	Contatto argentato a crimpare Maschio 0.14-0.37 mmq
Cabur	1105051	Contatto argentato a crimpare Femmina 0.14-0.37 mmq
Cabur	1105100	Contatto argentato a crimpare Maschio 0.5 mmq
Cabur	1105101	Contatto argentato a crimpare Femmina 0.5 mmq
Cabur	1108756	Contatto argentato a crimpare Femmina 1.5 mmq
Cabur	1108757	Contatto argentato a crimpare Maschio 1.5 mmq
Cabur	1135150	Contatto argentato a crimpare Maschio 6 mmq
Cabur	1135151	Contatto argentato a crimpare Femmina 6 mmq

For the connectors with a basin shape, or with a fixed connection (screw, spring, etc.), it is required to disable the setting of the **“Contacts to be crimped”** (without additional contacts).

☒ No additional contacts

This setting is valid for all the connectors that **does not** consent the interchangeability of the contacts.

Poles and associated contacts		
	IdPolo	Nr. Contatti
1	A	No
2	B	No
3	C	No


When a **“No”** (Nr. of Contacts) is highlighted in the poles list, it means that the connector pole does not consent the interchangeable contacts.



The contacts codes to be crimped are not requested during the insertion of the connector on the scheme. They could be managed with command **“Edit connector”**.

Accessories Archive

The Accessories archive shows a list of all the codes present on the general materials archive (*refer to section “8.1 Materials database”*) associated to the “**Type**” of Terminals / Connectors accessories.

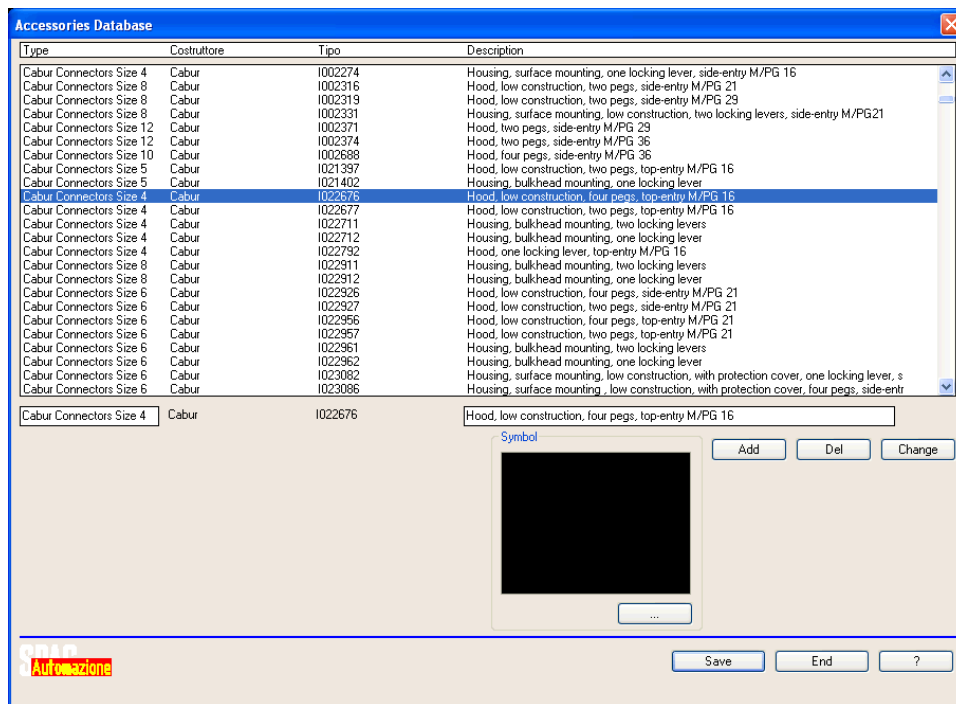

The codes on the general materials archive could be imported pressing the “**Add**” button.

- Add** To import an accessory from the general materials archive (a single code at a time).
- Mod** To modify the specifications of an accessory.
- Del** To delete an accessory code (only from the connectors archive in use).

- Accessories for terminals** Fuses, diodes, labels, etc. Considered for the Bill of Materials.
The “compatible accessories” list is proposed during the insertion of the terminal on the scheme.
- Accessories for connectors** Covers, cases, etc. Considered for the Bill of Materials.
The “compatible accessories” list is proposed during the insertion of the connector on the scheme.
- Accessories for terminal blocks** Fixing wires’ terminals, wires’ terminal boards, separators etc. Considered for the Bill of Materials and designed on the terminal block.
Inserted with the personalization of the terminal blocks with “**Edit terminal block**”.
- Symbol (Return Block)** Sets the graphical block to represent the accessories in the terminal block (*see section 6.3*).
The “Accessory Symbol” is selected from the blocks on the structure of the folder **Symbols\Terminals**. New blocks could be customized and memorized in the same directory of those already present in the system.

NOTE: The accessories symbol on the terminal block has a file name with MOA- prefix.



The archive is used on commands “**6.1 Insert terminals**” and “**6.2 Insert connectors**”.



Only the terminal block accessories are associated to the symbol, while the terminals and connectors accessories have not a graphical representation.

Wires' Terminals Archive

The wires' terminals archive shows the list of all the codes on the general materials archive (see "8.1 Materials database") associated to the Wires Terminals\Contacts "Type".

Type	Costruttore	Tipo	Description
Cabur 10A M	Cabur	1050502	Male crimp contact - Gold plated 0.14-0.37 mmq
Cabur 10A F	Cabur	1050512	Female crimp contact - Gold plated 0.14-0.37 mmq
Cabur 10A M	Cabur	1105050	Male crimp contact - Silver plated 0.14-0.37 mmq
Cabur 10A F	Cabur	1105051	Female crimp contact - Silver plated 0.14-0.37 mmq
Cabur 16A M	Cabur	1105100	Male crimp contact - Silver plated 0.5 mmq
Cabur 16A F	Cabur	1105101	Female crimp contact - Silver plated 0.5 mmq
Cabur 40A F	Cabur	1108756	Female crimp contact - Silver plated 1.5 mmq
Cabur 40A M	Cabur	1108757	Male crimp contact - Silver plated 1.5 mmq
Cabur 63A M	Cabur	1135150	Male crimp contact - Silver plated 6 mmq
Cabur 63A F	Cabur	1135151	Female crimp contact - Silver plated 6 mmq
Cabur 63A M	Cabur	1145150	Male crimp contact - Silver plated 10 mmq
Cabur 63A F	Cabur	1145151	Female crimp contact - Silver plated 10 mmq
Cabur 16A M	Cabur	1151002	Male crimp contact - Gold plated 0.5 mmq
Cabur 16A F	Cabur	1151012	Female crimp contact - Gold plated 0.5 mmq
Cabur 63A M	Cabur	1155150	Male crimp contact - Silver plated 16 mmq
Cabur 63A F	Cabur	1155151	Female crimp contact - Silver plated 16 mmq
Cabur 10A M	Cabur	1205050	Male crimp contact - Silver plated 0.5 mmq
Cabur 10A F	Cabur	1205051	Female crimp contact - Silver plated 0.5 mmq
Cabur 16A M	Cabur	1205100	Male crimp contact - Silver plated 0.75-1 mmq
Cabur 16A F	Cabur	1205101	Female crimp contact - Silver plated 0.75-1 mmq
Cabur 40A F	Cabur	1208756	Female crimp contact - Silver plated 2.5 mmq
Cabur 40A M	Cabur	1208757	Male crimp contact - Silver plated 2.5 mmq
Cabur 10A M	Cabur	1225050	Male crimp contact - Gold plated 0.5 mmq
Cabur 10A F	Cabur	1225051	Female crimp contact - Gold plated 0.5 mmq

Search fields: Type (Cabur 10A F), Costruttore (Cabur), Tipo (1050512), Description (Female crimp contact - Gold plated 0.14-0.37 mmq). Buttons: Add, Del, Change.

Counterpart: ... Counterpart (Cabur), Tipo (1050502), Description (Male crimp contact - Gold plated 0.14-0.37 mmq). Buttons: Save, End, ?.

The codes are present on the general materials archive, and could be imported pressing the "**Add**" button.

Apart from the **contacts to be crimped**, the termination tubes, insulated wires' terminals, etc. could also be found in this archive.

Add To import a wires' terminal from the general materials archive (one single code at a time).

Mod To modify the wires' terminal specifications.

Del To delete a wires' terminal code (only from the connectors archive in use).

Counterpart Used for the creation of the association male-female between the contacts to be crimped. They are managed during the connectors' customization with "**Edit connector**".



The archive is used with commands "**6.1 Insert terminals**" and "**6.2 Insert connectors**".




The contacts codes to be crimped are not requested during the insertion of the connector on the scheme. They could be managed with command "**Edit connector**".

Loop Diagram



This is used to define the graphic features of summary tables for connections created by the command “5.9 Loop Diagram”. The parameters also establish position and dimensions.

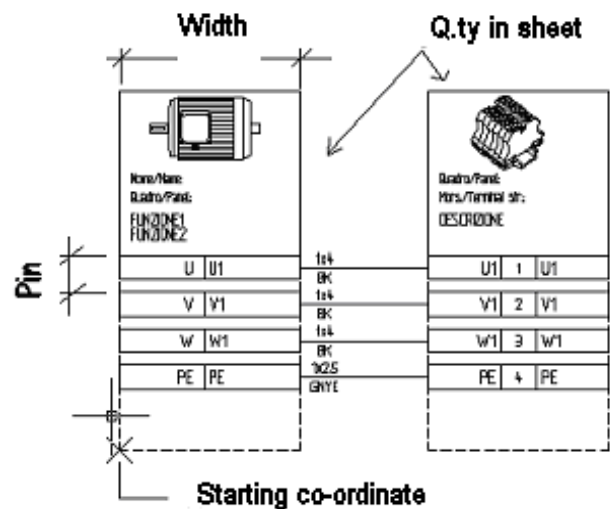

Starting co-ordinate

This is the insertion point for the first column to the left of the connections. It depends on the useful dimensions of the title block; press the “Select <” button to select a point directly on the drawing.

Width

This is the width, in mm, of the connections column. Press the “Select <” button to select two points directly on the drawing, corresponding to the desired distance.

Qty in sheet

This is the maximum number of connection columns drawn for each page; past this limit the function continues onto the next page.

Distance between Pins

Establishes the pitch of horizontal connections.

Use Config. in Archives

When you choose a configuration different from the one set in “Pref”, containing matching between library symbols and Loop Diagram specific blocks (or when there is no matching), a **neutral symbol** (named **LD_Neutral.dwg**) is used instead. This symbol appears as a rectangular box containing the same symbol used in the electrical diagram, resized to fit the box.

(See Loop Diagram “Configuration”).



The configuration in the figure is the one stored by default.

Terminal block



This is used to define the graphic characteristics of the terminal block drawing created by command “**6.3 Terminals and connectors**”.

Terminal block drawing configuration

Table parameters

Start X: 120 Y: 255 Select <

No. of Terminals: 40

Clearance between terminals: 5

No. of columns: 2

Clearance between columns: 180

☒ Vertical ☐ Horizontal

Jumpers

☐ Draw Jumpers

☐ On Input wire (NumI) Distance block: 40

☐ On Output wire (NumO) Distance block: -50

Jumpers step: 10

Return block

Default symbol: TAB-MOR1 ...

☐ Always use default symbol

Usage Fields Visibility

☒ Panel

☒ Reference

☒ Function 1

☒ Function 2

Usage drawing

OK Cancel

Table parameters are used to define the maximum overall dimensions of the terminal block during automatic creation of the drawing.

"Start" is the co-ordinate onto which the first "Return terminal block" is inserted (configured in the **Terminal and Connectors Database**). The number of terminals inserted in the same sheet (horizontally or vertically) is the number configured in "Number of Terminals", at the distance configured in "Pitch" (this value must be the same as the height of the return terminal block).

When the first column of terminals (strip) is complete, the terminal block continues on the next sheet if the "Number of columns" is set to 1, or in a new strip on the same sheet, starting at the distance configured in "Pitch between columns".


“External jumpers” are only activated during terminal board drawing (not in the case of “Usage Drawing” output) tracing outside the terminal symbol connections to be achieved using jumpers.



On

Activate external jumpers: you can set the jumper drawing for the Input (NumI) and Output (NumO) wire number.

The external jumper is drawn even if NumI and NumO are not consecutive. By activating the external jumper you turn off the “traditional” jumper

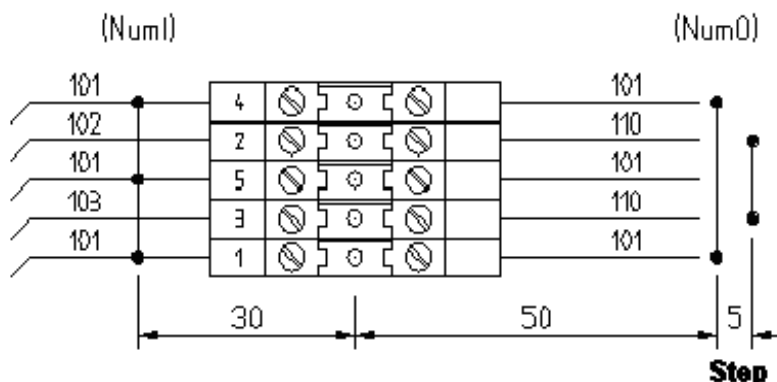

Example :

NumI : Distance -30

NumO : Distance 50

Step : 5


Example of external jumper activated on NumI and NumO



WARNING: The external jumper is not compatible with the blocks “**Terminal block symbol**” which do not have the attribute **CRS_CONN_POINT** (symbols prior to the 2007 version).

**Turn off external jumper:**

Enables jumper drawn in the “traditional” way.

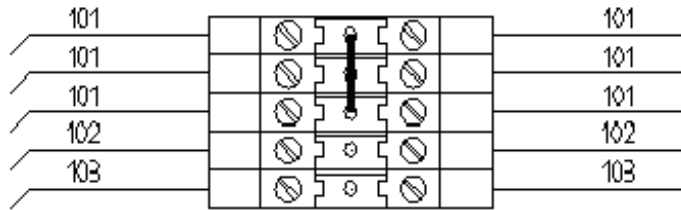Traditional Jumper

Example of “traditional” jumper (on consecutive Num1)



By “traditional” jumper we mean one drawn between terminals with the same Num1 value placed consecutively.

The jumper is drawn by tracing a normal line (poly-line 0.5mm thick), where starting and destination positions are determined by a point (drawn using the command “Point”) present in the symbols to be jumped.

The **Return Block** (default symbol) is configured with the name of an existing symbol in the Symbols directory. The value can be selected by pressing "...".


The **Visible Usage Fields** set parameters used for “Terminal usage drawings” (see Sect. 6.3).

Always use the default symbol:**On**

Terminal board with unified graphics: the drawing terminal board is created using only this symbol. Used only for table terminals (Tab-Mor*).

**Off**

Terminal board with detailed graphics: the default symbol is used only in cases where a terminal in the database does not have its own "return block" configuration.

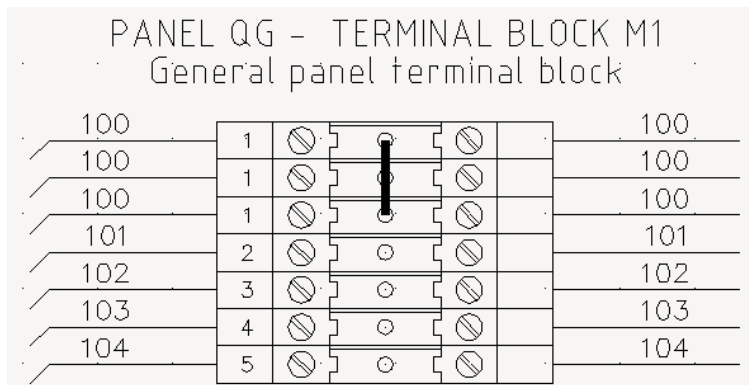

Terminal block drawn with return block AB2-50

New blocks can be customized and saved in the same directory as existing blocks.


The block name must be selected from those available (from MO-BLK1 to 24). Each new symbol must correspond to an image (slide) with the same name to be displayed in the dialogue window.



The configuration shown in the example is the one stored by default.

Visible Usage Fields set useful parameters for the “Terminal usage drawings” (see Sect. 6.3).

Sheet title legend

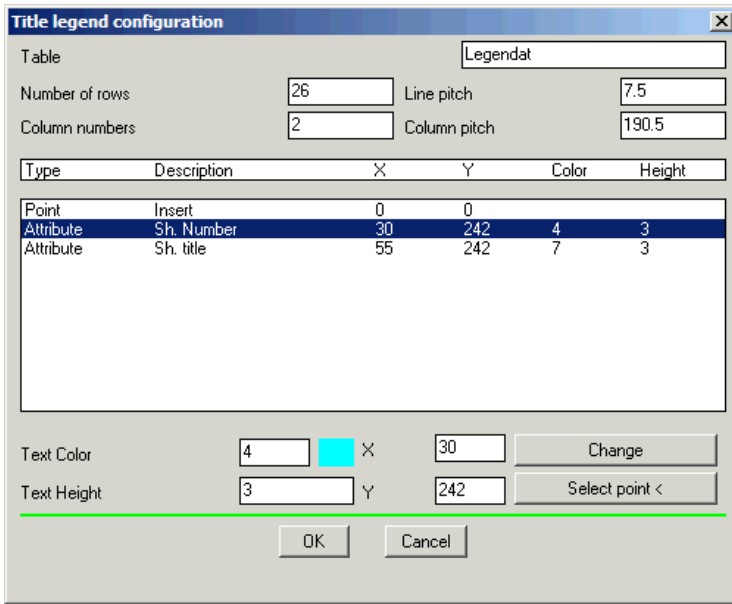

Title legend configuration

Table:

Number of rows: Line pitch:

Column numbers: Column pitch:

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Attribute	Sh. Number	30	242	4	3
Attribute	Sh. title	55	242	7	3

Text Color: X

Text Height: Y

This configuration is used to insert data in the table. This is automatically inserted in the drawing when the “**Sheet legend**” command is sent (see Sect. 3.18).


The default table symbol is **LegendaT.dwg** in the symbols directory. Different table symbols can be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

Revision legend

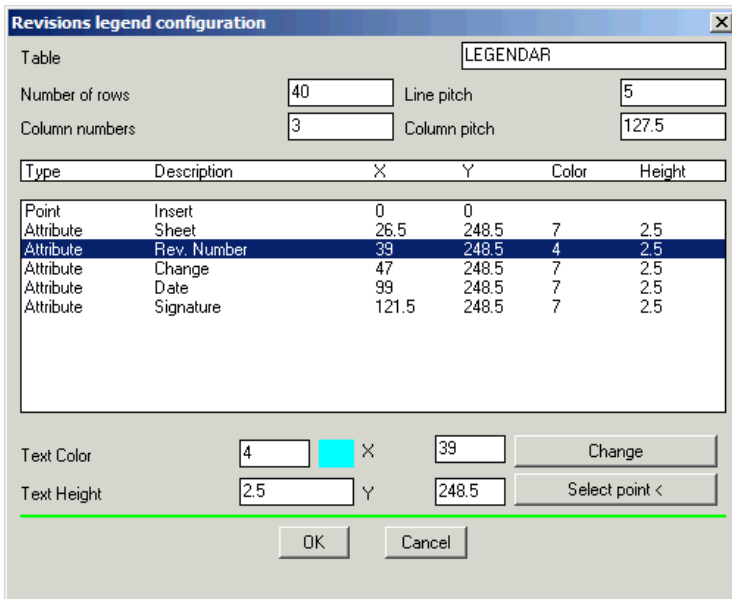

Revisions legend configuration

Table:

Number of rows: Line pitch:

Column numbers: Column pitch:

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Attribute	Sheet	26.5	248.5	7	2.5
Attribute	Rev. Number	39	248.5	4	2.5
Attribute	Change	47	248.5	7	2.5
Attribute	Date	99	248.5	7	2.5
Attribute	Signature	121.5	248.5	7	2.5

Text Color: X

Text Height: Y

This configuration is used to insert data in the table. This is automatically inserted in the drawing when the “**Revision Legend**” command is sent (see Sect. 3.17).

The default table symbol is **LegendaR.dwg** in the symbols directory.

Different table symbols may be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

Function legend

This configuration is used to insert data in the table. This is automatically inserted in the drawing when the “Function legend” command is sent (see Sect. 14.1).

Function legend configuration

Table

LEGENDAF

Number of rows

11

Line pitch

20

Column numbers

3

Column pitch

127.5

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Point	Symbol	25	245		
Attribute	Name	55	260	4	3
Attribute	Function 1	67	257	3	2.5
Attribute	Function 2	67	250	3	2.5
Attribute	Panel	55	255	7	2.5
Attribute	Sheet	55	250	7	2.5

Text Color

3

X

67

Change

Text Height

2.5

Y

257

Select point <

OK

Cancel

The default table symbol is **LegendaF.dwg** in the symbols directory.

The same directory contains 3 table symbols, that differ for the number of columns (2, 3 and 4 columns).

Different table symbols can be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

Symbol legend

This configuration is used to insert data in the table. This is automatically inserted in the drawing when the “Symbol” command is sent (see Sect. 14.1).

Symbols legend configuration

Table

LEGENDAS

Number of rows

11

Line pitch

20

Column numbers

2

Column pitch

190

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Point	Symbol	25	245		
Attribute	File name	55	255	7	3
Attribute	Description	67	255	3	2.5

Text Color

7

X

55

Change

Text Height

3

Y

255

Select point <

OK

Cancel

The default table symbol is **LegendaS.dwg** in the symbols directory.

The same directory contains 3 table symbols that differ for the number of columns (2, 3 and 4 columns).


Different table symbols may be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

Cross-reference legend

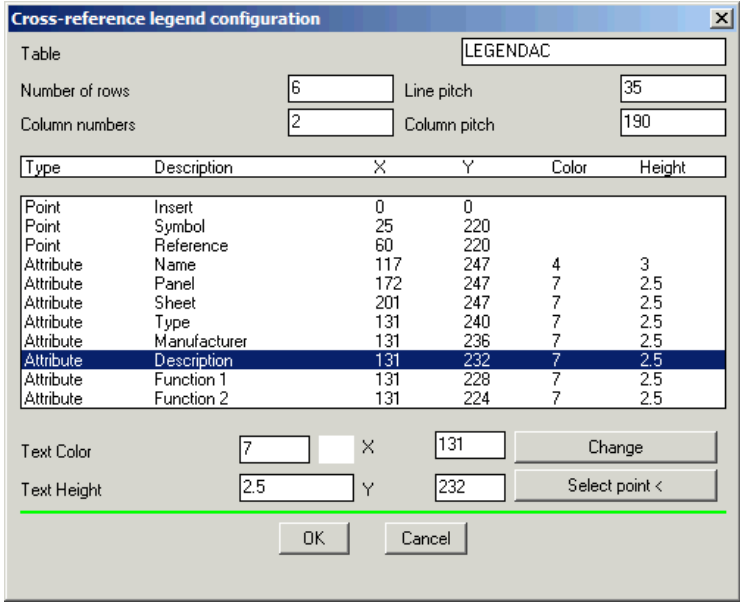

Cross-reference legend configuration

Table:

Number of rows: Line pitch:

Column numbers: Column pitch:

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Point	Symbol	25	220		
Point	Reference	60	220		
Attribute	Name	117	247	4	3
Attribute	Panel	172	247	7	2.5
Attribute	Sheet	201	247	7	2.5
Attribute	Type	131	240	7	2.5
Attribute	Manufacturer	131	236	7	2.5
Attribute	Description	131	232	7	2.5
Attribute	Function 1	131	228	7	2.5
Attribute	Function 2	131	224	7	2.5

Text Color: X

Text Height: Y

This configuration is used to insert data in the table. This is automatically inserted in the drawing when command “7.5 Cross” is sent.

The default table symbol is **LegendaC.dwg** in the symbols directory.


Different table symbols may be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

Legend Bit I-O Plc

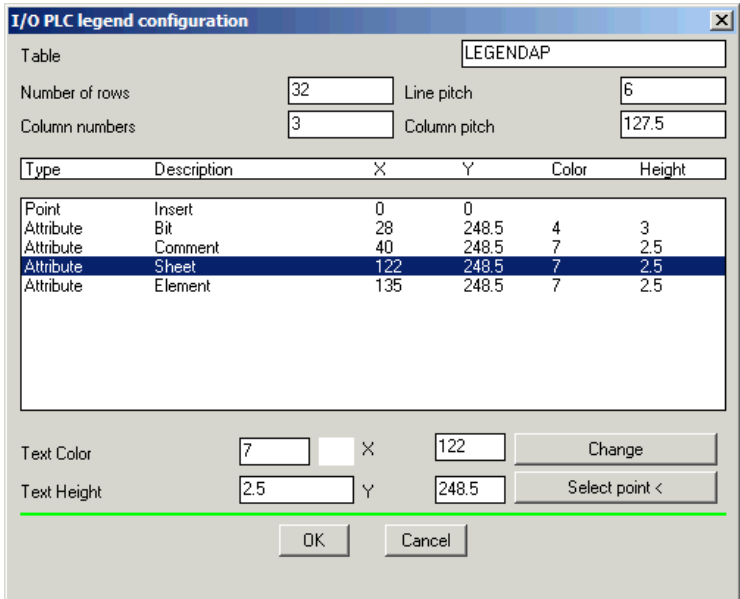

I/O PLC legend configuration

Table:

Number of rows: Line pitch:

Column numbers: Column pitch:

Type	Description	X	Y	Color	Height
Point	Insert	0	0		
Attribute	Bit	28	248.5	4	3
Attribute	Comment	40	248.5	7	2.5
Attribute	Sheet	122	248.5	7	2.5
Attribute	Element	135	248.5	7	2.5

Text Color: X

Text Height: Y

This configuration is used to insert data in the table. This is automatically inserted in the drawing when the “I-O” command is sent (see Sect. 13.4).

The default table symbol is **LegendaP.dwg** in the symbols directory.

Different table symbols may be used, provided these are saved in the same directory.

Text color is important for Translator configuration (see Sect. 12.4).



The configuration shown in the example is the one stored by default.

4.3 Panel setting




Pop-menu > *Product name*

This is used to store the list of references to attribute to panels, pushbutton panels, boxes, zones, etc.

While a component, terminal or connector is inserted in the drawing you are asked for the name of the Panel he has to be referred to.

Panels structure is usually set to **1 level** (default behaviour), in case of specific needs you can refer to norm CEI-EN 61346 and set it to **3 levels** (see "*Location Manager*").

This is a hierarchical structure made of **Location, Panel and Function Group**, where for each Location you may have many Panels, and for each Panel you may have many Function Groups.

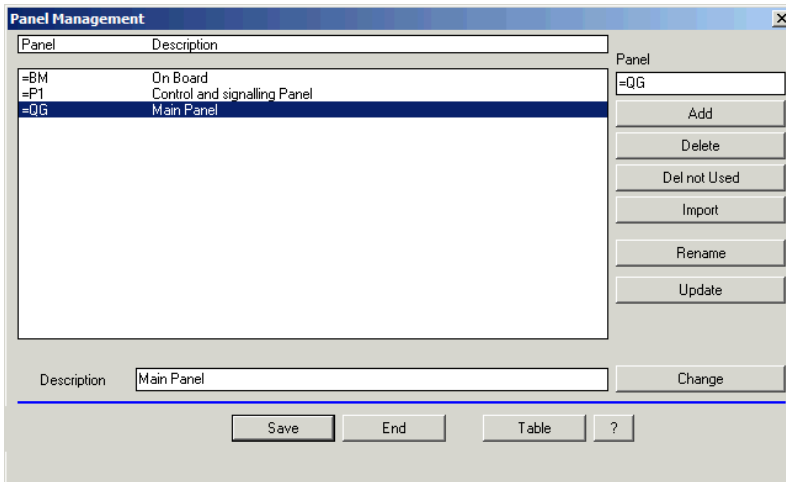The 'Panel Management' dialog box features a table with two columns: 'Panel' and 'Description'. The table contains three entries: '=BM On Board', '=P1 Control and signalling Panel', and '=QG Main Panel'. The third entry is selected. To the right of the table is a 'Panel' input field containing '=QG', with buttons for 'Add', 'Delete', 'Del not Used', 'Import', 'Rename', 'Update', and 'Change' below it. At the bottom of the dialog are 'Save', 'End', 'Table', and '?' buttons. A 'Description' field at the bottom left contains 'Main Panel'.

To insert new panels (14 characters max.) enter the reference and then press "**Add**" to the list.

To assign a description to a Panel press "**Change**".

Press button "**Save**" to apply list modifications.

It's allowed to delete a Panel value only if it is not in use.

Dialogue "Panel setting" (1 Level).




See "*Location setting*").

To delete all unused Panels automatically, press the button "**Del non Used**". To import the Panel structure used in an existing job order (not the current one), press "Import" and choose the job order. Function "**Update**" modifies Panel value on symbols already existing (and selected) in diagram.

The new value replaces the previous one without any confirmation request. The value is stored in attribute "quadro" of each symbol.

Rename

Function "Rename" lets you change Panel value in all diagram symbols.

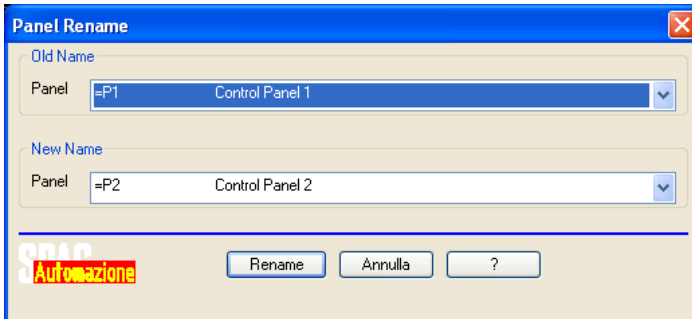The 'Panel Rename' dialog box has two sections. The 'Old Name' section shows a dropdown menu with 'Panel =P1 Control Panel 1' selected. The 'New Name' section shows a dropdown menu with 'Panel =P2 Control Panel 2' selected. At the bottom are 'Rename', 'Annulla', and '?' buttons. A red 'SPAD Automazione' logo is visible in the bottom left corner.

The example at left shows an automatic replacement of value Panel **=P1** with **=P2** ; command applies after pressing button "**Rename**" on all components of all selected multisheets.

Finally, on command line is reported the number of updated components.

Location setting

Activate specific setting “**Location Manager**” in Preferences to set **3 level** Panel structure.

While a component, terminal or connector is drawn you are asked for names of Location and Panel it belongs to; optionally you can specify a Function Group, as described in norm CEI-EN 61346.

Location	Description
[any]	
+LOC1	Location \ Ubicazione 1
+LOC2	Location \ Ubicazione 2

Panel	Description
=QG	General Panel \ Quadro Generale
=P2	Control Panel 2 \ Pulsantiera 2
=P1	Control Panel 1 \ Pulsantiera 1

Function Group	Description
-GF1	Transport \ Trasporto
-GF2	Carico \ Charge

To insert a new level reference (max 14 characters) type its name then press “**Add**” to the list at preferred level.

For each Location, Panel or Function Gr. You can associate a description pressing “**Change**” button.

Press button “**Save**” to apply list modifications.

It’s allowed a level value only if it’s not in use.

Note:

Deleting a Location value implies automatic deletion of all sub-levels (Panels and Function Groups) it contains.

Dialogue “Panel setting” (3 Levels).



See “4.3 Panel setting”

To delete all unused items in a level, press “**Del not Used**” for the level required.

To import the Panel structure used in an existing job order (not the current one), press “**Import**” and choose the job order. “**Update**” function modifies level values of symbols already existing (and selected) in diagram.

New values replace previous ones without any additional confirmation request. 3 level values are stored in “panel” attribute of each symbol, following the syntax:

Location # Panel # Function Group

Character # is used as separator (Example : +Location#=BM#-GF2).

“**Rename**” function changes level values of all symbols on diagram.



WARNING:

A project developed with a **3 level structure can’t be converted to 1 level.**

Table

You can draw the Panel list in table form or save on file (Board-Listv) by pressing the button “Table”.

The number of columns in the table depends on the Panel structure set, 1 level (standard functioning) or 3 levels (standard CEI-EN 61346).

Panel	Description
'=QG	Main Panel
'=BM	On Board
'=P1	Control and signalling Panel

Panel table with 1 level setting.



(see “4.3 Panel setting”)

Location	Panel	Function Group	Description
Ubication1			
	'=BM		On Board
	'=BM	'-GF1	Laoded zone =BM Transporter
	'=BM	'-GF2	Loaded zone =BM Unloaded
	'=BM	'-GF3	Loaded zone =BM Processing
	'=P1		Control and signalling Panel
	'=QG		Main Panel

Panel table with 3 level setting.




(see “Location setting”).

4.4 Power feeds



Pop-menu > *Product name*

Select Power feeds to access the following dialogue window, which contains all functions useful for drawing **power feed lines** in different ways. All these functions have a "**super wire**" system, which automatically recognizes the dimensions of symbols on the wire or connection path.

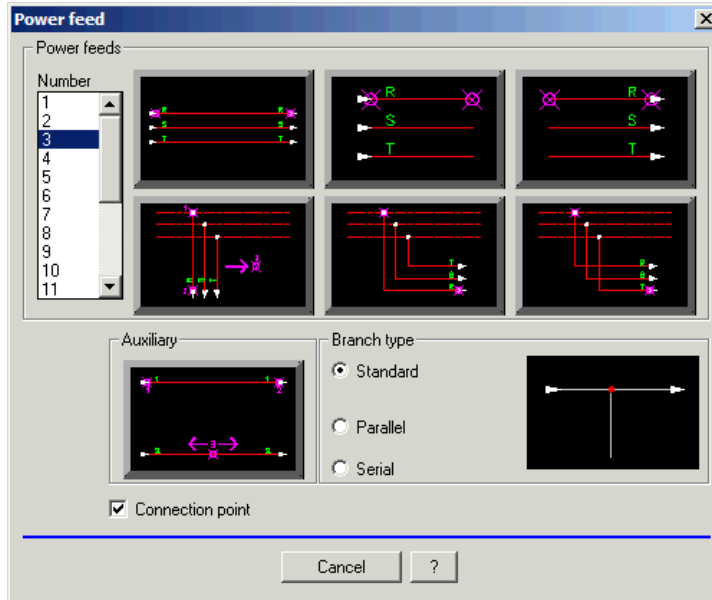


Line color (default 1 red), distance between lines (power feed pitch) and type of return are configured in "**4.1 Setup**".

The **Number of power feeds (from 1 to 20)** refers to the number of parallel lines required (configure before selecting the function from the window).

For each power feed, always select the **signal name** and **cable properties**. **Line type** can be used to configure a dashed line for drawing the ground line, for instance (line types must have previously been loaded onto the drawing).

"Power feed" dialogue

Power feeds

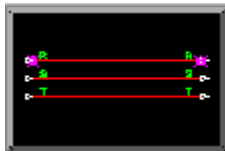

This function is used to draw a series of power feed lines quickly, with destination arrows (for reference from previous sheet) and starting point arrows (to next sheet). Starting point and destination point co-ordinates are stored each time and then presented as default settings the next time the command is used. This enables power feeds to be drawn in the same position on several sheets.



This command should not be used on the first sheet of the drawing, which must not contain destination arrows.

Destinations




This function is usually called up to draw the last sheet onto which a power feed is referred. Only destination arrows are drawn (to left).

Starting points



This function is generally called up to draw the starting point of a power feed on the first sheet. Only starting point arrows are drawn (to right).


Auxiliaries

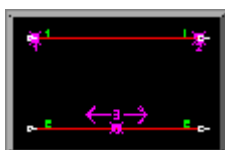

The first and second points are requested for starting and terminating the first line (top), then one point only is requested to define the height for the position of the second power feed (pass point of 2nd signal at bottom).


In this case, too, the co-ordinates and names of the power feeds are stored and presented again the next time the function is used.

Branch

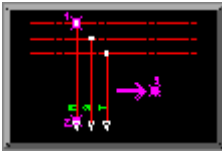


This function is used to draw power feeds that branch off from existing lines in a perpendicular direction and automatically take the name of the connection. The only data that must be entered is the Branch (used for connections with the same signal name) in order to indicate that the double starting point is intentional and not a "repeated start" error.

L-Branch

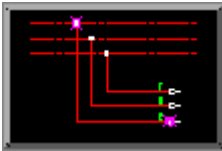






This function is similar to that described above. The only difference is that the new power feeds are drawn parallel to existing ones and in the reverse return sequence.

X-Branch

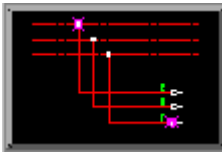

Same as L-Branch, but the return sequence is not reversed.

   
The various functions can be drawn to feature different connection modes. The connection point is optional in all 3 cases:

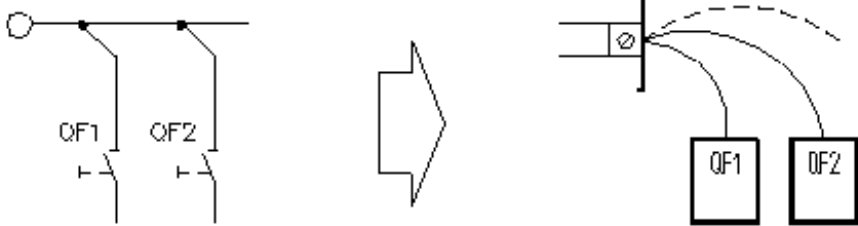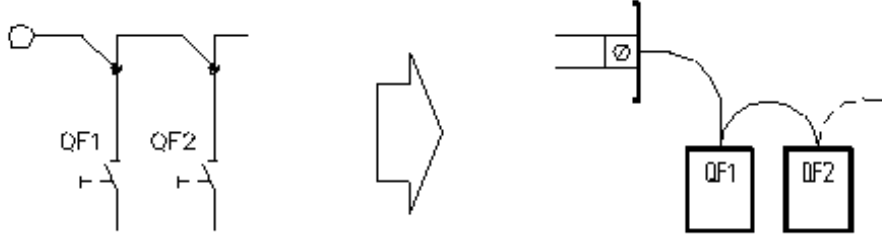Standard 	The traditional method is certainly the <u>easiest and quickest</u> way of drawing, but it is restricted in the sense that there is no graphic representation of how the connection is actually made. This limits some functions and reduces processing potential. N.B.: If connections are drawn using the standard method, data contained in tables "5.4 Internal panel wiring" and "5.9 Loop Diagram" is less reliable than if "Parallel and Serial" drawing methods are used.
Parallel 	When this method is used, the type of connection is specified in detail:  In the example, components QF1 and QF2 receive the power feed directly from the terminal block.
Serial 	 The example illustrates how component QF1 receives the power feed directly from the terminal block, while QF2 is supplied by means of a jumper run from QF1.

Power returns

This command is used to insert return symbols, one by one, in points you select. If **“Automatic Positioning”** is active (see Sect. 4.2), command chooses where to insert a start or destination return depending on selection point and line slope, rotating it 0° or 90°.

If **“Automatic Positioning”** is inactive, a dialogue window is shown, containing all configured symbols (see **“Returns”** Sect. 4.2), included the ones rotated by 180° and 270°.

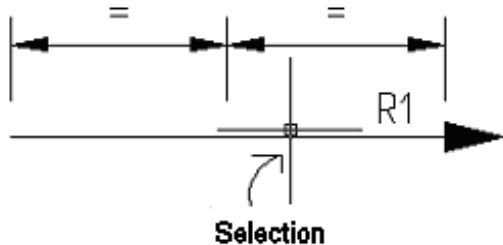


Return is placed in the extreme point nearest to the one used to select the line.

In case the selected line has data stored inside, there are picked up and used without further questions.

When you insert a return you must type the **Signal** name, while Description (or Branch) is optional in case of double start from a single line.

Power feed data include cable features, too; these data are set by default using command **“Cable database”** (see Sect. 4.2).

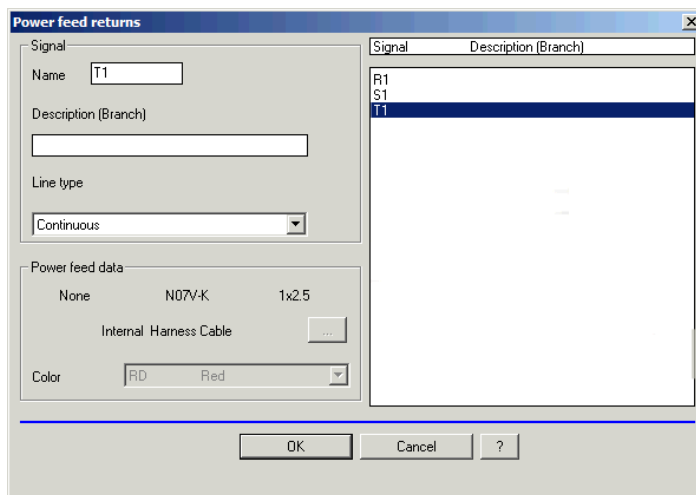

You can choose each time different cable features and colors pressing button **“...”**

You can't apply modifications in case the signal name already exists, or the name is chosen using the list of existing names.

“Power returns” dialogue



To use Description (or **Branch**) correctly, see **“Cross-Reference Returns”**.

If **“Insert Start + Destination”** is set in return options (see Sect. 4.2) **while you insert a start return** you can insert the associated destination return on a specified page, too.

You are not allowed to place returns anywhere, but only selecting a wire (or line). To change returns data use command **“5.7 Ddattef”** only, while **“Ddatte”** have different results.




WARNING : Avoid using CAD “Ddatte” command to change returns data.

4.5 Connections



Pop-menu > *Product name*

Select Connections to access this dialogue window, which contains 12 functions frequently used to accelerate electric drawing layout. All these functions have a **"super wire" system**, which automatically recognizes the dimensions of symbols on the wire or connection path.

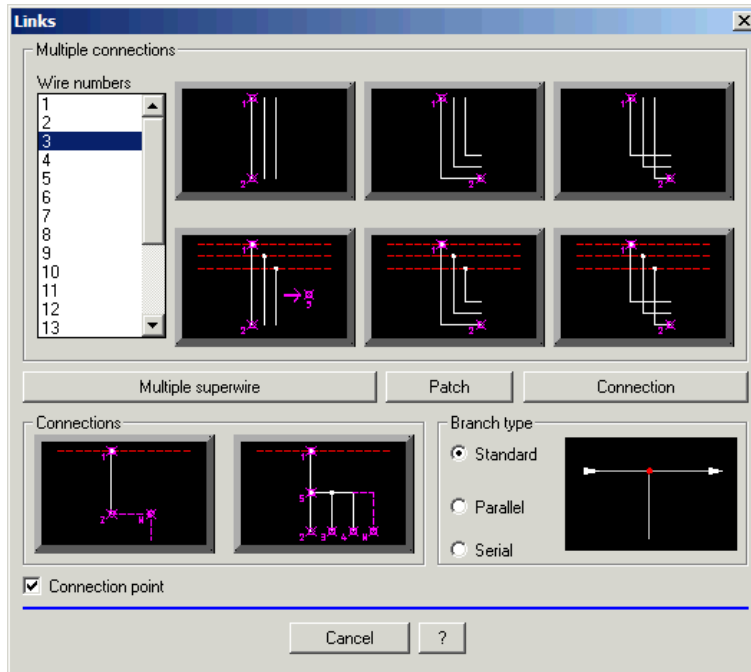


Line colors (BY LAYER) and the distance between lines (wire pitch), are configured in **"4.1 Setup"**.

The **Number of wires (from 1 to 20)** to be drawn only affects the 6 "wire" and "node" functions.

"Connections" Window

Wire

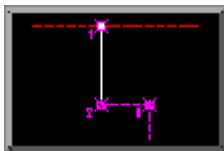

This is used to draw a line and insert connection points automatically (if enabled). When the wire starts from a line that has already been drawn, it assumes the color and line type features of that line.

This efficiently connects elements drawn in series (these must be perfectly aligned): on inserting the first point on the higher power feed line and the second on the lower power feed, the necessary links are drawn inclusive of connections.

With standard connections, the function proceeds without requesting any further information; with serial and parallel connections, the system requests wiring directions, right or left for connecting the wire to horizontal lines, up or down when connecting to vertical lines.


The difference between serial and parallel connections is explained in the previous paragraph (see **"4.4 Power feeds"**).

The user is advised to work with Ortho and Snap always enabled.



Tables produced using **"5.4 "** and **"5.9 Loop Diagram"**, with standard drawn connections, present data which is less reliable than that produced by "Parallel and Serial" drawing methods.

Branch

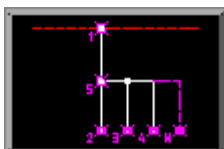

This is used to enable rapid drawing of lines connecting several parallel components. If the starting point is on an existing line, the wires automatically assume the color and line type of that line.


The <first termination point> connects the first component; <subsequent termination points> connect parts parallel with the first.

The user is advised to work with Ortho and Snap always enabled.



Branch is only operational in Standard connection mode.

Wires

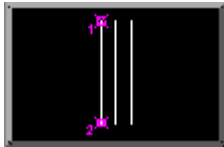

This is used to draw a series of parallel lines, according to the number configured in "Number of wires", between 2 orthogonal points (or wires for straight line connections) at the distance configured in "Wire pitch" with command **"4.1 Setup"**.

L-Wires



This function operates in the same way as the Wires function. It is used to draw non-orthogonal connections between a vertical component and a horizontal one.


The user is advised to work with Ortho and Snap always enabled.

X-Wires



This function operates in the same way as the Wires function. It is used to draw non-orthogonal connections between a vertical component and a horizontal one, **crossing the signals**.

Node

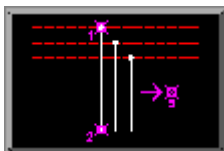

This function is often used to connect a vertical component to a power feed. The number of branch wires is configured in "Number of wires". The function makes sure that the number of branch wires does not exceed the number of power feed lines.

The node takes the color and line type characteristics from existing power feed lines.


L-Node



This function operates in the same way as the Node function. It is used to connect a multipole component with 90° rotation to a horizontal power feed.

The user is advised to work with Ortho and Snap always enabled.

X-Node

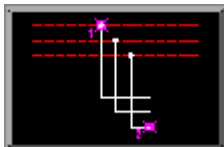


This function operates in the same way as the Node function. It is used to connect a multipole component with 90° rotation to a horizontal power feed, **reversing signal sequence**.

Multiple super wire

The function operates in the same way as the super wire, with the difference that the operation is repeated from left to right, according to the "Number of connections" configuration, at the distance defined in "Pitch between connections".


Patch

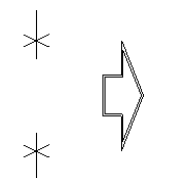

This function is used to re-connect two wires that are separated when a symbol is deleted from the electrical diagram. Select these to make an individual connection.

Note: Caution is necessary in case of wires are already numbered! Use **"5.7 Ddattef"** to check wire status after executing Patch.

Connection

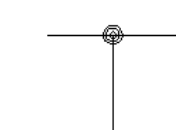

This is used to insert connection points on a T-intersection of two lines. The function controls the exact position of the point and checks that the T-intersection has been drawn with only two lines.

The block used for connections is saved in the symbols directory and the file is called Punto.dwg.




Some functions are called using the centre mouse button (3-button mouse), or by pressing the right mouse button with Shift [↑] on the keyboard (2-button mouse).

Connection returns

This is used to insert return symbols, one by one, in points you select. If **"Automatic Positioning"** is active (see Sect. 4.2) the command choose whether to insert a start or destination return depending on the selected point and line slope, rotating it 0° or 90°.

If **"Automatic Positioning"** is inactive, a dialogue window is shown, containing all configured symbols (see **"Returns"** Sect. 4.2), included the ones rotated by 180° and 270°.

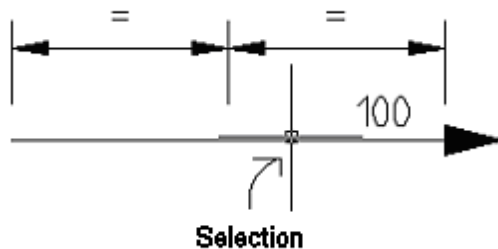

The return is inserted on the final point nearest to the point used to select the line.

When the selected wire is already numbered **the data are automatically extracted and moved to the return symbol** without further notice.

In order to insert a return on wires which are not numbered, the user must enter the **wire number** (see Sect. 5.1, equivalent to the **Signal** name itself, while Description (or Branch) is optional for a possible double start from a single line.

"Connection returns" dialogue box

Cable properties are default values configured using the **"Cable database"** command (see Sect. 4.2).

Different cable properties and colors can be selected each time.

Returns cannot be inserted into empty spaces, but only after a wire (or line) has been selected.



For an optimal use of Description (or **Branch**) see **"Cross-Reference Returns"**.

If, in the chosen settings (see Sect. 4.2), the **"Insert Start + Destination"** option is configured, **during insertion of a start return** it is also possible to insert the corresponding destination return on the chosen page.

You are not allowed to place returns anywhere, but only selecting a wire (or line). To change returns data use command **"5.7 Ddattef"** only, while **"Ddatte"** have different results.



Note: In order to ensure correct use, it is essential to distinguish between the features and properties of **"Connection"** and **"Power returns"** (see Sect. 4.4).

Quick Wire



Pop-menu > *Product name*




This is used to draw quickly a wire inserting a single point in the diagram.

When the wire links to an existing line, it takes automatically cable features, color and line type; connection points are added automatically, too.

Using standard connection mode, the command works with no demand of additional information, but with serial and parallel connections you are asked for cabling directions, **right or left if the wire is connected to an horizontal wire, top or bottom when it is connected to a vertical wire.**

Difference between serial and parallel connections is described in previous section (see “4.4 Power feeds”).

You are suggested to work with Ortho and Snap always active.

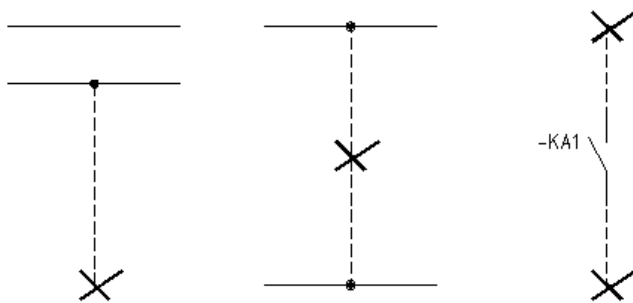

Command example (vertical)

Quick Wire works horizontally using **command HH** and vertically using **command VV**.

These commands (HH and VV) prompt with message “**No valid entity intercepted**” if there are not significant points to create the connection.



You can run this command by keyboard typing command “HH” (horizontal Quick Wire) and “VV” (vertical Quick Wire).

4.6 Drawing utilities




- Connection
- Automatic Connection
- Shield
- Multisheet Scan
- Updating Lists and Tables



Pop-menu > *Product name*

Connection

This command is to **transform a standard connection to serial or parallel** or simply to modify it from serial to parallel or vice versa.

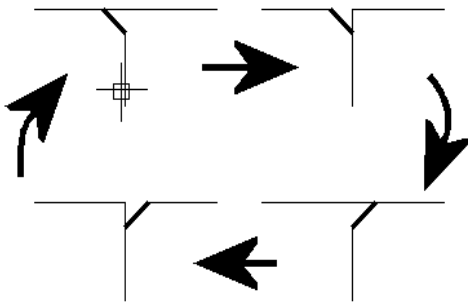

The function requires:

Choose a wire...

Always choose the wire starting at the inter-section (the T intersection must be drawn with **just two lines**).

Press the **space bar** (on the keyboard) till the desired connection appears.


Press "Enter" to exit the command.

Change from Standard to Parallel or Serial

This command also lets you modify existing connections, from serial to parallel or vice versa. The change is started by choosing any one of the three wires involved.

Automatic Connection

This command **automatically transforms all standard connections into parallel ones**. Processing occurs on all files indicated when the command is launched.

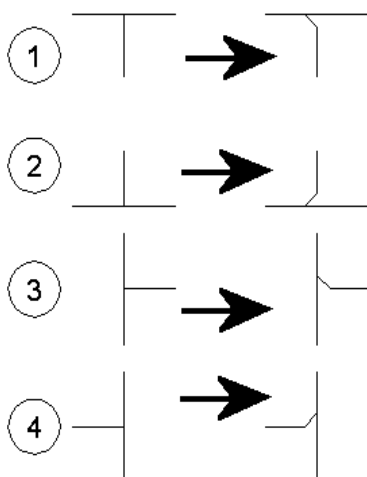

Automatic transformation takes place following the **4 rules** indicated in the figure.

Case 1 and Case 2:

implements a parallel connection from the left.


Case 3 and Case 4:

implements a parallel connection from above.

Automatic change from Standard to Parallel

Shield

This command is used to switch from a serial connection to a parallel connection or vice versa.

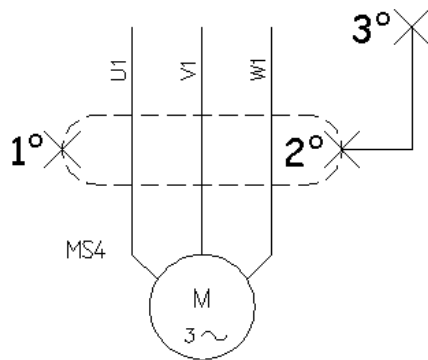

Drawing of shield

This is similar to command “11.4 Cable information” with “Slot” option. In this case, instead of asking the user to enter data, the system requests connection of the shielded wire.

The connection point is automatically displayed if the 3rd point is indicated on an existing wire. The following prompts are displayed:

Select first point

<Enter = Exit>:

... select second point:

to point: (3rd point)

to point: (4th point, etc.)



The size of the shield drawing is proportional to the “Wire Pitch” configured in “4.1 Setup”.

Multisheet Scan

This is used to update (o create if it doesn’t exist) **the job order database**, file **DbSpac.mdb** stored in each job order older.

The database contains the Panel list, the index of all component references, the index of terminals and connectors, the signal names of “Returns” and data of Cables and Terminal Blocks used in the job order.

This database is essential to number, reference and label diagram symbols in a unique mode; you are suggested to update this database each time big modifications are made on the diagram, especially if done without the aid of commands.




Command “Scan Multisheets” runs automatically when drawing, replacing the old commands “Rebuild References File”, “Rebuild Terminals File” and “Rebuild Returns File” manually run in the previous versions.

Updating Lists and Tables

This command enables regeneration of Lists and Tables created using the following commands:

- **Revision Legend**
- **Sheet Legend**
- **Bit I-O Legend**
- **Function Legend**
- **Symbol Legend**
- **6.3 Terminals and Connectors**
- **8.3 Internal Bill of Materials**

The command starts by showing the list of outputs present on the various multi-sheets of the job. Only the outputs **belonging to the current multi-sheet** can be updated, the command starts to select the sheets automatically; the user can choose to make a partial selection of the sheets.

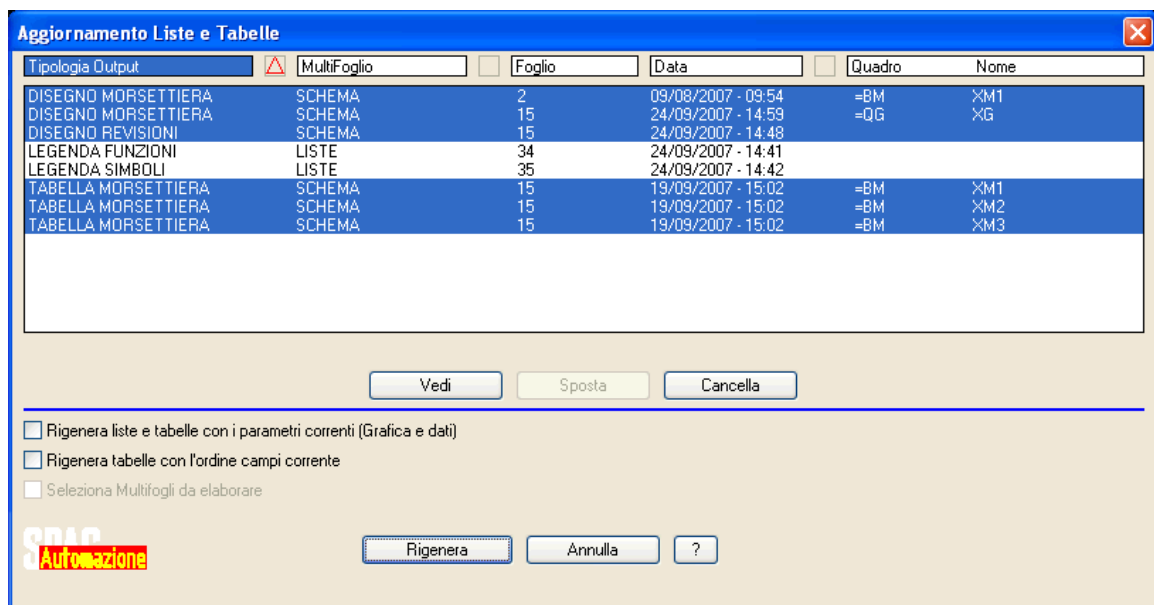


The outputs selected belong to the current multi-sheet.

This command is particularly **useful to quickly recreate the legends, lists, bills of material and terminals**, especially after having performed drawing modifications that require data update.

- View** Pressing the “View” key, the output selected is highlighted on the drawing.
When the output to be highlighted is drawn on a different multi-sheet than the current one, saving the drawing is requested.
- Move** Allows moving a table or list without having to select the single objects (texts, lines, etc.).
“Move” is only active for the outputs present on the current sheet.
- Delete** Pressing “Delete” the selected outputs are fully deleted.
Lists and tables removed in such a way avoid browsing the document and selecting the objects.
“Delete” is only active for the outputs present on the current multi-sheet.

The lists, tables and terminals drawn with previous versions are not inserted in this list; they must therefore be updated by cancelling and redrawing the table again.

=BM - XM1

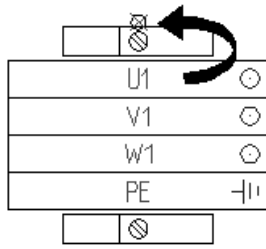

"Updateable" Output

Automatic "Updateable" outputs are easily identified (graphically) thanks to a **symbol placed on the insertion point**.

The user can customize the symbol by changing the block **_Table.dwg** stored in the Library\Spac Symbols folder.

The symbol could be shown as a simple point (command "_Point") if it is necessary to make it invisible.

It is very important to **never cancel this reference symbol**.

If the reference symbol is cancelled (_Table) the table will be excluded from the list of updateable tables.



The terminals and connectors can only be updated with outputs of Drawing, Table and Table List types, highlighted by the item (Auto Regen).



WARNING: this command permits automatic updating of **Lists and Tables only**, that have been created with the **Spac Automazione 2008 version and onwards**.

Regenerate with current parameters (Graphics and Data)



On

Lists, Tables, Bills of material and Terminals are fully updated both for the data contained in them and graphically.

The new graphic form is set by the current settings.



Off

Lists, Tables, Bills of material and Terminals are updated **only in their contents** (data).

Graphically they maintain their actual form (using the settings chosen originally).

Example:

If a table was drawn in red, it will remain unchanged, even though in the current settings the colour set is different.

The value normally used for this setting is "**Off**" (default).



When using the value "On", it is advisable to check the pages where the regenerated outputs are present (after graphical updating the dimensions could be very different).

Regenerate in order of current fields



On

The tables **are fully updated** regarding their contents and graphics.

The new graphic form takes into account the columns (exit fields) set by the current settings.



Off

The tables are updated **only in their contents (data)**.

They graphically maintain their actual form (using the fields chosen originally).

Example:

If a Bill of material (BOM) was drawn using the columns Abbreviation, Description and Quantity (3 fields), after updating the BOM remains unchanged, even though the current settings are with 4 fields and the price is also selected.

The value normally used for this setting is “Off” (default).



When using the value “On”, it is advisable to check the pages where the regenerated outputs are present (after graphical updating the dimensions could be very different).

Selecting the Multi-sheets to be processed



On

A new list of multi-sheets is shown for a new scan



Off

The scan is performed using the multi-sheets originally chosen.

The value normally used for this setting is “Off” (default).



WARNING:


Processing different multi-sheets with respect to the original scan, can cause very different results in the lists and tables when compared to the original lists and tables.

4.7 Component references



Pop-menu > *Product name*

This command produces a list with all the references of the components that have been drawn; it can also be used to update and edit the references of all the components in the job order (or part of the order) in one single operation.

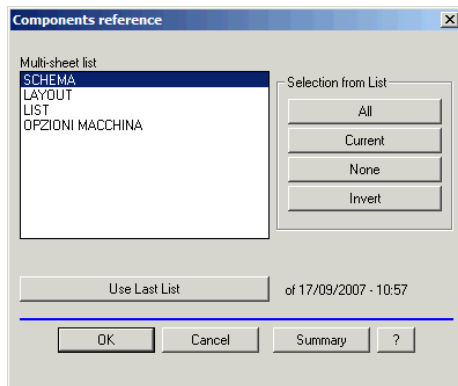


Process is run on components belonging to the multisheets selected in the list.

The list permits surveys: in case of duplicated references you are warned (duplicated names are marked with an asterisk).



Summary: (see Sect. 3.1).

Upon completion of scanning, the following dialogue window is displayed. In the example, reference FU1 is marked with an asterisk as it is used twice, on sheets 1 and 4.

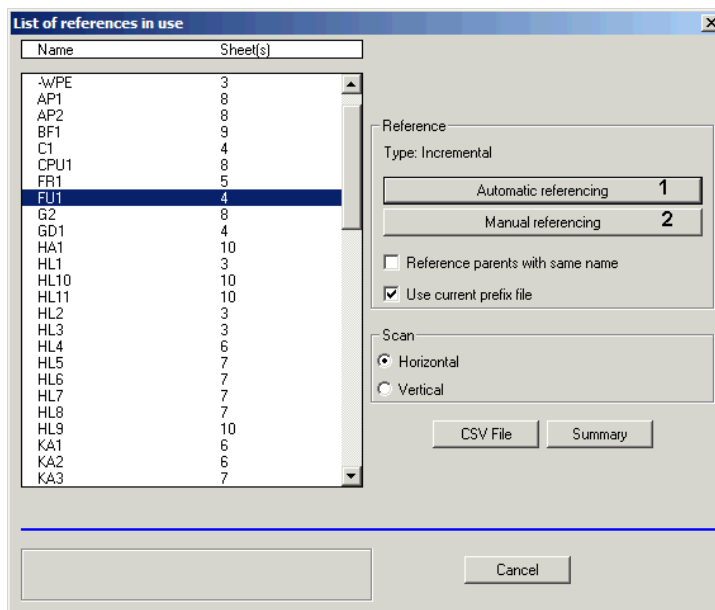

Press **Re-reference** (mode 1-Automatic or 2-Manual) to update the names of the components in the drawing in consecutive sequence according to the "Type:" shown.



Automatic (1)



Manual (2)

Using "**Automatic Re-reference**" all listed references are changed.

Using "**Manual Re-reference**" you are asked to select components being modified.

In any case you can roll back (to previous references), pressing button "**Restore previous References**" just after the execution of "Re-reference" command.

To change mode (or Type) of referencing you have to configure its settings, (see "*Symbol referencing*" Sect. 4.2) you can choose:

- **Incremental**
- **Absolute incremental Sheet - Prefix referencing**
- **Relative incremental Sheet - Prefix referencing**
- **Prefix – Sheet in Absolute incremental identification**
- **Relative incremental Prefix - Sheet referencing**
- **Positional**

Sheet scanning (horizontal or vertical) is not enabled in Positional mode.

Press "File" to create the file **IDSymbol-List**, in the job order directory, containing all the information displayed in the list.



Symbols with attributes containing "I" or "IGNORE" (for compatibility with previous versions), as well as those in the "[14.7 Ignore symbols](#)" list, are discarded from the list.

Reference duplicated Parents

When the list of duplicated names contains "Parent symbols", button "Automatic Re-reference" is frozen (for safety reasons); before proceeding you must activate the checkbox "**Reference duplicated Parents**".

Contacts (Child symbols) are all associated to one of the Parents with duplicated reference. Pay attention to the message:

Warning: contacts with duplicated Parent KA2 has been associated to Parent KA2 laying in Sheet 6.3



WARNING : this message implies the need of update or run the Cross Reference (*see Sect. 7.1*).



When Parent symbols appear in the list of duplicated names, you are suggested to solve the problem as soon as possible.

 
Use current Prefix Archive

During **Re-reference**, both "**Automatic (1)**" and "**Manual (2)**", prefixes to associate to component references may have two different sources.

Each symbol "keeps" its original prefix, the one extracted from the Prefix Archive used while drawing, or better in use when the symbol was inserted in diagram.

During Re-reference you can choose to keep the original prefix or the use extracted from the current Prefix Archive, **in case it is different from the original**.

Suppose you drawn an IEC relay coil symbol using IEC archive (Norm IEC 750), and the set IEC_61346 archive (Norm IEC 61346) in use:



See "**4.1 Setup**".

This setting permits you to choose from which Archive extract prefixes.



On

It is used Archive IEC_61346 , set the second time. Reference **KM1** of the relay symbol (prefix KM) is changed to **Q1** (prefix Q).




Off

It is used Archive IEC, set in origin. Reference **KM1** of the relay symbol keeps the same prefix (KM).

Automatic (1)

Press **Automatic Re-referencing** to change all the references contained in the list.

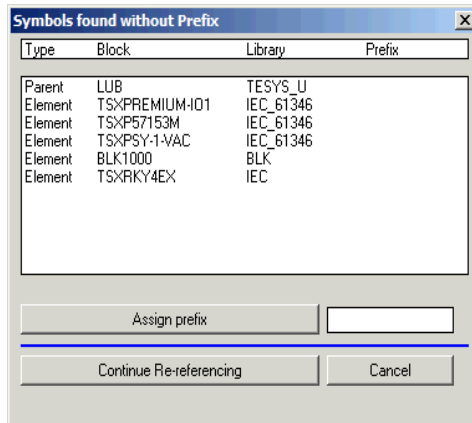

If any symbols are found to have a prefix that has not been configured in the .Pre file, these are displayed as shown in the example. The "**Assign prefix**" button can be used to assign a provisional prefix to each one.

N.B.: All symbols without a prefix are unaffected by re-referencing and keep their previous reference.

Press **Continue re-referencing** to update the names of all valid components (or components with provisional prefix) according to the specific mode setting.




See "**Manual (2)**".



WARNING: The "Automatic re-referencing" button is **disabled** only when duplicate parent symbol references are present: continue by setting "**Parent reference with same name**".

Manual (2)

When **Manual re-referencing** is pressed, the user is asked to select the components to be changed.

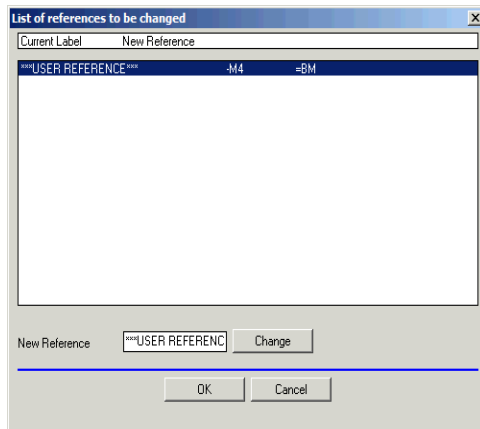

A list is displayed, as shown in the example, containing the references selected (current) and the list of references prompted by the program (new).

If any symbols are found to have a prefix that has not been configured in the .Pre file, these are displayed in the same way as for "Automatic Re-referencing".

To redefine the new references prompted by the program, the user proceeds as follows:

Select the reference to be redefined, enter the new value in the ***** User Reference ***** space and press **Change Reference**. The new reference associated with the **Parent symbol** is also included in the related child symbols.




See "**Automatic (1)**".



WARNING: "**Manual re-referencing**" is the only tool available for editing a component name correctly.

Incremental referencing

An incremental value is associated with the symbol prefix. The new reference associated with the **Parent symbol** is also included in the related child symbols.

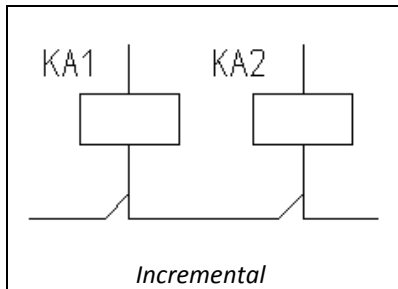

Symbol C1031 is inserted in the drawing with the prefix **KA** (configured in the Cei15.Pre file). References will therefore be updated in consecutive sequence on all sheets:

KA1, KA2, KA3, etc.

The increment re-starts from 1 for each prefix.



If “Same component” mode has been activated in Settings, reference numbering restarts from 1 for each new Panel and prefix.

With this mode active, components with same name but belonging to different Panels, are not considered errors of “Duplicated references”.


To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see “16.3 Location”).

Absolute incremental Sheet - Prefix referencing

Similar to normal Incremental referencing described above. The only difference consists in the addition of the sheet number upstream of the symbol prefix.

An incremental value is associated downstream of the symbol prefix. The increment restarts from 1 for each new prefix and is not set to zero when the sheet is changed (absolute).

The new reference associated with the **Parent symbol** is also included in the related child symbols.

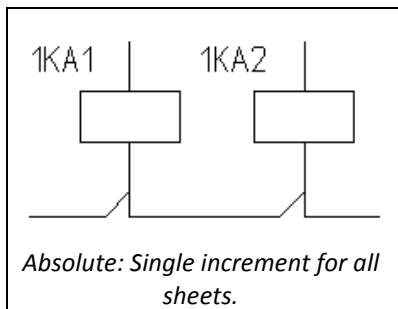

The sheet number is added upstream of the prefix KA, producing **1KA...** on sheet 1, **2KA...** on sheet 2, etc.

References are updated in consecutive sequence on all sheets:

on sheet 1: **1KA1, 1KA2, 1KA3, etc.**

on sheet 2: **2KA4, 2KA5, 2KA6, etc.**

The increment re-starts from 1 for each prefix.



If “Same component” mode has been activated in Settings, reference numbering restarts from 1 for each new Panel and prefix.


With this mode active, components with same name but belonging to different Panels, are not considered errors of “Duplicated references”.

To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see “16.3 Location”).

Relative incremental Sheet - Prefix referencing

Similar to "Absolute incremental referencing" described above. The difference is only visible downstream of the symbol prefix, which is associated with an incremental value which re-starts from 1 for each new sheet and prefix (it is set to zero at each sheet change).

The new reference associated with the **Parent symbol** is also included in the related Child symbols.

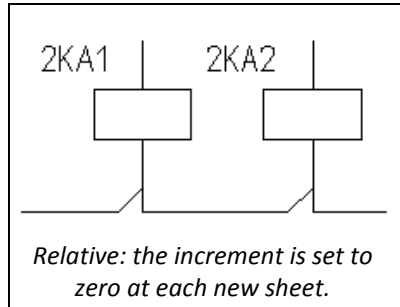

The sheet number is added upstream of the prefix KA, producing **1KA...** on sheet 1, **2KA...** on sheet 2, etc.

References are updated in consecutive sequence on each sheet:

on sheet 1: **1KA1, 1KA2, 1KA3, etc.**

on sheet 2: **2KA1, 2KA2, 2KA3, etc.**

The increment re-starts from 1 on each sheet for each prefix.



If "**Same component**" mode has been activated in Settings, reference numbering restarts from 1 for each new Panel and prefix.


With this mode active, components with same name but belonging to different Panels, are not considered errors of "Duplicated references".

To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see "**16.3 Location**").

Absolute incremental Prefix - Sheet referencing

Same features as the previous "Absolute Incremental Prefix Sheet". The only difference is in the converse position between sheet number and symbol prefix.

The symbol reference associated with the **Parent symbol** is also transferred to the related Child symbol.

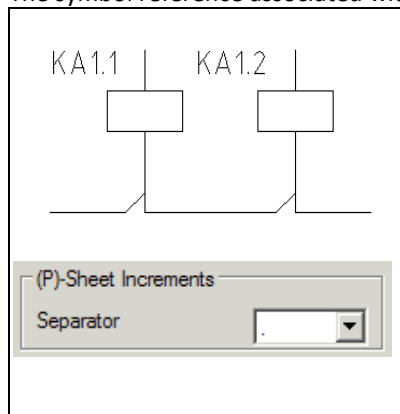

To avoid the same name risk we advise using a separation character between sheet and increment.

Downstream of the prefix "KA" the page number is added, thus **KA1...** on page 1, **KA2...** on page 2 etc..

References are updated in consecutive order on all sheets:

on sheet no. 1: **KA1.1, KA1.2, KA1.3** etc..

on sheet no. 2: **KA2.4, KA2.5, KA2.6** etc..

The increment starts from 1 again for each prefix.



If "**Same component**" mode has been activated in Settings, reference numbering restarts from 1 for each new Panel and prefix.


With this mode active, components with same name but belonging to different Panels, are not considered errors of "Duplicated references".

To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see "**16.3 Location**").

Relative incremental Prefix - Sheet referencing

Same features as the previous “Relative Incremental Prefix-Sheet”. One difference consists in position exchanged between sheet number and symbol prefix, the other in the increment that is not absolute but starts from 1 again for each sheet.

The new reference associated with the **Parent symbol** is also transferred to the related Child symbol.

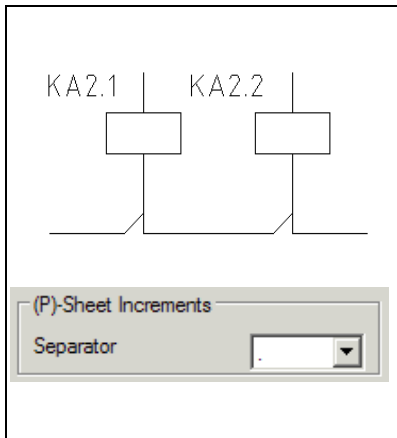

To avoid the same name risk we advise using a separation character between sheet and increment.

Downstream of the prefix “KA” the page number is added, thus **KA1...** on page 1, **KA2...** on page 2 etc..

References are updated in consecutive order on each sheet:

on sheet no. 1: **KA1.1**, **KA1.2**, **KA1.3** etc..

on sheet no. 2: **KA2.1**, **KA2.2**, **KA2.3** etc.

The increment starts from 1 again on each sheet for each prefix.



If “**Same component**” mode has been activated in Settings, reference numbering restarts from 1 for each new Panel and prefix.


With this mode active, components with same name but belonging to different Panels, are not considered errors of “Duplicated references”.

To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see “**16.3 Location**”).

Positional referencing

The symbol prefix is associated with its **position on the drawing**; for this reason “**Sheet Dimensioning**” must be carried out correctly (see Sect. 4.2).

The new reference associated with the **Parent symbol** is also included in the related child symbols.

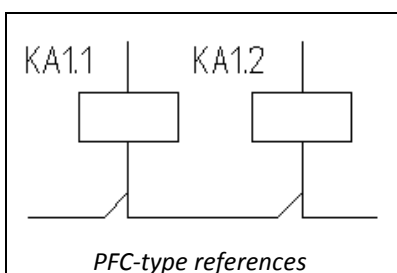

The number of the sheet and segment (column) are added to the symbol with prefix KA, hence:

KA1.1 on sheet 1 in segment 1

KA1.2 on sheet 1 in segment 2

KA2.1 on sheet 2 in segment 1, etc.

In the example, references are of the **PFC** type (Prefix, Sheet and Segment).

If there are 2 parent symbols with the same prefix in the same segment, the function distinguishes these with a letter: **KA1.1A**, **KA1.1B**, etc., thus avoiding unwanted duplications.

If the 2 parent symbols (with same prefix or position) belong to different Panels, no character is added in case you activated in Preferences “**Same component**” mode. To distinguish components with same name, a location label is placed near the symbol automatically, remarking the Panel it belongs to (see “**16.3 Location**”).



The prefix archive (see “Symbol Configuration”) associated through “**4.1 Setup**” affects variable P (prefix), while “Sheet Dimensioning” value affects variable Cat (segment).

5 Wire numbering

5.1 Number wires



Pop-menu > *Product name*

In multi-wire electrical diagrams, connections are identified by assigning unique references to all the wires in the entire job order. There are many methods and standards for wire numbering. Check the “**Wire and Terminal numbers**” settings (see Sect. 4.2) before starting, in order to customize numbering according to specific requirements.

All lines drawn in the diagram are considered as wires and can therefore be numbered, except:

- Polylines and Multilines.
- Non-orthogonal lines.
- Ignored lines, i.e. lines in colors not to be processed (see “**Color management**”, Sect. 4.2).

The following are considered special functions:

- Lines connected to returns.
- Lines already numbered.
- Lines with non-conforming data.

Wire numbering can be performed manually or automatically (see Sect. 5.2).

Numbering

The manual wire numbering command opens this dialogue window. Numbers can be incremental (1, 2, 3...) or use strings (1, R1, 1R380V, etc.).

The **Wire Reference** is the actual value assigned to the wire. It may be composed in a number of ways, using prefixes, formats, sheet number and progressive number.

Set the progressive number in the **Number** box. By default, this is the next number after the last one that was used.

The parameters set during configuration may be changed provisionally, only for the current (local) command, by pressing **Settings** (see Sect.4.2).

"Wire data" settings can be changed each time or stored as default settings by pressing the "... " button.

"**Indicate un-numbered wires**" simplifies the job by displaying the remaining wires to be numbered on the current page.

Number using strings

This method is used to identify wires using text or numbers that are not necessarily incremental. To start numbering using strings, **enter a superscript before the wire name**.

Number

with superscript symbol

In this case, the superscript (') enables recognition of the entire contents of the string. Otherwise, only value 1 is considered. For strings that start with a number, the superscript is mandatory.

Number

with superscript symbol

Wires must often be numbered numerically but without conforming to current prefix, constant or various formatting configurations. In this case, the superscript allows these configurations to be ignored: the number on the wire will be **6** instead of 02.006 (example with prefix Sheet 2, separator "." and 3-character format 00No.).

Number

without superscript symbol

In this case the superscript is superfluous, as the string starts with a character.

Numbering does not comply with the parameters configured in the "Advanced Options" or local prefix settings.




Numbering with strings can only be used to number one wire at a time.

Incremental number

This method is used to number wires progressively from the number indicated at the start. The function automatically increments the number on the next wire (the increment value is configured in the settings).


Number

This type of numbering can be used to number several wires concurrently. Enter the first point in the space to automatically **enable selection in "fence" mode**.

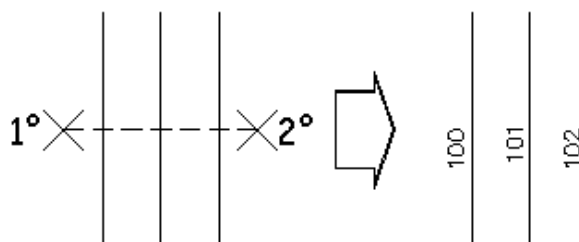

Wires selected in "fence" mode

Several "fences" may be created before confirming. The point on which the wire is selected or **the line used to select the "fence" is used as the position for number insertion**:

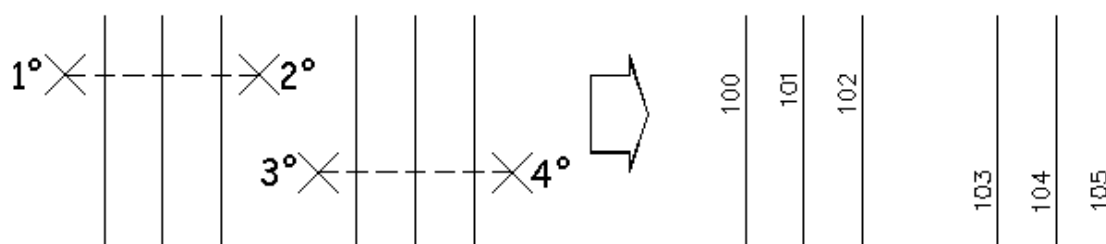

Repeatable value


It is possible to number the wires with the same value of **Power returns** (see *"Numbering wires connected to returns"*).

When wires are selected which have already been numbered, the system asks whether these are to be updated (see *"Renumbering"*).


The values assigned to each numbered wire are those present in "Wire Data". This information is used by functions *"5.4"* and *"5.9 Loop Diagram"*.

Local prefixes or suffixes


This method is used to number wires with a provisional (local) prefix or suffix without editing configurations.

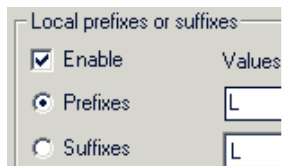


It is possible to enable just one prefix (or suffix) to be used for all wires. In the example below, numbering starts from 1:

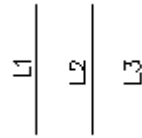

Single prefix

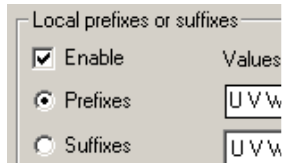

Several prefixes (or suffixes) can be enabled if **separated by a space**. In the example below, numbering starts from 1:

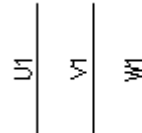


Prefixes separated by spaces

Wires can be selected concurrently in "fence" mode. The enabling of local prefixes is added to the parameters configured in the **"Advanced options"** settings.

Renumbering

There is **no need to delete** wire numbers already present in the drawing in order to update them. They are automatically updated, in the same position if applicable, during the new numbering process.

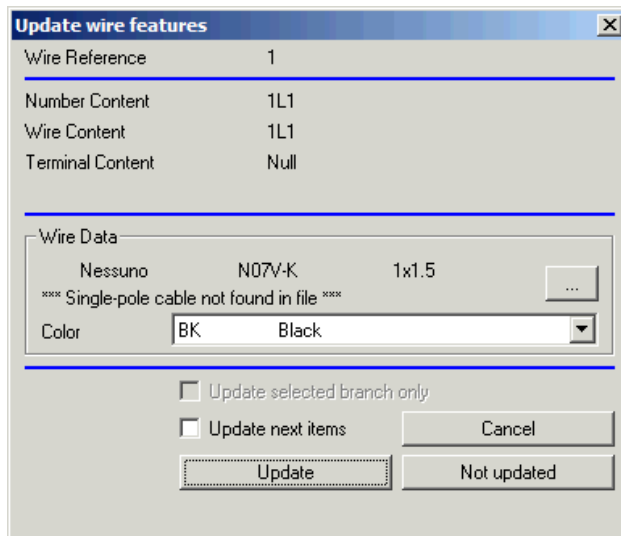

Press **Update** to assign the new number "100" to the wire.

Press **No update** to keep the former *Wire Contents* value of "1".

Before pressing **Update**, enable **Update Following Wires** to update a series of wires automatically.

The *"Number Contents"* field is null when the number block graphic is deleted.

The *"Wire Contents"* field represents the actual value attributed to the line.

If the *Number* and *Wire* contents do not correspond, the **"Inconsistent Values"** condition is generated.

The "Inconsistent Values" condition is usually generated as a result of changes to the wire number using the "Ddatte" command. This is an incorrect operation in the sense that it only changes the text in the number symbol graphically, but does **not** change the actual data inside the line (extended data).

The *"Terminal Contents"* field is null when no terminals are connected to the wire; it is **varied** when the terminal Input and Output wires have different values. When "Ddatte" command is used to change terminal data (incorrect operation), the "Inconsistent Values" condition is generated.

 


Press Update to update "Inconsistent Values" unambiguously on all branches. Always use the **"5.7 Ddatter"** command to change wire numbers.

Number wires connected to terminals

The "Input same as or different to Output" configuration defined in the settings is of fundamental importance for numbering wires connected to terminals (configure if the number on the wire entering the terminal is the same as the number on the output wire).

NumI same as NumO




This is the most common condition. The wire connected upstream of the terminal (NumI) has the same value as the wire connected downstream (NumO).

In this case, select the wire once to number the entire connection.

With this method, it is advisable to use terminals on which NumI and Terminal block data are displayed.

When working with the "Force wire number to terminal" configuration, all NumI and NumO values automatically acquire the wire number value.

 NumI differs from NumO



In this condition, a different value is assigned to the wires connected upstream (NumI) and downstream (NumO) of the terminal.

In this case, the wire must be numbered before and after the terminal.

With this method, the use of terminals on which NumI and NumO data are shown is recommended (as illustrated in the example).

When working with the "Force wire number to terminal" configuration, the NumO value (on the 1st terminal) and NumI value (on the 2nd terminal) automatically acquire the wire number value.



With the "Receive Wire No. from terminal" configuration, wires can be numbered using values already present in the terminal, in the NumI and NumO attributes (see Sect. 4.2 "Wire properties").

Numbering wires connected to returns

When numbering a wire connected to a return, the function checks whether it is a "Power returns" or a "Connection returns".

Power Returns

The wire is ignored. Wire numbering does not alter the value entered previously when inserting the return (see Sect. 4.4).

The system checks the consistency of data and line colors with those configured during "4.1 Setup" of "Power feed color".

The contents of a Power return (and the relative connected wire) can only be changed using command "5.7 Ddattef".

Connection returns

Numbering changes the value of the wire (and the relative connected return) in the same way as with all other wires.

Ddattef

Command "5.7 Ddattef" is used to change the numbering of any wire **whilst ensuring that data remain consistent.**

This is the only command that can be used to change numbers of wires connected to "Power returns".




If "Update selected branch only" is not enabled, all returns with the same name in all multisheets of the job order are updated automatically.

5.2 Automatic wire numbering



Pop-menu > *Product name*

Automatic wire numbering operates by the same rules described previously for command “5.1 Number wires”. When enabled, the following dialogue window is displayed.

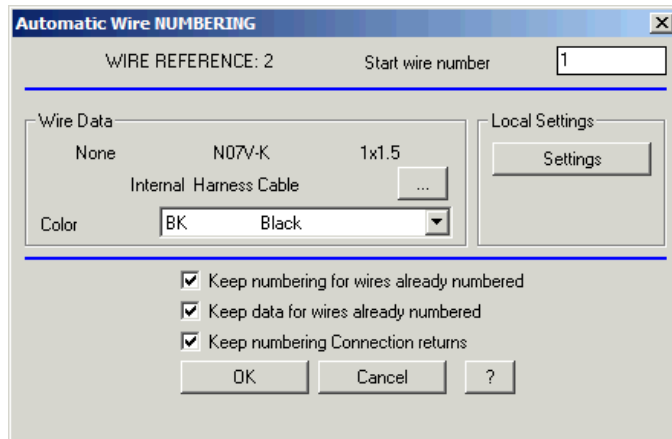


The **Start Wire Number** is the value from which wire numbering starts. Enter the whole positive number.

The "Wire reference" is the combination of "Start number" and any parameters (prefixes, constants, etc.) defined during Setup of “Wire and Terminal numbers” (see Sect. 4.2).

The parameters defined during configuration can be changed locally, only for the current command, by selecting **Settings** (see Sect. 4.2).

The **Start wire number** does not exist when Positional numbering is used (the number is incremented, starting from 0, for each segment change).

The “**Protect**” options affect wires that are already numbered.

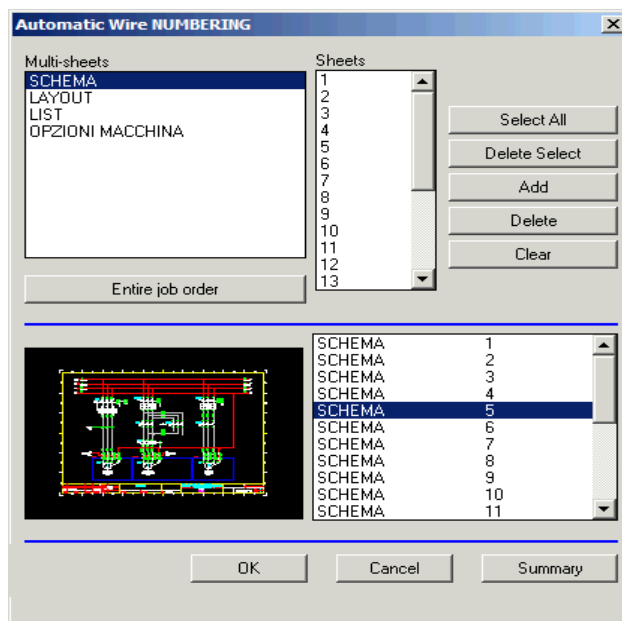

The function then requests the sheets to be numbered.

Press “**Entire Job Order**” to automatically include all sheets in the list.

To customize the list of sheets to be numbered, select the pages required from the multisheets.



Summary: (see Sect. 3.1).

These buttons affect the sheet list of the multisheet:

- Select** To create a customized list, select the multisheet in order to view the sheets it contains in the list at the side. Click on the pages required. Press **Add** to include all the highlighted sheet numbers in the list of sheets to be numbered.
- Select all** All the sheets in the selected multisheet are highlighted. Press **Add** to include these in the print list.
- Delete selection** Deletes previous selections.

These buttons affect the list of sheets to be numbered:

Add	The list of sheets to be numbered is incremented by the values selected in the sheet list.
Delete	The selected sheets are removed from the list of sheets to be numbered.
Clear	The entire list of sheets to be numbered is set to zero.

When the list to be numbered is confirmed, numbering begins without further prompts. The number insertion point is calculated as approximately the middle point on the line.



The system used to manage sheet images is the same as that described for the "Change sheet" function (see Sect. 3.2). Use Sheet Slides to update obsolete or missing images (see Sect 3.18).

Numbering

Sheet by sheet wire numbering enables the starting wire number to be set each time. Automatic wire numbering is often used for concurrent numbering of **a group of sheets** with the same features (all power sheets, auxiliaries or PLC boards).

The only condition that ensures unambiguous numbering with no duplicates is when all job order sheets are numbered together. In this case, between one sheet and the next, numbering starts by taking into account the **number of spares** configured in the settings.

The number of spares is not considered if "**Sheet Number as Prefix**" is enabled. In this condition, numbering on all sheets re-starts from the same value configuration (usually 1).

Automatic numbering considers the following variables, which are configured in the settings and can be viewed by pressing the **Info** button (see "[4.2 Settings](#)"):

Insert summary

Wire number	
Start	100
End	134
Reserv.	144

Blinfi1.dwg symbol

If configured in the settings, a "summary" block is automatically inserted in each numbered sheet (at the 0,0 position). This block indicates the first and last numbers used with any spares. When the drawing contains numbers originating from different configurations, the following message is displayed:

***** Error: wire number composition mismatch.**

If "**Sheet number as prefix**" is enabled, numbering on all sheets usually starts from 1; this condition renders this "summary" virtually irrelevant, as an infinite number of spares is available on each drawing.

Sheet spares

This value is displayed when numbering several sheets (value indicated in the Blinfi block as the last useable number for changes).

Color omitted

Colors for processed wires	
☒	All, except ->
☐	Colors only ->

The numbering process omits some wire colors. This applies not only to the lines, but also to all polylines, in the excluded colors.

N.B.: This parameter is essential for drawing objects not to be considered as wires.

Scan type



"B" Type scan

Indicates the sequence in which wires to be numbered are searched for and selected:

"A" is often used to scan **power** diagrams (especially for motor connections).

"B" is the most commonly used search type for **auxiliary** diagrams.

Wires already numbered

The "**Protect wires already numbered**" option can be used to (automatically) number only wires which have not been numbered, by filtering those which have already been numbered (this may be performed manually).

After performing this operation, it is advisable to check the "**5.3 Used numbers list**" for any duplicate numbers.

Use the "**Protect wire data**" option to keep information regarding cable features (on wires which have already been numbered).

Protect Numbering The wire numbers for already numbered wires remain unchanged. If not enabled, all previous numbers are removed and replaced without further prompts.


Protect Data Wires already numbered keep their cable type data (color and diameter). If not enabled, all previous data are removed without further prompts.



WARNING: The two **Protect** options must be disabled whenever the entire numbering process is requested so that new numbers are assigned in consecutive sequence.


Positional numbering

Wire number is made up of the sheet number, segment and an incremental value starting from 0.

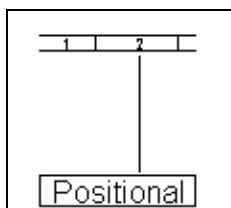

When "Positional" is configured in "Settings", it must be remembered that this is only a **recommended** configuration for the automatic numbering command.

Manual wire numbering is used only when changes are made to the diagram or for specific requirements.

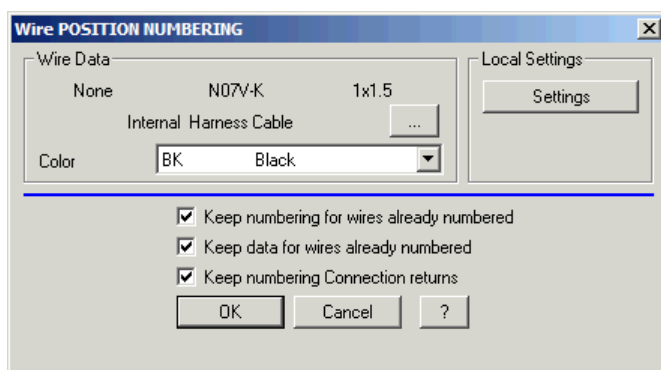

Unlike other numbering methods, with "positional" numbering, the starting wire number is not displayed in the dialogue window, as **numbering always starts from "0" for each new segment**.

The "Save wires already numbered" option may **not** be used to filter previously numbered wires.


To simplify the task, "Indicate un-numbered wires" displays the remaining wires to be numbered on the current page. Available only with manual numbering.



WARNING: As the rules governing this numbering system imply a number of limitations, **this configuration should only be used if absolutely necessary**.

Operation is the same as that described for non-positional Automatic numbering. The "Sheet Dimensioning" configuration ensures correct reading of the segment number.

The example refers to wire numbering on sheet 1:

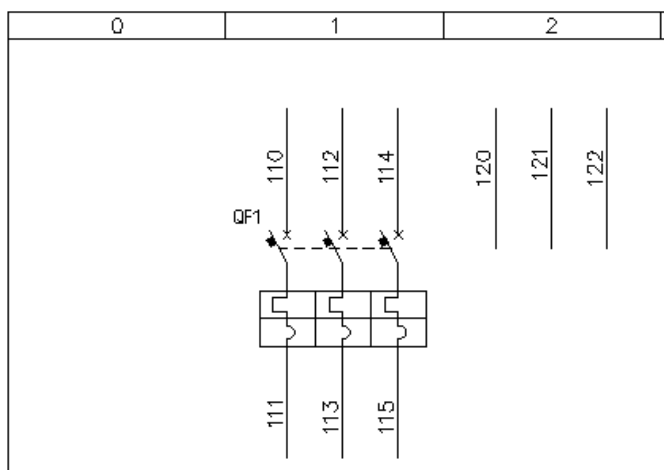

Example of automatic positional numbering.

The wires in segment 1 are:

110, 111, 112 ...

The wires in segment 2 are:

120, 121, 122 ...

This type of numbering is only correct when the title block is made up of segments with a one-digit number (not more than 9), in order to avoid the inconsistencies, such as, for example: the number **1213** could be interpreted in three different ways:

1. Sheet **12** segment **1** number **3**
2. Sheet **1** segment **21** number **3**
3. Sheet **1** segment **2** number **13**




Using segments with only one digit eliminates the inconsistency illustrated in case 2. To ensure unambiguous reading, however, there should be no more than 10 wires (from 0 to 9) for each segment, in order to eliminate the incorrect reading illustrated in case 3.

5.3 Used numbers list



Pop-menu > *Product name* > *Wires Utility*

This command is used to create the list of used wire numbers; it is also useful for **checking any duplicate numbers repeated by mistake**.

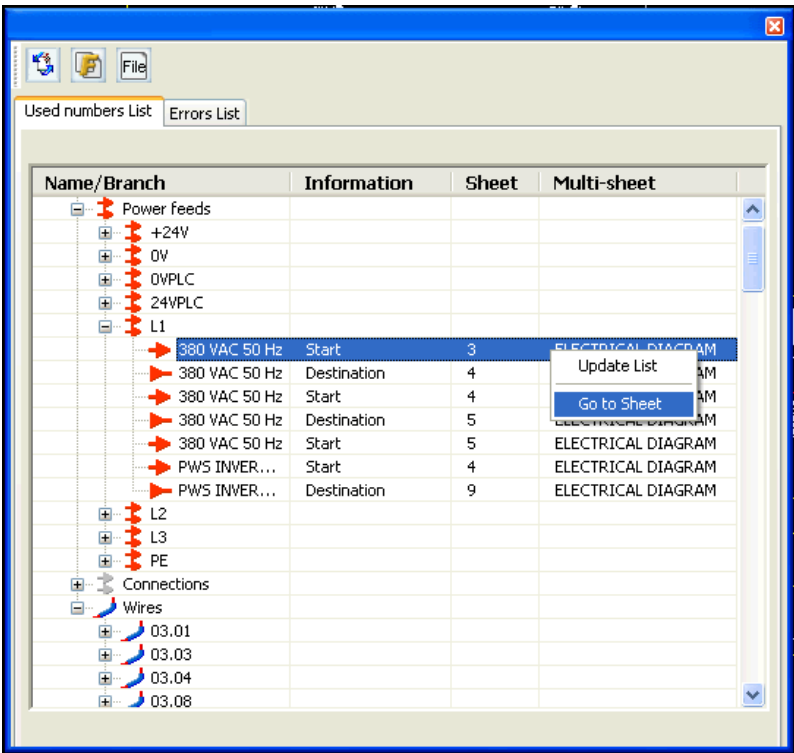

Commands	
	Update List
	Go to Sheet
	Export File

The **List of used Numbers** is structured on the tree-view and it is divided in 3 groups: Power feeds, Connections returns (Signals) and Wires. In the "Information" column you can see the eventual errors or "Repeated Number" when a wire was duplicated by mistake.

The **List of Errors** consents the visualization of the tree-view only with the Repeated Numbers that must be corrected on the drawing (the window could remain open during the modification of the wire's number).



Repeated Numbers: The error can be solved changing the wires' numbering (see "5.7 Ddattef").

Press "Update List" to load the changes executed in the drawing.



Repeatable Numbers: Those were intentionally forced during the wires numbering and they should not be confused with the "Repeated Numbers".



Note: the command "Go to Sheet" is enables only on the last level of the treeview.

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).

☐ File Preview

Enabling **File preview** the file is saved and then opened automatically.

5.4 Internal panel wiring




Pop-menu > *Product name* > *Wires Utility*


Internal panel wiring is used to process the single-pole cables used to connect all components inside the same panel. This is only possible when all wires necessary for making the connection have been numbered (see Sect. 5.1 and 5.2).

During data processing, all numbered and valid wires needed to connect components and terminals belonging to the same panel are extracted from the drawing. Drawing with the appropriate serial or parallel connection methods (see Sect. 4.4 and 4.5) produces more reliable and realistic results than the traditional standard connection method.

The extracted wires contain the information with which they were associated during the wire numbering process: command "**5.7 Ddattet**" is used to change the number, cable code, color and diameter. Pay special attention to the following graphic conditions:

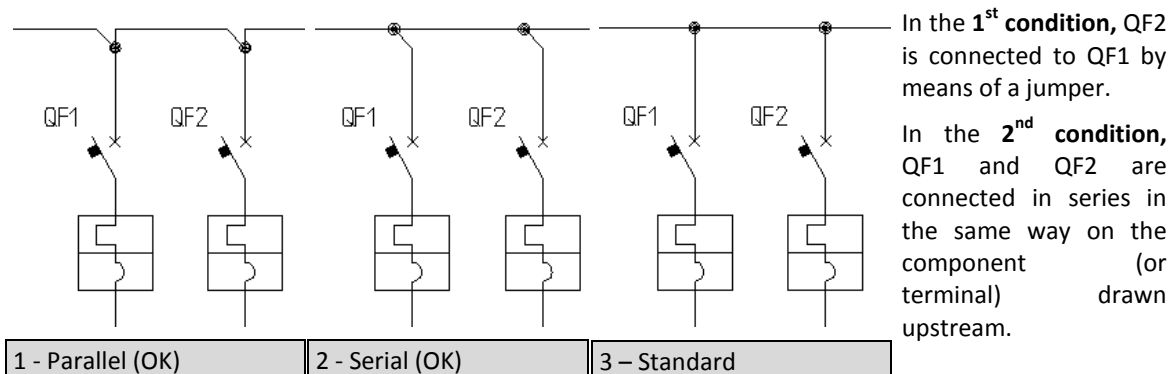

In the 3rd condition, the function automatically selects the type of connection. For this reason, the standard drawing method is considered less reliable for use with the internal panel-wiring table.

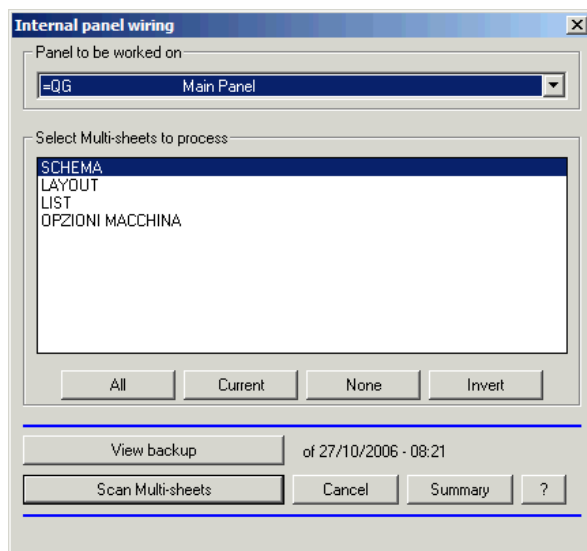

Call up this function to display the following dialogue window.

Press **Scan Multisheets** to process the selected multisheets:

the function considers all wires, terminals and components belonging to the "**panel to be worked on**".

If any changes are made to the contents of the cables list, these are saved in a new **Wiring-Internal.cab** file.

Use **View Save** to display the new situation (a new scan would display lists prior to change).



Processing ignores symbols in the drawing without a panel attribute (or an empty panel attribute) and all connected wires.

When scanning is complete, the wiring table is displayed as shown in the example below. Information concerning the type of terminal and tubular outer sheathing (starting and destination points), cable length and any wiring notes can be attributed to wires (optional).

Wire	from	of	Term.	Tube	to	of	Term.	Tube	Length
- 220PLC N	G2				T1				
- 220PLC 3	QF3				T1				
-0V	A2	KA3	A01	Plastic	VC1	P	Plastic	5	
-0V	A2	KA3	A01	Plastic	XG-44	P	Plastic	5	
-0V	2	R1			VC1				
+ 220PL	2	QF4			L	G2			
+24V	2	FU1			21	QF2			
+24V	53	KA2			13	KM2			
+24V	53	KA2			21	QF2			
+24V	5	KA3	A01	Plastic	13	KM3	P	Plastic	5
+24V	5	KA3	A01	Plastic	XG-52	P	Plastic	5	
+24V	13	KM2			13	KM3			
0302B0	1	S1			X2	HL1			
0302C0	1	QF3			T1				

Wire start

Terminal:

Tube:

Length:

Wire destination

Terminal:

Tube:

Notes:

Wire data

Code: Nessuno|N07V-K

Colour: Miscellaneous

Make-up: 1x2.5

- Details** Select a single wire to view all its available information.
- Change** Press this button to add optional "Wire start" and "Wire destination" information, relating to the type of terminal, tubular outer sheathing, length and any notes, to wires in the list.
- Change** can also be used to edit information already present in the list. Press **Save** to store these changes in a Wiring-Internal.cab file. The file is created in the job order directory.
- Wire data** This information is assigned to the wire during numbering (both manual and automatic) and can only be changed using command **"5.7 Ddattef"**.
- Save** Press **Save** to store the information contained in the list. Press **"View save.cab"** in the first window to retrieve this information.

Checks

During processing, some wires are discarded and an error message is displayed. The most frequent cause is graphic inconsistency:

***** ERROR: branch 100 not processed in EXAMPLE-01 SHEET 1**

	Connection drawn with 3 lines: this type of error can only occur when connections are drawn in standard mode. The problem can be solved by joining lines 1 and 3 in a single line.
	Crossed connection with 2 lines: no solution. This problem can be eliminated only by deleting the connection point or drawing a new connection, preferably in serial or parallel mode.
	Overlapping lines: delete excess lines and then make sure that numbering on remaining lines is correct.
	Component with no Panel value: the wire is connected to a symbol that is not associated with a panel. This problem can be solved by filling in the missing information. Use the abbreviated Edit command (XS, from the keyboard) to view all available data.



Any inconsistencies concerning connections, overlapping lines and incorrect symbols are determined by the "Program Check" (Sp_Verif) command.

Table

Press **Table** to draw the wiring list and related information in table form (parametric mode). The function requests drawing parameters (see Sect. 14.8).

Press **Default** to save the current configuration in "local" mode (see Sect. 4.2) for future use. If confirmed without pressing Default, the configuration is considered to be temporary and is only used once. The function prompts:

Select table insertion point:

wire/Signal	From Pin	Of Component	Terminal	Sleeve	To Pin	Of Component	Terminal	Sleeve	Cable Type	Color / N.	Section	Lenght
0VPLC	BU	SQ2			BU	BF1			None	N17V-K	RD	1x2.5
0VPLC	BU	SQ1			BU	SQ2			None	N17V-K	RD	1x2.5
0VPLC	1_2	XBM-1_2			BU	SQ2			None	N17V-K	RD	1x2.5
24VPLC	BN	SQ2			BN	BF1			None	N17V-K	BU	1x2.5
24VPLC	11	S6			11	S7			None	N17V-K	BU	1x2.5
24VPLC	1_1	XBM-1_1			11	S7			None	N17V-K	BU	1x2.5
24VPLC	BN	SQ1			BN	SQ2			None	N17V-K	BU	1x2.5
24VPLC	7_1	XBM-7_1			BN	SQ1			None	N17V-K	BU	1x2.5
1113.11	12	S6			2_1	XBM-2_1			None	N17V-K	BK	1x1.5

Example of Internal panel wiring table.

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).

☐
File Preview


Enabling **File preview** the file is saved and then opened automatically.

5.5 Number Summary



Pop-menu > *Product name* > *Wires Utility*

This function is used to insert the Blinfi block in the current sheet manually (with automatic numbering, these are inserted automatically). This symbol contains the value of the first and last wire numbers used on the sheet and the number of available spares for any changes. This symbol is not managed in case of positional numbering or with the sheet prefix enabled.

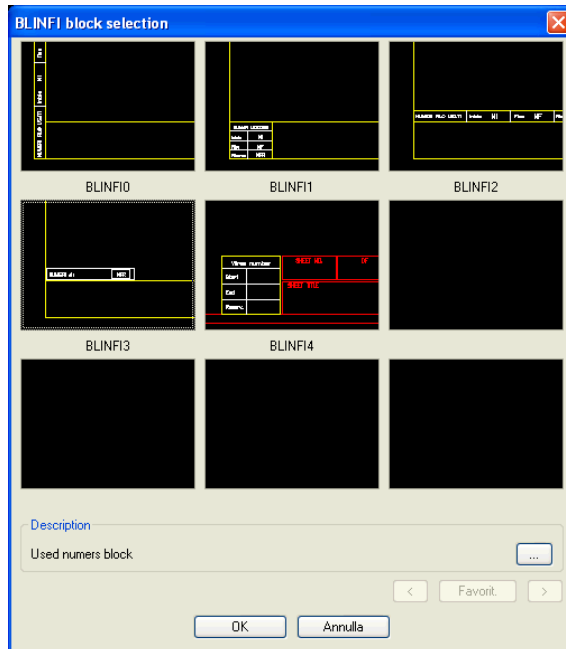

The function uses the symbol configured in the automatic numbering parameters (see "4.2 Settings").

"Blinfi" blocks are stored in Librerie\Simboli directory. Each .DWG block corresponds to an .SLD image (slide) with the same name to be displayed in the dialogue box. **These are inserted at the 0,0 co-ordinate.**

New "Blinfi" blocks can be customized and stored in the same directory as existing blocks. The name of the block must follow on consecutively from existing names (Blinfi4, Blinfi5, etc.), with a maximum of 20 blocks (the dialogue box can display a maximum of 20 windows).

If a block is deleted, blocks with subsequent numbers cannot be displayed.

If the Blinfi block is already in the drawing, the following prompt is displayed to update its contents:

Summary already entered: keep spares value <Yes>/No?

Press **Y** to leave the maximum number of spares unchanged.

Press **N** to calculate a new value according to configuration (default 10).

Symbol values can be edited manually using the CAD Ddatte command.



Always ensure that the available spares value is correct, as numbers could be in use on other sheets.

5.6 Delete numbers



Pop-menu > *Product name* > *Wires Utility*

This command is used to remove wire numbering **on the sheet selected, on the whole sheet or on the current multisheet.**

Removal not only affects the graphic elements of symbols containing the wire number, but also deletes the current wire value stored inside the line data.

Subsequent wire numbering operations do not require the value to be updated, as would be the case if only the graphic element had been removed. This command is also used before storing sheets in neutral mode (master).

5.7 Ddattef



Pop-menu > *Product name*

The Ddattef command is used to change the numbers of wires and power feeds and related terminals, whilst **ensuring that the data remain consistent**. The command behaviour differs depending on the selected entity in the following cases:

- **Ddattef**
- **Ddattef Power feeds** (wire connected to a power return, *_Alim**).
- **Ddattef Terminals** (plug or connector).



You can also recall the function quickly by typing in the command "XS".

Ddattef Wires

This is used to modify wires already numbered or connected to "Connection returns" (see Sect. 4.5).

The dialog box 'Change wire characteristics' contains the following fields and controls:

- Wire Reference: 1
- Number: [input field]
- Number Content: 1
- Wire Content: 1
- Terminal Content: Null
- Sheet number as prefix:
 - ☒ Disabled
 - ☐ After prefix constant
 - ☐ First prefix constant
- Constants:
 - Separator: [input field]
 - Prefix: [input field]
 - Suffix: [input field]
- Wire Data:
 - None: NO7V-K 1x1.5
 - Internal Harness Cable: [input field]
 - Color: BK Black
- Buttons: OK, Cancel, ?

Click on the wire or terminal, if any, to which this is connected.

The system opens a dialogue window which can also be used to enter new cable color, diameter and type configurations useful for "5.4 " and "5.9 Loop Diagram".

If the message "Inconsistent Values" is displayed, this is due to differing number, wire or terminal contents. When a new value is confirmed, all data are updated unambiguously, thus eliminating the inconsistency.

The "..." button changes wire data using the data configured in the "Cable database" (see Sect. 4.2).

When the current wire data are not present in the cable database, the following message is displayed in the description *****Cable not in database *****.

Operations can only be carried out on wires that have already been selected using the wire numbering or terminal insertion commands. For empty wires the following message is displayed in the command line:

Warning: selected wire not yet numbered.

The "Number contents" field is null when a number is deleted graphically. The "Wire contents" field represents the actual value attributed to the line.

If the "Number" and "Wire" contents do not correspond, the "Inconsistent values" condition is generated: this error is usually due to changes to the wire number using the "Ddatte" command (*invalid operation*), as it only changes the text contained in the number symbol graphically, instead of changing the actual data stored inside the line (extended data).



When the wire is connected to a return, the change is effected inside the signal attribute of the return symbol (*_Sign**). In this specific case, the return symbol replaces the number symbol.

Ddattef Power feeds

This is used to modify power feeds data or wires connected to “Power returns” (see Sect. 4.4).

When a power feed number is changed, all returns with the same name in all multisheets of the job order are automatically updated. Enable the “Update selected branch only” setting to change only the selected power feed in “local” mode.

Change power feed characteristics

Power feed reference

L1

L1

Reference Content

L1

Wire Content

L1

Terminal Content

Null

Power feed data

General Cavi

N07V-K

1x16

...

Internal Harness Cable

Color

BK

Black

☒ Update selected branch only

OK

Cancel

?

Click on the wire or return symbol.

The system opens a dialogue window which can also be used to enter new cable color, diameter and type configurations useful for “5.4 ” and “5.9 Loop Diagram”.

If the “Inconsistent Values” message is displayed, this is due to the differing content of the start and destination signals (or, in any case, of signals connected to the same branch).

When a new value is confirmed, all data are updated unambiguously, thus eliminating the inconsistency.

Use the “...” button to change data using information configured in the “Cable database” (see Sect. 4.2). When current wire data are not present in the cable database, the following message is displayed in the description: ***Cable not in database ***.

The “Return contents” field refers to the signal attribute in the return symbol. The “Wire contents” field represents the actual value attributed to the line.

If “Return” and “Wire” contents do not correspond, the “Inconsistent Values” condition is generated: this error is usually due to changes made using the “Ddatte” command (invalid operation).




When “Update selected branch only” is not enabled, all returns with the same name are updated on all multisheets in the job order.

Ddattef Terminals

This is used to modify terminals data or plug and connectors data (see Sect. 6.1), avoiding using “Ddatte” command (wrong operation!).

When you select a terminal, all data associated when it was inserted in diagram are shown; now you are allowed to modify Panel, Terminal Block and material features.

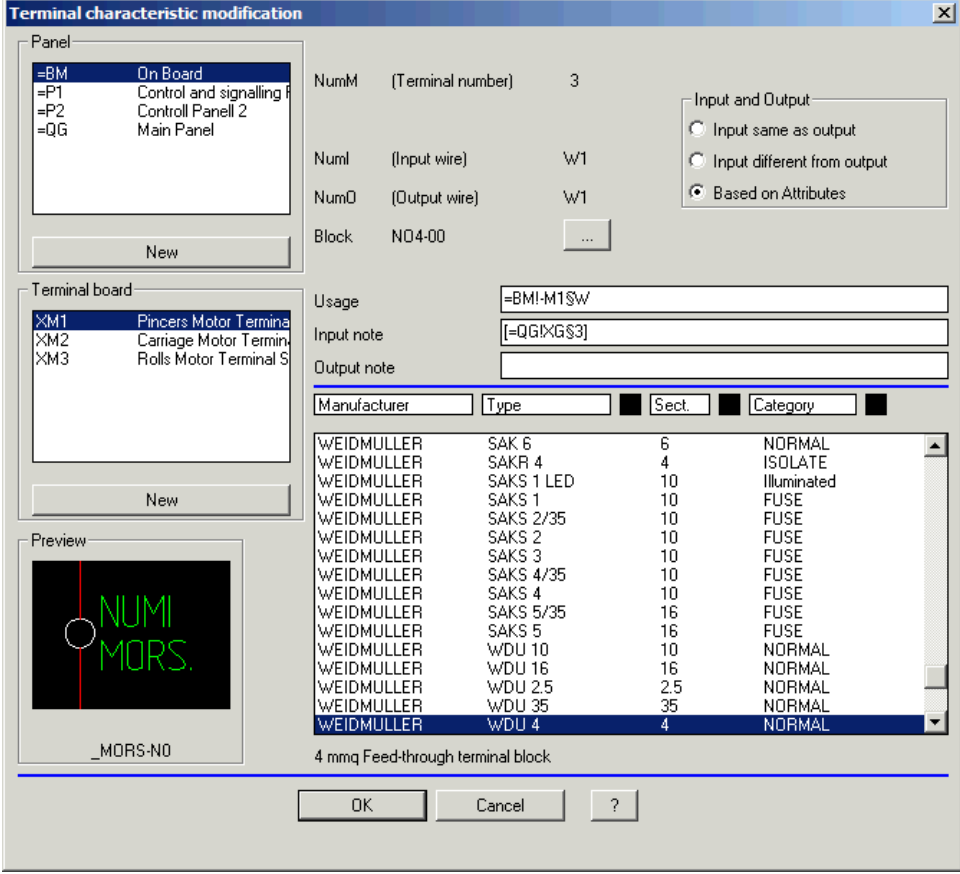

The dialog box is titled "Terminal characteristic modification". It contains several sections:

- Panel:** A list with items: =BM On Board, =P1 Control and signalling, =P2 Control Panel 2, =QG Main Panel. A "New" button is below.
- Terminal board:** A list with items: XM1 Pincers Motor Terminal, XM2 Carriage Motor Terminal, XM3 Rolls Motor Terminal. A "New" button is below.
- Preview:** A small window showing a terminal symbol with the text "NUMI MORS." and "_MORS-NO" below it.
- Fields:**
 - NumM (Terminal number): 3
 - NumI (Input wire): W1
 - NumO (Output wire): W1
 - Block: N04-00 with a selection button "..."
 - Usage: =BMI-M1\$W
 - Input note: [=QGIXGS3]
 - Output note: (empty)
- Input and Output:** Radio buttons for "Input same as output", "Input different from output", and "Based on Attributes" (selected).
- Table:** A table with columns: Manufacturer, Type, Sect., Category. It lists various terminal types like WEIDMULLER SAK 6, SAKR 4, SAKS 1 LED, etc.
- Buttons:** OK, Cancel, and a help button "?".

“Set NumI and NumO” is used to toggle the value of wire numbering variable “**Input equal or different from Output**” (see Sect. 4.2), it’s very similar to command “**6.7 NumI and NumO settings**” but limited to the selected terminal.

If you get the warning “**Inconsistent Values**” usually caused by a different content of number, wire or terminal, you can solve the problem using command “**Ddattef**”.

Button “...” is used to change the return block (symbol representing the terminal on the terminal block), choosing from the ones available in **Terminal and Connectors Database**.




Possible modifications manually made to field “Usage” must comply the syntax rule described in “**6.4 Usage**”.

5.8 Copy wire no.



Pop-menu > *Product name* > *Wires Utility*

Usually Wire Numbering inserts only one number per wire in the diagram, even if the drawing contains a number of segments and branches. This command **copies the wire number on each selected segment or all ramifications**.

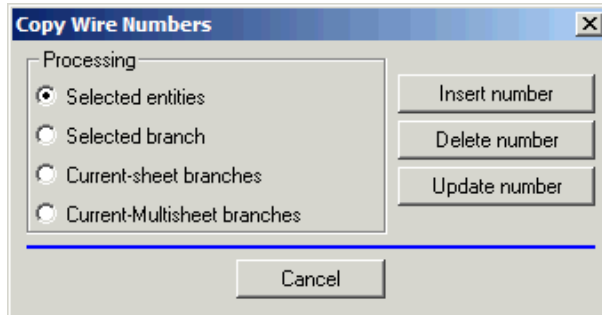


Insert Numbers: copies wire numbers on selected entities or branches.

You can select wires one by one or use “fence selections” as in [Numbering](#).

Selection points correspond to insertion points of copied wire numbers.

Erase Numbers: copies of wire numbers on selected entities or branches are removed. Only the “original” wire number is kept.

Update Numbers: in case wire numbering has changes, it updates number copies with the value of the “original” number.

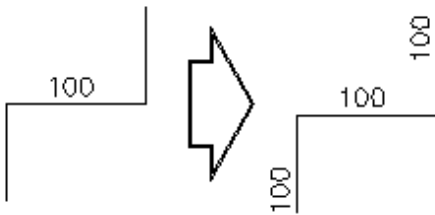

Command “[5.6 Delete number](#)” do **not** remove duplicated wire numbers if they were generated by “Copy wire no.”.



Use this command when strictly necessary only, because “Wire Numbering” ignores (number) copies during possible numbering updates.


5.9 Loop Diagram



Pop-menu > *Product name* > *Wires Utility*

This is the **interconnection management** command, which enables you to view the entire path of the conductors that connect a component, passing through terminal boards and connectors. **It is recommended that this function be used only with a completed electric diagram.**

Loop Diagram draws graphic summary tables of the connections, complete with the passage of the conductors over the terminal boards and support connectors. The graphic document produced by this function is very useful for wiring and **fundamental for finding faults**, as it provides complete connections to pins, cable type and functions associated with the components.

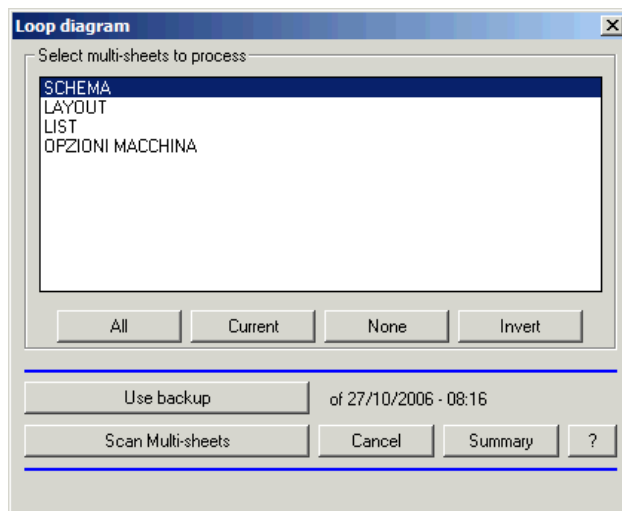

To process the multisheets selected from the list, press **Scan multisheets**.

Scanning generates the **Loop_Diagram.mdb** file in the job order directory.


Use Backup enables fast access to previously processed data without re-scanning.

Scanning ends by displaying the panel list and the list of components (in alphabetical sequence) contained in each panel.



Summary: (see Sect. 3.1).

From this position, select all components to represent in the Loop Diagram.

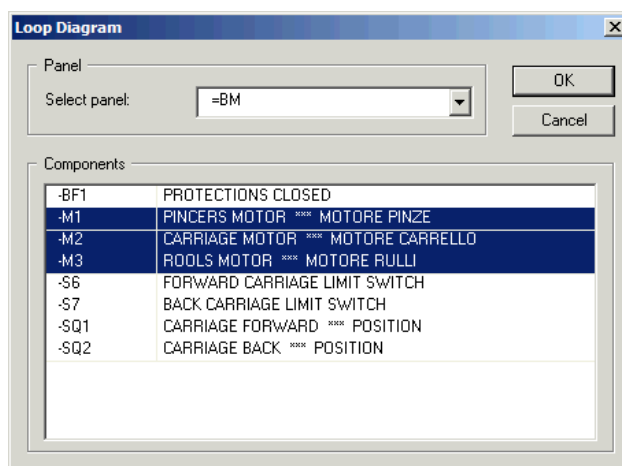

From this position, select all components to represent in the Loop Diagram.

The program starts to draw the data tables from the current sheet.

If the current (or destination) sheet is occupied (**Status: contains entities**), the function asks the user to continue or to enter a new page number.

Enable **"Clear current sheet"** to delete all entities contained before drawing.

Confirmation is requested for each successive sheet.

When several sheets are needed to complete the Loop Diagram graphics, the function inserts the sheet returns automatically.




Inconsistencies relating to connections, overlapping lines and incorrect symbols are detected by the "Program check" (Sp_Verif) command.



WARNING: It is advisable to process diagrams produced with "Serial and Parallel" type connections. On drawings produced with standard connections, the result is considered less attainable. To modify connections use the commands **"Connection"** and **"Automatic Connection"** (see Sect. 4.6).

The following is an example of a loop diagram, produced for motor M1:

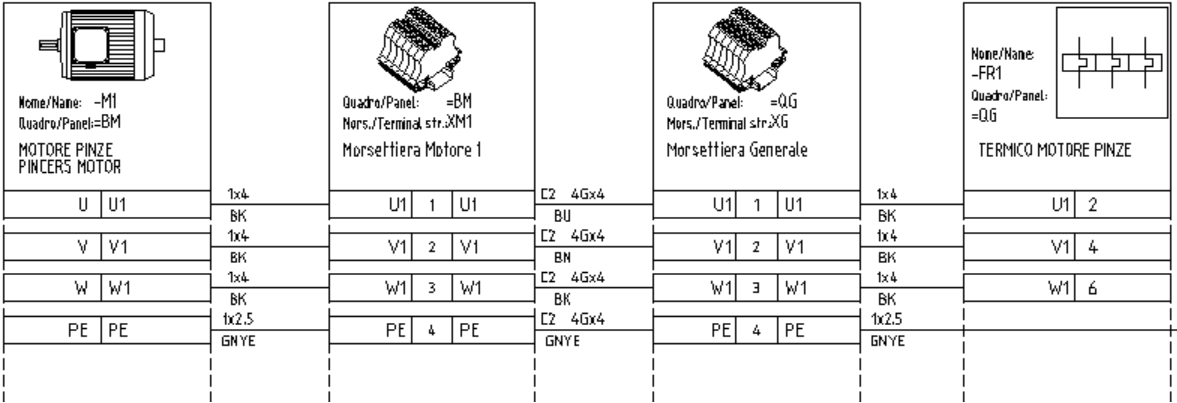

This represents the connection of the 4 motor-**M1** conductors belonging to the panel =BM; with terminal board **XM1 =BM**, the connection continues via cable **C2** to the terminal board **XG =QG (MAIN PANEL)**; finally, at the output from the second terminal board, it shows the connection to the thermal protection **FR1** (via 3 conductors) and ground. Upstream of the connection to thermal protection FR1, the conductor wire number changes, so the graphics end at the fourth step of the connection.

Data relating to the type and color of the conductor are also entered: data relating to single-pole conductors are defined during Wire **Numbering**. Cable data are defined by the commands “**20.2 Lay cables**” or “**20.5 Cable processing**” in the cable module.

The **graphic parameters for designing these tables** are configured in the settings “**Loop Diagram**” command (see Sect. 4.2).



Cable module is an OPTIONAL program. Loop Diagram does not consider cables processed using the standard function in the command “**11.1 Cables**” (serial).

Configuration

Each symbols library (IEC, CEI, VDE, etc.) has a “Pref” used as a base from which to generate a match for each symbol in the library with a block for the Loop Diagram.

In folder Librerie\LoopDiagram you can find all symbols you need for this configuration, generic block included. Prefix **LD_** for symbols name is compulsory and is used to distinguish block type.

Certain symbols used to draw the loop diagram are standard, others are configurable; anyway the name specified in this table must be kept.

Symbol	Description
LD_Neutral	Neutral symbol. This is used when there is no matching in Pref , or when you choose not to use this configuration. The block provides a rectangular box in which to insert the same symbol used for the appropriately re-scaled electric diagram.
LD_Terminal_streep	Symbol for terminal boards.
LD_Connector	Symbol for plugs and connectors.
LD_PLC_Input	Symbol for PLC input bit.
LD_PLC_Output	Symbol for PLC output bit.
LD_SIGN_0	Symbol for Start return.
LD_SIGN_1	Symbol for Destination return.
LD_MORS	Symbol used for drawing connections that pass through a terminal board or a connector. The NumI, NumO and NumM are indicated.
LD_PIN-DX	Symbol used for drawing connections and to indicate the wire number and pin on the Destination unit.
LD_PIN-SX	Symbol used for drawing connections and to indicate the wire number and pin on the Start unit.
LD_Scollegato	Symbol used to indicate an irresolvable connection (wire disconnected or not connected to any parent, element, child or PLC bit symbol).
LD_Wire	Symbol used to draw connections; contains data relating to the diameter and color of the conductor.
LD_Cable	Symbol used to draw connections; contains the name of the cable and the formation and color (or identifier) of the conductor.



“Symbol Configuration” (see Sect. 4.2).



In previous program versions, each new configuration generated a file with extension LPD; you can recover customizations using the import command of archive files.



WARNING: Attributes contained in the standard symbols must also be kept as such following any graphic customization.

Deleting or changing these attributes impairs Loop Diagram operation.

5.10 Data indications

Pop-menu > *Product name* > *Wires Utility*

This is used to **insert wire features indications in the diagram**, such as manufacturer, type description, poles etc.... This information is usually stored inside wires during numbering with command "**5.1 Number wires**" and may be changed with specific command "**5.7 Ddattef wires**".


A selection of one wire (or more, with a "fence") is required.

Select a Connection or fence / Enter for options :



Data set with "5.1 Number wires"

Before proceeding with first **Selection** you've better to check **Settings** (from **Options** menu activated pressing Enter), in order to configure graphically the indication with desired features (colors and list of information).

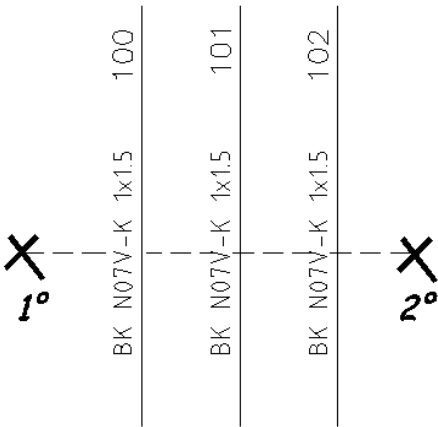

Example of "fence" selection

Clicking in the free space let you automatically activate the selection of one or more lines using a "fence".

Data assigned during wire numbering are automatically retrieved from selected wires, and indications are built depending on current configuration (from Options menu).

In case you **Renumbering** wires with indications, an execution of **Update data** may be necessary to transfer modifications on cable features to indications.

In Options menu you can find the following commands:

- Selection**
- A selection of one wire (or more, with a "fence") is required.
- Settings**
- This is used to set data (fields) to show and configure indications graphically (text style, color, etc.).

Pressing **Default** current configuration is stored "locally" (see Sect. 4.2) for future use. If you confirm the operation without pressing Default, the configuration is used only once.
- Update data**
- This is used to update indication information, in case after wire re-numbering some cable features has changed.
- Update graphics**
- This is used to update indication graphics; new settings are applied to selected objects only.



See "**11.4 Cable information**".



Use this command when strictly necessary only, because "Wire Numbering" ignores indications data during possible numeration updates.

6 Terminals and Connectors

6.1 Insert terminals



Pop-menu > *Product name*

The insertion of terminals in an electrical diagram is normally carried out after the wires have been numbered because the terminal takes on the numbers assigned to the wires, except under exceptional circumstances (see “*Wire and Terminal numbers*” Sect. 4.2). The command allows the terminals to be inserted either one by one or simultaneously (using several wires) in the fence or box modes.

All lines drawn on the diagram are considered wires and can therefore be used to insert a “Terminal symbol”, with the following exceptions:

- Non-orthogonal lines, Polylines and Multilines.
- Ignored lines, i.e. those whose color indicates that they need not be processed (see Sect. 4.2 “*Color management*”).

The following are considered exceptional operational circumstances:

- Unnumbered lines.

All terminal data can be selected and entered from the dialogue box:

Insert Terminals

Panel

=BM	On Board
=P1	Control and signalling Panel
=G	Main Panel
=QG+A1	Main Panel - Panel Door

New

Plug / Connector

XG	Main Panel Terminal Strip

New

Terminal

Multiple terminals

NumM Terminal number: 68

NumI Input wire: 5

NumO Output wire: 3.05

Copy prefixes to process

☐ Enable

☒ Prefixes

☐ Suffixes

Data separated by spaces

☐ Multiple terminals

☐ NumM Request

☐ Terminal box

Options

Preview

NUMI MORS.

_MORS=N0

Available Terminals

Manufacturer: all Family: All NORMAL

Clear > Search

Manufacturer	Type	Description	Livelli	Section
Cabur	CB110	CB110 2 Feed-through terminal ATEX CQ403	1	2.5
Cabur	CB240	CB240 4 Feed-through terminal ATEX CQ403	1	4
Cabur	CB340	CB340 6 Feed-through terminal ATEX CQ403	1	6
Cabur	CB440	CB440 10 Feed-through terminal ATEX CQ403	1	10
Cabur	CB510	CB510 16 Feed-through terminal ATEX CQ403	1	16
Cabur	CB610	CB610 35 Feed-through terminal ATEX CQ403	1	35
Cabur	CB710	CB710 50 Feed-through terminal ATEX CQ403	1	50
Cabur	CB802	CB802 2 Feed-through terminal	1	2.5
Cabur	CB802GR	CB802/GR Feed-through terminal	1	2.5
Cabur	CB804	CB804 4 Feed-through terminal	1	4
Cabur	CB804GR	CB804/GR Feed-through terminal	1	4
Cabur	CB806	CB806 6 Feed-through terminal	1	6
Cabur	CB806GR	CB806/GR Feed-through terminal	1	6
Cabur	CB810	CB810 10 Feed-through terminal	1	10
Cabur	CB810GR	CB810/GR Feed-through terminal	1	10
Cabur	CB816	CB816 16 Feed-through terminal	1	16
Cabur	CB816GR	CB816/GR Feed-through terminal	1	16
Cabur	CB835	CB835 35 Feed-through terminal	1	35
Cabur	CB835GR	CB835/GR Feed-through terminal	1	35

OK Annulla Settings ?

The wire to be terminated is requested on confirmation of the settings. Default settings for the current insertion operation can be changed locally only by clicking on **Settings** (See 4.2).

If the terminal is attached to wires that have already been numbered, the terminal always takes on the values of the wires. If the terminal is attached to wires that have not been numbered, the terminal data (NumI and NumO) is passed onto the wire (NumO is calculated according to the Increment configuration).

The input and output wire numbers (NumI and NumO) are only taken into consideration when the wire is unnumbered and takes on the terminal number automatically. However, the terminal number NumM is always used and increments automatically every time a terminal is inserted:

The terminal number (*) is assigned to the wire (Wire not numbered)


The terminal number (*) is taken from the wire (Wire already numbered)

(*) = NumI and NumO

Panel	Select the panel to which the terminals are to be added from the pull-down list. New panels can be inserted by clicking on New or alternatively by choosing the appropriate command (see Sect. 4.3).
Terminal Block	All terminal blocks contained in the selected panel are shown. Terminal blocks can be added by clicking on New and then entering an identifier (max 8 characters) and optionally a long description (max 50 characters) for each. Normal or multiple terminals can be specified during the process of creating a new terminal block.
NumM	The Terminal number increments automatically after each insertion and can be used to sort the terminals within the terminal block (or to identify double terminals). The "Request NumM" option can be used to specify a value each time. The "6.6 NumM" command re-sequences these as necessary.
NumI	This is an Input wire number : It is used only when a terminal is inserted on an unnumbered wire.
NumO	This is an Output wire number : It is used only when a terminal is inserted on an unnumbered wire. The output number is always calculated in relation to the input number. The two are the same if the related variable has been set in "Settings"; otherwise NumO is increased by the preset increment value.
NumM Request	Each time a terminal is inserted the following is requested: NumM value <1>: This setting has no effect for multiple terminals.
Local Prefixes or Suffixes	This value is used when terminals need to be inserted with temporary (local) prefixes or suffixes.


Single prefix

Only one prefix for all wires can be specified. The following example starts from NumI no. 1:

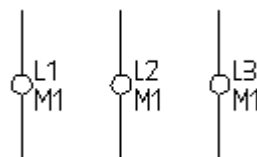


Prefixes separated by spaces

More than one prefix can be specified by entering a **space-separated list** of prefixes. The following example starts from NumI = 1:

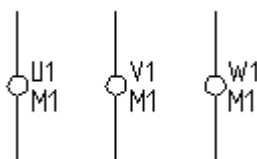


Terminals can be inserted after having chosen the terminal type, panel and terminal block. It is possible to select one wire at a time, or to click anywhere near but not on a wire **to automatically activate selection in fence mode**.

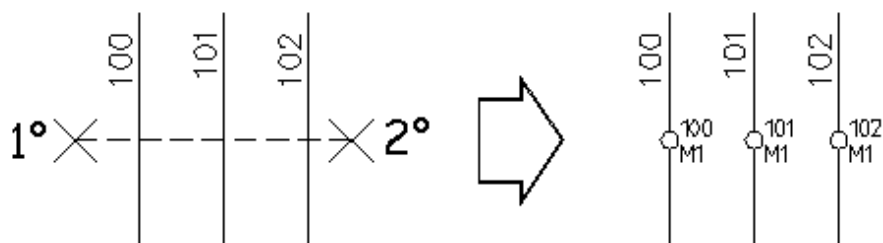

Selection of wires in fence mode

More than one fence can be created before confirming. The point at which the fence intersects the wire becomes the terminal insertion position.

Terminal Box

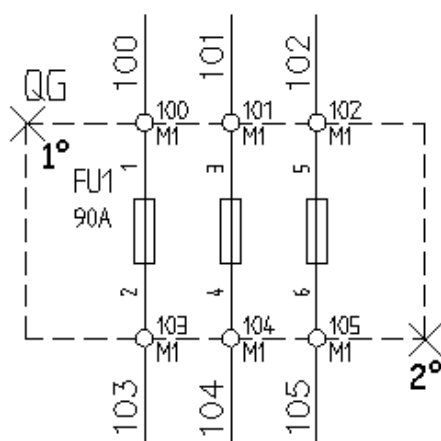

1st and 2nd point for the construction of the Box

This option is used to draw a box enclosing all elements to be associated with a panel other than the current one. All wires connected to elements contained in the box are terminated.

The panel values of the components inside the box are changed automatically.

Two points must be selected to create the box (as shown).

When a terminal is inserted on a numbered wire using Box, it always takes on the wire number.

The configuration settings specific to Box are used for graphic element creation (see Sect. 4.2).

A box is usually used to highlight components on keypads, pulpits, machines, external panels, etc.



This option is not active for multiple terminals.




WARNING: Box Terminals cannot create empty boxes.

Multiple terminals

Multiple terminals are terminals placed in layers. In practice, the same connections need to be made with one multiple terminal as with two or more normal terminals. These are often used where space is limited or other specific conditions.

The program handles multiple terminal graphics by dividing them into individual terminals. In practice, each layer (**level**) of the multiple terminal is drawn on the diagram as if it were a normal terminal. In order to work out which terminals belong to the same multiple terminal they are automatically given the same **NumM** value (terminal number).

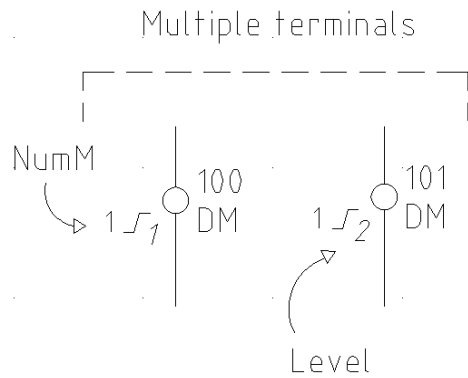


This example shows a 2-layer (**level**) terminal. Note that this double terminal has the same NumM value.

Once the terminal types, panel and terminal block have been chosen, the terminals can be inserted. Wires can be selected one at a time, or **automatically in fence mode** by clicking anywhere near but not on a wire. The program will request that a level be specified for each terminal.

Once all levels of a multiple terminal have been used, the program will prompt for a new terminal with the next NumM value.

There are 3 ways of selecting both the NumM and level:

Consecutive values

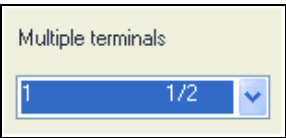

Traditionally (by clicking on OK from the Terminal Insertion box), the function suggests the level value and NumM that is sequential to the previously used value.


The example on the left shows the last terminal inserted (NumM=1 Level=1), **1/2** indicates that **1** level out of the **2** available has already been used.

The program therefore suggests NumM=1 (as seen in the title of the dialog box in the figure on the right) and Level=2.



When **New** is clicked (in the figure on the right) the program suggests NumM=2 (or the next value to that previously seen in the title of the figure on the right) and Level=1, leaving NumM=1 Level=2 still available.


Uses available values

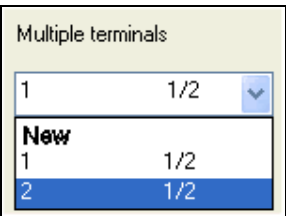


The list of multiple terminals shows that some still have levels available.

1/2 means that there is **1** level available.

After clicking on **New** the program proposes the NumM next value and Level=1.

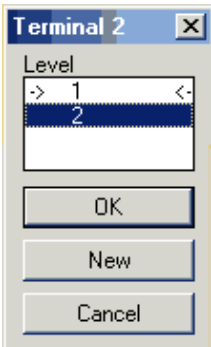

New Terminal

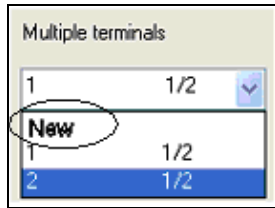

A new terminal is created using the NumM value that follows the last used. The calculated value is shown in the NumM box:

NumM	
Terminal number	4

To create a new terminal with a number that is **not** sequential to the last one used, the desired value must be entered manually into the NumM box.

The list of available levels refers only to the current terminal block. The list updates automatically when a different terminal block is selected.

The Terminal File needs rebuilding whenever level terminals (part of a multiple terminal) are deleted from the drawing so that they reappear on the list of available levels (see Sect. 6.7).

Use "Edit connector" function from the Terminal Block and Connectors Management menu to change both technical data and commercial characteristics (see Sect. 6.3).





WARNING: The multiple terminal is considered in general as connection passing; the not passing multiple terminals belong to the category of terminals for matrix patching (matrix patching and distributor).



Creation of mixed terminal blocks (containing both normal and multiple terminals) is allowed.

Terminal for Matrix Patching


The equi-potential matrix patching terminals are multiple terminals with not passing connection. The insertion of these terminals in the drawing is similar to that described in section Multiple terminals.

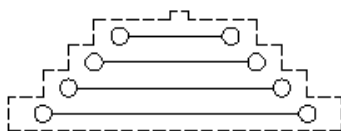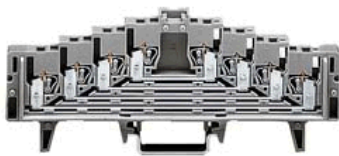



4-Levels Multiple Terminal
(passing)

While in Multiple Terminals it is possible to insert the levels on wires with different numbers, for **Matrix Patching Terminals** it is possible to insert the levels only on wires or power lines with the same number.

Example of an application as Matrix Patching Terminal :

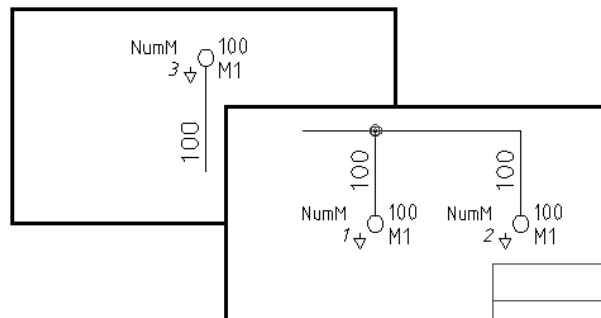

Example of an application as Distributor Terminal :

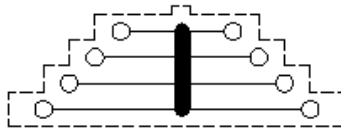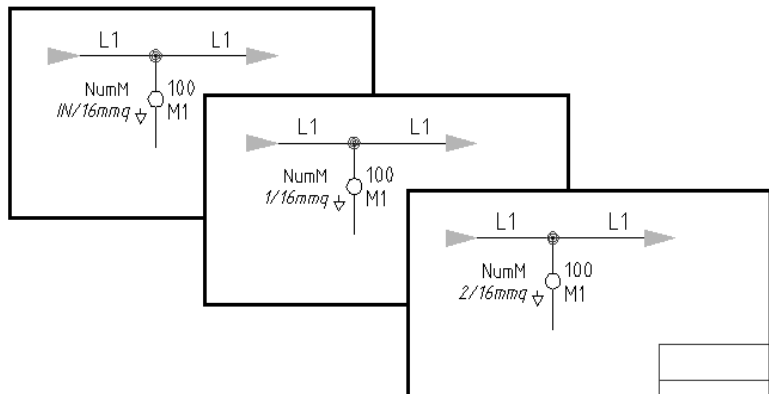

4-Levels Equi-potential Terminal
(not passing)

6.2 Insert connectors



Pop-menu > *Product name*

This command draws plugs and connectors on the wires of an electric diagram. It operates generally as described above for the insertion of terminals.

All data relating to the connector can be selected or entered from the dialogue window below. Once the data has been confirmed, the wire on which to insert the connector must be selected.

If the plug/connector is attached to wires that have already been numbered the **“Plug symbol” (or connector)** **always takes on the value of the wire**. If the plug/connector is attached to wires that have not been numbered the data NumI and NumO are passed to the wire (NumO is calculated according to the Increment configuration).

Insert Plugs / Connectors

Panel

=BM	On Board
=P1	Control and signalling Panel
=G	Main Panel
=QG+A1	Main Panel - Panel Door

New

Plug / Connector

NumI (Input wire) 3 3.03

NumO (Output wire) 3.03

New

Copy prefixes to process

☐ Enable Data separated by spaces

☒ Prefixes A

☐ Suffixes A

Available Connectors

Manufacturer: all Family: All Plug: < Filters < Search

Manufacturer	Type	Description	Poli
Cabur	I103400,I103401	Connector 3 poles + PE, screw Male insert + Female insert	4
Cabur	I103402,I103403	Connector 4 poles + PE, screw Male insert + Female insert	5
Cabur	I103414,I103415	Connector 10 poles + PE, screw Male insert + Female insert	11
Cabur	I103634,I103635	Connector 6 poles + PE, screw Male insert + Female insert	7
Cabur	I103636,I103637	Connector 10 poles + PE, screw Male insert + Female insert	11
Cabur	I104204,I104205	Connector 6 poles 35A + PE, screw Male insert + Female insert	7
Cabur	I104204,I104207,I104205,I11	Connector 12 poles 35A + PE, screw Male insert + Female insert	13
Cabur	I136381,I036391	Connector 16 poles + PE, screw Male insert + Female insert	17
Cabur	I136381,I136389,I036391,I10	Connector 32 poles + PE, screw Male insert + Female insert	33
Cabur	I136401,I036411	Connector 24 poles + PE, screw Male insert + Female insert	25
Cabur	I136401,I136409,I036411,I10	Connector 48 poles + PE, screw Male insert + Female insert	49
Cabur	I203102,I203103	Connector 7 poles + PE, crimp Male insert + Female insert	8
Cabur	I203104,I203105	Connector 8 poles + PE, crimp Male insert + Female insert	9
Cabur	I203106,I203107	Connector 15 poles + PE, crimp Male insert + Female insert	16
Cabur	I203108,I203108,I203109,I12	Connector 50 poles + PE, crimp Male insert + Female insert	51
Cabur	I203108,I203109	Connector 25 poles + PE, crimp Male insert + Female insert	26
Cabur	I203110,I203110,I203111,I12	Connector 80 poles + PE, crimp Male insert + Female insert	81
Cabur	I203110,I203111	Connector 40 poles + PE, crimp Male insert + Female insert	41
Cabur	I203112,I203112,I203113,I12	Connector 128 poles + PE, crimp Male insert + Female insert	129

OK Annulla Settings ?


Depending on selected Panel, all existing connectors can be viewed within the selected panel. A long description can be entered (max. 8 characters) for each new connector reference.

At this stage, the connector type configuration cannot be changed. **Selecting characteristics (manufacturer, type, etc.) is enabled only for new connectors.**

The list of available connectors and their respective specifications can be changed in **“4.2 Settings”**. Panel, Local prefixes, NumI and NumO have the same functions as described above for terminals.

Symbols can be inserted after having chosen the connector type, panel and reference. It is possible to select one wire at a time, or to click anywhere near but not on a wire **to automatically activate selection in fence mode**.

Example of 6-pole connector, having pins 1, 2, 3, 4, 5, 6 and PE:

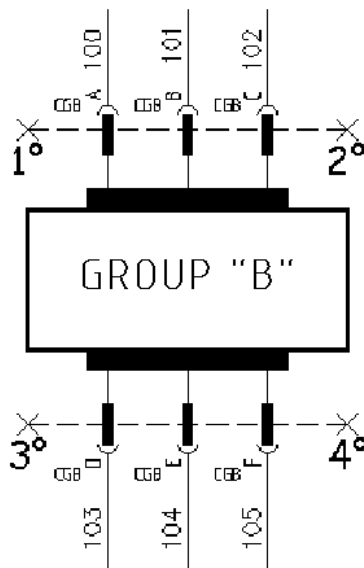

Insertion of 6-pole connector using 2 fence method



The first fence intersects the three lines above the inserted block:

3 connector pins therefore link up as required, **pins marked → N ← are already connected, only those that remain free can be selected.**

NOTE: The pin value is written inside the NumM attribute, this value is an attribute that is always visible in symbols.

The second fence intersects the three lines below the inserted block:

The Associate Pin dialogue box appears, where pins A, B and C are marked → N ← **because they are connected. Those that remain free can be selected.**


NOTE: in order to rotate the connector symbol simply click on the image before creating the second fence. This allows the selection of a different connector symbol from those available.

When the poles of a connector are deleted from the drawing, the Terminal File must be rebuilt so that they reappear as available in the Associate Pin window (see Sect. 6.7).

Modular Connectors

The management of the modular or composed connectors is enabled on the settings related to the **"Wire and Terminal numbers"** (see par. 4.2 **"Options"**).

This option consents the activation of the recognition of a character (according to your choice) in the connector's name, then it is possible to know if they are independent or modular connectors; the character works as a separator, that is **../1. ../2** etc..

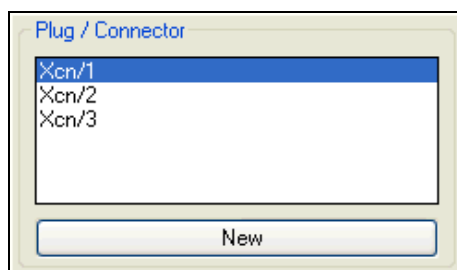

Example with the separator character "/" :

If we design 3 connectors with the names indicated in the figure, the program will recognize them as modular.

They will be managed as a **unique connector during the design and edit functions** (see par. 6.3 **"Edit connector"**).




Use the **"Edit connector"** function from the Terminal Block and Connectors Management menu to change both technical data and commercial characteristics (see Sect. 6.3).

6.3 Terminals and connectors



Pop-menu > *Product name*

This command brings up the list of all the terminal blocks and connectors that have been drawn. Its content can be viewed for each terminal (or connector) in order to make changes. Tables and drawings can then be made.

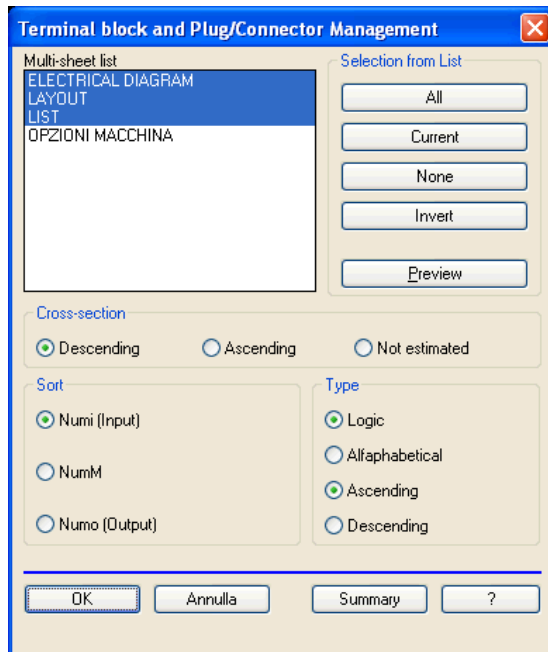

Processing affects all components of multisheets selected in the list.

You can preview the content of a multisheet by pressing “**Preview**”.

If the contents or the sequence in the terminal block lists are changed (through “**Edit terminal block**”), they are saved and entered into the next scan.

Clicking **Output** on **Drawing** creates the terminals block drawing.



Summary: (see Sect. 3.1).

Processed terminals are sorted according to a series of parameters:

Diameter The diameter of the terminal in mm.

This is **the most important criterion**. In practice, all terminals with the same diameter are grouped together. Subsequent ordering within each group depends on other criteria.

This parameter has no effect on sorting connectors because it is not associated with them.

Sorting By default, terminals are sorted according to their input wire number (NumI).

Sorting by NumM (terminal number) is only possible when the information has been entered correctly during terminal insertion.

Sorting according to NumI, NumM, etc. only works when the diameter variable has been entered as “not applicable”.

Sorting according to use is only feasible when the necessary data has been entered for all terminals on the drawing (see Sect. 6.4).

Click on the **Sort by use** button under “**Edit terminal block**”.

Type If **Logical** is selected, priority in the list is given to characters, numbers and finally numbers associated with characters.

If **Alphabetical** is selected, priority in the list is given to numbers, then numbers associated to characters and finally characters (according to ASCII character order).

The ascending and descending sequence options work on both numbers and letters.

Processing the multisheets creates the list of drawn terminal blocks and connectors.

Quadro	Nome	Q.ta	Descrizione
=BM	-XB	14	Morsettiera Segnali Bordo Macchina
=BM	-XM1	7	Morsettiera Motore 1
=BM	-XM2	7	Morsettiera Motore 2
=BM	-XM3	7	Morsettiera Motore 3
=P1	RS232	8/9	RS232 PLC
=P1	XCn1	17/25	Conn. 1 collegamento pulsantiera
=P1	XCn1.	17/25	Conn. 1 collegamento pulsantiera
=P1	XCn1/a	7/12	Conn. Modulare collegamento P1 (a)
=P1	XCn1/b-c	15/20	Conn. Modulare collegamento P1 (bc)
=P1	XCn1/d	9/12	Conn. Modulare collegamento P1 (d)
=QG	-XG	97	Morsettiera Quadro Generale

List of Terminal Blocks and Connectors.

Edit

Permits change of terminal block or connector data, changes must be transferred to the drawing by clicking on **Update**.

It permits making changes to sort parameters and it allows moving terminal (but not connector) positions on the terminal block freely or sorting according to Use.

It also permits terminal block customization with accessories - end brackets, terminal boards, separators, etc.

If saved changes are not transferred to the drawing by clicking on **Update**, a list of “**Not update Terminal blocks and Connectors**” is presented at the next scan.



See “**Edit terminal block**” and “**Edit connectors**”.

Panel	Type	Name	Description
=BM	Terminal block	XM2	Carriage Motor Terminal Strip
=BM	Terminal block	XM3	Rolls Motor Terminal Strip

The example figure shows how to recover changes to terminal blocks XM2 and XM3 (not updated on the design).

The data will be lost for the remaining terminal blocks (and connectors), which were previously changed using Edit.

Use the “**Ctrl**” key on the keyboard to make multiple selections.

List of Saved but not Updated Terminal blocks.

Drawings, Tables and exported Files for all the terminal blocks and connectors on the list can be produced immediately.




Output in tabular form is normally used for connectors while graphics are preferable for terminals as they include jumpers.

Terminal block drawing


This option draws terminals according to the parameters entered in “Settings” under the “Terminal and Connectors Database” or under “Terminal block” (see Sect. 4.2).

Clicking **Output** on **Drawing**, after selecting one or more terminals from the list, creates the terminals (provided graphics are configured). This displays only the selected data.

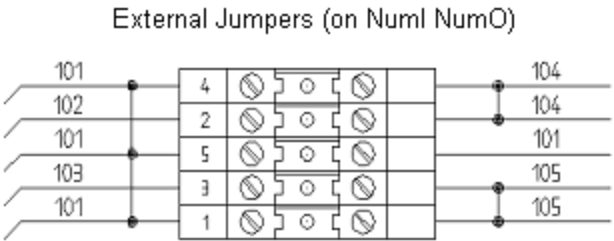

Edit allows the selection of the desired graphic for each terminal.

After confirmation, select the sheet to be drawn on. If the selected sheet is already in use, the message **Status: Contains entity** is displayed and the following sheet is suggested.

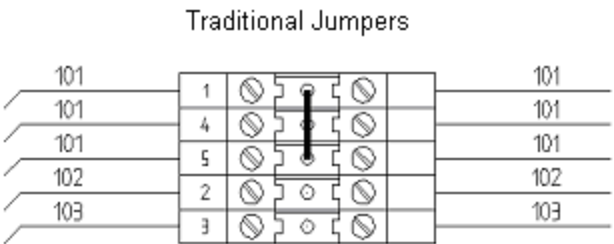

QUADRO QG - MORSETTI MULTIPLI DP
Morsettiera Gruppo "A" (Morsetti Doppio)

1	101	1	100	○
2	103	2	102	○
3	R	3	R	○
4	S	4	S	○
5	T	5	T	○
6	24V	6	0V	○

Terminal block drawn with AB2-50 return block


Multiple terminals, drawn using return block MM-2LIV



See “Edit terminal block”.

Terminals insertion points are suggested according to the coordinates entered at configuration. It is necessary first to check that the variable CAD Attreq is set to 1.

Usage information for the assigned block (if available) has four elements: Panel, Reference, Function1 and Function 2 (see “6.4 Usage”). You can have “Terminal usage drawings”, too.

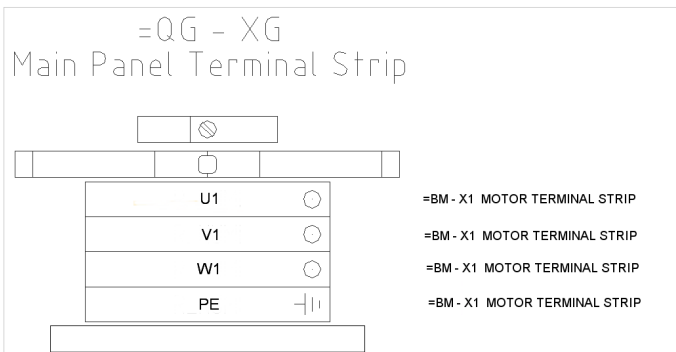

The “-” (hyphen) character is inserted automatically between data in the usage description to simplify reading.

Only some return blocks have this attribute visible (R_Utenza).

Terminal block with return blocks NO2-50 and PE2-50 with Usage visible (complete)



Output in drawing form is normally used only for terminal blocks. Output in tabular form is advised for connectors.

Terminal block table

This option draws up tables of terminal blocks. Tables for data entered in output fields (see Sect. 14.8) can be drawn up after selecting **a single** terminal block from the list, and then **clicking Output** on **Table**.

The current settings can be stored in local mode (see Sect. 4.2) for subsequent use by clicking on **Default**. If the settings are confirmed without clicking on Default they are regarded as a one-off. The function requests:

Select table insertion point:

100

QUADRO BORDO					
MORSETTIERA XM1					
Motore M1					
NumI	NumM	NumO	Tipo	Costruttore	Sez.
PE	4	PE	WPE 4	WEIDMULLER	4
U1	1	U1	WDU 4	WEIDMULLER	4
V1	2	V1	WDU 4	WEIDMULLER	4
W1	3	W1	WDU 4	WEIDMULLER	4

A maximum width of 100mm has been selected so that the table will have the same width as the Terminal Drawing using the symbol Tab-Mor1 (default).

Example of Terminal Block Table



(see "Updating Lists and Tables").




WARNING:

Table output does not follow the jumper drawing.

Terminal usage drawings

Choose **Usage Drawing**, press **Output**, and after you select one terminal block from the list (inactive for multiple terminals and connectors) the terminal block is generated with graphics and data of its usages (using the same configuration of "Terminal block drawing").

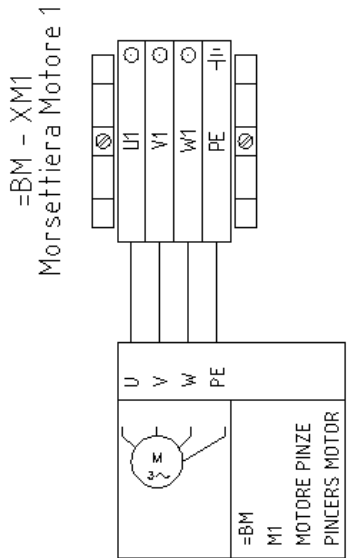

Example of Usage linked to the terminal block symbol



See "6.4 Usage"

In order to use "Terminal Block Drawing" correctly, terminals are expected ordered on the Usage content: it's necessary to execute "Edit terminal block" and press button "Sort by Usage".

Graphically the terminal block is drawn horizontally always, but it's possible to configure the size of the box containing usage symbol and data (see "Terminal block" Sect. 4.2).


After pressing Ok, you are asked for the sheet where the drawing is going to be inserted. In case the selected sheet were not empty, you are warned with the message "Status: Containing entity" and the following page is suggested.

Connector drawing

This option draws connectors following the parameters set in Settings under the heading “Terminal and Connectors Database” (see Sect. 4.2).

Connectors are created (with graphic elements as configured) showing only the requested data by first selecting one or more plugs form the list and then **clicking Output** on **Drawing**.

=P1 – CN2
Control Panel – Connector 2

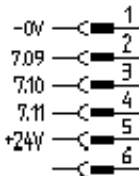

Connectors, drawn using return block TAB-CONN

Edit can be used to select the desired graphic for each connector.

Once the data has been confirmed, select which sheet to draw on. If the sheet selected is already in use, the **Status: Contains entity** message is displayed and the following sheet is suggested.



See “Edit connectors”.

Connector table

This option draws up data tables for connectors.

Tables are drawn up using the data categories entered in the output fields list (parametric mode) by selecting only one connector from the list and then **clicking Output** on **Table**.

Current settings are stored in local mode (see Sect. 4.2) for subsequent use by clicking on **Default**. If the settings are confirmed without clicking on Default they are regarded as a single application. The function requests:

Select table insertion point:

The default configuration gives the following result:

Panel =P1	
Plug CN2	
Manufacturer ITT CANNON	
Type 10-6P;10-6S	
Connector Six way (plug & socket)	
Control Panel – Connector 2	
Pin	NumI
1	-1V
2	7.19
3	7.10
4	7.11
5	+24V
6	

Example of Connector table

The connector is described according to its **NumM** (Pin) and **NumI** data, which are chosen from the available fields.

A maximum width of 50mm has been selected in order to minimize the space taken up by the table.

Two connector tables take up the same space as a terminal table.

RailDesigner 2

This Output function interfaces with Weidmüller software **RailDesigner 2**.

Data export is restricted to terminal blocks **associated to Weidmüller material codes**, generating a specific file (Ascii) compatible to the interface.

Product overview:

RailDesigner 2 lets you virtually build a terminal block, detailed and with photorealistic preview; cross connections, references, terminal plates, separators, screw terminals, empty spaces, wired jumpers, etc. are available both in graphical representation and material list (BOM or assembling kit).

Function "Assembling warnings" highlights assembling errors. All chosen terminal blocks are shown in a detailed 'navigator'.

Terminal blocks can be ordered directly from RailDesigner, by e-mail or disk file.

A tutorial is enclosed to the program, for a quick and easy training.

RailDesigner 2 is optional software not enclosed to program package.



RailDesigner is distributed directly from Weidmüller, you can find additional information or download it from web site www.weidmuller.it.

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).

☐ File Preview

Enabling **File preview** the file is saved and then opened automatically.

Terminal block List

Allows you to draw the list of Terminal Boards and Plugs/Connectors processed in table form or extrapolate into CSV.

List (Table)

Option allowing you to draw the list (Terminal Boards and Plugs/Connectors) in table form.

Press the **Output** of **Table List** and you draw the table showing the data configured as output fields (parametric mode).

Press **Default** and the current configuration is stored "locally" (see Sect. 4.2) for subsequent use. If you confirm without pressing Default the configuration is considered temporary and used just once. The function requires:

Select the table insert point :

The default configuration corresponds to the following graphic result:


Panel	Type	Name	Qty	Description
=BM	Multiple	XB1	9	On Board Signals Terminal Strip
=BM	Terminal block	XM1	6	Pincers Motor Terminal Strip
=BM	Terminal block	XM2	6	Carriage Motor Terminal Strip
=BM	Terminal block	XM3	6	Rolls Motor Terminal Strip
=P1	Plug	CN1	16	Control Panel - Connector 1
=P1	Plug	CN2	5	Control Panel - Connector 2
=P1	Plug	CN3	5	Control Panel - Connector 3
=QG	Terminal block	XG	80	Main Panel Terminal Strip

Maximum default width is 200mm.

Example of Terminals and Plugs table List

List (File)

Press **Output** of **File List** and you generate an file called **Terminal-Table** to extract the terminal and connector list. **Standard** represents the basic configuration for the output fields (where set).

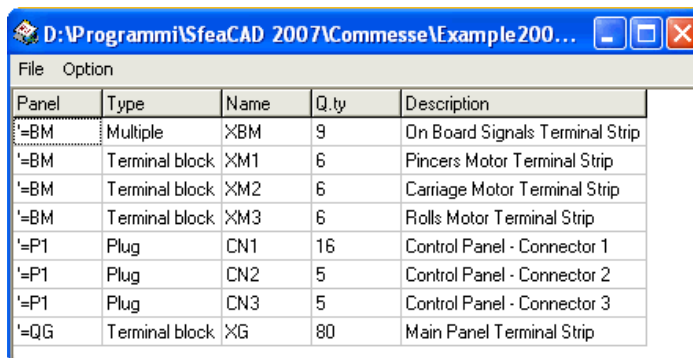

Panel	Type	Name	Qty	Description
=BM	Multiple	XB1	9	On Board Signals Terminal Strip
=BM	Terminal block	XM1	6	Pincers Motor Terminal Strip
=BM	Terminal block	XM2	6	Carriage Motor Terminal Strip
=BM	Terminal block	XM3	6	Rolls Motor Terminal Strip
=P1	Plug	CN1	16	Control Panel - Connector 1
=P1	Plug	CN2	5	Control Panel - Connector 2
=P1	Plug	CN3	5	Control Panel - Connector 3
=QG	Terminal block	XG	80	Main Panel Terminal Strip

Preview of file

By pressing **Add** all data present in the "Available fields" is taken to "Fields sorted by output" and represents a file column.

Default stores Customization of the output fields for subsequent use.

Activating the **Csv file Preview** stores and opens it automatically (in preview) for immediate use.



You can parameterize file features by modifying the field write mode.

Edit terminal block

The Edit terminal block function changes terminal block specifications.

It provides the means to change terminal sequence duplicate and insert terminals, to change terminal make or model, the graphics for terminal blocks with return blocks, and usage or other annotations and insert accessories - end brackets, terminal boards, separators, etc.



The sequence that terminals are shown in on the “Connections” list can be easily customized by **Drag & Drop**: select the terminals to be moved and drag it to the desired position.



Accessories can be added by choosing them from an “Accessories” file and specifying their position on the terminal block, and then by clicking on the **Add** button (in the “Materials” list”).

You can duplicate a terminal also with “Copy” & “Paste”. The new terminal automatically occupies the first value of NumM available.

Visualization of the **terminals with more connections** (in input or output) or multi levels (**multiple terminals**).



△	Add			110V			69
	=QG	-S4	13	110V			13
	=QG	-QF8	2				
	=QG	-KA7	5				
	Add			110V			14

With double click is possible to visualize the connections in the detail.

 


These changes remain even after a new scan.

Change terminal

In the “Connections” list:


NumM



To modify the NumM value (terminal number) it is enough to make a double click on the field of interest.

To identify the level terminals that belong to the same multiple terminal, the same NumM value is associated automatically (terminal number). The changes on the NumM value are extended to all the terminal levels.

Levels

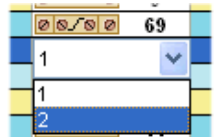

Useful to modify or to **invert** the position of the levels on the multiple terminals.

It is required to **select first the terminal line to be changed**; then make double click on the “Levels” list and select the new level to be occupied.

To use the feature “**Interchange levels**”, the two levels to be modified must be selected beforehand.

Usage

The Usage is an information that could be optionally associated to a terminal to represent its destination (see “6.4”).

The Usage (when used) is located in the **Output Notes** field.

To modify its value, it is enough to make a double click on the field of interest.

Input notes

(ID field at left)

Available to the user. The content can be viewed on the terminal block depending on the visibility of the R_Note-MO attributes on the return block.

Output notes

(ID field at right)


Available to the user. The content can be viewed on the terminal block depending on the visibility of the R_Note-MO attributes for the return block.

In the “Materials” list:



On “Materials” it is possible to sort the terminals and to edit them easily according to the column selected.


Manufacturer and model

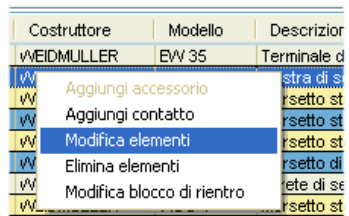

They are visible by selecting the “Materials” window, to assign a new brand/model to the terminal (or all the terminals), it is required to press the “**Modify**” button (or “**Modify Elements**” using the right button of the mouse).

(See “Add terminal”)

 
Delete Terminal (Add)



To **delete a terminal duplicated or an accessory added**, you can use the right button of the mouse pressing the command **Delete**.

It is not possible to delete terminals present in reality on the scheme.

Return Block

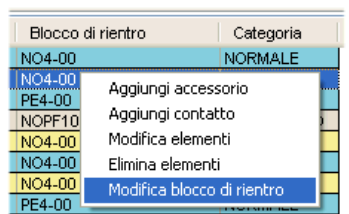

This is the symbol used for the representation in the terminal block. The entire terminal block could be designed using the same graphical symbol, or changing it according to the user requirements.

The value by default is the one set during the configuration (see section 4.2). It is possible to modify the return block for all the terminals selected by pressing “Change Return Blk”.



WARNING : The system to count the “Repetitions” according to the attribute “Rip” (present on the terminal) is no longer used.




Save stores all operations and Update transfers the new values to the symbols in the drawing and replaces the old values.

Add terminal

To **add a new terminal (or accessory)** in the terminal block it is required to select the desired code from the list “**Terminals Archive**” or “**Accessori**” and press the button “...” (browse).

After select the article, we can define the position to be used in the terminal block. If no position is chosen, then the terminal is located at the end of the terminal block (on the last position).

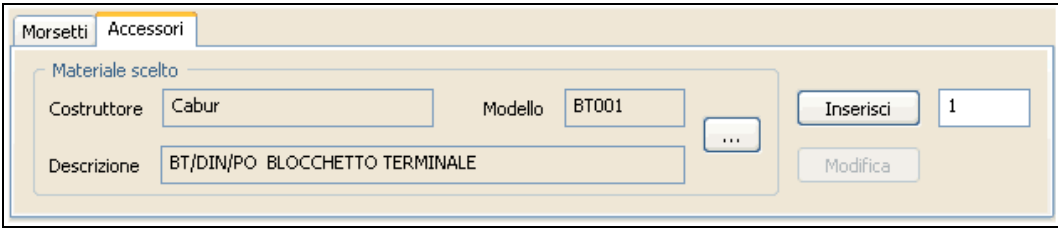


After select the article, the position and the quantity, we can press the “**Insert**” button.

It is consented to duplicate a terminal (or several terminals) even by using “**Copy**” & “**Paste**”. The new terminal will be identified with the first NumM available.




The terminals and accessories with an “Add” indication are not drawn in the terminal block. They are valid only for the graphical outputs of the terminal block or table and for the creation of the Bill of Materials.

Terminal repositioning

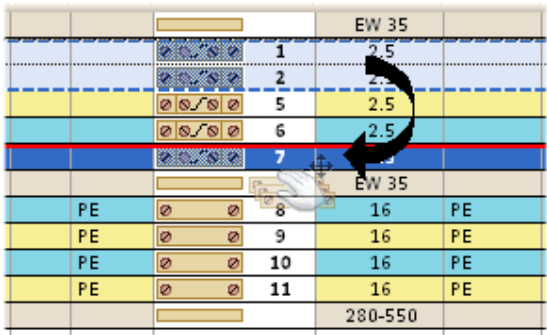

				EW 35	
		1	2.5		
		2	2.5		
		5	2.5		
		6	2.5		
		7	2.5		
				EW 35	
	PE	8	16	PE	
	PE	9	16	PE	
	PE	10	16	PE	
	PE	11	16	PE	
				280-550	

Repositioning a terminals

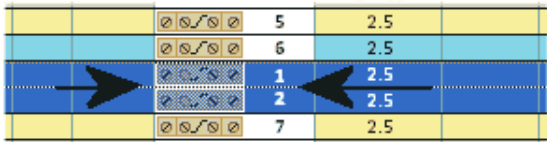

		5	2.5		
		6	2.5		
		1	2.5		
		2	2.5		
		7	2.5		


To **change the position of a terminal** (or a group of terminals) we can use a **Drag&Drop** approach to select the terminal to be moved and place it on the desired position.

The same operation can be made using the right button of the mouse: Executing a **Cut** of the terminal (or terminals) in departure, and **Paste** on the terminal that represents the arrival position.



To align the electrical scheme after the free displacements made, we can sort the NumM according to the new list with “**Re-number NumM**”; then by clicking on Update you can apply the changes to the scheme.

Sort terminals

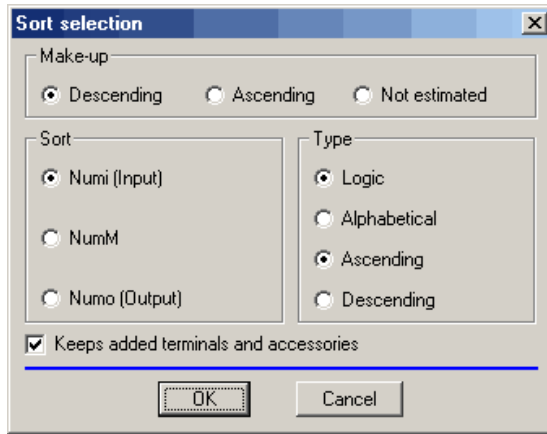

Sorting parameters can be set from the opening dialogue window “6.3 Terminals and connectors” for those parameters that are common to all the terminal blocks and connectors to be sorted.

The Sort option allows setting the precise manner for each individual terminal block.



From “**Materials**” window, it is possible to organize the terminals to edit them easily according to the column selected.

The **diameter** variable has the highest priority:

Not used	Sez.	Numi	Numm	Numo	Sorting is not carried out by the diameter parameter. Either NumI, NumM or NumO has absolute priority when “Diameter” is lacking.
	4.0	100	1	100	
	2.5	101	2	101	
	6.0	102	3	102	
	4.0	104	4	104	
Descending	2.5	105	5	105	Terminals are sorted from the highest diameter value to the lowest. Terminals are sorted secondarily according to NumI, NumM or NumO within each group having the same diameter.
	6.0	102	3	102	
	4.0	100	1	100	
	4.0	104	4	104	
	2.5	101	2	101	
Ascending	2.5	105	5	105	Terminals are sorted from the lowest diameter value to the highest. Terminals are sorted secondarily according to NumI, NumM or NumO within each group having the same diameter.
	2.5	101	2	101	
	2.5	105	5	105	
	4.0	100	1	100	
	4.0	104	4	104	
Ascending	6.0	102	3	102	Terminals are sorted from the lowest diameter value to the highest. Terminals are sorted secondarily according to NumI, NumM or NumO within each group having the same diameter.
	2.5	101	2	101	
	2.5	105	5	105	
	4.0	100	1	100	
	4.0	104	4	104	

Logical sorts the list first by characters, second by numbers, and then by numbers associated with characters. **Alphabetical** orders the list first by numbers, second by numbers associated with characters, and then characters (ASCII character set order); **Ascending** and **Descending** have effect on both characters and numerical values.

If the option “**Keep the additional Terminals and the Accessories**” is disabled, all the terminals and accessories inserted manually on the list are removed (in “**Edit terminal block**” are visualized with “**Add**” button).

Sort by usage

The terminal block is sorted alphabetically according to the contents of “6.4 Usage”.

This order is essential to have the “**Terminal usage drawings**”.

Renumber NumM

Clicking on this button, **the values of NumM** found in the “Terminal block Make-up” list **are reassigned starting from NumM=1** for the first terminal on the list, increasing to the last terminal.

It is used after “free” repositioning using Drag&Drop carried out on a terminal block, to reflect the new order in the assignment of NumM.

Using **Update** to transfer the changes in NumM to the diagram is the only way to align the drawing with the “free” repositioning effected while “Edit terminal block”.

NumI	NumM	NumO
U1	15	U1
V1	16	V1
W1	17	W1
PE	5	PE
U2	23	U2
V2	6	V2
W2	7	W2
PE	4	PE

NumI	NumM	NumO
U1	1	U1
V1	2	V1
W1	3	W1
PE	4	PE
U2	5	U2
V2	6	V2
W2	7	W2
PE	8	PE


NumM ordered according to position

The figure shows the effect of “Renumber NumM”. Note that terminal position (NumI and NumO) has remained fixed, while NumM takes on new values.

Edit connectors

The Edit function consents the execution of changes to the connector or plug.

It is the instrument to change the connector type, brand and model, to change the pin sequence, the composition, the existing graphics and output, the Usage and notes. It also consents the insertion of the accessories of the contacts to be crimped (additional), covers, etc.

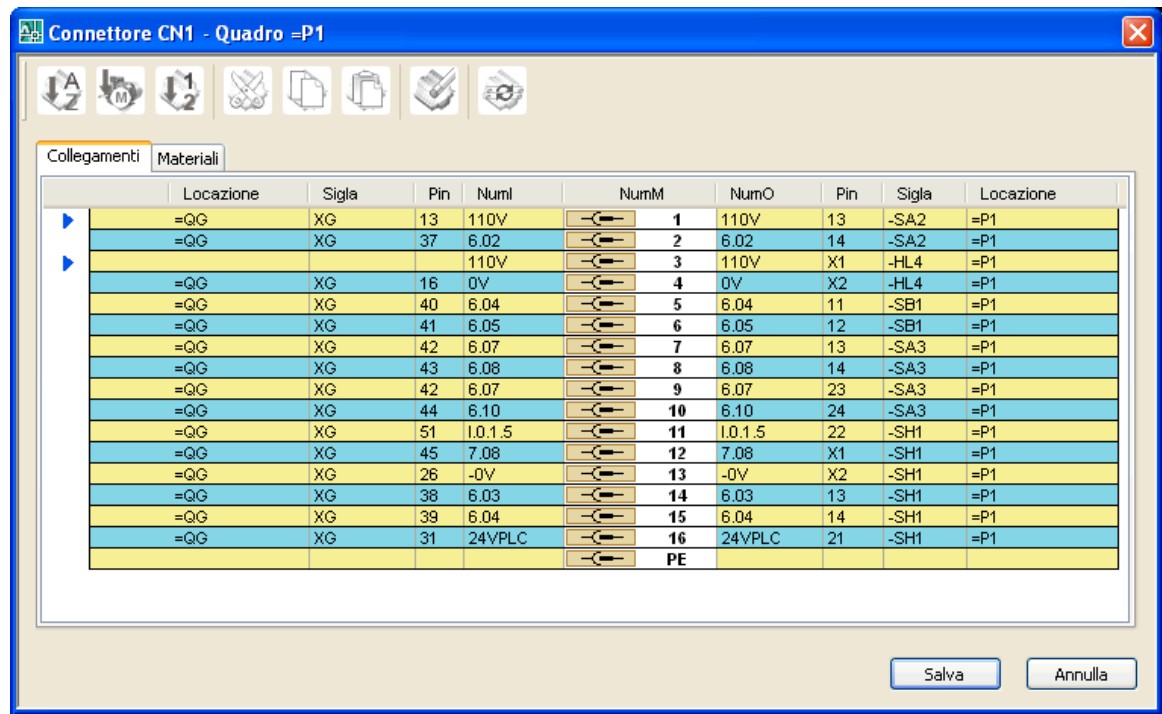

NOTE: NumM represents the number of each pin of the connector.



The addition of codes or accessories is done with the "Insert" button ("Materials" window), only after the selection of the new article from the "Wires' Terminals" or "Accessories" archives.

Indicates the pins that **have several connections** (in input or output):



▶	=QG	XG	13	110V	1	110V	13	-SA2
	=QG	XG	37	6.02	2	6.02	14	-SA2
◀				110V	3	110V	X1	-HL4
							1	CN1
	=QG	XG	16	0V	4	0V	X2	-HL4

Making a double click it is possible to visualize the connections in detail.



The changes are maintained even after a new scanning.

Modify Connector

From the “Connections” window:

NumM \ Pin

NumM	Pin
1	1
1	6
2	1
2	0
3	6

NumM = N° pin

To modify the value of NumM (**pin number**), it is enough to make a double click on the field of interest.

In case a used pin is selected, the values are interchanged.

To use the function “**Change Pin**”, it is required to select first the two data to invert.

Usage

The Usage is an information that could be optionally associated to a pin to represent the destination (see “6.4”).

The Usage (when used) is located in the **Output Notes** field.

To modify its value, it is enough to make a double click on the field of interest .

Input Notes

(ID field at left)

Available for the user. The content is visible on the design according to the visibility state of the attributes R_Note-MO on the return block

Output Notes

(ID field at right)

Available for the user. The content is visible on the design according to the visibility state of the attributes R_Note-VA on the return block

From “Materials” window:



On “Materials” it is possible to sort the terminals an to edit them easily according to the column selected.

Manufacturer and Model

Modello	Descrizione
1208800000	Base chiusa bassa, due le
1207900000	Aggiungi accessorio
	Aggiungi contatto
	Modifica elementi
	Elimina elementi
	Modifica blocco di rientro

Data visible only by selecting the “Materials” window, to assign a new brand/model to the connector by pressing the “**Modify**” button (or the “**Modify Elements**” button using the right button of the mouse).

(See “**Insert Accessories**”)

			C
W			1
W			2
W			3
W			4

 
Selecting a new model, the conversion and the pin substitution is executed automatically: it is important to select a connector compatible.

A model with a lower pin number or with incompatible data is visualized in red color (**W**) (see “**Poles Management**”).

W = Wrong Pin association

The problem is solved by selecting a new compatible model.

Delete Elements (Add)



To **delete an accessory added**, you can use the right button of the mouse pressing the command **Delete**.

It is not possible to delete terminals present in reality on the scheme

Return Block

Blocco di rientro	Categoria
MO-CONN. M	
	Aggiungi accessorio
	Aggiungi contatto
	Modifica elementi
	Elimina elementi
	Modifica blocco di rientro

It is the symbol used for the graphical representation.

The default value is the one set during the configuration (see section 4.2).



With Save all the operations are memorized and with Update they are introduced on the design on the symbols that substitutes the obsolete values.

Insert Accessories



To **insert an Accessory** it is required to select the desired code from the list “**Accessori**” pressing the “...” (Browse) button.

After the article selection, you can press the “**Insert**” button.

The selected article is added at the bottom of the connector (in the last position); you can recognize it because it is associated to the “**Accessory**” category (last column on the right).



To **add one or more wires’ terminals** it is required to select beforehand the pins to be used, then the desired code must be selected from the “**Wires’ Terminals Archive**” pressing the “...” (Browse) button.

You can press “**Insert**” button after the article selection.

The article selected will be inserted on the row of the selected pins; it could be recognized easily because it is associated to the “**Contact**” (last column on the right).

Collegamenti		Materiali				
	NumM	Costruttore	Modello	Descrizione	Blocco di rientro	Categoria
△		Harting	09150073001-091	Connettore 7 poli + terra, frutto maschio + femmina	MO-CONN MF	
△	1	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	2	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	3	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	4	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	5	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	6	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	7	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
△	PE	Harting	09150006101	Contatto argentato a crimpare Maschio 1.5 mmq		Contatto
		Harting	09150006201	Contatto argentato a crimpare Femmina 1.5 mmq		Contatto controparte
		Harting	09150000401	Custodia mobile in termoplastica Pg11		ACCESSORIO
		Harting	09150005401	Coperchio in termoplastica		ACCESSORIO

Example of a M+F Connector, the contacts to be crimped are inserted with the counterpart.

The insertion of contact to be crimped on the complete M+F Connectors (*M+F type*), implies the automatic insertion of the counterpart, on Male or Female Connectors (*M or F type*) only the selected code is inserted.



Press the “**Delete**” button to remove the accessories or wires’ terminals added.




The accessories and contacts with an “Add” indication are not design in reality. They are valid only for the graphical outputs of the terminal blocks / tables and for the count in the Bill of Materials.

Update terminals

“Edit terminal block” and “Edit connector” allow you to change data lists. These changes can be stored by clicking on **Save** and recalled by clicking on **Use Saved**. When carrying out a fresh scan, i.e. extracting data again from the drawing, changed values will be different from the new values extracted.

It is essential to Update before extracting new data to avoid this inconsistency, as a result all data stored using **Save** is the same as that present on the diagram symbols.

If changes are not transferred to the drawing using Update, the “**Saved but not Updated Terminal block**” list pops up at the successive scan.

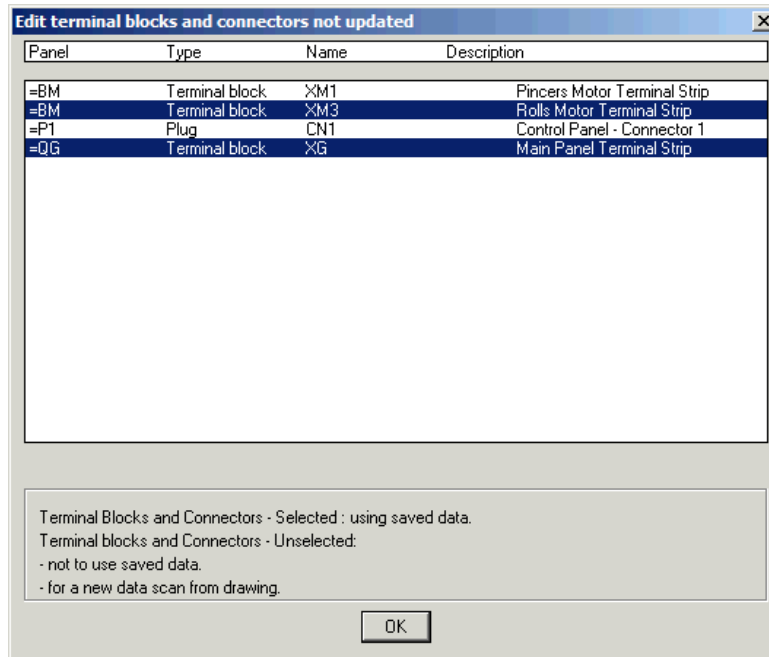

The figure illustrates how to recover changes (not updated on the drawing) for terminal blocks XG and XM3.

The specifications for the remaining terminal blocks (and connectors) changed using Edit will be lost.

List Terminal blocks and Connectors not updated.


Use the “**Ctrl**” key on the keyboard to make multiple selections.



Update replaces symbol attribute data. Any data changed manually will be lost.

Rename

This is used to change a terminal block name or a connector reference. To set the “new name” first select the new Panel value, then the terminal reference.

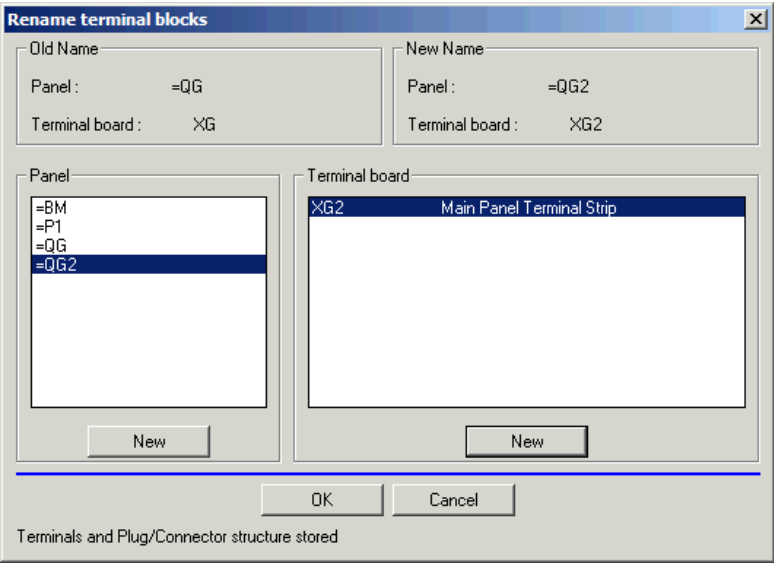

Pressing “New” at left, command “4.3 Panel setting” is run to create new Panel references, obviously not yet listed.

Press “New” at right to specify the terminal block name to get.

This command can be used to merge two different terminal blocks, too, renaming a terminal block with the same name of another existing one (having the same ‘parent’ Panel). This opportunity is not applicable to Plug and Connectors, due to restricted pin number.



“Rename” applies to Terminal Blocks and Connectors only, all other components can be renamed using the specific function included in command “4.3 Panel setting”.

Checks

Some connectors (or terminals) may be marked with an asterisk during processing. This indicates an error.

QG	SPINA	XC1	5/6
QG	*SPINA	XC10	3/3
QG	SPINA	XC11	1/6

Error (*) at XC10

The most frequent source of error is a connector for which specifications are **not in the** “Terminal and Connectors Database” (see Sect. 4.2).

The problem can be solved using the Edit connector function, associating a new make and model to the anomalous connector. It is essential to **Update** here to add the new data to the drawing.

6.4 Usage




Pop-menu > *Product name* > *Terminal and Connector Utility*


The Usage value can be assigned to the terminal to denote function or destination. **In practice, this is the name of an element connected upstream or downstream from the terminal.**

Usage parameter is useful for sorting terminal blocks on the basis of terminals having the same usage, that is terminals for connecting to the same component. An example would be 3 terminals connected to a motor, which are always positioned consecutively in a terminal block independently of their NumI, NumO and NumM values.

Usage is assigned automatically only after having set “**Panel Hierarchy**” first, otherwise Usage must be assigned manually by selecting components.

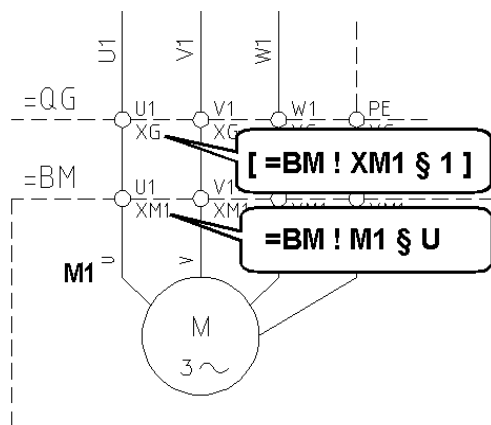

Automatic usage

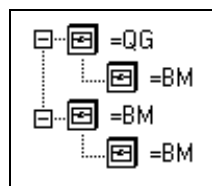

Hierarchy

The figure illustrates automatic usage assignment to terminals for connecting to a motor (M1).

The “direction” (upstream or downstream) usage values depend on the panel hierarchy settings.


The applied hierarchy is defined so that the terminal blocks in panel **=QG (Main Panel)** receive **=BM** as usage, while the terminal blocks in **=BM** receive the elements contained in the same panel as usage.



“Terminal usage drawings” (see Sect. 6.3).

The terminals in the example automatically take on the following usage values on the basis of the configured hierarchy:

U1 Terminal block XG

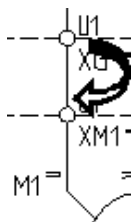

Terminal block XG is contained in panel =QG (Main Panel), which must receive usage from panel =BM according to the configured hierarchy.


Usage direction is derived from downstream in this case, at the connection to =BM through terminal U1 (NumM = 1) on terminal block XM1. The usage annotation, **[=BM!XM1§1]**, is derived from this information.



Brackets [...] indicate that usage is by a terminal.

Brackets (...) indicate that usage is a contact (child symbol).

U1 Terminal block XM1

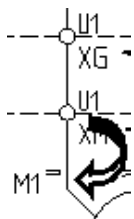

Terminal block XM1 is housed in panel =BM, which must receive usage from elements of the same panel according to the configured hierarchy.

Usage direction is derived from downstream in this case, at the connection to =BM, through pin U on motor M1. The usage annotation, **=BM!M1§U**, is derived from this information.




The § character separates the reference from the connection pin; this example has no brackets [...], so the usage is a component.

Panel Hierarchy



Pop-menu > *Product name* > *Terminal and Connector Utility*

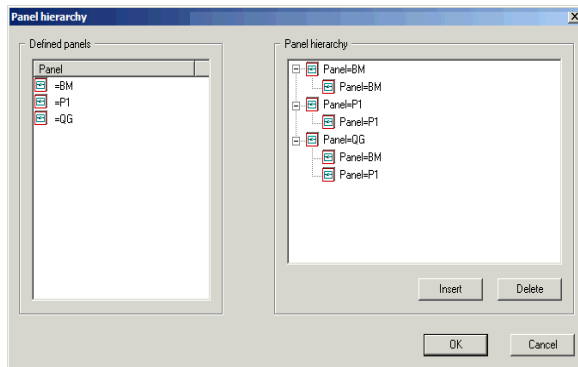

Usage is assigned automatically only after panel hierarchy has been configured first.

This control serves to **establish priority** between panels defining the “direction” (upstream or downstream) from which to derive usage values.

Panels must be dragged (Drag&Drop) from the “Defined panel” list and dropped into position in the panel hierarchy window.

Pushing “**Delete**” on the keyboard eliminates highlighted panels in the hierarchy.

Assign usage



Pop-menu > *Product name* > *Terminal and Connector Utility*

This function assigns usage value to terminals either automatically or manually.

Automatic

This option assigns usage values to terminals automatically whenever “**Panel Hierarchy**” has been configured first.

Usage values are assigned for all selected multisheets by pressing **Scan Multisheets**. A specific message warns if any terminals have not been assigned a usage value or for other anomalous situations.

☒ Enable opposite side to terminal usage

In the attribute “**Upstream Notes**” of terminals and connectors are set data of the usage at the other end of the line (only in case the second one belongs to a Panel not included in its hierarchy).



The list of terminals with no Usage is written in the file NotAssign-Usage.Csv.

Manual

This option assigns usage values to terminals manually.

The usage value is composed of symbols denoting the selected component’s (or terminal’s) name and panel and is reported by the attribute of the same name on each terminal.

Check Usage not Assigned

This is used to get the list of the sheets where command “Assign usage” can be run; for each sheet you can know the number of terminals without Usage.

Delete Usage

This command (**Disassociate Enabled Usage**) removes information assigned to terminals through the command “*Assign usage*”.

6.5 Ddattef terminals



Pop-menu > *Product name*

This is used to **modify terminals data** associated during its insertion in the drawing.

It applies to terminals, connectors and plugs (see Sect. 6.1), avoiding using “Ddatte” command (wrong method).

Selecting a terminal all data associated during its insertion are shown in the dialogue box; here you can change Panel, Terminal Block and material features.

The dialog box is titled "Terminal characteristic modification". It contains several sections:

- Panel:** A list box showing panels: "=BM On Board", "=P1 Control and signalling Panel", "=QG Main Panel", and "=QG+A1 Main Panel - Panel Door". Below it is a "New" button.
- Plug / Connector:** A list box showing connectors: "XG Main Panel Connector". Below it is a "New" button.
- Available Terminals:** A table with columns: Manufacturer, Type, Description, Livelli, and Section. It lists various terminal types and their specifications.
- NumM (No. Terminal):** A text box containing "1".
- NumI (Input wire):** A text box containing "U1".
- NumO (Output wire):** A text box containing "U1".
- Block:** A text box containing "ND4-00".
- Usage:** A text box containing "[=BMX:M1\$1]".
- Input note:** A text box containing "=QGI-QF10\$2/T1".
- Output note:** An empty text box.
- Preview:** A small window showing a terminal symbol with the text "NUMI MORS." and "MORS-N0".
- Input and Output:** Radio buttons for "Input same as output", "Input different from output", and "Based on Attributes".
- Manufacturer:** A dropdown menu set to "all".
- Family:** A dropdown menu set to "All".
- NORMAL:** A dropdown menu.
- Clear >** and **< Search** buttons.
- Accessories:** A button.
- OK** and **Annulla** buttons.
- ?** button.

“NumI and NumO setting” is used to change the value of wire numbering variable “**Input equal to or different from Output**” (see Sect. 4.2), and in fact is equal to the command “6.7 NumI and NumO settings” but applied to selected terminal only.

If the message **Values do not coincide** is displayed this is due to a discrepancy between wire and terminal numbers that you can solve using command “Ddattef”.

Button “...” is used to modify the return block (symbol used to figure the terminal on the terminal block), choosing it from the ones in **Terminal and Connectors Database**.



Manual modifications to field “Usage” must comply the syntax required for this string (see “6.4 Usage”).



5.7 Ddattef

6.6 NumM numbering



Pop-menu > *Product name* > *Terminal and Connector Utility*

This command sorts terminal NumM attribute values numerically.
A different **starting NumM** can be set for each terminal block inserted using the **Add** command, while a scan is common to all.

Automatic renumbering of NumM terminals

Panel	Terminal board	NumM	Description
=BM	XM1	5	Pincers Motor Terminal Strip
=BM	XM2	5	Carriage Motor Terminal Strip
=BM	XM3	5	Rolls Motor Terminal Strip
=QG	XG	68	Main Panel Terminal Strip

NumM 1

AddDelete

Panel	Terminal	Action
=QG	XG	renumber from 1

Sort

☐ Horizontal scan

☒ Vertical scan

☐ Selection sequence

☐ NumM = NumI

Multisheets in job order

SCHEMA

LAYOUT

LIST

OPZIONI MACCHINA

All

Current

None

Invert

Work out

☐ Selection

☐ Sheets

☒ Multi-sheets

OK

Cancel

Summary

?

Horizontal and Vertical **Scan** are the search criteria for terminals yet to be numbered. In practice they are part of the same search system as that employed in the automatic numbering of wires and they are known as Scans A and B (see Sect. 5.2).

This renumbering of NumM is a particularly useful function wherever stored sheets are in widespread use or where the drawing has been changed substantially and this value needs to be restored to consecutive sequence.

NumI	Number of terminal Input wire.
NumO	Number of terminal Output wire.
NumM	Terminal number

The manual selection of terminals **does not affect** the scanning criteria.



The new numbering does not affect connectors since NumM stands for Pin value in this case.

NumM = NumI

This configuration copies NumI value to NumM (for the same terminal).

=QG	XG	renumber from 1
=BM	XM2	renumber from 1
=BM	XM1	renumber from 1

Both starting NumM and scanning sequence settings are irrelevant when working in this mode.



It is no longer possible to use NumM as a sorting parameter for terminals in terminal blocks after this function is used.



WARNING: If wires are renumbered after such an operation, NumM and NumI values may no longer coincide.

6.7 NumI and NumO settings



Pop-menu > *Product name* > *Terminal and Connector Utility*

This command changes the **Input same as or different from Output** variable (see Sect. 4.2) contained in terminals or connectors already drawn on the diagram. It is used to define whether the wire entering the terminal does or does not have to keep the same number as on the output wire during a subsequent numbering of wires.

Input equals Output All terminals (or connectors) selected from the diagram change their status to NumI=NumO. This is the most commonly used setting. The wire connected upstream from the terminal (NumI) keeps its value downstream (NumO).

The wire need only be selected once in order to number the entire connection (see Sect. 5.1).

Input different from Output All terminals (or connectors) selected from the diagram change their status to NumI different to NumO. This is when the wire connected upstream of the terminal (NumI) has a different value to the one downstream (NumO).

The wires upstream and downstream from the terminal must be numbered.

According to attributes

The variable is set to zero. During the subsequent numbering of wires one of the above methods is used according on the actual contents of the terminal NumI and NumO attributes.



The According to Attributes setting adapts the terminal function to any changes that may be made manually to the block using the Ddatte command.

6.8 Delete terminals



Pop-menu > *Product name* > *Utility Mors-Conn*

The command allows you to remove terminals and plugs/connectors **on the whole sheet or on selected wires**.

Removal does not just mean deleting the terminal symbol, but acts by restoring wire numbering correctly.

In the case in which wires with different numberings are connected (upstream or downstream of the terminal), the request for the wire number to be kept appears.

Default means keeping the upstream number (**Wire above**) with deletion of those downstream (**Wire below**). This operation also updates the values on any wires connected to the wire losing its original value.

7 Cross-Referencing


7.1 Cross-Reference



Pop-menu > Util

Cross-reference command handles automatically the cross-references according to the position of the sheet and the segment of the components on the current multisheet or on other sheets of the job order.

Parent and child symbols that have the same name are cross-referenced, as well as the **return symbols** between start (source) and end (destination) points that have the same signal.

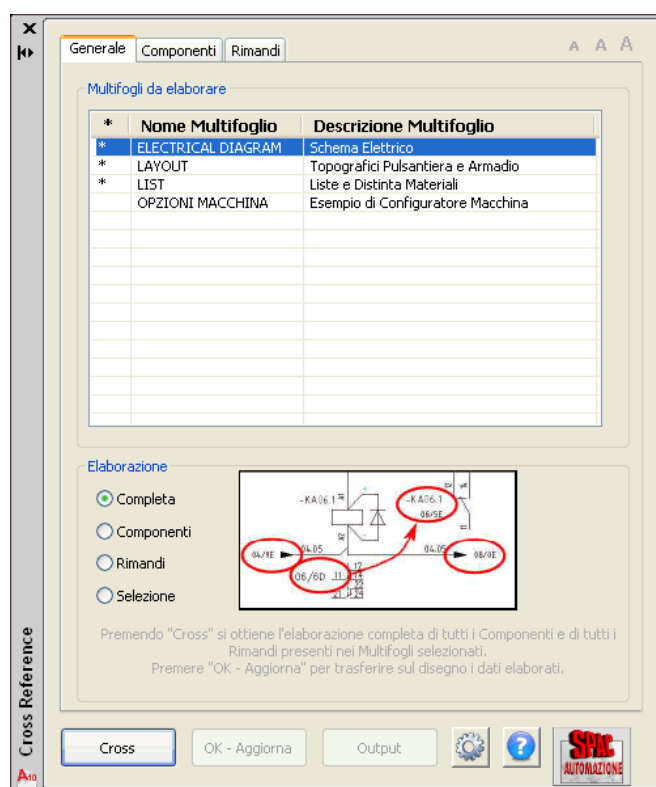

Clicking **“Cross”** starts the processing of all the selected multisheets.

“Parent and Returns” is the most used Cross Reference option, because you process in the same time all available Parent and Return symbols.

Usually you can execute the **“Complete”** processing of all the symbols. If modifications are required, it could be useful to process only Components or only Returns.

Choosing **“Selection”** among the available Cross options, you can limit the process to a group of components or returns chosen on the drawing pressing **“Cross”**.

The results are displayed on tab **“Components”** and **“Returns”**. It is suggested to consult the list before pressing **“OK – Update”** to transfer the resulting data on the drawing.

Errors are displayed in the **“Components”** and **“Returns”** tab as well as the warning messages to inform about the things to be checked.

“OK – Update” button is enabled only after the command is executed.




Processing is executed according to the configuration on **“Cross Reference”** (see Sect. 4.2).




Those symbols containing I or IGNORE in the TYPE attribute has a related warning signal (see **“14.7 Ignore symbols”**)

Cross-Reference Components


Components Cross-Reference example: The image below illustrates two Parent symbols (coils KA1 and KA2) and two Child symbols (contacts KA2 and KA1) as an example on sheet no.1 in segments 1 and 2:

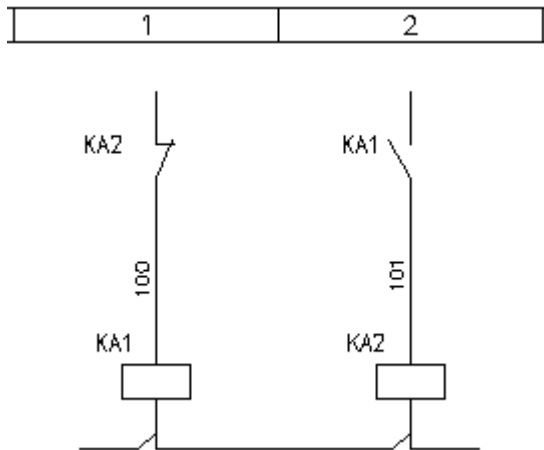

Situation in Fig. 1 before cross-referencing.

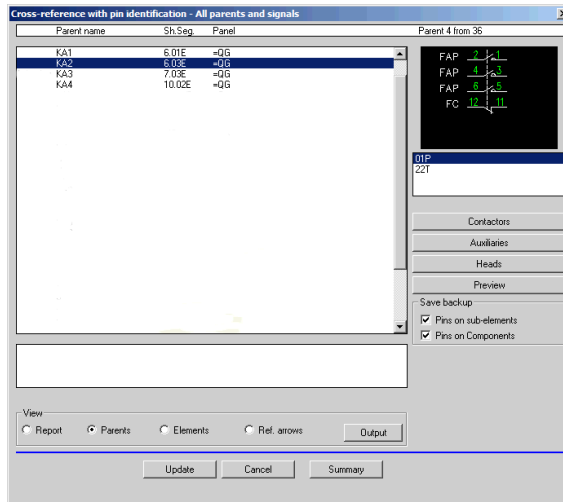

Situation during the processing.

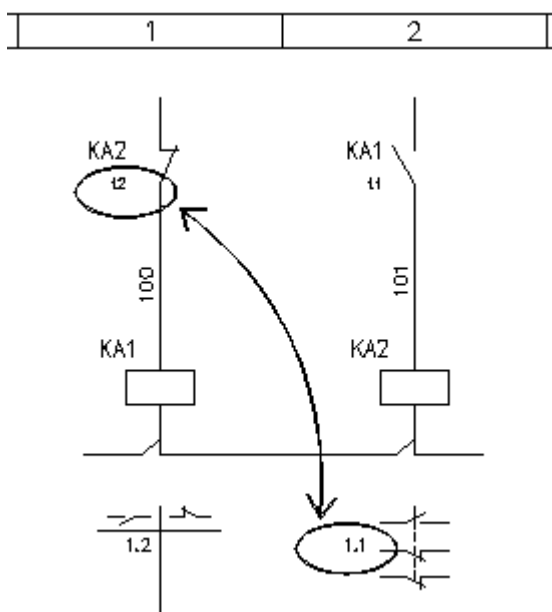

Situation in Fig. 1 after cross-referencing.

Attributes of Parent symbols (Pres=M):

KA1:Code=RIF1_44 Offset=@0,@-10,0

KA2:Code=12E Offset=@0,@-10,0

Attributes of Child symbols:

KA1: Pres=FA

KA2: Pres=FC

The code is entered during the insertion of the symbol on the drawing, and can be changed at any time using the **XS** (Edit symbol) command. The default value is set in symbol configuration.

Pressing **"Cross"** starts the multi-sheets processing.

To check he processed data click on **"Components"** tab:

The list highlight errors or anomalies; some of them could be edit and solved in this section pressing **"Edit"**.

Selecting a component it is possible to define the references in detail as illustrated in the figure:

In this section it is possible to edit data such as replacing the contactor or adding heads in case the coil cannot accept all the necessary contacts.

Pressing **"OK - Update"** transfers only the valid data processed to the drawing.



= OK

Child symbols (contacts) receive the position (sheet and segment) of the related Parent while Ref1_44 and 12E (set in the Code) reference blocks are inserted next to parents (coils) as indicated by Offset.

The reference block contains the sh.cat records of the child symbol positions.


Error messages may be displayed during this processing (see Sect. 7.3).

This example has been carried out without Pin marking.

Editing



This function solves the errors that cross-reference detects during the processing of a Job Order

“Edit” Example on Components Cross Reference, the figure shows two coils (KA1 and KA2) and four contacts (KA1 and 3 KA2) designed on page N° 1 :

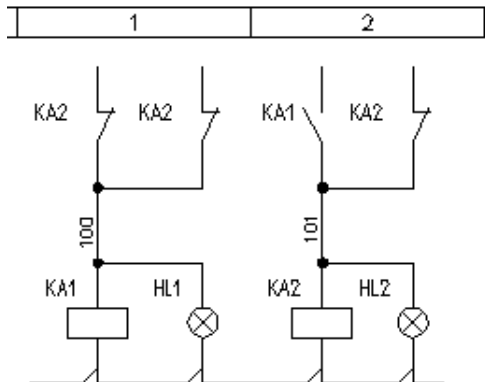

The Code present in the symbol KA2 has value **12E**, which means that the parent component can host **1 contact NO (Open)** and **2 contacts NC (Closed)**.

On the drawing you find 3 NC (Closed) contacts and 1 NO (Open) contact, so the error is that there is a NC contact **“Not Associated”**.

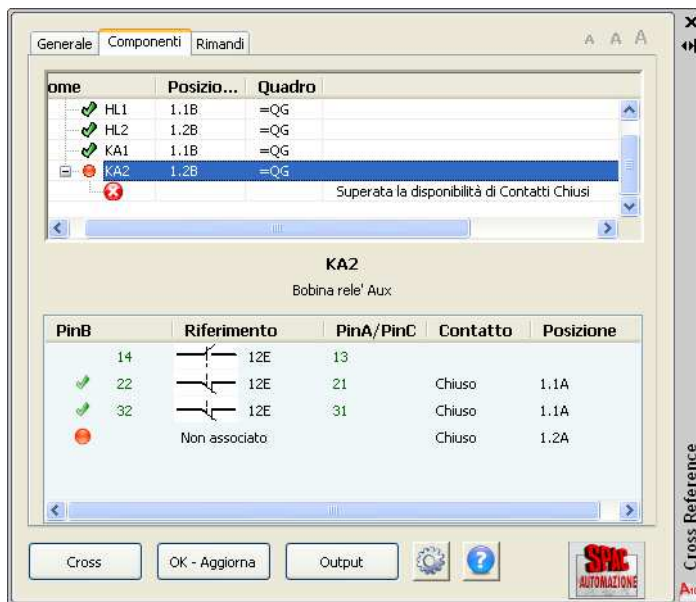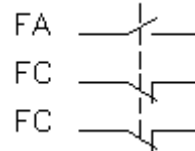


To check the processed data click on **“Components”** tab: The component KA2 is highlighted with the red traffic light (error).

On the Window at the bottom, you can see the preview that indicates the NC contact that cannot be associated.

On the Reference **“Not Associated”** you can see the closed contact that caused the error (see figure).

- = Error
- = Warning \ Info
- = Component OK

The error detected on KA2 is **“Closed Contacts availability Exceeded”**

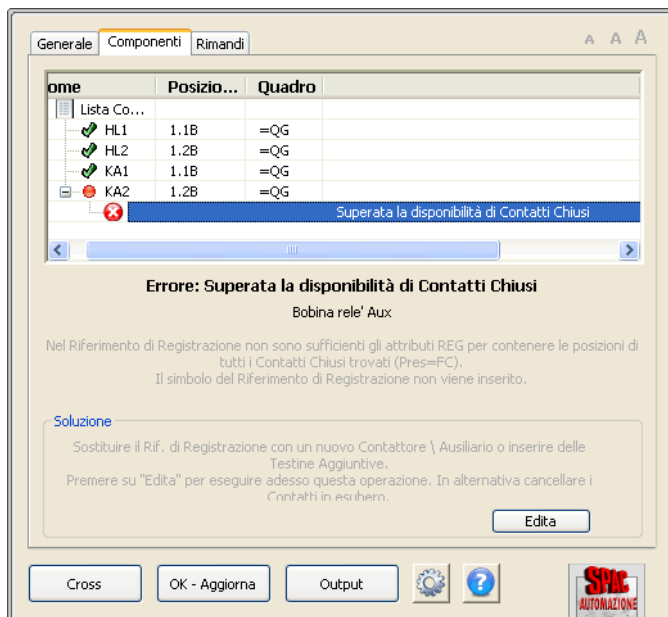

Clicking on KA2 you can see the error messages found.

Clicking on the errore message row you can see the details and options to solve the issue (if possible) pressing the **“Edit”** button (see figure).

- = Error Message
- = Warning \ Info

Pressing the “Edit” button the XS command is automatically enabled (see “Edit Symbol”). There are two different ways of solving the problem:

Substitute the contactor



By clicking on **Contactors** (or **Auxiliaries** for switches, selector pushbuttons, etc.) a new Reference other than the 12E can be selected which can host the third closed contact: either 03E or 13E, etc.

Once the new reference is confirmed, the error message is immediately deleted.

Contactor and Auxiliary symbols are present in the two directories Librerie\Riferim\Cnt and \Riferim\Aus.

If a contactor is replaced the type of material must also be replaced: this solution is only valid when the bill of materials has not yet been established (see Sect. 8.1).

Add Head



The “added head” allows the number of contacts to be increased without changing the 12E reference.

A reference to add to 12E can be selected by clicking on **Heads**: for example 02T or 11T, etc. (more than one head can be added). Head symbols are present in the directory Librerie\Riferim\Tsa.

Once the added reference is confirmed the error message is immediately deleted.

Adding heads means that the type of material must also be updated (adding an article): this solution is only valid when the bill of materials has not yet been established (see Sect. 8.1).



Heads can be removed by simply selecting a new contactor.

Error messages that appear during processing can be partly resolved using the “Edit”. For details see the section entitled Errors (see Sect. 7.3).

Parent symbol

Components linked to other elements in the diagram are called parent symbols. These include coils with contacts, switches and auxiliaries, pushbuttons and add-ons, etc.

This option processes one or all parent symbols in the job order, highlighting the position of related child symbols. Parent blocks must contain certain attributes for the match to be successful (*see Sect. 17.2*):

- The **NOME** attribute contains the **Parent symbol** reference. Child symbols must have the same name as the parent to which they are connected (this feature is case sensitive).
- The **CODE** attribute is only essential for parent symbols that have no registration REGn attributes. In practice, the code contains the Reference block name (contained in SPAC Librerie\Riferim\... directory) that must be assigned to the parent. The reference block contains REGn attributes for writing child element positions. Parent symbols that contain REGn attributes do not need the CODE, it is recommended nevertheless. Symbols have a default CODE value. For example **REF1** for coils, **REF2** or **REF3** for switches, etc.
- The **OFFSET** attribute is associated with the CODE attribute. It indicates the position of the Reference block on the drawing. The position is in relation to the insertion point of the parent symbol. If the OFFSET is **@0**, **@-10,0** the reference block is inserted at coordinates X=0 Y=-10 in relation to the parent's insertion point (@). 0 is the angle of rotation.
- The **PRES** attribute is essential for the program to recognize the parent symbol and must contain **M**.
- The **REG** attributes contain records about the position of the Child symbols. REG is always followed by a number. Even numbered REG values contain records of open and transfer contacts (children). Odd numbered REG values contain those of closed contacts. These attributes are incompatible with OFFSET values and make CODE values less important (for example, in relay coils with fixed reference).

Child Symbol

Child symbols must also respect the presence of certain attributes (*see Sect. 17.2*):


- The **NOME** attribute must include reference to the parent component that will be associated to it.
- The **PRES** attribute makes possible the recognition of the **Child symbol** by the program. The content of PRES can be altered to suit the block type:

PRES	Description	PRES	Description
FA	Normally open contact	FC	Normally closed contact
FAP	Open power contact	FCP	Closed power contact
FT	Triple (power) contact		
FS	Transfer contact	FL	Lamp
FA2	Twin contacts normally open	FC2	Twin contacts normally closed
FAn	N normally open contacts	FCn	N normally closed contacts
FAP2	Twin power contacts open	FCP2	Twin power contacts closed
FAPn	N open power contacts	FCPn	N closed power contacts
F*_RE	Delayed pick up	F*_RD	Delayed drop out
F*_RED	Del. Pick up/drop out		


- The **REG** attribute (without number) contains the position of the corresponding parent symbol.

Cross-Reference Returns


Return Cross Reference Example: The figure shows two equivalent start (source) signals (sheet 1) and the corresponding destination on sheets 2 and 3:

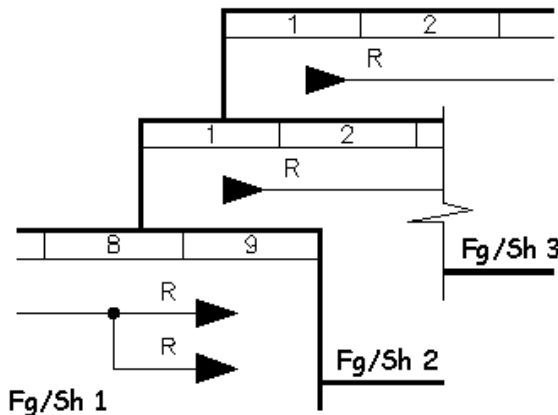

Situation in Fig. 1, 2 and 3 before cross.

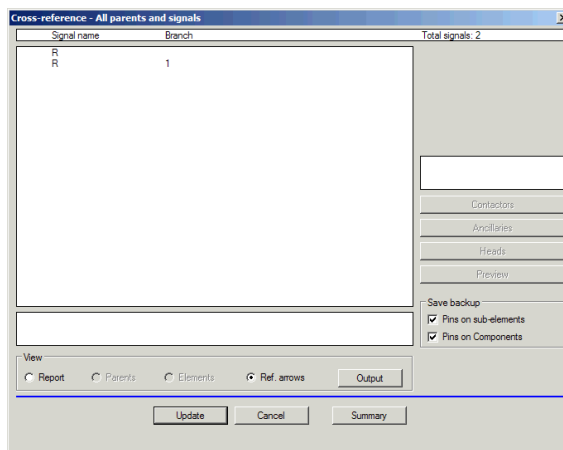

Situation during the cross-referencing process.

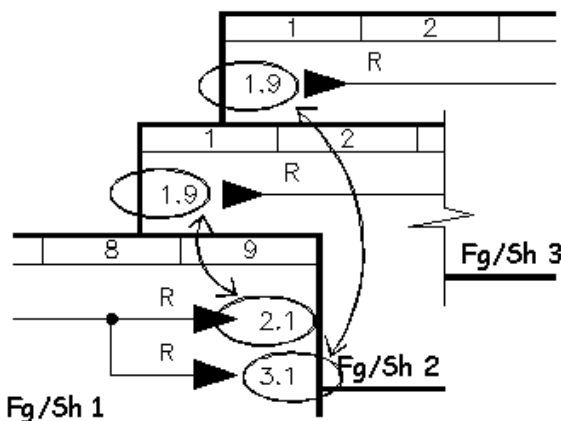

Situation in Fig. 1, 2 and 3 after cross.

Start Attributes (Pres=P) of Fig. 1:

1st. Signal = R Branch= (null)

2nd. Signal = R Branch = 1

Destination Attributes (Pres=A) of Fig. 2:

1st. Signal = R Branch = (empty)

Destination Attributes (Pres=A) of Fig. 3:

2nd. Signal = R Branch = 1

Signal and branch values are entered during the insertion of symbols into the drawing.

Once a multisheet has been scanned, a general situation **report** is displayed:

The report shows any errors or anomalies; some of them could be edited or solved in this work session pressing **"Edit"**.

Selecting a Return it is possible to view in detail all the registrations on the window at the bottom as indicated in the figure:

Pressing **"OK – Update"** the valid data transfer to the drawing is executed.

☒ = OK

☐

Start symbols (contacts) are labelled with the position (sheet and segment) of the related destination and vice versa.

Branch data is invisible on the drawing. The Ddatte command displays and allows changes to its value.

Error messages may be displayed during processing (see Sect. 7.3).

Return Signal

Components used to handle wire returns and/or power feed between different diagram sheets are known as Return symbols.

This option processes one or all return symbols in the job order, highlighting the position of start returns (indicating the destination sheet and segment) and their respective destination return (indicating start points). Matching is determined by certain attributes (*see Sect. 17.2*):

- The **SEGNAL (Signal) attribute** indicates the name of the wire or power feed to which it is connected. Returns are created between start and destination signals having the same name.
- The **#LINEA (Branch) attribute** is only completed when more than one return starts from the same wire or power feed, and therefore has the same name:

The 1st return has **Signal=R** and **Branch=(null)**

The 2nd return has **Signal=R** and **Branch=1**, 2 then 3 for the third, and so on.

- The **PRES attribute** is essential so that the program recognizes the Return symbol:
Pres=**P** in the Start symbol and Pres=**A** in the Destination symbol.
- The **REG attribute** contains the position (sheet and segment) cross-referenced with corresponding Returns.

7.2 Pin reference

This option processes parent, child and element symbols in the job order, highlighting the respective pin configurations described in the settings and transferring them to the symbols. Cross-references depend on certain **PIN** attributes (see Sect. 17.2).


Cross-references with pin references make it easier for the final user to read electric diagrams during wiring and maintenance since connections are described in detail.



Processing is controlled by settings configured in “Cross Reference” (see Sect. 4.2).



See “7.1 Cross-Reference”

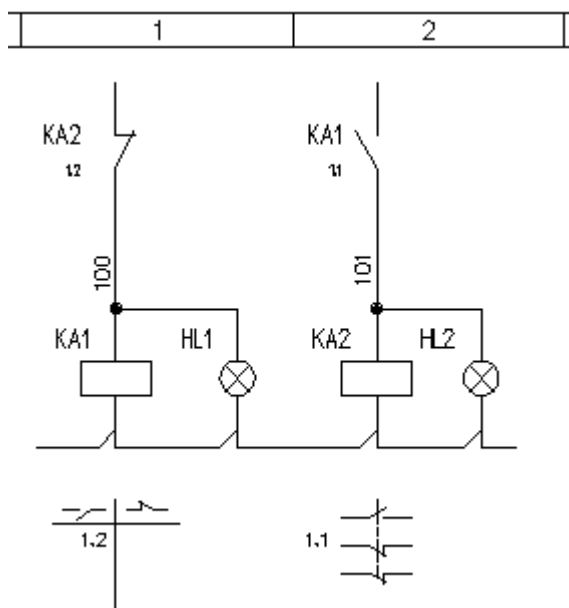

Cross-reference without pin reference.

Parent symbols (Pres=M) KA1 and KA2:

Code KA1 = REF1_44 (**NO** Pin reference)

Code KA2 = 12E (**OK** Pin reference)

Element symbols HL1 and HL2:

Code ignored (if present).


Parent and element symbols in the figure need specific configuration for pin referencing. Pin attributes must be set for this to be possible.

Child symbols without pin references assume the configuration of the related parent according to the code (the code indicates name of the **Registration reference symbol**).

The registration reference symbol contains the pin reference to be transferred to the child symbols.

Let us look more closely at the configuration of the various symbols in the example:

Parents KA1 and KA2

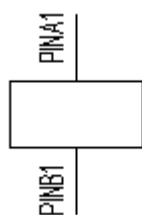


Exploded diagram of symbol


The pair of attributes PinA1 and PinB1 is configured with values A1 and A2 as shown in the dialogue window.

The configuration can be changed from the corresponding Prefix Archive (see “Symbol Configuration”).

This configuration refers only to the setting-up of **Parent symbol**, it does not affect Child symbols.

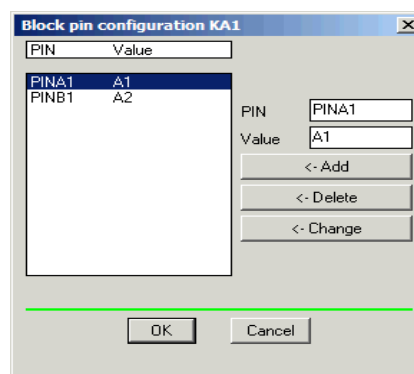

Child KA1 and KA2

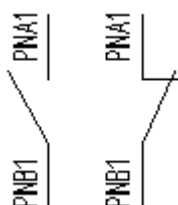

There is no child symbol configuration. The pair of attributes PinA1 and PinB1 is compiled according to the content of the **Registration reference symbol** (cross-reference) assigned by the code in the parent symbol.

Elements HL1 and HL2



Element symbol configuration is described in the same way as parent symbol configuration.

This configuration can be changed as necessary at any time.

Each symbol has only one configuration.

Ref. Reg. 12E



The pin attributes that form part of this symbol have pre-assigned values. They therefore contain a default value assigned when the block was built.

Configuration Code 12E:

PinB0=14 PinA0=13

PinB1=22 PinA1=21

PinB3=32 PinA3=31

Rif. Reg. RIF1_44



Registration references may not have pin attributes, or may have zero default values (empty Pin attributes as in Ref1_44).

Pin reference cannot be processed in either case.

Code REF1_44:


PinB0= PinA0=

PinB1= PinA1=

PinB3= PinA3=



"Pin" (see Sect. 4.2).

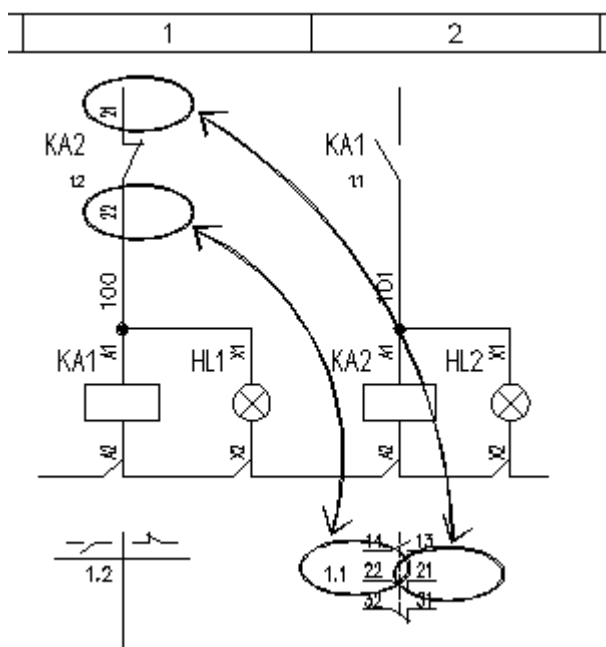

Cross-reference with pin reference.

Cross-referencing with pin references gives the following result:

KA2 (Code 12E) is given the symbol ref. 12E containing the pin values. These values are transferred to the child symbols of the parent in question.

KA1 has no pin reference as the reference symbol REF1_44 does not allow it (default pin attributes have zero value). As a result, the child symbols from the parent in question also have none.

REF1_44 is also termed generic reference in that it has no pin reference limitations.

HL1 and HL2 (Element symbols) have pin values as configured.

A fresh cross-referencing process becomes necessary when an electric diagram has been changed substantially.

 


WARNING: To remove a pin reference completely, a fresh cross-referencing process is necessary - **Execute cross-reference with Pin** and **Save Pin** must be deactivated.

Save Pin

Pin values on a drawing are completely updated after each processing operation. When a diagram is changed, some pin values may be assigned to other components. Save Pin must be activated to prevent this from happening.

Save child pin must be activated to ensure that information entered with **Real-time cross-reference** is preserved (see Sect. 7.4).



When Sub-element pins is activated, the function only keeps previous values for symbols in this category.

Activating Component pins keeps previous values for all parent and Element symbols.

To remove a pin reference from a diagram completely, "Cross-reference with Pin" (in settings) and both "Save Pin" options must be deactivated.

7.3 Errors

Cross-reference (see Sect. 7.1) is provided with a drawing diagnostic; during processing informational messages or error may be displayed.



- **Component symbols errors**
- **Return symbols errors**

Component symbols errors

	Message	Description	Solution
1	Error: Homonymy Component	There are symbols with the same NAME in the positions indicated. The Cross Reference of these components is not performed.	Change the NAME of the Components with a value available. Click on "Edit" to perform this operation now.
2	Error: Homonymy with Component	The symbol has the same NAME as an Parent symbol in the position indicated. The Cross Reference of these components is not performed.	Change the NAME of the Components with a value available. Click on "Edit" to perform this operation now.
3	Error: PLC - Synoptic homonymy	There are PLC - Synoptic symbols with the same NAME in the positions indicated. The Cross Reference of these components is not performed.	Change the NAME of the PLC - Synoptic with a value available. Click on "Edit" to perform this operation now.
4	Error: Component without NAME	There is an symbol (without Pres attribute) with empty NAME attribute in the position indicated.	Enter a NAME to the Component. Click on "Edit" to perform this operation now.
5	Info: PIN Configuration not found	The Parent symbol is not inserted in the Prefix Database File list or has not been configured in PIN list.	PIN values are already stored in the symbol or the Component does not require a registration PIN. In other cases you must configure the PIN list in the Prefix Database - "Configure Symbols" (SPAC Settings).
6	Error: Contact \ Child without NAME	In the position indicated there is a Child symbol (Pres=F*) with empty NAME attribute.	Enter a NAME to Contact \ Child. Click on "Edit" to perform this operation now.
7	Info: Contact \ Child PIN repeated	Contact \ Child symbols (belonging to the same Parent) have been detected having the same PIN values (this occurs when a Contact that has already the pin marking is copied). Or there are two identical PINs on the same symbol.	The values of PIN Contact \ Child are updated automatically.
8	Info: Contact \ Child PIN not found	The Contact \ Child symbols have different PIN values from those set on the Registration Reference.	The values of PIN Contact \ Child are updated automatically.
9	Info: Contact \ Child incorrect PIN	The Contact \ Child symbols have empty PIN values.	The values of PIN Contact \ Child are updated automatically.
10	Info: Contact \ Child without PIN attribute	This error occurs when a Child symbol (Pres=F*) has no PIN attributes, therefore unsuitable for PIN Marking.	The Contact \ Child does not require a registration PIN or you must replace the symbol.
11	Error: Contact \ Child without PARENT Component	This error occurs when a Child symbol (Pres=F*) has no corresponding Parent symbol (Pres=M), for example a Contact without the corresponding Coil.	Change the NAME of Contact \ Child, click on "Edit" to perform this operation now. Other possibility is to delete the contact.
12	Contact \ Child to be ignored	Contact \ Child excluded from the Cross Reference.	Click on "Edit" to check the setting.
13	Error: Component without NAME	There is a Parent in the position indicated symbol (Pres=M) with empty NAME attribute.	Enter a NAME of the Component. Click on "Edit" to perform this operation now.

	Message	Description	Solution
14	Info: PARENT Component without Contacts \ Child	Parent symbol without Contacts \ Child to be registered. The Registration Reference symbol (declared in the CODE attribute) does not need to be inserted.	The Registration Reference symbol is not drawn, it is automatically deleted if present.
15	Info: PARENT Component with Reg. Reference included	The Parent symbol (Pres=M) contains the Register Reference, therefore it is unsuitable for PIN Marking.	The Component does not require registration PIN or you must replace the symbol.
16	Component to ignore	Component excluded from the Cross Reference.	Click on "Edit" to check the setting.
17	Registration Reference to ignore	Component excluded from Cross Reference.	Click on "Edit" to check the setting.
18	Error: Return without NAME	In the position indicated there is a Return symbol (Pres=P , A) with empty SIGNAL attribute (Tag SEGNALE). The Cross Reference of these components is not performed.	Enter a NAME to the Return. Click on "Edit" to perform this operation now.
19	Error: Availability of Open Contacts exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Open Contacts (Pres=FA). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
20	Error: Availability of Closed Contacts exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Closed Contacts (Pres=FC). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
21	Error: Availability of Switching Contacts exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Switching Contacts (Pres=FS). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
22	Error: Availability of Open Power-contacts exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Open Contacts (Pres=FAP , FT). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
23	Error: Availability of Closed Power-contacts exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Closed Contacts (Pres=FCP). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
24	Error: Availability of Contact - Lamp exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Contacts - Lamp (Pres=FL). The Register Reference is not inserted.	Replace the Reg. Reference with a new Contactor \ Auxiliary or add a Head block. Click on "Edit" to perform this operation now. Alternatively delete excess Contacts.
25	Error: Availability of Module - Child exceeded	In the Register Reference the REG attributes are insufficient for containing the positions of all Module - Child (Pres=FM). The Register Reference is not inserted.	Replace the Reg. Reference, click on "Edit" to perform this operation now. Otherwise delete excess Modules.
26	Info: Closed Power-contact registered as normal	In the Register Reference the REG attributes are not present for the Closed Power-contact found (Pres=FCP). Registration takes place as normal Closed Contact (not power contact).	Normal operation with the generic Reg. Reference (RIF1, RIF1_22, RIF1_44, RIF2, RIF3 etc. ...). In other cases click on "Edit" to change the Reg. Reference.

	Message	Description	Solution
27	Info: Switching Contact registered as normal	In the Register Reference the REG attributes are not present for the Switching Contacts (Pres=FS). Registration takes place as Closed Contact with the addition of "sc".	Normal operation with the generic Reg. Reference (RIF1, RIF1_22, RIF1_44, RIF2, RIF3 etc. ...). In other cases click on "Edit" to change the Reg. Reference.
28	Info: Open Power-contacts registered as normal	In the Register Reference the REG attributes are not present for the Open Power-contacts found (Pres=FAP, FT). Registration takes place as normal Open Contact (not power contact).	Normal operation with the generic Reg. Reference (RIF1, RIF1_22, RIF1_44, RIF2, RIF3 etc. ...). In other cases click on "Edit" to change the Reg. Reference.
29	Info: Open Power-contact registered as normal	In the Register Reference the REG attributes are not present for the Open Power-contact found (Pres=FAP). Registration takes place as normal Open Contact (not power contact).	Normal operation with the generic Reg. Reference (RIF1, RIF1_22, RIF1_44, RIF2, RIF3 etc. ...). In other cases click on "Edit" to change the Reg. Reference.
30	Error: Reg. Reference without PARENT Component	This error occurs when a Register Reference symbol (Pres=R) is without the corresponding Parent symbol. This error occurs changing the Parent NAME manually without changing the name of the corresponding Register.	The Registration Reference symbol is automatically deleted.
31	Info: Reg. Reference - obsolete symbol	The Parent symbol is associated with a Registration Reference that is not updated to the current software version. In the cases in which it is possible automatic replacement is carried out.	Replace the Registration Reference, click on "Edit" to perform this operation now.
32	Error: Registration Reference not found	The CODE attribute is incorrect in the Parent symbol (Registration Reference not found). The symbol must be present in the Libraries\Reference folder.	Replace the Registration Reference, click on "Edit" to perform this operation now.
33	Error: Reg. Reference - Error in PIN	The Registration Reference has empty PIN attributes (or repeated value). Unsuitable for PIN Marking.	Normal operation with the generic Reg. Reference (RIF1, RIF1_22, RIF1_44, RIF2, RIF3 etc. ...). In other cases click on "Edit" to change the Reg. Reference.
34	Error: Reg. Reference - Error OFFSET	The OFFSET attribute is incorrect in the Registration Reference symbol (for the position to insert the Additional Head). The Cross Reference of these components is not performed.	Change the OFFSET value. Examples of correct syntax: Reg. Reference 12E "@0,-14", Reg. Reference 11P "@0,-22". Click on "Edit" to perform this operation now.
35	Error: Reg. Reference without NAME	There is a Registration Reference symbol in the position indicated (Pres=R) with empty Parent attribute (Tag MADRE).	The Registration Reference symbol is automatically deleted.
36	Info: PLC - Bit without NAME	There is a BIT PLC symbol in the position indicated (Pres=F_PLC) with empty NAME attribute.	Enter the NAME of the I/O PLC card associated (if necessary). Click on "Edit" to perform this operation now.
37	Info: Reg. Reference and PARENT Component code different	The CODE attribute of the Parent symbol is different of the Registration Reference on the drawing.	The Registration Reference symbol is automatically replaced. Click on "Edit" to select a new Reg. Reference.
38	Info: Reg. Reference - PIN repeated	The Registration Reference and the Additional Head have common PIN values.	If necessary, click on "Edit" to select a new Registration Reference symbol.
39	Error: PIN configuration incorrect	The PIN configuration in the Prefix Database File list is not corresponding with the attributes of the symbol.	Configure the PINs list in the Prefix Database - "Configure Symbols" (SPAC Settings) and click on "Edit" to select a new Registration Reference symbol.
40	Error: Component with PRES incorrect	The PRES attribute of the Component is invalid (or empty). The Cross Reference of these components is not performed.	Enter a valid value of PRES. Click on "Edit" to check the setting.

	Message	Description	Solution
41	Info: PIN configuration not found	The symbol Parent is not inserted in the Prefix Database File list or has not been configured in the PIN list.	PIN values are already stored in the symbol or the Component does not require registration PIN. In other cases you must configure the PIN list in the Prefix Database - "Configure Symbols" (SPAC Settings)
42	Error: PARENT Component without CODE	The symbol indicated by this error was declared during construction as Parent symbol (Pres=M), therefore it must also contain the CODE attribute for the association of the Registration Reference (Tag CODICE). The symbols with this message must be modified.	Save the symbol with the missing attributes.
43	Error: PARENT Component without OFFSET	The symbol indicated by this error was declared during construction as Parent symbol (Pres=M), therefore it must also contain the OFFSET attribute for the insertion coordinates of the Registration Reference indicated in the CODE. The symbols with this message must be modified.	Save the symbol with the missing attributes.
44	Error: Component with PRES incorrect	The PRES attribute of the symbol is invalid (or empty). The Cross Reference of these components is not performed.	Enter a valid value of PRES. Click on "Edit" to check the setting.
45	Error: PARENT Component - CODE error	The CODE attribute is empty in the Parent symbol (without Registration Reference). The Cross Reference of these components is not performed.	Click on "Edit" to select a new Registration Reference symbol.
46	Error: PARENT Component - OFFSET error	The OFFSET attribute in the Parent symbol is incorrect. The Cross Reference of these components is not performed.	Change the OFFSET value. Examples of correct syntax: Relay Coil "@0,@-10.0" , Three-pole breaker "@15,@-5.0". Click on "Edit" to perform this operation now.



It is always necessary to check components on the drawing that are associated with the errors or warnings.

Return symbols errors

	Message	Description	Solution
1	Error: Return with PRES incorrect	There is a Return symbol with invalid Pres attribute in the position indicated (Pres=A on destination returns, Pres=P on start returns). Values other than A or P are not accepted.	Enter a valid value of PRES. Click on "Edit" to check the setting.
2	Error: Returns with the same X coordinate	Returns with the same SIGNAL have been detected in the same X coordinate of the sheet (Tag SEGNALE). The Cross Reference of these components is not performed.	Click on "Edit" to enter a Branch \ Description value for each repeated Return. The verification is done when the segments are set to Abscissa on "Sheets Dimension" (SPAC Settings).
3	Error: Returns with the same Y coordinate	Returns with the same SIGNAL have been detected in the same Y coordinate of the sheet (Tag SEGNALE). The Cross Reference of these components is not performed.	Click on "Edit" to enter a Branch \ Description value for each repeated Return. The verification is done when the segments are set to Ordinate on "Sheets Dimension" (SPAC Settings).
4	Error: Returns with the same coordinates	Returns with the same SIGNAL have been detected in the same X \ Y coordinate of the sheet (Tag SEGNALE). The Cross Reference of these components is not performed.	Click on "Edit" to enter a Branch \ Description value for each repeated Return.
5	Error: Returns - Invalid sequence Start \ Destination	Consecutive Destination Returns (Pres=A) have been detected, one in the same sheet as the Start Returns (Pres=P), the other is on subsequent sheets. The Cross Reference of these components is not performed.	Removing any one of the Destination Returns.
6	Error: Consecutive Start Return	The same and consecutive Destination Returns (Pres=A) have been detected on two different sheets. The Cross Reference of these components is not performed.	Insert a Start Return with the same SIGNAL name between the two.
7	Error: Consecutive Destination Return	The same and consecutive Start Returns (Pres=P) have been detected on two different sheets. The Cross Reference of these components is not performed.	Insert a Destination Return with the same SIGNAL name between the two.
8	Error: Returns - Invalid sequence	2 or more Returns with the same SIGNAL have been detected in the sheet (Tag SEGNALE). The Cross Reference of these components is not performed.	Click on "Edit" to enter a Branch \ Description value for each repeated Return (when they are connected on the same branch). Or remove one of the Registration Reference symbol.
9	Info: Single Start Return	In the page indicated there is a Start Return (Pres=P) that does not have a Destination on other sheets.	Insert (if necessary) a Destination Return.
10	Info: Single Destination Return	In the page indicated there is a Destination Return (Pres=A) that does not have a Start on other sheets.	Insert (if necessary) a Start Return.



It is always necessary to check components on the drawing that are associated with the errors or warnings.

7.4 Real-time Cross-reference

If a **Child symbol** (contact) is inserted in a drawing, it can be directly associated with its position on the coil (**Parent symbol**) depending on its availability as defined by the code (**Registration reference symbol**). This mode is activated in settings (see Sect. 4.2). Let us consider the example of the insertion of an open contact (KM1) in two different ways:

Available parents

Parent reference: KM1

Prefixed	Available Labels	Panel
FR	KM1	=QG
KA	KM2	=QG
KM	KM3	=QG
Q		
KT		
QF		
S		
SA		
SB		
SH		

Function1: CARRIAGE MOTOR FORWARD
Function2: CONTACTOR
Type: LA1DN11.LC1D093F7
Sheet.segment: 6.06E
Multi-sheet block: SCHEMA
Library: KM1
IEC

Ignore for commands:
☐ Cross Reference
☐ Graphics change

OK Cancel

Real-time cross-reference OFF

Proceed as usual: the list of all references for drawn parent symbols is displayed. The position of the contact (with pin values) is associated by cross-referencing according to processing sequence (see Sect. 7.1 and 7.2).

Real-time cross-reference is usually OFF when pins are not used.

It is advisable to set **Real-time cross-reference** to **OFF** when generic registration references are used (Ref1, Ref1_22, Ref1_44, etc.).

Insert Contact FA - Parents available

Parent reference: KM1

Prefixed	Available Labels	Panel
FR	KM1	=QG
KA	KM2	=QG
KM	KM3	=QG
Q		
KT		
QF		
S		
SA		
SB		
SH		

Function1: CARRIAGE MOTOR FORWARD
Function2: CONTACTOR
Type: LA1DN11.LC1D093F7
Sheet.segment: 6.06E

Register Ref.
FAP 2 1
FAP 4 2
FAP 6 1
3P-0A-0C
11T

Ignore for commands:
☐ Cross Reference
☐ Graphics change

PinA	Type	PinB/PinC	Reference	Pres	Contact	Sh.Segm.
1	AP	2	3P-0A-0C	>	FAP3	Power switch, open 5.03C
3	AP	4	3P-0A-0C	>	FAP3	Power switch, open 5.03C
5	AP	6	3P-0A-0C	>	FAP3	Power switch, open 5.03C
53	A	54	11T	>	FA	Open 7.05B
61	C	62	11T	>	FC	Closed 6.07D

OK Cancel Legend

Real-time cross-reference ON

Select the coil symbol, then (at the bottom of the dialogue window) the position of the contact with their respective pin values.

Real-time cross-reference is usually ON when coil availability needs to be checked immediately without waiting for the general processing of cross-referencing to be completed (limiting the number of possible anomalies).

It is advisable to set Real-time cross-reference to ON to select the desired pin values.

The cross-reference function associates them according to its processing order.

You are not allowed to fill in the field "Parent reference" freely (it's frozen) while the setting **"Same component"** is active.



WARNING: General Cross-referencing should be processed using the option **Save Pin to Child** to preserve information introduced using Real-time Cross-referencing.

 
 
7.5 Cross-reference legend



Pop-menu > Util > Cross Utility

The Cross-reference Legend function must be used only after job order processing is completed and finalized.

The related legend must be updated after each new cross-reference process.

Cross-Reference Legend		
		Item: -KA3 Panel: =QG Sheet: 7
		Type : 700-HK32A2-4L Marke : Rockwell Automation Device : RELAY - TYPE HK GENERAL PURPOSE PILOT LIGHT Use Type : CASCADE SWITCH
		Item: -KA4 Panel: =QG Sheet: 10
		Type : 048893 Marke : Moeller Device : DIL ET ELECTRONIC, TIMING RELAY 1C/D MULTI-FUNCTION Use Type : PINCERS MOTOR ENABLED RELAY

Example of component KA present in cross-reference legend

All the parent symbols with related Registration References are taken from the drawing and entered in the table as in the figure above. All technical data is also included for each component. The option **Parent symbols only** filters out all symbols in the element category (see Sect. 17.1).

The table and the positioning of data in it can be customized using the settings functions (see "Cross-reference legend" Sect 4.2).



The color selected in settings for inserted text (see Sect. 4.2) is significant for translation into foreign languages (see "Color text processing" Sect. 12.4).

The default table contains 12 symbols per sheet. The sheets needed to complete the legend, follow the indicated starting sheet.

First sheet number for Cross-reference Legend:

If the selected sheet is in use, the function asks whether to continue or to stop the process in order to select a new sheet number. The program asks for confirmation for each subsequent sheet

When **Clear current sheet** is enabled, all entities are deleted prior to beginning the drawing.

If the sheet selected is new, the function proceeds without further prompting. Subsequent sheets are created automatically in consecutive sequence.

The default table symbol is **LegendaC.dwg** and is in the symbols directory. It is possible to use customized tables provided they are saved to the same directory.



Symbols contained in these tables are purely graphic. They are not used in any other processing.

7.6 Cross Utility



- **Change by Cross**
- **Delete Cross Reference**

Change by Cross



Pop-menu > **Sheets**


This command does a sheet change, with destination corresponding to the page contained in the registration chosen. The function requires:

Select a Registration Ref :

The example figures show registration selections to do the **** Change sheet on page 5 ****.



Change sheet selecting registration

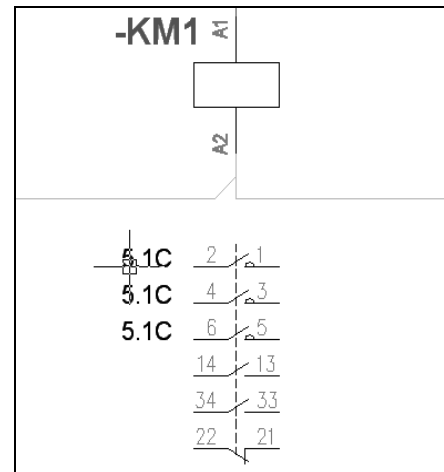

See: **Summary**



You can also recall the function quickly by typing in the command "FX".

Delete Cross Reference



Pop-menu > **Util > Cross Utility**

This command deletes Cross-references **from the current sheet or multisheet**.


It works by emptying all symbols from cross-references (Reg and Reg* attributes) and deleting all registration reference symbols. The content of the code and offset attributes **is not reset** to the original default values.

8 Bill of Materials

8.1 Materials database

Materials database management comes with the specific Materials Database program.

It is possible to access and use the database processed here within a drawing to associate material codes with the symbols on the drawing (see Sect. 8.2). The Materials Database is able to handle additional database files. It is initialized with these default files:

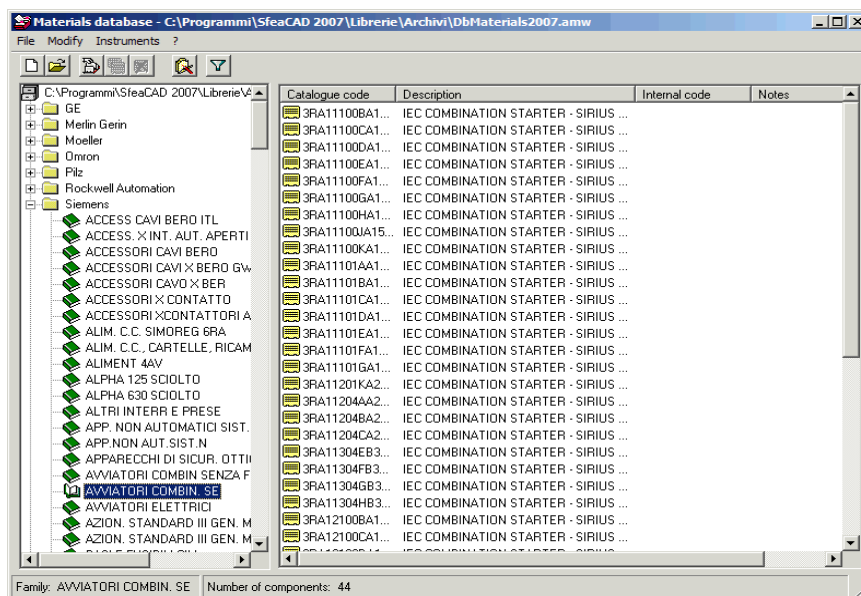

Every database has an AMW extension, each can contain an infinite number of manufacturers. The example in the previous figure shows a database structure at 3 levels:

 
- **Manufacturer:** this is a file containing an unlimited number of families.
- **Family:** this is a group containing an unlimited number of codes.
- **Code:** this is a catalogue with the related description & commercial data for any article.



Right mouse clicking on Manufacturer, Family or Code allows you to conduct Insertion, Deletion and Duplication operations, while left clicking twice activates the Renaming operation.

- New** This command allows you to create an empty file with a new .amw file name. It is possible to manually insert new Manufacturers with related code families, or **import** a database that already exists in any of various formats.
- Open** This allows you to load an already existing database. The current one is stopped temporarily.
- Save with Name** It is possible to duplicate (using a different name) the current database.

Database information



Right clicking on the database file name gives access to database information.


	Visible	Hidden
Manufacturers	8	0
Families	961	0
Components	30316	0

The information shows file content in numeric form.

This function is particularly useful for checking if there are any "hidden" items at the moment of opening the file (see *"Hide"*).

File Import/Export

Material codes can be imported into any file, both new and already existing: manufacturers and existing items are updated and integrated based on prompts made to the user during importing.

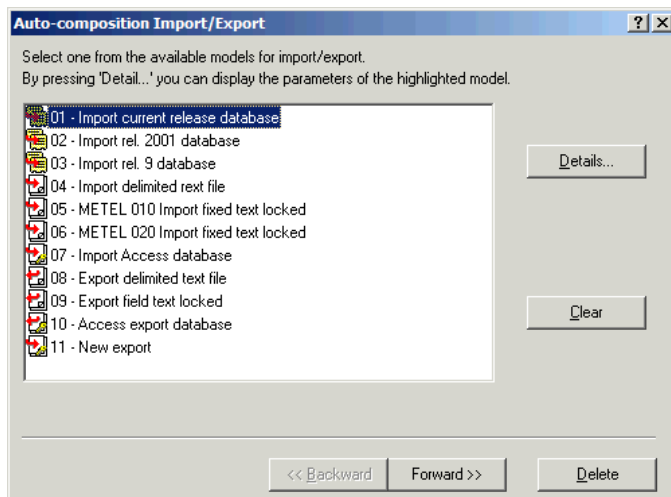

It is possible to import **Metel** price lists in both formats I and II (010 and 020).

Files from previous versions of Spac, **from release 2004 to 2007**, can be imported by selecting the specific item (*Import files vers. 2004*) from the model present in the list.

Imports using **"Fixed Text"** and **"Delimited Text"** must be customized by the user according to the structure of the file being imported.

Exports using **"Fixed Text"** and **"Delimited Text"** must be customized by the user according to needs.

We suggest you conduct the various imports into new AMW files so that the database is empty and therefore faster and more effective at importing data.

Databases can be exported in two possible file formats, **ASCII** (fixed length fields) and **ACCESS**. The configuration for these parameters can be obtained by clicking on "Details."

Details This allows you to analyse and set up already existing Import/Export items. For some types of importing you cannot customize, these items are indicated as "Blocked profile."

New It is possible to create new materials database import or export functions (optional, for programming).


Eliminate This is for removing import/export functions.



Composition and customization of new Import/Export profiles is suggested only for those with programming experience.

Database print

The printing of a Materials Database can be configured to the user's specific needs, every layout is a customized printing format.

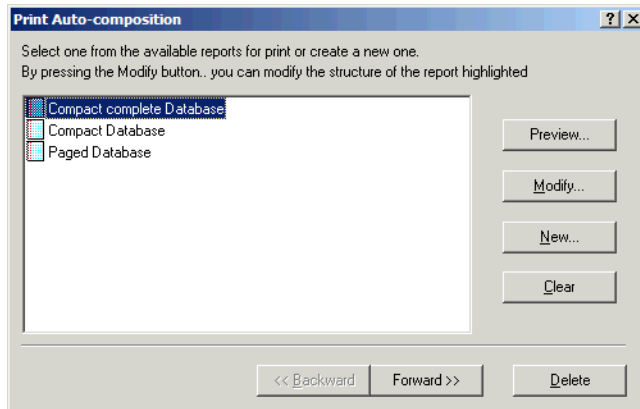


There are some ready to use printing configurations, each is an .lst file in the Distinta\Report directory.

"**Compressed Database**" printing is done in profile and there are no Internal or EAN codes. It is therefore the most suitable for paper-saving.

"**Complete database**" printing is in landscape. All important item information is present; it is therefore the best for detailed printing.

- Preview** This allows you to see the sheets that must be printed on the monitor; this function is useful for checking the database in the chosen layout.
- Change** Clicking on "Change" activates the **sheet layout customization program** (optional for programming use), it is advisable at this stage to access the online instructions and help.
- New** You can create a new printing configuration. Again in this case you activate the **sheet layout customization program** (optional for programming use). The instructions for each function are contained only in the available online help.
- Delete** This is for removing printing templates.

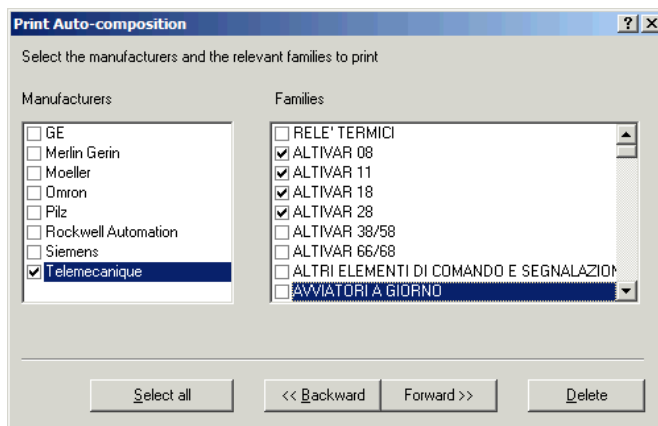

After having chosen a printing layout from those available, click on "**Continue>>**" to determine the involved manufacturers (and families).

 
Follow the on-screen instructions.



The creation of new printing templates is an operation only for users who have programming experience.


Inserting a code

Before being able to manually insert a material item, the names of the manufacturer and family/group it belongs to must already be present.



A new Manufacturer can be added by right clicking on the name of a database file and selecting Add Manufacturer from the popup menu.

Right clicking on the name of a new Manufacturer opens the menu for retrieving **Information** first and then **Inserting Family**.

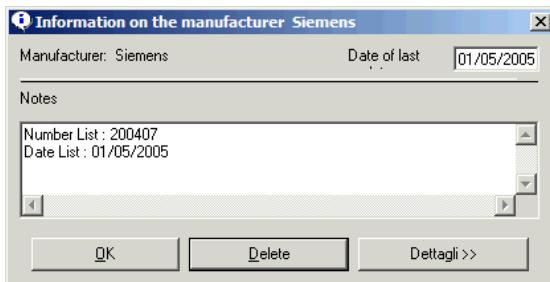

The information can be entered or changed by the user.

It consists of two fields: the first is Data and is for recognizing validity of a listing. Click on "Ignore" when there are no data.

The second is "Notes" which can be freely used: "No information stored" appears when nothing has been entered.

The name of the family must be chosen to facilitate mnemonically the search for the next item. **Insert components**, which opens the **"Edit code"** panel, can be retrieved by right clicking on the name of the new family.

Is possible to **move** or **copy** codes from one manufacturer to another:

Copy

You must select one or more codes: these must be dragged to the group belonging to the Manufacturer that is different from the Start group.

It is not possible to copy the Codes between groups of the same manufacturer, double codes in the listing are not permitted.

The symbol "+" appears during the "dragging" of the cursor.

Move

You must select one or more codes: holding down the keyboard Shift [⇧] key you must drag the codes to a group different from the start group (and between groups of the same manufacturer).

During the dragging of the cursor no symbol appears.



Copy and Move act in the same way on an entire Family.

Edit code

Making a double click on an existing code, it is possible to display and change its characteristics.


The dialogue panel is the same panel as when **inserting a new article** and consists of the following 5 data tabs:



1. General
2. Technical Notes
3. Layout
4. Electrical BLK
5. Unravelling

General

Making a double click on an existing code, it is possible to display and change its characteristics.

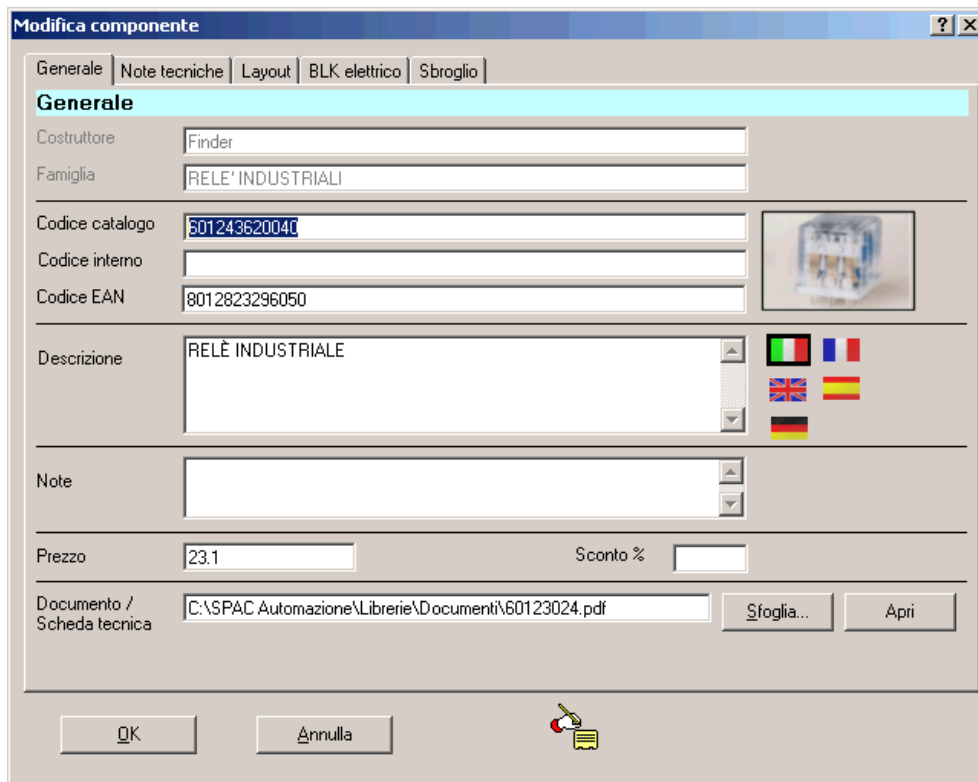

The Manufacturer and Family fields are two fields that can be changed using this function (they can be renamed by double clicking on the item in the archive).

Catalogue Code corresponds to the data written in the *Type* attribute of the symbols on the drawing during the operation “8.2 Pair Materials” (**obligatory field**).

Internal code frequently corresponds to a company and/or warehouse code, whilst **EAN code (European Article Number)** is a European code (data not shown on symbols).

Description corresponds to the data written in the *Description* attribute of the symbols on the drawing during the operation “8.2 Pair Materials”.

Some manufacturers have descriptions in different languages. It is possible to check for alternative languages by selecting one of the flags at the side.

The **Notes** field allows the user to insert additional comments and can be used freely.

In the **Price** field the value of the price list can be indicated, whilst the **Discount %** can only be managed from the “external” BOM (See “8.4 External Bill of Materials”).

The **Document\Data Sheet** is associated by pressing the “Browse.” button and it is possible to associate a file in Doc (Word) format or PDF (Acrobat) format.

Pressing “Open” it is possible to view the previously associated document. The use of this configuration is linked to the management of the “Technical Manual” (see parag. 8.3).



Preview of the product is displayed only when an image file (bmp or jpg format) is present in the Library\Archives\Images folder in Spac and has a name corresponding to the catalogue code.



The **Catalogue code** is the only obligatory field, whilst the use of the **Description** field is strongly advised (it is displayed in most parts of the configurations for Bills of Material).

Technical Notes

Making a double click on an existing code, it is possible to display and change its characteristics.

This panel allows the user to customise material “technical” data and to manage selection filters (by pressing the “Define Filter” and “Pair Filter” keys).

Cut, Delta-Cut, Colour, Code and **Thermal Dissipation** (Support attribute) are examples of possible attributes contained in the symbol.

Code corresponds to the name of “Registration Reference Symbol” from the Cross-reference; use the “Cnt”, “Aus” and “Tsa” keys to browse the available options.

The user is allowed to associate information to any attribute present in the symbol by configuration of the attribute name (**TAG**) and its respective value (= **Value**):

- Add** Used to create a new association TAG = Value.
- Change** Used to confirm changes in an existing association.
- Delete** Cancels the current association.
- View** Opens the list of associations.

Example: If during a “Pairing Materials” operation the user wishes to insert “Motor Protection” (together with other commercial data of the Manufacturer, Type and Description) in the attribute “**Function1**” (of the symbol) it is necessary to configure the fields (TAG) = Value as shown in the previous figure.




The configuration (TAG) = Value substitutes the system value \$Attribute=Information\$ adopted in previous versions of Spac.



WARNING: Technical Notes is a field used to insert comments (used freely) and is no longer valid for the system value \$Attribute=Information\$ as used in the previous versions of Spac.

Layout

Making a double click on an existing code, it is possible to display and change its characteristics.

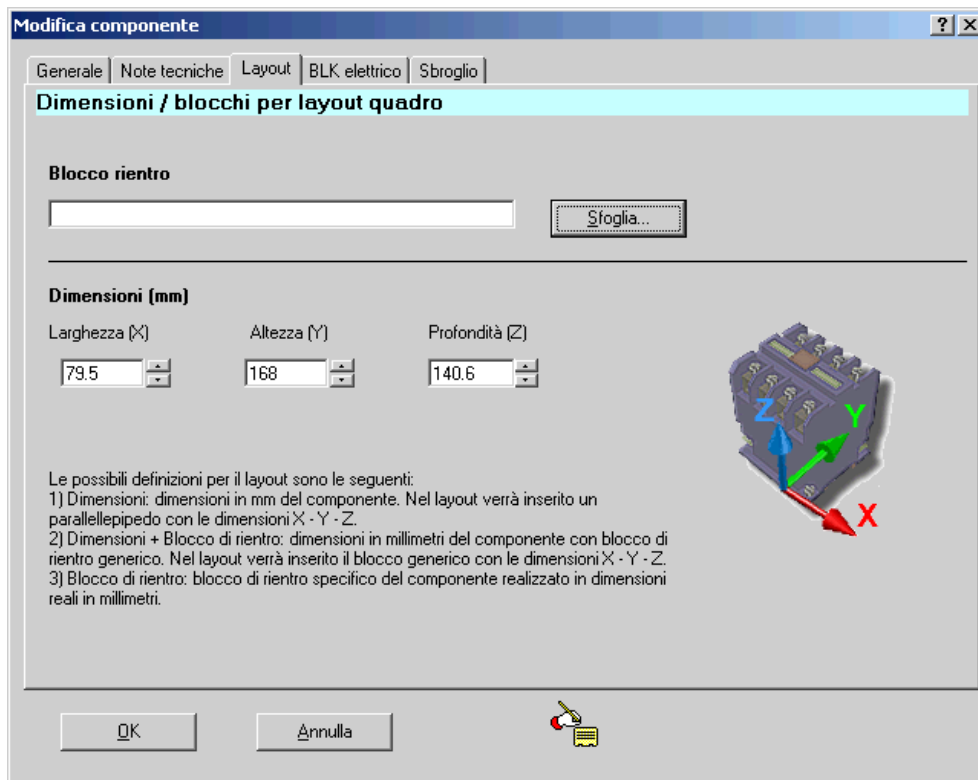

See: [15.3 Topographical Management](#)

In the **Dimensions (mm)** field, set the real sizes of the component: these dimensions are used to make automatic the drawing procedures for the topographic electrical panel (a generic rectangular block is inserted using the symbol **Ly_Default**).

As an alternative, it is possible to insert directly the name of the graphic symbol to be used in the **Re-entry Block** field.

Pressing the “Browse.” key, it is possible to choose a specific symbol from the symbols available in the Library\GestTop folder.

Configuring both **Dimensions** and **Re-entry Block** the priority depends on the type of block:

- With “**real**” symbols, priority is given to the block and the dimensions are ignored.
- With “**generic**” symbols, the symbol is drawn with its set dimensions.

“Real” symbols are those drawn with the real dimensions of the component (real sizes), whereas “generic” symbols are those drawn to 1x1x1 sizes (See “[Dimensions and Block Selection](#)” parag. 15.3).




Rules do not exist to identify beforehand “real” symbols from “generic” symbols.

(Symbols installed with Spac can normally be identified by their names, i.e. those with a LY_ prefix are generic, whereas those with a LY- prefix are real).

Electrical BLK

Making a double click on an existing code, it is possible to display and change its characteristics.

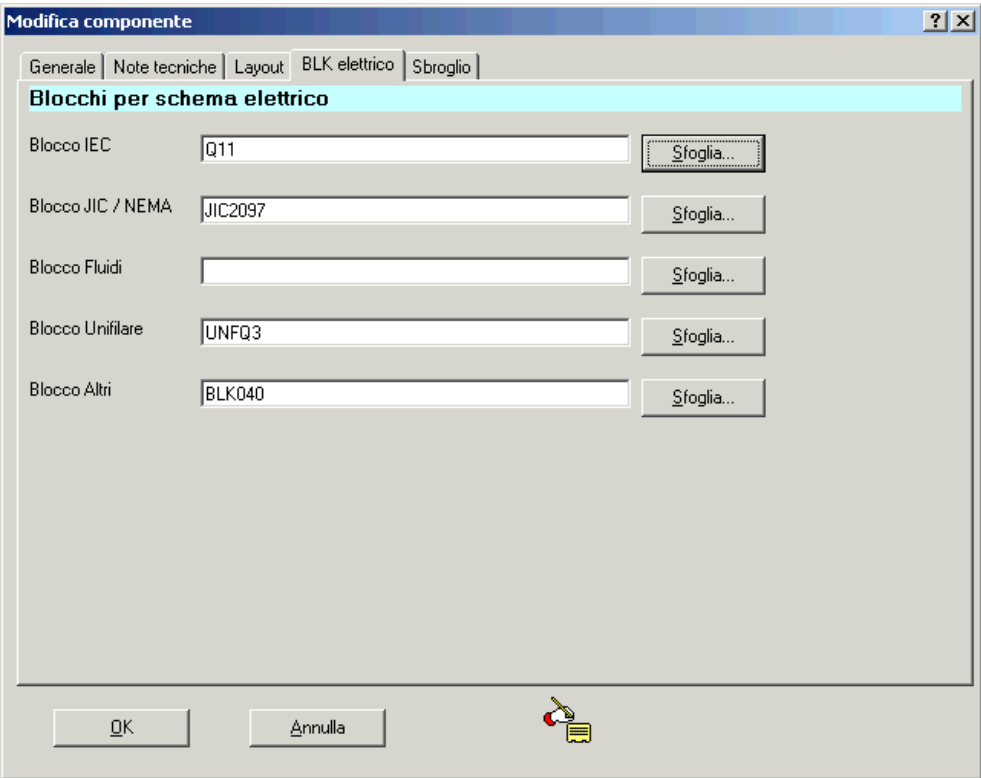

The screenshot shows a software window titled "Modifica componente" with a tabbed interface. The "BLK elettrico" tab is selected. Below the tabs is a section titled "Blocchi per schema elettrico". It contains five rows, each with a label, a text input field, and a "Sfoglia..." button. The input fields contain the following values: "Q11", "JIC2097", an empty field, "UNFQ3", and "BLK040". At the bottom of the window are "OK" and "Annulla" buttons, and a small icon of a hand pointing at a document.



See: [8.6 DbCenter](#)

Each single Code **can correspond to a graphic symbol** of the four main libraries (IEC, JIC, Fluids and Single-wire) plus a generic configuration (called "**Other Blocks**"), which permits any symbol to correspond to the code (being part of the Spac libraries), for example a **Blk created by the user** (See "[16.1 Blk Symbols](#)").

This configuration is used by "**Drawing Mode**" in DbCenter (see *parag. 8.6*).




The symbol configured in the "Other Blocks" field is used in the two following cases:

1 – When a different library other than IEC, JIC, Fluids or Single-wire is used.

2 – When using the current library (IEC, JIC, Fluids or Single-wire) no symbol is configured.


Unravelling

Making a double click on an existing code, it is possible to display and change its characteristics.

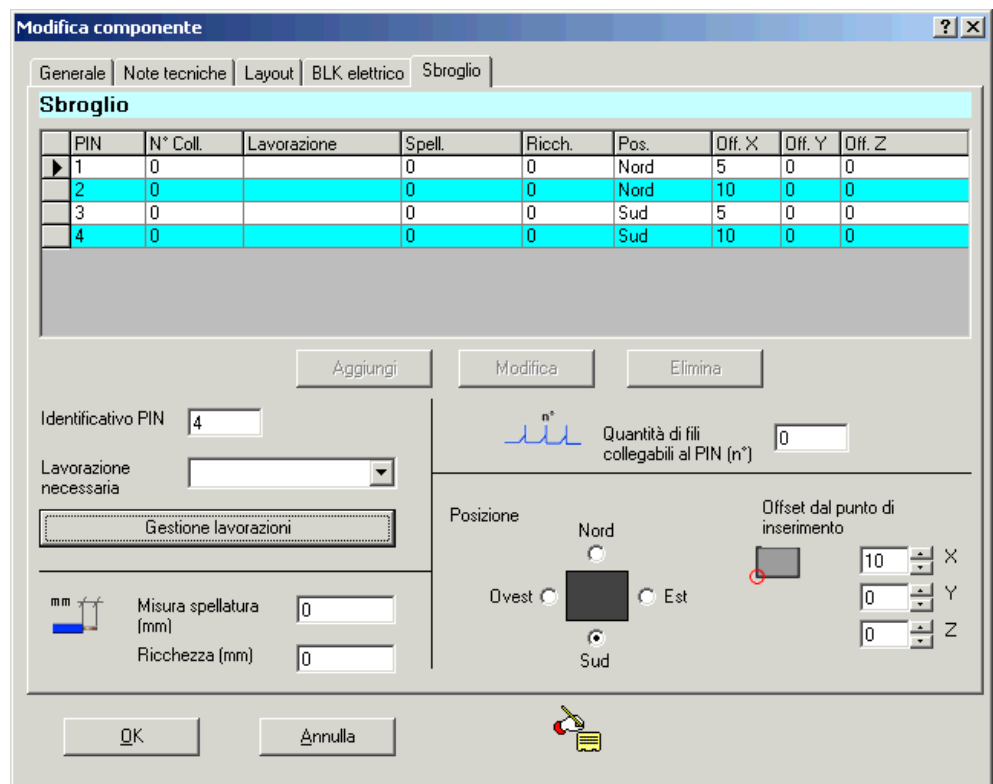

This configuration is used from the command “15.8 Unravel Panel Wires”.

“The Unravelling” is a programme used to analyse and optimise the paths of wires and cables and can be integrated in the Spac Automation environment for advanced management of the functions “15.3 Topographical Management”.

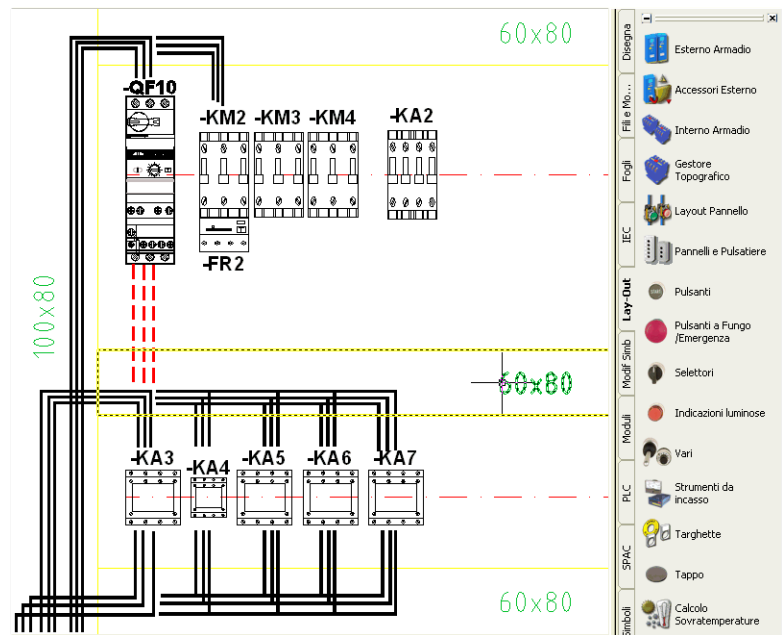

This image shows an example development for wires and cables obtained using the Unravelling Module.

Unravelling Module.



See: 15.8 Unravel Panel Wires

Tools



- Define a filter
- Associating filters
- Apply filter
- Find codes
- Hide information
- Hidden component management
- Import file Terminals (DAT)
- Options

Define a filter

Defines filters for combining materials in the database.

All components in a file that do not correspond to the configured type are hidden when using “**Apply filter**”. This way, specific simplified searches can be carried out to determine objects categories.




See “**Apply filter**”.

There are three levels of filters: Item 1, Item 2 and Item 3. It is not necessary that a filter have all three data, thus a filter that has only item 1 can therefore be created.

The dialogue window appears with two columns, one for entering new data and the other for selecting already existing data (this gives congruence to the entries). Creation of a filter for socket mounted industrial relays having a 110 VAC coil is illustrated in the example. A filter using the same Item 1 and Item 3, but Item 2 for a 24 VDC coil could be successively created. Filter configuration is stored by clicking on “OK”.

Associating filters

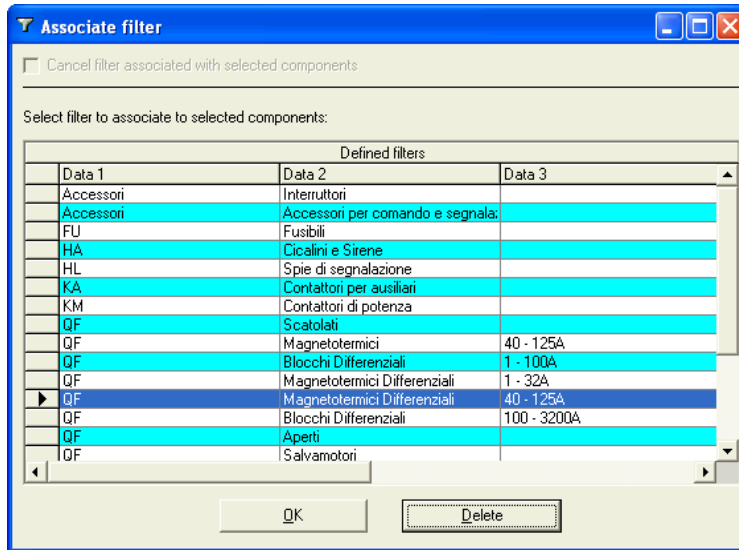

Associates a filter (an already defined one) to one or more components in the materials database.

The component(s) are selected from the database first, then Associate Filter is selected from the contextual menu that pops up when having right-clicked on the selected component(s).

Codice catalogo	Descrizione
601281100010	RELE' INDUSTRIALE DA INNESTO-110V-AC-10A-2 Sc.-Var. 0010
601281100020	RELE' INDUSTRIALE DA INNESTO-110V-AC-10A-2 Sc.-Var. 0020
601281100030	RELE' INDUSTRIALE DA INNESTO-110V-AC-10A-2 Sc.-Var. 0030

Codes linked to filters are indicated by a symbol bearing an "F" (as in the figure).

Use the same procedure, but clicking on "Delete the link between filter and selected components" to disassociate component(s) from a filter.

Icons




Identifies a single material code.

Identifies a single material code paired to a Filter.

Apply filter

All database components that do not correspond to a filter's characteristics are not displayed when a filter is applied. This simplifies a search to within a determined category of items.

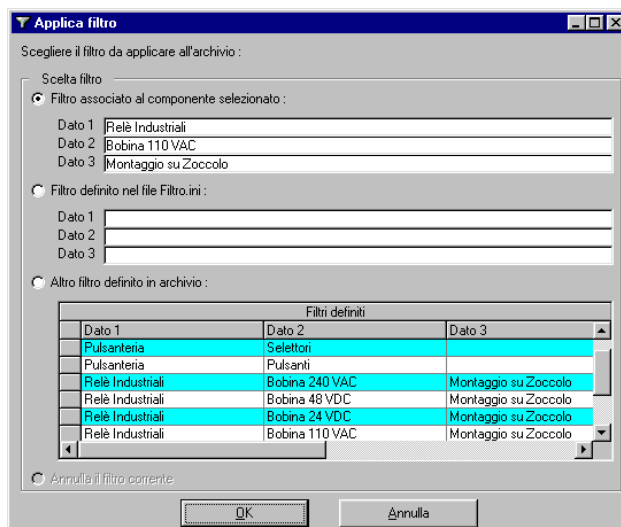

Filter linked to selected component:

the filter linked to the selected component is displayed.

Filter defined in the Filtro.ini file:

(see Sect. 8.8).

Other filter defined in database:


Select a filter configured with "Define a filter".

The Materials Database is filtered when "OK" is clicked and only the components that satisfy the filter parameters will be displayed.

Just click on "Clear filter" to restore the display to the complete database.

Find codes

This function is useful for quickly finding a code within the current file. The search is conducted within an individual manufacturer when specified, otherwise all manufacturers in the file are considered.

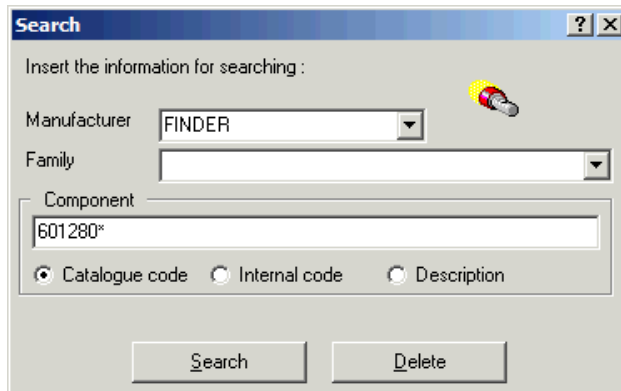

In the example, the code to be search for is "601280*" under the indicated manufacturer. The code number is incomplete and finishes with the "*" wildcard character. This causes the search to find all codes beginning with those six digits and followed by any sequence of characters allowed in the code.

You run through the file viewing the positions of all the found codes by clicking on "Find next".

Exiting the function without clicking Close leaves the search results in memory to be used later.



It is important to insert the character *, otherwise only one code will be searched for.

Hide information

This function is useful to delete manufacturers, family and codes that are not frequently used from display. This makes the file faster and easier to access.

The Hide command can be applied to any data by right clicking the selected data and choosing **Hide** from the popup menu.

The "Database information" command immediately reveals whether there are any hidden codes within a materials file. The hidden information can be viewed by using the command "Hidden component management".

Hidden component management

This function is useful for revealing manufacturers, family and codes that have been hidden from file access by using the "Hide information" command.

The "Database information" reveals the presence of hidden codes within the materials database.

Import file Terminals (DAT)

It allows to import the file (with extension DAT) supplied from specific constructors, or from the Morsetti.Dat file of a previous version of Spac.

Options

A materials database (file with the extension .AMW) can be set to load by default at program launch.

Database utilities

There are two utilities dedicated to database maintenance:

Compact database



Use this function with files that have undergone considerable changes and updates. Compression gives faster access to data by reorganizing the data

It is not possible to compress the current work file.

Compression allows you to reduce file size after the deletion of significant amounts of data.

Restore database




Recover allows you to load damaged files.

The potential for recovery depends on the type of errors found in the damaged file.

It is always necessary to check the content of a recovered file because some data have been lost during the recovery operation.

Edit macro


This command is for running macrocode programs (codes that represent the sum of multiple codes).

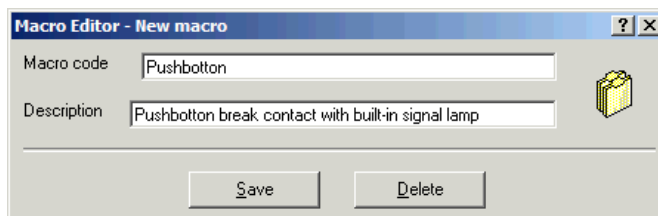

A name and description for the macro must be entered after clicking on **New**.

The macro is written to the .AMW file of the current materials database by clicking on **Save**.

Codes must be retrieved from the materials database to complete the macro. We suggest that you set the two windows up side by side to make the operation easier.

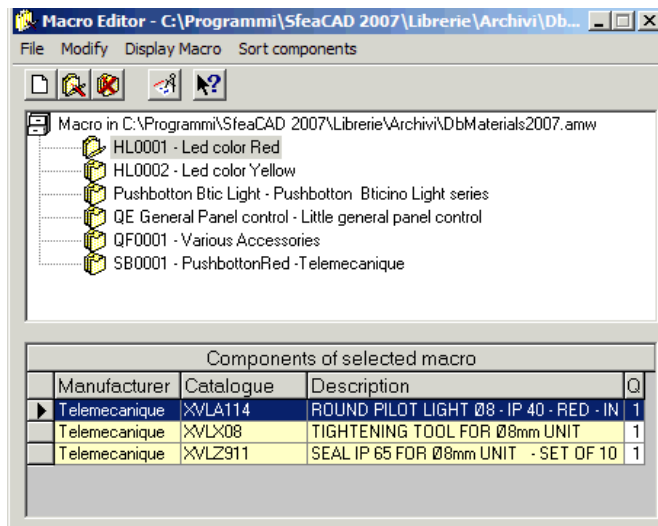

An item must first be selected from the materials database to **insert** its code. Then it must be **dragged** to the appropriate area of the "Selected macro components" until obtaining a result similar to the figure.

Only the quantity part of a macro code can be changed.


To delete the code just select it and then press "**Delete**" on the keyboard.



The creation of a macro can also be achieved by copying and pasting (Ctrl+C and Ctrl+V) between the Materials Database and the Macro Editor.

Edit Macro Connectors


This command manages the **“Connectors” macro-codes** (addition of several codes) and consents the creation of the **“Plug M+F”** type (*complete connector*) used on the **Connector**.

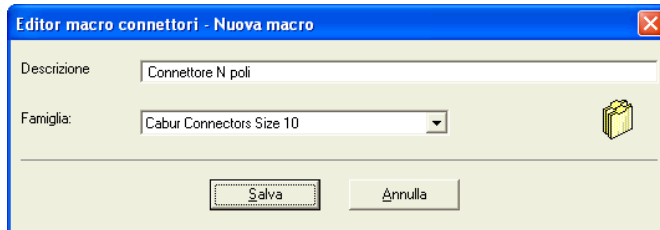

After pressing the **New Macro** option, it is required to provide the description and the codes family (all the families in the manufacturer’s archive are shown).

Pressing the **Save** button, the “Connector” macro is stored in the .amw file.

To create the macro, it is required to get the codes from the materials archive. It is suggested to place one window besides the other to make the operations easier.

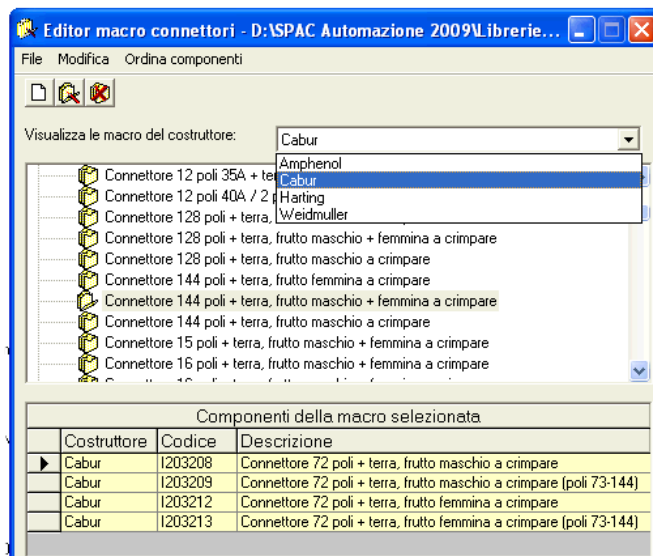


Before the **insertion** of an article code, it is necessary to select it from the materials archive, then it could be placed on the desired place with a **drag&drop** approach from the **“Components of the selected macro”**. The result you should obtain is illustrated in the figure.

To **cancel** a code it is enough to select it and press the **“Canc”** button on the keyboard.



See **“Connector”**.

The icons

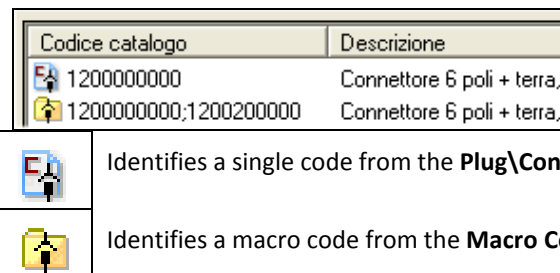

The icons differentiate the **“Plug M+F”** codes (macros) from **“Plug-M”** (*male*) and **“Plug-F”** (*female*) codes.



Identifies a single code from the **Plug\Connector type** (“Plug-M” and “Plug-F”).



Identifies a macro code from the **Macro Connector type** (“Plug-M+F”).




The **“connector”** macro is composed using the materials codes of the same manufacturer.

8.2 Materials feature



Pop-menu > *Util* > *List Utility*

The materials association is done using the DBCenter (see “8.6 DbCenter”). The materials are **dragged with the mouse** (Drag&Drop) **directly on the symbol** or on the window “Materials feature”.

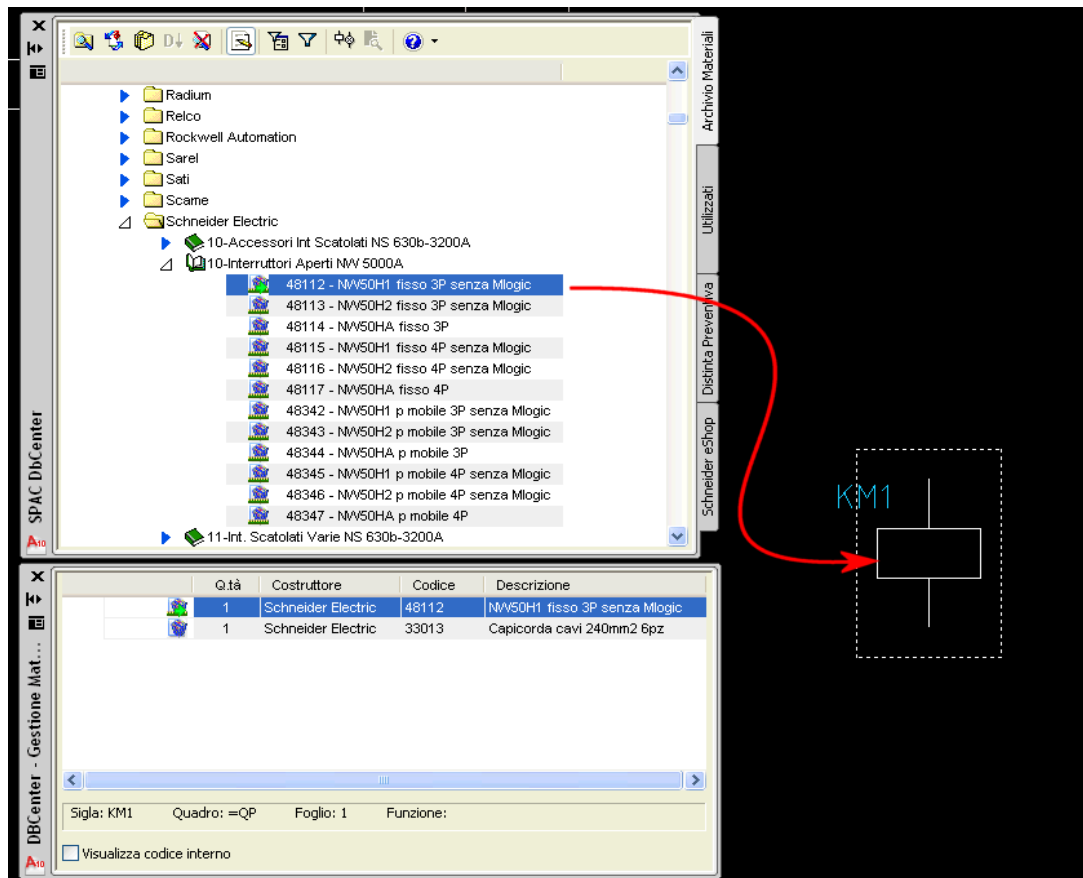

DBCenter Windows (on top) and the Materials feature (bottom).

The new materials code **is added** (without further requests) to those already present on the symbol creating the MacroCode “Local”.

The new material code **substitutes all those already present** on the symbol if the Shift key [$\uparrow$] is pressed on the keyboard (the Shift key must be pressed before start the Drag&Drop).

The codes used to associate the material to the symbol, are memorized on the tab “Usable” creating a list of those preferred (or those commonly used). This list could be easily changed and exported in case it will be reused (for example for a project that is similar to the one being drawn).

To see \ modify the material codes of a component on the drawing it is enough to select the graphical symbol and press “Esc” key from the keyboard to disable the selection.



See “8.1 Materials database”.




The “Materials Feature” window can be called even from commands “16.1 Symbol insertions” and “Symbol Configuration” (see par. 4.2).



WARNING:

Avoid the data introduction with the manual definition of the symbols’ attributes (Manufacturer, Type and Description).

The “Materials Feature” window allows several functionalities, all grouped on the menu that pops pressing the right button of the mouse.

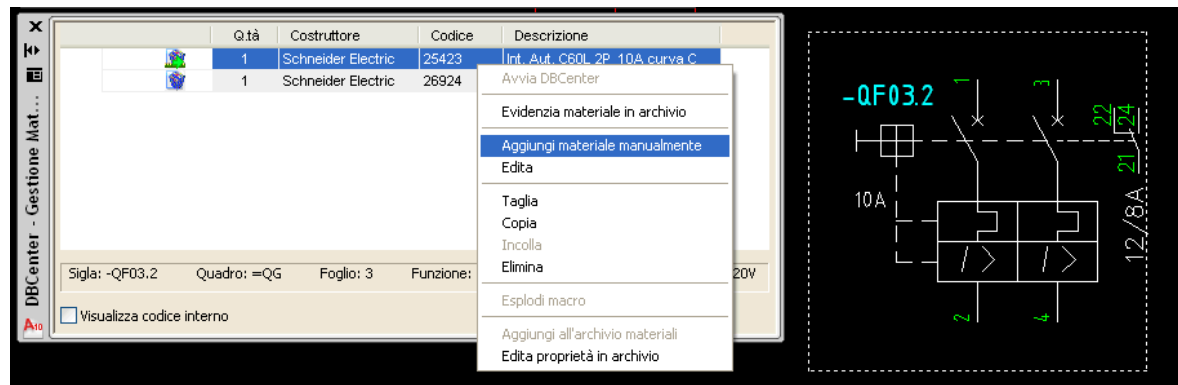

Materials Feature Window.

Start DbCenter

Consents to launch the DbCenter when the “Materials Feature” window is called from command “16.1 Symbol insertion” or from “Symbol Configuration” (see par. 4.2).


Without the DbCenter it is possible to add codes manually (with “Add materials manually”).

Highlight Material in Archive

Allows the identification of the position inside the current materials archive. The command is disabled when the code was inserted manually (with “Add materials manually”).

Add Materials Manually \ Edit

Consents the manual introduction of one or more material codes (that are not present on the archive) typing at least the fields **Manufacturer and Code**.

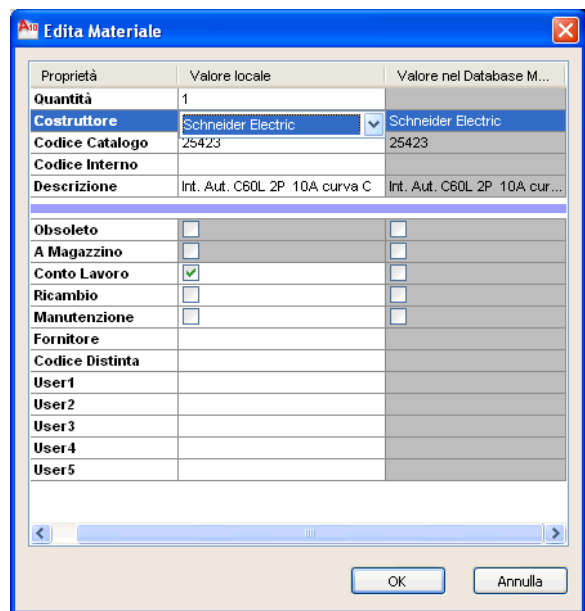

“Edit Material” window.

The codes inserted manually are highlighted with the following icon:

= The Code is not on Archive

To make the code occasionally available (typing it manually) for further associations, it is required to select it with the command “Add to Materials Archive”.

The information related to the “**Errore. L'origine riferimento non è stata trovata.**” could be modified from the archive or with the command “Edit Archive Property”.



See “8.6 DbCenter”.



The codes that are not present on the archive could be memorized on the current materials archive pressing “Add to Materials Archive”.

Materials Supply

The materials have a set of information related to this status: **Obsolete**, **On Warehouse**, **Spare part**, **Maintenance**, **Supplier**, ecc..

Obsoleto	☐		☐
A Magazzino	☐		☐
Conto Lavoro	☒		☐
Ricambio	☐		☐
Manutenzione	☐		☐
Fornitore			
Codice Distinta			
User1			
User2			



WARNING :

The Supply Codes are managed only by the **Internal Bill of Materials** (see Sect. 8.3), they are not managed by the External Materials Bill (see Sect. 8.4).

Estimated Bill of material codes

It is an modality of the “**Materials Feature**” that is enabled taking the codes from the tab “**Estimated Bill of Materials**” from the DbCenter (see “8.6 DbCenter”).

This feature recovers from a Bill of Materials (created before the drawing of the scheme to have an **estimated**), **all the material codes selected beforehand** and decrease the materials quantity from the estimated value at each association of the scheme, checking step by step, both the inaccuracies on the estimated and the current situation of the Job Order.

The command “**Import materials from file**” (mouse right button menu) requires to load the “estimation” from a file (DMW, XLS , MAT) and then associates the codes until the available quantity is over:

Q.tà	Costruttore	Codice	Descrizione
[3/3]	Schneider Electric	XB5A\VB3	LAMPADA SPIA VERDE LED 24V
[2/1]	Schneider Electric	XB5A\VB4	LAMPADA SPIA ROSSA LED 24V
[0/3]	Schneider Electric	XB5A\VB5	LAMPADA SPIA GIALLA LED 24V

[3/3]	Green: All the articles are associated (same quantity on drawing and estimated Bill of Materials).
[2/1]	Red: The quantity on the drawing is higher than the estimated Bill of Materials.
[0/3]	White: Codes remaining (to be associated).

Not Present on the Estimated Bill of Materials

The Materials codes on the drawing that do not belong to the “Estimated” file imported.



The command “**Update Materials Count**” (from the right button menu of the mouse) aligns the state of the drawings regarding the estimated Bill of Materials.

8.3 Internal Bill of Materials




Pop-menu > *Util*

This feature gets the list (Bill of Materials) of all the material codes associated to the components that are part of the Job Order.

All the components coded on the drawing are listed using the commands “8.6 DbCenter” and “8.2 Materials feature”. The bill of materials contains the terminals, connectors, the material for the cabling (wires and cables) and the structure of the panel (the non-codified components are listed with the manufacturer name and the material code fields empty).

The creation of a **new** bill of materials is done pressing “OK”; the processing involves all the elements on the selected Multi-Sheet and associated to the selected Panel.

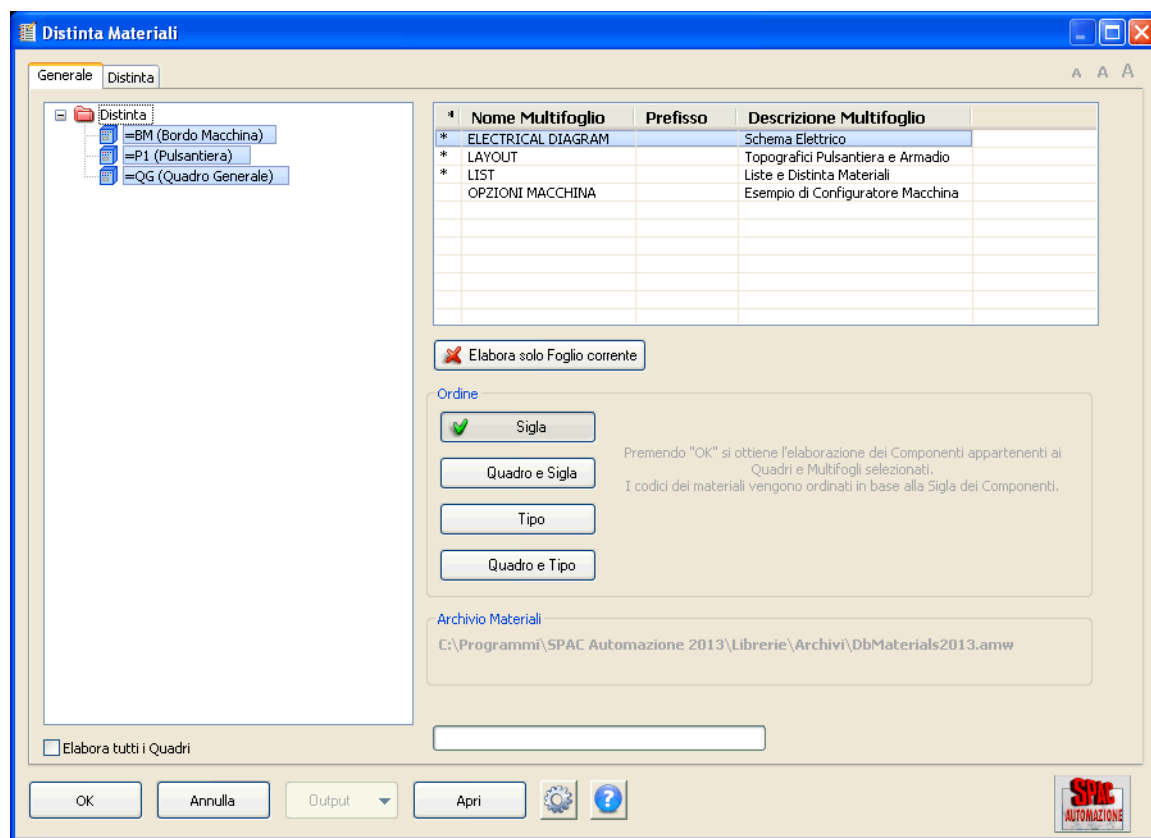

Pressing “Open” it is possible to load a Bill of Materials saved previously and saved on “**Errore. L'origine riferimento non è stata trovata.**”.

The result will be visible on “Bill of Materials” tab (automatically at the end of the processing), before pressing “Output” to transfer the results on the drawing; it is suggested to verify the data obtained. “Output” is enabled only after the schemes processing.

With “Process only current Sheet” the Bill of Materials could be blocked to the current sheet (single sheet).



The processing is done according the parameters set on “Bill of Materials Settings”.




The symbols with at least NOME and TIPO attributes are displayed (even if empty). The symbols with the Type attribute with an “I” or “IGNORE” are discarded (for compatibility with previous versions), as well as those on the list “14.7 Ignore symbols”.

Data on the bill can be sequenced according to **4** types of criteria, as needed:

- **Bill sorted by reference**
- **Bill sorted by panel and reference**
- **Bill sorted by type**, also available in “Compact View”
- **Errore. L'origine riferimento non è stata trovata.**, also available in “Compact View”

The list appears on-screen at the conclusion of the multisheet related tab. This window consents several functions, all grouped on the mouse right button menu.

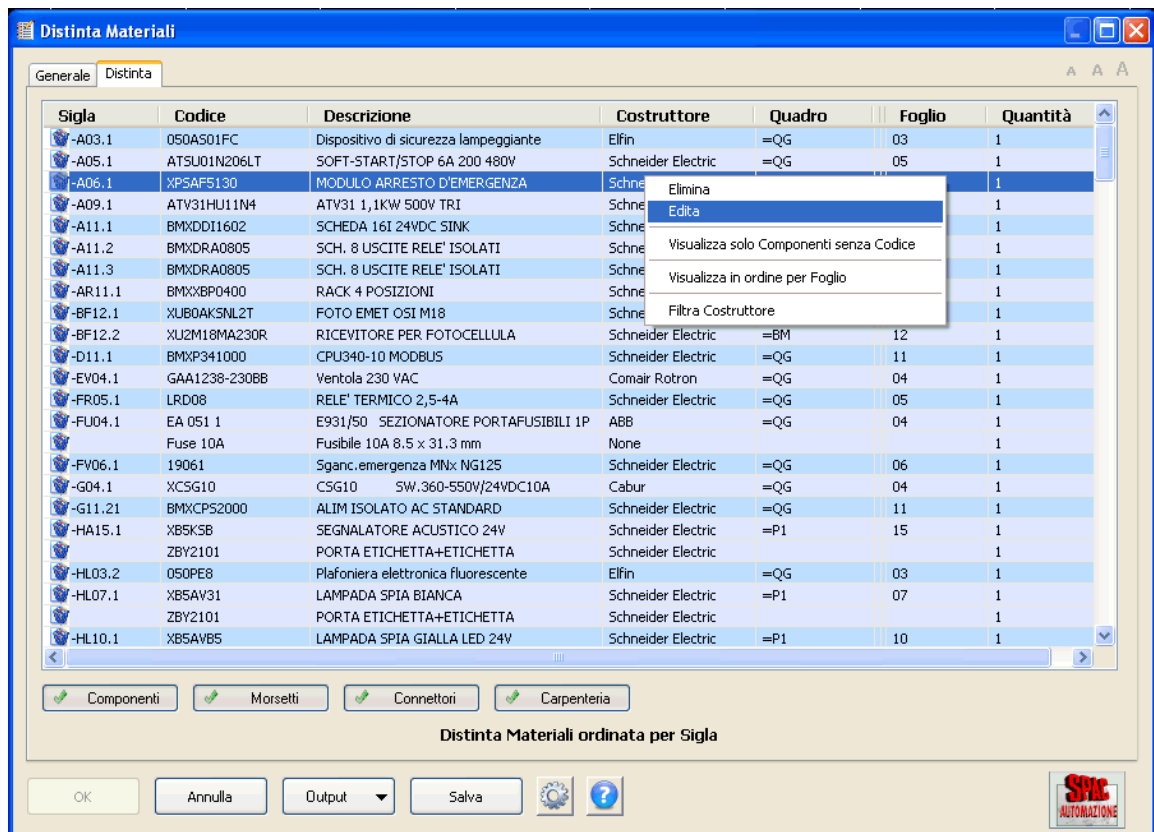

The list could be designed in a **Table** or saved on an **XLS** or **CSV** file (pressing “**Output**”).

Pressing the different buttons, it is possible to select the object type to be counted: **Components**, **Terminals**, **Connectors**, **Structure**, **Wires** and **Cables**. On the mouse right button menu, the fields enabled are Filters on the visible fields (*Manufacturer, Panel, Sheet, etc..*).

Edit

The command is enabled with command “**8.2 Materials feature**” and is used to modify the commercial data of a component of the list. The modified data is inserted on the drawing with **Update** function.



Edit has no effect on Terminals and Connectors. To substitute the commercial data of these two components families it is required to use the function “**Edit terminal block**” (see par. 6.3).


Delete

This removes components from the list. Data are not really deleted from the system even after later **Update** operations. Deleted data is restored with a new scan.

Bill sorted by reference

Components are sorted alphabetically by reference, pressing on the “ID” title column the sorting order is inverted.

We show an example of components divided into two different panels in the following figure:

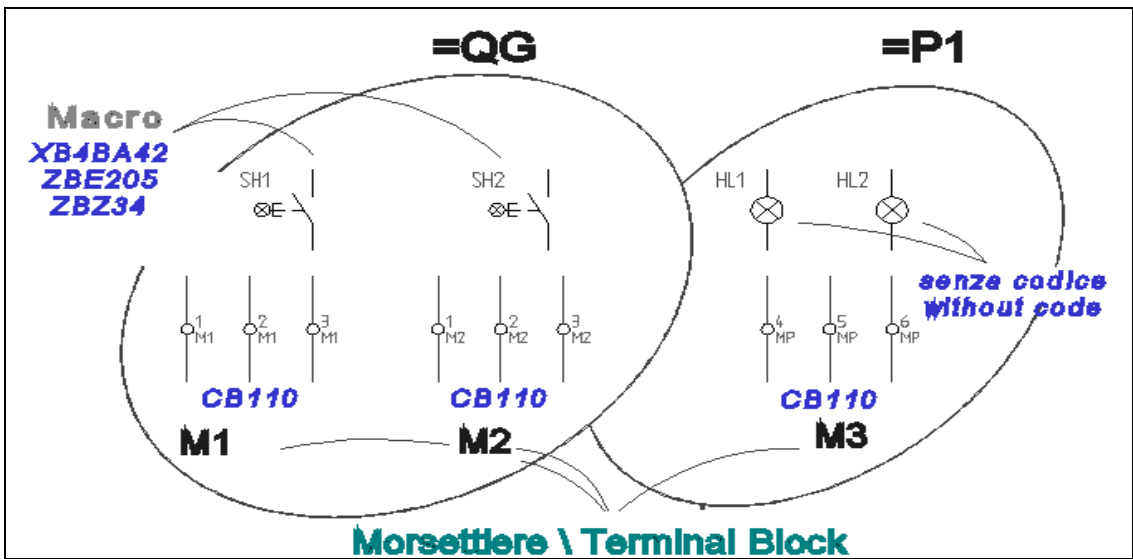

Sigla	Codice	Descrizione	Costruttore	Quadro	Foglio	Quantità
HL1		Segnalazione luminosa		=P1	1	1
HL2		Segnalazione luminosa		=P1	1	1
M1	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=QG		3
M2	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=QG		3
M3	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=P1		3
SH1	XB4BA42	PULSANTE ROSSO	Schneider Electric	=QG	1	1
	ZBE205	ELEMENTO DI CONTATTO DOPPIO	Schneider Electric			1
	ZBZ34	PORTA ETICHETTA	Schneider Electric			1
SH2	XB4BA42	PULSANTE ROSSO	Schneider Electric	=QG	1	1
	ZBE205	ELEMENTO DI CONTATTO DOPPIO	Schneider Electric			1
	ZBZ34	PORTA ETICHETTA	Schneider Electric			1

Sorting by Reference: 11 lines.

It is important to note that the **macrocodes (SH1 and SH2)** are listed in order and the **non-encoded elements (HL1 and HL2)** are posted at the top of the list with manufacturers and code fields empty (on the mouse right button menu you find the command “**View only Components without Code**” to filter them quickly). The **terminals** (in total 9) are divided by terminal block, therefore 3 groups of 3.



The columns configuration can be personalized from “**Bill of Materials Settings**”.

Bill sorted by panel and reference

The components are first grouped according to panel and then sorted alphabetically by reference.

Sigla	Codice	Descrizione	Costru...	Quadro	Foglio	Quantità
HL1		Segnalazione luminosa		=P1	1	1
HL2		Segnalazione luminosa		=P1	1	1
M3	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=P1		3
M1	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=QG		3
M2	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=QG		3
SH1	ZBE205	ELEMENTO DI CONTATTO DOPPIO	Schneider Electric	=QG	1	1
	ZBZ34	PORTA ETICHETTA	Schneider Electric			1
	XB4BA42	PULSANTE ROSSO	Schneider Electric			1
SH2	XB4BA42	PULSANTE ROSSO	Schneider Electric	=QG	1	1
	ZBE205	ELEMENTO DI CONTATTO DOPPIO	Schneider Electric			1
	ZBZ34	PORTA ETICHETTA	Schneider Electric			1

Sorting by Panel - Reference: 11 lines.

Bill sorted by type

Components are first grouped according to the catalogue code alphabetically. Pressing on the column "Code" se sorting order is inverted.

Codice	Sigla	Descrizione	Costruttore	Quadro	Foglio	Quantità
	HL1	Segnalazione luminosa		=P1	1	1
	HL2			=P1	1	1
	CB110	M1	Cabur	=QG		3
	M2			=QG		3
	M3			=P1		3
	XB4BA42	SH1	Schneider Electric	=QG	1	1
	SH2			=QG	1	1
	ZBE205	SH1	Schneider Electric	=QG	1	1
	SH2			=QG	1	1
	ZBZ34	SH1	Schneider Electric	=QG	1	1
	SH2			=QG	1	1

Sorting by Panel - Type: 11 lines.

It is important to note that **macrocodes (SH1 and SH2)** are not consecutive and that uncoded elements (**HL1 and HL2**) are listed with manufacturer and code fields empty.

The **terminals** (9 in total) are listed independently (not by group).

On the mouse right button mouse you find the command "**Compact View**" to modify the list viewing only the columns Code \ Manufacturer \ Quantity (fixed configuration).



The columns configuration could be customizable by "**Bill of Materials Settings**".



The command "**Edit**" is not present on the bill of materials sorted by Type \ Panel and Type.

Compact View

References, Sheets and Panels associated with codes are not visible in compact view; **all equal codes are therefore combined in the quantity.**

Codice	Costruttore	Quantità	
		2	
	CB110	Cabur	9
	XB4BA42	Schneider Electric	2
	ZBE205	Schneider Electric	2
	ZBZ34	Schneider Electric	2

Elimina

☒ Visualizzazione Compatta

Filtra Quantità

Compact Sorting by Type: 3 columns of data (5 lines).

The Compact View of the Bill of Materials by Type is the one with less details; it is used as a summary list for the purchasing department.

Bill sorted by panel and type

Components are grouped according to the panel they belong to and then they are sorted alphabetically by catalogue code.

Codice	Sigla	Descrizione	Costruttore	Quadro	Foglio	Quantità
	HL1	Segnalazione luminosa		=P1	1	1
	HL2			=P1	1	1
	CB110	CBD.2 MORSETTO PASSANTE ATEX CQ403	Cabur	=P1		3
	M1			=QG		3
	M2			=QG		3
	XB4BA42	PULSANTE ROSSO	Schneider Electric	=QG	1	1
	SH2			=QG	1	1
	ZBE205	ELEMENTO DI CONTATTO DOPPIO	Schneider Electric	=QG	1	1
	SH2			=QG	1	1
	ZBZ34	PORTA ETICHETTA	Schneider Electric	=QG	1	1
	SH2			=QG	1	1

Sorting by Panel - Type: 11 rows.



Commando “Edit” is not present on the Bill of Materials sorted by Type \ Panel and Type.

Compact View

Code Reference and sheet are not shown in compact view. It is possible, however **all the codes are counted on the quantity (located on the same panel).**

Codice	Costruttore	Quadro	Quantità
		=P1	2
	CB110	Cabur	3
		=QG	6
	XB4BA42	Schneider Electric	2
	ZBE205	Schneider Electric	2
	ZBZ34	Schneider Electric	2

Elimina
✓ Visualizzazione Compatta
Filtra Quantità

Sorting by Panel – Type in Compact view: 4 columns of data (6 rows).

The sorting of the Compact Bill of Materials by Panel - Type is often used as a list for the purchasing of each Panel.

Table

This option that allows you to display the bill of materials in table form. **Chart drawing parameters vary** according to the needs of the moment and the chosen sort key (Type, Reference, etc.).

Charts are drawn up with the data as output fields (parametric mode) by clicking on **Table** after having viewed the desired sequence on-screen (see sect. 14.8).

Current configuration is stored "locally" (see Sect. 4.2) for future use by clicking on **Default**. If you confirm without clicking Default, the configuration will be considered temporary and used only once. The function requires:

Select the table insertion point:

380						
Name	Type	Description	Manufacturer	Panel	Sheet	Qty
-BP1	SUBHMP3410	PHOTOELECTRIC SENSOR - OBJECT - SH 1.1M - NO OR MC - PWD CONNECTOR	Talormac s.p.a.	-B1	9	1
-C1		Capacitor		-B1	6	1
-FR2	LRD05M	THERMAL OVERLOAD RELAY FOR MOTOR - 7-8 A - CLASS 10A	Talormac s.p.a.	-B5	5	1
-F11	F21	24VDC AUXILIARY FUSE	BTicino	-B5	4	1
-G01	T08421-7M-911A	24V DC LO POWER PACK	Talormac s.p.a.	-B5	4	1
-H41	XY1120124	YELLOW PILOT LIGHT - XY2 - 24V	Talormac s.p.a.	-B5	11	1
-H1.1	XYB012	ACCESSORY XYB - SUPPORT TUBE L=10mm - ALUMINIUM BLACK	Talormac s.p.a.	-B5	3	1
	XYB017	BASE UNIT FOR BANK XYB - WITH FLASHY DISCHARGE TUBE - BLACK - IP 65	Talormac s.p.a.			1
	XYB0264	LENS UNIT - STEADY LIGHT - RED - 24V AC DC	Talormac s.p.a.			1
-H1.2	XYB012	ACCESSORY XYB - SUPPORT TUBE L=10mm - ALUMINIUM BLACK	Talormac s.p.a.	-B5	3	1
	XYB017	BASE UNIT FOR BANK XYB - WITH FLASHY DISCHARGE TUBE - BLACK - IP 65	Talormac s.p.a.			1
	XYB0264	LENS UNIT - STEADY LIGHT - RED - 24V AC DC	Talormac s.p.a.			1

Example of Internal Bill of Materials chart sorted by Reference.



In the list "Available fields" you can find data (Tag) Db Db.CodiceInterno, DbNote and DbPrezzo; differently to all other fields these 3 information are get from the materials database and not from the symbol content.

It's important to check which materials archive is set as default before processing.

Save (DMW File)

Pressing **Save DMW** you store the bill of materials (processed internally) in a file format that is the same generated with the "External" module.

The DMW file (Bill of Materials Windows) is also compatible with "15.3 Topographic".



See "8.4 External bill of materials"



In the previous versions, the passage of information between the Internal and the External Bill of Materials was through the DSS exchange files.

File

Create an file for retrieving Internal Bill of Materials data by clicking on **File. Standard** is the basic configuration of the output field (where possible).

The dialog box is titled ".CSV file parameters". It contains several sections: "Available fields" with a list of attributes and their descriptions; "Field Title" with a text box and a "Width" spinner; "Fields sorted by output" with a list of fields; "New Field" with "Field Title" and "Width" text boxes and "Add" and "Delete" buttons; "Modality of writing of the Fields" with radio buttons for "Delimited" and "Fixed width"; and "Character (Delimited)" with radio buttons for "Semicolon", "Tab", "Comma", "Space", and "Other". At the bottom are "OK", "Default", "Cancel", and "?" buttons. The "Standard" button is highlighted in the "Fields sorted by output" section.

Every item in the "Available Fields" list is an attribute of the terminal or connector.

Each attribute that is brought into the "Fields in output sequence" using **Add** is a column in the file.

To export information that is not shown in the "Available Fields" list, you must insert the attribute name as "New Field", and then insert it in "Fields in output sequence".



In the list "Available fields" you can find data (Tag) Db.CodiceInterno, DbNote and DbPrezzo; differently to all other fields these 3 information are get from the materials database and not from the symbol content.

It's important to check which materials archive is set as default before processing.

Default serves to store customized output for future use.

It is advisable to use **Microsoft Excel®** to transfer the attributes to other programs and/or file formats (warehouse management for example): upon opening, the file is presented in tabulated form as in the following figure:

File		Option				
Name	Type	Description	Manufacturer	Panel	Sheet	Q. ty
'-BF1	XU5M18NP340D	PHOTOELECTRIC SENSOR - OBJECT - SN 0.4M - NO OR NC - M12 CONNECTOR	Telemecanique	'=BM	9	1
'-M1		Three Phase Asynchronous Motor		'=BM	5	1
'-M2		Three Phase Asynchronous Motor		'=BM	5	1
'-M3		Three Phase Asynchronous Motor		'=BM	5	1
'-S6	XCMD2111M12	LIMIT SWITCH XCM-D - BOOTED END PLUNGER - 1 OC	Telemecanique	'=BM	9	1
'-S7	XCMD2111M12	LIMIT SWITCH XCM-D - BOOTED END PLUNGER - 1 OC	Telemecanique	'=BM	9	1
'-SQ1	XT1M12NA372	CAPACITIVE SENSOR XT1 - CYLINDRICAL M12 - SN 2mm - NO - CABLE 2M	Telemecanique	'=BM	9	1
'-SQ2	XT1L32FA262	CAPACITIVE SENSOR XT1 - CYLINDRICAL R 32mm - SN 15mm - NO - CABLE 2M	Telemecanique	'=BM	9	1
'-XBM	BTU	End bracket - Omega - thickness 8 mm	CABUR	'=BM		2
'-XBM	DAS. 4/6	Two way Feed-through terminal block 4 mm	CABUR	'=BM	9	7
'-XM1	WDU 4	4 mmq Feed-through terminal block	WEIDMULLER	'=BM	5	3
'-XM1	WPE 4	4 mmq Protective conductor terminal block	WEIDMULLER	'=BM	5	1

This setup makes it simple to change fields and format to best exchange information with other types of software.



Setting "File preview" the file is written to disk, then automatically shown in preview mode, even if Microsoft® Excel is not installed.

Overtemperature

This button is active only when a bill is run for an individual panel.

The overtemperature calculation program is automatically called (“9.1 Overtemperature”), all of the material in the list is transferred into the **Components** file with related dissipated power data (if existing).

Technical Manual

Clicking on this button initiates a search within the Librerie\Documenti directory for a **Doc** or **Pdf** file, depending on the code selected from the list.

If you select the code, FINDER "60123048", for example, the function searches for (if available) all related technical documentation in the 60123048.doc or 60123048.pdf file.

If there are other technical reports the function attempts to open documents 60123048_01.doc, 60123048_02.doc, 60123048_03.doc, etc. up to a maximum of 20 documents.

If no technical report exists (no file with the same name as the code) an advisory message appears.

Bill of Materials Settings



Sets the configuration of the “internal” Bill of Materials .



See “Internal Bill of Materials”

Options

Count Wires and Cables: The wires and cables data is considered on the Bill of Materials (the cables with a single side connected to the panel are counted enabling the option “Count External Panel Cables”). To have an updated count it is suggested to activate the option “Excecute always the MultiSheet Scan”, otherwise the function asks for the selection from time to time.

Symbols without Panel: The components or symbols that are not associated to a Panel are counted on the Bill of Materials.

Get Data form the Materials Archive: Allows the compilation of fields containing **(db)**; this data is fetched on the Materials Archive increasing the processing time.

If there are no (db) fields it is suggested to disable this option.

Table

The fields to be shown are configured; pressing “Ok” the combination is memorized in “local” on file Spac_cfg.ini to further use (see par. 2.5).

Two different configurations are memorized automatically:


One for the **Bill of Materials sorted by ID or Reference** (the first column on the left is the Name \ ID); the other one for the **Bill of Materials sorted by Type** (the first column on the left is the Code \ Type).

8.4 External bill of materials

There are two ways to create the bill of materials, using the "Internal" function (see Sect. 8.3) or using the program "External" module in the graphic environment.

The external module makes it possible to work on the bill order to make changes and updates freely. This system is decidedly slower than the internal function, but offers, among other advantages, greater flexibility, more data sorting options and higher information storage.

The following window appears on the screen upon opening the program.

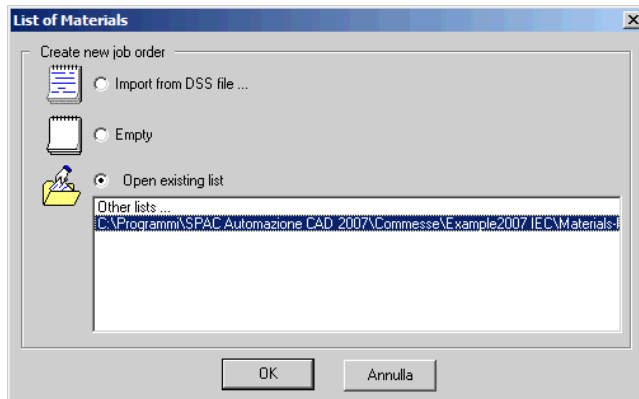

Import from DSS file: the new bill of materials starts with the importing of data that have been taken from a drawing.

DSS files are created using the command **"Extraction by external module"**.

Empty: starts with a blank sheet. This option is almost always used for processing bills "manually".

Open existing bill: a job is taken from an already existing bill by choosing among those available.

Each bill is a file with a DMW extension. The name is chosen automatically by the program in some cases:

Import DSS The name of the DMW file is the same as that which generated the DSS file.

Empty The name of the DMW file is "WithoutName.dmw".

To open or save a bill of materials:

New Bill This is like saying "Empty" in the opening phase: a new "WithoutName.dmw" bill file is created.

Open This allows you to load an already existing list.

Save It is disabled when you are in "WithoutName.dmw".

Save as It is possible to duplicate the current file (using a different name). It is important to give a name to a job begun as "WithoutName.dmw".

Import/Export Bill

This command includes import and export procedures for non DMW files. It is advisable to carry out import operations within an empty bill.

Import DSS file Imports data that have been extracted from the drawing using the command **"Extraction by external module"**, to start a new job.

Export DSS file This export operation serves to **update symbol content on the diagram** (alignment of data with corresponding symbols). Updating is effected with the command **"Importing by external module"**.

Export CSV file Generates a file in CSV format (also compatible with Microsoft Excel for Windows). It is used for drawing up a bill of materials "Table" with the command **"Import CSV"**.



As of recent version, you can store the content of "Internal Bill of Materials" directly in the DMW file format compatible with the external module "8.4 External bill of materials".

View rows

The opening of a Dmw list allows the operator to work on a spreadsheet:

Insert row

We suggest setting up the two program windows related to the File (*see Sect. 8.1*) and the List, it is much easier to select an item directly from the file and drag it directly to the list. The same operation is also possible for introducing macrocodes.

This operation creates as many lines as the codes being imported.

It is also possible to insert manually all of the information that you consider necessary.

Change row

To change (or check) the data located in the list lines, just right click (on the line that interests you) and activate the command "**View - Change**".

It is possible to change only one line at a time.

Delete row

It is necessary to select the entire record (by clicking on the button to the left of the columns the entire line is highlighted) and click "**Delete**" to remove a line.


It is possible to delete only one line at a time.

The data in the list can be sorted alphabetically in any of the columns based on 3 main viewing groups:

1) Detailed

2) Compact

3) Compact & Panel

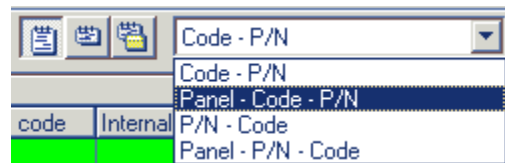

The data sequence can be chosen for every viewing group using the list (located to the left of the 3 buttons), only in this way can you activate the various combinations. The following figure shows the "detailed" List sorted by "Code - Reference":

	Code	Catalogue code	Description	Manufacturer	Panel	Sheet	Qty	Notes	Technical notes	Price	Dimensions
▶	FU1	F20	fusibili - tipo F 10.3x38mm 20A	BTicino	=QG	4	1.00		\$TAGLIA=20A\$	1.01	10.00.38.00.50.00\$y_fu1
▶	KA1	KU 915.1	S2-BM4 BOBINA DI MINIMA 110V	ABB	=QG	6	1.00		\$CODICE=11E\$	43.90	50.00.70.00.80.00\$y_k2
▶	KA2	100-C12D01	Contattore 12 A 1 contatto ausiliario NC, 110 V 50 Hz / 120 V	Rockwell Automati	=QG	6	1.00		\$CODICE=01P:22T\$	25.48	45.00.81.00.86.50\$y_k5
▶		100-FB22	Blocco di contatti ausiliari montaggio frontale 2 NA + 2 NC per	Rockwell Automati	=QG	6	1.00		\$CODICE=01P:22T\$	10.01	0.00.0.00.39.00\$
▶	KA3	601230240010	RELE' OCTAL DI P	FINDER	=QG	7	1.00		\$CODICE=4SC\$	0.00	50.00.50.00.50.00\$y_k1
▶		9022	ZOCOULO OCTAL MORSETTI	FINDER	=QG	7	1.00		\$CODICE=4SC\$	0.00	0.00.0.00.0.00\$
▶		9901902479	MODULO LED+DIODO+A2 6-24V DC	FINDER	=QG	7	1.00		\$CODICE=4SC\$	2.81	0.00.0.00.0.00\$
▶	KA4	866002403	MODULO TEMP. MULTITUTTO	Finder	=QG	10	1.00		\$CODICE=RD_2SC\$	0.00	0.00.0.00.0.00\$
▶		9072	ZOCOULO OCTAL VARITEC	Finder	=QG	10	1.00		\$CODICE=RD_2SC\$	0.00	0.00.0.00.0.00\$
▶	M1		Motore asincrono trifase		=BM	5	1.00			0.00	0.00.0.00.0.00\$
▶	M2		Motore asincrono trifase		=BM	5	1.00			0.00	0.00.0.00.0.00\$
▶	M3		Motore asincrono trifase		=BM	5	1.00			0.00	0.00.0.00.0.00\$

The Notes, Technical Notes, Prices and Dim. columns can also be viewed by moving the scroll bar to the right.

Some columns, such as Reference, Panel (or Zone) and Sheet columns, are not considered in "compact" view and the list is therefore notably reduced. Items with the same codes are summed in the same line.

	Catalogue code	Internal code	Description	Manufacturer	Qty/Notes
			Motore asincrono trifase		3.00
	KU 915 1		S2-BM4 BOBINA DI MINIMA 110V	ABB	1.00
	F20		fusibili - tipo F 10.3x38mm 20A	BTicino	1.00
	601230240010		RELE' OCTAL DI P	FINDER	1.00
	866002403		MODULO TEMP. MULTITUTTO	Finder	1.00
	9022		ZOCOLO OCTAL MORSETTI	FINDER	1.00
	9072		ZOCOLO OCTAL VARITEC	Finder	1.00
	9901902479		MODULO LED+DIODO+A2 6-24V DC	FINDER	1.00
	100-C12D01		Contattore 12 A 1 contatto ausiliario NC, 110 V	Rockwell Automation	1.00
	100-FB22		Blocco di contatti ausiliari montaggio frontale 2 f		1.00

Number of lines: 12 | Total amount: 83.21

Double click on a column heading to sort the data according to that column, for example on Manufacturer:

	Code	Catalogue code	Internal code	Description	Manufacturer	Ubicazione	Panel	Gr. Funzione	Sheet	Qty/Notes	Technical notes
	M1			Motore asincrono trifase			=BM		5	1.00	
	M2			Motore asincrono trifase			=BM		5	1.00	
	M3			Motore asincrono trifase			=BM		5	1.00	
	KA1	KU 915 1		S2-BM4 BOBINA DI MINIMA 110V	ABB		=QG		6	1.00	\$CODICE=11E\$
	FU1	F20		fusibili - tipo F 10.3x38mm 20A	BTicino		=QG		4	1.00	\$TAGLIA=20A\$
	KA3	601230240010		RELE' OCTAL DI P	FINDER		=QG		7	1.00	\$CODICE=4SC\$
	KA3	9901902479		MODULO LED+DIODO+A2 6-24V DC			=QG		7	1.00	\$CODICE=4SC\$
	KA3	9022		ZOCOLO OCTAL MORSETTI			=QG		7	1.00	\$CODICE=4SC\$
	KA4	866002403		MODULO TEMP. MULTITUTTO	Finder		=QG		10	1.00	\$CODICE=RD_25C\$
	KA4	9072		ZOCOLO OCTAL VARITEC			=QG		10	1.00	\$CODICE=RD_25C\$
	KA2	100-C12D01		Contattore 12 A 1 contatto ausiliario NC, 110 V 50 Hz / 120 V	Rockwell Automati		=QG		6	1.00	\$CODICE=01P.22T\$
	KA2	100-FB22		Blocco di contatti ausiliari montaggio frontale 2 NA + 2 NC per			=QG		6	1.00	\$CODICE=01P.22T\$

Number of lines: 12 | Total amount: 83.21

Free codes

The **green rectangle** (symbol of an open segment) located to the left of a component reference means that the catalogue code is free; this normally happens when an article is not taken from the file but rather inserted manually.

A "free" code can become "Tied to a file" only when it corresponds to an item contained in a current AMW file.


Codes tied to a materials database

The **yellow rectangle** (symbol of a closed segment) located to the left of a component reference means that the catalogue code is tied to the materials database, if the "**Update from File**" operation is performed, the various codes in the list are automatically changed according to the new file.

A "Tied to File" code can become "Free" when you wish to manually make changes (on the description for example).

Update from a file

This operation allows you to update all codes (tied to the database) based on the new AMW file. This operation is often used to update already existing prices on the basis of a new listing.

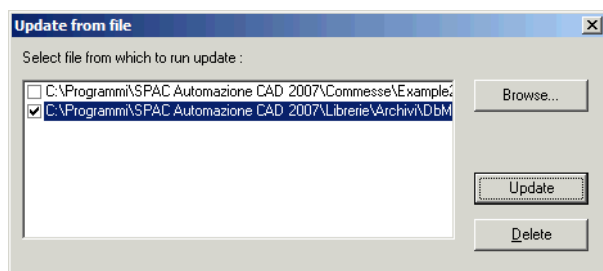

The update status can be accessed in the details for each code in the list.

A code must be made "Free" to exclude it from the update operation.

Print

Printing of an External Bill of Materials can be configured by the user based on specific needs; every layout is a customized printing format.

There are 3 default print layouts ready for use, these correspond to the 3 main view types: "Detailed," "Compact" and "Compact + Panel."

- Preview** This allows screen viewing of the sheets that must be printed, this function is useful for checking the arrangement of data based on the layout chosen.
- Change** You activate the **sheet layout customization program** by clicking on "Change" (optional for programming use); in this phase it is advisable to access the available online help.
- New** This allows the creation of a new print layout, in this case you also activate the **sheet layout customization program** (optional for programming use). The instructions for every function are located only in the available online help.
- Delete** This is to remove the printing template.

Maurizio Fornaro

26/09/2007

List of Materials: Materials-List

Code	Manufacturer	Catalogue code	Internal code	Description	Panel	Sh.	Qty
-M1				Three Phase Asynchronous Motor	=BM	5	1
-M2				Three Phase Asynchronous Motor	=BM	5	1
-M3				Three Phase Asynchronous Motor	=BM	5	1
-FU 1	BTicino	F20		24VDC AUXILIARY FUSE	=QG	4	1
XBM	CABUR	DAS.4/6		Two way Feed-through terminal block 4 mm	=BM		7
XBM	CABUR	BTU		End bracket - Omega - thickness 8 mm	=BM		2
CN1	ITT CANNON	14-19P		Connector Nineteen way (plug & socket)	=P1		1
CN1	ITT CANNON	14-19S		Connector Nineteen way (plug & socket)	=P1		1
CN2	ITT CANNON	10-6P		Connector Six way (plug & socket)	=P1		1
CN2	ITT CANNON	10-6S		Connector Six way (plug & socket)	=P1		1
CN3	ITT CANNON	10-6P		Connector Six way (plug & socket)	=P1		1
CN3	ITT CANNON	10-6S		Connector Six way (plug & socket)	=P1		1
-SA3	Merlin Gerin	28902		SWITCH-DISCONNECTOR - INTERPACT INS63 - 3P	=P1	6	1
-QF1	Merlin Gerin	18350		MINIATURE CIRCUIT BREAKER MULTI 9 - C120N - 3	=QG	3	1
-QF11	Merlin Gerin	25375		MINIATURE CIRCUIT BREAKER MULTI 9 - C60L - 3 f	=QG	5	1
-QF12	Merlin Gerin	25375		MINIATURE CIRCUIT BREAKER MULTI 9 - C60L - 3 f	=QG	5	1
-QF2	Merlin Gerin	20545		MINIATURE CIRCUIT BREAKER MULTI 9 - C32H-DC	=QG	3	1
-QF3	Merlin Gerin	20545		MINIATURE CIRCUIT BREAKER MULTI 9 - C32H-DC	=QG	3	1
-QF4	Merlin Gerin	18741		MINIATURE CIRCUIT BREAKER MULTI 9 - NG125L	=QG	3	1
-QF5	Merlin Gerin	20548		MINIATURE CIRCUIT BREAKER MULTI 9 - C32H-DC	=QG	4	1
-QF6	Merlin Gerin	18766		MINIATURE CIRCUIT BREAKER MULTI 9 - NG125L	=QG	4	1
-QF7	Merlin Gerin	18766		MINIATURE CIRCUIT BREAKER MULTI 9 - NG125L	=QG	4	1
-QF8	Merlin Gerin	20545		MINIATURE CIRCUIT BREAKER MULTI 9 - C32H-DC	=QG	4	1
-QF9	Merlin Gerin	20548		MINIATURE CIRCUIT BREAKER MULTI 9 - C32H-DC	=QG	4	1
-XS1	Merlin Gerin	83987		ENCLOSURE ACCESSORY - PK THREAD NIPPLES	=QG	3	1
-XS1	Merlin Gerin	83351		MULTI-CONDUCTOR CABLE	=QG	3	1
-XS2	Merlin Gerin	83986		ENCLOSURE ACCESSORY - PK THREAD NIPPLES	=QG	3	1
-XS2	Merlin Gerin	83352		MULTI-CONDUCTOR CABLE	=QG	3	1
-HL10	Moeller	087831		ILLUMINATED PUSH BUTTONS, GREEN LENS, STA	=P1	10	1
-HL11	Moeller	087831		ILLUMINATED PUSH BUTTONS, GREEN LENS, STA	=P1	10	1
-HL4	Moeller	088123		ILLUMINATED PUSH BUTTONS, WHITE LENS, STA	=P1	6	1
-HL9	Moeller	087831		ILLUMINATED PUSH BUTTONS, GREEN LENS, STA	=P1	10	1
-SB1	Moeller	001475		FAK COMPLETE UNIT EMERGENCY-STOP, STAY-PU	=P1	6	1

Example of a Printed Bill of materials in Compact View.

Table

To draw a processed bill of materials using the external module, you must first retrieve the data and then transfer them to the drawing using the command "**Import CSV**".

With the **Import/Export** command you must choose "**Export to Excel (CSV file)**": then continue with "Continue >>" to proceed with the next on-screen instruction.

This operation creates a CSV file (also compatible with Microsoft Excel). When the export is finished you must enter the drawing and go to an available sheet. You draw charts with fields that return the processed data by using the "Return from External Module" command.

Every item from the "Available Fields" list represents a chart column that can be moved to "Output Fields" by clicking on **Add**.

Based on the type of sort chosen (by Type, Reference, etc.) the chart design parameters vary depending on the requirements.

The current setup is stored for future use by clicking on **Default**. If you confirm without clicking on Default, the setup will be considered temporary.

The result is graphically like in the following figure:

NAME	MANUFACTURER	TYPE	DESCRIPTION	PANEL	SHEET	Q.TY
'-M1			Three phase asynchronous motor	'=BM	5	1
'-M2			Three phase asynchronous motor	'=BM	5	1
'-M3			Three phase asynchronous motor	'=BM	5	1
XBM	CABUR	BTU	End bracket - Omega - thickness 8 mm	'=BM		1
XBM			End bracket - Omega - thickness 8 mm	'=BM		1
XBM	CABUR	DAS.4/6	Two way Feed-through terminal block 4 mm	'=BM	9	1
XBM			Two way Feed-through terminal block 4 mm	'=BM	9	1
XBM			Two way Feed-through terminal block 4 mm	'=BM	9	1
XBM			Two way Feed-through terminal block 4 mm	'=BM	9	1
XBM			Two way Feed-through terminal block 4 mm	'=BM	9	1
XBM			Two way Feed-through terminal block 4 mm	'=BM		1
XBM			Two way Feed-through terminal block 4 mm	'=BM		1
'-S6	Telemecanique	XCMDZ11M12	LIMIT SWITCH XCM-D - BOOTED END PLUNGER - 10C	'=BM	9	1
'-S7			LIMIT SWITCH XCM-D - BOOTED END PLUNGER - 10C	'=BM	9	1

Example of an Imported External Bill of Materials.



These additional fields are also considered - Internal Code, Dim. and Price - when processing a chart compared to the Internal Bill of Materials (see Sect. 8.3).



WARNING: The CSV file is created on the basis of the displayed view defined for the monitor.

Import CSV file

This command imports a Bills of Materials produced with the external module into multisheets, generating a "**Table**" drawing graphically (see Sect. 8.4).

The function requests the choice of a CSV file to import. This file is created with the "**8.4 External bill of materials**", by the **Import/Export** function, by selecting **Export in Excel (CSV file)**".



This function can import and configure a table related to any CSV file.

DSS File



Pop-menu > Util > List Utility

Extraction by external module

This operation allows you to export the necessary information from job order drawings in order to create a Bill of Materials using an external program in the graphic environment (see “*Import/Export*” Sect. 8.4).

Location	Panel	Description
=BM		On Board
=P1		Control and signalling Panel
=QG		Main Panel

All of the multisheets selected from the list are processed.

A scan locates all of the Components, Terminals and Connectors depending on your choice of setup; but only for panels of interest.



Summary: (see Sect. 3.1).

The scan finishes with a view of the list of all filtered data. Data are extracted in the form of .DSS files by clicking on the **Export** button.

A file has the same name as the job order by default, but it is also possible to give a different name to distinguish various exports. We suggest saving DSS files in the corresponding job order directory.



WARNING: In the DSS file generated by this command the “*Errore. L'origine riferimento non è stata trovata.*” (see sect. 8.2 **are not exported**, as they are not managed by the External Bill of Materials.



As of recent version, you can store the content of “Internal Bill of Materials” directly in the DMW filw format compatible with the external module “8.4 External bill of materials”.

Importing by external module

This operation serves to **update symbol content on the diagram**, aligning data with corresponding symbols with those of the external Bill of Materials (see “*Import/Export*” Sect. 8.4).

The function requests that a .DSS file be selected for import, the information is transferred to all symbols that are in both the Bill of Materials and the current drawing. The attributes of the corresponding symbols are updated without further confirmation.



This function effects the alignment of the contents in the “Internal Bill of Materials” with those processed by the external module, “8.4 External bill of materials”.

8.5 Annotation Materials

Pop-menu > *Util* > *List Utility*


This command is used to write on the drawings the information related to the material associated to a component. A single component should be selected at a time, and terminals, connectors, wires and cables cannot be selected.



Quadro: =QG Sigla: SH2			
Q.tà	Costruttore	Tipo	Descrizione
1	Schneider Electric	XB4BA42	PULSANTE ROSSO
1	Schneider Electric	ZBE205	ELEMENTO DI CONTATTO DOPPIO
1	Schneider Electric	ZBZ34	PORTA ETICHETTA


Example for “Materials Annotations”

The command “**Configure Materials Annotations**” allows the graphical configuration of the desired parameters (colors and information) creating new combinations :

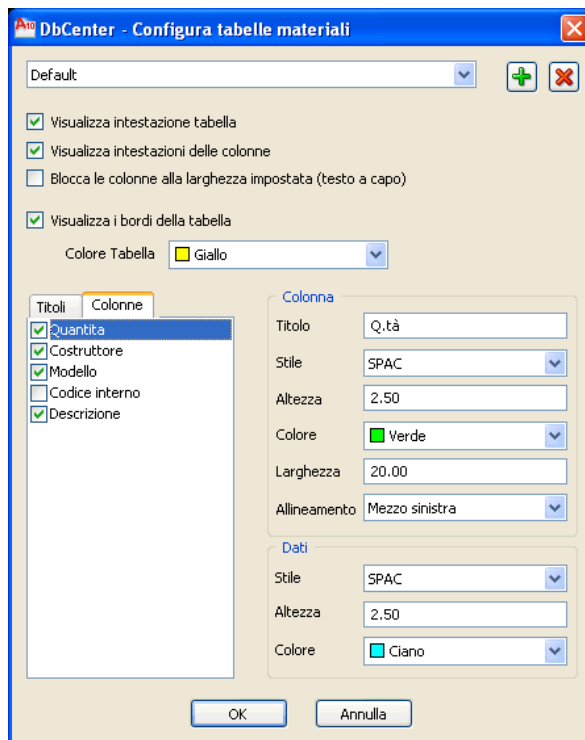

= Add a New configuration

Different types of configurations can be created, for example without titles (headings) of the different fields to occupy less space on the drawings, or to have a table without borders.

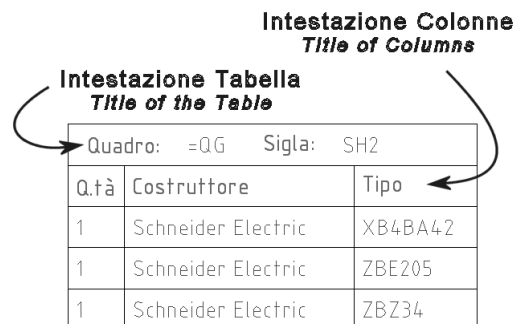

Intestazione Tabella
Title of the Table

Intestazione Colonne
Title of Columns

Quadro: =QG Sigla: SH2		
Q.tà	Costruttore	Tipo
1	Schneider Electric	XB4BA42
1	Schneider Electric	ZBE205
1	Schneider Electric	ZBZ34



= Delete the configuration

The new configurations will be saved on the file **Tables_Configurations.mdb** that can be found in the CFG folder of each Job Order.

With the command “**Update Materials Annotation**” you can modify the annotations that are already present on the drawing, converting them in a new configuration from those available.



If the reference component symbol is deleted, the annotation related is automatically deleted.

8.6 DbCenter




Pop-menu > Util > List Utility

DbCenter is a new way to **interface drawing and material database**, allowing **material codes associations**, it is used command “**8.2 Materials feature**”.

When DbCenter is active you can see a toolbox window on your left; its behaviour is similar to the AutoCAD Properties window.

This window lets you interact simply and quickly with the materials database (see “**8.1 Materials database**”) searching for codes or macrocodes that can be “**Dragged&Dropped**” in the drawing area.

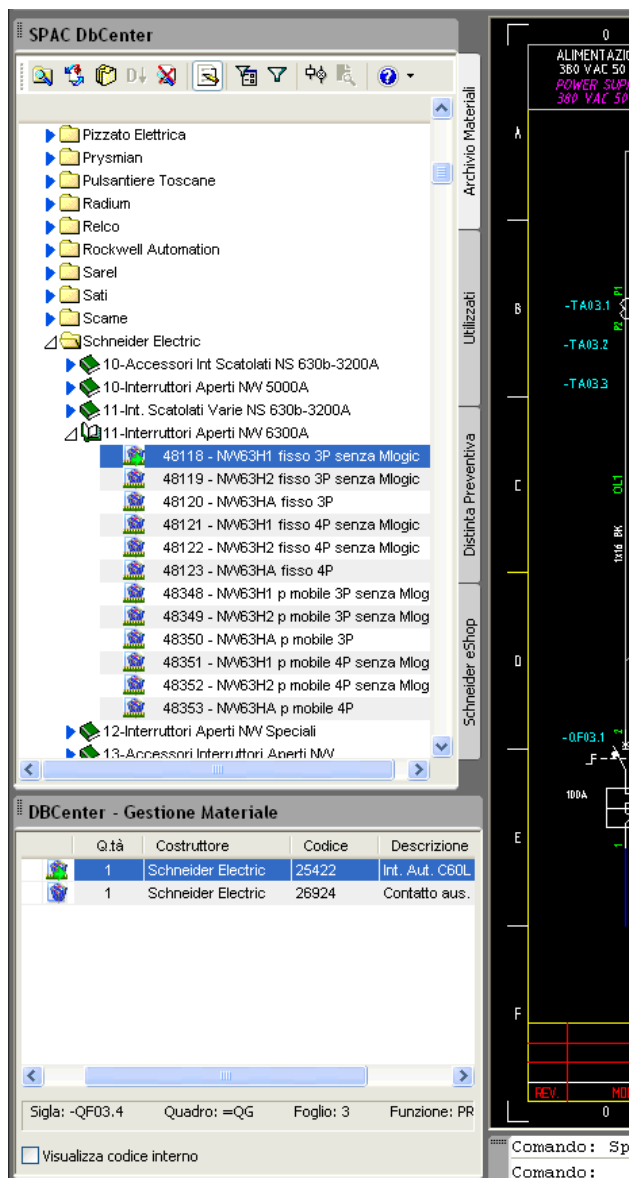

The procedure is very simple, after the selection of the material code to associate to one or more objects of the drawing, **it's sufficient to drag it with the mouse pointer** (Drag&Drop) and release the mouse button over the drawing object to be associated.

The new code is **always added** (without further confirmations) to the one(s) already existing.

The new code **replaces** (without further confirmations) the existing one(s) (if any) in case the Drag&Drop operation is done while pressing the Shift [↑] key.

NOTE : the Shift button has to be pressed before beginning the drag&drop operation, and kept pressed during the entire procedure.

If the mouse button is released over an **invalid object** (or over an empty region, by mistake or by choice) you are asked to select one or more objects on the drawing to associate the material code to.

Alternatively to Drag&Drop, you can double click the material code (in the DbCenter tool window) and then select one or more objects on the drawing.

DbCenter example

The DbCenter has 4 Tabs to select the materials codes:

- **Tab – Materials Database**
- **Tab – Used**
- **Tab - Estimated Bill of material**
- **Tab – eShop**


Tab – Materials Database



Pressing the button “**Database Position**” you can set the Materials Archive to be used (file amw).

This is used as 'navigator' through the typical archive groups **Manufacturer** and **Family**.

For each material are displayed code and description. Materials are usually sorted by code, but can be sorted by description pressing the button “Sort by description” you can find in DbCenter toolbar.

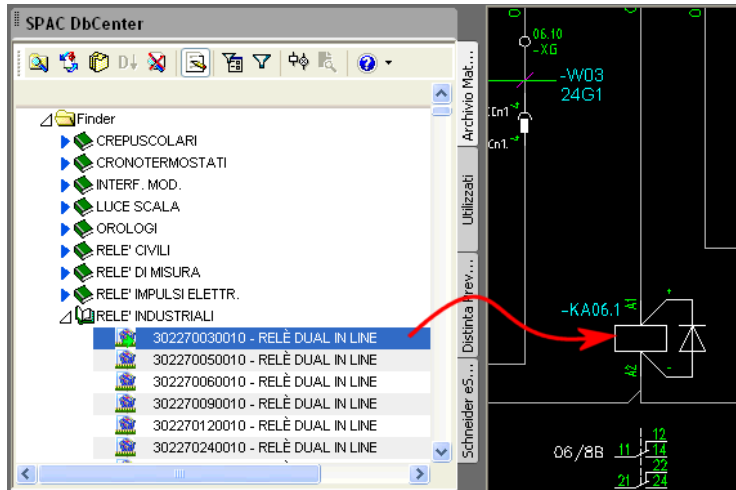


Codes TreeView



(See “*DbCenter Toolbar*”)

You can activate the “**Find**” function by right clicking the mouse (from any tree position) .

Right-click the material code to view **details** of the selected code.

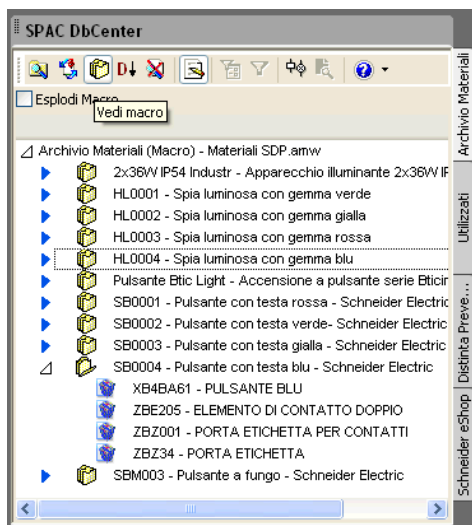

Macrocodes TreeView



Back to “*8.6 DbCenter*”.

Alternatively to materials this window can show macrocodes stored in the database (group of materials) by pressing button “**Show macro**” in the DbCenter toolbar.


In this case you can navigate through the defined macro list where you can see the code and the description. For each macro are displayed manufacturer, code and description of materials of which it is composed.

Like codes TreeView, right-clicking the code you can display the Macro Code **details**.

Toggle again “**Show macro**” you go back to Codes TreeView.

Tab – Used

This list increases automatically the codes used from time to time when a material is associate to the symbols. The tab “**Used**” creates a list of favorites (or most often used).

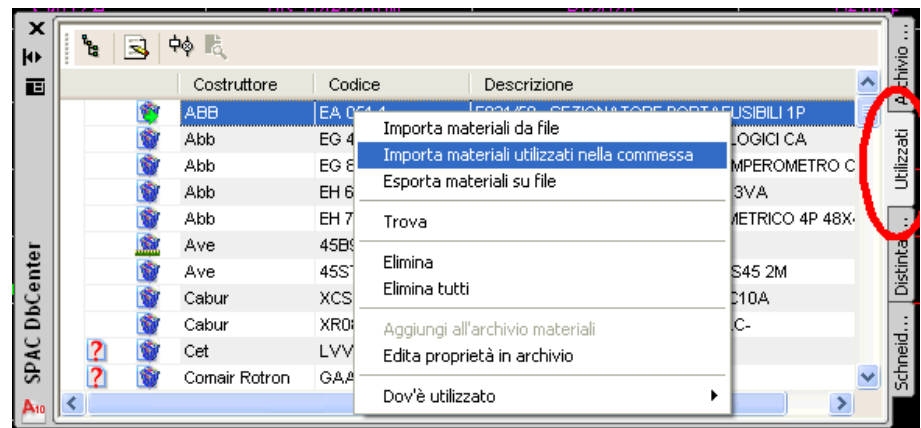


· Macrocodes TreeView

This list could be easily modified and exported in case it will be reused (for example for a similar project).

In previous versions of Spac (until release 2012), the used codes list is saved on file **Last-Materials.Mat**. It is possible to import these files using the “Import used materials” command on the mouse right button menu.

Tab - Estimated Bill of material

The codes of all the existing materials is used by means of the command “Import Materials from a File” (with the right button of the mouse). It is required to load the “Estimated Bill of Materials” form a file (DMW, XLS , MAT) and then associate the codes until the quantity available is over:

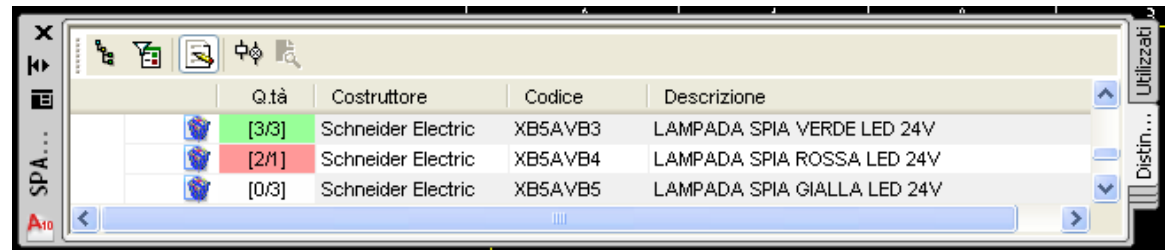

[3/3]	Green : All the articles are associated (without a quantity between the drawing eand the estimated bill of materials).
[2/1]	Red : The quantity of elements on the drawing is higher than the estimated bill of materials.
[0/3]	White : Remanining Codes (not associated yet).


Not Present on the Estimated Bill of Materials

The material codes that were not present on the estimated bill of materials imported.



The command “**Update Materials Count**” (form the right button of the mouse) allows to align the drawing state regarding the estimated bill of materials.

Tab – eShop

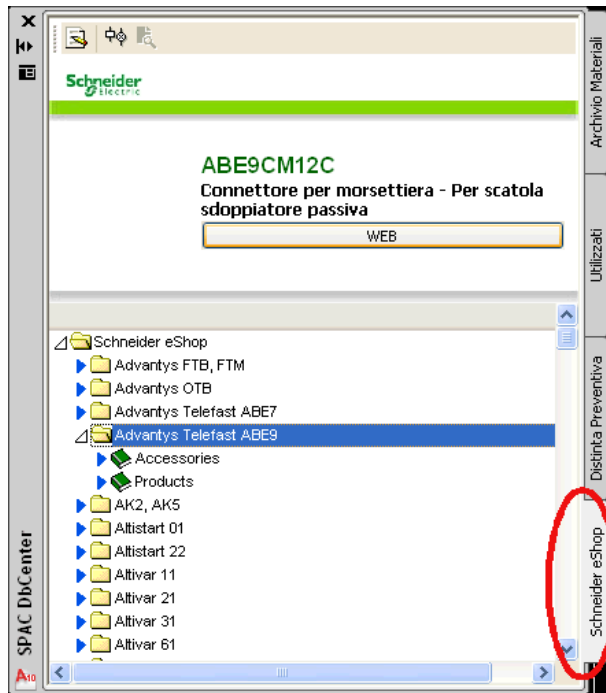

This Tab opens the **Schneider Electric products catalogue** called “eShop”.

For a proper operation, it is required to have an Internet connection.

Schneider Electric Catalogue


Associated materials list



Enabled pressing the button “**See Materials**” and associated to the window “Materials Feature” (See par. “*8.2 Materials feature*”).

To display the material codes associated to a component just select it: the corresponding object on the drawing will be highlighted by a color 6 dotted rectangle.

The “Materials Feature” window has several functions; all grouped on the mouse right button menu.

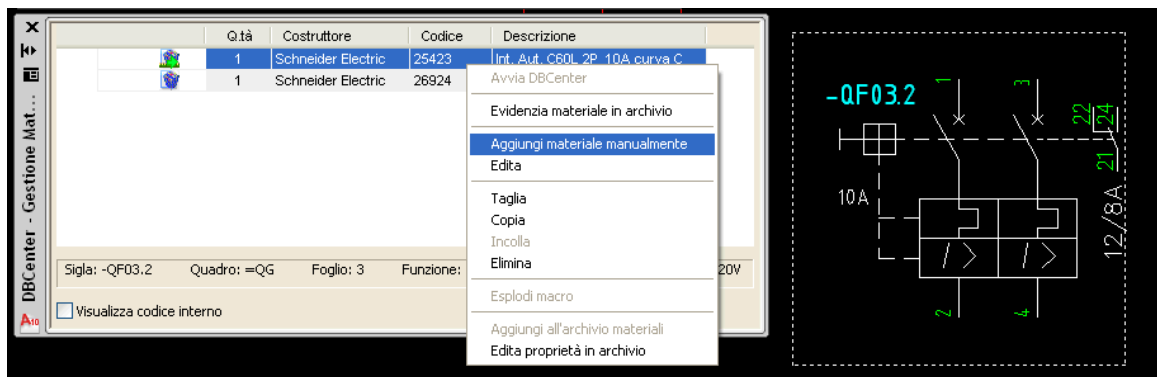


Materials Feature Window.



Back to “*8.6 DbCenter*”.

Drawing mode

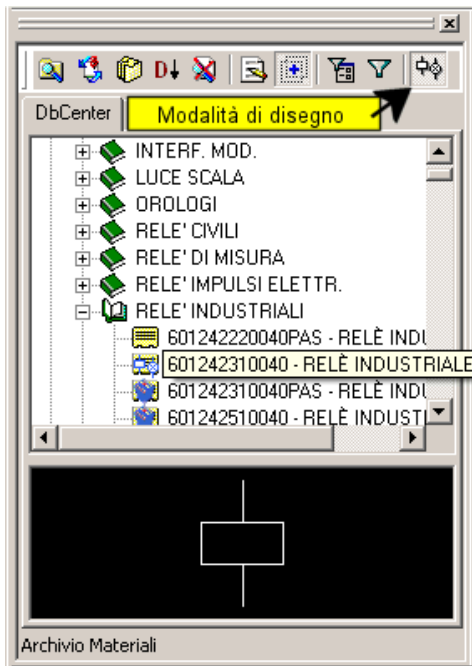

Pressing the “**Drawing Mode**” key, the symbol preview window appears.

Preview is only active for material codes, which have been configured for this mode.

The configuration is performed by the “Materials database” (See *parag. 8.1*), in data panel “**Electrical BLK**”.

This mode enables the user to draw the symbol directly on the wiring diagram, it is sufficient to drag the symbol with the mouse and drop it in the drawing area (Drag & Drop) and then proceed to select the insertion point.

Pressing the Shift [↑] key on the keyboard, only the material code is dragged, exactly the same as what happens when the “Drawing mode” button is turned off (especially useful for code not associated to any symbol).

In the symbol preview window it is possible to perform the zoom command (indicating 2 points without releasing the left key of the mouse) or the Pan command (indicating 2 points without releasing the right key of the mouse).

Icons



Identifies a code not associated to a symbol.



Identifies a code associated to dimensions (in the data panel “**Layout**”).



Identifies a code associated to a symbol (in the data panel “**Electrical BLK**”).

The codes highlighted with this icon **are valid for drawing mode**.



With “Drawing mode” off only the material code can be dragged.


With “Drawing mode” active, pressing Shift [↑] only the material code can be dragged.

With “Drawing mode” active a symbol paired to the material code can be dragged.




Return to “**8.6 DbCenter**”.

Filters

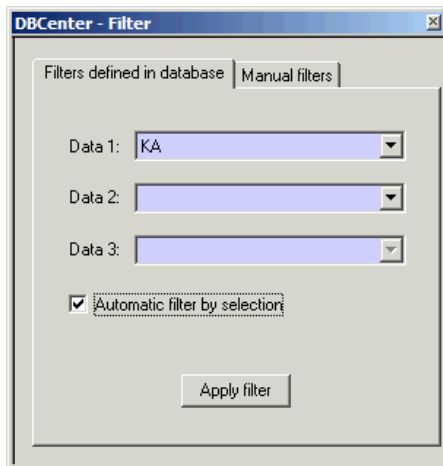

Database defined filters

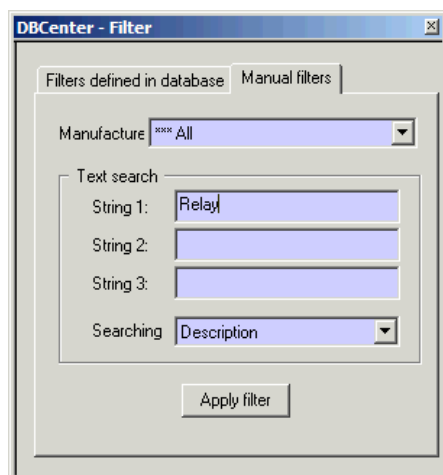

Manual filters

This is used to **search in the database** applying filters to stored data in order to list only the search result in the tool window.

The dialogue is activated pressing button "**Filter settings**" in the DbCenter toolbar and can float over the drawing area, or be hooked on the left or right side.

There are two filter types:

Filters defined in database: in this case you can use (if existing) filters defined in the database, e.g. Data1, Data2 or Data3 (see Sect. 8.1 "*Define a filter*").

Once set the filter press button "**Apply filter**" to start the search.

Manual filters: in this case the filter is composed of a maximum of three consecutive strings in the three text boxes; these are searched as substrings in the material codes, macros or descriptions.

Moreover this search can be filtered on a single manufacturer specified in the combo-box.

Once set the filter press button "**Apply filter**" to start the search.

Applying a filter causes a materials database rebuild:

The background color of **Tab – Materials** Database changes, to remind you that listed materials are less than the whole because of the applied filter.


Button "**Apply Filter**" in the DbCenter toolbar appears pressed, because the filter is active.

Toggling again "**Apply Filter**" you go back displaying the entire database, and the TreeView background color changes to the standard one. Filters are not destroyed, so it's sufficient to toggle "**Apply Filter**" to apply the last used filter.



Back to "**8.6 DbCenter**".

DbCenter Toolbar

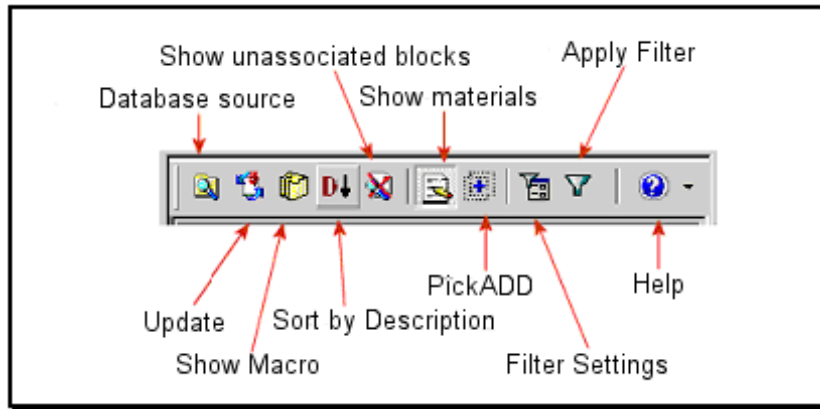

The **toolbar** contains all the buttons necessary to use and customize DbCenter.

Database location

Pressing the “Database position” button you can specify the Material Database to be used (file .amw).

Update

The Material Database is updated (can be useful when materials database is shared and has been modified in the meantime).

Show macro

Tool window changes to macrocodes TreeView.

Sort by description

Materials are usually sorted by part item code; pressing this button they are sorted by description.

Show unassociated blocks

Press this button to highlight drawing objects (blocks) with no material code associated. The command ends answering "Yes" to the command line question *“Go back to previous view? [No] <Yes>”*.

Show materials

Toggles the tool window “**Associated materials list**”.

Filter Settings

Toggles the tool window “**Filters**”.

Apply filters

Is automatically activated when listed materials database is filtered. Toggling button “Apply Filters” you go back listing the entire materials database.

Drawing mode

This mode allows the user to draw a symbol directly on the display.

Help

Run on-line help.



Back to “**8.6 DbCenter**”.

8.7 LibCenter




Pop-menu > *Spac*

LibCenter is a specific programme to quickly insert symbols. It can be used as an alternative to the “traditional” method where symbol insertion is carried out through the pop-up menu of the library chosen (See *parag. 17.3*).

In the LibCenter the symbols are divided up into groups and sub-groups, searching for a component is easy due to the tree-view structure of the programme and it is possible to browse down to selection of the symbol visible in the preview window.

When the LibCenter is functioning, the operator has available the drawing area and also a dialogue window that is always active in a similar manner to the properties window in AutoCAD.

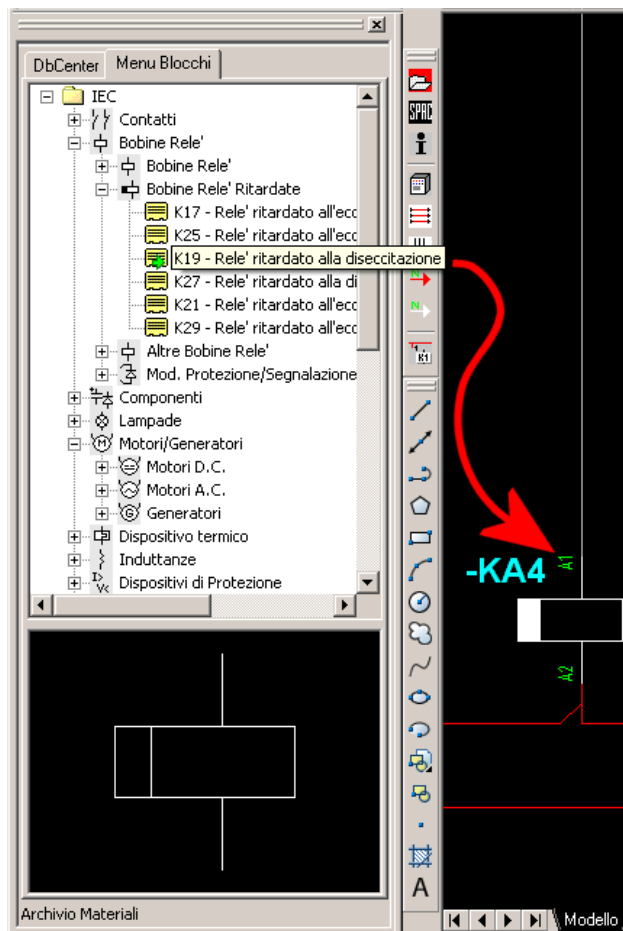

Its functioning mode is very simple, after having selected the symbol to be inserted on the display, **just drag the block with the mouse** (Drag & Drop) to the drawing area, when the (left) mouse button is released proceed to select the insertion point.

NOTE: Drag & Drop is performed by keeping pressed the left button on the mouse from the LibCenter window to the drawing area.

After selecting the insertion point on the diagram page, the functions available vary according to the type of symbol.

Example LibCenter



See “**16.1 Symbol insertion**”.

In the symbol preview window it is possible to perform the zoom command (indicating 2 points without releasing the left key of the mouse) or the Pan command (indicating 2 points without releasing the right key of the mouse).



The function mode of LibCenter is similar to “**Drawing mode**” of DbCenter.

8.8 Filter materials database



Pop-menu > *Util* > *List Utility*

This function is used to capture information (the prefix in particular) from a selected symbol for storing in the **Filter.ini** file (in the Program\Distinta directory).

This information is used by the Materials Database program to filter the display of items in the database so as to simplify searches.

If, for example, we select a switch symbol, the function shows the message:

***** Filter Generated QF**

The Materials Database accepts the command “**Associating filters**” (see Sect. 8.1). The various characteristics correspond to the items in the database.

8.9 Disassociate materials



Pop-menu > *Util* > *List Utility*

This command allows you to **remove the material codes associated with components**, there by canceling the effects of the “**8.2 Materials** feature” command.

This function acts on a **Current Sheet** or **multi-sheet**.


Associated material removal is carried out by removing all of the attribute content symbols in the Manufacturer and Type, while the original default value **is restored** into the Description attribute.

8.10 Bill comparison using CSV file




Pop-menu > Util > List Utility

This is used to highlight **differences between two Csv files** having the same column number. Useful to compare two different Bill of Materials, or know modifications done during the work progress.

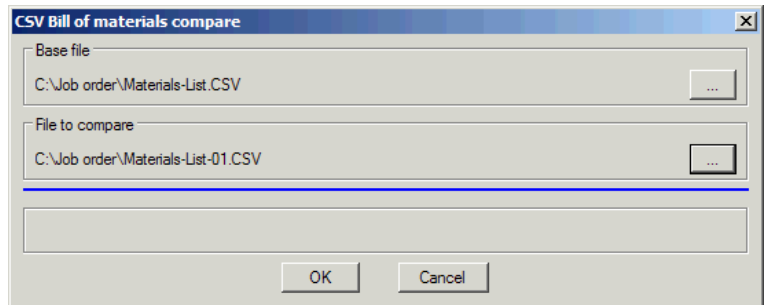

The two buttons “...” browse for base file and file to compare.

The following figure shows a comparison window, differences among files can be filtered in three groups: New, Modified and Erased.

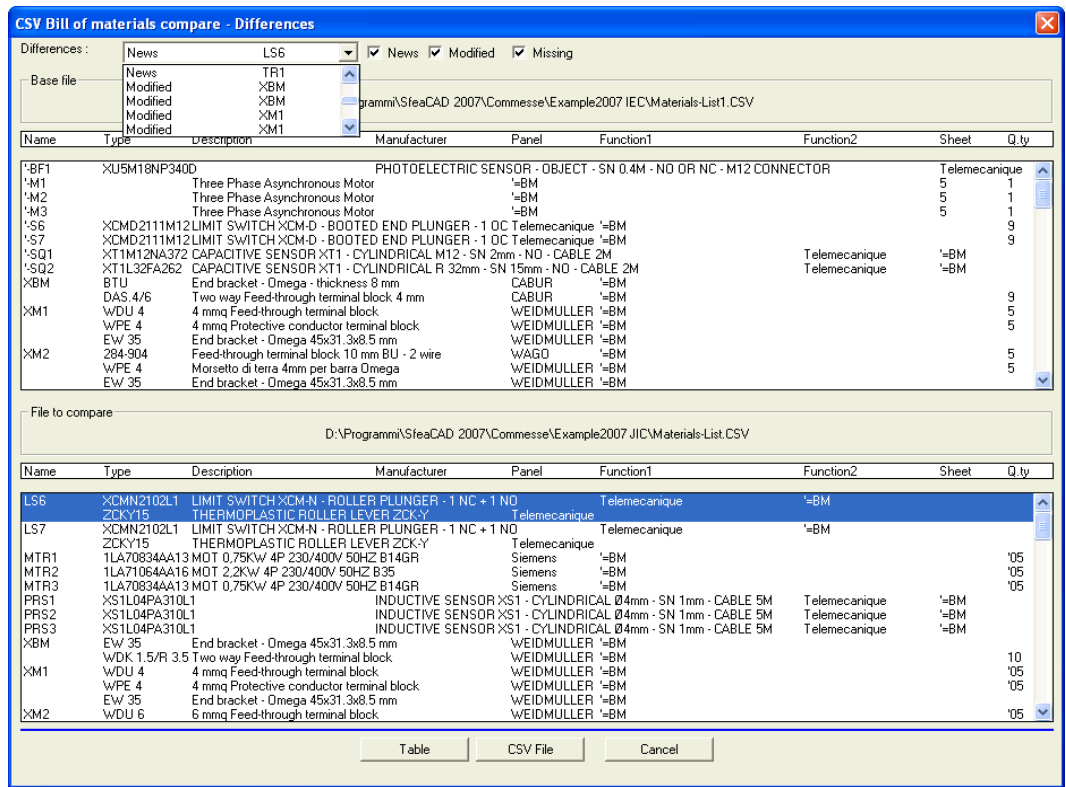

Example of Csv file comparison.

Table Pressing button **Table** (after the choice of at least a filter) are generated tables (for New, Modified and Erased) containing differences only.

CSV file Pressing button CSV file (New, Modified and Erased) are generated three files containing differences only.



It's possible to compare Bills generated with the same sorting settings. The presence of field "Reference" (Name) is compulsory.



WARNING: comparison can't be done in case the two files have **different column headings** or **different fields number** (columns).

9 Overtemperature

9.1 Overtemperature calculation



Pop-menu > *Layout*


This program is designed to calculate overtemperature for low voltage equipment, as described in IEC standards 17- 43.

The power dissipated by each individual component installed in the panel is summed up, then the cabinet overtemperature calculated according to appropriate formulae.

The results can be sent directly to the printer or imported into the drawing.

Starting the program

“Overtemperature calculation” can be started in three different ways.

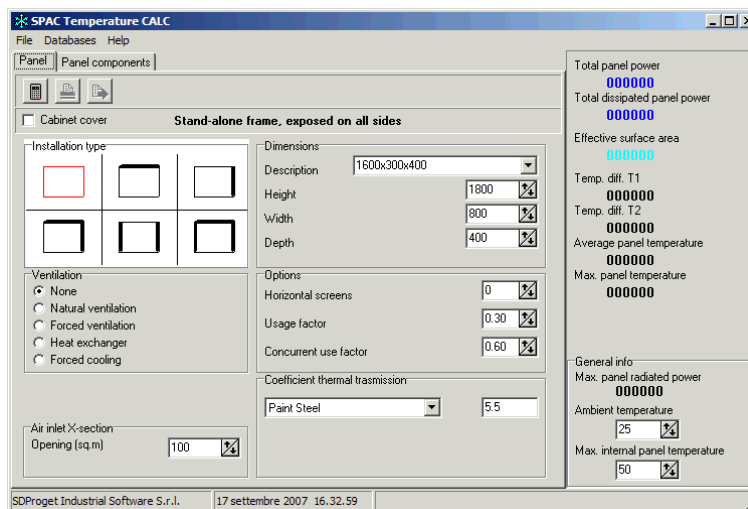

1. From the program directory.
2. From the drawing, with the "Overtemperature" command.
3. When processing an individual panel, the direct access button to "Errore. L'origine riferimento non è stata trovata." appears under "Internal Bill of Materials".


- New** A new design can be created using this command starting from a blank slate.
- Open** This is used to open an existing design stored in the file with PRQ extension.
- Save** This is used to save the design in a file with PRQ extension. The default save directory is the job directory.
- Print** This opens the design and data preview. General data and calculation results are displayed on the first sheet; a list of the components installed within the panel appears on successive sheets.
- The character font can be customized before confirming the print

Panel window

This is the main working directory as it contains most of the information relating to panel features.

Installation type:

The following installation modes can be specified by clicking on the plan views, whilst a special command enables you to specify whether the panel has a covered top:

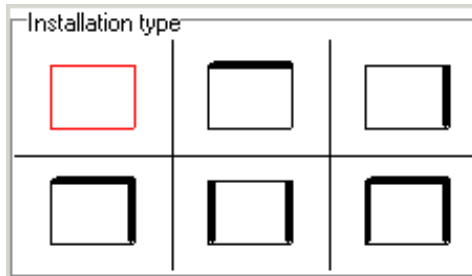

- Separate cover, exposed on all sides
- Separate cover for wall mounting
- Central cover, exposed type
- Central cover, wall mounted type
- First or last cover, exposed type
- First or last cover, wall mounted type

Dimensions: The exact dimensions of height, width and depth can be selected or entered for the panel in question. A database can be created to store the dimensions for the most frequently used panels. See Panel database.

Options: The number of horizontal baffles within the cabinet can be entered or set. **Horizontal baffles** significantly affect the calculation.

Enter or set the **Usage factor** for the components mounted within the panel. Setting this to 1 determines that all component dissipation values will be used as indicated in the table. If, for example, 0.8 is entered, the calculation is effected using 80% of each component dissipation value.

Enter or set the **Simultaneous usage factor**. Setting the value to 1 determines that all components will always operate simultaneously.

Ventilation: The type of ventilation planned for the panel can be set as follows:

- Closed (no ventilation)
- Natural ventilation
- Forced ventilation
- Heat exchanger
- Forced cooling

If **Natural ventilation** is set, a new dialogue window appears in which to indicate the size of the ventilation window (in square centimeters).

Thermal transmission co-efficient: This is used to select the type of material from which the cabinet is made in order to determine the value of the thermal transmission co-efficient [$\text{W/m}^2 \cdot \text{K}$] needed for the cabinet climate control calculation (see Sect. on Ventilation).

The value may be selected from a list of standard types (polyester, stainless steel, painted steel plate, aluminium, etc.) or customized using new types via the Databases menu.

Calculate

This button starts the calculation process, which displays the results on the right hand side of the window in use. Displayed results are set to zero every time the calculation parameters are changed. The **F5** button also calls up the calculation function.

Print

This button opens the print preview window that displays design results and data. General data and calculation results are displayed on the first sheet; a list of components installed within the panel is displayed on successive sheets.

Export to drawing

This option exports the data relating to the results; command “9.4 Overtemperature” produces on the drawing a graphic representation of the panel with the summary of results.

HEIGHT	Panel height
WIDTH	Panel width
DEPTH	Panel depth
EXPOSURE	Installation type
BAFFLES	Number of horizontal baffles
F_UTIL	Usage factor
F_CONT	Simultaneous usage factor
PSUPD	Upper Wall Dimension
PANTD	Front Wall Dimension
PPOSTD	Rear Wall Dimension
PSXD	Left Side Wall Dimension
PDXD	Right Side Wall Dimension
PSUPT	Upper Wall Surface
PANTT	Front Wall Surface
PPOSTT	Rear Wall Surface
PSXT - PDXT	Left Side Wall Surface - Right Side Wall Surface
FSUP	Upper Wall Factor b
FANT - FPOST	Front Wall Factor b - Rear Wall Factor b
FSX - FDX	Left Side Wall Factor b - Right Side Wall Factor b
PSUPJ	Upper Effective cooling surface
PANTJ	Front Effective cooling surface
PPOSTJ	Rear Effective cooling surface
PSXJ	Left Side Effective cooling surface
PDXJ	Right Side Effective cooling surface
SUPTOT	Total Effective cooling surface
POWTOT	Total power dissipated by components
POWDISS	Power effectively dissipated by components
T1 diff.	Temperature difference at top of panel
T05 diff.	Temperature difference at mid panel
PRAD	Maximum power radiated by panel
TMED	Average Temperature within panel
TMAX	Maximum Temperature within panel
T_EXT	Ambient temperature
T_INT	Maximum specified temperature within panel
DESCRBOX	Panel installation type
TYPEBOX	Panel description
VENTNAT	Ventilation aperture (cm ²)
VENTFORZ	Specified fan flow rate
SCAMB	Specified heat exchanger efficiency
KOND	Specified air conditioner cooling power
EXTFORCEQD	Cover constant: “False” for metallic cabinet, “True” for forced value.
BOX_K_DISTR	Value of “cover constant”.
BOX_MATERIAL_NAME	Description of panel material.
BOX_MATERIAL_K	Thermal transmission co-efficient [W/m ² · K].

Panel component window

The features of components mounted on the panel under consideration can be specified in this window.

If the **Starting the program** is done using option 1 or 2 (as indicated before), the component list is empty. If, on the other hand, the program is started by running the bill of materials for a panel, the list will already contain all the components of the chosen panel.

The following commands can be effected using the right-hand mouse button:

New line	Insert a new line in the list.
New last line	Insert a new line at the foot of the list.
Delete line	Delete the selected line.
Sort on	Sorting on various list fields.

Each line in the table provides for the completion of the following fields:


Reference	Reference to be displayed on the screen for the component (optional).
Type	Material code (optional).
Description	Component description (optional).
Q.ty	Quantity (mandatory).
P.diss [W]	Power dissipated by the component (mandatory).
Manufacturer	Manufacturer (optional).

Only the fields indicated as mandatory are essential to the calculation.

General info

A panel for setting and displaying general data is located in the lower right-hand corner of the window. From here, the following settings can be configured:

- **Ambient temperature** of the location for the panel under consideration
- **Maximum temperature** specified for the panel interior

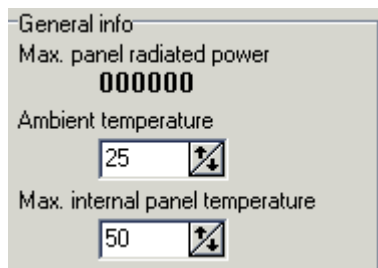

The screenshot shows a window titled "General info" with three fields: "Max. panel radiated power" with the value "000000", "Ambient temperature" with a value of "25" and a spin button, and "Max. internal panel temperature" with a value of "50" and a spin button.

The value of the power radiated from the panel surface is calculated by the program according to the panel dimensions, thermal transmission co-efficient and temperatures and is displayed in the "**Max power radiated by panel**" field.

Results

A results display panel is located in the upper right-hand corner of the window. The default values are normally 000000 and can be updated by clicking on the **Calculate** button.

Panel power consumption	Sum of the power consumed by all components installed in the panel.
Panel power dissipation	Sum of the power consumed by all components installed in the panel multiplied by usage factor and simultaneous usage factor.
Effective surface area	Effective cooling surface (see Basic Concepts)
T1 diff. at top of enclosure	The overtemperature value of the air in the upper part of the panel enclosure (see Basic Concepts).
T2 diff. at mid height	The overtemperature value of the air at mid height in the panel enclosure (see Basic Concepts).
Average temperature in panel enclosure	Average temperature within the panel enclosure. If the value exceeds the specified maximum temperature within the panel enclosure, the result is displayed in red.
Maximum temperature in panel enclosure	The maximum temperature reached within the panel enclosure. If the value exceeds the specified maximum temperature within the panel enclosure, the result is displayed in red.



Whenever cabinet ventilation is requested, a specific dialogue window in the lower left-hand side of the window highlights the characteristics which the cooling equipment should possess to keep the temperature lower than, or equal to, the internal temperature requested.

9.2 Design information

The data given here are used in the results printout header. These are not mandatory data; wherever they are not indicated, the spaces in the printout remain empty.

Panel database

The dimensions of the most frequently used panels can be saved in this table. Each line of the table provides for the completion of the following fields:

Description	Description of Panel for selection purposes.
Height	Panel height in centimeters.
Width	Panel width in centimeters.
Depth	Panel depth in centimeters.
Air intake area	Ventilation aperture dimensions in square centimeters.
Baffles	Number of horizontal baffles within the panel.
Ventilation	Type of ventilation specified.

An empty ventilation field indicates that the panel can be used with any type of ventilation. If the field is filled with a value from 0 to 4, the cabinet is associated with a type of ventilation:

0 = Closed (no ventilation)

1 = Natural ventilation

2 = Forced ventilation

3 = Heat exchanger

4 = Forced cooling

Several panel database files can be stored under any name using the File drop-down menu. The program Librerie\Overtemperature directory is the default saving location. The created file always has a .DAT extension.

A saved file can be opened by using the Open option from the File drop-down menu in the Panel database.

Components database

Specifications for the most frequently used components can be stored in this table. Each line of the table provides for the completion of the following fields:

Manufacturer	Name of manufacturer
Description	Component description
Dissipated Power	Power dissipation in Watts

Several component database files can be stored under any name using the File drop-down menu. The program Librerie\Overtemperature directory is the default saving location. The created file always has a .DAT extension.

A saved file can be opened by using the Open option from the File drop-down menu in the Component database.

Panel constants database

This table can be used to store the **thermal transmission coefficients** relating to the type of material of which the cabinet is made, expressed in $\text{W/m}^2 \cdot \text{K}$ necessary for calculation of climatic cabinet (see Sect. on Ventilation). Each line of the table provides for compilation of the following fields:

Italian	Panel description for selection in that language.
English	Panel description for selection in that language.
French	Panel description for selection in that language.
Spanish	Panel description for selection in that language.
German	Panel description for selection in that language.
Constant value	Value of thermal transmission co-efficient.

Several panel constant database files can be stored under any name using the File drop-down menu. The program Librerie\Archivi directory is the default saving location. The created file always has a .DAT extension.

9.3 Calculation – basic concepts

Basic concepts of overtemperature calculation can be displayed and printed. The document is in PDF format. **Calculation of internal panel overtemperature according to IEC standard 17 – 43.**

Basic concepts

The overtemperature value inside cabinets and distribution panels, under operational thermal conditions, must be predicted precisely in the panel design stage.

The air temperature inside individual cabinets must be compatible with the admissible overtemperature for the components and for the enclosure itself as defined by **IEC standards EN 60439**.

Calculation of the air overtemperature for ANS panels using the **IEC standard 17-43** calculation method can substitute actual testing.

The following data are necessary to calculate the air temperature inside a panel:

- **Panel height, width and depth**
- **Presence or absence of ventilation openings**
- **Installation type**
- **Number of horizontal baffles inside the panel**
- **Effective power dissipated by the equipment installed on the panel**

Installation type particularly influences the effective panel surface area that contributes to shedding heat produced by components.

Installation type	Factor b
Exposed upper surface area	1.4
Covered upper surface area	0.7
Exposed lateral parts	0.9
Covered lateral parts	0.5
Central casing lateral parts	0.5
Base surface area	<i>Not considered</i>

The effective cooling surface A_e of an enclosure is given by the sum of the individual surfaces A_o multiplied by the surface area factor b .

$$A_e = A_1 b_1 + A_2 b_2 + \dots A_n b_n$$

Factor b = surface area factor according to installation type (see preceding table).

The temperature gradient inside a panel varies with height; the hottest point is at the top.

The overtemperature value at mid panel is calculated using the following formula:

$$\Delta T_2 = k d p^x$$

- K** The panel constant depends on the total cooling surface area A_e and on any ventilation apertures (casing constant).
- d** This factor takes into account the dependence of overtemperature on the number of internal baffles.
- p** Power in watt dissipated by the equipment on the panel.
- x** Exponent equal to 0.804 for panels without ventilation apertures and 0.715 for those with ventilation apertures.

The overtemperature value of the air in the upper part of the enclosure is calculated using the formula:

$$\Delta T_1 = c \Delta T_2$$

- c The temperature division factor within the panel depends on the type of installation.

Ventilation

The “**Max panel radiated power**” necessary for calculating cabinet climate control, is calculated by the program and displayed.

Calculation of the radiated power emitted from the panel surface area (cabinet) is effected as follows:

$$P_s = K \cdot A_e \cdot (T_i - T_u)$$

K Thermal transmission co-efficient [W/m² · K].

Typical values are, for example:

K = 3.5 W/m²·K for polyester cabinets

K = 3.7 W/m²·K for stainless steel cabinets

K = 5.5 W/m²·K for laminated plate cabinets

K = 12 W/m²·K for aluminium cabinets

Ae Effective calculated radiating surface area of cabinet [m²]. (See calculation basic concepts)

Ti Required internal temperature [°C].

Tu Ambient temperature [°C].

Thus:

Ps < 0 incoming radiation (Ti < Tu)

Ps > 0 outgoing radiation (Ti > Tu)

The required cooling power will consequently be calculated by the following formula:

$$P_k = P_v - P_s$$

where **Pv** is the total power installed, dissipated in the panel [W], obtained through calculation across the sum of powers of the components installed in the panel, the usage factor and the simultaneity factor.



Where **Ps < 0**, the cabinet climate control must consist of an anti-condensation heater.

Closed (no ventilation)

The only dispersion of heat in this case occurs through the casing.

Natural ventilation

Heat dispersion is aided by openings in the casing. In this case, the program does not restore any value relating to the openings but indicates only the temperatures reached in the panel.

Forced ventilation

Forced ventilation is necessary to aid heat dispersion whenever the temperature within the panel exceeds the maximum admissible temperature for the components used.

On completion of the calculation, the volume of air necessary for maintaining the required temperature will be indicated. The value is obtained by the following formula and expressed in cubic meters/hour:

$$\text{Air volume} = f(h) \cdot \frac{P_v - K \cdot A_e \cdot (T_i - T_u)}{(T_i - T_u)} \quad [\text{m}^3 / \text{h}]$$

where $f(h)$ is the height exercise factor at sea level.

Specifically:

$f(0-100 \text{ m})$	$= 3.1 \text{ m}^3 \cdot \text{K/W} \cdot \text{h}$
$f(100-250 \text{ m})$	$= 3.2 \text{ m}^3 \cdot \text{K/W} \cdot \text{h}$
$f(250-500 \text{ m})$	$= 3.3 \text{ m}^3 \cdot \text{K/W} \cdot \text{h}$
$f(500-750 \text{ m})$	$= 3.4 \text{ m}^3 \cdot \text{K/W} \cdot \text{h}$
$f(750-1000 \text{ m})$	$= 3.5 \text{ m}^3 \cdot \text{K/W} \cdot \text{h}$



In the calculation made by the program, the average value selected is 3.3.

Heat exchanger

Heat exchangers work with two separate ventilation circuits. The warmer air in the panel is pushed down by a fan from above, towards a separate element with blades on a large surface area. A second fan works externally, in the opposite direction.

This method emits a flow of heat from the panel.

On completion of the calculation, the thermal power needed to maintain the required temperature is indicated. The value is obtained from the following formula:

$$q_w = \frac{P_v}{(T_i - T_u)} - K \cdot A_e \quad [\text{W} / \text{K}]$$

Forced cooling

The coolers work on the same principle as household refrigerators; cooling circuit and component aeration is effected by a fan and air circulating within the panel.

The temperature inside the panel can be lowered to a value below ambient temperature using this system.

On completion of the calculation, the power necessary to maintain the required temperature is indicated. The value is obtained from the following formula:

$$\text{Power of cooling group} = P_v - P_s \quad [\text{W}]$$

9.4 Overtemperature table



Pop-menu > *Layout*

After making “9.1 Overtemperature” for a particular panel and having exported the data to drawing, this command produces a design summarizing the results.

The operation requires, first of all, specification of the symbol for the template to be designed, and then the .OUT file to be imported (the selection dialogue box opens by default in the current job directory); the result is similar to the following figure:

[illegible]

Detailed overtemperature table (Termic0).

The symbol used is Termic0.dwg and can be found in the program Librerie\Simboli directory for any customization needed. The name Termic1 can also be found in the same directory, to be used as a compacted table for importing results for two panels onto the same sheet (A3 format).

New blocks can be customized whilst keeping the attributes unchanged, and saving must be carried out in the same window as those already present. The block name must be consecutive to already existing names (Termic2, Termic3, etc.), with a maximum of 20 blocks (the dialogue window can display a maximum of 20 fields).



Deleting a symbol compromises the display of any symbols following on numerically.


10 Single feed Draw

10.1 Single feed Draw



Pop-menu > *Single Feed Macro*

This command is used for the graphical creation of the single feed schemes. As soon as it is activated, it opens the program window showed below, where the user is prompted to insert the data required for the protection and the line.

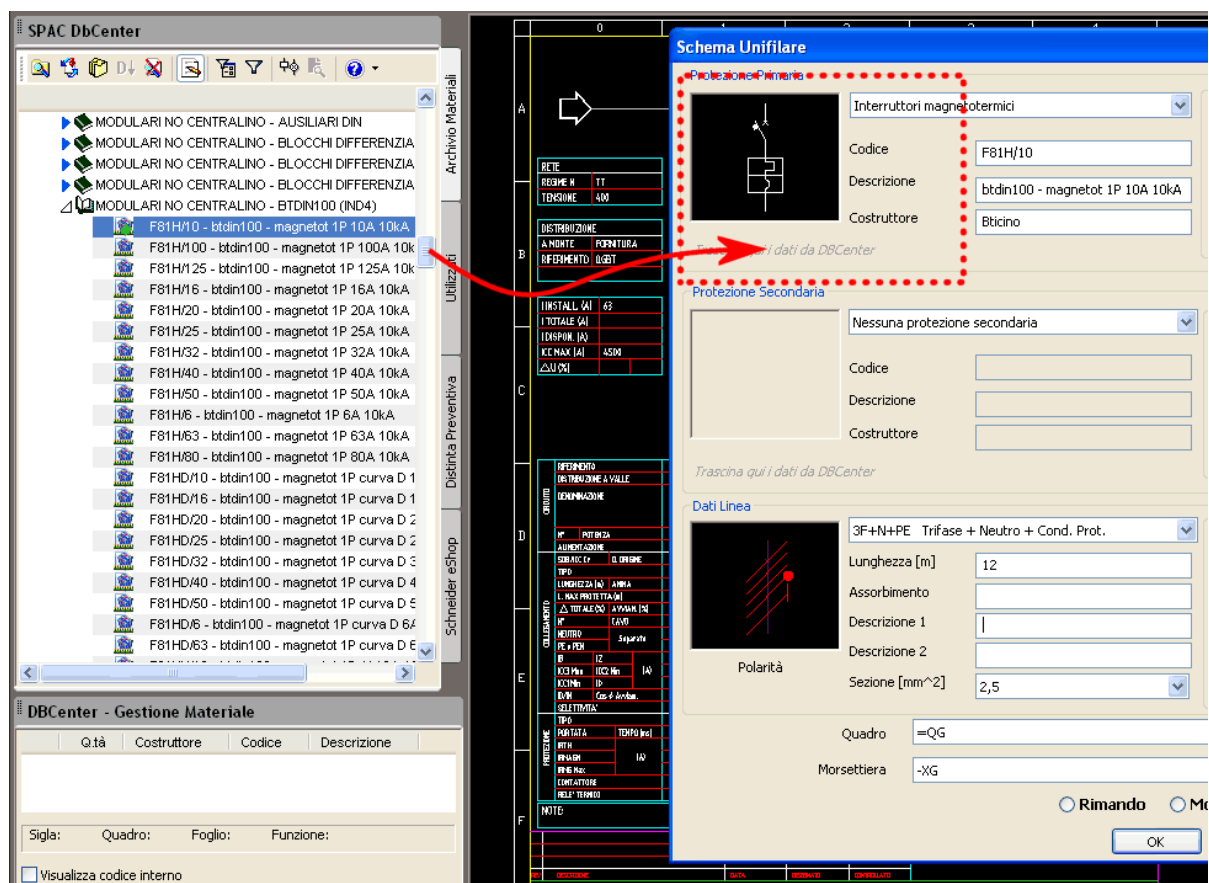


Example of a fast compilation of the fields using a Drag&Drop approach.

Protection (Primary and Secondary)


Selecting from the possible combinations, it is necessary to set the **primary and secondary protection**; the code and other data required (related to the protections) could be “moved” directly from the DbCenter with a Drag&Drop approach (see section “8.6 DbCenter”) to the codes of the protection of interest.

Line


The line descriptive data (polarity, length, etc.) must be typed manually, while the cable type must be selected from the codes on [Cable database](#) (pressing the “...” button).

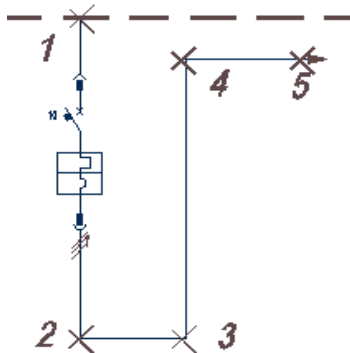

Arrival

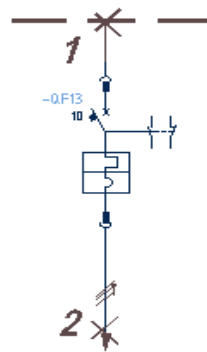

Return

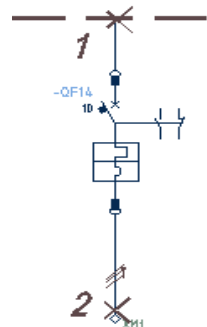

Terminal

By selecting “**Arrival**” it is possible to design a new line starting on the general distribution or even on a new sub-panel.

The function requires the indication of the following points:

Specify the line’s starting point...

Specify the intermediate point N°1

Specify the intermediate point N°2

...

The request of intermediate points could be finished by pressing “Enter” from the keyboard.

On the final point (5) a **Start Return** is inserted.

By selecting “**Return**” a new line is designed, or a new sub-panel is defined.

The function requires the indication of the following points:

Specify the line’s starting point...

Specify the line’s end point...

On the final point (2) a **Start Return** is inserted.

By selecting “**Terminal**” a new line is designed with the characteristics of the terminal block.

The function requires the indication of the following points:

Specify the line’s starting point...

Specify the line’s end point...

On the final point (2) a **Terminal** is inserted.

The terminal is associated to the **Panel and Terminal Block** configured.

During the execution of the single-feed design, the single-feed tables are automatically filled. The definition of the table to be filled is done by identifying the table aligned vertically to the first point (point 1) of each drawing (see section “[10.3 Single feed Data tables](#)”). Obviously the filling of the table is executed if it is present on the drawing and not for those inserted subsequently.

Command always active

The command is recalled automatically in a cyclic way.

Multiple Insertions

The drawing is repeated without recall the command.



It is suggested to insert the “Single-Feeds Table” before the execution of the single-feed drawing.



WARNING : The commands for the single-feed design are active **only if the Single-Feed symbols (UNIF)** are configured by command “[4.1 Setup](#)”.

10.2 Single feed Number wires



Pop-menu > *Single Feed Macro*

This is a specific command for the wires numbering on the single-feed schemes.

Numerazione Fili

Sigla filo: R1 S1 T1 N1 Numero 1

Prefissi o Suffissi Locali

☒ Abilita ☐ Prefissi ☐ Suffissi

R S T N

Personalizzazione delle fasi

Fase 1 Fase 2 Fase 3 Neutro

Aggiungi

☐ Bilanciamento Fasi

L'opzione "Bilanciamento Fasi" serve per abilitare la distribuzione delle fasi durante la numerazione

☐ Abilita inserimento PE

L'opzione "Abilita inserimento PE" serve per aggiungere un collegamento con un morsetto dedicato

OK Annulla


The single-feed wires numbering assigns several wire values to each single wire (line):

The quantity of values assigned depends on the "Polarity" configured for each line during the graphical design (see "10.1 Single feed Draw").

This command can be used easily; it is enough to set the start number and the combination of prefix / suffix to be used.

The traditional wires numbering should not be used for this type of schemes (not adequate), in this case a single wire value is assigned to each single wire (each line).

Wire numbering of Single-Feed drawings

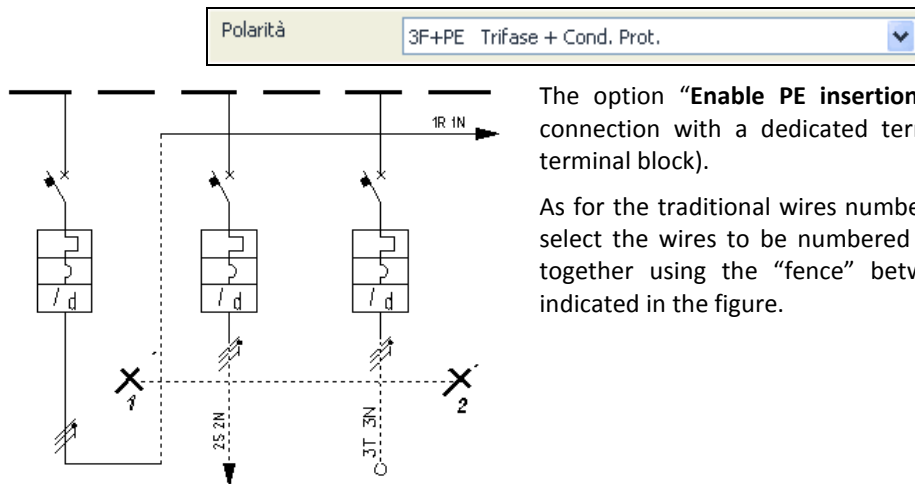

The option "Enable PE insertion" is used to add a connection with a dedicated terminal (visible in the terminal block).

As for the traditional wires numbering, it is possible to select the wires to be numbered one at a time or all together using the "fence" between two points as indicated in the figure.



See "5.1 Number wires".



The wires numbers inserted with this type of numbering are counted in the same way as the wires inserted with the traditional command.




WARNING : The commands for the single-feed design are active **only** if the Single-Feed (UNIF) symbols are configured from the command "4.1 Setup".

10.3 Single feed Data tables



Pop-menu >

This command opens the “Data Tables” macro-symbols library that contains the typical data of the Single-Feed schemes.

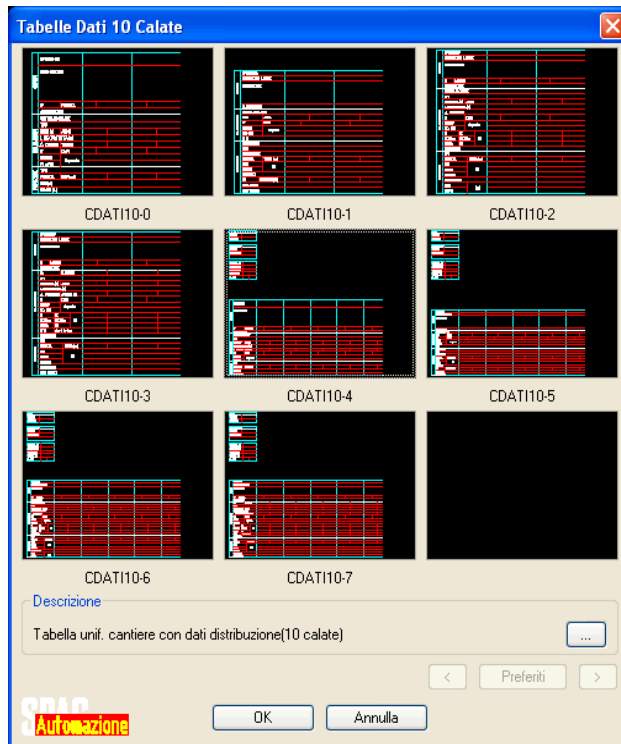

The command presents 8 sample tables of “10-circuit data tables” that could be inserted manually in each single-feed sheet.

These macro-blocks has attributes for the fast insertion of the table’s data (these can be changed later with commands “Eattedit” or “Ddatte”).

The insertion of the tables is done in coordinates 0,0.

The tables’ symbols are memorized on the SPAC Librerie\Unif folder. Each .dwg block has an .sld image (slide) associated with the same name for the visualization on the dialogue box.

It is possible to customize new table symbols memorizing them on the same folder of those contained in the system. The block name must be consecutive to the names already present in the system (Cdati10-8, Cdati10-9 etc.) for a maximum of 20 tables (the dialogue box could visualize a maximum of 20 windows).

The tables with “10-circuit data tables” are composed by 10 blocks of a length of 40mm :

The first “descriptive” block on the left is a graphical symbol with the textual descriptions of the fields contained on the next blocks. On the right of the 1st “descriptive” block there are 9 copies of the “data” block (equal for all the circuit data tables).

10	REFERIMENTO									
	DENOMINAZIONE									
	N° POTENZA									
	ALIMENTAZIONE									
	SISTEMA DI SERRA									
	TIPO									
	LUNG. INT. ANNO									
	L. MAX PROTETTA IN									
	Δ CIRCUITO TOTALE									
	N° CAVO									
10	COLLEGAMENTO									
	N° CAVO									
	NEUTRO									
	PE o PEN									
	Separati									
	TIPO									
	PORTATA									
	OFF. INI									
	OFF. FINI									
	BONORI INI									
10	NOTE:									

Example of a Data Table with “10-circuit data tables”.

These tables are automatically filled in the single-feed design phase (see “10.1 Single feed Draw”).

The research of the table to be filled is executed by identifying the table that is vertically aligned to the first point in each drawing.

For this reason it is suggested to insert the “Single-Feed data Table” before the design of the single-feed drawing.



The deletion of a symbol can affect the visualization of those numerically consecutive.



WARNING : The size of the Table with “10-circuit data tables” requires the use of an adequate template (see section “Master”), Master-Unif and Master3 are appropriated symbols (useful length of 400mm).


The symbols of the Master0,1 and 2 templates are not adequate because of their reduced dimensions.

10.4 Edit Single feed Circuit



Pop-menu > *Single Feed Macro*

This command is used to modify the data in the single-feed schemes. By selecting the single wire (line) of the circuit to be modified, the program opens the same window used for the design. In this window it is possible to insert new data using a Drag&Drop approach directly from the DBCenter (see “8.6 DbCenter”).

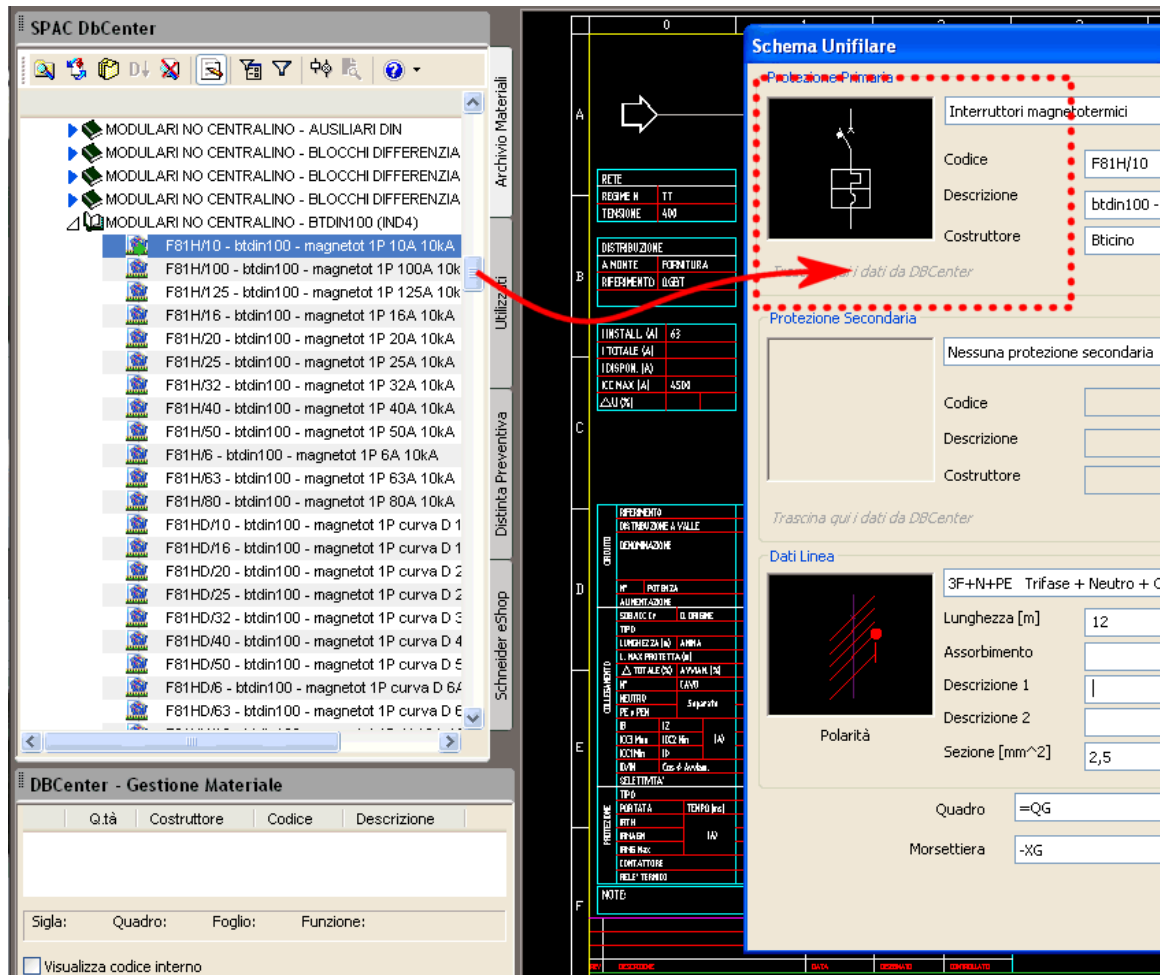

Example of Edit single -feed circuit with Drag&Drop.



See “10.1 Single feed Draw”.



WARNING : The commands for the single-feed design are active **only** if the Single-Feed (UNIF) symbols are configured from the command “4.1 Setup”.


10.5 Import Single feed



Pop-menu > *Single Feed Macro*

This command consents the automatic execution of the functional **Single-Feed** scheme both with the graphical representation and the “data tables” (see section “10.3 Single feed Data tables”).


The functionality **Import Single-Feed Scheme** uses the .txt files on the current Job Order folder. These files are created by SPAC Impianti (in planimetrics mode) or by **Caneco calculation software** (optional).

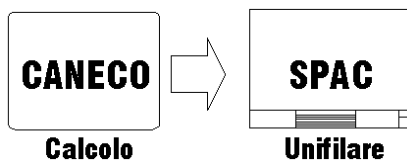

The files created by Caneco calculation software (optional) allow the automatic filling of the “data tables” with the results obtained by the calculation.

It is important to save the Caneco project, on the Job Order folder with the files _IMP.TXT to be imported.

The configuration of the “Y Coordinates” corresponds with the components position as indicated on the figure:

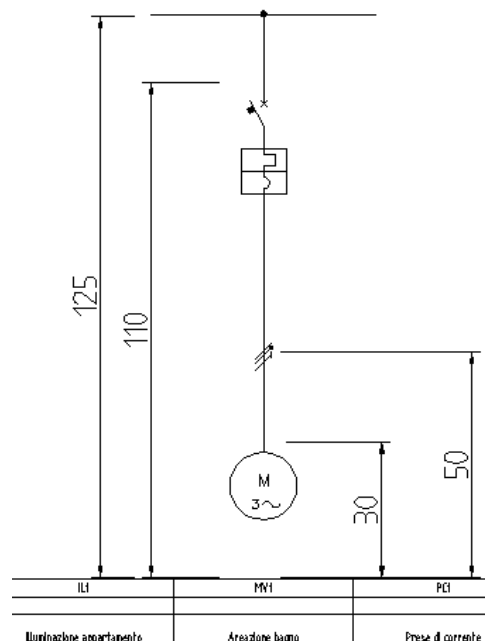

The size of the Table with “10-circuit data tables” requires the use of an adequate template (see section “Master”):

Master-Unif and **Master3** are appropriated symbols because they have a useful length of 400mm, while symbols of the Master0, 1 and 2 templates are not adequate because of their reduced dimensions.

Order of Returns

The design starts in the current sheet and continues (when requested) on those consecutives. The circuits placement is done according to two possible priorities.

From Caneco Circuits are designed with the same placement visible in Caneco.

Alpha-numerical Circuits are designed in an alphabetic order according to the reference ID.



This configuration does not exclude the possibility to execute future modifications and customizations with the regular design tools.



WARNING : The commands for the single-feed design are active **only** if the **Single-Feed (UNIF)** symbols are configured from the command “4.1 Setup”.

Caneco is an optional software that is not provided with SPAC Automazione (www.caneco.eu).

11 Cables

11.1 Cables




Pop-menu > *Util*

The necessary cables can be processed only when the terminals and connectors for connections have been placed correctly on the electrical diagram (see Sect. 6.1). If the “**20.1 Cable module**” program is available (optional), the program requests confirmation of the type of processing to be carried out.

All numbered, valid wires connecting components which belong to different panels are extracted from the drawing during data processing. When a drawing is executed correctly, these wires must be connected to an output terminal block on the first panel and to an input terminal block on the second. As a rule then we can thus state that: a wire is intended as a possible cable connection when it is connected between two terminals or connectors belonging to different panels (direct connection).

Look at the following illustrated cases carefully:

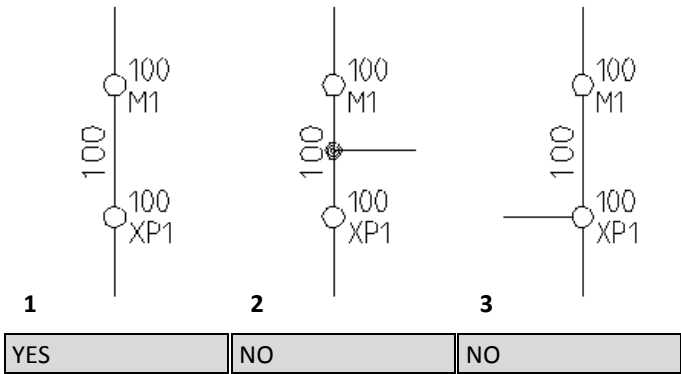


All connections must be made either above the first terminal or below the second; **Figure 2** illustrates a connection violating this rule.

Each terminal (or connector) must have a single input and output wire. **Figure 3** illustrates a connection violating this rule.

Example of a cable connecting terminal block **M1** on panel =QG (MAIN PANEL) to terminal block **XP1** on pushbutton panel =P1.



Figure 1 (left) illustrates the only correct manner for drawing a cable connection.

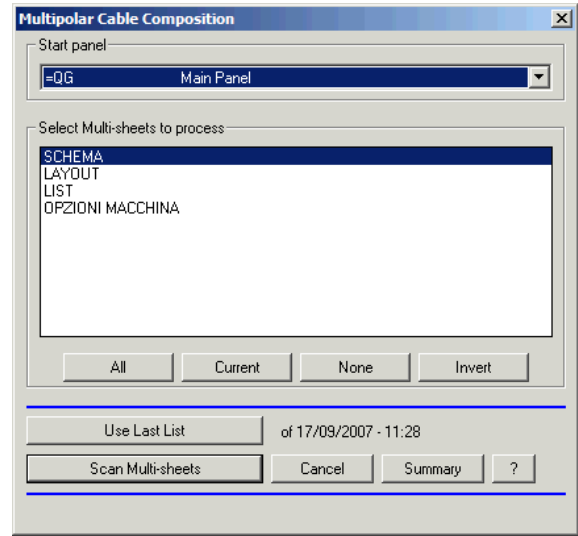


All the multi-sheets selected in the list are processed by pressing **Scan multisheets**.

Cable data stored previously (using **Save**) can be accessed rapidly via the **Use Saved Files** option to avoid repeating scans.

It is advisable to select as the **Start panel** the one that provides the greatest number of connections to other panels. This leads to a better, more global perspective of the connections to be made by cable association

The figure below shows an example of two circuit parts:

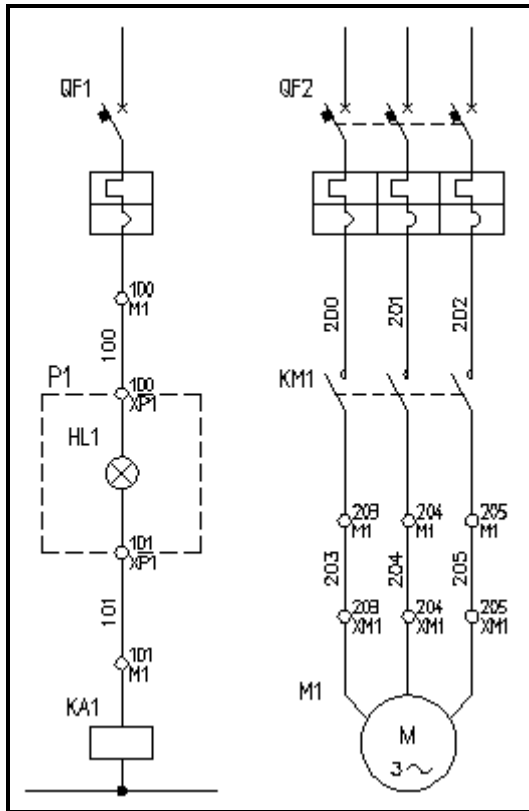

The elements are located on the following panels:

Main panel =QG terminal block M1

QF1, QF2, KA1 and KM1

Pushbutton panel =P1 terminal block XP1

HL1 (lamp)

Machine =BM terminal block XM1

M1 (motor)

The panel =QG is connected to pushbutton panel =P1 by conductors 100 and 101 and is also connected to machine =BM by conductors 203, 204 and 205.

Since =P1 and =BM are not connected, it is advisable to set =QG as the "start panel" before scanning the multisheet.



Any deletion of motor M1 terminals (terminal block BM XM1) results in processing as a direct connection.

The following dialogue window appears after scanning:

Cables processing

Start

Panel: =QG

Type	Name	Description
MORSETTIERA	M1	Terminal block M1

Destin. points

Panel	Type	Name	Description
=BM	MORSETTIERA	XM1	
=P1	MORSETTIERA	XP1	

CONNECTIONS

Panel	Terminal...	NMP/Pin	Wirenum...	NMA/Pin	Terminal...	Panel	Usage	Cable	Conductor	Bundle
=QG	M1	5	205	6	XM1	=BM				
=QG	M1	4	204	5	XM1	=BM				
=QG	M1	3	203	4	XM1	=BM				

Conductors

Conductor	Sect.

Current cable: ... Change

Cable: ...

CSV file: Output Update Save Exit

The dialogue window shows wires 203, 204 and 205 connecting component KM1 terminals and motor M1 as illustrated in the previous diagram. Clicking on **NMP** or **WIRE** lets the user choose the sequence in which the data are displayed.

All conductors which are necessary in the drawing to connect the various panels are displayed by choosing between the start and destination panels.

NMP	The NumM (terminal number) value indicated on the start terminal (upstream).
NMA	The NumM (terminal number) value indicated on the destination terminal (downstream).
Usage	The content of the service attribute (optional) is indicated on the downstream terminal. If the usage information is given, it must correctly indicate which component the downstream terminal is connected to (<i>see Sect. 6.4</i>).
Cable	<u>Indicates the cable reference; the information is only displayed for associated wires</u>
Conductor	<u>Indicates the reference, number or name of the wire of the indicated cable.</u>
Definition	The “11.2 Cable definition” command is used to create new cables.
Current cable	All defined cables appear in the list by pressing the "Cables" button or the one associated with the currently selected wire.




When the optional “20.1 Cable module” program is available, the program requests confirmation of the type of processing to be carried out.

Cable selection

Two cables have been stored using command “11.2 Cable definition” one with reference **C1** (10x1.5, for connecting to the pushbutton panel =P1) and another with reference **C2** (4x4.0, for connection to motor M1).

1. Now select panel and terminal block for start =QG XG and destination =BM XM1.
2. Select C1 from the **Current cable** list, in order to view the make-up in terms of conductor number, diameter and type in the right-hand column.
3. Click on **wire PE**, then click on the conductor chosen for the selected wire in the second column, e.g. **conductor 1**; the connection is made by pressing **Associate (Alt+A)**. Repeat the operation for **wire 71**, associating it with conductor 2.

Alternatively, click on "Select all" and on the first conductor; pressing **Associate** renders the connection automatic for all successive wires and conductors (Automatic association).

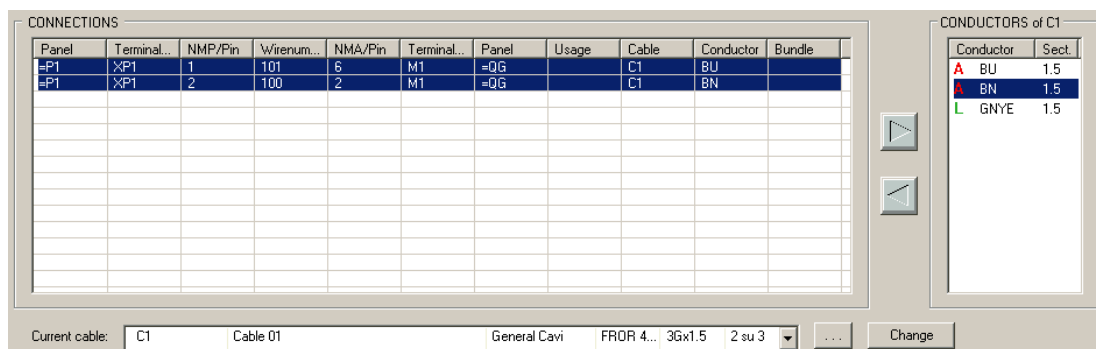

Press **Disassociate** to remove an association. Press "All" and then Disassociate to remove all associations from a cable, or use the quicker **Reset** option (for the current cable).

Conductors marked with "<" contain by wires on the current list.

Conductors marked with ">" contain by wires from other combinations.

Now select destination panel and terminal block =BM XM1.

4. Select C2 from the **Current cable** list (C1 does not appear it has already been used).
5. Pressing **Associate** connects wires 129, 130 and 131 with conductors BU, BN and BK (3 of 10 conductors).
6. Press **Save** to store everything created so far.

The graphic results can be viewed in the “**Draw cables**” and “**Cable table**” sections.



This button is used to check which wires have been associated, as the job is not completed until all wires have been highlighted.

Saving transfers all data from this make-up to the wires drawn in the diagram. Access "Use saved files" to continue working on the saved data.

Automatic Association

Point (4) of the previous example demonstrated the association of a wire with a cable connection; several wires can be associated with several cables simultaneously to speed up the process:

In the previous example, the 2 wires could have been selected (by pressing **All**), followed by the first pin in the association; now, pressing **Associate** would link all the available pins.





Wire details

"**Details**" enables all possible data for a wire to be viewed together, including the number of the page ("sheet" option) on which it is drawn and the multisheet containing the page.

Controls

Some wires are discarded during processing and an error message is displayed. The most frequent cause is graphic inconsistency:


***** ERROR: branch 100 was not processed in EXAMPLE-01 sheet 1**

    	Connection drew with 3 lines: this type of error can occur only when the connections are drawn in standard mode. The problem can be resolved by joining lines 1 and 3 into a single line.
	Connection with 2 lines crossed: not resolvable. The problem can be eliminated by deleting the connection point or by drawing a new connection, if possible in Serial \ Parallel mode.
	Superimposed lines: delete the surplus lines, then check that the remaining ones are numbered correctly.
	Component without Panel value: the wire is connected to a symbol not associated with any panel. The problem can be resolved by filling in the missing information; use the Edit command (XS on the keyboard) to view all those available.



Any inconsistencies relating to connections, overlapping lines and incorrect symbols are detected by the "Program Check" (Sp_Verif) command.

Draw cables

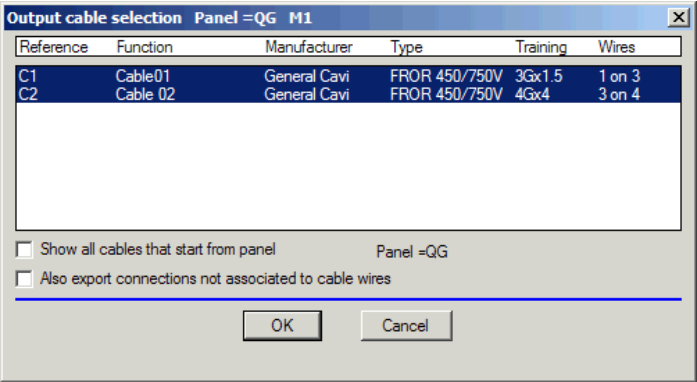

Pressing the **"Draw"** button produces a graphic representation of the previously created cable.

The command requires selection of the cables to be drawn.

Every change to the cable make-up requires successive updating of the table (this is not updated automatically).

EXTERNAL CABLES														
PANEL									DESTINATION					
PANEL	SHEET	TERMINAL NO.	WIRE NO.	WIRE ID	CABLE	LENGTH (m)	NOISE LEVEL	WIRE ID	WIRE NO.	TERMINAL NO.	SHEET	PANEL		
=QG M1	1/1E		181	BU	C1 FROR 450/750V 3Gx1.5 Cable01			BU	181		1/1D	=P1 XP1		
		BN	BN	1										
		GRYE	GRYE											
=QG M1	1/4E	3	203	BU	C2 FROR 450/750V 4Gx4 Cable02			BU	203	4	1/4E	=BM XM1		
		4	204	BN				BN	204	5	1/4E	=BM XM1		
		5	205	BK				BK	205	6	1/4E	=BM XM1		
				GRYE				GRYE						
=QG M1	1/4E													

Example of cable drawing.

The symbol table used is Listcav.dwg, which can be found in the Symbols directory. Incorrect customization of this parametric symbol is indicated by the message:

*** **Error: Incorrect LISTCAV block.**

The pages necessary to complete the composition are consecutive to the one indicated as the start number.

The connection type is indicated graphically in the cable drawing:

Symbol	Description
	Cable connected to a terminal . The value identifies the terminal NumM .
	Cable connected to a multiple terminal . The value identifies two data: terminal NumM and Level (NumM_Lev).
	Cable connected to a connector . The value identifies the connecting Pin (NumM) on the connector.
	Cable connected directly to a component (direct connection) . The value identifies the connecting Pin on the component. Cable numbers color is yellow .

Cable table

	QUADRO MORSETTIERA \ BOARD GROUP STRING					UTENZA DESTINATION	Foglio SHEET	Tipo TYPE	NR NO.	NR. FLO CONDUCTOR
	=QG M1						1	2.5 mm	1	100
							1	2.5 mm	2	101
							1	2.5 mm	3	203
							1	2.5 mm	4	204
							1	2.5 mm	5	205
CAND\CABLE	TIPO\TYPE									
C1	FROR 450/750V 3Gx1.5					BU BN				
C2	FROR 450/750V 4Gx4							BU BN BK		

Example of Cable table.

All cables leading from the indicated panel are drawn automatically, according to the previous make-up, by pressing the "**Table**" button.

Every change to cable make-up requires successive updating of the table (this is not updated automatically).

The command requires selection of the cables to be drawn.

The table symbol used is Listcav.dwg, which can be found in the Symbols directory.

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).

☐ File Preview

Enabling **File preview** the file is saved and then opened automatically.

11.2 Cable definition



Pop-menu > *Util*

The definition of cables used in the “**Cable selection**” operation (see Sect. 11.1) can be effected at one of two different times:

1. **During the graphic drawing** of the electric diagram: this specific command is used in this case as it enables the recording of necessary cable types and related specifications.
2. **During "Cable selection"** in the make-up phase: this is most appropriate for changing cables which have been stored as in point (1) or for generating new cables.

Reference	Manufacturer	Type	Training	Description	Cond.
C1	General Cavi	FRDR 300/500V	10G1.5	Commands & Signals Cable	10
C2	General Cavi	FRDR 450/750V	4Gx4	Power Cable	4
C3	General Cavi	FRDR 450/750V	4Gx6	Power Cable	4
C5	General Cavi	FRDR 300/500V	19G1.5	Commands & Signals Cable	19
C6	General Cavi	FRDR 300/500V	7G1.5	Commands & Signals Cable	7
C7	General Cavi	FRDR 300/500V	7G1.5	Commands & Signals Cable	7

Conductor Id	Cross-section
1 BU	4
2 BN	4
3 BK	4
4 GNYE	4

Cable ref.

Function

Disturbance

Length (m)

Cable data

General Cavi FRDR 450/750V 4Gx4

Power Cable

Begin by selecting a cable from the “**Cable database**” (see Sect. 4.2) and then press the “...” button.

Next, identify the cable using a **Reference** (12 characters max.) and the various descriptions: **Function, Interference and Length** (optional data).

The new cable is stored with those already defined by pressing **Add**.

Use “Change” and “Delete” to make changes to already defined cables or to delete them.

The **Clear** button empties all fields

Cable table

Press **Table** after selecting one of the cables defined in the list, in order to draw **only the specified cable** in table form, according to the configured fields and columns.

Sigla Cavo : C1	
Formazione 3G1.5	
Tipo HQ7RN-F	
Funzione Collegamento P1	
ID_CAVD	FILE
BK	100
BU	101
GNYE	

Cable table

The cable is described using certain “title” fields and the **ID Cable** and **NR.Wire** data, which have been selected from available fields

The current configuration is stored “locally” (see Sect. 4.2) for later use through **Default**. If the configuration is accepted without pressing Default, it will be considered temporary and will consequently be used only once.



Tabular output is normally used after completing make-up. If this is not the case, the NR.Wire field is empty.

 
Table

Cable	Function	Make-up	Length
C1	=BN XBM Connections	19G1.5	8m
C2	=BN Motor 1 Connections	4Gx4	12m
C3	=BN Motor 2 Connections	4Gx6	10m
C5	=P1 QN1 Connector Connections	19G1.5	4m
C6	=P1 QN2 Connector Connections	7G1.5	4m
C7	=P1 QN3 Connector Connections	7G1.5	4m

By pressing **Table**, a tabular list is created of **all the cables defined**, with the columns and fields as configured.

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (*see Sect. 14.8*).



Enabling **File preview** the file is saved and then opened automatically.

11.3 Cable database



Pop-menu > *Util* > *Cable Utility*

This configuration is opened by highlighting the cable database file **DbCables.Mdb**, in the program Libraries\Database directory.


This is the same database used during wire numbering (manual or automatic) and during "power feed" design **to attribute cable characteristics to the wire**. Under these operating conditions, the database is automatically filtered for single-feed type cables only.

During cable definition (*see Sect. 11.2*), the database is displayed without any filters (complete). The "**Cable database**" command enables default values to be set (*see Sect. 4.2*).

11.4 Cable information



Pop-menu > Util > Cable Utility

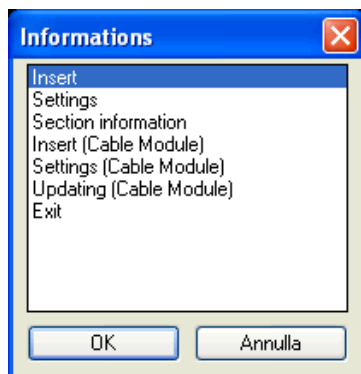


This command is used to write the information related to the cable type directly into the drawing. Selection of one or more wires is requested via a "fence".

Before making the first **Insertion**, it is advisable to carry out **Setup** in order to graphically configure information using the desired parameters (colors and information).

Diameter information associates the selected wire with a "Diameter" symbol (to be chosen from those available) giving information relating to conduction.

1 Wire

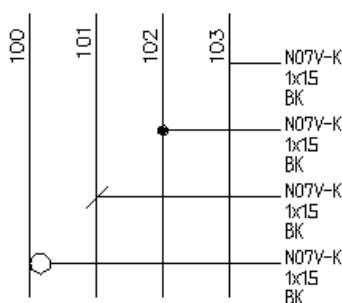

Data relating to Type, Diameter and Color (or from configuration) are automatically imported from the selected wire, i.e. data assigned during wire numbering.


Graphically, there are 4 drawing options:

Nothing, Point, Line segment or Circle

"Nothing" corresponds to the specification of wire 103 in the figure.

"Circle" is rarely used in the selection of an individual wire.

Fence

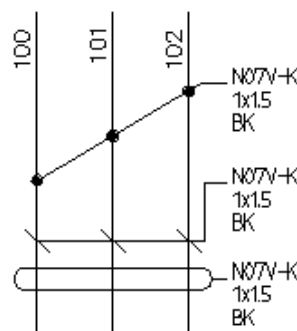


Placing a point in an empty space automatically activates the selection of lines via a "fence".

The figure illustrates the selection of 3 wires with the same characteristics. When selecting multiple wires with different characteristics to each other, the function describes each wire individually.

Graphically, there are only 4 drawing options (3 are illustrated in the figure).

Diameter information

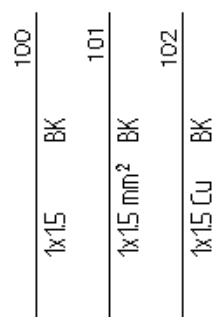

"Diameter" symbols are stored in the common libraries directory; an image (slide) with the same name corresponds to each .dwg block for display in the dialogue window.

New blocks can be customised and stored in the same directory as existing ones. The block name must be consecutive to already existing names (Diameter4, Diameter5, etc.), with a maximum of 20 blocks (the dialogue window can display a max. of 20 windows).

NOTE: Deleting a block compromises the display of blocks that follow numerically.



See "5.10 Data indications".



The Cables Module is an **OPTIONAL** program, the "Cable's indications" related to this program are activated only if the Cables module is installed (see "Cable Data Info").

12 Translator

12.1 Translator blocks



Pop-menu > *Util*

The translator is an (optional) module that enables the replacement or **insertion of comments in a foreign language**. These symbols are specifically geared to receive phrases to be translated (during processing). Selecting a symbol prompts a request for one or more comment lines to be entered manually:

ALIMENTAZIONE AUSILIARI 110V

...

Symbol Trad2.dwg

The symbol produces 2 comment lines:

TEXT1: 110V AUXILIARY POWER SUPPLY

(type)

TEXT3: (Enter)

AUMENTAZIONE
AUSILIARI 110V

...

Symbol Trad1.dwg

The symbol produces 4 comment lines:

TEXT1: 110V AUXILIARY

(type)

TEXT2: POWER SUPPLY

(type)

TEXT3: (Enter)

TEXT4: (Enter)

The first 2 lines are for the original language; lines 3 and 4 are to be completed with the translation.

The comments can also be entered using command “12.2 Insert phrases”.

The translator blocks normally contain 4 attributes (from Text1 to Text4); the first two must be completed with the phrase in the original language, while the last two must remain free, as they will be completed automatically with the translated phrase.

The two pairs of attributes are drawn in different colors and with different inclinations (the text of the attributes to be translated is colored magenta and inclined at 15°) to facilitate differentiation of the text.

There is no limit to the number of lines contained in the blocks; the 4 lines in the Trad2.dwg symbol can also contain 4 different languages.

The "Trad" symbols are stored in the Symbols directory. For every .dwg block there is a corresponding .sld slide (image) using the same name to be displayed in the dialogue window.

New symbols can be customized by storing them in the same directory as existing symbols. The name of the block must be consecutive to already existing names (Trad6, Trad7, etc.), with a maximum of 20 symbols (the dialogue box can display max. 20 windows).



The deletion of a symbol will compromise the display of symbols that follow numerically.


12.2 Insert phrases



Pop-menu > *Util*


“Insert Phrases” is the program that interfaces the design and the Translator archive; it consents to get the phrases from the database in order to insert them on the drawing as texts or attributes.

From this window, it is possible to interact in a simple and easy way with the phrases archive (see “12.5 Phrase database”) in order to search the comments that can be inserted (Drag&Drop) on the design.

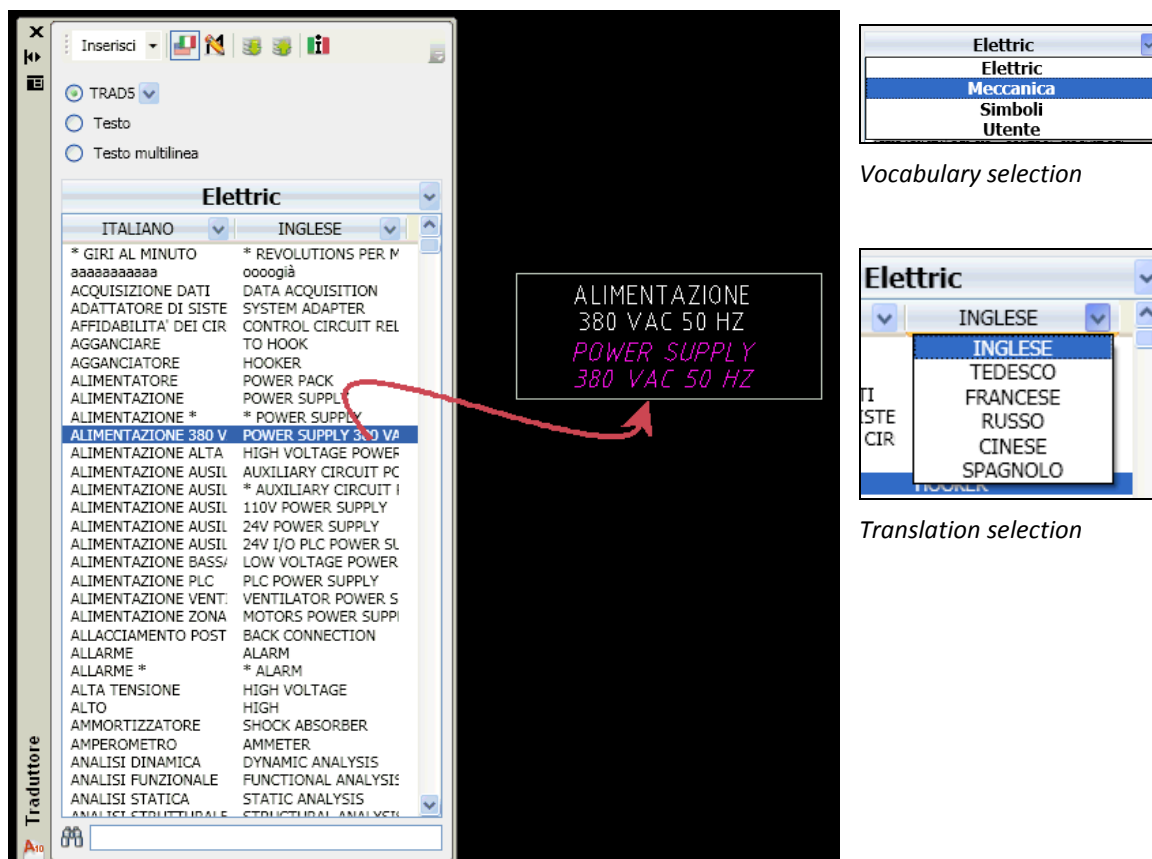

Example “Insert Phrases” example

 The command operation is very easy; after the selection of the phrase to be inserted on the drawing, it is enough to drag it with the mouse (Drag&Drop) on the drawing and indicate the insertion point.



Insert

The new phrase is inserted on the block\text selected, within the attributes specified in the configuration (see par. 12.4).

If the “Insert translated phrase” is active, the translation is inserted automatically.

Modify

The phrase is inserted modifying the comments of a block \ text already present on the drawing. The substitution of the existent phrases is performed without any confirmation request.

If the “Insert translated phrase” is active, even the translation is modified.



Automatic Filter

Simplifies the research of the phrases to be inserted. The list of the phrases affected by a filter are displayed in Yellow color.



The variable text of the phrase with the “Wild card” symbol “*” is displayed on the drawing between the two separation characters set, substituting the asterisk. Example: * → [text]

Insert Phrases toolbar




Insert translated phrase

If enabled the translation to the selected language is inserted automatically.




Modify Phrases

Consents the visualization and edit of the selected phrase in all the languages on the vocabulary. Pressing **“Modify”** the changes are saved.

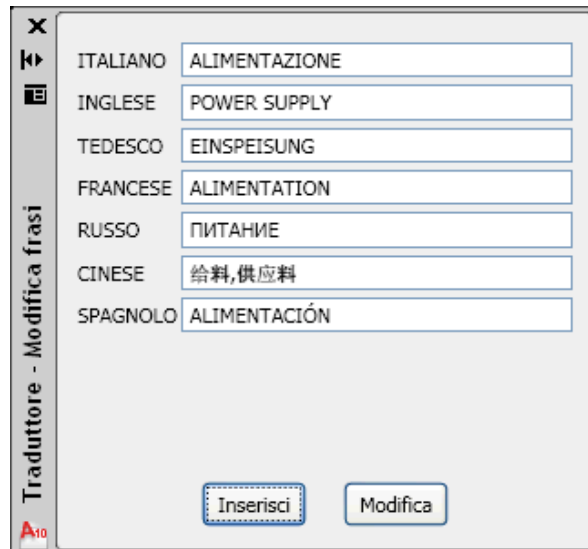

Pressing **“Insert”** the new phrase is inserted along with the changes made.

To memorize definitively the modifications made (and the new phrases) in the Translator database, press the **“Save Changes on the Phrases DB”** button.

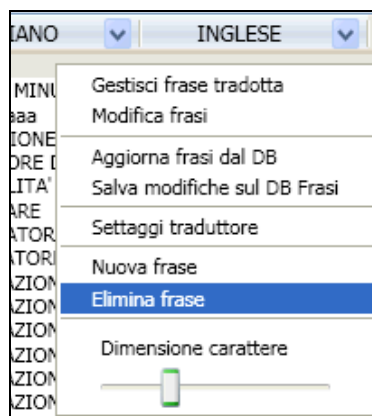

To delete a phrase, it is possible to use the **“Delete Phrase”** command on the mouse right-button menu.

The **“New Phrase”** command inserts a new empty row.

The horizontal cursor allows the dimensioning of the characters height on the phrases list.



Save Changes on the Phrases DB

Consents the registration of the changes and the new phrases “locally” on the translator database (see [“12.5 Phrase database”](#)).

The changes that were not saved definitively will be available until the closure of the drawing.



Update Phrases DB

Allows to load an updated Database.



Translator Settings


Access directly the configuration environment [“12.4 Translator settings”](#).

12.3 Translation



Pop-menu > Util

The (optional) translator module allows the replacement or insertion of comments in a foreign language based on the text and attributes on diagrams, on lists, function lists, symbol lists, indices, etc. Phrases may be translated whether they are generated using the Text and Dynamic Text commands or the specific translator blocks and any other configured symbols (see Sect. 12.4).

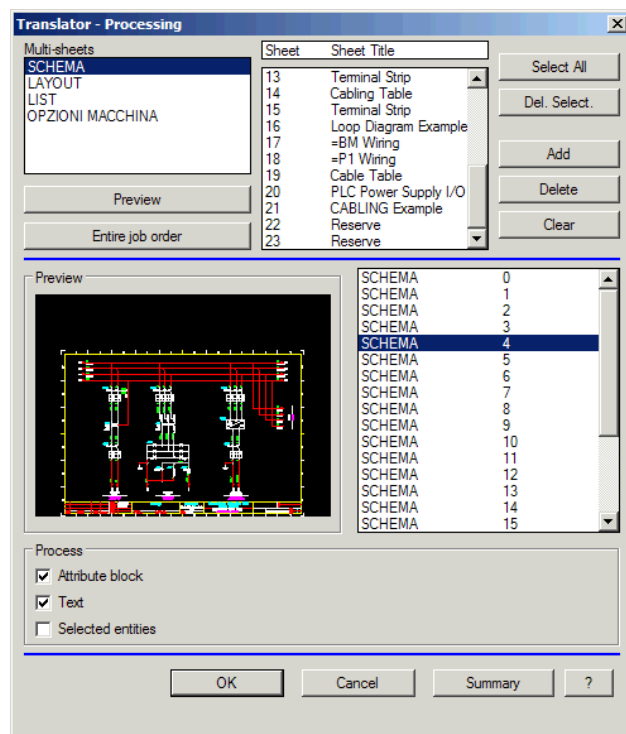

The “**Entire job order**” may be translated directly: all sheets are transferred to the list automatically. Alternatively, the list of sheets to be processed can be customized by selecting the relevant pages from the various multi-sheets.

All pages in the current multi-sheet can be selected using “**Select all**”.

“**Add**” customizes the list of sheets to be translated by selecting the relevant pages from the list.

The list of sheets to be translated can be changed by removing one page at a time (**Delete**) or all at once (**Clear**).

Comments to be translated are extracted depending on the type of filter, whether applied to blocks, text or to selected objects.



When sheet “0” is inserted in the list of sheets to be translated, the **Master** and any other entities drawn on layer 0 are processed.



WARNING : It is possible to translate phrases created by the **Text** and **Testodin** (dynamic) commands, but not those created by **MText** (multiple).

Texts Processing acts only on text considered to be valid in accordance with “**12.4 Translator settings**”.

Blocks Processing acts on comments contained in the valid symbol attributes according to the “**Processed blocks**” (see Sect. 12.4).

Selection Processing acts on both selected text and blocks on the drawing.

On completion of sheet scanning, the comments to be translated are transferred to a list. The process is enabled by pressing **Translate**: “>” indicates the phrases translated by the process. These are transferred back to the drawing by pressing **Update Drawing**.


Before beginning translation, it is advisable to check certain settings:

Dictionary Selection of the dictionary (database) with which to process the job order (**all dictionaries are contained in the Trad.MDB file**).

Original language This is the language of the phrases used on the drawing.

Translation Selection of the language to translate into: choose from those available in the dictionary used.

Delete Use to delete phrases not to be translated from the list.

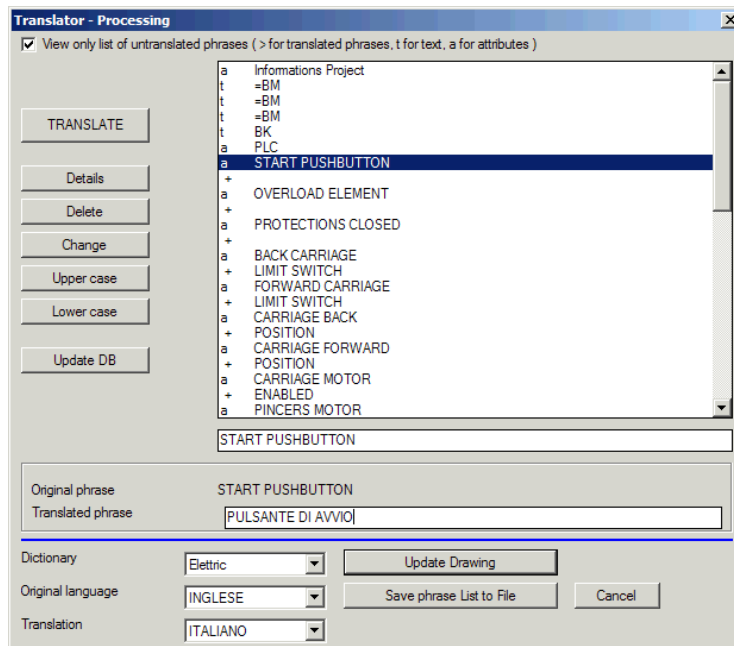

Every phrase has a symbol:

"t" is text.

"a" is an attribute.

"+" is the 2nd attribute (second line in the symbol).

">" is a translated phrase.

- Translate** This is the command that activates translation. The phrases corresponding to the original language are searched for in the database. At the end, only the unmatched phrases remain on the screen. Disabling "**View only list of not translated phrases**" allows for checking of translations assigned to the phrases marked ">".
- Change** All phrases present can be changed in terms of content.
First select the phrase, then alter it. Clicking on "**Change**" confirms local update (the new phrase is not stored in the database).
- Update dB** Not translated phrases can be translated manually during this phase and stored in the current dictionary for future use.
First select the phrase to be translated, then insert the translation in the second line and store it by pressing "**Update DB**". The new phrase is automatically translated and marked with ">".
- Upper case** Transforms the selected phrase completely into upper case letters.
- Lower case** Transforms the selected phrase completely into lower case letters.
- Details** By selecting a phrase and pressing "Details" you can view the complete status. For attributes: the Tag containing the phrase and name of the block it belongs to are shown. For text: the Colour, Layer, Height, Angle, Width factor, Inclination, Style and Insertion point are shown.

At the end of the process, only the not translated phrases are displayed.

Once all the phrases have been translated, corrected and checked, press **Update drawing** to activate insertion of the translation into the drawing in the positions indicated in "**12.4 Translator settings**".

ALIMENTAZIONE AUSILIARI 110V 110V POWER SUPPLY	CONTROLLO LINEA 1 LINE 1 CONTROL
ALIMENTAZIONE AUSILIARI AUXILIARY CIRCUIT POWER SUPPLY	

Save to File enables creation of a file containing the entire list of phrases in the original language. This operation is useful for transferring phrases to other systems.

12.4 Translator settings



Pop-menu > *Util* > *Translator Utility*

Translator configuration is explained in this section.

The appropriate configuration must be used to **set the features of the blocks and text to be processed.**

The default configuration is stored in the **Trad.cfg** file contained in the program Librerie\Vocabola directory.

"**C**hange" enables a new configuration file to be loaded; "**N**ew" generates a copy of the current database with a different name.



- **Color text processing**
- **Translated text features**
- **Translation position**
- **Processed blocks**
- **Force style**
- **Constant**

Color text processing

It is possible to generate text search filters based on the colors used.

Press "Add" or "Delete" accordingly, to formulate a list of colors (clicking twice on the orange rectangle enables direct access to the color availability window):

All except	All text parts are processed except those in the colors inserted in the list.
These colors only	All text parts in the colors inserted in the list are processed.

Example. If the "Terminal box" function is used in drawing the diagram (see Sect. 6.1), text appears in the upper left-hand corner of the box to indicate the panel to which the box belongs. This writing is in red, by default (see "*Terminal box*" Sect. 4.2): to exclude this from translation, insert color 1 (red) in the list and enable "All, except".



To exclude lists, legends and bills of materials from the translation, simply put the text to be excluded in colors to be omitted.

Translated text features


This section sets up the features to be assumed by the translated text. Alternatively, the same features as the original text may be used.

Colour	Enter the number of the color to be used for the translated text (clicking twice on the colored rectangle enables direct access to the window of available colors). The default color is 6 (magenta), like the translation attributes available in " <i>12.1 Translator blocks</i> ".
Height	Enter the height of the text to be used for the translated text.
Width factor	Value 1 retains the width of the original font, below 1 narrows the text and above 1 widens it.
Inclination	This value, expressed in degrees, indicates the inclination of the characters. The default is 15°, as for the available translation attributes for translation symbols (see Sect. 12.1).
Style	This is the list of text styles created by the "Style" command.

Translation position

This section describes how to configure the position of the translated text in relation to the original.

Above / below the original text

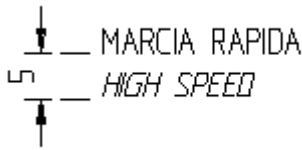

The translated text will be inserted below (or above) the original text, at the distance indicated in the "Offset" field (default 5 interline).

Add to the original

MARCIA RAPIDA\HIGH SPEED

The translated and original text becomes a single line (assuming the characteristics of the translation).

A prefix character should be inserted to separate the two comments: in the example, the "\" symbol has been used.

This parameter also works on the symbol attributes.


Replace with original

HIGH SPEED

The translated text replaces the original and the initial phrase is deleted.

This parameter also works on the symbol attributes.

Interline \ Spacing

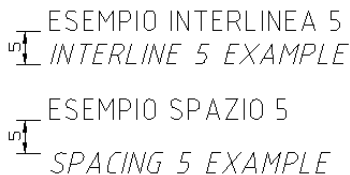

Setting of the offset mode (considers the distance required to insert the translated text).

Offset

The offset is the distance at which to insert the translation and works in conjunction with the options "Below original text" and "Above original text".

Prefix


This is used to indicate a separator in the "Add to text / Orig. Attributes" option (characters or text).

Suffix

It is possible to specify a suffix to be associated with the translated text.

Processed blocks

This section allows configuration of **the Blocks to be processed** and specification of the attributes (tags) to be translated and those to host the translation.

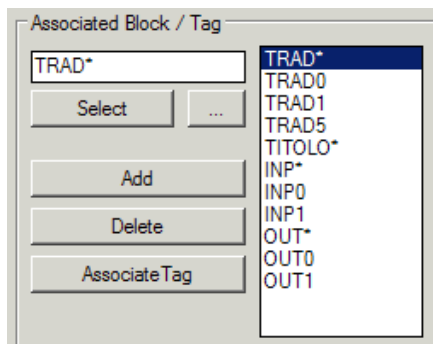

A list of symbols must be formulated:

Use **Select Block** to list all symbols used in the multisheet. Choose these one by one and use **Add** to insert them in the list.

Use **Select <** to transfer the name of the block onto the drawing.

Use **Add** to insert the chosen or selected block in the list and **Delete** to remove it.




Select "TRAD*" to produce a list of all TRAD blocks.

The example shows a list containing both TRAD* and TRAD2; this means that the TRAD symbols configuration is valid for all symbols except TRAD2.

Associate Tag

For every block in the list, the combination of attributes (tags) must be configured, e.g. for the translation of sheet titles:

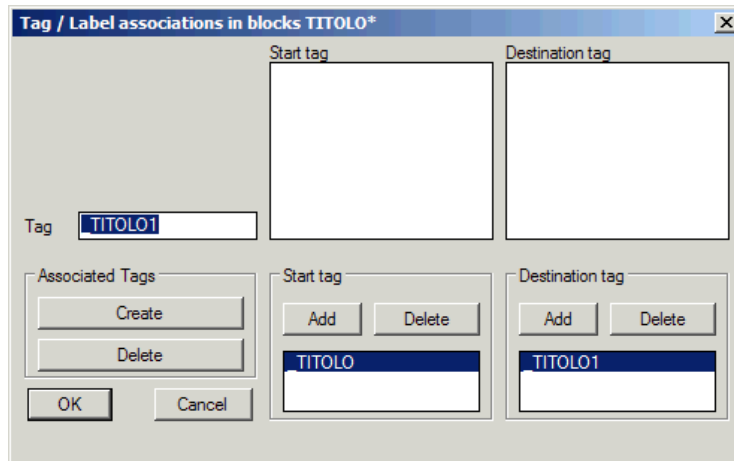

Title2 is the symbol on the drawing which relates to the "Sheet title" (see Sect. 3.18):

_TITOLO
_TITOLO1

The symbol is made up of two attributes:

_TITOLO for the original language and _TITOLO1 for the translation


"Tag List" displays a list of symbol attributes:

1. First, select "_TITOLO" and press "Add" under "Start Tag".
2. Next, select "_TITOLO1" and press "Add" under "Destination Tag".
3. Press "Create" to combine the two.



The TITOLO* block configuration is valid for all title symbols.

Example - comment translation:

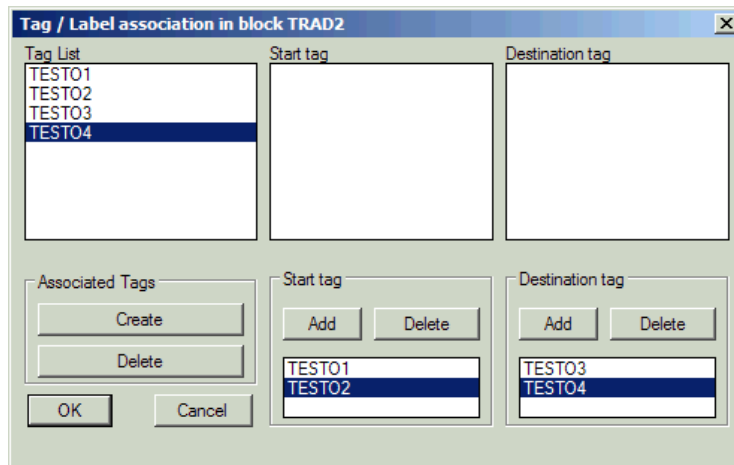

Trad2 is a symbol specifically for translations, found in "12.1 Translator blocks":

TEST01
TEST02
TEST03
TEST04

The symbol is made up of 4 attributes: TEST01 and 2 for the original language, 3 and 4 for the translation.

"Tag list" displays a list of symbol attributes:

4. First, select "TEST01" and press "Add" under "Start tags", then repeat the operation for "TEST02".
5. Next, select "TEST03" and press "Add" under "Destination tags", then repeat the operation for TEST04.
6. Press "Create" to combine the two.



 
The TRAD* block configuration is valid for all TRAD symbols.

Use "**Delete**" to remove incorrect combinations.

TESTO1+TESTO2 means that the complete original phrase constitutes the sum of the contents of these two; the translation is to be inserted in the space represented by the 2 lines of TESTO3+TESTO4. If the start and destination tags coincide (same tag), the translation is written over itself.

Force style

This setting **forces the text style** to be associated to translated phrases (both attributes and texts).



Pressing button "...", you open the "**Language–Style association**" configuration dialogue box.



On

Style associated to the translation depends on the **Language–Style Association**.

Each language in dictionary has its peculiar style and fonts, used to translate both texts and attributes (symbol tags).



Off

Style associated to the translation does **not** depend on the **Language–Style Association**.

Style set in "**Translated text features**" is used for texts.


Style defined in block attributes is used for symbol Tags.



toggling on this option enables the UNICODE[®] 16 character set support, allowing to manage easily languages using alphabet different from English such as Russian, Chinese, Japanese.

Language–Style association

Using this dialogue box you can associate **a specific text style to each language in dictionary**, that will be applied to translated phrases. These associations are used when the setting "**Force style**" is toggled 'on'.

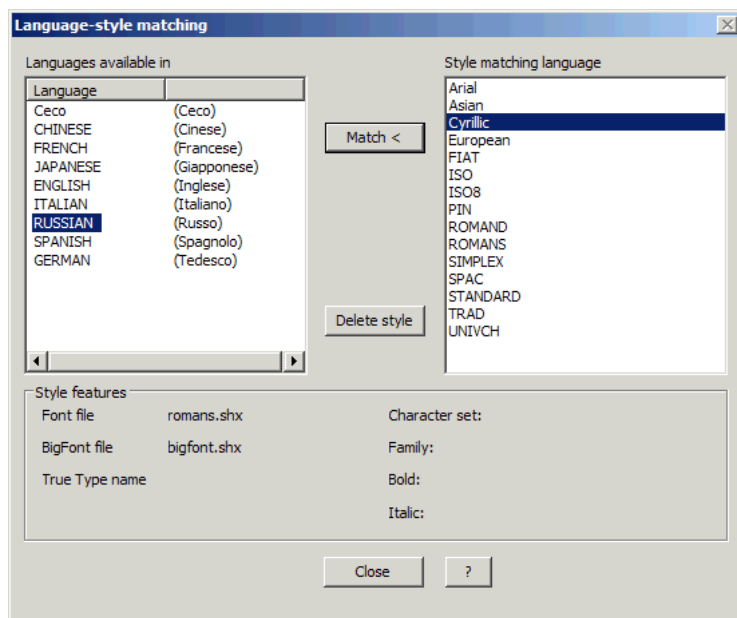

Languages in dictionary:

all dictionary languages stored in Trad.Mdb are listed there.

Style associated to the language:

list of all the styles stored in the current multisheet (using command "Style"), plus factory styles **Asian**, **Cyrillic** and **European** (and others) stored in Trad.Mdb .



Styles Asian and Cyrillic are UNICODE[®] 16 ready, and can be used to manage languages such as Russian, Chinese and Japanese.

Constant phrase

This setting establishes the **2 delimiter characters** that determine the fixed or constant part of a phrase to be translated. This parameter enables phrases to be managed using the **"wild card"** "*" symbol.



(See *"Wild card" symbol*).

Example:

Part of in-common phrase

Separator characters: [] *

In this example, phrases are inserted in the drawing using the delimiter characters specified in the settings: [].

Situation of phrases 1 and 2 on the drawing before translation:

Phrase1: **[110V] POWER SUPPLY**

Phrase2: **[24V] POWER SUPPLY**

In *"12.5 Phrase database"* a **single phrase with wildcard:** " * POWER SUPPLY" with the relative translation "ALIMENTAZIONE AUSILIARI * " produces:

Situation of phrases 1 and 2 on the drawing after translation:

Phrase1: **ALIMENTAZIONE AUSILIARI [110V]**

Phrase2: **ALIMENTAZIONE AUSILIARI [24V]**



The delimiter characters must not be used for phrases in the database, but only for those to be translated in the drawing. The asterisk (*) "wild card" character must be used in the database.

12.5 Phrase database




Pop-menu > *Util* > *Translator Utility*

The translation is based on the exchange of phrases contained in the databases (dictionaries). **All dictionaries are contained in the Trad.MDB file** located in the Libraries\Dictionary directory and each one is divided into multiple languages (Italian, French, English, etc.).

Press **New dictionary** to create new dictionaries and duplicate already existing ones in order to change them. Use **Delete dictionary** to remove them.

Each dictionary can be expanded with new phrases of a maximum **255** characters in length; there is no limit to the number of languages. Phrases can be added manually or by using the “[12.6 Importing phrases](#)” function.

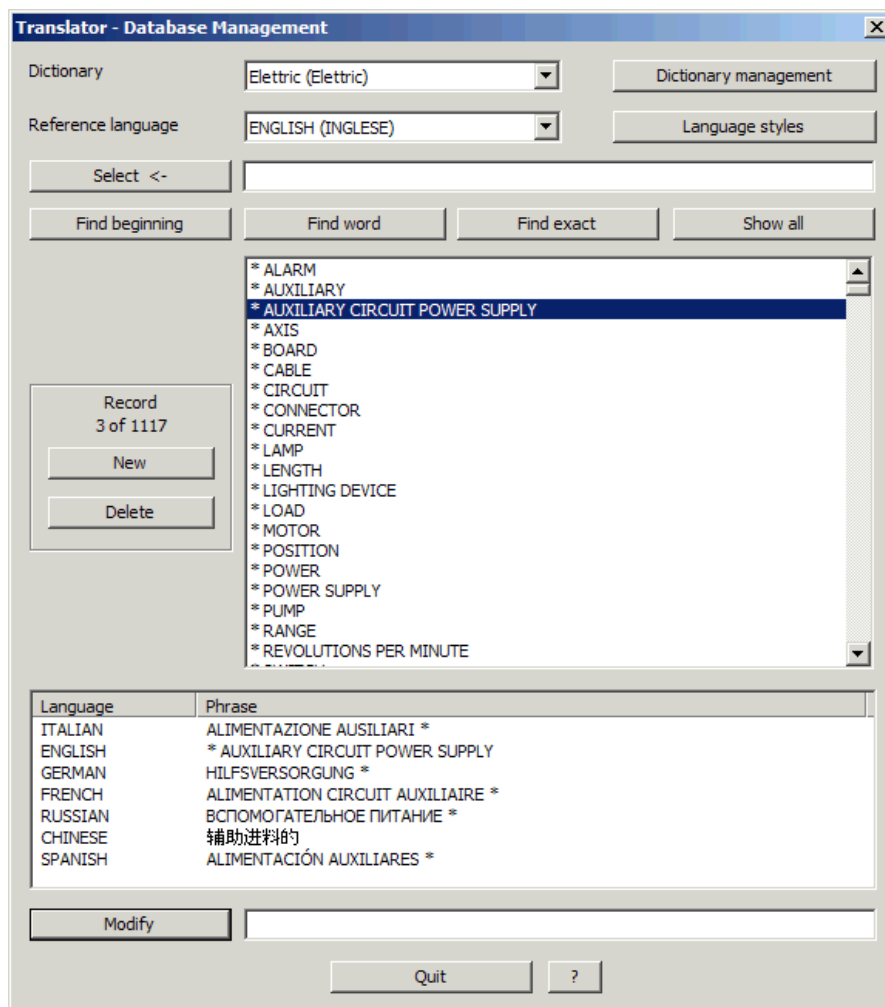

See “[12.9 Language extensions](#)”.

Microsoft Access for Windows can also be used to customize the dictionary, **but it is important not to alter the structure of the file**. These change operations are not advisable for less experienced users.



Button “Language styles” displays the dialogue box where you can associate languages stored in dictionary to a specific text style. See “[Language–Style association](#)” Sect. 12.4.


Phrase filter

Filters can be used to check the content of the current dictionary. Enter the characters or words to be filtered on the top line (or press the "**Select <**" button to retrieve the phrase to insert into the dictionary directly from the drawing).

Search Beginning	Phrases beginning with the initial letters indicated are searched for and displayed in the "Record list".
Search for Word	All phrases containing the word indicated are searched for.
Search for phrase	The search is based on an entire phrase (this can be retrieved from the drawing using the "Select <" button); if this does not exist in the current dictionary, it must be stored in the system.
View All	The entire currently stored dictionary is displayed in alphabetical sequence without any search filter.

Update existing phrases

Select the phrase to change from the "Record list", in order to see what languages are present in the dictionary and which of these languages the phrase is translated into. In the example, the phrase "Alimentatore" has been selected, which can be presumed to have no associated translation in French:

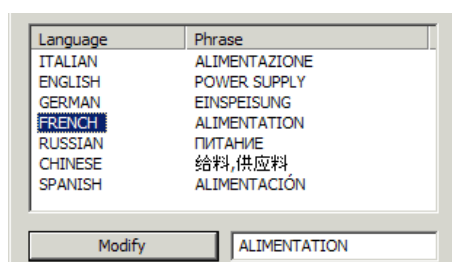

Updating phrases

1. Click on French.
2. Enter the translated phrase.
3. Press **Modify** (or Enter) to confirm.

The phrase is registered in the current dictionary.

To modify or correct existing phrases use the same procedure.

Enter new phrases

To insert new phrases in the database, first click on **New** to view the languages in the dictionary. With the new phrase "BREMSE", for example:



Entering a new phrase

1. Press the **New** button.
2. Click on German.
3. Enter the phrase "BREMSE".
4. Click **Change** (or Enter) to confirm.
5. Repeat the operations (2), (3) and (4) for English, French, Italian, etc.

The phrase is registered in the current dictionary.

The database can be expanded by using the "[12.6 Importing phrases](#)".



Windows Microsoft Access can also be used to customize the dictionary, but it is important not to alter the structure of the file.

"Wild card" symbol

The "wild card" refers to the asterisk (*) symbol used in the database phrases. The asterisk is replaced after a translation by the content of a phrase on the drawing placed **between the delimiter characters** (which determine the constant part of a phrase).



(See "*Constant*").

For example:

Language	Phrase
ITALIAN	ALIMENTAZIONE AUSILIARI *
ENGLISH	* AUXILIARY CIRCUIT POWER SUPPLY
GERMAN	HILFSVERSORGUNG *
FRENCH	ALIMENTATION CIRCUIT AUXILIAIRE *
RUSSIAN	ВСПОМОГАТЕЛЬНОЕ ПИТАНИЕ *
CHINESE	辅助进料的
SPANISH	ALIMENTACIÓN AUXILIARES *

The "wild card" character has been inserted at the end of the phrase "ALIMENTAZIONE AUSILIARI *".

Note that the position of the "wild card" varies **in the respective translations**. Notice how it is placed at the start of a phrase in English.

Part of in-common phrase	
Separator characters	[] * []

In this example, phrases are inserted in the drawing using the delimiter characters specified in [12.4 Translator settings](#). E.g.: [].

Before translation: the "constant phrase" part is **110V** for phrase1 and **24V** for phrase2.

Frase1: ALIMENTAZIONE AUSILIARI [110V]

Frase2: ALIMENTAZIONE AUSILIARI [24V]

After translation: the "constant phrase" part is placed at the start of the phrase, as specified in the database of phrases for translation into English.

Phrase1: [110V] POWER SUPPLY

Phrase2: [24V] POWER SUPPLY

Several joker characters may be used for each phrase. The position of the jokers is also kept in the translation, e.g.:

Italian: **LAMPEGGIANTE * - MOTORE ***


English: *** LIGHTING DEVICE - * MOTOR**

To translate: **LAMPEGGIANTE [24V] - MOTORE [0.5kw]**

Translated: **[24V] LIGHTING DEVICE - [0.5kw] MOTOR**

Dictionary management

Pressing the “Dictionary management” button enables access to a series of functions useful for creating or duplicating new dictionaries, or for importing dictionaries customized in previous versions.

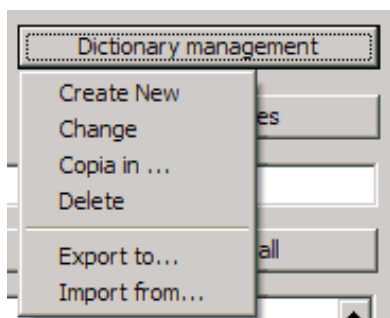

“Dictionary management” comprises:

- **Create new**
- **Change dictionary**
- **Copy dictionary**
- **Delete**
- **Export file**
- **Import file**




See “12.9 Language extensions”.



All dictionaries are stored in file Trad.Mdb located in folder Vocabola.

Create new

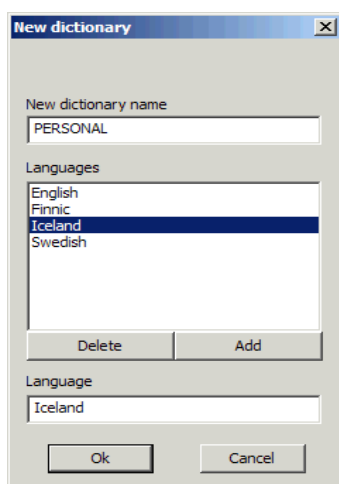

The example shows the creation of a new dictionary, entitled **PERSONAL**: the languages are entered in the appropriate space and inserted in the list by pressing **Add**.

The languages shown in the list will only form part of the new current dictionary (New); other dictionaries will not be altered.

The newly created dictionary is empty (no phrases).

Copy dictionary



This function first asks which of the existing dictionaries are to be duplicated, then presents a list of the languages contained in the original database.

The list of languages can be changed; it is also possible to add or remove new items.

The example shows the creation of a new dictionary entitled **COPY**; this is a duplication of the previous **PERSONAL**, from which the Italian language has been removed to be replaced with Swedish.

Acquire Content The phrases present in the original dictionary are retained in the copy, relative to the languages kept in the new database. Otherwise, the newly generated dictionary is empty (of phrases).

Change dictionary

This enables changes (additions and deletions) to languages in existing dictionaries. The dictionary currently in use is prompted as the default.

Import file

Allows you to create a dictionary by getting the phrases from a file (XLS or CSV). Importing can only take place **if there are at least 2 languages** in the file to be imported.

Another condition is that at least one of the languages be present in the dictionary, to have a reference language at the time of importing; if a language does not exist it is added.


For each phrase (or file record), if it corresponds with the “reference language” the dictionary is updated, otherwise a new phrase is inserted (in the languages contained in the importing file).

At the end a message appears with the count of the updated phrases and the language used as reference.



The first line of the file must contain the name of the languages it contains.

Export file

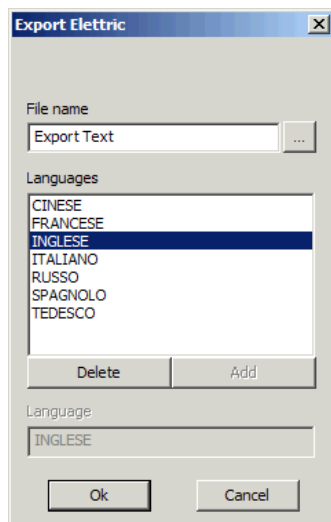

This enables a .CSV (or Xls) file to be created by taking phrases from an existing dictionary.

Exporting occurs exclusively for the languages selected in the list: the figure shows the export of only two of the four available languages.

A compatible .CSV (or Xls) file is created for any later importing into a dictionary using “**Import file**”.



To ensure compatibility, do not remove from the file the first line containing the name of the languages.


12.6 Importing phrases



Pop-menu > *Util* > *Translator Utility*

This command expands the dictionary database with new phrases, by **taking them directly from symbols on the drawings** or by importing a file.

Use the “**Enter new phrases**” unction in the “**12.5 Phrase database**” command to add phrases manually, one at a time. Use **Import phrases** to **insert all phrases in a job order, including their respective translations, into the dictionary.**

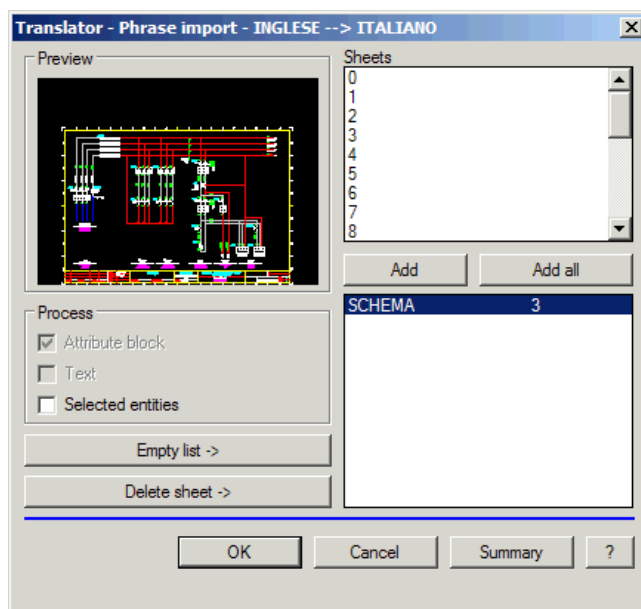

The comments are extracted from the sheets in the list.

Press “**Add all**” to import all the sheets into the list automatically.

Alternatively, use “**Add**” to customize the sheet list by choosing the pages of interest from the list.

The list of sheets to be processed can be changed by removing one sheet at a time (**Delete sheet**) or all together (**Clear list**).



To process a complete job order, comments need to be re-imported to all the multi-sheets that belong to the job.



WARNING: It is only possible to import the **phrases contained in the symbols** that are declared in the configuration (see Sect. 12.4), not those contained in the text.

Blocks Enables importing of comments contained in the valid symbol attributes based on the “**12.4 Translator settings**” configuration.

Selection Enables processing of the blocks selected on the drawing.

Dictionary	Electric
Original language	ENGLISH
Translation	ITALIAN

The import configuration is activated using the “**12.2 Insert phrases**” command: the example shows that the phrases imported expand the “Electric” dictionary for English and Italian.

The comments to be imported are listed on completion of sheet scanning. The imported comments, with respective translations, are indicated by the symbol “>”.


Delete Removes the phrases that are not to be imported.

Change Not translated phrases can be translated during this operation: simply select the relevant phrase from the list and type the equivalent comment (for the configured language) in the “Translation” field.

By pressing “Change”, the phrase is assigned the symbol “>”.

Update dictionary The phrases in the list are inserted in the dictionary, even if no translation is provided.


When **Update dictionary** is pressed, the function message advises of the possible presence of not translated phrases.

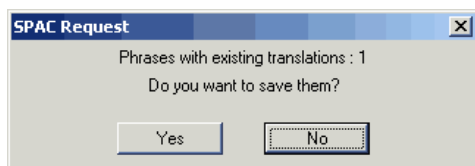

Press **Yes** to insert all phrases in the dictionary. The example shows that 1 phrase has not been translated.

There is no update in case the "source phrase" already exists in dictionary.

The phrases without translations can easily be identified. They can be viewed by filtering the list with the command "**View only not translated phrases**":

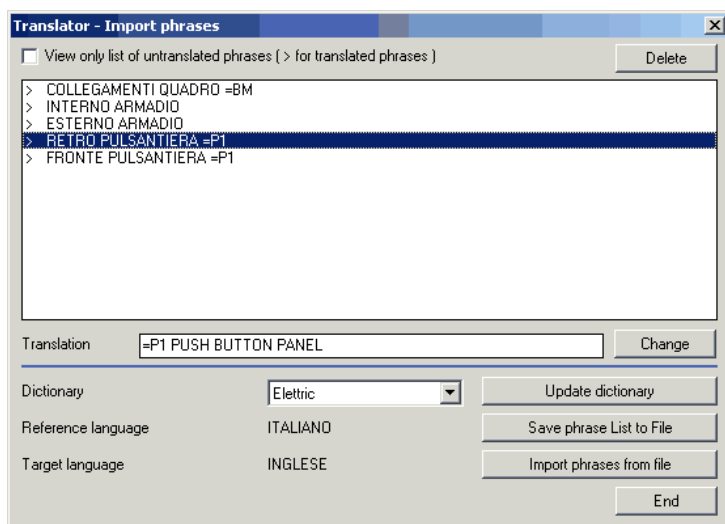

With "**Save phrase list to file**", the phrases can be exported (only those from the reference language) in ASCII format (.txt file).

This operation is carried out if a third party intends to complete the translation, using the Windows Notepad text editor.

The completed file (with translations) is imported using "Import Phrases from File". Original phrases are distinguished from translated phrases by the presence of the separation character, ";".

Example of valid file for importing purposes:

RETRO PULSANTIERA =P1; =P1 PUSH BUTTON PANEL
ORIGINAL PHRASE; TRANSLATED PHRASE



Phrases must not contain the character ";", as this is used by the program to recognize the end of the reference language and the beginning of the translated phrase.



WARNING: the dictionary and languages (reference and destination) are set up via "[12.2 Insert phrases](#)". If this is not carried out, default data from the last translation is used (see Sect. 12.3).


12.7 Shift within block



Pop-menu > *Util* > *Translator Utility*

Text

This command enables a normal text to be moved inside the attribute (line) of a TRAD symbol under “12.1 Translator blocks”.

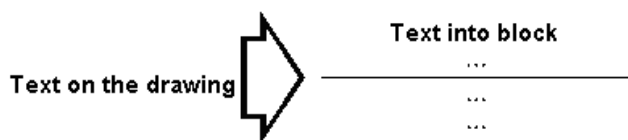


The original start text on the drawing is automatically deleted (use the “Oops” command to restore it).

The command asks for line identification each time text is to be inserted.

Function

Use this command to copy the contents of the Function1 and Function2 attributes for a component on the diagram within the attributes (lines) of a TRAD symbol.

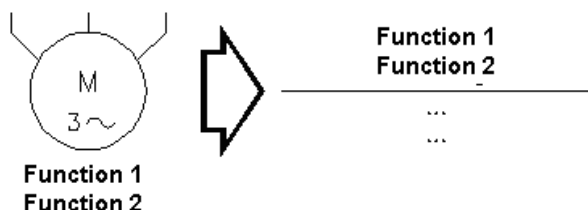

The contents of the original start symbol attributes are retained.


The position at which the text is inserted is the same as that configured in “Associate Tag” (see Sect. 12.4).

12.8 Delete translation



Pop-menu > *Util* > *Translator Utility*

This command enables **translated phrases to be deleted from the drawing**. This entails the removal of all phrases inserted during the various stages of “12.3 Translation”.

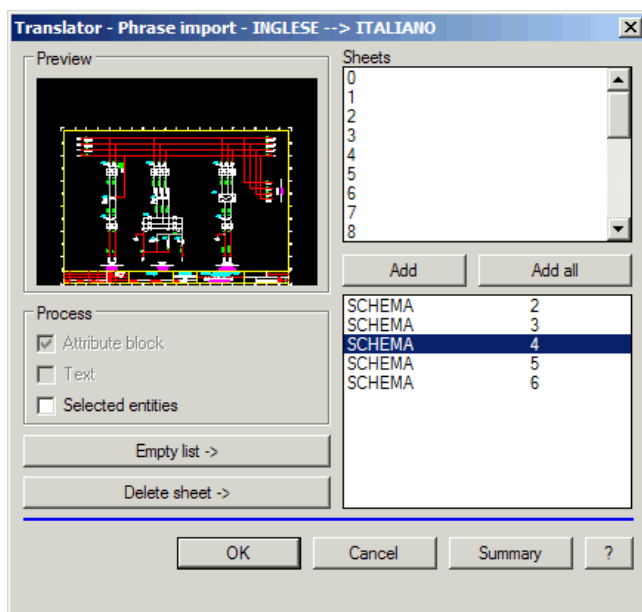

Deletion occurs on the sheets inserted in the list:

Use “**Add all**” to select all pages of the current multi-sheet and insert them in the list.

Use “**Add**” to customize the list by selecting only the pages of interest.

The list of sheets to be processed can be changed by removing one sheet at a time (**Delete**) or all at once (**Clear**).

Translated comments are deleted according to the type of filter applied to blocks, text or selected objects.

12.9 Language extensions

The Translator module is enabled to support **UNICODE® 16 character set**. Basically this let you manage languages using non-Latin alphabets such as Russian (Cyrillic), Chinese, Japanese (ideograms).

Differently from ASCII table, that can figure a (theoretical) maximum of 256 characters or symbols, UNICODE® 16 system can figure a (theoretical) maximum of 65536 (= 2¹⁶). Thus is possible to manage Chinese, Japanese, Korean ideograms and alphabets such as Cyrillic, Arabic, Greek and Hebrew.

The AutoCAD supports UNICODE® 16 characters indirectly, using its own internal coding. This to get over the internal coding (ASCII 8 bit) of text and attributes strings. Simply an ideogram like < 録 >, the 37636TH symbol of UNICODE set (9304 HEX) is registered as \U+9304.

To view this strings correctly you need to **install the language extensions** for Windows® 2000 / XP (or above). When you choose to use SHX fonts instead of TTF, remember to attach them to the job order before sending it to your customers.



See “Installing on Windows® XP”.




Language extensions are required when using eastern languages. OS Windows® XP countrified for west-Europe are natively ready to manage languages such as Italian, French, English, German, etc.

Installing on Windows® XP




Make sure to have the Windows® XP installation CD. Open the Control Panel from Start menu and double click on “**Date, Time, Language and International Settings**”.

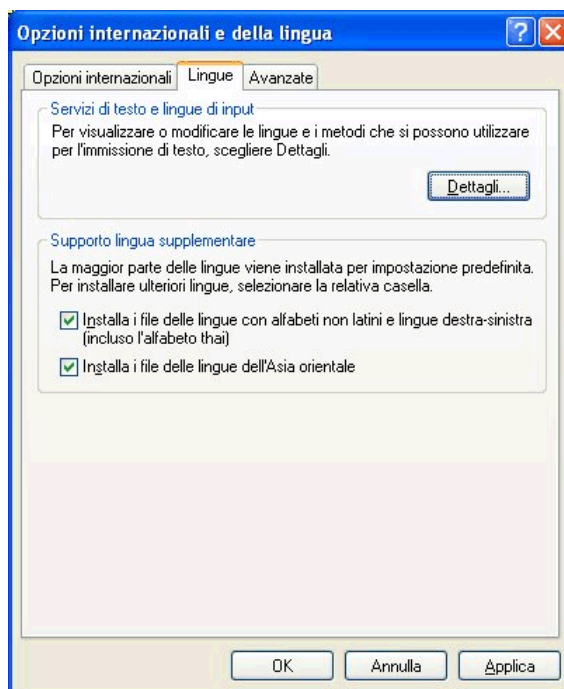

Windows® XP language extensions

Double click on “**International Settings**”.

Select language groups you are interested in, listed in section **Languages** – “**Additional language support**”, and press OK.

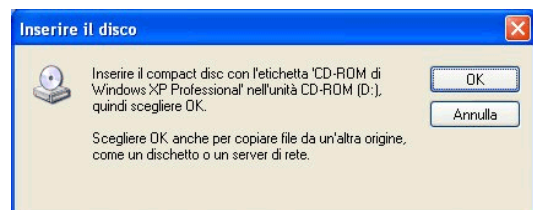

You are asked to insert the Windows® XP installation CD-ROM, eventually to reboot the system.

12.10 Edit translation



Pop-menu > **Util** > **Translator Utility**

Command **Edit Translation** let you edit texts and attributes containing both ASCII and UNICODE[®] 16 character set in WYSIWYG mode, not yet supported by AutoCAD commands.

Concerning dictionaries, the dialog box interfacing with the database is UNICODE[®] compliant, permitting direct modifications (kana keyboard, copy and paste operations) and import of external resources (XLS, TXT, CSV file format).

Concerning commands, “Text”, “MText” and “Ddattte” don’t figure non-ASCII characters, but you can get over this problem using “Edit translation” command.

Test editing is not limited to copy/paste operation from existing texts: you can type new phrases directly, too. You need to **install a proper keyboard layout** as described hereafter, then choose one of the following input methods:

1. Replace physically the keyboard, or apply a “key-mask” to the current keyboard.
2. Use a bi-language keyboard (e.g.: English/Czech), where each key has more than one character printed on.
3. “**Using on-screen keyboard**” available in Windows[®].




The keyboard shortcut of this command is “Edtt”.

Installing a keyboard layout

Installing different keyboard layouts permit to associate **many characters to a single physical key**. For example pressing the [Q] key of the English keyboard with a Cyrillic layout active the character [Й] appears instead of the usual 'Q'.



Open Control Panel from Start menu and double click on “**Date, Time, Languages and International Settings**”.

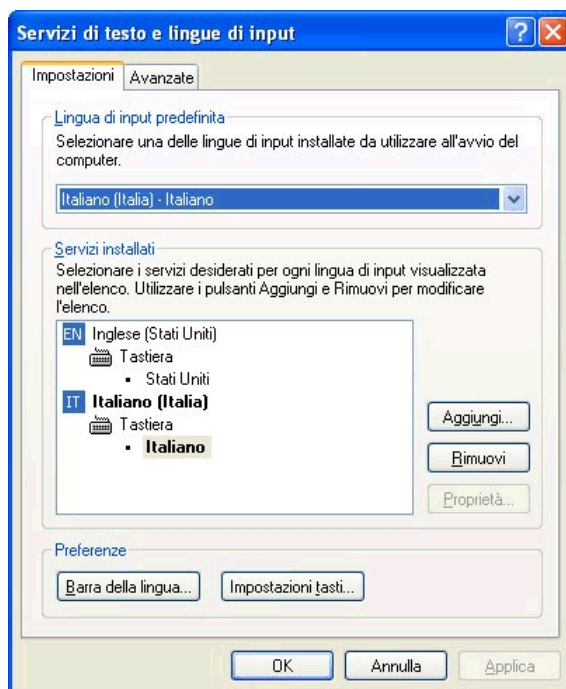

Double click on “**International settings**”.

Press **Details** button on section **Languages** – “**Text services and input language**”, then press “**Add**” and select the Language-Keyboard associations you are interested in.



Eventually pressing button “**Language bar** ” you can make visible on the application bar, or as floating toolbar, the current layout indicator.



Clicking the language indicator  you can change the layout applied to the active application window.

Note: the layout is peculiar to the application it was applied; changing application you change the keyboard layout, too.

Using on-screen keyboard



The on-screen keyboard is a standard application of Windows® 2000 and XP. It can be run from menu:



See “12.10 Edit translation”.

Programs → Accessories → Easy access → **On-screen keyboard** .



It's a convenient tool because costless, supporting as many keyboard layouts as you installed. No need of other physical input tools to change from keyboard to keyboard.

For example, try to type a Cyrillic text (you must have enabled the Russian keyboard previously):

1. Run the on-screen keyboard.
2. Place the cursor in the point you want to type the text.
3. Select the **RU** layout in the language bar
4. Now if you select the on-screen keyboard, it has Cyrillic characters on each key

finally you can **click with the mouse the virtual keys** to type the desired Russian words.

13 Plc

13.1 Plc I/O bits



Pop-menu > Util

The program includes a set of commands to draw and deal with input and output boards for Programmable Logic Controllers (PLCs).

Drawings can be carried out in either of two different ways according to the graphic requirements of the design.

- **Individual I/O bit design**

The bits are drawn non-consecutively (not grouped) on different sheets of the functional electrical diagram. The first bit must be completed using the initial “Board terminals” symbol to enable inclusion in the Bill of Materials.

- **I/O board bit design**

The bits that make up a board are drawn consecutively (grouped together). The graphic design must be completed by adding the “Board terminals” to enable inclusion in the Bill of Materials.



Use command “13.2 Symbols library” to access the I/O boards.

Individual bits

This command is used to insert individual bits into the input and output boards of the PLC. This is very useful for those who wish to carry out a design by positioning the bits on different sheets of the functional diagram (rather than having them all together on dedicated sheets).

SLOT	PIN
QUADRD	
EQ.1	
TFO	
SEGNALE	
COMMENT01	
COMMENT02	
COMMENT03	
COMMENT04	

Individual INP2.dwg bit

The input bit symbols must be named **INPn** in order to be recognized by the various functions, while the output bits must be named **OUTn**.

These symbols contain the attributes necessary to import and export comments and complete summary tables. The information required for this can be entered and changed using the 'Ddatte' command.

Blocks are stored in Board directories. Each .DWG block corresponds to an .SLD image (slide) of the same name that is displayed in the dialogue window.

New symbols can be customized and stored in the same directory that already contains the existing blocks. The name of the block must follow on consecutively from those that already exist (INP5, INP6, etc. for inputs, and OUT5, OUT6, etc. for outputs), with a maximum of 20 symbols for each category (the dialogue box can show a maximum of 20 windows).



If one block is deleted this may prevent blocks with successive numbers from being displayed.



WARNING: The first 'individual bit' in the same board must be associated with a start “Board terminals” symbol to which data for the Bill of Materials can be assigned.

Board

This command makes it possible to insert PLC input and output boards with between 8 and 16 bits into the drawings (the same blocks can be used to build 32-bit boards). Bits must be placed at a distance of either 20 or 30 mm apart (when placed 20 mm apart 16 bits can be drawn on the same A3 size sheet of paper).

These boards are macroblocks made up of “**Individual bits**”, each of which contains the attributes necessary to import and the export comments and complete summary tables. All data for every individual bit will be requested when these are inserted into the drawing.

Input boards symbols must be named **I_PLCn** in order to be recognized by the various functions, while output boards must be named **O_PLCn**.

The necessary data can be entered and changed using the “Ddatte” command.

Macroblocks are stored in the Board directory. Each .DWG macroblock corresponds to an .SLD image (slide) of the same name, which can be seen in the dialogue window.

PLC OUTPUT	DESCRIZIONE	GRUPPO IDRAULICO IN MARCIA HYDRAULISCHE GRUPPE EIN		REFRIGERANTE INSERITO KUEHLMITTEL EIN	
	RIFERIMENTO	FC11		FC12	
	TIPO	TPD		TPD	
	SIGLA	A.Q.1		A.Q.2	
	UBICAZIONE	QG		QG	
	SLOT / PIN	SLOT1	1	SLOT1	2

Output board O_PLC2.dwg complete with start “terminal” for the Bill of Materials.

New symbols can be customized and stored in the same directory that already contains the existing blocks. The name of the block must follow on consecutively from those that already exist (I_PLC5, I_PLC6 etc. for inputs, O_PLC5, O_PLC6 etc. for outputs), with up to a maximum of 20 symbols for each category (the dialogue box can only display a maximum of 20 windows).

Use the “**13.2 Symbols library**” command to access the I/O Boards



WARNING : board terminals may be unnecessary in case you draw the Plc synoptic schema using command “**13.2 Symbols library**”.

The wire numbers for wires that connect the bits on the board can be taken directly from bit name according to the configuration in the appropriate settings (see “Options” Sect. 4.2).



If one block is deleted this may prevent blocks with successive numbers from being displayed.

Board terminals

Board terminals are purely graphic symbols that are used to complete the graphics of an I/O board. **The presence of terminals indicates whether or not a board continues on the next sheets.**

The symbols are stored in the Board directory. Each .DWG terminal has a corresponding .SLD image (slide) with the same name that can be seen in the dialogue window.

New symbols can be customized and stored in the same directory that already contains existing symbols. The name of the block must follow on consecutively from those that already exist (T_PLC16, T_PLC17, etc.), with up to a maximum of 20 symbols (the dialogue box can only display a maximum of 20 windows).



The 'terminal' symbol at the beginning of the board is the symbol to which all data (panel, manufacturer and code) used to calculate the Bill of Materials must be associated (see Sect. 8.1).



WARNING : board terminals may be unnecessary in case you draw the Plc synoptic schema using command “**13.2 Symbols library**”.

Bit numbering

Command for the progressive numbering of the I/O bits on the PLC boards.

The bit name is composed by a **prefix (Literal Base + Numeric Base)**, from a **separator** and an **incremental number (address)**.

The number associated to a bit is incremented progressively from the value selected until a limit imposed by the numbering type (**Octal**, **Decimal** or **Hexadecimal**). After that, the address is reset and the numbering is re-started with the “Numeric Base” increased by 1.

Numeri Bit Plc

Anteprima numerazione

E0.0 E0.1 E0.2

Base Letterale Base Numerica Separatore Indirizzo

E 0 . 0

ADD ADD ADD

Numerazione Formattazione Incremento

Ottale 0 1

Ubicazione

Quadro

=QG Quadro Generale

Gruppo Funzione

CPU = Cpu1

Cpu 1

RACK = Rack1

Rack 1

SLOT = Slot1

Slot 1

OK Annulla ?

The format indicates the number of characters to be used in the address.

The home panel and slot number will appear on all the subsequent bits that are selected.


This command is also useful for compiling the values of the bits contained in 'PLC Summaries' (see Sect. 13.6).



The bit name is made up of a prefix, a separator and an incremental number:

The options available lists contain the most commonly used values but different values can also be entered, for example: X0.0, Y0.0 or INP1\0, OUT1\0 etc.

You will be prompted to select the symbols required. Click on one bit at a time if you have designed a 'single bit' system, or use a "fence" if you have used a board.

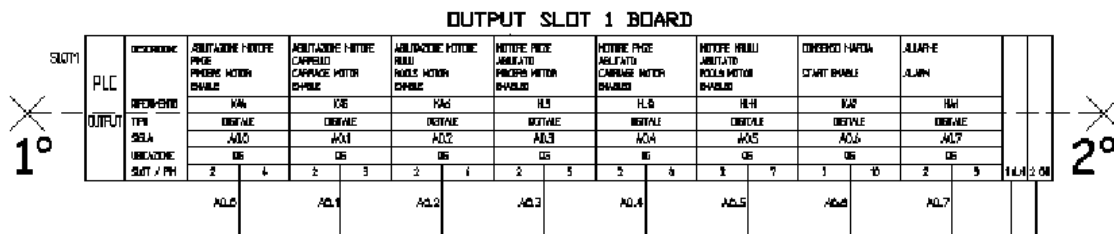

“Fence” selection method for progressive numbering of bits on the board.

Numbering examples

Allen-Bradley PLC-5 Octal Base					
	Type	Separator	Address	Separator	Address
Input	I	:	from 000	/	00
Output	O	:	from 000	/	00

Allen-Bradley SLC 500 Decimal Base					
	Type	Separator	Address	Separator	Address
Input	I	:	from 000	/	00
Output	O	:	from 000	/	00

Omron Decimal Base			Address
Input	from 000 to 099		from 00 to 15
Output	from 100 to 199		from 00 to 15

Siemens Octal Base				
	Type	Position	Separator	Address
Input	E	0 to n°	.	from 0 to n°
Output	A	0 to n°	.	from 0 to n°
An. Input	EW	0 to n°	.	from 0 to n°
An. Output	AW	0 to n°	.	from 0 to n°

Schneider Electric /Modicom TSX Nano Decimal Base				
	Type	Position	Separator	Address
Input	I	0 Base or extension 1 I/O extension	.	min from 0 to 5 max from 0 to 13
Output	Q	0 Base or extension 1 I/O extension	.	min from 0 to 3 max from 0 to 9

Schneider Electric /Modicom TSX Micro Decimal Base				
	Type	Position	Separator	Address
Input	I	Position in Rack from 0 to 10	.	from 0 to 127
Output	Q	Position in Rack from 0 to 10	.	from 0 to 127

Schneider Electric /Modicom TSX Premium Decimal Base					
	Type	Rack Address	Module Position	Separator	Address
Input	I	Rack Address from 0 to 7	Position in Rack from 00 to 10	.	from 0 to 127
Output	Q	Rack Address from 0 to 7	Position in Rack from 00 to 10	.	from 0 to 127

Schneider Electric /Modicom TSX Quantum Decimal Base			Address
Input	1 3		from 0001 (1xxxx)
Output	0 4		from 0001 (1xxxx)

13.2 Symbols library



Pop-menu > Util

This command comprises all the symbols in the PLC library, including customized symbols for each manufacturer according to the product family. The library consists of symbols divided according to the type of use: Board, Summaries, Synoptic and Layout.


Synoptic

The synoptic is a group of symbols in 2D used for the entire design of PLCs (Rack, Power Supply, CPU, I/O Modules I/O, etc.).

The synoptic symbols are identified automatically and counted in the Bill of Materials.

Those elements substitute the symbols "Board terminals".

The symbols are located on Spac folder Librerie\Schede.

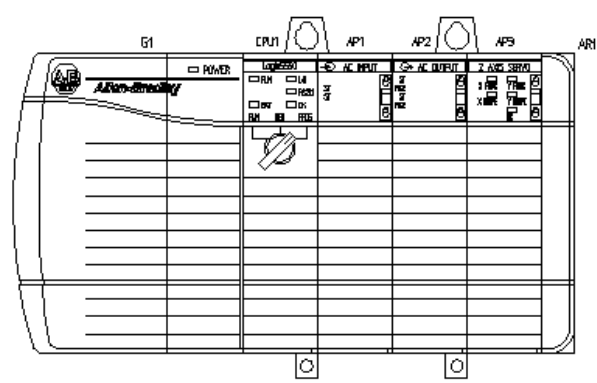

Electric diagram board

The board is represented by the group of bits symbols (Input or Output) and from the different connections.

Used for drawing connections on the electric diagram.

(See "Board" Sect. 13.1).

OUTPUT SLOT 1						
DESCRIPTION	ABUTAMENTO MOTORE POTERE MOTOR ENABLE	ABUTAMENTO MOTORE CARPELLO CAPRAGE MOTOR ENABLE	ABUTAMENTO MOTORE RULLI RULLS MOTOR ENABLE	MOTORE PICO ABUTATO PINCERS MOTOR ENABLE	MOTORE PICO ABUTATO CAPRAGE MOTOR ENABLE	MOTORE RULLI ABUTATO RULLS MOTOR ENABLE
DEFINITION	RAH	RAH	RAH	RLH	RLH	RLH
TYPE	DEFINITE	DEFINITE	DEFINITE	DEFINITE	DEFINITE	DEFINITE
SIGNAL	AO0	AO1	AO2	AO3	AO4	AO5
LOCATION	05	05	05	05	05	05
SLOT / PIN	2	4	2	3	2	6
	AO.0		AO.1		AO.2	

The symbols are located on Spac folder Librerie\Schede (INP and OUT*.dwg).

Summary

Is a table that summarizes the composition of a board with the positional reference of each bit on the scheme along with descriptions and comments.

The "Summaries" are very useful for projects that apply the "Individual bits" design.

The symbols are located on Spac folder Librerie\Schede directory (_RIAS-*.dwg).


Pin	Ref	Bit	Description	Sheet
1	LH-0		LH-0 Group 0 Loss of Field Power	
2			Not Used	
3	M-0			
4	LH-0		LH-0 Group 0	
5	M-1			
6	LH-0		LH-0 Group 0	
7	M-2			
8	LH-0		LH-0 Group 0	
9	M-3			
10	LH-0		LH-0 Group 0	
11	M-4			
12	LH-1		LH-1 Group 1	
13	M-5			
14	LH-1		LH-1 Group 1	
15	M-6			
16	LH-1		LH-1 Group 1	
17	M-7			
18	LH-1		LH-1 Group 1	
19	LH-1		LH-1 Group 1 Loss of Field Power	
20	LH-1		LH-1 Group 1	

Layout


3D symbols for drawing topographic cabinet layouts.

(See Sect. "15.3 Topographic").

The symbols are located on Spac folder Librerie\Quadri\GestTop (LY-*.dwg).

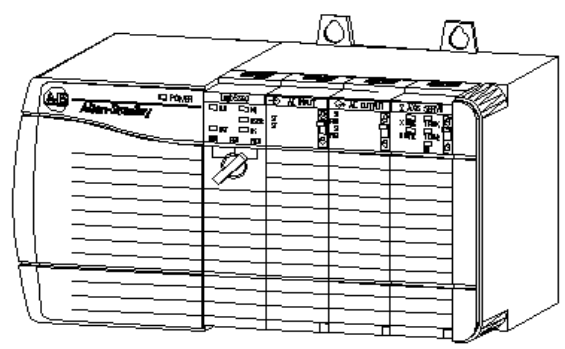


The command dialogue box shows the current archive:

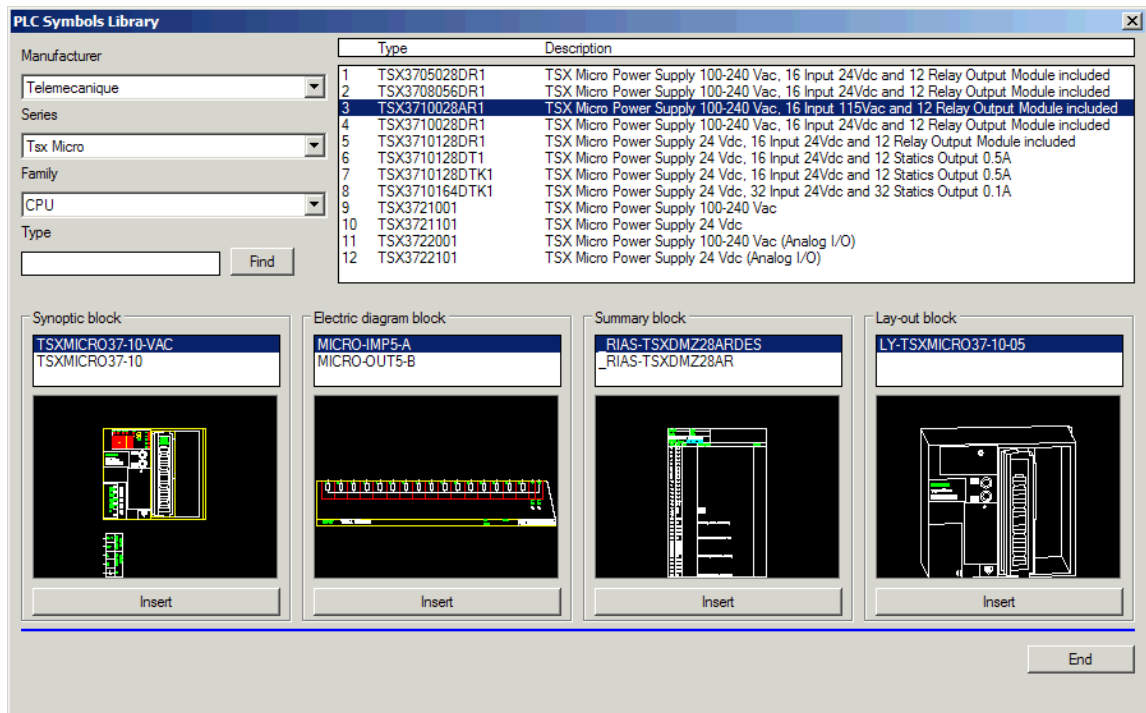

Select the manufacturer, series and family to obtain the list of models contained in the database and the related associated graphic blocks. To insert the block press the “**Insert**” button that corresponds to the type of use required.

 Select image for zoom



Click on the sheet preview image to magnify and enable the display check function. Use – and + to reduce and increase the magnification factor.

Use the **Reset** button to restore default values.



See “16.7 Catalogue Symbol Libraries”.



You can customize the symbol library using command “13.3 Plc”.



WARNING : To insert more easily frame or rack mounted **Layout** symbols, you are suggested to enable Osnap mode “Node”. Symbols involved in the process incorporate fastening points for this purpose.

13.3 Plc database



Pop-menu > Util > Plc Utility

This command opens the **Plc symbols configuration** suite (see “13.2 Symbols library”) used to edit or add new items to the library. Customization affects file **CatalogoPlc.Mdb** located in Librerie\Archivi folder.

This is the initial dialogue box:



13.4 PLC Configuration

Available series

For **manufacturer and related product lines** management. It's possible to import Csv manufacturer archives from previous versions.

Modules

Here you can specify item part numbers of the selected product line; each part number corresponds to a module of type **Rack**, **Power Supply**, **CPU**, **Board** or **Accessory**.

Related blocks

This is used to associate **graphics** to each module used during the design process. Set design parameters.

Advanced settings

Available series

This is used to manage **manufacturer and related product lines**. Moreover, it's possible to import Csv manufacturers archives from previous versions, or export a manufacturer with related symbol set.



Add

Adds a **new manufacturer** and/or a **new product line**.

This figure shows the dialogue box where you can add a new product line, of an existing manufacturer or a brand new one (combined box 'manufacturer' is enabled both for choice and typing).

Press button **“Multilanguage description”** or key **[F2]** to edit descriptions.

It's important to specify the new PLC series type: Modular without Rack, Modular with Rack or Rack Integrated (like della Schneider El. TSX Micro series, where the CPU modules act as a Rack).

Other (optional) information are **Number of BITS** used by a WORD data channel and the **Offset of Modules in a Rack** when this value is unique for the entire series; anyway it's possible to specify this information for each single rack.

For example TSX Quantum series (Schneider Electric) has Offset = 1, being each slot numbered from 1.

On the other hand PSS 3100 (Pilz) series has an Offset different for each Rack : Rack PSS1 BMP 5/2 has Offset = -2, having working modules mounted in slot 0 to N, and the first two dedicated to CPU and power supply. Rack PSS1 BMPS 3/1 has Offset = -1 because it is natively equipped with power supply.



Edit

Edit information given when module was **“Add”**.



Import

This is used to import new ones supplied in Mdb format.



Export

Exports a PLC series in Mdb format (version compliant).

This command can optionally create a .zip (compressed) file containing all related symbols (dwg and sld files) concerning the exported series.



Delete

Removes the selected manufacturer or a single series from the tree of “Available series”.



In previous version, each manufacturer archive was stored in file Plc-Costruttore.Csv locate in folder Librerie\Archivi (full archive was file Plc-Spac.Csv).

(See “Import” from Available series).

Modules

Once selected or added manufacturer and series, you can insert catalogue part item numbers of **Racks**, **Power supplies**, **CPUs**, **Boards** and **Accessories**.



Add

Adds a new part number (**unique identifier**), with all its peculiarities (family, description, type, module occupation etc.).



Edit

Edits module peculiarities such as part number, description etc. To change the **family** you have to re-type the name (even if it is already listed), because the family is used as filter, and choosing it from the list implies to reload modules instead of change the family to the module currently selected.



Delete


Deletes a module.

To insert a new module you have to provide the following information:

Part number	Part number identifying the module in the manufacturer catalogue.
Family	The family it belongs to can be typed or chosen from the list. You have to type a new value when the family or category has to be created. The Family combined box permits both typing and choice from list.
Automatic Insertion	If enabled, when blocks concerning electric schema are drawn you are not asked for the insertion point, because it is managed automatically.
Multilanguage description	You can edit descriptions double clicking the text, pressing [F2] key or button " Multilanguage description " after the selection of desired text.
Type	Rack, Power supply, CPU, Board or Accessory: you can select more than one option assigning different functionalities to the module, influencing its behaviour when it is configured and drawn. E.g.: for a CPU module integrating a power supply and some I/O you must check Power supply, CPU and Board. You can't select more than one option in case of Accessory.
Occupation	If the Module has to be mounted in a Rack, you have to specify how many slots it is going to occupy. In case the module is a Rack, this number means how many slots are available.
Channel type	Specifies the Bit channel type: <u>Analogue, Analogue/Digital, Digital</u>, or "unspecified".
Referencing prefix	Prefix to use when referencing the module.
Input number	<u>Number of input Bits available</u> on the module, if any.
Output number	<u>Number of output Bits available</u> on the module, if any.

Related blocks

This is used to associate **graphics** used when drawing the scheme to the “Modules”.

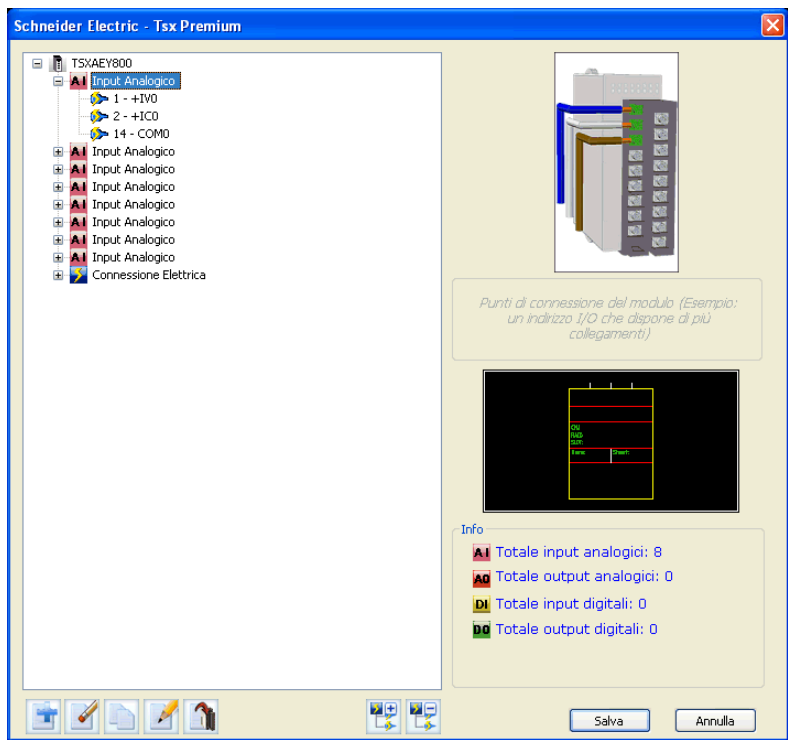


Bit and Connection available	
	Analogic Input
	Analogic Output
	Digital Input
	Digital Output
	Electrical connection
	No Connection
	Macro block



13.5 BIT Management


The operation of the different commands is described directly on the program's windows.

Add

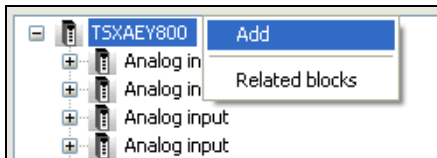


Pressing "Add" to open the bit and connections configuration that are part of the module and are configured to use the symbols for the Electrical Diagram Board.

Clicking on "Browse" (...) to access the folder symbol to change the configuration.

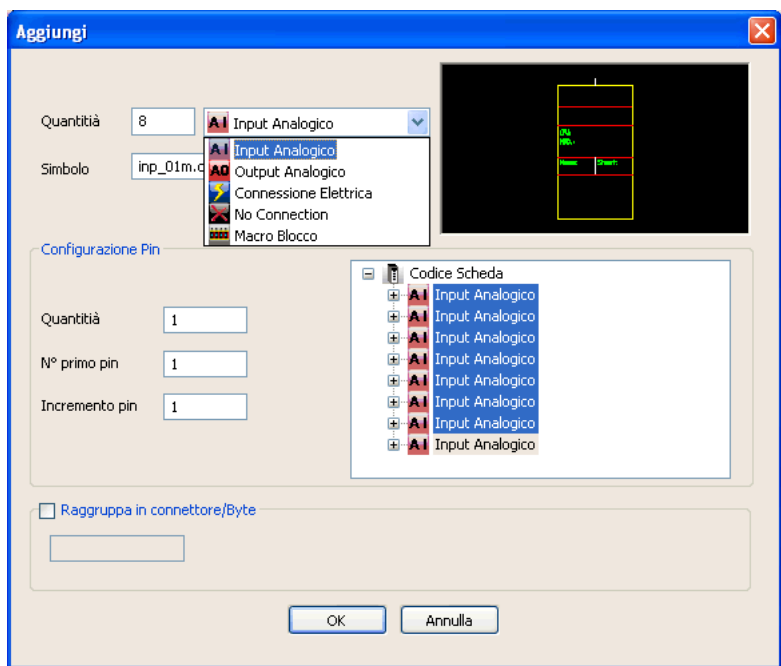


Related blocks

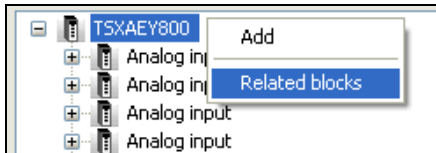

You configure the symbols used for the design of Synoptic, **Summaries** and of the Layout.


Clicking on "**Browse**" (...) to access the folder symbol to change the configuration.

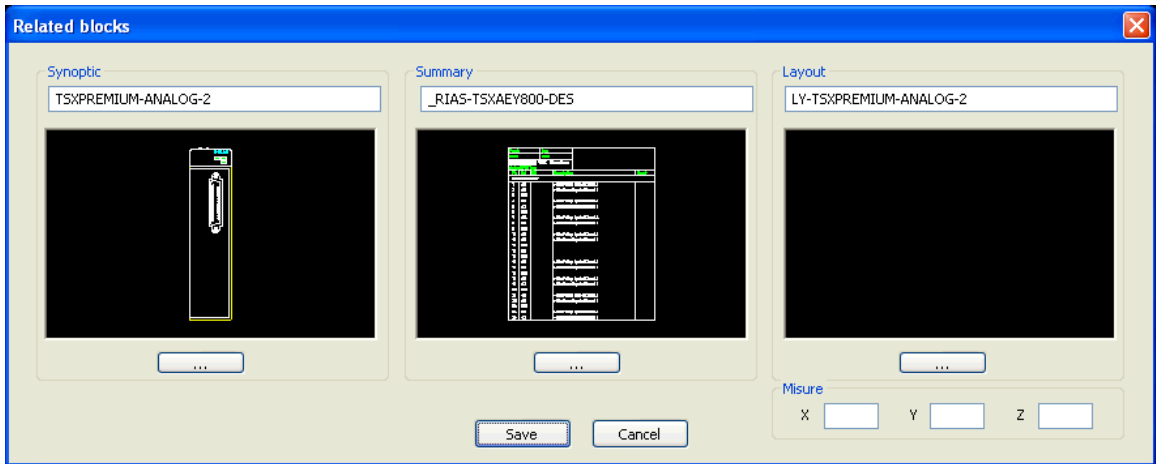

Synoptic, **Board** and **Summaries** symbols are located in program folder Librerie\Schede, while Layout symbols in Librerie\Quadri\GestTop.

Advanced settings

Set parameters related to **Bit Offset**. The Offset is the base value that, incremented by position, becomes part of the I/O address.

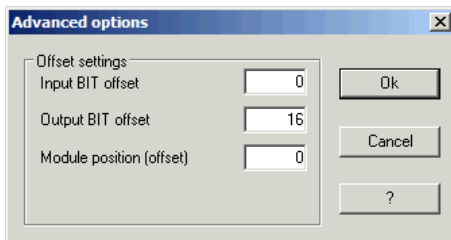

Let's have an example using module TSXDMY28RFK (Schneider Electric, Premium series) having 16 Input Bits and 12 Output Bits:

their addresses are formed with "**%I**" (Input) or "**%O**" (Output) + Rack No + Slot No.

So with Rack **0** and Slot **2** we get addresses **from %I0.2.0 to %I0.2.15** (Input), and **from %Q0.2.16 to %Q0.2.27** (Output).

Correct setting are: Input Bit Offset = 0 and Output Bit Offset = 16.

If the Module is a Rack, the text box Rack Module Offset is active.



At the moment this value is used only by Unity Pro Import/Export interface only.


13.4 PLC Configuration



Pop-menu > Util

The command “PLC Configuration” is the tool for the composition of the PLC complete structure from the SPAC data archive (1) without modifying the drawing (See “13.3 P”).

Once the configuration is done, the drawing can be done using “Drag&Drop” of the modules in the design environment (2), the graphical symbols used are those configured on section “Related blocks”

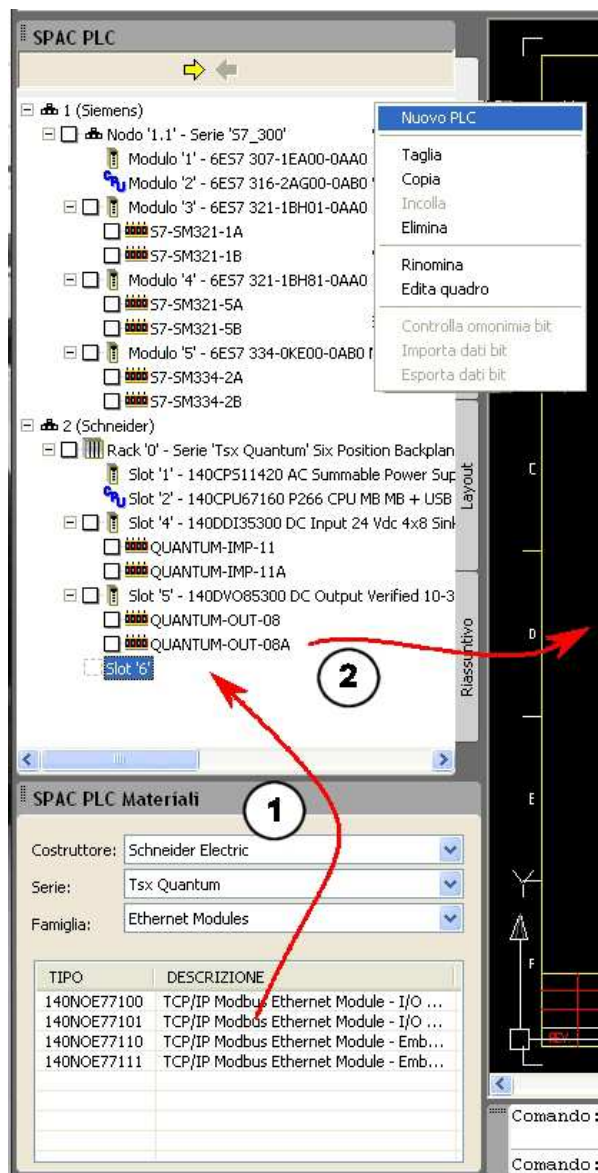

The configuration of a “New PLC” (command on the menu of the right button of the mouse) asks for the selection of the product’s manufacturer and series.

If the series selected is a modular PLC (See *PLC1 – Siemens of the sample figure*), it is necessary to create a new group with “Add Node”. A new group (node) can be inserted in any module on the desired order by a “Drag&Drop” from the “Materials” window.

The composition is free and there is no control of the coherence between the modules.

If the selected series requires a Rack, (See *PLC2 Schneider on the sample figure*), it is required to insert the Rack as the first element (it is not required to insert a node). The remaining modules will occupy the free Slots on the Rack.

The positions’ nomenclature is defined as “Module N°” for PLCs without Rack (See *PLC1*) and “Slot N°” for PLCs with a Rack (See *PLC2*).

The Slots’ positions could have in some cases negative values. For example, in a PLC with two fixed positions (one for the power supply and the other for the CPU), the starting Slot will be -2, so the third Slot will be identified as 0.

For PLCs with Rack, it is possible to insert several Racks below the PLC, for eventual expansions.



13.5 BIT Management


The elements insertion on the PLC structure is done with a “Drag&Drop” approach in two ways: from the modules selected from the archive in a free position or from the “copy” / “paste” buttons (from modules already present on the structure). For a PLC without Rack (see *PLC1*) the position corresponds to the sequence selected. For a PLC con with Rack (see *PLC2*) the module position will be the one of the free Slot selected.

Before the design of the Modules (Boards) that contain the Input or Output bit, it is required to make a “Bit numbering” (see par. “13.5 BIT Management”) to assign the Name and Comments to the addresses. Otherwise the board will be designed with empty values.

The Boards that contain Input or Output bits could be visualized in 2 different ways that makes easier the work according to the following requirements:

- **Board Mode** : The board is designed with all the bits
- **Bit Mode**: The bits are designed singularly (or those selected)

Board Mode (present on catalogues until 2011)

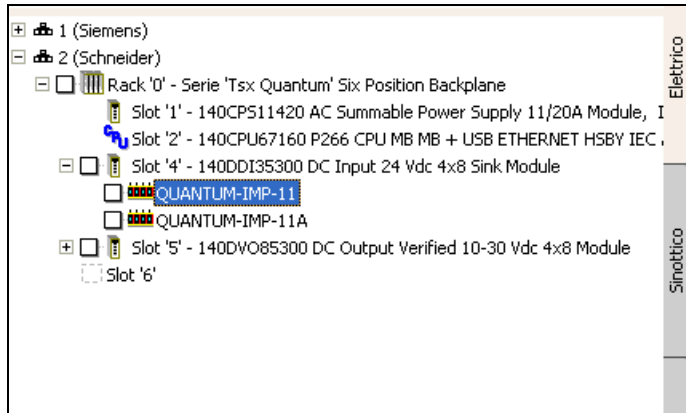


Use “Drag&Drop” to insert all the bits contained in the module on the drawing.

Use the command “**Bit numbering**” if the board is designed with empty bits addressed.



Press this button (see “**13.5 BIT Management**”) to update the configuration data.

Bit Mode (always available)

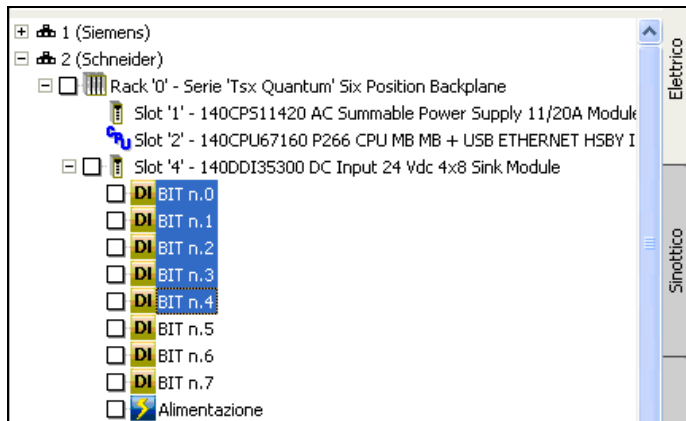

The bits selected are drawn to be placed on the drawing (Drag&Drop).

Use the command “**Bit numbering**” if the bits are designed with empty addresses.



Press this button (see “**13.5 BIT Management**”) to update the data on the configuration.




See “**Bit numbering**”

Press the button “**Board / Bit Mode**” to change the visualization from one state to the other; the button appears only on the “Electrical” design.



The “Board Mode” is available for all the articles until 2011, consenting the compatibility with the drawings and configurations created with previous versions of SPAC.

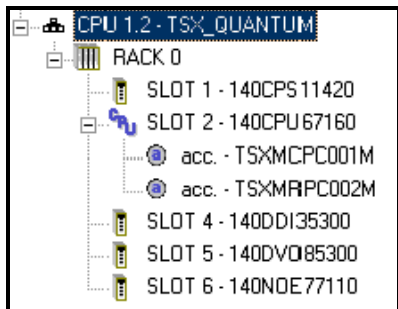

Accessories


Accessories **Modules**, such as PMCIA cards, SRAM cards, etc. can be added only to a module already present on the tree, creating a new level (see left figure, nodes named **acc.**).

Accessories have no associated graphics, but take part to the Bill of Materials.

PLC – Electric Draw

The **I/O Boards Modules** can be inserted on the drawing with Drag&Drop.

When the module is selected directly on the drawing all the bits and the related connections are inserted. It is possible to select the objects to be designed as indicated on the example in the figure.

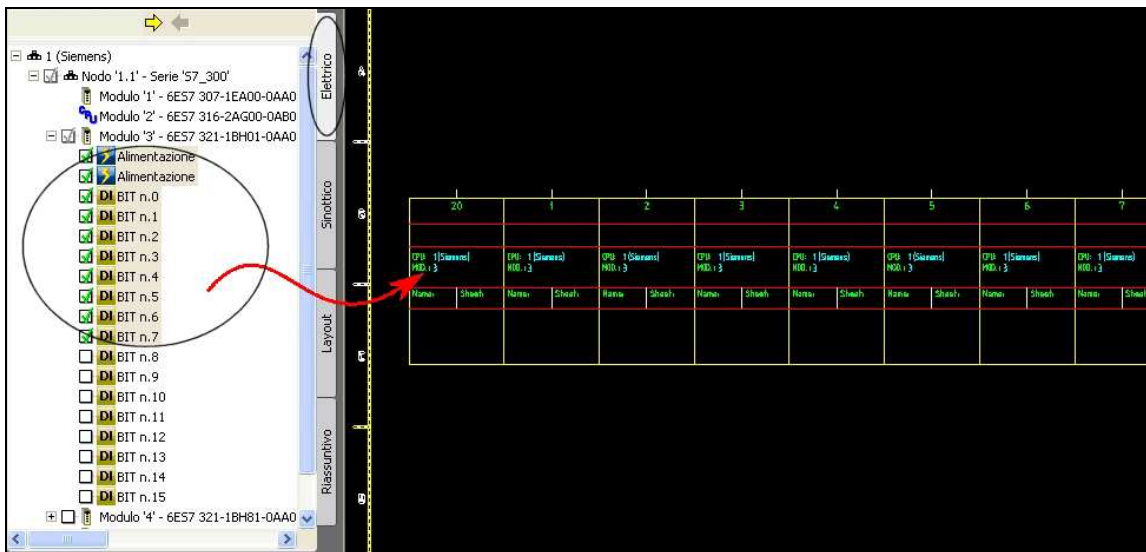

See **“BIT – Electric Draw”**.

The symbols used for this design are configured with **“Related blocks”** (see par. 13.3).

The icons

- ☐ **Element (Module or Bit) not present on the drawing.**
- ☒ **Element (Module or Bit) present on the drawing (with updated data).**
- ☒ **Incomplete Module**, some elements of the module are present on the drawing and updated while some others must be still designed (or that should not be updated).
- ☒ **Element (Module or Bit) present on the drawing but with data that must be updated.**
- ☐ Press this button to update the data on the drawing.
- ☒ **Element (Module or Bit) present on the drawing but with data different from the one on the list.**
- ☐ If necessary, press this button to update the data on the drawing.
- ☒ **Element (Module or Bit) present on the drawing that must be cancelled.**
- ☒ **Element (Module or Bit) new (to be designed) that must be cancelled.**
- ☒ **Indicates an unknown state.**


The information from the “BIT Management” or from the data import data has no an association to the graphical environment.

The error could be caused during the import of a module that is not present on the archive (verify **“13.3 Plc database”**).

PLC – Synoptic Draw

All the CPU or a complete Node can be inserted on the drawing with “Drag&Drop”.

The symbols are in 2D and represent completely the PLC (Rack, Power Supply, CPU, I/O modules, etc.). The synoptic symbols are identified automatically and counted on the Bill of Materials.

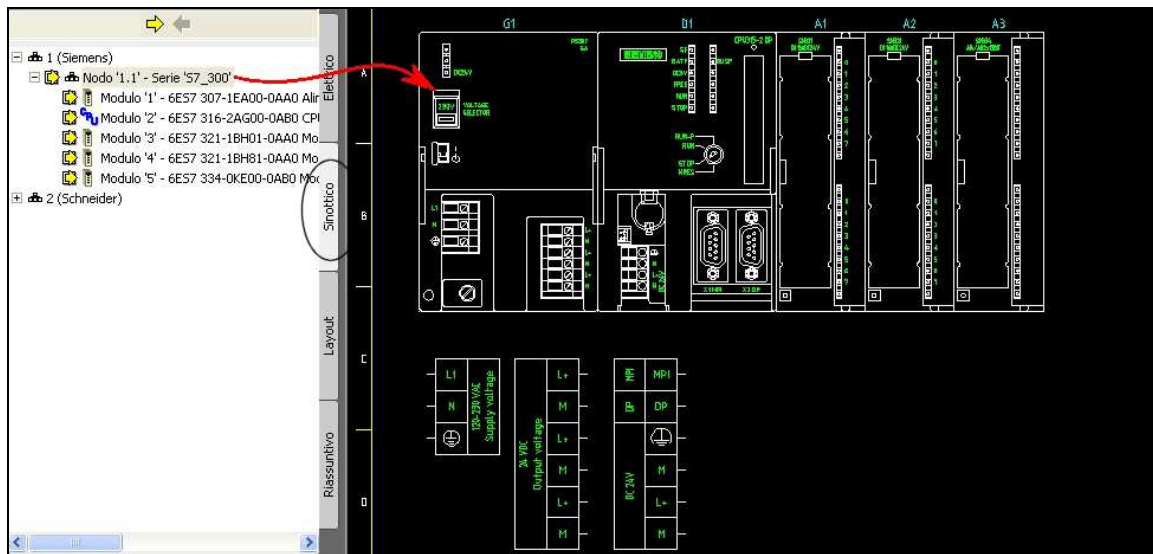


The symbols used for this design are those of the “Related blocks” (see par. 13.3).

PLC – Layout Draw

All the CPU or a complete Node can be inserted on the topographic drawing with “Drag&Drop”.

The symbols are in 3D and can be used for the topographical design of the panel (see par. “15.3 Topographic”).

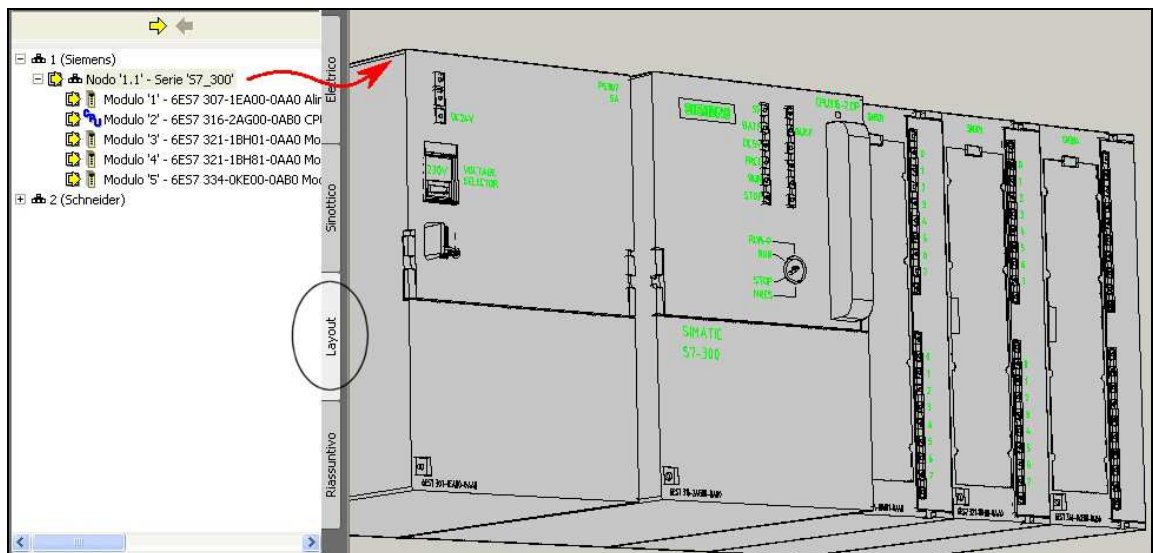


The symbols used for this design are configured with “Related blocks” (see par. 13.3).

PLC – Summary Draw

The **I/O Boards Modules** can be inserted on the drawing with Drag&Drop.


It is a table that contains the data for the indication of the position of the Bits inserted on the scheme with the comments associated to the addresses.

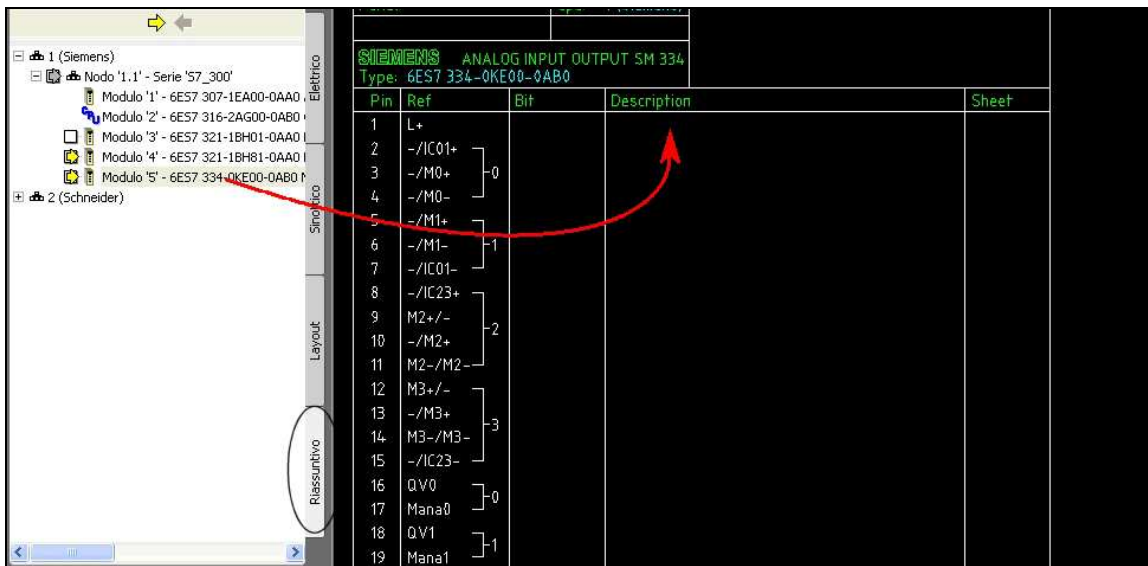

SIEMENS ANALOG INPUT OUTPUT SM 334				Sheet
Pin	Ref	Bit	Description	
1	L+			
2	-/IC01+			
3	-/M0+			
4	-/M0-			
5	-/M1+			
6	-/M1-			
7	-/IC01-			
8	-/IC23+			
9	M2+/-			
10	-/M2+			
11	M2-/M2-			
12	M3+/-			
13	-/M3+			
14	M3-/M3-			
15	-/IC23-			
16	QV0			
17	Mana0			
18	QV1			
19	Mana1			

The symbols used for this drawing are configured with “**Related blocks**” (see par. 13.3).

Unity Pro interface

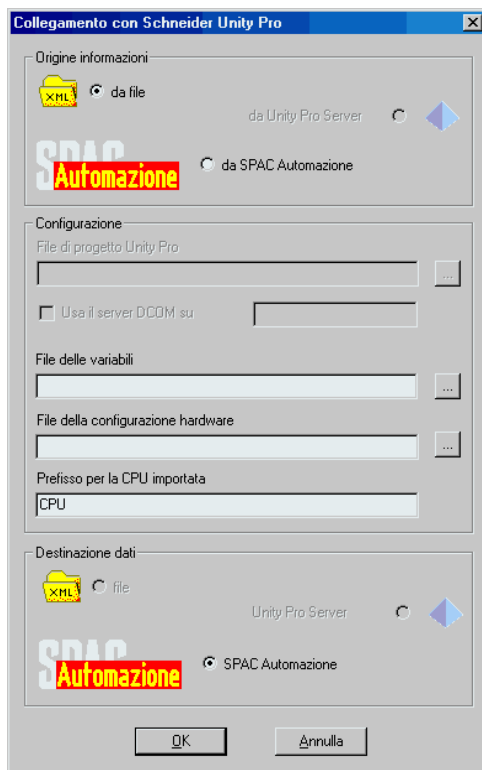

This interface permits to exchange PLC hardware configuration and variables (mnemonics, addresses and comments) **from the program** and Schneider Electric **Unity Pro XL** programming suite.

Hardware configuration and variables (mnemonics, addresses and comments) can be imported/exported using **XML** files, and if Unity Pro is installed in the same Spac environment (workstation or LAN), using a **STU** project file (Unity native binary data format).

COM interface has to be set up according to Schneider specifications in order to exchange data dynamically.



Unity Pro XL is a Schneider Electric product: it is not supplied.


13.5 BIT Management



Pop-menu > Util

The command “**BIT Management**” is used to design quickly the Input and Output bits avoiding the composition of the PLC configuration (see “[13.4 PLC Configuration](#)”).

This command is used also during the PLC Configuration to make the bits numbering, insert the comments on the addresses and update the state of the configuration according to the design content.

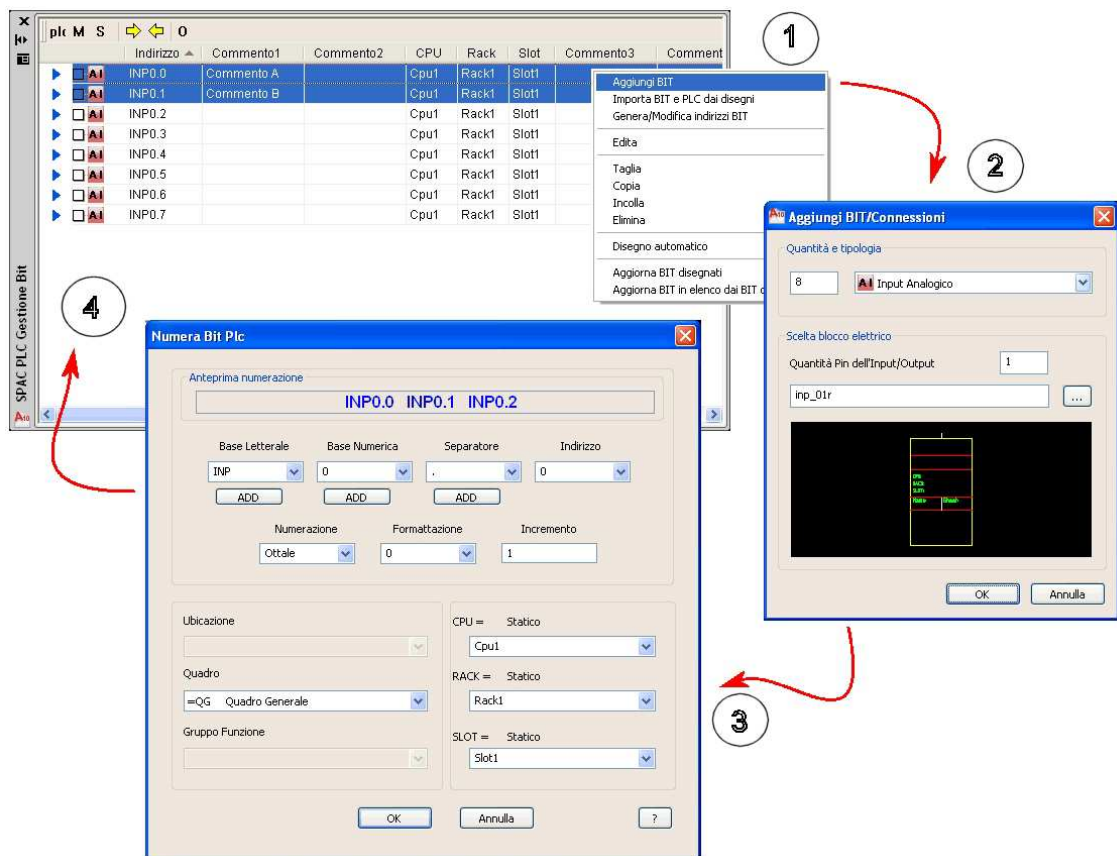

See “[13.4 PLC Configuration](#)”.

On the new designs, the “BIT Management” asks to create \ insert the new Bits with the command (1) “**Add BIT**” (commando on the menu of the right button of the mouse).

On the window for the creation of new Bits (2), it is required to set Quantity and Type (*Analogic or Digital*) of the new addresses (Input or Output), that must be then numbered with the command “**Bit numbering**” (3), (the command is activated automatically).

When the configuration (4) is done, the drawing can be creating simply with a Drag&Drop of the bits on the drawing. The symbols used for the drawing are selected with the command “Add bit”. Pressing “**Browse**” (...) it is possible to access the symbols folder to modify the configuration.

On the existing drawings, with the command “**Import BIT and PLC from drawings**”, it is possible to create the list of all the bits and the related connections found on the multi-sheets of the current Job Order (command present on the menu of the right button of the mouse).

This command is very important when the bits (or boards) symbols were inserted manually, using the commands “[13.1 Plc I/O bits](#)” or “[13.2 Symbols library](#)”.

Table Edit

		Indirizzo	Pin	Commento1	Comme
▶	AI	INP0.0		Commento A	
▶	AI	INP0.1		Commento B	
▶	AI	INP0.2			
▶	AI	INP0.3			
▶	AI	INP0.4			

To change the position of a column it is required to use **Drag&Drop** to select the element to be changed and place it on the desired position.

With the commands on the right button menu of the mouse, can be set the visible columns.

▶	AI	INP0.1	Commento B	
▶	AI	INP0.0	Commento A	
▶	AI	INP0.2		
▶	AI	INP0.3		
▶	AI	INP0.4		
▶	AI	INP0.5		
▶	AI	INP0.6		
▶	AI	INP0.7		

To change the position of a Bit (or a group of Bits) it is necessary to use **Drag&Drop** to select those to be moved and place them on the desired position.

Movement of two bits

▶	AI	INP0.6		
▶	AI	INP0.7		
▶	AI	INP0.1	Commento B	
▶	AI	INP0.0	Commento A	

The same operation can be done also with the right button of the mouse: With a **Cut** of the Bit (or board) in the source, and a **Paste** on the bit that represents the destination position.



To align the electrical scheme to the “free” movements performed on the list, it is required to repeat the drawing. The function “Update Designed Bits” does not update the symbols position.

Edit the Bits

		Indirizzo	Pin	Commento1	C
▶	AI	INP0.0		Commento A	
▶	AI	INP0.1		Commento B	
▶	AI	INP0.2			
▶	AI	INP0.3			

To modify the bits data or comments, it is required to select the record (row) and click on the field to be changed.

To modify the multiple fields it is required to use the command “**Edit**” (on the right button menu of the mouse). To modify the addresses names, the command “**Create \ Modify bit addresses**” (function equivalent to the commando “*Bit numbering*”, see par. 13.1).

Dialog

Proprietà	Valore
Indirizzo	
Pin	
Commento1	Commento 1a riga
Commento2	
Commento3	
Commento4	
CPU	Cpu11
Rack	Rack1
Slot	Slot1
Foglio	

OK

Annulla


The command “**Edit**” shows the data of all the data columns set as “visible”.

It is enough to do a double click on the data to be changed and type the new value.

It is not possible to modify the disabled fields (grey color).

BIT – Electric Draw

The BIT of the I/O Boards selected from the list can be inserted on the drawing with “Drag&Drop”.

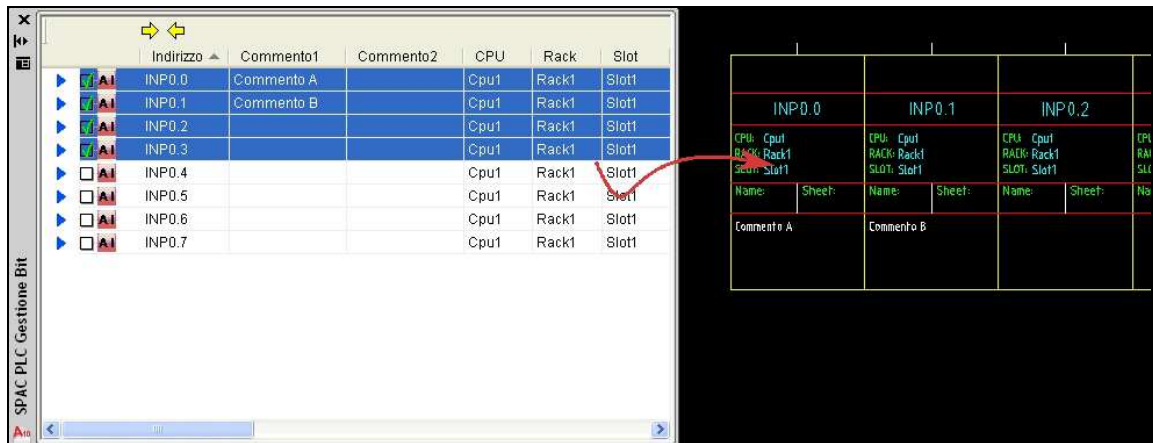

See “[PLC – Electric Draw](#)”.



Updates the designed Bits : This button consents the update of the symbols on the drawing.

The function consents the update of any data (that can be edited) on the list of “BIT Management”. It is possible to update also the name of the Bits addresses.



Updates the Bits on the list : This button consents the update of the bits on the list, importing the data on the drawing.

This command is important when the Bit symbols (or Boards) were modified manually.

The icons



New element, not present on the drawing.



Element present on the drawing (with updated data).



Element present on the drawing but with **data that must be updated**.



Press this button to update the data on the drawing.



Element present on the drawing but with **different data on the list**.



If necessary, press this button to update the data on the drawing.



Element present on the drawing that **must be cancelled**.



New Element (to be designed) that **must be cancelled**.



Indicates an unknown state.

The information from the “BIT Management” or from the data imported has no association on the graphical environment.

The error could be caused during the import of a module not present on the archive (verify “[13.3 Plc database](#)”).

13.6 PLC utility




- Same name
- Assign element
- Summaries
- Prepare summaries
- I-O Bit legend
- I-O Import/Export



Pop-menu > *Util* > *Plc Utility*

Same name

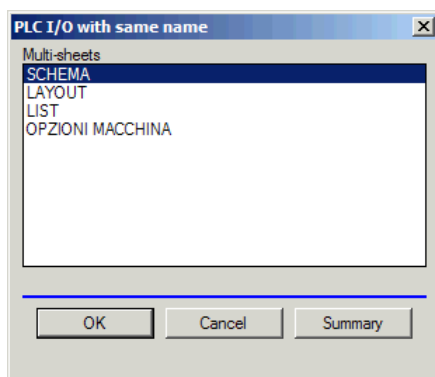

This command is used to make sure that **no PLC bits with the same name have been inserted** into a drawing (or into the multisheets selected for processing). It is a good idea to run this check before making the automatic running of "Prepare summaries" and before exporting any data.

"Use Last List" can then be used to access the list of duplicates without having to scan the multisheet again.

Assign element

This command can be used to write the contents of the "Element" attribute contained in some input or output bit symbols. The following prompts are displayed:

Select I/O bit:

Select connected block:

Element FC1.1 assigned to bit A0.5

This information can also be entered using the "Ddatte" command.

Summaries

Summaries are tables used to condense data that have been fed into the I/O bits used in the drawing. This function is run automatically by means of the "Prepare Tables" command. As a general rule this table is used when the bits have been drawn individually.

The names of the bits to be condensed (E0.0, E0.1, etc.) can either be inserted manually or more quickly using the "**Bit**" (see Sect.. 13.1).


The summaries available for Allen-Bradley and Siemens serve as examples, as it would be impossible to have blocks to cover the complete range of PLCs. These models can be customized while leaving the attributes in the specimen blocks unchanged.

Prepare summaries

This command is used to prepare the PLC "Summaries" tables automatically. In order to run this function, the block to be prepared must already be inserted into the drawing and contain the bit names to be summarized.

If any changes are made, a new summary must be prepared. All data will be updated automatically.

I-O Import/Export

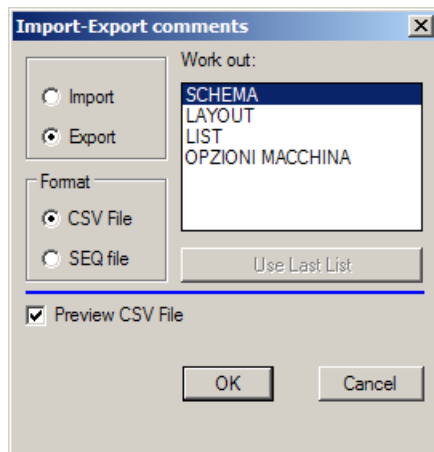

This command can be used to export to file all the data that have been entered into PLC bit symbols. It is good practice to run a "bit ID" check before extracting data, to avoid the risk of duplicates on the drawing.

Data can be exported in **CSV or SEQ format**.

CSV is compatible with Microsoft Excel and SEQ is compatible with Siemens direct data exchange controllers.

Importing data is useful for automatic completion of comments relating to bits in the diagram. Even in this case either file format can be used.

Use Last List. This command enables data to be exported in both formats without having to repeat scanning.

In order to facilitate the process of entering comments onto PLC symbols, data should be exported in CSV format. Missing data can then be entered under Microsoft Excel and then the same file can be imported so that the values can automatically be entered onto the symbols.

Example of CSV file opened using Microsoft Excel®:

Bit	Comment 1	Com. 2	Com. 3	Com. 4	Signal	Pin	Panel	Slot
A0.0	MACHINE IN MANUAL					1	QG	SLOT1
A0.1	MAIN PANEL					2	QG	SLOT1
A0.2	START READY					3	QG	SLOT1
A0.3	LEFT UNIT FINISHED					4	QG	SLOT1
A0.4	RIGHT UNIT FINISHED					5	QG	SLOT1
A0.5	HYDRAULIC UNIT	RUNNING				6	QG	SLOT1
A0.6	COOLANT	INSERTED				7	QG	SLOT1
A0.7	GENERAL ALARM					8	QG	SLOT1

Data are imported into the attributes of the fields indicated.

Example of an SEQ file opened using Windows Notepad

A0.0	MACHINE IN MANUAL 2 3
A0.1	MAIN PANEL
A0.2	START READY
A0.3	LEFT UNIT FINISHED
A0.4	RIGHT UNIT FINISHED
A0.5	HYDRAULIC UNIT RUNNING
A0.6	COOLANT INSERTED
A0.7	GENERAL ALARM

The comments in the 2 (or 4) attributes on the bit symbols must be exported to form one single description. While an SEQ file is being imported into the drawing, the entire description is shown on the first comment of the bit symbol. To avoid this, **enter the | (pipe) symbol** in subsequent comments **at the points where you wish to split the description**, for example:

A0.5 HYDRAULIC |UNIT |RUNNING

In this example 3 “pipe” characters have been inserted while importing the SEQ file. The result is shown in the figure on the right.

SEQ files contain precise tabulations to divide data columns. Make sure that the text editor does not change this spacing. The recommended editor is Windows® Notepad.

HYDRAULIC UNIT RUNNING	
FC11	
TP0	
A0.5	
QG	
SLOT1	5

I-O Bit legend

The bit legend function should only be used when all the input/output boards have been drawn. **Whenever any changes are made to bits on existing boards, the corresponding legend is updated automatically.**

When the multisheets have been processed, the list of I/O bits is displayed. Press **“Drawing”** to make the check before proceeding with the legend.

The **File** command is used to write a file, called **Plc-List**, in the job order directory. This file contains the data that has been displayed.



NOTE: the color of the text to be inserted, as selected in setup (see Sect. 4.2) has a bearing on translation into foreign languages (see *“Color text processing”* Sect. 12.4).

The **Drawing** option is used to insert all the **INPn** and **OUTn** symbols into the table, as illustrated below. The comments for each bit are also displayed. The table and the position of the data it contains can be customized by means of the specific setup function (see *“Legend Bit I-O Plc”* Sect. 4.2).

113.12	CARRIAGE FORWARD	9	SQ1	Q114.4	PINCERS MOTOR	11	HL9
	POSITION				ENABLED		
	CARRELLO POSIZIONE				MOTORE PINZE		
	AVANTI				ABILITATO		
113.13	CARRIAGE BACK	9	SQ2	Q114.5	CARRIAGE MOTOR	11	HL11
	POSITION				ENABLED		
	CARRELLO POSIZIONE				MOTORE CARRELLO		
	INDIETRO				ABILITATO		

The pages needed to complete the legend follow on consecutively from that shown as the first sheet.

First sheet number for PLC legend:

If the destination sheet is being used, you will be asked whether you wish to carry on with the operation or whether you would rather interrupt the procedure to choose a new sheet number. Confirmation will be requested for each subsequent sheet.

If the **“Empty current sheet”** function is enabled, all the entities it contained prior to drawing will be deleted.

If the destination sheet is new the function proceeds without any further prompts. Subsequent sheets are created automatically and consecutively.

The default table symbol is **LegendaP.dwg**. This symbol is stored in the symbols directory. Customized tables can be used, provided they are stored in the same directory.

14 Utilities

14.1 Legends



- Function legend
- Symbol legend

Function legend



Pop-menu > *Modify Symbol* > *Legends*

Parent and element symbols contain the **Function1** and **Function2** attributes, which are useful for describing component function in the electric diagram. These comments are compiled using the “Edit” or **XS** (see Sect. 17.4) or the Ddate command.

Each time an existing function is changed, the legend is updated.

Press “scan multisheets” to process the panels selected on all the multisheets that are displayed. Data can be ordered according to reference, panel or sheet.

When all the multisheets have been scanned, the list is displayed. The result of this list can then be inserted onto the “Drawing” graphic or exported to a file.

Reference	Function	Sheet	Panel
CPU1	PLC CPU	8	=QG
FR1	CARRIAGE MOTOR THERMAL OVERLOAD SWITCH	5	=QG
FU1	24VDC AUXILIARY FUSE	4	=QG
G2	PLC POWER SUPPLY MODULE	8	=QG
GP1	24V DC I/O POWER PACK	4	=QG
HA1	ALARM HORN	10	=QG
HL1	[1] LIGHTING DEVICE	3	=QG
HL2	[2] LIGHTING DEVICE	3	=QG
HL3	LIGHTING BOARD	3	=QG
HL4	110VAC POWER SUPPLY	6	=P1
HL5	CARRIAGE MOTOR FORWARD	7	=P1
HL6	CARRIAGE MOTOR BACK	7	=P1
HL7	CASCADE SWITCH	7	=P1
HL8	24V DC AUXILIARY	7	=P1
HL9	PINCERS MOTOR ENABLED	10	=P1
HL10	CARRIAGE MOTOR ENABLED	10	=P1
HL11	ROLLS MOTOR ENABLED	10	=P1
KA1	DETACHMENT COIL	6	=QG
KA2	START	6	=QG
KA3	CASCADE SWITCH	7	=QG
KA4	CARRIAGE MOTOR ENABLED RELAY	10	=QG
KA5	ROLLS MOTOR ENABLED RELAY	10	=QG
KA6	ROLLS MOTOR ENABLED RELAY	10	=QG
KM1	CARRIAGE MOTOR FORWARD CONTACTOR	6	=QG
KM2	CARRIAGE MOTOR BACK CONTACTOR	6	=QG
KM3	ROLLS MOTOR CONTACTOR	6	=QG
KT1	PINCERS MOTOR ENABLED RELAY	10	=QG
M1	PINCERS MOTOR MOTORE PINZE	5	=BM
M2	CARRIAGE MOTOR MOTORE CARRELLO	5	=BM
M3	ROLLS MOTOR MOTORE RULLI	5	=BM

Function 1: 24V DC I/O POWER PACK
Function 2:
Change

Drawing CSV File Update End Summary



“Functions near contacts” (see Sect. 4.2).

Change This is used to change Function 1 and Function 2 data on items in the list. Press “Change” to confirm. Use the function to insert the changes effected in the list into the symbols in the drawing.

Update The “Update” function inserts the changes to Functions 1 and 2 into the symbols on the drawing.



WARNING: All symbols contained in list “14.7 Ignore symbols” will be discarded.

Drawing


This function is used to draw the function summary table (for functions1 and 2).

The table block and relative position of data can be customized by means of the specific setup function (see *“Function legend” Sect. 4.2*).

	-S7 =BM 9	BACK CARRIAGE LIMIT SWITCH		-SA2 =P1 6	DISABLE DETACHMENT COIL
	-SQ1 =BM 9	CARRIAGE FORWARD POSITION		-SA3 =P1 6	CARRIAGE MOTOR FOWARD BACK
	-SQ2 =BM 9	CARRIAGE BACK POSITION		-SB1 =P1 6	EMERGENCY STOP
	-HL4 =P1 4	111VAC POWER SUPPLY		-SB2 =P1 11	LAMP TEST
	-HL5 =P1 7	CARRIAGE MOTOR FORWARD		-SH1 =P1 9	START
	-HL6 =P1 7	CARRIAGE MOTOR BACK		-VD1 =P1 11	BLOCKING DIODE

Example of function legend.

The sheets needed to complete the legend follow on consecutively from the first sheet:

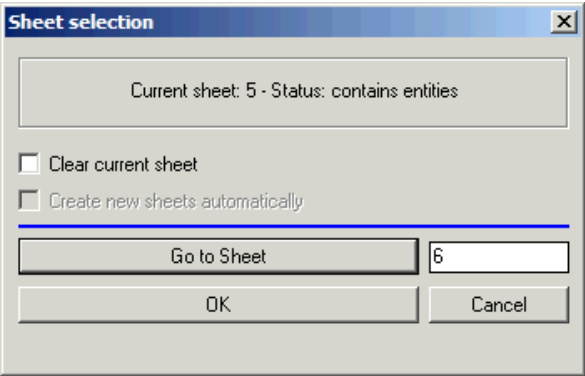

If the destination sheet is already in use (**Status: contains entity**) the function asks whether to continue regardless or stop and select a new sheet number.

When “ **Clear current sheet**” is enabled the function removes all entities from the sheet prior to drawing.

Confirmation is requested for each subsequent sheet.

If the destination sheet is new, the function proceeds without any further prompts. Subsequent sheets are created automatically and consecutively. New sheets are numbered automatically.

 
The default table symbol is **LegendaF.dwg**. This symbol is contained in the symbols directory. Customized tables can be used, provided they are stored in the same directory.



The color selected in settings for inserted text (see Sect. 4.2) has a bearing on translation into foreign languages (see: *“Color text processing” Sect. 12.4*).

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).



Enabling **File preview** the file is saved and then opened automatically.

Symbol legend



Pop-menu > **Modify Symbol** > **Legends**

The parent and element symbols used in the job order are drawn in a table and sorted according to the block file name.

Symbol descriptions are set in “**Symbol Configuration**” (see Sect. 4.2) and stored in file Description-Lib.Mdb. In case nothing was set, the program uses the description of the default symbol (not the one in the drawing, but the one stored in the block).

Symbols with an empty or missing description attribute are nevertheless included in the legend. Press “Scan multisheets” to process the multisheets that have been selected.

Sim.\Sym.	File	Descrizione\Description	Sim.\Sym.
	S24C	Pulsante di emergenza a posizione stabile NC <i>Emergency push-button with stable position NC</i>	
	S28	Selettore a tre posizioni NO riposo 0 <i>3 position selector NO neutral 0</i>	
	S60	Fine corsa tripolare a camma NO azionato <i>Three phase cam limit switch NO actuated</i>	
	S72	Dispositivo di prossimità magnetico alimentato in D.C. NO <i>Magnetic proximity device DC powered NO for auxiliary circuits</i>	
	S75	Comando a Pulsante con lampada di segnalazione incorporata NO <i>Push-button command with integrated lamp NO</i>	
	T3	Trasformatore di potenza a due avvolgimenti con schermo <i>Power transformer with two windings and screen</i>	
	T9	Trasformatore di potenza trifase stella-stella primario con quattro prese <i>Three phase power transformer star/star primary with four plugs</i>	
	V1	Diodo <i>Diode</i>	
	V5	Ponte raddrizzatore trifase <i>Three phase rectifying bridge</i>	
	X1	Preso di corrente bipolare con contatto PE <i>Double plug socket with PE contact</i>	
	KA1	Bobina rele' Aux <i>Auxiliary relay coil</i>	

If new symbols are inserted into the drawing the legend must be updated.

The table and positioning of the data within it can be customized under settings (see “**Symbol**” Sect. 4.2).

The default table symbol is **LegendaS.dwg**. This symbol is contained in the Symbols directory. Customized tables can be used, provided they are stored in the same directory.

44 symbols are drawn on each sheet. The sheets needed to complete the legend follow on consecutively from the first sheet.

Example of symbol legend.

First sheet number for symbol legend :

If the destination sheet is already in use, the function asks whether to continue regardless or stop and select a new sheet number. Confirmation is requested each time for subsequent sheets.

Enable “**Clear current sheet**” to remove all entities contained prior to drawing.

If the destination sheet selected is new, the function proceeds without further ado. Subsequent sheets are created automatically and consecutively.



The color selected in settings for inserted text (see Sect. 4.2) has a bearing on translation into foreign languages (see “**Color text processing**” Sect. 12.4).



WARNING: Symbols contained in list “**14.7 Ignore symbols**” are discarded.

14.2 Attribute changes



- Graphic changes
- Attributes visibility
- Force value
- Fast Atteedit
- Copy attributes
- Fit width (T+ and T-)
- Import attributes
- Export attributes



Pop-menu > *Modify Symbol*

Graphic changes

This command is used to change the height, color, position, angle of rotation and text style of the selected **attributes**. “*Symbol attribute features*” must be set to change attributes directly when inserting symbols into the drawing (see Sect. 4.2).

The dialog box 'Graphic attribute changes' contains the following elements:

- Attribute:** A text field with 'REG*' and a dropdown menu showing 'REG*'.
- Buttons:** 'Add', 'Change', and 'Delete'.
- New values:** Checkboxes for 'Height' (checked), 'Color' (checked), 'XY Offset Position' (unchecked), 'Rotation' (unchecked), 'Text style' (checked), and 'Width factor' (checked). Each has a corresponding input field.
- Table:** A table with columns: Tag, Height, Color, Position, Rotation, Style, Width.
- Change:** Radio buttons for 'Selected symbols', 'Equal to selection', and 'All symbols'.
- On:** Radio buttons for 'Sheet', 'Multi-sheet', and 'Job order'.
- Buttons:** 'OK', 'Default', 'Cancel', and '?'.

Tag	Height	Color	Position	Rotation	Style	Width
FUNZIONE2	***	***	XY ***	***	***	1
FUNZIONE1	***	***	XY ***	***	***	1
RP_NOME	3	***	XY ***	***	Arial	1

In **Attribute** enter the name of the attributes to be changed, then press “**Add**” to insert them in the list.

Press “**Modify**” to change the features of an attribute in the list, “**Delete**” to delete it. The names of the most commonly used tags can be viewed in the “Attributes List” (this list cannot be changed).

Only selected block: only the attribute of the selected block is changed.

Same as selected: all blocks (in the sheet, multisheet or job order) identical to that selected are changed.

All blocks: all blocks (in the sheet, multisheet or job order) that contain the selected attribute are changed.

In this example, Nome, Quadro and Taglia all assume a height of 3.5 mm and color 4. While Position (x,y), Rotation, Style and width fields in the text are not considered (***).

The wild card character * can also be used as a suffix to the attribute name. For example, to change the attributes Reg1, Reg2, Reg3, etc. together, simply type **reg***.

Press “**Default**” and the current configuration is stored “locally” for subsequent uses of this command (See Sect. 4.2). If you confirm without pressing Default the configuration is considered temporary and used just once.

Height	Enter height of desired text.
Color	Enter the number (code) of color wanted (click on the colored rectangle and go into the available colors window directly).
Offset	Offset is used to set the new position by entering the relative polar coordinates for the shift. For example, to lower attributes by 10 mm enter "0" and "-10" (x,y).
Angle of rotation	Attributes are rotated with the angle of inclination expressed in degrees.
Width factor	1 equals the width factor for the original font, with minimum values of 1 you get text compression, above 1 dilation.



Changed do not affect symbols contained in list "14.7 Ignore symbols".


Attributes visibility

This command changes the **visibility status of attributes**.

When a component in the drawing is selected, a list is displayed with the condition of all the relative attributes.

In the "**Attribute Choice**" list you must choose the attributes to be modified, then press "Add" to place them in the "**Attributes to be modified**" list. By Pressing "Add" the function automatically changes the visibility state, however, you can set the state manually.

Press "**Modify**" to change the feature of an attribute included in the list of those to be modified, press "**Delete**" to delete it.

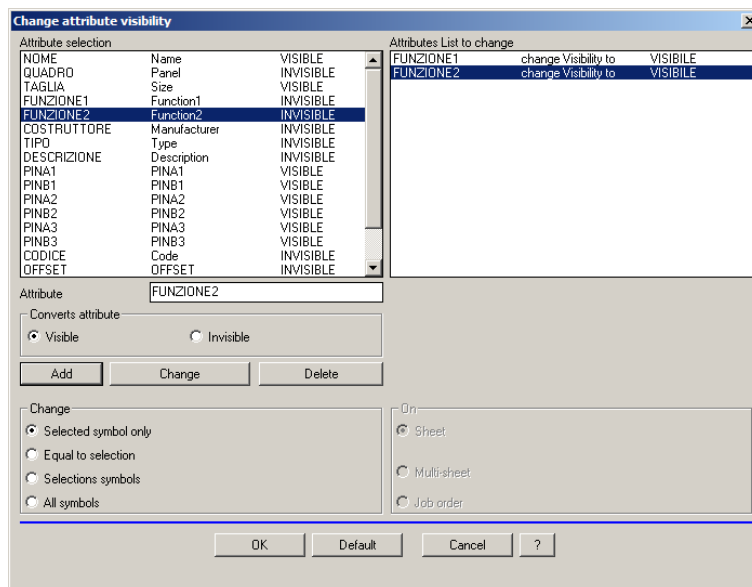

Only selected block:

only the attribute of the selected block is changed.

Same as selected:

all blocks (in the sheet, multisheet or job order) identical to that selected are changed.

All blocks:

all blocks (in the sheet, multisheet or job order) that contain the selected attribute are changed.


By pressing "**Default**" the current configuration is stored "locally" (see Sect. 4.2) for subsequent same command use. If you confirm without pressing Default, the configuration is considered temporary and used just once.

Value substitution

This command is used to replace characters within attribute strings.

Enter the information to be changed in the **Search in attribute** field. The most common tag name can be selected from the Attributes list (this list cannot be implemented by the user).

In the example “*CR” has been entered in the **Find** field and “KA*” in the **Replace** field, giving the following result:

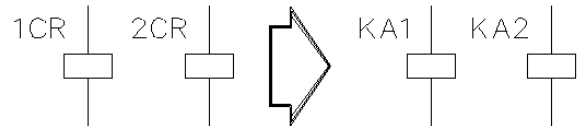


Save stores the combination locally for future use in the file Spac_cfg.ini (see Sect. 2.5).

Delete removes a previously stored combination.


NOTE: the numeric prefix or suffix of the character “*” remains unchanged.

When only part of the string is to be replaced, deselect **Attribute whole value**:

In the example, “A” has been entered in the **Find** field and “M” in the **Replace** field, giving the result shown on the right.

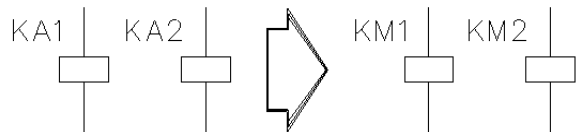

Upper/lower case affects the search. In the example, “KA*” has been entered in the **Find** field and “KM*” in the **Replace** field. Deselect **Upper-/lower case** to carry out replacement.

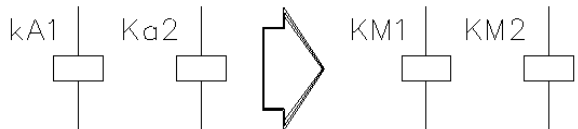

Example of application:

The use of inverted commas “ ” in attributes such as size, Function1 or 2, description, etc. is sometimes the cause of processing errors.

The figure shows how to set the command to replace inverted commas with a hyphen.



When only part of the string is to be replaced, deselect **Attribute whole value**.



WARNING: Replacement of the NOME attribute in parent symbols is only transferred to the various child symbols when “All symbols” is selected in the “Job order”.


Force value

This command is useful for carrying out the same changes on a large number of symbols at the same time.

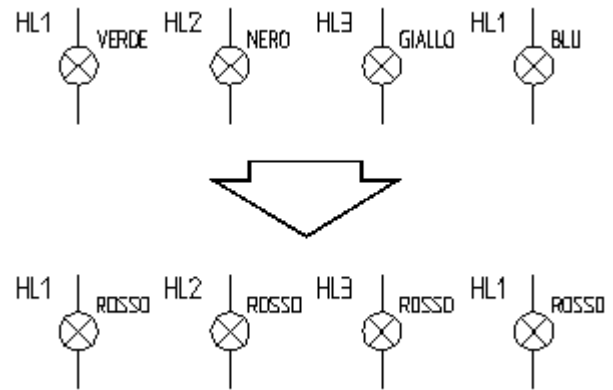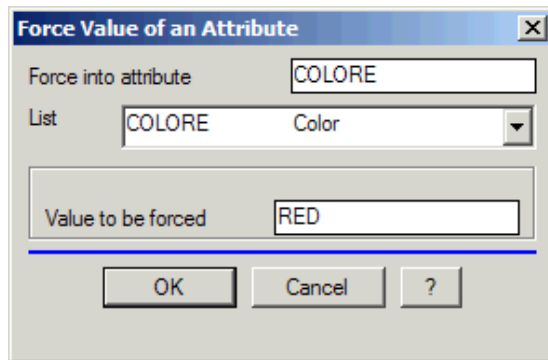

The command can be used, for instance, to change the brand or model of a group of components quickly.

Fast Atteedit

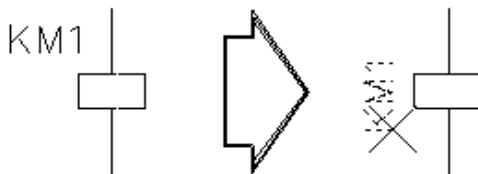

With this command, the position and angle of rotation of an attribute selected from those within a block can be changed quickly.

The default setting for this command is the NAME attribute.

Copy attributes

This tool copies the content of attributes from one symbol to another.

Select the reference symbol and the destination symbol. A list is displayed containing all the attributes contained in the two blocks. Select the attributes required to transfer these to the destination block.

Fit width (T+ and T-)

(T-)

[] AUXILIARY CIRCUIT POWER SUPPLY
[] AUXILIARY CIRCUIT PDWER SUPPLY
[] AUXILIARY CIRCUIT POWER SUPPLY

(T+)

(T-)

Double utility to widen (T+) o reduce (T-) text and attributes width.

This function asks to select (single or multiple) Text or Attribute you wan to modify (**increase or reduce**) the width.



You can quickly run commands "Increase Width" and "Reduce Width" typing "T+" and "T-".

Import attributes

This is used to re-import the file (Attributi.Csv) containing information modified outside the program, and exported with command **"Export Attributes"**.



See *"Export attributes"*.




WARNING : It's important to check for the consistency between imported data and drawing data (and about the command if there is no consistency).

This command is not recommended to beginners.

Export attributes

This is used to export a file (Attributi.Csv) containing information stored in symbol attributes, **collecting directly from symbols in selected drawings**.

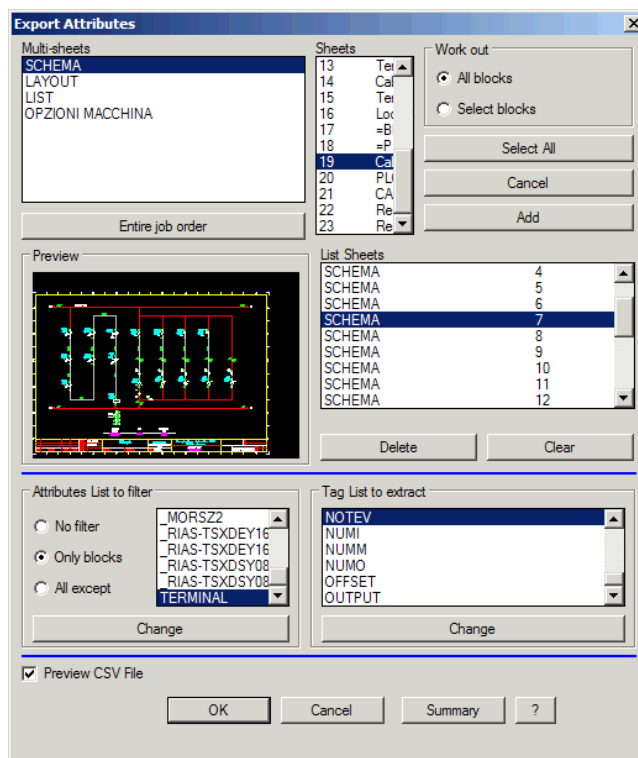

See *"Import attributes"*.

This information is extracted from multisheet added to the list pressing button **"Add"**.

Pressing **"All the Job Order "** all the multisheet of the job order are put in list.

The list may be modified removing a multisheet at a time (**Remove sheet**) or completely (**Clear list**).

Information may be extracted only from **"Selected blocks"** in the drawing, or from all the blocks contained in the listed multisheets.

When **"All blocks"** is set, it's better to filter the ones you're really interested in: press button **"Change"** and input the symbol type list.

Information is extracted basing on the **"List of Tag to extract"** (press button **"Change"** to build the attribute list).

14.3 Substitution of a block



- Single block
- List
- Exchange files



Pop-menu > *Modif. SIMB*

Single block

This function is used to replace an old symbol with a new one. The following messages are displayed:

Select block to replace:

Select new block:


The new block must already be in the drawing. Replacement may be extended to include all the old symbols on the multisheet, or limited to the selection.



A message alerts to the presence of inconsistent attributes. In this case confirmation is requested before proceeding with the replacement.

List

This function is used to replace the symbols in the drawing with others from another (standard) library with similar characteristics. To do this, select a file with extension .CHG from the settings directory containing the list of matching symbols.

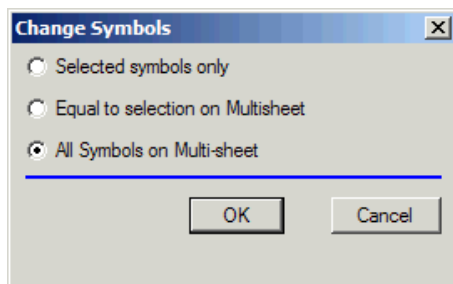

Replacement may affect **only selected symbols** or all those that are **same as selected** on the current multisheet.

Select **All Symbols on multisheet** to replace all the symbols with the corresponding ones in the .Chg exchange file.



See "*Exchange files*".


The following message may appear:

File SostBlk.ERR created in TEMP directory.

The .ERR file contains any errors that occurred during replacement. A check using text editor is therefore recommended.

Exchange files

Exchange files can be customized or new ones created using normal text editors, provided record structures are not changed.

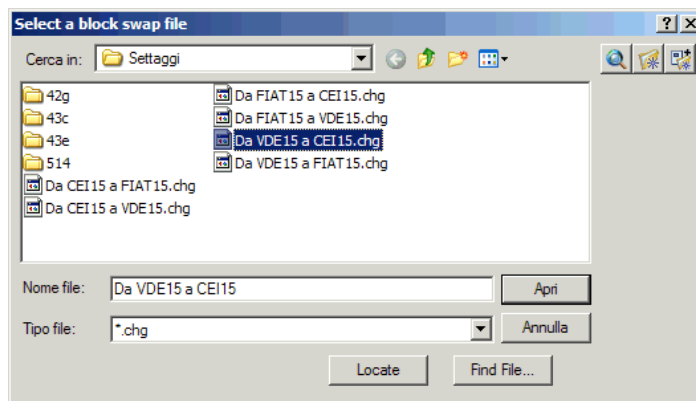

Symbols can be exchanged between libraries with equivalent characteristics:

For this reason, **IEC**, **CEI25** or **FIAT25** cannot be exchanged with other libraries.

CHG files contain **precise tabs** to divide data columns. Care should therefore be taken to use a text editor that does not change this type of spacing. The recommended editor is Windows® Notepad.



- **Single block**
- **List**

Example of .CHG exchange file. The first line of the file specifies the directory containing the new symbols:

C: /Program/LIBRERIE/VDE15/

C1001 V1001

C1002 V1002

C1003 V1003

OLD NEW

Each subsequent record must contain two names: the first is the symbol on the drawing that will be replaced by the second (the .DWG extension is implied).

The name structure of the new symbol (the 2nd name), which starts from the 10th character, must remain unchanged.



Data from the old block are only transferred to the new one when attributes coincide.


14.4 Marking



Pop-menu > Util

This function allows you to insert **the conductor identifier** with the features described by standard CEI16-1, IEC391 re Marking Standards.

Through marking you insert 2 identifiers for each connection wire, unlike wire numbering which inserts 1 identifier (same for the whole connection). For example, this system is useful when you have to connect a device after a replacement. On conductors, you will find all information on the terminal to be connected with no risk of mistakes.

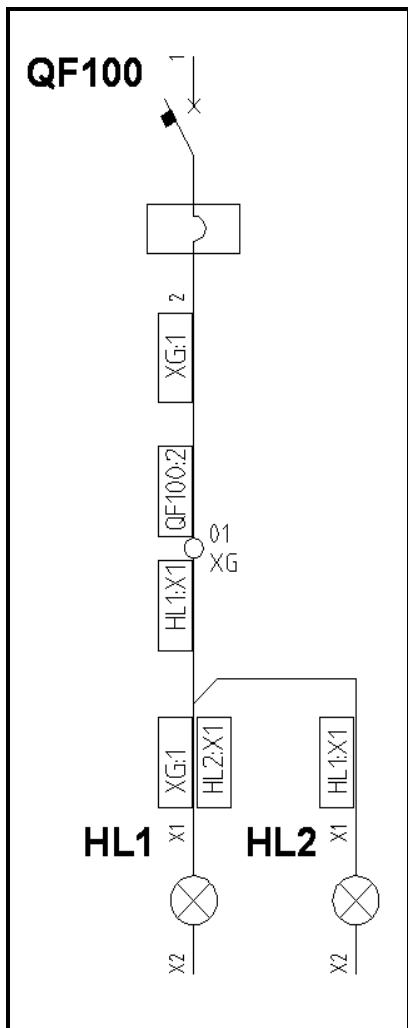

Marking "Standard 5"

To facilitate singling out conductor identifiers, in the example figure at left, text has been manually bordered by a rectangle:

The marking used in this example is "**Standard 5**", which identifies References and Pins of components connected inversely.

You can configure different types of "Standards" and all marking features, from the Settings group (see Sect. 4.2) regarding "**Wire and Terminal numbers**" and the "**Wires Labels**".



Besides the data exporting command "**14.5 Labels**" (for the interface with systems producing labels and tags) other commands also consider any markings found, including:

- 5.4 Internal panel wiring
- 5.9 Loop Diagram
- 6.3 Terminals and connectors

Marking (inserting conductor identifier) is **by selecting the component pins or terminals** on the diagram manually, or automatically for all sheets contained in the multisheets selected.




- **Manual**
- **Automatic**
- **Show\hide Wire Numbers**




Connection marking is a different operation to wire numbering, hence wires do not necessarily have to be numbered first before marking, while it is normally necessary to have connection Pins (see "**7.2 Pin reference**").

Manual Marking

The manual Marking command starts with the request to select the multisheet to be processed. You must select all multisheets with connections between components.

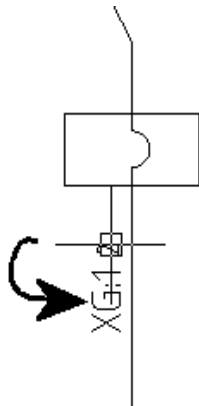

Pin Element selection

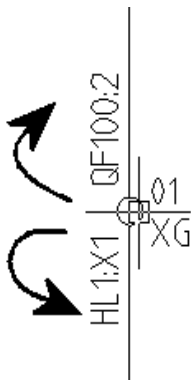

Terminal selection


Each new scan generates or updates the file **Mcables-Data.Mdb**. In the job order folder

With **Use Save** you can access previously processed data rapidly without doing a new scan.

You can only use save if no important modifications have been made to connections on the diagram connections. At the end of the scan this request appears:

Select a Pin Element or Terminal:

By Selecting a Pin an identifier is inserted **for each direct, serial or parallel connection** to the component.

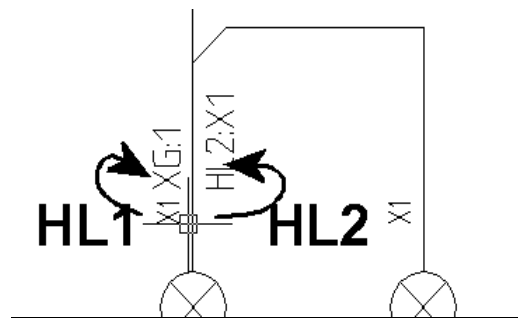

Selection of a Pin with 2 connections

By selecting a Terminal an identifier is inserted **for each direct, serial or parallel connection in (NumI) or out (NumO).**



See “*Wires Labels*” (Sect. 4.2).

Update

Updating Marking occurs automatically in all sheets contained in the multisheets selected for processing.

Each new scan generates or updates the file **Mcables-Data.Mdb**. in the job order folder. With **Use Save** you can access previously processed data rapidly without doing a new scan.



WARNING:

We do not advise using “Use Save” during marking updating.

Delete

This function allows you **to remove conductor identifiers from the diagram**, canceling the effect of the command “**14.4 Marking**”.

The command acts on items chosen, or by choice for all identifiers present on the sheet or multisheet.

Automatic Marking

The automatic marking command starts by requesting selection of the multisheet to be processed. Each new scan generates or updates the file **Mcables-Data.Mdb** in the job order folder.

With **Use Save** you can access previously processed data rapidly without doing a new scan. You can only use save if no important modifications have been made to connections on the diagram connections.

At the end of the scan, for all connections present in the multisheet (of the multisheets selected) **conductor identifiers** are inserted with the same features described above for **Manual**.



See “**Wires Labels**” (Sect. 4.2).

Update

Updating Marking occurs automatically in all sheets contained in the multisheets selected for processing.

Each new scan generates or updates the file **Mcables-Data.Mdb** in the job order folder. With **Use Save** you can access previously processed data rapidly without doing a new scan.



WARNING:

We do not advise using “Use Save” during marking updating.

Delete

This function allows you **to remove conductor identifiers from the diagram**, canceling the effect of the command **“14.4 Marking”**.

The command acts on items chosen, or by choice for all identifiers present on the sheet or multisheet.

Show\hide Wire Numbers

This function allows you to hide wire numbers present on the various connections. The need to hide this figure comes from the need to simplify reading the diagram, especially following **“14.4 Marking”** which introduces a lot of information.


The same command allows you to recover the initial visibility state.



In the case of wire numbering with an “invisible” number, visibility must be restored.

14.5 Labels

This command extrapolates information used by cable referencing and identification software systems to produce labels and signs (**used number counter**), from the diagram. The program interfaces with the following proprietary products:

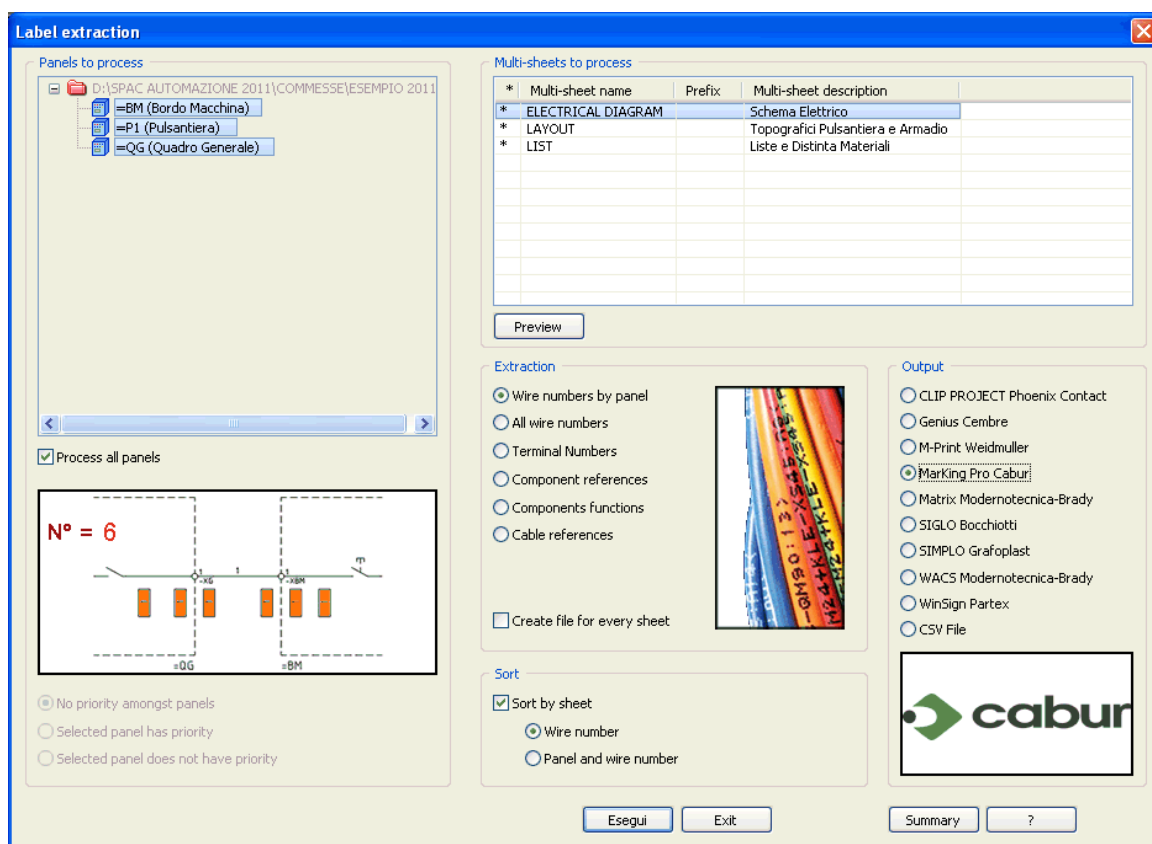


Wire extraction

Wire numbers processes the number of wire (labels required on the basis of the used number counter).

Wires are extracted on the selected panels on the basis of “wire number” or “panel and wire number”. The former is used to obtain the absolute number of labels for each number (total), the latter to obtain the exact number of labels required for each panel.

Calculation criteria

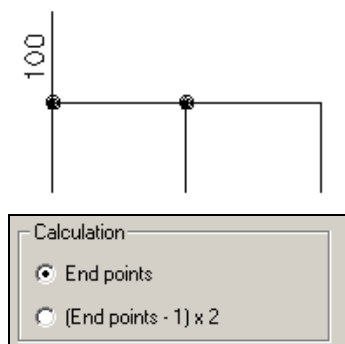

Wire numbers in the diagram are extrapolated and counted on the basis of the end points of the wire itself. This means that the way in which a connection and its relative branches are drawn will affect the count.

The method used to calculate wires that are **not connected to terminals** is very simple. There are two possible options:

“End point” calculation: wire No. 100 counts for **4** labels.

“(End point - 1) x 2” calculation: wire No. 100 counts for **6** labels.

The first case saves considerably on label production.

Jumpers

☒ Bridge terminals






This factor affects counting of wires **connected to terminals**.

In practice there are two distinct scenarios. In the first, specific accessories are used to mount a jumper directly on the terminal block. This can only be done when terminals are set up next to each other. In the second, a wire is used as a jumper between two terminals that are not next to each other.

The former, using “jumped terminals”, saves considerably on label production.

For each extraction the user must select a **Support** code and .CAD file name to save extracted data.

Example of repetitions counted :

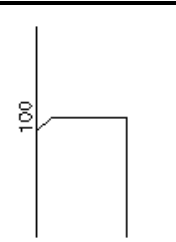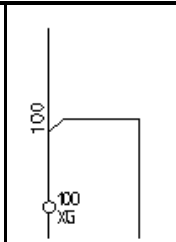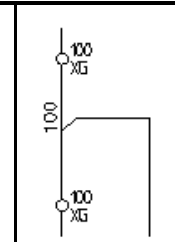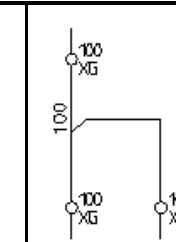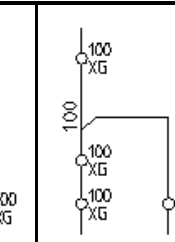					
No. of repetitions counted					Criteria
3	5	7	9	11	Calculation ☒ End Points ☐ (End points - 1) x 2 ☐ Jumpers terminals
4	6	8	10	12	Calculation ☐ End Points ☒ (End points - 1) x 2 ☐ Jumpers terminals
3	5	7	9	9	Calculation ☒ End Points ☐ (End points - 1) x 2 ☒ Jumpers terminals
4	6	8	10	10	Calculation ☐ End Points ☒ (End points - 1) x 2 ☒ Jumpers terminals

Wire extraction by panel

When wires are extracted for each individual panel it is possible to define the relative priorities. This parameter is useful for calculating where to assign labels that apply to two panels.

It is particularly useful for labels that refer to output terminals (NumO), which could either belong to the local terminal panel or to the panel connected as a usage.

Terminal extraction

Terminal numbers processes the number of labels required for the terminals in the terminal block.

Extraction can take place from NumI, NumO or NumM. All terminals belonging to the panels selected (list of panels to process) are included.

For each extraction the user must select a **Support** code and .CAD file name to save extracted data.

Reference extraction

Component references processes the data necessary for component ID labels (appliance referencing).

Extraction can take place from all components belonging to the panels selected (list of panels to process).

For each extraction the user must select a **Support** code and file name to save extracted data.

Function extraction

Component Functions processes the content of Function1 and Function2 attributes in the symbols in the drawing, to create label text for commands (especially on pushbutton panels).

Extraction can take place from all components belonging to the panels selected (list of panels to process).

For each extraction the user must select a **Support** code and file name to save extracted data.

Cables reference extraction

Cable references processes the data necessary for cable ID labels.

Extraction can take place from all Multipolar Cables belonging to the panels selected (list of panels to process).

For each extraction the user must select a **Support** code and file name to save extracted data.

14.6 Navigator



Pop-menu > *Modify Symbol*


The command allows the user to **quickly find the position of a component on the display**; the search is performed on all multi-sheets selected in the list by pressing **Scan Multi-sheets**.

The function requires:

Select an object <Enter to search >:

Object selection

Selecting any object on the electrical diagram, the navigator “searches” for linked components or components that are part of the object group selected.

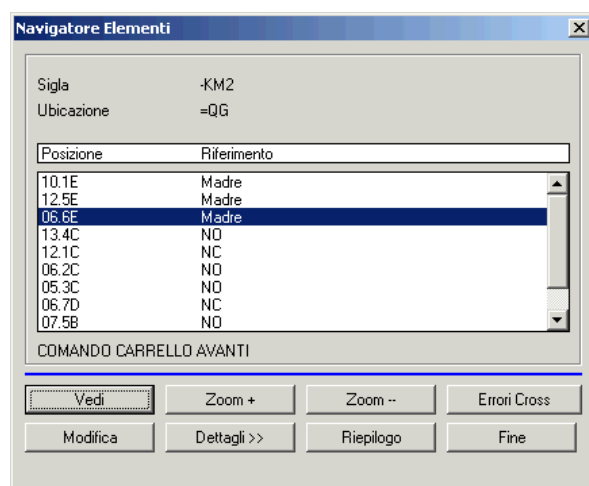

Element Navigator.

Selecting for example a **Mother Symbol**, the navigator opens a list with the position found for all relative Child Symbols and their position (if any) on the electrical panel layout.

Selecting a **terminal**, the navigator opens a complete list with the position of all other terminals of the same terminal board, the position of the terminal board and the layout of the electrical panel (if any).

Selecting a **Plc Bit**, a list of all positions of the other bits making up the same card is shown, together with the position of the synoptic block of the card itself.

On **controls** a complete list ordered by S-E (start and end) is shown for the signal selected.

View

The object is highlighted for the position selected in the list,

When the object being displayed is drawn on a different multi-sheet and not on the current sheet, a warning message is displayed to “**Save when changing the multi-sheet**”: Replying “Yes” the current drawing is saved before the file, containing the multi-sheet where the object being displayed and resides, is loaded.

Double clicking on the position to be highlighted also activates the function.

Zoom +

Zooms in on the area to be displayed (centres around the object for the position chosen in the list).

Zoom -

Zooms out from the area being displayed.

Change

To change the information contained in the object, use the “**Edit symbol**” or “**XS**” command in an appropriate form based on the object category.

The function is only active for the objects belonging to the current multi-sheet.

Details

Pressing “>>”, the dialogue window is zoomed, to display more information. The window is reset by pressing “<<”.


Cross Errors

Displays the list of errors produced by the **Cross Reference** command.

This list is contained in the Cross Reference.Nav file; the button is placed on hold when the file is not present in the folder.

Search

Pressing "Enter" on the keyboard, it is possible to indicate directly the name of to object to be found.

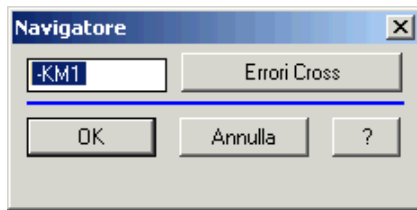

Navigatore, search function.

When the component is found, a list displays all the linked components (e.g. Mother and child) or components are part of the group of the selected object (e.g. terminals).

With a double click or pressing View, the object is highlighted on the drawing.

If the component is not found, the function displays "No object found".

The search function acts on the bits of the Plc, Controls, Terminals and connectors. The function is similar to the previous description for the "Select objects" function.

Cross Errors

Displays a list of errors produced by the **Cross Reference** command.

This list is contained in the Cross Reference.Nav file; the button is placed on hold when the file is not present in the folder.



WARNING: Wildcard characters are not allowed (*) to extend the search mode.

14.7 Ignore symbols

This command can be **used to exclude certain symbols from some processing routines.**

In practice, when a symbol is inserted into a drawing (see “16.1 Symbol insertion”), the user defines whether this must be ignored by subsequent automatic processing functions:

Bill of materials	The component is not calculated for the “Internal Bill of Materials” and “Extraction by external module”, which also means it is not included in the external Bill of materials (see Sect. 8.4) of the Topographic manager (see Sect. 15.3).
Function legend	The component is not counted in the Function legend.
Symbol legend	The component is not counted in the Symbol.
Graphic changes	The component is not considered by Graphic (see Sect. 14.2).
Cross Reference	The component is not included in the “7.1 Cross-Reference” when the parent symbol is “ignored”. It is also possible to exclude only some child symbols.
Component references	The “4.7 Component” commands are ineffective, both for automatic and manual re-referencing. <u>The system never updates or changes the component references concerned.</u>

Ignore in commands:

☒ Components reference

☐ Cross Reference

☒ Bill of materials

☒ Function legend

☒ Symbol Legend

☐ Graphics change

Ignora Simbolo per i comandi:

☐ Cross Reference

☒ Modifiche Grafiche

When inserting a parent or element symbol, several “ignore variables” can be associated with these at the same time.

Conversely, when inserting a child symbol, only two “ignore variables” are available.

There is no need to repeat the exclusion from cross-reference for a child symbol when the “ignore variable” has already been set for the parent symbol.

Use the “Edit” symbol command or **XS** to change variable status for an individual component (see Sect. 17.4).

The “Ignore Symbols” command can be used to display a complete list of all the symbols in the drawing that have at least one “ignore variable” setting and to change the related status. Press **Scan multisheet** to search in all the multisheets selected in the list.

Ignore symbols

Name	Category	Sheet	Panel	Description
* -QF10	Parent	5	=QG	Control Unit
* M1	Element	5	=BM	Three Phase Asynchronous Motor
* QF11	Parent	5	=QG	MINIATURE CIRCUIT BREAKER MULTI 9 - C60L

Function:

ROLLS MOTOR

CIRCUIT BREAKER

Commands sensitive to Ignore

Bill of materials

Function Legend

Symbol Legend

Graphic changes

Cross-reference

Component references

Add

Remove

Filter

Selection >

View

CSV File

Update

Cancel

?

Select one component in the list to highlight the “variables” associated with that component.

The status of the variables associated with a number of components can be changed together provided they belong to the same category.


When multiple components are selected that do not belong to the same category, the system automatically freezes the ignore variables list.

Use the “**Ctrl**” key to effect multiple selections.

The list also contains the symbols “ignored” by earlier versions, in which “I” or “IGNORE” was defined in the “Type” or “Pres” attribute.

14 Utilities • 353

Filter

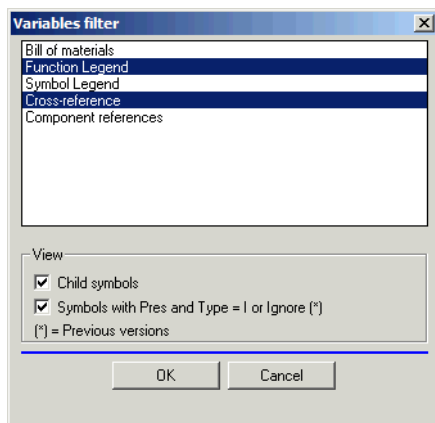


This is used to display only those components in the list with the variables selected.

Child symbols can also be removed from the list of symbols to be displayed as can those ignored by earlier versions, where "I" or "IGNORE" was defined in the "Type" or "Pres" attribute.

No changes are allowed for these two categories.

Use the "Ctrl" key to effect multiple selections.

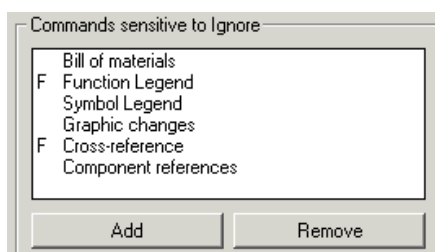

The system uses the letter "F" to highlight active filters in the "Ignore-sensitive commands" list.

Add and Remove

Use these commands to change the settings of all the components selected. Press "Update" to transfer changes to the drawing.

Update

Transfers any changes that have been made to the symbols into the drawing. Update is essential in order to make changed data coincide with data obtained from a new scan.

Select

Adds new components to the list by selecting these directly on the drawing.

 
This function cancels all active filters.

View

Press **View** to highlight the object in the drawing using the "14.6 Navigator" unction (only if present on the current multisheet).

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT). The setup process is the same as that described for table mode (see Sect. 14.8).



Enabling **File preview** the file is saved and then opened automatically.

14.8 Output Table and File

- **Table**
- **File**
- **Edit CSV document**

Table

By selecting **Table** you can continue the job order drawings in table form (parametric mode). The function requests parameters for the drawing.

Tag	Field Title	Width (mm)
Job order	Job order	35
multisheet	Multisheet	35
Prefix	Prefix	10
Designer	Designer	40
MULT_DESCRIPTION	Draw description	80
Date	Date	40
Customer	Customer	40
JOB_DESCRIPTION	Description	80
Path	Path	50

Field Title: Designer

Width - Color: 40 7

Fields sorted by output: Job order, Description, Customer, Multisheet, Draw description, **Designer**, Date

Dimensions:

Max table height	233 mm	Max. number of rows	45
Height Sheet	270 mm	Titles height	4
Sheet width	400 mm	Texts height	2.5
Table width	350 mm		

Colors for Table drawing:

	Edges: 4
	Titles: 2
	Text: 7

Options:

- ☐ Request insertion point
- ☐ Space row (x 2)
- ☐ Sheet + Character (1, 1A, 1B...)

Buttons: OK, Default, Annulla

Each item of data (**Tag**) under "Available fields" is entered in "Output fields", by selecting **Add**, to represent a column in the table.

Each Tag has two variables, the width and title of the column, which can be changed by pressing the **Change** button.

- Number of lines** This value serves to split the table into several parts, even on different sheets. On reaching the maximum number of lines, it requests a new insertion point or asks you to proceed to the next sheet.
- Text height** This is the height of all text contained in the table. This parameter exerts a proportional influence on the height of each line, thus on the total height of the table.
- Title height** This is the height of the column titles. This parameter influences the calculation of the total height of the table.
- Table width** This is the total sum of the widths assigned to each output field. Measurements are expressed in millimeters. This value must never exceed the **Sheet width** value to avoid the table overshooting the margins of the title block.
- Table height** The maximum table height is calculated on the basis of the maximum number of lines estimated and on the text height. This value must never exceed the **Sheet height** value to avoid the table overshooting the margins of the title block.
- Standard** This constitutes the basic settings for output fields (where required).

By pressing **Default**, the current setting is saved in local mode (*see Sect. 4.2*) for later use. If confirmation occurs without pressing Default, the setting will be considered temporary and used only once. The function requests:

Select table insertion point:

The settings in the previous figure correspond to the following graphic representation:

350

Commessa	Descrizione	Cliente	Multifoglio	Descrizione Disegno	Disegnatore	Data
01-2000	Impianto in frazione CONDERA	FL. & Figlio	01-200001			20/04/2000 - 17:09
ESEMP1010	Commessa di Esempio	SDProget	ESEMP1010-01	Distribuzione e Potenza	S. Franchino	19/11/1999 - 12:51
		SDProget	ESEMP1010-02			20/04/2000 - 17:11
		SDProget	DISTINTE			20/04/2000 - 17:11
		SDProget	LAYOUT			20/04/2000 - 17:11
FR-01	Implantation a Porric (Bretagne)	Viking	FR-0101			20/04/2000 - 17:11

Example of job order table

The settings for the drawing in the table include the following options:

- Request insertion point** When several sheets are needed to complete the drawing of the table, you may choose whether you wish to alter the insertion point of the table on successive sheets.

- Line spacing (x2)** The space occupied by each row is calculated in proportion to the height set for the text. This parameter enables this space to be doubled so that two lines of text can be inserted.

 
This condition is particularly appropriate for the insertion of translations.

- Sheet + character** When several sheets are needed to complete the drawing of the table, you may choose whether to continue on numerically successive sheets (new or existing) or create numerically intermediate sheets (e.g. 1, 1A, 1B, etc).

File

Selecting **File** activates setup to create a data extraction file (XLS, CSV or TXT).

The setup process is the same as that described for table mode (*see Sect. 14.8*).



Enabling **File preview** the file is saved and then opened automatically.

The preview **XLS files** require Microsoft® Excel installed.

The preview **CSV files** used **“Edit CSV document”**.

Edit CSV document

Many command export processed information into an Ascii Csv file. In the data extraction dialogue, where you can configure the fields to export, you can choose to have a preview of the generated file. This option is toggled by default depending on the value of “**File preview**” in general settings (see Sect. 4.2).



On

Csv file is written to disk and the **automatically opened**.



Off

Csv file is written to disk but not opened for preview.

The preview opens program **Edit Csv document** that, differently from all other lists, permits to keep the document always in foreground.

Sigla/Item	Foglio/Sheet	Funzione/Function [1]	Funzione/Function [2]
*A03.1	3	DISPOSITIVO LAMPEGGIANTE / BLOCCO PORTA	
*A05.1	5	SOFTSTARTER / COMANDO MOTORE PINZE	
*A06.1	6	MODULO DI SICUREZZA	
*A09.1	9	INVERTER	
*A11.1	11	SCHEDA INGRESSI PLC	
*A11.2	11	SCHEDA 1 USCITE PLC	
*A11.3	11	SCHEDA 2 USCITE PLC	
*AR11.1	11	RACK PLC	
*BF1	29	PROTEZIONI CHIUSE	
*BF12.1	12	PROTEZIONI CHIUSE - EMETTITORE	
*BF12.2	12	PROTEZIONI CHIUSE - RICEVITORE	
*D11.1	11	CPU PLC	
*EV04.1	4	VENTILATORE ARMADIO	
*FR05.1	5	TERMICO MOTORE CARRELLO	
*FU04.1	4	PROTEZIONE ALIMENTAZIONE AUSILIARI 24 VDC	
*FV06.1	6	BOBINA DI MINIMA TENSIONE	
*G04.1	4	ALIMENTATORE AUSILIARI 24VDC	
*G11.21	11	ALIMENTATORE PLC / SENSORI	
*HA14.1	14	ALLARME	
*HL03.2	3	ILLUMINAZIONE INTERNO ARMADIO	
*HL07.1	7	PRESENZA 110 VAC	
*HL10.1	10	CARRELLO AVANTI	
*HL10.2	10	CARRELLO INDIETRO	
*HL10.3	10	TERMICI SCATTATI	
*HL10.4	10	MOTORE RULLI	

Csv file preview

This figure shows an example of file generated using command **Function legend**.

To edit a text double click the cell containing it.

A right-click on a cell pops up a menu with the following commands to edit document rows.

Add: inserts an empty row before the one selected.

Queue: add a row at the documents bottom (last position).

Delete: removes the selected row.

The *Options* menu provides the command **print**, that prints the document with automatic and uneditable paging.

Sigla/Item	Foglio/Sheet	Funzione/Function [1]	Funzione/Function [2]
AP1	7A	SCHEMA 16 INGRESSI	SCHEMA
AP2	7A	SCHEMA 8 OUTPUT	LAYOUT
BF1	8	PROTEZIONI CHIUSE	LISTE
C1	4	GRUPPO RC	
CPU1	7A	CPU PLC RACK 1	
FR1	5	TERMICO MOTORE PINZE	
FR2	5	TERMICO MOTORE CARRELLO	
FU1	4	PROTEZIONE ALIMENTAZIONE AUSILIARI 24V	
G2	7A	ALIMENTATORE PLC RACK 1	

Print report

The logo displayed is ViewCsv.wmf, and can be replaced with your own logo.

Logo positions are set in configuration file ViewCsv.ini:

[PRINT]

xlogo = horizontal *offset*

ylogo = vertical *offset*

slogo = *aspect ratio (100)*



SpacCsv.exe (document editor), SpacCsv.wmf (logo for prints) and SpacCsv.ini (configuration) are located in program folder Program\Lisp.

15 Layout


15.1 Cabinet exterior



Pop-menu > *Layout*

This command allows the user to draw external electrical panel topographic layouts quickly. Use the insertion button to save the most commonly used dimensions in actual millimeters.

The various functions operate on a default scale of 1:10, so that drawings are usually suitable for A3 size paper. Scale values can be changed using the “**Cabinet layout scale**” command.

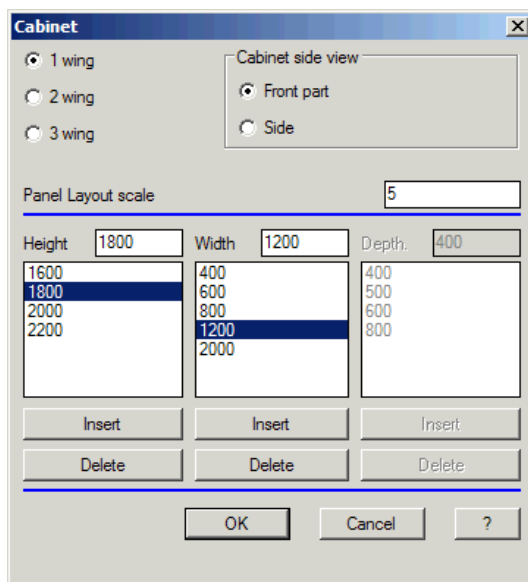

If a **front** view is selected, the number of doors must be defined (from 1 to 3).

Height and width do not take into consideration the base. The symbols used for this view reside in the Quadri directory under the names *FQ1DOOR*, *FQ2DOOR* and *FQ3DOOR.dwg*.

In **side** view drawings the height and depth are considered (without base) for the insertion of the FQLATER .dwg block. Blocks may be customized.

To draw both views the commands must be repeated twice.

The following prompt is displayed:

Cabinet insertion point: (*bottom left*)

The dimensions are stored in the **Armadi.ini** file in the Librerie\Archivi directory.

Cabinet layout scale

This is used to set the **scale factor to be used to draw the cabinet internal or external topographic layout**. This value also affects the “accessories” symbols library, to make sure that all proportions are maintained.



The default scale is 10.

Accessories

This library contains symbols that are useful for completing the panel front topographic layout. All symbols are duplicated so they can be used on both front and side view drawings. The symbols reside in the Quadri directory.

Base

This command, which must follow the “Cabinet” command, is used to draw the cabinet base.

Cabinet base height 100/<200>: 100

Select cabinet:

If the cabinet front view is selected the command is complete when the base is inserted. If the side view is selected, the following request is displayed:

Which side is cabinet front: *(right or left point)*

The system inserts the Fqzocco.dwg block from the Quadri directory. The block is scaled according to the size of the panel selected.

Transparent Doors


This command is used to effect the parametric insertion of a block called Fqantat.dwg (which can be customized by the user). The following are requested:

Transparent door insertion point: *(bottom left)*

Transparent door width (cm): *(type or 1st point)*

Transparent door height (cm): *(type or 2nd point)*

If the door size is typed in, all values must be expressed in actual centimeters. With the Cabinet, Base and Accessories commands, drawings like the one shown in the example can be drawn quickly and easily:

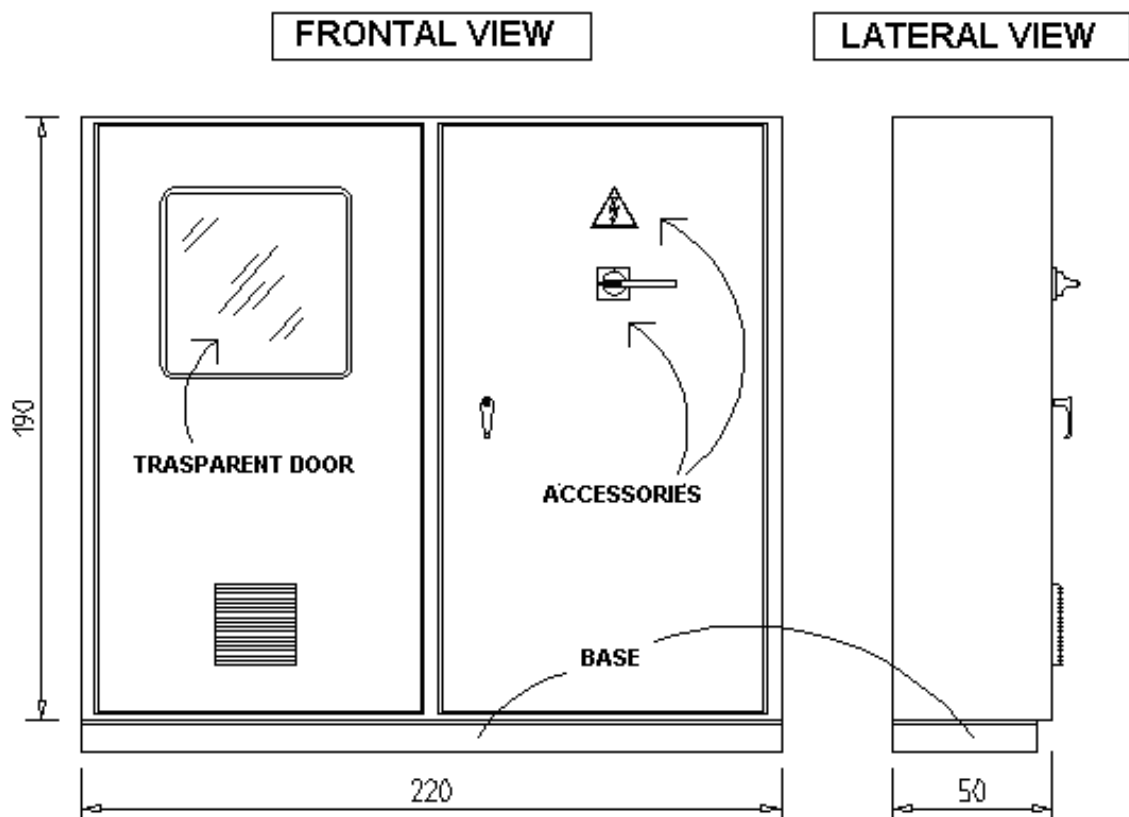

Example of composition using the “Cabinet accessories” library (measurements expressed in centimeters).

The example shows a two-door cabinet (front and side views) complete with base and accessories. Dimensions must be inserted manually.


15.2 Cabinet interior



Pop-menu > *Layout*

This command is used to enable quick drawing of the electric panel internal layout. The dimensions (in actual centimeters) that are used the most can be stored separately for each **Plate**, **Raceway**, **Component** and **Terminal Block**.

The default scale for the various functions is 1:10, so that the drawing is generally compatible with A3 format. Use the "**Cabinet layout scale**" command to change the scale. Dimensions are stored in the **Armadi.ini** file in the Librerie\Archive directory.

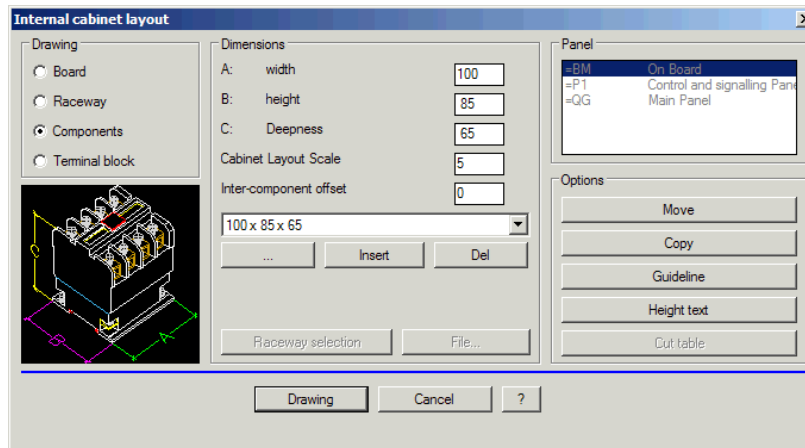

Press **Ins** to store new measurements in the database. Press **Delete** to remove. The "... " button is used to define a distance between two points in the drawing.

Plate

This is used to draw the overall dimensions of the plate inside the panel. After setting or selecting the dimensions (base x height), press "**Draw**". The following request is displayed:

Plate bottom left point:

It is now possible to draw the relative raceways and components.

Raceway

This command is used to draw raceways on the plate inside the panel. First select the home panel (useful for calculating raceways in the **Bill of Materials**) and then define the dimensions (width x depth). Measurements can either be typed into the specific fields or taken from two different databases, either that shared by the **Armadi.ini** file or the specific raceway database, **Canaline.Dat**.

The drawing is based on the points defined on the axis. Press "**Draw**" to display the following request:

Raceway start point:

Raceway end point:

Raceway reference <40x60>: (type value)

The program then draws the raceway and centers it on the axis. It then asks the user whether the raceway is to be aligned to the right or left using a point:

Point for alignment orientation <Enter for none>: (right or left)

The raceway is moved in the direction specified by the user. When Enter is pressed, it remains centrally aligned to the axis.



The default raceway reference corresponds to its dimensions.

Database

The “width x depth” of raceways can be shown in the specific fields and stored, by pressing the **Ins** button, in the database (Armadi.ini file) with all the Plate, Component and Terminal block measurements. This database does not contain any information used to create bills of materials.

Press **Database** to access a specific raceway database (Canaline.Dat file) that, besides containing dimension data, can also be used to store information used to create bills of materials.

Armadi.ini	Contains <u>dimensions</u> . Managed via the Ins , Delete and “...” buttons.
Canaline.Dat	Contains <u>dimensions</u> as well as the manufacturer, type and description (for bill of materials). Managed via the “ Select raceway ” and “ Database ” buttons.

Manufacturer	Code	Description	Size (mm)
ARNOCANALI	V4K3030	Cable holder ducts 30x30 F. 4.5	30x30
ARNOCANALI	V4K4030	Cable holder ducts 40x30 F. 4.5	40x30
ARNOCANALI	V4K6030	Cable holder ducts 60x30 F. 4.5	60x30
ARNOCANALI	V4K8030	Cable holder ducts 80x30 F. 4.5	80x30
ARNOCANALI	V4K10030	Cable holder ducts 100x30 F. 4.5	100x30
ARNOCANALI	V4K4040	Cable holder ducts 40x40 F. 4.5	40x40
ARNOCANALI	V4K6040	Cable holder ducts 60x40 F. 4.5	60x40
ARNOCANALI	V4K8040	Cable holder ducts 80x40 F. 4.5	80x40
ARNOCANALI	V4K10040	Cable holder ducts 100x40 F. 4.5	100x40
ARNOCANALI	V4K4060	Cable holder ducts 40x60 F. 4.5	40x60
ARNOCANALI	V4K6060	Cable holder ducts 60x60 F. 4.5	60x60

Manufacturer: ARNOCANALI
 Code: V4K8030
 Description: Cable holder ducts 80x30 F. 4.5
 Width (mm): 80
 Depth (mm): 30

Add Delete Change Save Cancel

Besides dimensions, each raceway also contains the manufacturer’s name, item catalogue code and description:

Only press **Add** to enter new items into the list after completing all fields requested.

Press **Change** to change data relating to an existing raceway.

Press **Delete** to remove an item from the list.

Component

Use this command to draw the overall dimensions of a (standard) component on the plate inside the panel. Set or select the dimensions (height x width x depth) and then press **Draw**. The following information is requested:

Component insertion point:

Component reference: KM1

(*type value*)

The component insertion point is the mean height on the left of the rectangle. This point has been chosen to facilitate insertion in line with the axis (on the guide) of components with different dimensions.

The program asks whether you want to continue with another component (having the same dimensions) and automatically suggests the next insertion point (using Enter).

<ENTER>: Current point

The **Offset between components** defines the insertion point for the next component. If this value is set to 0 the next component is placed alongside the one drawn previously.



The component reference is inserted manually.

Terminal block

This function is used to draw the overall dimensions of the terminal block on the plate inside the panel. Set or select the dimensions (width x depth) and then press **Draw**. The following information is requested:

- Terminal block start:
- Terminal block end point:
- Terminal block reference: XM1 (type value)



The terminal block reference is inserted manually.

Options

Before using any of these functions you must first select the drawing group to be changed (raceway, component or terminal block).

- Move** Use this function to move a raceway, component or terminal block by the value defined in “Offset distance”. This value is expressed in actual millimeters and is then **changed according to the scale setting**.
- Copy** Copies a raceway, component or terminal block. This function has the same characteristics as **Move**.
- Guide** “Guideline” recalls the function for drawing component insertion axes. The line is automatically drawn in red as an Axis line (section point). This function helps the draftsman to identify the mid-point between the two raceways and define displacement.
- Text ht.** This is used to alter the height of all raceway, component or terminal block reference texts.

Size table

This command creates the **Raceway size table**, which contains a summary of all data concerning the raceways that are drawn for each panel or for specifically requested raceways.

RACEWAY CUT TABLE - Panel =QG			
No.	Lungh. (mm)	Dim. (mm)	Type
1	262,5	100x100	100 x 100
2	250	40x80	00170
5	800	60x80	00195
2	800	100x80	00194
2	1000	100x80	00194

Cut table

Standard is the basic configuration for output fields (where applicable).

Press **Default** to store the current configuration “locally” (see Sect. 4.2) for future use. If confirmed without pressing Default, the configuration is perceived as temporary and is only used once.

15.3 Topographic manager



Pop-menu > *Layout*

The Topographic Management program allows you **to draw component layout inside a cabinet quickly**.
The command starts by asking for files to open (files generated by the Bill of Materials).




The command **“Open Bill of Materials”** allows you to open DMW files generated by both the External and Internal Bills at any time.



(see *“Internal Bill of Materials”*).

If there are several panels present in the dmw file processed, you can select the one you want to work on. This choice allows you to view the components (codes and macrocodes) that are part of it using the typical tree structure, as in the figure below:

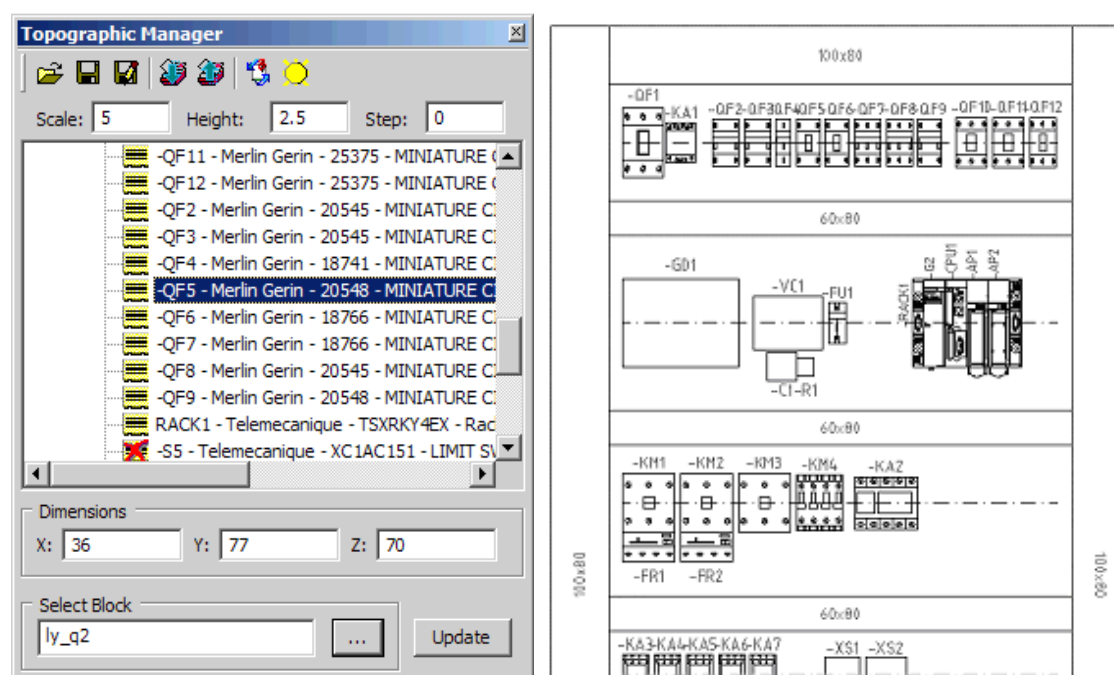

Topographic Manager, details of a component.

This Function is really simple, after selecting one or more components (multiple selection is by pressing the Shift [↑] button on the keyboard) **you just drag the components with the mouse** (Drag&Drop) from the Topographic Manager window to the desired position on the drawing.


As an alternative to Drag&Drop you can **double click on the component**. In this case insertion is automatic in the position following the last component (the insertion coincides with an average point to the left of the symbol).

Components are drawn considering the **step** and **scale** set (*Cabinet layout scale*).



NOTE: The Shift [↑] key must be pressed before starting multiple selection, and must be kept pressed till the end of selection.

As soon as the components have been dragged to the drawing, the icon commutes into the green sign "tick". If the component is deleted the starting icon is restored automatically.

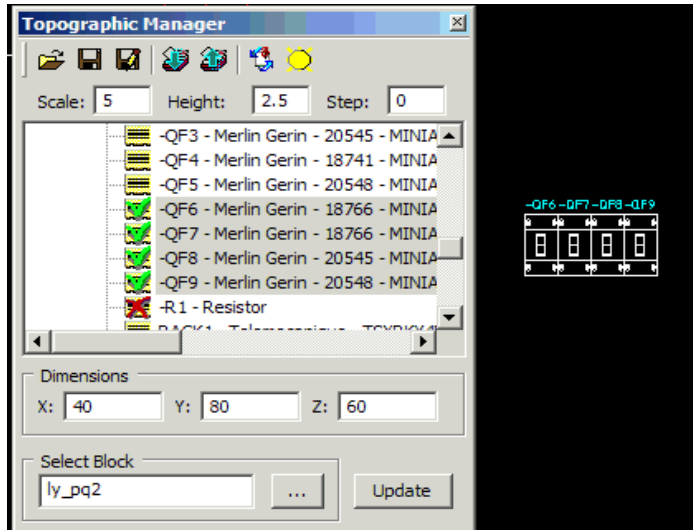

Example of drag&drop of 4 components (step = 0)

The result of the previous figure can be achieved by a multiple selection but also by repeatedly double clicking on the 4 components.



The command "**Save Bill of Materials**" allows you to save the DMW file after changes.



The command "**Save with name**" stores a new DMW file with a new name chosen. The new file is opened automatically.



Update from Database: allows you to select an amw (Materials database) file from which to get dimensions and symbols to associate to, or update, existing codes.



Update database: allows you to select an amw (Materials database) file to be integrated with the data (dimensions and symbols) associated with codes existing in the dmw file.



Update from Drawing: allows you to synchronize the Topographic Manager with the drawing. Data alignment occurs by controlling the components on the current Sheet.



Hide components already drawn: when the button is pressed (on), you do not see the components drawn (with a green "tick").

Scale:

Cabinet layout scale: is to set the scale factor of the Topographic drawing (default 1:10).

Height:

Text Height: is to set the Name height (contained in the symbol Reference attribute).

Step:

The Step is the distance between 2 components.

If you see the error message "**The element cannot be drawn**" when dragging a component onto the drawing, the component has normally not got the dimensions and/or associated block.

Dimensions
X: Y: Z:
Select Block

Selecting any component from the list, in the "Dimensions and Block choice" the relative data is visible (and modifiable).

If there are no dimensions (X=0, Y=0, Z=0) and no block has been chosen "**The element cannot be drawn**".



The icons allow you to recognize the component state straight away: those ready to be drawn, those already drawn and those with no data.

Icons

Viewing codes ready to be drawn is made easier by the following icons:



Identifies components made up of a **single material code** (or no code).



Identifies components made up of several material codes (**macrocodes**).



Identifies a **group of components** made up of a single code.

Viewing codes that have already been drawn is made easier by the following icons:



The green “tick” highlights a **drawn** component.



The green “tick” highlights a **drawn** macro-component.



The green “tick” highlights a **drawn** group.



Hide drawn components: when the button is switched (on), already drawn components are not seen (with the green “tick”).

Viewing codes that cannot be drawn at present (as they have no dimensions or associated symbol) is made easier by the following icons:



The component has no dimensions (or symbol) and **cannot be drawn**.



The component is associated with a “generic” symbol (measuring 1x1x1), only valid if combined with component dimensions. **It cannot be drawn**.



The macro has no dimensions (or symbol) and **cannot be drawn**.



The group has no dimensions (or symbol) and **cannot be drawn**.

To set the state of a component or modify its conditions you have to go to the “Dimensions and block Choice” (see “*Component Management*”).



Icons allow you to recognize component state straight away: those ready to be drawn, those already drawn and those with no data.

Component Management



Component with single code

"Dimensions and block Choice"

If there are no dimensions (X=0, Y=0, Z=0) and no block has been chosen **"The element cannot be drawn"**.

Data changes made to "Dimensions and block Choice" must be confirmed by pressing **"Update"**.

Just Dimensions: a neutral rectangle is drawn with the dimensions given (using the symbol Ly_Default), if value Z (height) is different to 0 a three dimensional polygon is drawn.

Just Block: the block chosen is drawn The choice is made by pressing "...".

You must be careful over the block choice as there are 2 symbol types:

- **"Real"**, symbols drawn actual size just like the component.
- **"Generic"**, symbols measuring 1x1x1.

If there are no sizes (X=0, Y=0, Z=0) and the associated block is generic (size 1x1x1) **"The element cannot be drawn"**.

Dimensions and Block: priority depends on block type.

- With **"real"** symbols priority is given to the block, dimensions are ignored.
- With **"generic"**, symbols the symbol is drawn with the dimensions set.




There is no rule to distinguish between "real" and "generic" symbols in advance.

(Symbols installed with the program can be distinguished by name, those with prefix LY_ are generic, while LY- ones are real).



Macrocode

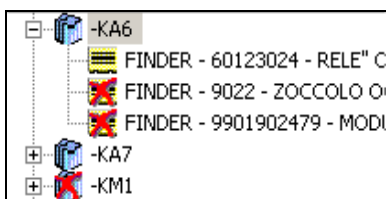

If there are no dimensions (X=0, Y=0, Z=0) and no block has been chosen the **macro as treated as group of single codes**.

If just one of the single codes can be "drawn" the whole macro can be drawn.


Only Dimensions : a neutral rectangle is drawn with the dimensions given (using the symbol Ly_Default), if value Z (height) is different to 0 a three dimensional polygon is drawn. The single code condition is ignored.

Only Block : the block chosen is drawn (just "real" symbols). The single code condition is ignored.

Dimensions and Block : priority depends on block type. The single code condition is ignored.


No size and no Block (X=0, Y=0, Z=0): depends on single codes in the macro. Practically, it depends on the following 3 cases.

- 1) If **no element** can be “drawn”, the macro has no information at all so cannot be drawn.
- 2) If the macro has **just one element** that can be “drawn”, it is drawn with data and features (dimensions and/or block) of the only valid code.
- 3) If the macro has **two or more elements** that can be “drawn”, the graphic result depends on “Assembly” settings.

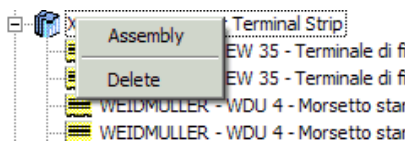

“Assembling a Macrocode”

“Assembly” is set by right clicking on the macrocode.

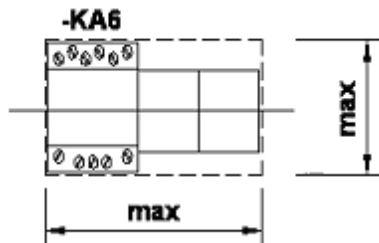


Assembly flanked along x-axis

Symbols are inserted in the mean point along axis X one after the other.


Assembly flanked along y-axis

The first symbol is inserted in the mean point along axis X, the next are inserted one above the other along axis Y (aligned to the left).

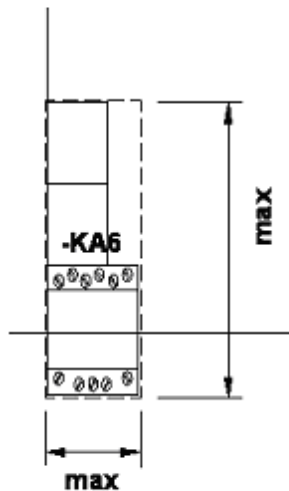

Assembly flanked along z-axis

The first symbol is inserted in the mean point along axis X, the next are inserted one above the other along axis Z (aligned to the left).

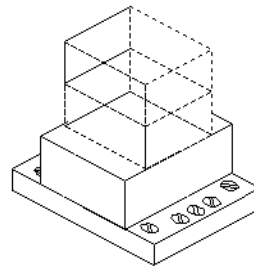

☒ Draw only max dimensions

By activating “**Maximum dimensions**” you get the drawing of a single symbol summing up the total dimensions of all “drawable” codes (using the symbol Ly_Default).

Practically, “assembly” allows you to choose between 6 different ways of drawing a macrocode.


Terminals and connectors are automatically handled as a macrocode.



If dimensions and/or block are set directly on the macro item, the single code condition is ignored as are the “assembly” settings.




Group (grouping of single codes)

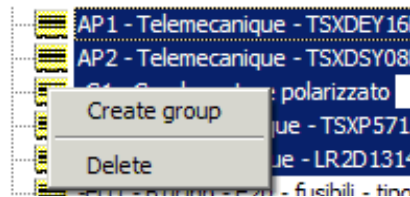

Code grouping

A group is created by a user to handle a group of codes in the same way as a macrocode.

By selecting several codes and right clicking you activate the command **"Group together"**. You are requested to choose a name for the group.

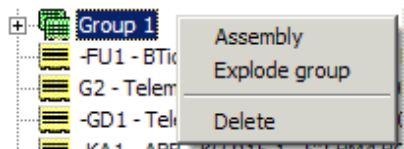

Explode Group

To cancel a group, right click and activate the item **"Explode Group"**

If there are no dimensions (X=0, Y=0, Z=0) and no block has been chosen the group is handled like a group of single codes.

 
If just one of the single codes can be "drawn", the whole group can be drawn.

The Group functions in the same way as a Macrocode. The rules are the same described above including the case history re "assembly".


Dimensions and Block Choice

Dimensions

To modify dimensions, you must select one or more components (multiple selection by holding down the Shift [↑] button from the keyboard), insert actual sizes (in mm) and press "Update".



Dimensions must be **in actual mm** using a point character to separate decimals (e.g.: 30.5).

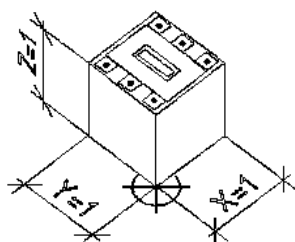

"Generic" symbol

"Dimensions" are shown by the topographical layout drawing simply using a parallelepiped, if nothing is specified the **Ly_Default** Symbol is used.

If you mean to specify, you must give a "generic" symbol, measuring 1x1x1.

The insertion point must correspond to the lower left-hand corner. Graphic insertion is center automatically by calculating the mean point on Y axis (height).




WARNING: dimensions are ignored if an "actual" block is specified (created with the actual sizes of the components represented).

Block

To insert or modify the block Choice, you must select one or more components (multiple selection by holding down the Shift [↑] keyboard button), press the search button search “...” to facilitate your search and then press “**Update**” to confirm the operation.



Symbols can be found in the folders **Quadri\GestTop**.

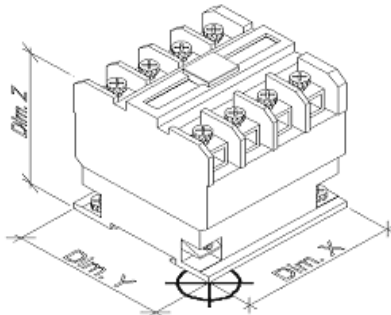

“Actual” symbol

Symbols created using actual component sizes have priority if dimensions are also set.

The Topographic Manager program distinguishes “generic” symbols from those with “actual” dimensions during the application.

The insertion point must correspond to the lower left-hand corner. Graphic insertion is center automatically by calculating the mean point on Y axis (height).



There is no rule to distinguish “real” symbols from “generic” ones in advance.

Symbols installed with the program can only be distinguished by name, those with the LY_ prefix are generic, while the LY- ones are real).

Block Specifications

An n-block layout is considered a symbol if it features the following attributes internally :

Label	Default	Type	Description
Reference			Component reference
Type		IP	Contains the catalogue codes of associated material
Manufacturer		IP	Contains the brand of the associated material.
Panel		IP	Electrical panel reference
Description		IP	Generic component description.
Sheet		IP	Component page number.

Note: data with an (*) are examples. Type P=Preassign Type I=Invisible

Blocks are normally stored in the folder **Librerie\Quadri\GestTop**.



To distinguish “real” from “generic” layout symbols, the initial part of the file name is usually different, using LY_ for generic and LY- for real dimension symbols.

15.4 Pushbutton panel



Pop-menu > *Layout*

These commands are used for automatic drawings of **external layout (front) and internal layout (rear) of the pushbutton panel, pulpits, panels, etc.**, complete with wire connections, wiring pins and component-related functions.

Before executing the “**Panel wiring**” function, check the relative “**Configuration**”.

Configuration

For each symbols library (lec, Cei, Vde etc.) there is a “**Pref**” used to create the association between each symbol in the library and a block for the front panel and another for the rear panel.

All symbols you can use to generate this configuration are stored in folder Librerie\Pannello ; the name prefix of each symbol is fundamental to distinguish the block type:

Lyplt_ : is the panel front symbol (without label).

Lyplt_ : is the panel front symbol (with label sized 45x67.5).

Lypls_ : is the panel front measuring tool symbol.

Lyplp_ : is the plate symbol.

Rppl_p: pushbutton symbol (or similar) for the panel rear.

Rppl_s: switch symbol (or similar) for the panel rear.

Rppl_l: lamp symbol (or light indicator) for the panel rear.

Rppl_v: measuring instrument symbol (or various others) for the panel rear.




“**Symbol Configuration**” (see Sect. 4.2).



In previous program version, for each new configuration was generated a PFR file; you can recover your customizations importing these files.

Panel wiring

This command automatically draws **the external layout (front) and internal layout (rear) of the pushbutton panel, pulpits, panels, etc.**, complete with wire connections, wiring pins and component-related functions.

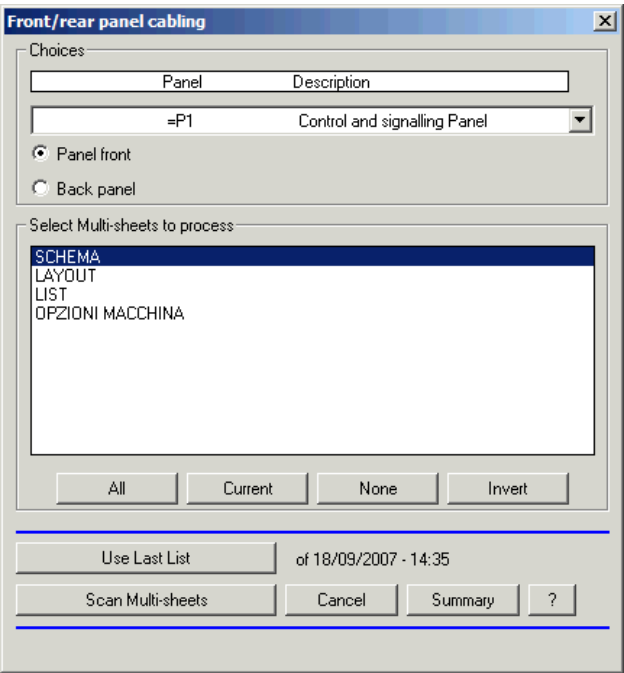


First of all, specify the name of the panel to be processed and then the type of drawing (front or rear).

The **Front** or **Rear** selection can also be used to recover a layout that has already been drawn in another drawing in order to change this or create the related mirror image (i.e. front to rear or vice versa).

This will be processed on the multisheets that have been selected from the list using Scan multisheets.

The **Use Last Scan** function gives immediate access to processed data. This is useful when drawing a new panel or changing type of drawing without repeating the scan function.

After processing, the system produces a list of the components that make up the specific panel. The original list contains components set out in alphabetical sequence. The first symbol in the list is at the top on the left and these are automatically listed from top to bottom and from left to right.

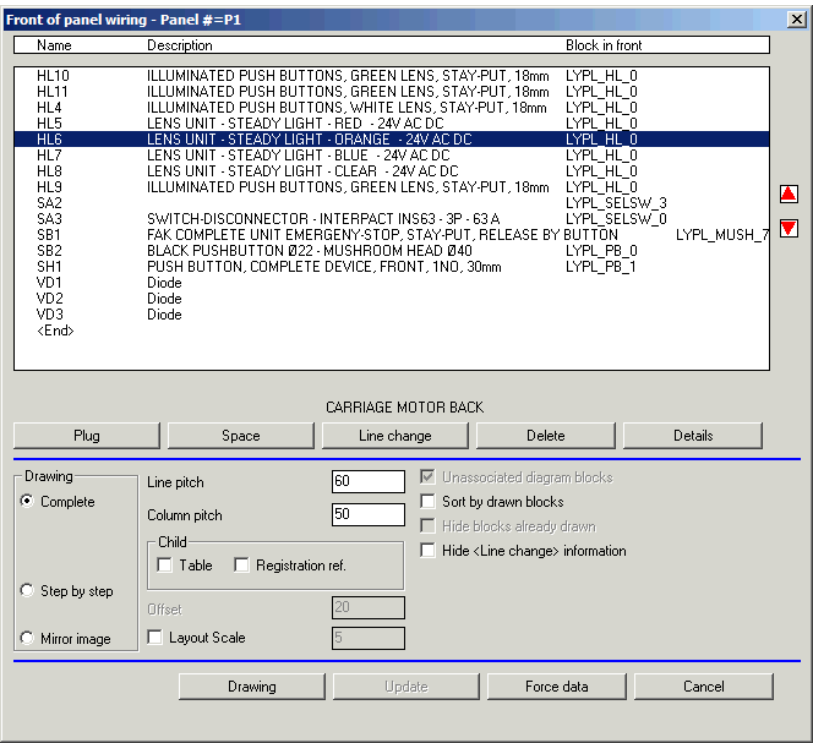

A number of tools are available to change the final drawing. These can be customized as required.

The diagram in the example shows the P1 pushbutton panel that has been changed by adding **<Space>**, Blanking **Plugs** and **<Row Change>**.

The arrows to the side of the window can be used to **move the components** up or down one position at a time

Example: making a pushbutton panel.

Plug	Use to insert a blanking plug between the components in a list. The plug is handled by inserting a symbol of the same name. Take care not to remove or rename this block.
Space	Use to insert an available space between the components in the list by inserting a symbol of the same name. Take care not to remove or rename this block.
Row Change	Use to jump to the next row. This is essential in order to prevent the drawing of the pushbutton panel from occurring along the same row.
Move	Use the arrows at the side of the window to move the selected component up or down in the list. Components can be moved by one position at a time.
Delete	Use to delete a component, space, plug or “row change”.
Details	Useful for accessing all available information related to components.

Panel layout must comply with the following parameters:

Column pitch	This is the distance (in mm) between one component and the next on the same row (also valid for “plug” and “space”).
Row pitch	This is the distance (in mm) between one row of components and the next. To set this value correctly always consider “Child table” settings and the relative offset value.
Child table	The layout also contains the connections for additional component contacts (only for panel rear). This information is set out in a table: the first row of the table is drawn under the component at the distance defined in the table offset.
Child offset table	This is the distance between the layout component and the table that describes the connections of the related contacts (only for panel rear).
Diagram blocks	For symbols with no panel block configuration the same diagram symbol is used on the layout instead.
Order according to already drawn blocks	When the drawing scan is repeated, the list is shown in its original form without the changes to plugs, spaces and row jumps. If the <u>current sheet</u> contains the panel layout , this option can be used to get the configuration. This is of prime importance, especially if you require to run an Update function or obtain a mirror drawing (i.e. front to rear or vice versa).
Hide blocks	This is particularly useful when drawing in step-by-step mode, as components are gradually removed from the list as they are inserted into the drawing (to produce the layout). Conversely the word “ Yes ” is displayed in the relative “inserted” column when symbols have already been drawn.
Hide row change	The <change row> display in the list is frozen.

When the list has been customized (with plugs, spaces and row jumps) and after checking correct pitch settings (horizontal and vertical) press **Drawing** to proceed to the graphic drawing stage.



The same procedure is used to draw front and rear of panel.


Drawing

Complete

The complete layout draws all the symbols in the list - you only need to indicate the start point.

Select first point in top left:

The “step-by-step drawing” variable must be disabled before the complete layout can be drawn.

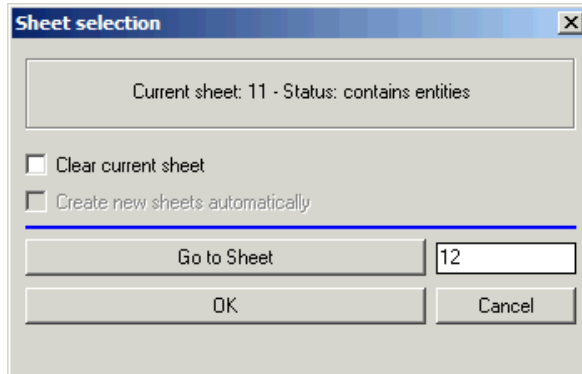

If the destination sheet is in use (**Status: contains entity**) you will be asked whether you wish to continue or whether you wish to select a new sheet number.

When “**Clear current sheet**” is enabled, all entities contained prior to drawing are deleted.

Confirmation is requested for each subsequent sheet.

Step-by-Step

Symbols are drawn one at a time (symbol selected):

Select block insertion point:

When using this system it is advisable to activate the “**Hide Blocks**” function. This facilitates the operation by eliminating components from the list as they are inserted into the drawing.

Mirror Image

This function can be used to obtain the mirror image of a layout. If the panel front has been drawn, the panel rear can be obtained immediately (or vice versa).

N.B.: the drawing of the rear panel is the mirror image of the front panel.

The **Update** button is used to transfer drawing changes to the symbols in the layout. This avoids having to completely re-create the layout sheet.

Update

This function is used when changes on the electrical diagram must also be shown on the panel layout.

Even when simple operations are carried out, such as changing wire numbers (*see Sect. 5.1*), assigning wiring pins (*see Sect. 7.2*) or changing the contents of “Functions” (*see “Function legend” Sect. 14.1*) layout data must be updated. The Update function enables this to be done without having to do the drawing again.

When **Update** is pressed, the function updates all the components in the list or on the current drawing sheet.


When **Force data** is pressed, the user is asked to touch a symbol on the drawing. The data for this symbol are replaced with the values of the component highlighted in the list, without any further requests.



WARNING: Inconsistent data, such as duplicate references, are marked in the list with a ? next to the name of the component.

Panel front

The description on the component label is obtained from the comments contained in the “Function1” and “Function2” attributes (see “*Function legend*” Sect. 14.1).

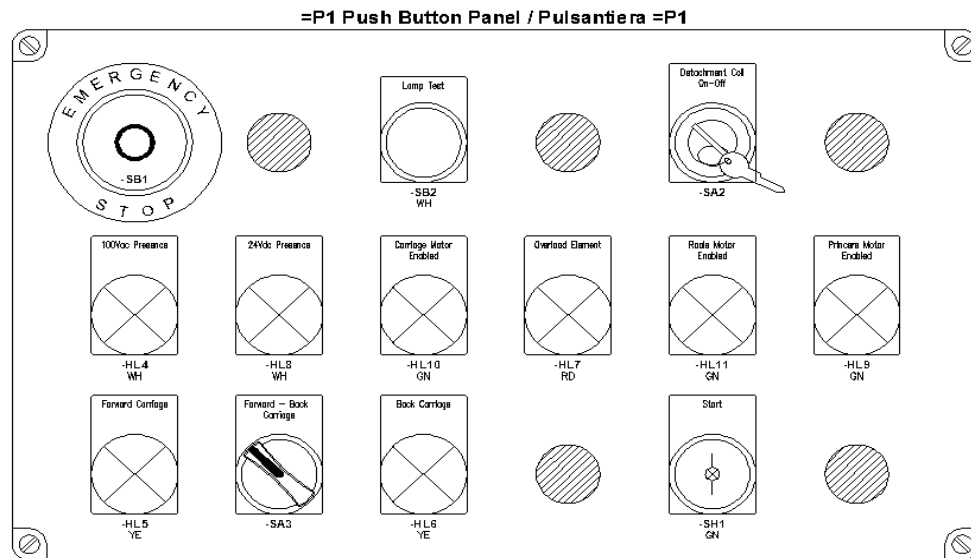


Example of “panel front” layout.

The **Update** button is used to transfer drawing changes to the symbols on the layout. This avoids having to completely re-create the layout sheet.

Panel rear

The description on the component label is obtained from the comments contained in the “Function1” and “Function2” attributes (see “*Function legend*” par. 14.1). **Note: the drawing of the panel rear is a mirror image of the panel front.**

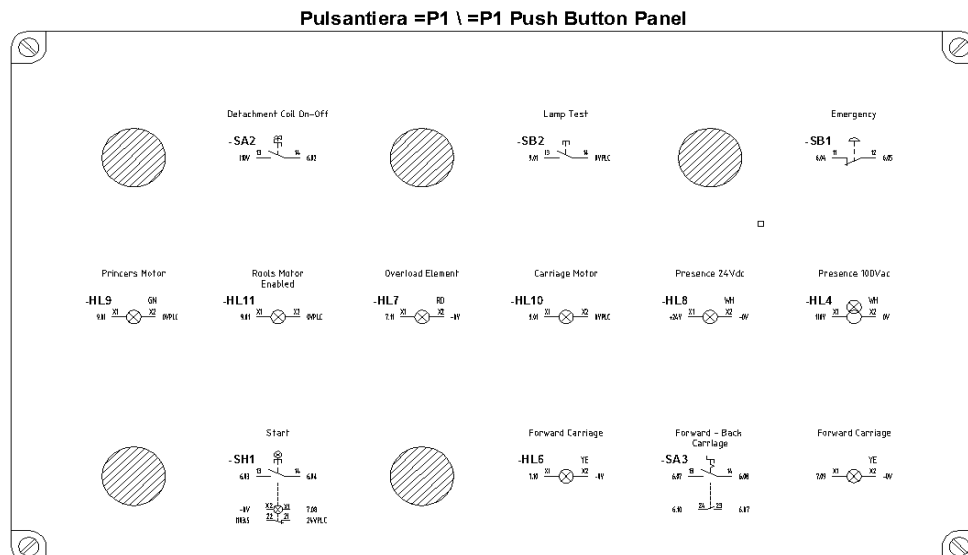

Example of “panel rear” layout.

The presence of the pin reference depends on the methods used for cross-referencing (see Sect. 7.2).

The **mirror** drawing option can be used to create the front and then immediately create the rear of the panel (or vice versa), maintaining the same configuration.

15.5 Panel symbols




Pop-menu > *Layout*

This function is used to access a library of symbols that are useful for manual drawing of the pushbutton panel layout. These symbols are complete with attributes, which are setup manually during insertion into the drawing.

These symbols are used for drawing the pushbutton panel layout (front or rear) manually or automatically “15.4 Pushbutton panel”.

Symbols – Pushbutton panel front

This function accesses a library of symbols that are useful for drawing the layout of the front of the pushbutton panel.

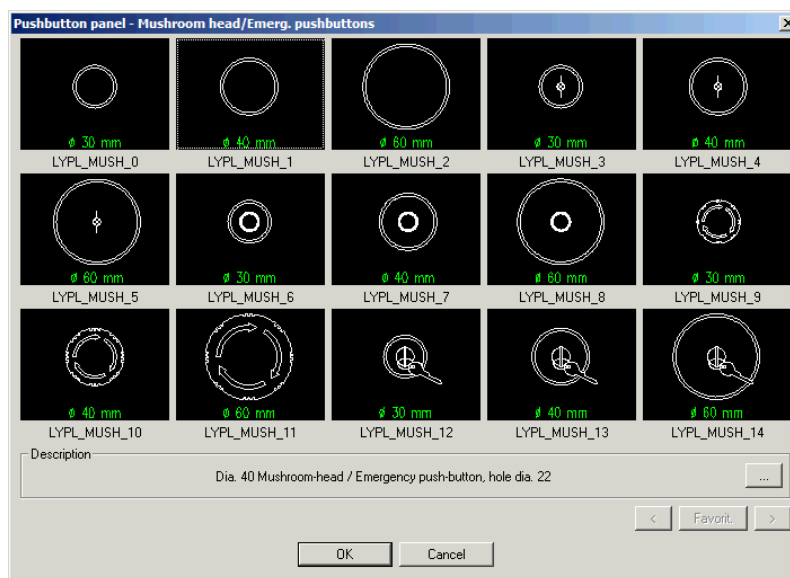

The blocks are stored in the Panel directory. For each DWG symbol there is a corresponding .SLD image (slide) with the same name, displayed in the dialogue window.

New symbols can be customized and stored in the same directory as existing ones (Libreria\Quadri).

The name of the block must follow on consecutively from existing blocks (**Lyplnt_18**, **Lyplnt_19**, etc.), with up to a maximum of 20 (the dialogue box can display a maximum of 20 windows).

The default insertion **scale** is **1:1**. New or different scale factors can only be defined by customizing the menu (see Sect. 16.3).



If one symbol is deleted this may prevent those with successive numbers from being displayed.

Symbols – Pushbutton panel rear

This function accesses a library of symbols that are useful for drawing the layout of the rear of the pushbutton panel.

These symbols are complete with attributes, which are setup manually using the “Ddatte” command during insertion into the drawing.


These symbols are used for drawing the pushbutton panel layout manually or automatically.

15.6 Panel utilities

- **Modular cabinets**
- **Modular panels**


This symbol library can be used to draw cabinet and standard panel structures quickly, using the symbols for glass or steel doors, double doors or ventilated front base plates, etc.

The various panels can be made up manually or by using a library of ready-made panels for most standard requirements. A series of symbols that represent overall dimensions for switches and relays (and other components) are also available for a wide range of layouts. These commands can be used to obtain a structural drawing like the one shown in the following example:

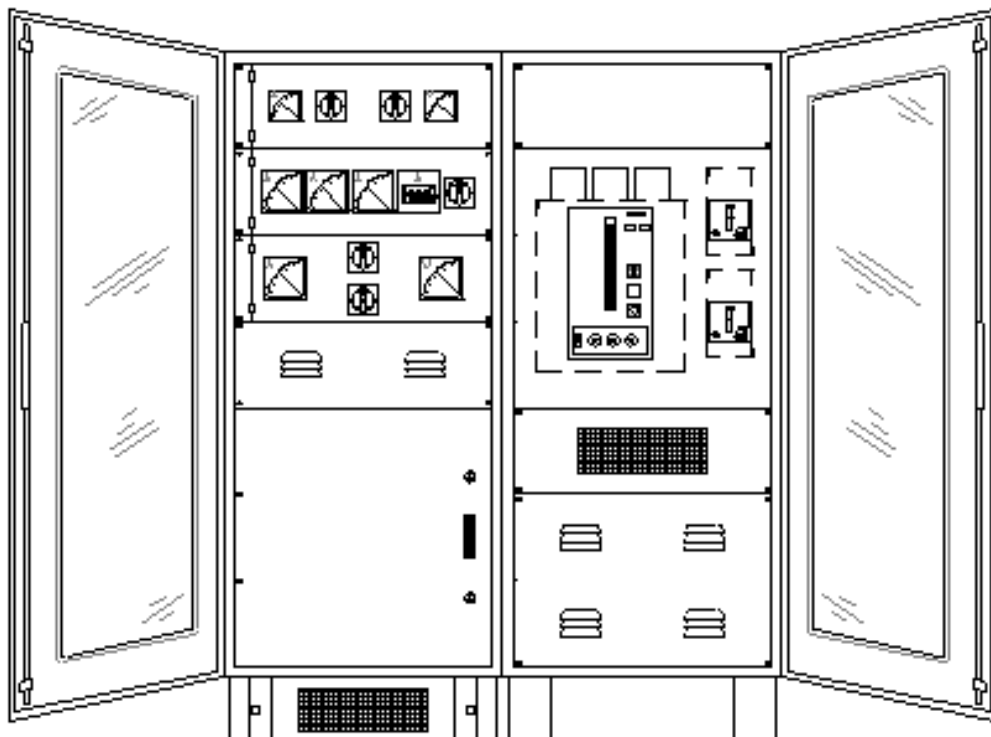

Example of layout using the “modular panels” library.

The default setting for these functions is 1:10, so that the drawing is suitable for A3 sheets. The final dimensions must always be expressed in the same scale factor by using the “Change variables” function to set the **DIMLFAC** variable to 10.

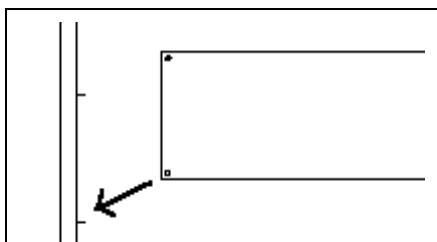

To insert panels accurately, the cabinet drawing includes reference notches. Use these as insertion points for the various panels using the Osnap **INTER**section method.

To make sure that the component references on the panels are automatically requested, use the “Change variables” function to set the **ATTDIA** variable to 1. Otherwise these must be completed later using the “Ddatte” command.


15.7 TeSys U



Pop-menu > *Layout*

The program “**TeSys model U**” configurator was created in collaboration with Schneider Electric, a simple tool aiding to configure (and draw) motor **starters for power up to 15 KW**, using Schneider series TeSys U products.

Once the motor starter is configured, both electrical and topographic scheme can be traced with a simple ‘drag-and-drop’.

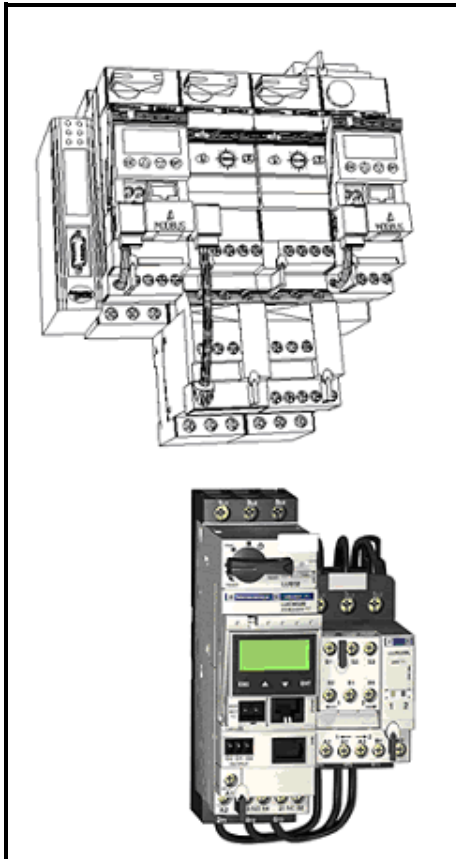

To create a new motor starter use the following commands:

- **TeSys U – Configuration**
- **TeSys U – Draw**

“TeSys model U” is the starter for alternating-current three-phased motors revolutionizing motor starts: further than the traditional functions (sectionalize, command and protect) it can communicate with automation systems using the most popular communication buses.

High reliability (breaking power of 50 KAIC, standard version; up to 130 KAIC with additional limiter), thanks to its manufacturing system (compact starter) that grants full coordination.

Choice among two power bases (12 and 32A), 6 magneto-thermal protection modules (standard, advanced and multifunction). These two components only replace the traditional motor starter up to 15 KW. Additional communication modules (no more room needed) transform the motor starter in an automatic peripheral.

Electrical features:


- 2 power bases: from 0,15 to 12 A and/or from 0,15 to 32 A.
- Voltage rating: up to 690 Vac.
- Standard breaking power: 50 kA/400 V, upgraded to 130 kA with an additional limiter.
- Control unit: 6 size from 0,15 to 32 A.
- Control voltage: lower consumption, AC or DC depending on the control unit.
- Standard width 45 mm.
- Reversing module mounted at the bottom, not increasing the module width.

Control units features:

- Standard module: protection against shorts and overloads class 10.
- Advanced module: protection against shorts and overloads class 10 and 20, and can be upgraded with auxiliary modules to manage manual or automatic restarts and overload managements.
- Multifunction module: the smartest version, magnetic and thermal protection in all classes (from 5 to 30), equipped with a LCD display reporting in real time information such as thermal state, events history and operation. An integrated keyboard set the electrical parameters of the unhooker.

TeSys U – Configuration

This command starts the configuration wizard: the motor starter is defined through few choices depending on your needs.

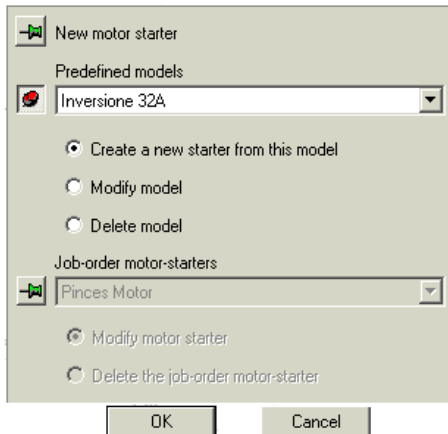


At first choose among:

- **Create a new motor starter**
- **Use a pre-defined model**
- **Modify an existing one**

Then specify the peculiarities of the motor (see the following figure).

While choices are made, modules, control units, contacts and accessories are filtered, and the final components are chosen.

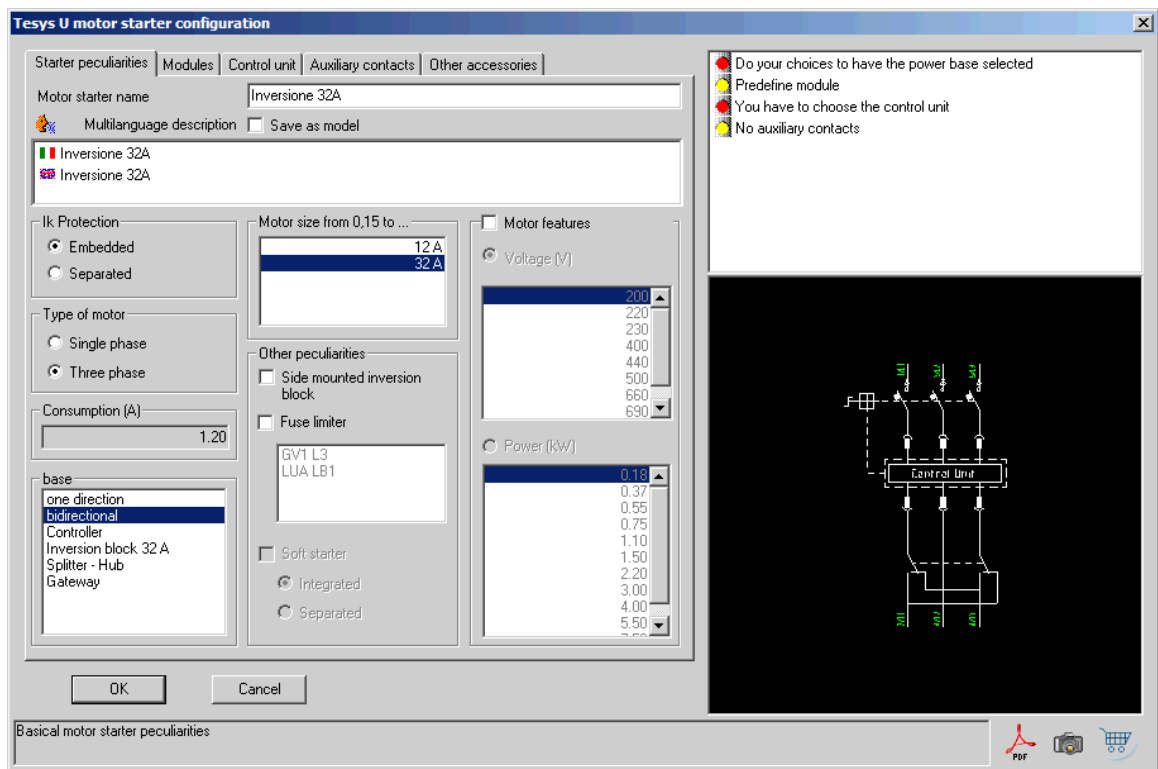

- Power base is unambiguously determined
- A module has been selected
- The control unit has been selected
- Some auxiliary contacts has been selected


Before saving the new configuration, check the “status lights” and prompt: in case of incoherencies a warning is displayed.



See “TeSys U – Draw”.

TeSys U – Draw

This command **transfers the configuration** of the motor starter **to the drawing**.

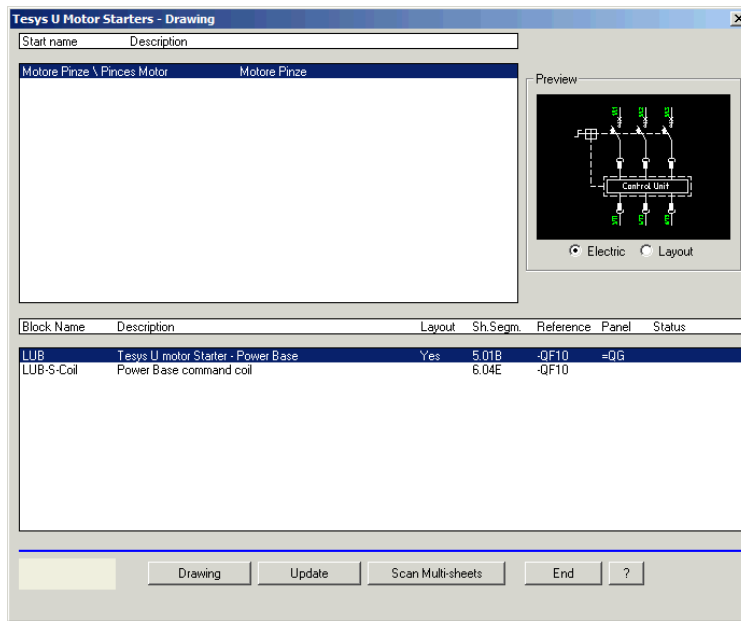

You can draw either the Electrical scheme or the topographic **Layout**.

First, select the motor starter you are going to draw from the upper list; second, select the symbol to insert.

Electrical scheme

Pressing button **“Draw”** the symbol is inserted in the drawing and all the automatic procedures associated to its category are run (see *“17.1 Categories of symbols”*). Repeat this operation for each component, until all **“To insert”** labels disappear from the **“Status”** column.

Topographic Layout

Pressing button **“Draw”**, all (3d) symbols related to the motor starter are combined and drawn with this single operation.

Press **“Update”** to refresh the list status in case the drawing has been modified: missing symbols can be inserted again following the procedure above.




See **“TeSys U – Configuration”**.

15.8 Unravel Panel Wires



Pop-menu > *Layout*

The program for unravel the panel wires designs automatically the connections between components and raceways passed inside the electrical panel.

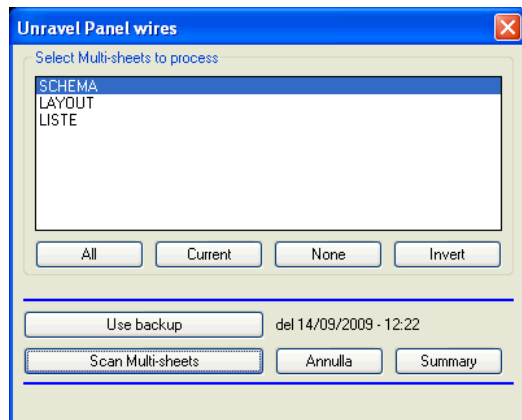


The command starts with the request of the multi-sheets to be processed.

The processing is performed on the multi-sheets selected from the list pressing **Scan Multi-Sheets**.

With **Use Savings** it is possible to access quickly the data processed previously, to design or make changes without repeat the scanning.

("Use Savings" does not consider the modification made on the electrical schemes after the data and hour indicated).

The "Unravel Panel Wires" window is opened at the end of the scanning; this window contains all the list of components divided by electrical panel.

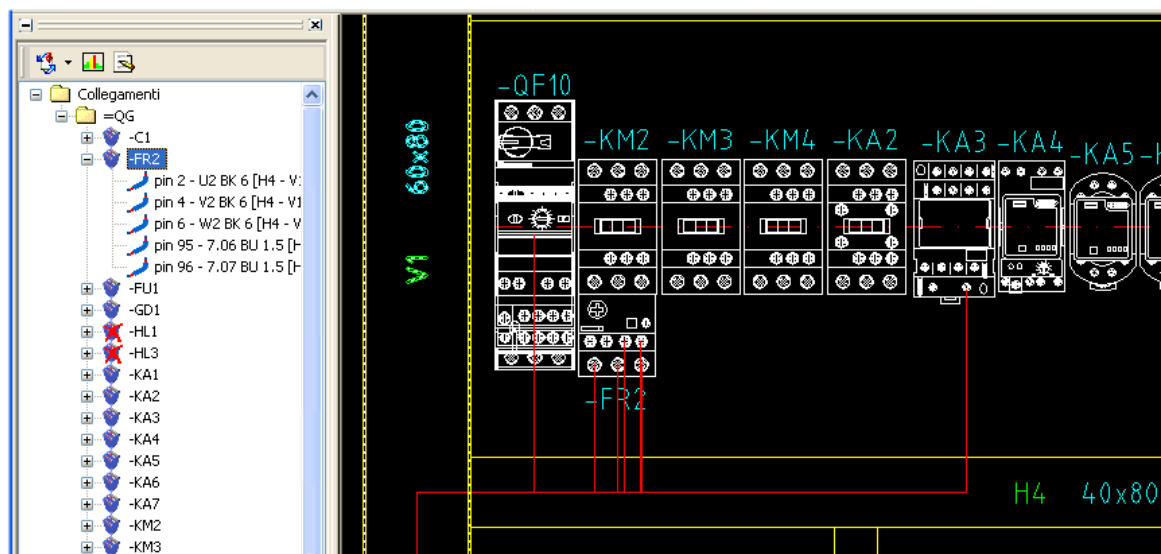

Unravel Panel Wires, details of a component cabling.



(see "15.3 Topographic").

Selecting a component from the list, the panel wiring is immediately visualized (along with the passage on the raceways for the connection between components and terminals). All the calculations are done automatically considering the rules set by the user. By **selecting a panel, all the components wiring is visualized**.

The way for establish automatically the best wires track/path follows some important considerations. First of all, the power single-feed wires have priority on the raceways, then the common cables and finally the connections. The priority table for wires is defined as:

1°	Power : Connections with a minimum cables' section of 6mm ² are considered as power cables.
2°	Common : Common cables with at least 10 connections has priority (equal or greater than 10).
3°	Connections

(It is possible to modify the "Cable Section" and the "Commons Quantity" on the Unravel Settings).

The power cables and the commons have in general a higher probability to pass on the raceways with the shortest track than a normal connection.

An alternative track is evaluated in case one of the raceways is saturated, equivalent to the 70% of the volume occupation (a warning message is displayed once the 50% of the raceway volume is occupied).

(It is possible to set different saturation percentages on the Unravel Settings).

The definition of the track inside each group (power single-feed cables, commons and connections) considers the following variables:

1°	Shortest track.
2°	Uniform distribution on the raceways.
3°	Maximum percentage of the raceway volume occupied: 50% by default.
4°	Minimum number of curves: for cables with a big cross-section.
5°	Cables with a big cross-section.

It is possible to modify the unravel obtained automatically, **by forcing different tracks manually** or disabling the pass of a cable in a raceway according to its color:

- [See Wiring](#)
- [Edit Wiring](#)

The icons

	Component with wiring OK .
	Component with wiring <u>incomplete</u> .
	Component with wiring modified manually (forced).
	Component <u>not found</u> on the current topographical drawing.
	Terminal Block with wiring OK .
	Terminal Block with wiring <u>incomplete</u> .
	Terminal Block with wiring <u>modified manually (forced)</u> .
	Connection OK .
	Connection OK (Commons type).
	Connection OK (Multi-Polar cable type).
	Connection <u>not found</u> . <i>This is the main cause for a Component or Terminal Block with <u>incomplete</u> wiring.</i>
	Connection modified manually (forced).




The topographical drawing of the panel must be designed using the adequate commands: boards and raceways with "[15.2](#)", components and terminal blocks with "[15.3 Topographic](#)".




WARNING: The raceways must be designed with Spac **2009** or a higher version (the attribute "[Sigla_Sbroglio](#)" must be present on the symbol LY_Canalina).

See Wiring

The result obtained automatically with the “Unravel Panel Wires” **could be consulted and printed in several ways**; let’s see some examples:

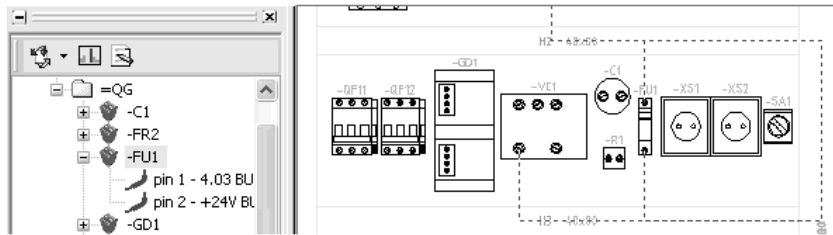


Selecting a **component** (from the list) you can highlight the complete wiring on the drawing.

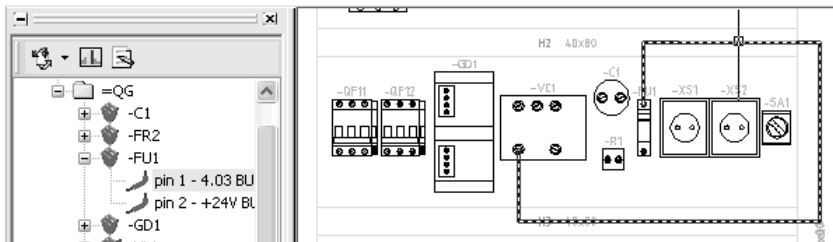


Selecting **one of the pins** you can highlight only the track of the selected connection in the drawing (pin to pin).

(Example on 1° pin in figure)

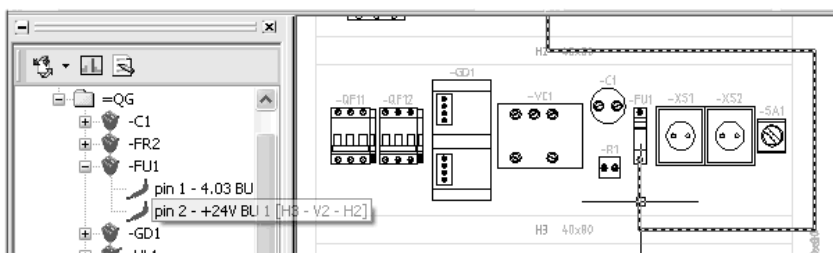


Selecting **one of the pins** it is possible to highlight only the track of the connection selected on the drawing (pin to pin).

(Example on 2° pin in figure)

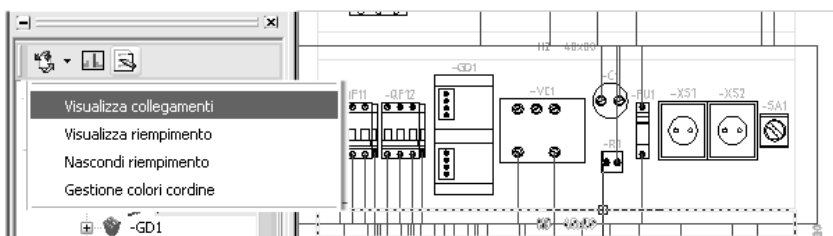

Selecting **one raceway** it is possible to highlight all the connections passing.

Pressing the right button of the mouse it is possible to open the contextual commands menu.

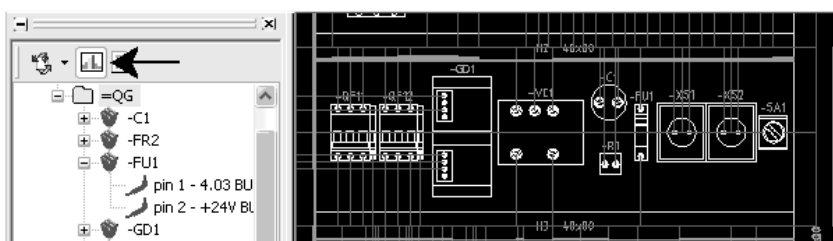

Pressing “**View \ Hide Filling**” the space occupied inside the raceway is simulated.

The color establishes the space occupied.

Filling with color **green** = **OK**, the space occupied is less than **50%**

Filling with color **yellow** = **warning**, the space occupied is between **the 50% and the 70%**,

Filling with color **red** = **alarm**, the space occupied is higher than **70%**

(It is possible to set different filling percentage on the Unravel Settings).



To free the raceways with a filling higher than 70%, it is required to modify the required connections selecting different tracks (see “**Edit Wiring**”).

Edit Wiring

To modify the wiring tracks obtained automatically, it is **necessary to click on the right button of the mouse over the component name (or on the single connection) to be modified**. From the contextual menu, it is possible to select the command most suitable for the modification:

- **Modify Track**
- **Force Tracks**
- **Set Forbidden Raceways**

Selecting one component all the connection tracks from the selected component are modified simultaneously.


Selecting one pin of the component the track associated to the selected pin is modified (the other connections remain without variations).

Modify Track

Modify the track of one or more connections is very easy; it is enough to select a different raceway on the drawing and the program re-calculates a track passing by the raceway selected.


Example :

Pressing the right button of the mouse over the -QF8 component, it is possible to visualize its current wiring. Then you can select “**Modify Track**” (see figure).

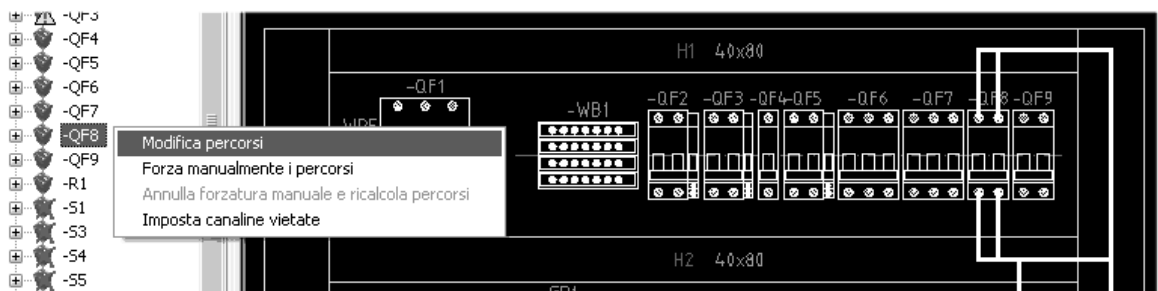

The function requires:

Select raceway: (select the raceway on the left)

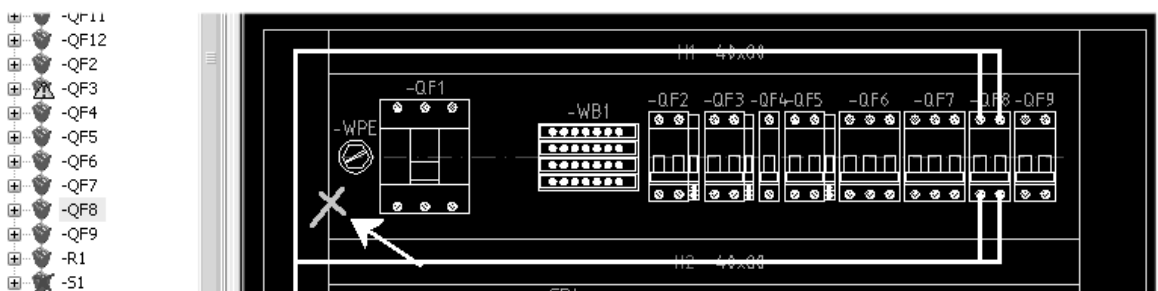

This figure illustrates all the connections of -QF8 addressed to the selected raceway. It is also possible to select several raceways in case you want to define a more specific track.

The modification could have no effect in case there is a **forbidden raceway** (see “**Set Forbidden Raceways**”): Using the “**Force manually the tracks**” command, it is possible to modify the tracks without considering the prohibitions (see “**Force Tracks**”).



Pressing this button the **Unravel is re-calculated completely** keeping the tracks modified and forced manually (“**Update keeping the manual Forcing**”).

On the other hand, pressing the option “**Update deleting manual Forcing**” all the Unravel is re-calculated from the beginning and the eventual changes or modifications are lost.

Force Tracks

The command works in the same way that “**Modify Track**”, it **consents to make a change on the track ignoring the forbidden tracks (if any)** in the raceways (see “**Set Forbidden Raceways**”).

The command “Cancel Forcing” is used to recalculate the track to restore the original one.




Pressing this button the **Unravel is re-calculated completely** keeping the modified and manually forced tracks (“**Update keeping the manual forcing**”).

On the other hand, by pressing the option “**Update deleting the manual forcing**” all the Unravel is recalculated from the beginning and the eventual changes or modifications are lost.

Set Forbidden Raceways

Selecting a raceway and pressing the right button of the mouse, the contextual menu is activated. Select the “**color wire management**” command.

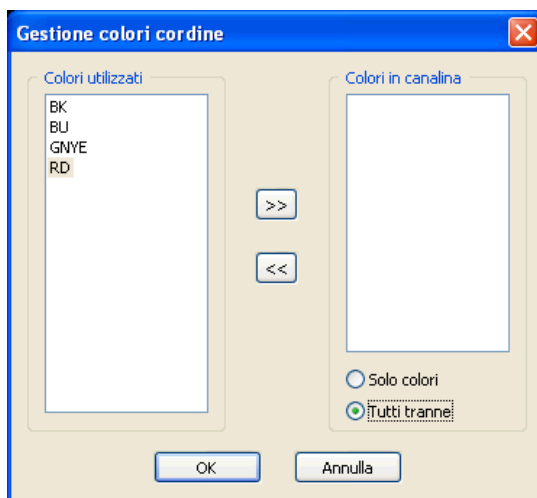

This is a simple filter that establishes the selection of the wires colors to be forbidden.

With “All except” option **the wires colors in the list not could be placed in the raceway selected**.

With “Only the colors” option **the wires colors in the list could not be placed in the raceway selected**.

The activation of “**Set Forbidden Raceway**” applies the filters of all the raceways.



The command “Force manually the tracks” consents to modify the tracks ignoring the prohibitions to pass in a raceway (if any)

Export Wiring Data

Pressing the “**Output CSV**” button the **Unravel data is exported to an ASCII file** (compatible also with Microsoft Excel® from Windows).

The “Unravel Panel Wires” data **contains the length calculated for each connection**, according to the track selected for the wiring and is memorized on the file with an approximation of 50 mm.

(It is possible to set different offsets on the Unravel Settings).

The file exported from the “Panel Unscrambling” is used as a base for **the interface with automatic wires cutting machines**.

Unravel Settings



Pressing this button, the **Unravel Settings** will be opened.

The operation of the different settings and options is described directly on the program's windows.


15.9 Installation Layout

 **Pop-menu > Layout**

This command is used to design the placement of the component in the installation.

This type of design is called “**Installation Layout**” and considers all the Panels configured (see section “4.3 Panel setting”) with the associated Components, Connectors and Terminal-Blocks.

The command opens the installation structure in a window similar to the one illustrated in the figure:

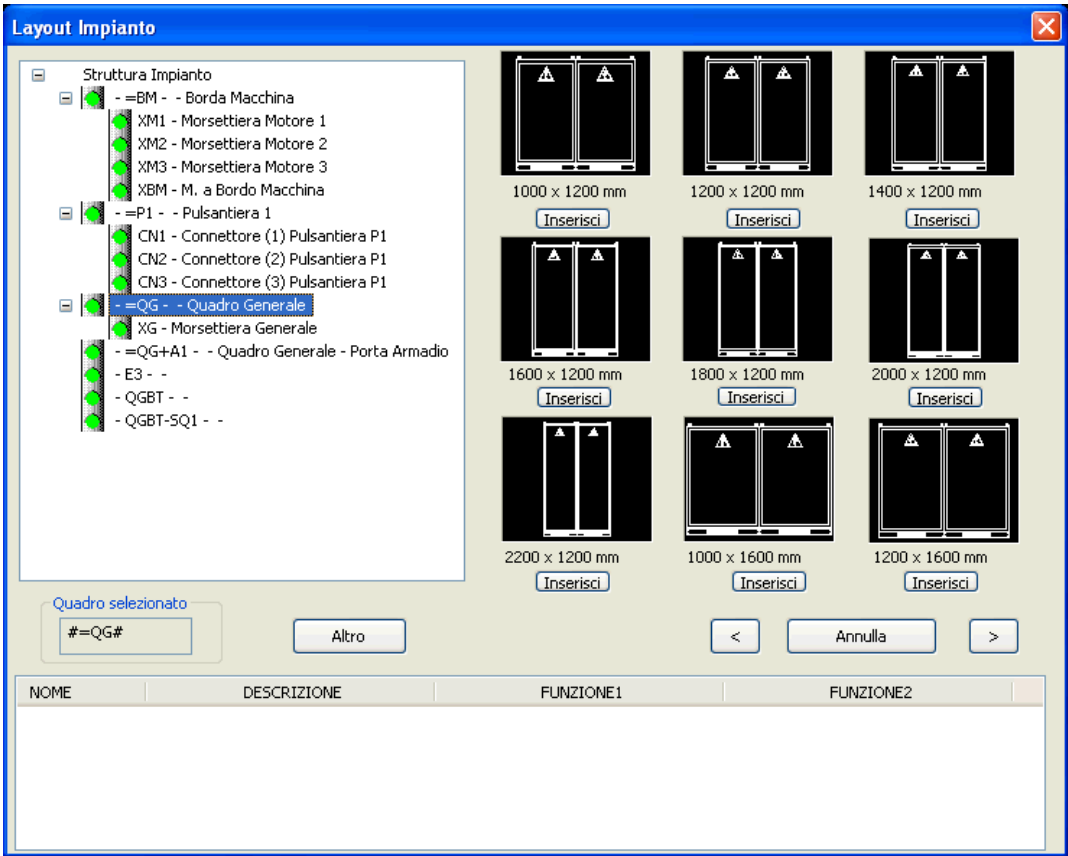


Example of an installation structure for the design of the layout.


To design the “Installation Layout” it is required to select from the installation structure tree the different elements (that is Panels, Connectors or Terminal Blocks) and press “**Insert**” button on the figure of the desired symbol (pressing “<” and “>” buttons you can browse through the different figures available).

To design the Components it is required to select first the associated Panel and press the “Other” button to load the list of all those designed.

 Once the load is executed, it is necessary to select from the list the names of the components and press “**Insert**” button on the figure of the desired symbol, as done for Panels, Connectors and Terminal-Blocks.




The “**Other**” button is active only when a panel from the structure tree is selected.

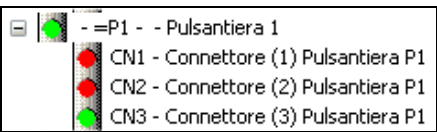

The “control traffic-light” highlights in red the components designed.

After the insertion of the Panels, Connectors, Terminal Blocks and other components in the drawing, **it is required to connect them using wires to highlight their links (tracks)**. After that we obtain a drawing as the one indicated as an example in the figure:

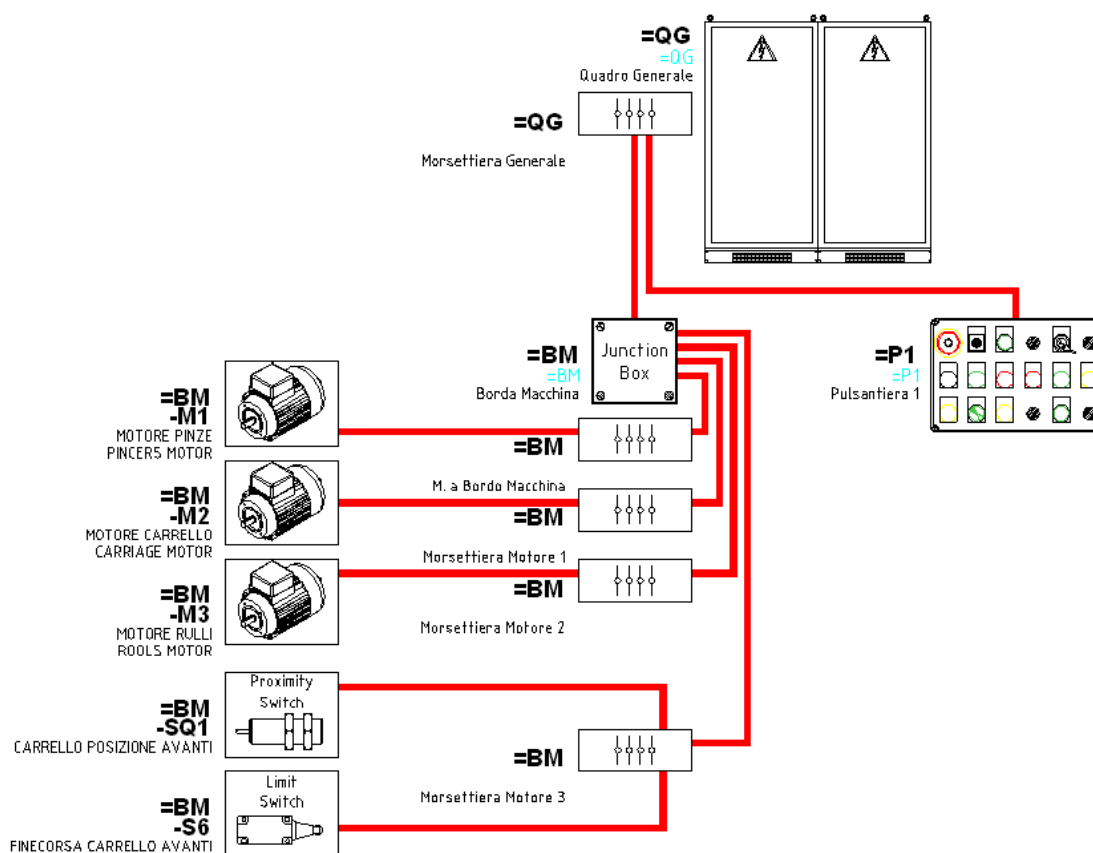

Example of a structure designed with the Installation Layout.

The tracks could be then “specialized” with further information (details regarding the length and the type of wire for example). You can refer to commands “Tracks length” and “Cable labels”.




The tracks must be designed with lines (not poly-lines, splines etc.).

Installation Layouts Symbols

Each figure corresponds to a symbol memorized on the folder Librerie\ Layout_Impianto:

- The prefix PANEL_ corresponds to **Panels** symbols
- The prefix TERMINAL_ corresponds to **Terminals and Connectors** symbols
- The prefix COMPONENT_ corresponds to **Components** symbols

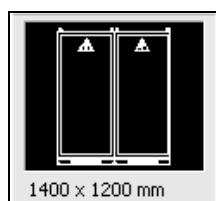


Symbol Panel_020.dwg

It is possible to personalize new symbols memorizing them in the same folder of those already present in the system; the block name must be consecutive to the existing names (Panel_040, Panel_041, Terminal_009, Terminal_010, Component_013, Component_014, etc.).

Each .dwg block has an .sld image associated (slide) with the same name for the visualization on the dialogue box.

Tracks length

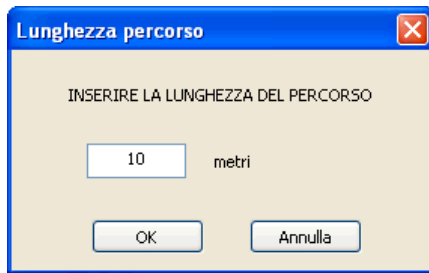

This command is used to insert the track/path length (in meters). It is enough to select a single segment of the line (from those composing the track).

It is possible to design a list (legend) of all the tracks with command “**Installation Layout Report**”.




See “15.9 Installation Layout”.

Cable labels

This command is used to assign the name of a cable to a specific track.

The cable’s labels could be assigned after insert the “**Tracks length**”, it is enough to select a single line segment (from those that compose the track).

A table is designed on the place indicated by the user; the graphical characteristics of the table could be modified with the entering in its configuration (pressing the right button of the mouse).

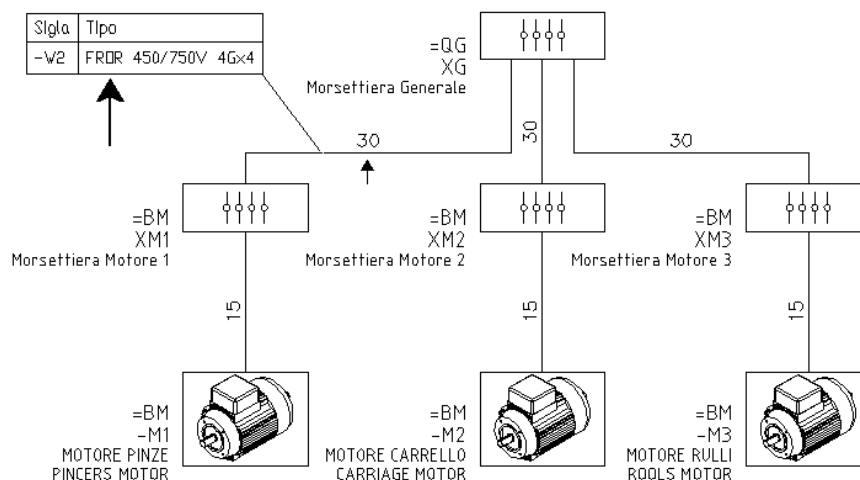

Example of a track with length and table “Cable Label”.

It is possible to design a list of all the tracks with command “**Installation Layout Report**”.



See “15.9 Installation Layout”.

Installation Layout Report

It is possible to make a legend of the “Installation Layout” only if the tracks were “specialized” (with the details related to the length and wire type) using the “**Tracks length**” and “**Cable labels**”.

A summary table (legend) is designed in the place indicated by the user; the graphical characteristics of the table could be modified with the entering in its configuration (pressing the right button of the mouse).




See “15.9 Installation Layout”.


16 Symbols

16.1 Symbol insertion

You can insert symbols choosing them from the drop-down menu related to the library set as default for the project (see Sect. 4.1); the ones with a great number of symbols (**Iec** and **Unif**) have two insertion menus (Symbols and Breakers). Clicking on a group name (e.g. Relay Coils) you open the dialogue box:

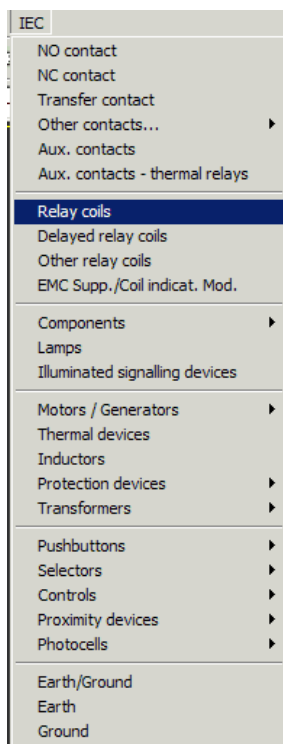


Click **once** on the symbol to display the description, **twice** to insert the symbol.

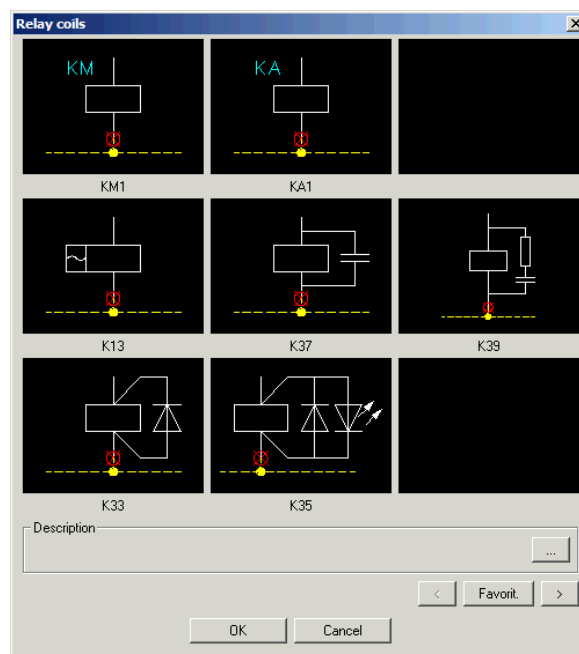

Symbol insertion panel



 Press this button to activate the “**Symbol Configuration**” (see Sect. 4.2). In case of generic symbols the dialogue to edit or insert descriptions is displayed.



The selected symbol is added to the **favorites** group. This group contains the most frequently used symbols (see “16.4 Favorites symbols”).

For the fast insertion of the symbols, is possible to use the new program “**8.7 LibCenter**”, tree-view structure and other search functions.


- **Insert Parent symbol**
- **Insert Child symbol**
- **Insert Element**



(See “17.1 Categories of symbols”).

Insert Parent symbol

The program recognizes “**Parent symbol**” because the block contains the **Pres=M** attribute. Coils, switches, pushbuttons and selectors, etc. are regarded as parent symbols.

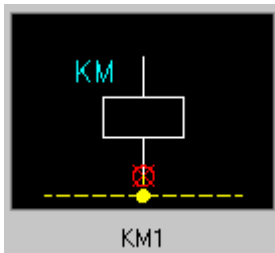

By way of example we shall consider the insertion of the IEC standard KM1 relay coil.

Click **once** on the symbol to display the description.

Double-click to insert the symbol.

KM1 Symbol - Insertion point:

- If the insertion point is **above a wire**, this is automatically broken by the exact size of the symbol.
- If the insertion point is **above a symbol**, an automatic connection is drawn till a new, real insertion point (only for orthogonal insertions).
- If the insertion point is **in space** (not on wire) the program proceeds according to the configuration defined in Preferences (see Sect. 4.2).

If the symbol is a parent, the following dialogue window appears:

Parent Symbol insertion.

The name is based on what has been entered in the appropriate configuration in “**Symbol referencing**”, the composition can be viewed pressing the button “**Info**” (see Sect. 4.2).

It is, however, possible to enter any name (pressing “**Regen**” the default value is restored).

The panel is the one entered as the default panel in “**4.3 Panel setting**”.

At this stage it is also possible to select a different panel from the references in the list pressing “...”.



Press these buttons to increase or decrease the name of one unit.

The data associated to the material (Manufacturer, Type, Description and Quantity) is set pressing the button **“DbCenter – Materials Feature”** (See *“8.2 Materials feature”*).

The materials codes could be set (as default value) in **“Symbol Configuration”** (see Sect. 4.2) **and can be saved in the prefix file that is currently in use**. The same procedure is valid for *“Registration reference symbol”* that is automatically inserted by the program during cross-referencing (see Sect. 7.1).

Various combinations can be obtained by pressing **Contactors**, **Auxiliaries** and **Heads**:

Contactors	Press this button to display all the available contactor codes (which are present in the Riferim\Cnt directory). These are the references to be used for all coil types.
Auxiliaries	Press this button to display all the auxiliary and additional contact codes available (which are present in the Riferim\Aus directory). These are the references to be used for switches, buttons, selectors, etc.
Heads	Press this button to display all the additional head codes to be associated with contactors or auxiliaries (present in the Riferim\Tsa directory).
Insert reference	When “Insert reference” is deactivated, the contact reference symbol is not drawn. The reference symbol is stored in the attribute to allow the cross reference to insert the reference symbol at a later date <u>and only if necessary</u>. This option is only available when the contact Real-time cross-reference is enabled (see Sect. 4.2 <i>“Cross Reference”</i>).

The following additional information can also be inserted as required:

Function1	Used to compile the attributes required by “Function legend” (see Sect. 14.1).
	Pressing this button opens the function list used in the job order. You can also access phrases from the translator dictionary directly.
Function2	This is the second row of Function1.
Support	Available (optionally) for the dissipated power factor, which is useful for calculating overtemperature.

The **“Ignore in commands”** list can be used to exclude the specific component from the main processes, such as the bill of materials, legends, graphic changes, cross-referencing and labelling either automatically or manually (see *“14.7 Ignore symbols”*).




WARNING:

Avoid the data introduction with a manual compilation of the symbol's attributes.

Entering blocks with fence

This only works for inserting a symbol in space (not on a wire).

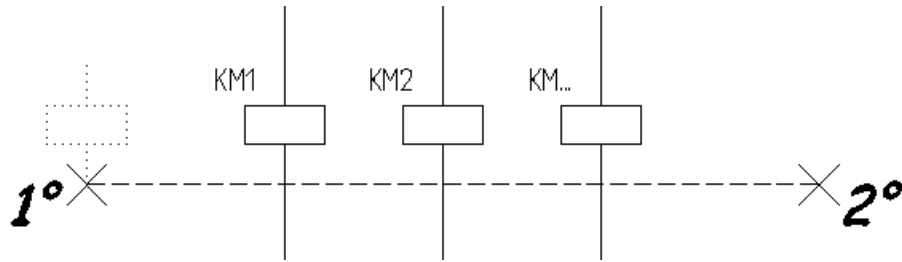

Example: "fence" insertion on 3 wires



On

Use this to insert a second point to create a fence for **multiple symbol insertion** (on all lines intersected by the fence).

Press Enter to confirm the first point in space.



Off


The first point in space is automatically confirmed without pressing Enter.



This configuration can be changed in Preferences "Insert blocks with fence" (see Sect. 4.2).

Snap-to-segment block insertion

This works exclusively when inserting a symbol in space (not on a wire).

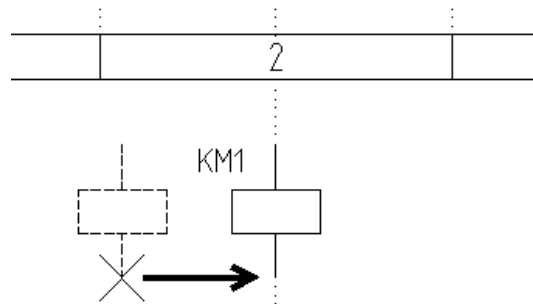

Example of automatic "centering" in segment 2.



On

In relation to point (x) selected on the drawing, **the symbol is moved to the centre of the segment** closest to that point. In practice, this consists in the automatic alignment of symbols in relation to segments.

This function is particularly useful for functional single-feed drawings, or in any case, those that use single-feed symbols.



Off

The symbol is inserted on the point indicated on the drawing, irrespective of the shape and division of the segments.




WARNING: The exact reading of the segment number is ensured by the correct "Sheet Dimensioning" (see Sect. 4.2).



This configuration can be changed in Preferences "Snap-to-segment block insertion" (see Sect. 4.2).

Insert Child symbol

The program recognizes the “Child symbol” because the block contains the **Pres=F*** attribute. Contacts, transfer contacts, auxiliaries and additional elements are considered to be child symbols.

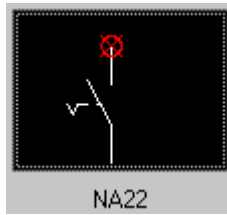

By way of example, we shall consider the insertion of a standard IEC NO22 open contact.

Click **once** on the symbol to display the description.

Double-click to insert the symbol.

NA22 Symbol - Insertion point:


- If the insertion point is **above a wire**, this is automatically broken by the exact size of the symbol.
- If the insertion point is **above a symbol**, an automatic connection is drawn till a new, real insertion point (only for orthogonal insertions).
- If the insertion point is **in space** (not on wire) the program proceeds according to the configuration defined in Preferences (see Sect. 4.2).

By selecting a prefix (in the list of those used in the drawing) the list of “Available references” displays the filtered list of the related parent symbols from which to select the Name to associate with the contact.

If the parent name (to which you wish to associate a child symbol) is not in the list, enter the reference manually in the **Parent name** space.

If the symbol belongs to the child category, a dialogue window then appears depending on settings as defined in the **Real time “Cross Reference”**.

Real-time cross-reference OFF

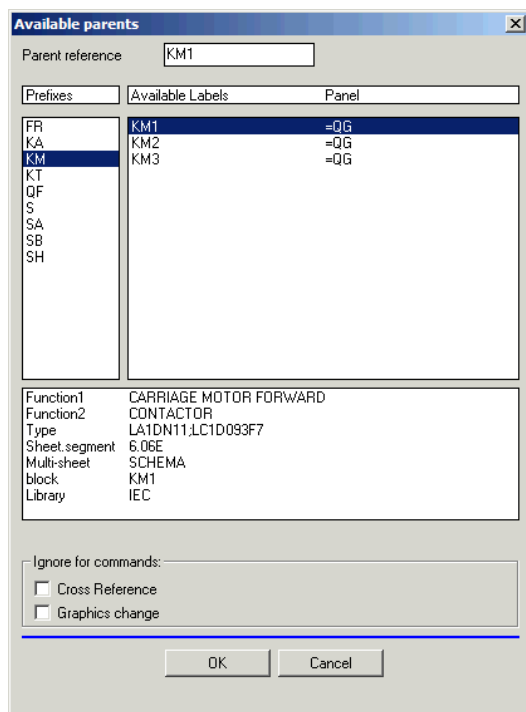

Inserting a Child Symbol.

Simple dialogue window.

Proceed as usual: the function displays the list of all the references of the parent symbols that have been drawn.

The position occupied by the contact (with the pin values) will be associated by cross-reference according to the processing sequence (see Sects. 7.1 and 7.2).

When one of the available references is selected, the Panel and the contents of Functions (1 and 2) are also displayed.

The “**Ignore symbols**” list can be used to exclude the specific symbol from cross-referencing and graphic changes (see “14.7 Ignore symbols”).

There is no need to repeat the exclusion from cross-referencing for a child symbol, as the “ignore variable” has already been defined on the related parent symbol.



WARNING: If the setting “**Same component**” is on (see “Preferences” par. 4.2), you are not allowed to input a free name during the child insertion.

Real-time cross-reference ON

While a child symbol (contact) is being inserted into the drawing, this can be directly associated with the position on the coil (parent symbol) according to its availability, which is defined by the code (registration reference). This mode can be enabled from settings (see Sect. 4.2).

Insert Contact FC - Parents available

Parent reference: KM1

Prefixes	Available Labels	Panel
FR	KM1	=QG
KA	KM2	=QG
KM	KM3	=QG
KT		
QF		
S		
SA		
SB		
SH		

Register Ref:

FAP 2 1
FAP 4 3
FAP 6 5

3P-0A-0C
11T

Ignore for commands:

☐ Cross Reference
☐ Graphics change

Function1: CARRIAGE MOTOR FORWARD
Function2: CONTACTOR
Type: LA1DN11.LC1D093F7
Sheet segment: 6.06E

PinA	Type	PinB/PinC	Reference	Pres	Contact	Sh.Segm.
1	AP	2	3P-0A-0C	>	FAP3	Power switch, open 5.03C
3	AP	4	3P-0A-0C	>	FAP3	Power switch, open 5.03C
5	AP	6	3P-0A-0C	>	FAP3	Power switch, open 5.03C
53	A	54	11T	>	FA	Open 7.03B
61	C	62	11T	>	FC	Closed 6.07D

OK Cancel Legend

On-line cross-reference of a Child symbol.



WARNING: If the setting **"Same component"** is on (see "Preferences" par. 4.2), you are not allowed to input a free name during the child insertion.

Functions near contacts

Depending on the configuration set in "Preferences" (see Sect. 4.2), attributes Funzione1 and Funzione2 are displayed or hidden on Child symbols.

- ☒ **On** The function associated to the Parent symbol is displayed on contacts. Command **"Update"** executed in **Function Legend** synchronizes modifications.
- ☐ **Off** Attributes Funzione1 and Funzione2 are invisible.



"Function legend" (see Sect. 14.1).

Detailed dialogue window.


Choose the coil reference and then (at the bottom of the dialogue window) the position of the contact with the respective pin values.

Real-time cross-reference is usually used to check coil availability immediately without waiting for the general cross-reference processing.

When an "Available reference" is selected the program displays all the information concerning the parent symbol.

Insert Element symbol

The program recognizes an “Element symbol” because there is no Pres attribute in the block. Lamps, motors, fuses, capacitors, etc. are considered to be elements.

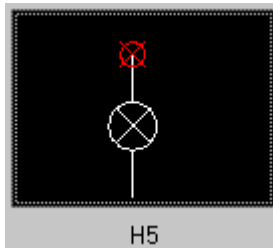

By way of example, we shall consider the insertion of a standard IEC H5 lamp.


Click **once** on the symbol to display the description.

Click **twice** to insert the symbol.

H5 Symbol - Insertion point:

- If the insertion point is **above a wire**, this is automatically broken by the exact size of the symbol.
- If the insertion point is **above a symbol**, an automatic connection is drawn till a new, real insertion point (only for orthogonal insertions).
- If the insertion point is **in space** (not on wire) the program proceeds according to the configuration defined in Preferences (see Sect. 4.2).

If the symbol belongs to the element category, the program displays the same dialogue window as that presented for parent symbols, with the difference that it is not possible to handle references (codes) for “contactors”, “auxiliaries” and “additional heads”.

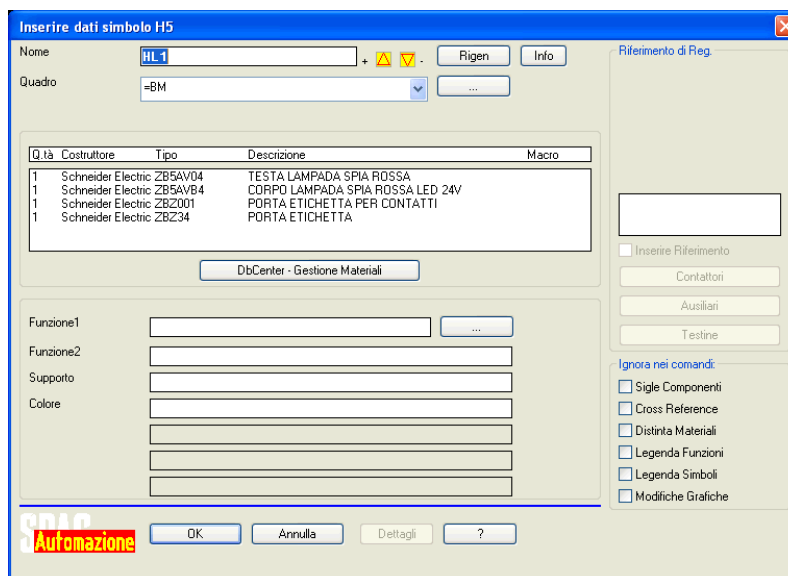

The name is composed depending on “**Symbol referencing**” configuration settings (see Sect. 4.2). Anyway, it’s possible to type a free name.

The panel name is the default one set in command “**4.3 Panel setting**”.

At this stage it is also possible to select a different panel from the references in the list pressing “...”.

Inserting an Element symbol.



Press these buttons to increase or decrease the name of one unit.

The list “**Ignore in commands**” permits to exclude this component from the main processes such Bill of Materials, Legends, Graphical Changes, Cross–Reference and Referencing, both manual and automatic (See “14.7 Ignore symbols”).



“**Insert blocks with fence**” (see Sect. 4.2).

16.2 Change symbols



- **Delete**
- **Copy** and **Clone**
- **Edit**
- **Move** and **Stretch**

These functions act on symbols already in the drawing.

They replace standard commands: Delete, Copy, Ddate, Move and Stretch with other specific functions.,




Pop-menu > *Modify Symbol*

Delete

This function is used to delete a component symbol from the drawing and automatically restore connections between wires. The following prompt is displayed:

Select block to be deleted or wire to be patched:

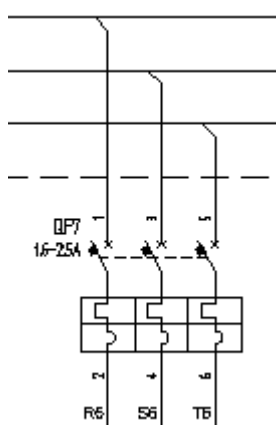


Supposing we wish to delete switch QF7:

the connecting wires upstream of the component are power-feed signals, and those downstream (R6, S6, T6) are automatically removed and replaced with the signal values.


Values on signals have priority over existing numbers on wires (irrespective of whether these are upstream or downstream).

This function can also be used if the symbol has been deleted by means of the traditional "Delete" command.

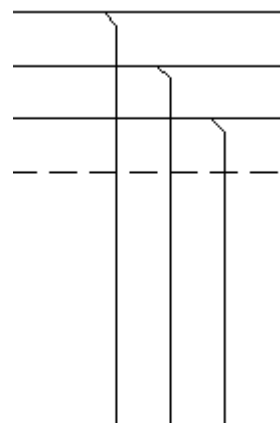

If both upstream and downstream there are wire numbers that are not related to return signals (power feeds), **the function prompts the user to define the wire to be kept.**

If "Intelligent delete" is enabled, the parent symbol cannot be deleted if the related child symbols are on the drawing (see "Preferences" Sect. 4.2).

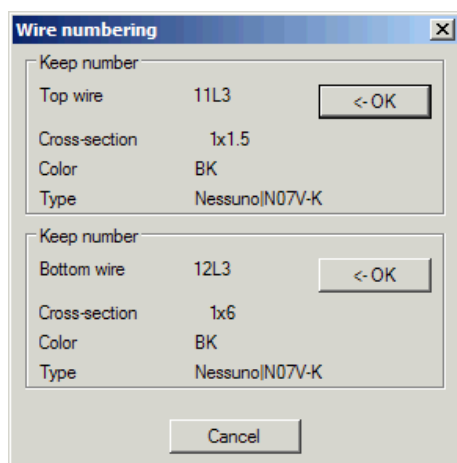

The program requests the wire number to be kept for each individual connection to allow an overall view of all characteristics.

By default the upstream wire is kept (**wire at top**) and the downstream wire is deleted (**wire at bottom**).

This operation also replaces data on any terminals that are connected to the wire, which loses its original value.

"Delete symbol" is particularly useful for deleting terminals and connectors.

This function only deletes parent, child, element symbols from terminals or connectors, and returns (see "17.1 Categories of symbols").



The function acts in the same way as the "Patch" command (see Sect. 4.5) which is useful when joining wires that are not numbered. This function also controls wire numbers.

Copy

This function is used to copy symbols without accessing the symbol menu (see Sect. 17.3).

- Last** The function automatically requests the insertion point for a new symbol that is the same as that inserted previously. **Type the “XX” command from the keyboard.**
- Selection** The function requests the user to select a symbol and then the new insertion point. **Type the “X” from the keyboard.**

Unlike the traditional Copy function these functions allow the user to obtain all the automatic functions depending on the symbol category.



X and XX can also be entered by pressing the centre mouse button (3-button mouse), or by right-clicking and pressing Shift [⇧] from the keyboard (2-button mouse).

Clone

This function is used to copy a selection of symbols in the drawing, in the same form of **“Copy Symbols” with selection (X)**.

“Clone Symbol” differs from “Copy” because all information of the original symbol to be copied (such as materials, Functions 1 and 2, Registration and Reference codes, “Ignore Symbol” list settings) is kept (see *“14.7 Ignore symbols”*).



The keyboard hotkeys for this command are “XC”.

Edit

This function is used to change data entered into the symbol during insertion into the drawing.

In practice it replaces the “Ddatte” command and facilitates the display and change to data contained in attributes. Enter the **“XS” command on the keyboard** to speed up the use of this function.




The keyboard hotkeys for this command are “XS”.

Move

This function is used to move a component symbol from one wire to another, and automatically restoring the connections.


Suppose we wish to move switch QF7 from the first branch level to the second:

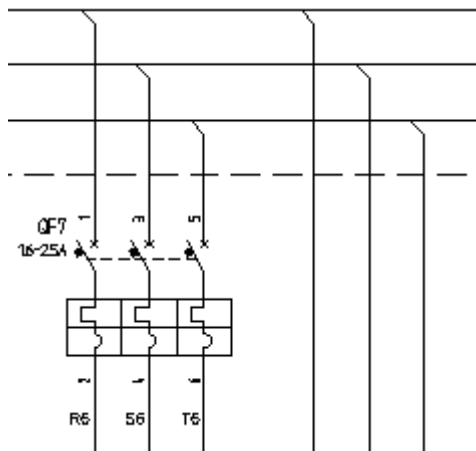

The connecting wires upstream of the component are power feed signals, those downstream (R6, S6, T6) are automatically removed and replaced with the signal values.

Values on signals have priority over existing numbers on wires (irrespective of whether these are upstream or downstream).

If both upstream and downstream there are wire numbers that are not related to return signals (power feeds), **the function requests the user to define the wire to be kept**.

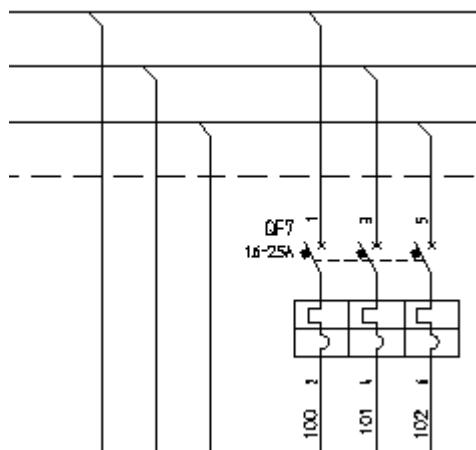

Since the new position of the component is indicated on a group of signals (with priority), **the function only requests the new wire numbers** to be associated downstream of the component (100, 101, 102).

If the new component position is indicated on wires that are not connected to return signals (power feeds), **the function first requests which wires must be kept and then requests the new wire numbers**.

If the new position is indicated in space, no further prompts are issued.



See “Stretch”



This operation also replaces data on any terminals that are connected to the wires that lose their original value.




WARNING: This function only acts on parent, child and element symbols and on terminals/connectors (see “17.1 Categories of symbols”).

Stretch

This function is used to move a component by keeping the connection (stretching) between the starting wires.

To execute the command, it is only required to select the symbol to be moved (direct selection of a single component), then specify the first movement point and finally the destination point.

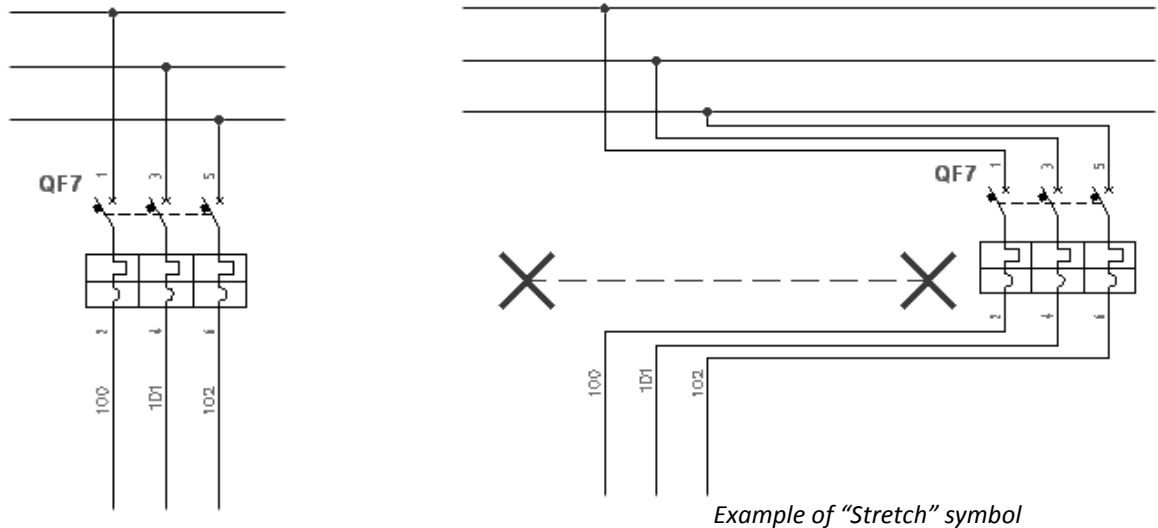

See "Move"



The wires' numbering is not modified.



WARNING : This function acts only on symbols with categories, Parent, Child and Element (see "**17.1 Categories of symbols**") . For Terminals and Connectors only the movements that are parallel to the connection wire are valid..

16.3 Location labels





Pop-menu > *Modify Symbol*

This command permits to modify the **visibility** state of location labels.



Location labels are composed of one, two or three text lines (in Mtext format), and are activated automatically when in **Preferences** (see Sect. 4.2) are set "**Location Manager**" or "**Same component**".

The labels are used to distinguish on the drawing the **exact component location**; they are inserted automatically on parent, Element, Child, Terminal and Connector symbols.

Labels corresponding to the default set for the symbol are set invisible automatically on sheets having a "**Location Symbol**" (see Sect. 3.18). This to relieve the drawing from repetitive information.

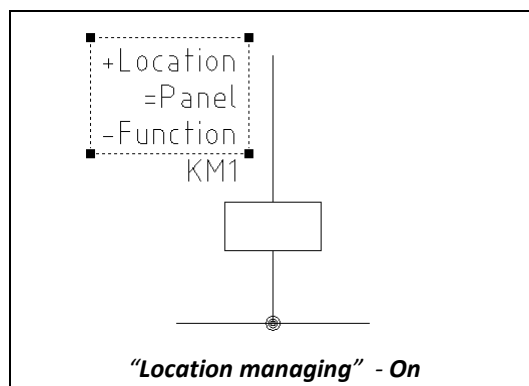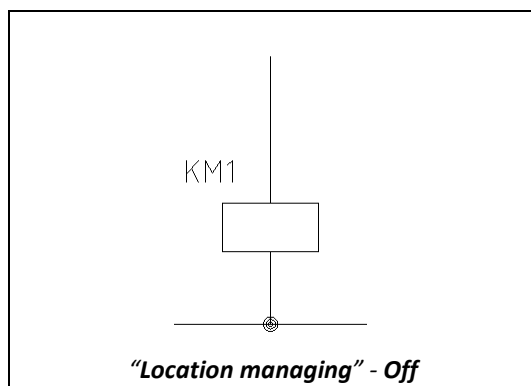

When "**Location Managing**" is on, the hierarchical structure defining the location levels (or Panel structure) is set to three levels: the label displays Location, Panel and Function Group.

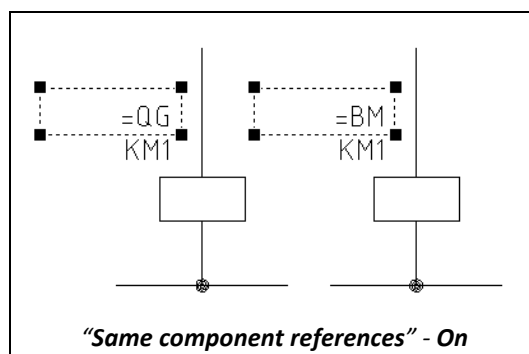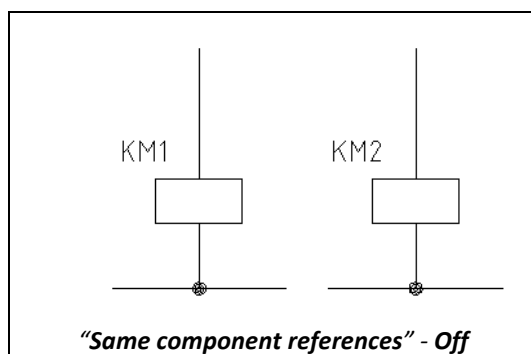

When "**Same component references**" is on, each Panel (or location) has its own reference index; the label is used to distinguish components with the same name, but belonging to different Panels.



See "**4.3 Panel setting**".

See "**16.1 Symbol insertion**".


16.4 Favorites symbols



Pop-menu > *Modify Symbol*

Favourites...

In most of the symbols insertion dialogues (see “16.1 Symbol insertion”) you can find the button “**Favorites**”. Pressing this button the selected symbol is stored in the list of the **favorites**, the ones more frequently used.

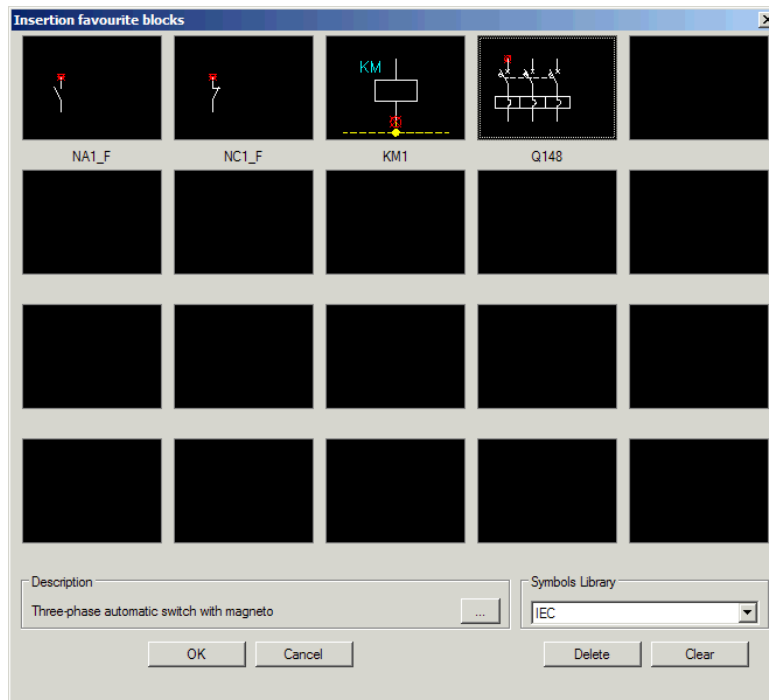

The “favorites” group can contain up to 20 symbols for each graphical symbolism.

The button “**Delete**” removes the selected symbol from the group; to remove all symbols at a time, press “**Empty**”.

The list of favorites symbols is stored in **Favorites.mdb**, in folder Program\Utente\Settaggi (for the local user).

You are suggested to record the most frequently used symbols; this command can be quickly launched typing “**BP**” on the command line.




“BP” can be launched pressing the mouse central button (for three button mice, or wheel mice), or pressing keyboard Shift [↑] plus right click (for two button mice).

16.5 Last used symbols



Pop-menu > *Modify Symbol*

This command opens the **last used symbols** (see “16.1 *Symbol insertion*”) dialogue.

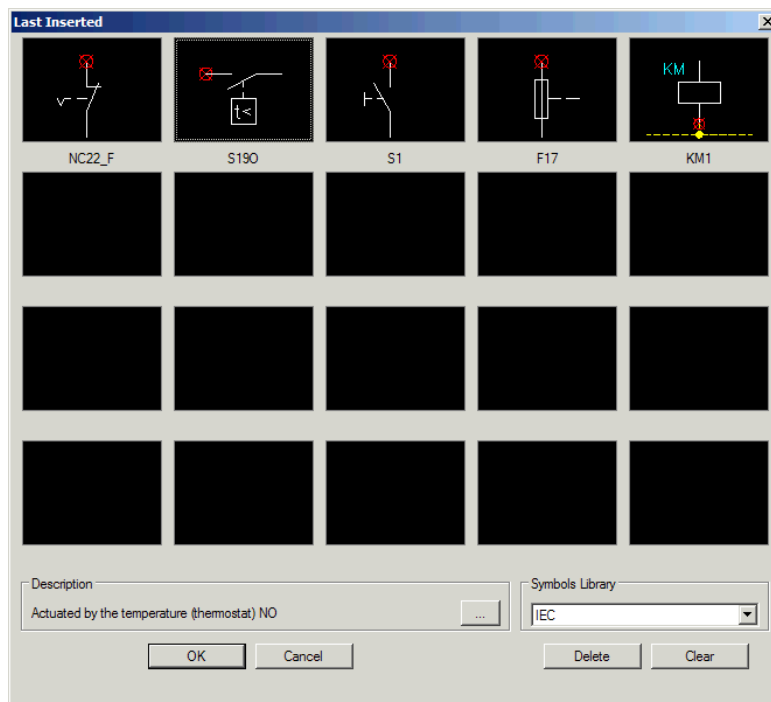

The “last used” group can contain up to 20 symbols for each graphical symbolism.

The button “**Delete**” removes the selected symbol from the group; to remove all symbols at a time, press “**Empty**”.

The list of favorite symbols is stored in **Favorites.mdb**, in folder Program\Utente\Settaggi (for the local user).

This command can be quickly launched **typing “XG” on the command line**.



“XG” can be launched pressing the mouse central button (for three button mice, or wheel mice), or pressing keyboard Shift [↑] plus right click (for two button mice).



16.6 Blk Library



Pop-menu > *Blk*

This command allows you to insert **BLK symbols built by the user** and use them in groups (see “17.3 *Blk symbols*”).

The command allows you to dynamically page all symbols contained in the folder Librerie\Blk, including those in any sub-folders.

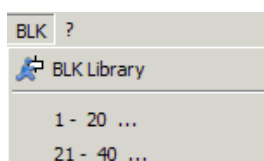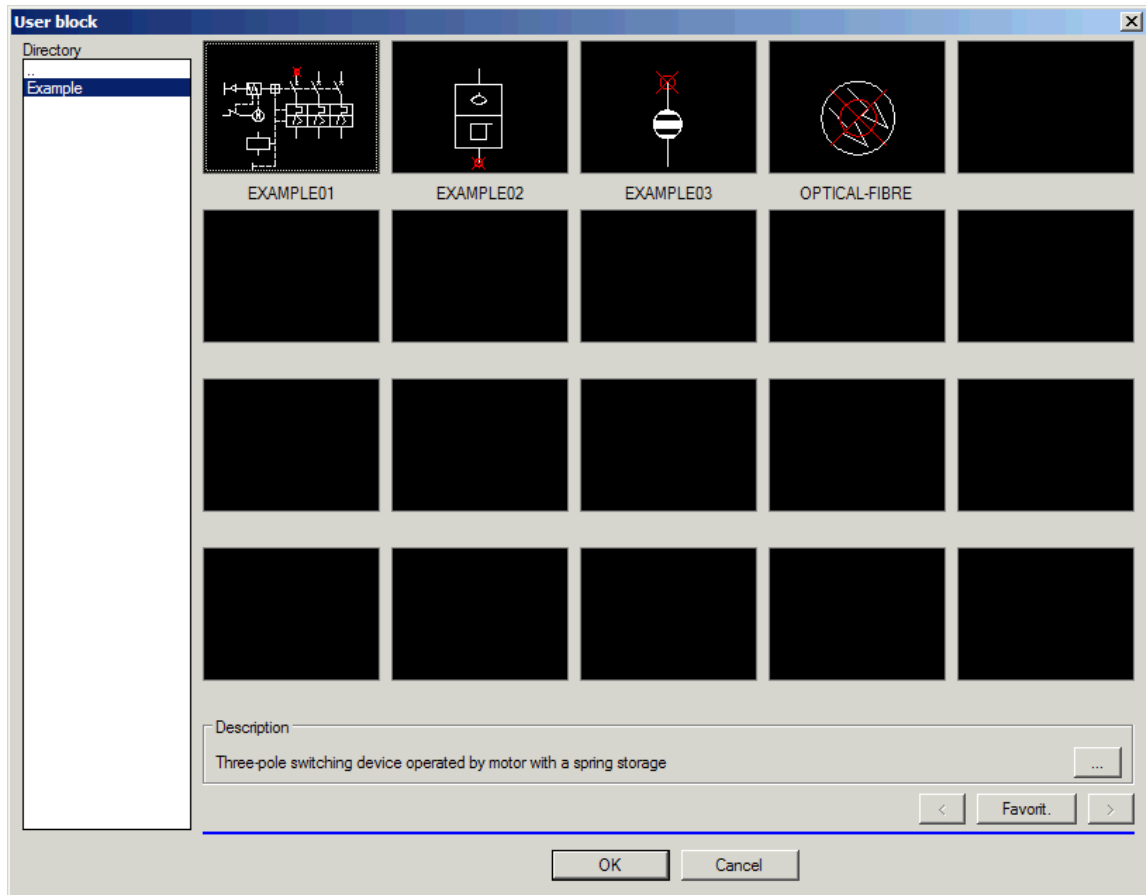

Unlike the direct command (example 1-20 ...) this also considers symbols with a **name that is not BLK**.

An error message appears when symbols with the same name are found, even if stored in different folders.



(see “16.8 *Custom Blk Suite*”)



The folder Librerie\Blk is generated during the program installation stage, any sub-folders must be generated by the user using normal Windows tools.




Symbols with a name that is not BLK contained in the different sub-folders (of Librerie\Blk) are not **protected automatically** during the software updating stages.

To make sure that Blk symbols are able to **break wires** when these are inserted into the drawing, proceed as follows.

Automatic wire breaking is based on the **Break line** references.

In the following example the symbol on the left has no reference lines, while the same one on the right has been drawn correctly and can thus break the wires automatically:

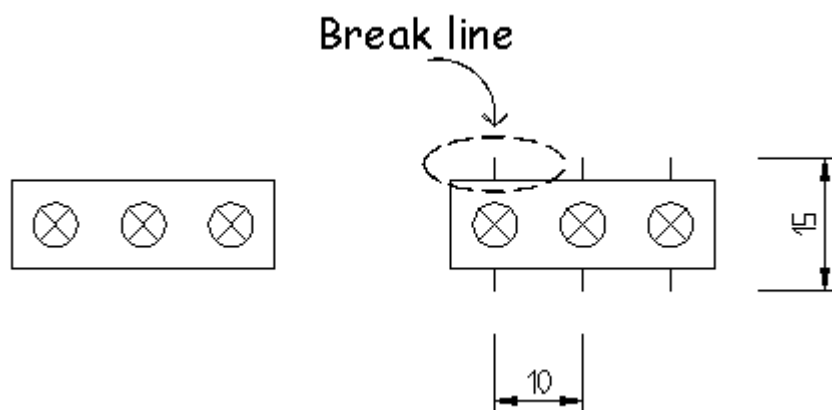

Example of symbol with break wire reference lines.


The lines serve to indicate the overall dimensions of the symbol. In this example the wire pitch (10 mm) and symbol width (15 mm) are shown.

To ensure uniformity, the symbol insertion point must coincide with the top left “Break line” (last external point).




Symbols without “reference lines” are inserted into the drawing in the traditional manner.

Insertion point

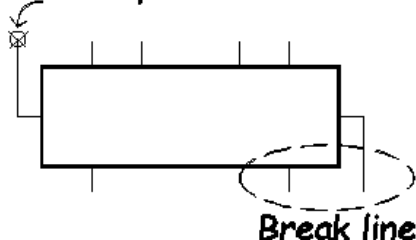

“Break lines” can be used to create special configurations as is illustrated in the adjacent figure. These must always take into account the correct insertion point position.

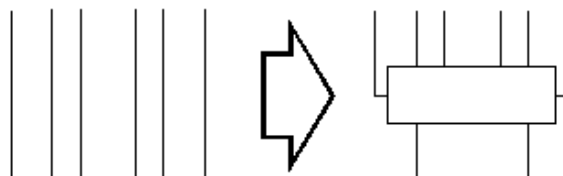

Always check that all “Break lines” have the same horizontal or vertical orientation.

In the example, the Blk 3 symbol cannot break the wires, as it does not conform to this rule.

A symbol with reference lines but with no attributes is always inserted in the traditional manner, without breaking the wires. The following message highlights this condition:

The inserted block does not have attributes.



Always check the symbol insertion point using the “Base” command. This is essential to “break wires” during insertion.

16.7 Catalogue Symbol Libraries

This command allows for the insertion of **symbols created based on the catalogue specification from the manufacturer**.

For programming needs this Library is split into two different catalogue groups :

1 – **PLC Symbol Library** (see “13.2 Symbols library”).

Symbols in the folder Librerie\Schede.

2 – **Inverter & Modules Library** etc..

Symbols in the folder Librerie\Comuni.


Inverter & Modules Library



Pop-menu > *Util*


There are customized symbols based on product series and families for each manufacturer. The library includes symbols suited to electrical diagrams (while for the PLC Symbol Library there are also symbols for Summaries, Synoptic and Layouts).

The command is opened by viewing the current database:

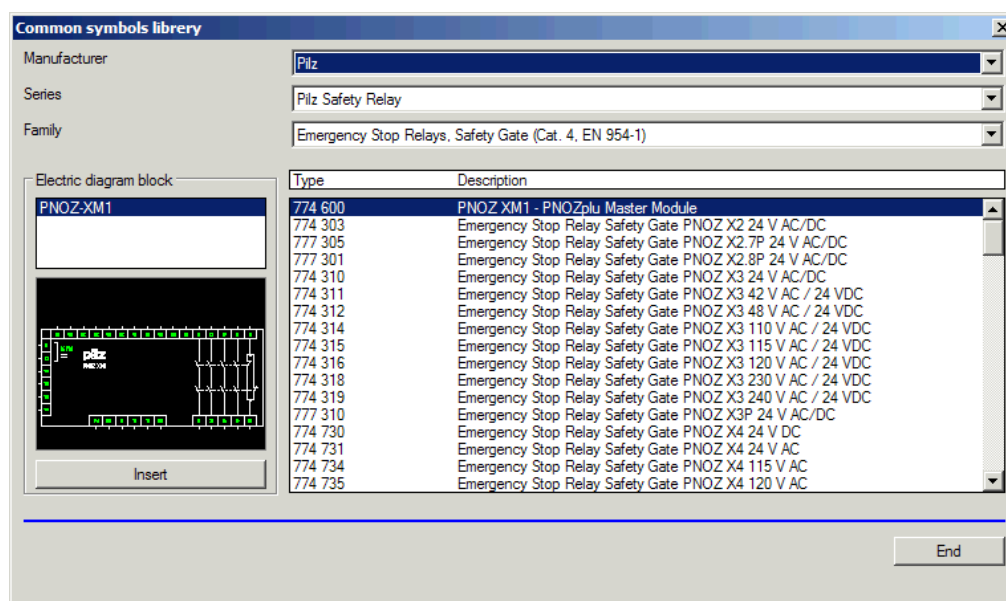

Select Manufacturer, Series and Family, to get the list of models in the database and related associated graphic blocks. Press “**Insert**” to continue with inserting the drawing block.

Select image for Zoom

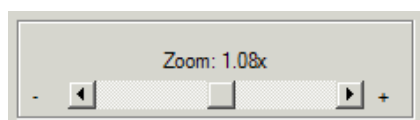

Click on preview image to magnify and enable the display check function. Use – and + to reduce and increase the magnification factor.

The **Reset** button restores the default values.




You can customize the symbol library by using the “**DataBase Management**” command.

DataBase Management

This command opens the Symbol library configuration suite – Inverter & Modules etc. (see “*Inverter & Modules Library*”) to change or add new articles to the library.

Customization takes place in the database file **Common_Block.Mdb** found in the folder Librerie\archivi.

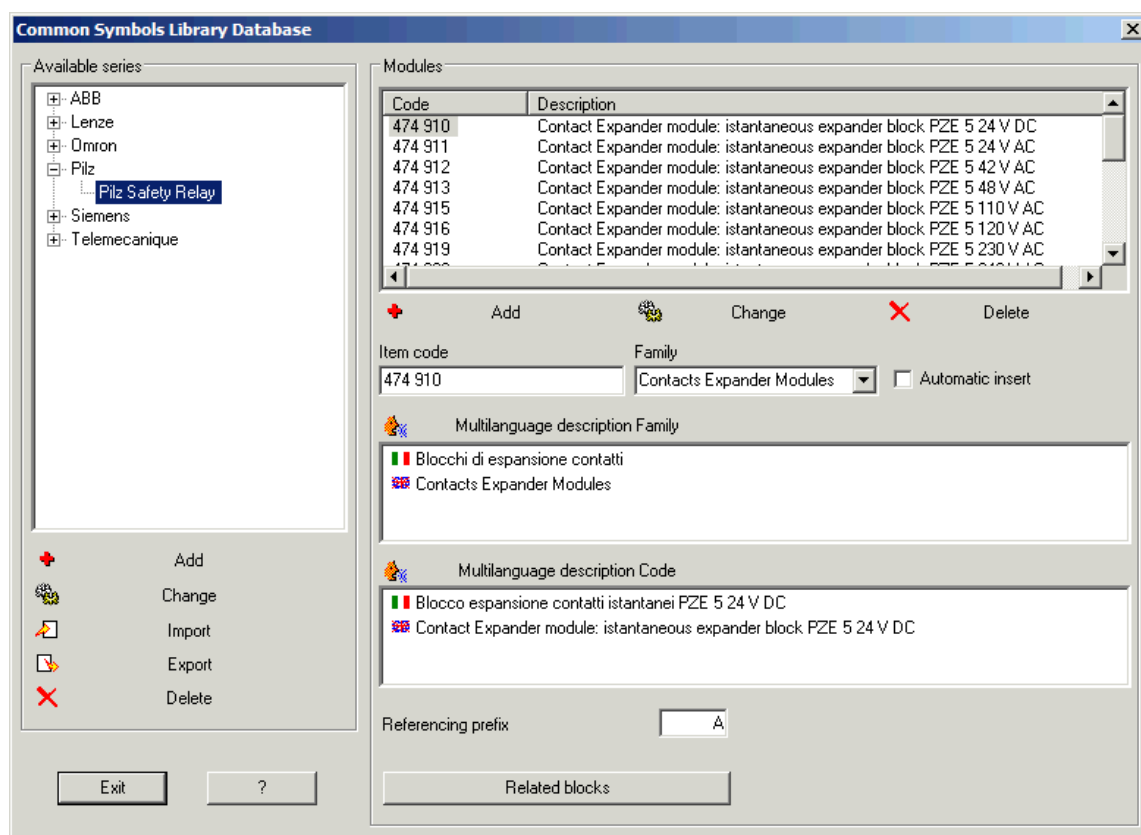

See “16.7 Catalogue Symbol Libraries”.

- Series available** Allows you to **manage manufacturers’ and related product families**. You can import and export manufacturer databases.
- Modules** Set codes for the product families.
- Associated Blocks** Allows you to associate a **graphic symbol** to each code that is used during drawing.

Series available

Allows you to manage manufacturers' and related product families. You can also import or export a manufacturer with related associated symbols.



Add

Press to insert a **new Manufacturer** and/or a **new product series** in the database.

The description of the new product series is added by pressing "**Multilanguage Description**".



Modify

Used to modify information introduced with "Add".



Import

Useful for importing library databases from other installations, or from files (Mdb format) from the current version.



Export

Exports symbol library data in Mdb format.

A command option is to automatically generate a .zip file (compressed file) containing all correlated symbols and files (dwg and sld) for the series you are exporting.



Delete

To cancel the Manufacturer selected for the "available Series" list or an individual Series.

Modules

After choosing a Manufacturer or one of its available Series, continue by inserting material codes (from a catalogue) of the various models.


	Add	Insert a new Model code (identifier), complete with all its features (family, description, type etc...).
	Modify	Used to modify features associated with a Model identifying code. To modify the “ family ” you must enter the new name even if it already exists, as the choice acts as a list filter.
	Delete	To delete a code.

To insert a new Module you must consider the following parameters:

Identifying Code	Catalogue code for the Module.
Family	The family the Module belongs to can be selected from the list. You must enter a value when you create a new manufacturer family or category. The family selection cell allows you to select a family or enter the name.
Automatic Insertion	If enabled during insertion of blocks for an electrical diagram, you are not asked for the insertion point.
Multi-language	The description can be edited directly from the list by double clicking on the line chosen (or by pressing “ Multi-language Description ” or F2).
Referencing Prefix	Prefix to be used during component referencing.

Associated Blocks

Access the configuration window to associate **graphic symbols** to the different codes to be used during drawing.

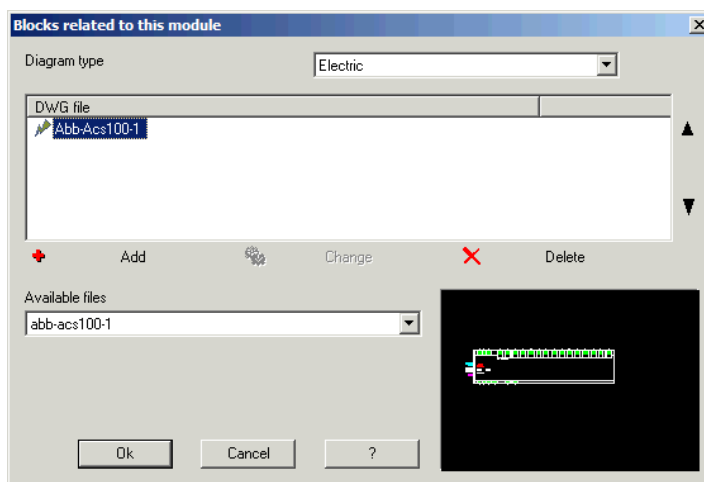

(see “*Inverter & Modules Library*”)

Unlike the PLC library, there is only one “Electrical Diagram”, type. You can, however, assign several symbols to the same code.

From the “Available Files” list you must choose the right one and press “**Add**” to associate.

16.8 Custom Blk Suite



Pop-menu > *Blk*

This program is extremely **useful for rapidly creating a customized symbol compatible**.

The command opens showing the symbol category tree, and the attributes are visible for each category.



(See “*17.1 Categories of symbols*”).




The “**Edit**” command (activated by right button clicking on any attribute) allows you to modify the default features of the chosen attribute.

The symbol creation procedure is easy. Follow these 3 steps in sequence:

1 – Draw the graphics part

2 – Drag the attributes

3 – Create the Block

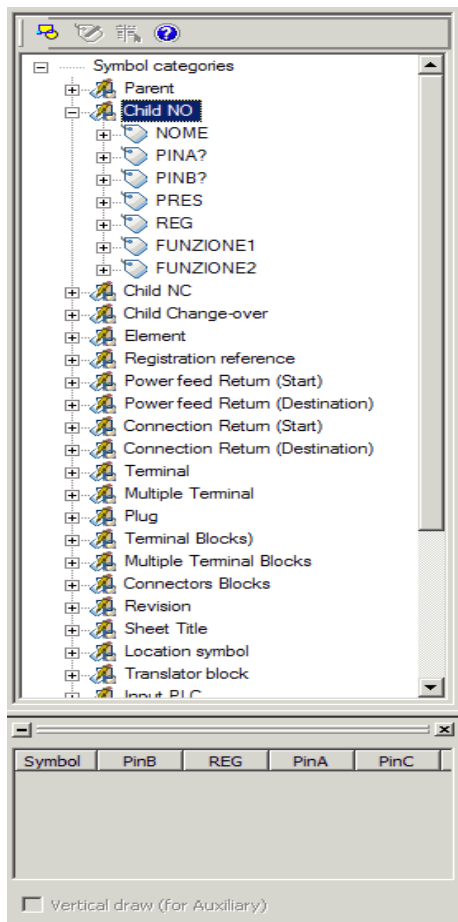

Simplified symbol creation.

Some categories like Revision Symbols, Sheet Title or Location Symbols can be without a graphic part.




If you want to customize a new block “*Registration reference symbol*” you do not need to draw the graphic part (drawing is automatic).



WARNING: The Registration Reference requires a specific setup called **#Structure** (see “*Registration Reference Structure*”).

Draw the graphics part

Draw the symbol **on the current sheet**. Maintain the graphic rules based on the “**Break line**” reference lines so that the symbols (those needing it) can **break the wires automatically** during use (insertion on the drawing).

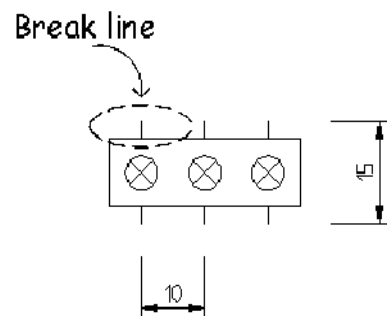


“Break line” example (see Sect. 16.1)

The symbol graphics must be **snap** drawn (2.5mm), while the “break lines” must be laid out at a distance corresponding to the **wire step** (7.5 or 10mm).

Drag the Attributes

Based on the type of symbol required, select the item from the category tree **then drag** (Drag&Drop) the category item with all its attributes **onto the drawing**.

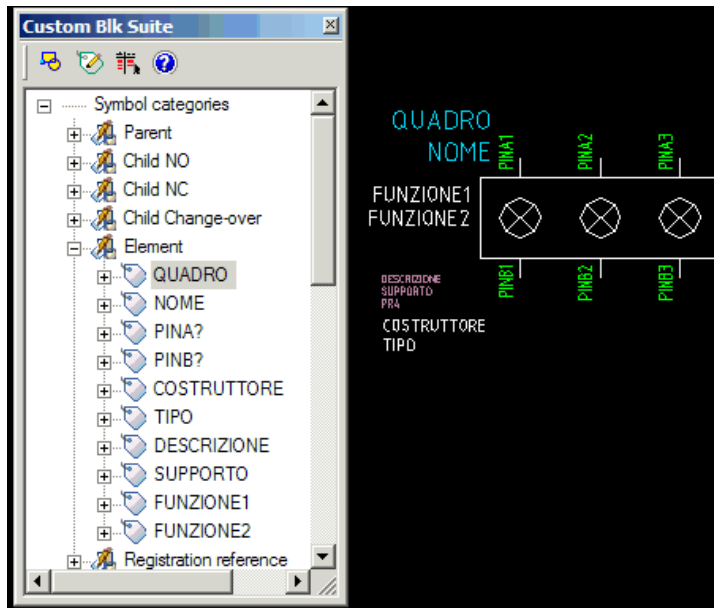


Alternatively, you can drag just one attribute at a time.

You can drag the same attribute more than once, but only those with the “?” character. This way, you increment the tag name by one unit each time.

Example: by dragging PIN? 3 times you get PIN1, PIN2 and PIN3.

You can drag the whole category more than once. This way you drag all attributes with the “?” character, thereby duplicating and incrementing the tag by one unit each time.

Category Drag&Drop.

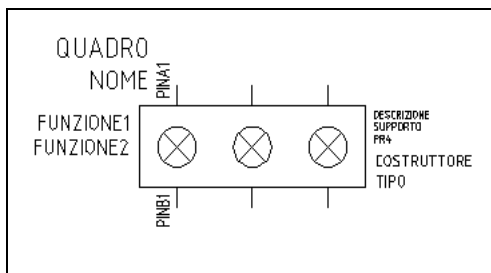

After dragging all attributes, arrange them (with the “Move” command) and **place them in the best positions**.

The symbol in the figure gives an example of having to drag (the category) another 2 times to get PinA2-PinB2 and PinA3-PinB3.

Double click on the **Description** attribute (if it exists) to insert the default value.

Double click on the **Offset** attribute (if it exists) to check default information.

As for the graphics part, attributes can be dragged onto the current worksheet. you do not first have to transfer it to Layer 0.

Information on attribute features (default values) is stored by the **SPAC_Blk.ini** file in the program Librerie\Archivi folder.



In the case of “Registration reference symbol”, aside from attributes you also drag the graphic part (generated automatically), called #Structure.



WARNING: Do **not** drag attributes belonging to different categories onto the drawing. **You should also avoid modifying the features of the most important ones manually.**

Create the Block



Only press “**Create Block**” after having drawn the graphic part, dragged and organized all attributes and saved the items definitively in a file.


This command simulates the operating principle of the “**Wblock**” command.

The block storing procedure is easy. Just follow these 3 steps in sequence:

1 – Basic point

2 – Select items

3 – Choose destination

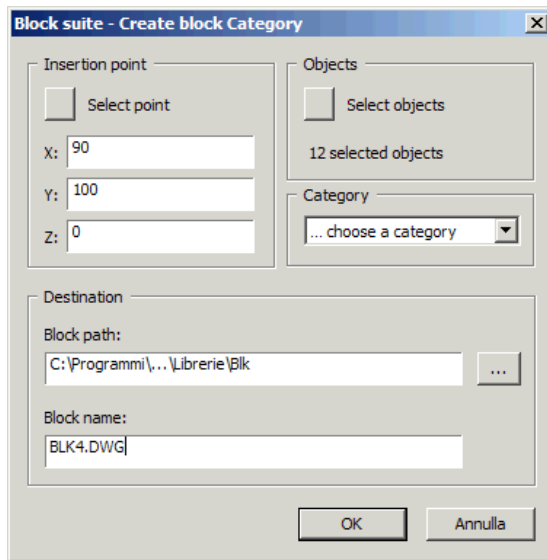


Basic point :

Specify a basic point for the block and used to insert the symbol on the drawing.

Press “Select point” to select it directly on the drawing. The default coordinates are 0,0,0.

For uniformity, the symbol insertion point must coincide with the “Break line” above left (final external point).

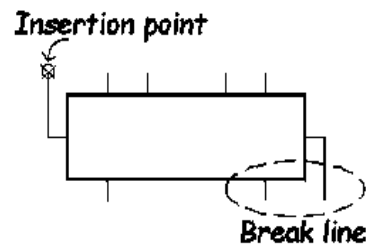

Select items:

Close the dialogue window temporarily to select the items to be saved in the file. The safest way is to enclose all the drawn graphic part and dragged attributes in a window.

Choose destination:

Based on symbol category (automatic recognition is based on attributes selected), **the most suitable folder to hold the new symbol is recommended** (part of the libraries).

You can modify the suggested path by pressing “search “...””.

Based on the destination chosen the most suitable **symbol name is suggested** or is numerically consecutive to those present in the chosen folder.

You can modify the name by typing in a different name.

Pressing OK stores your choices. In some cases the window opens automatically for immediate use (based on symbol category).



(See “**16.9 Black Box**”)




The slide to view the block image in the symbol insertion window is generated automatically.



WARNING: Items chosen (graphics and attributes) **are automatically transferred onto Layer 0** during the “**Create Block**” procedure.

First use block

The window opens for immediate use (depending on symbol category) in some cases after creating a block.

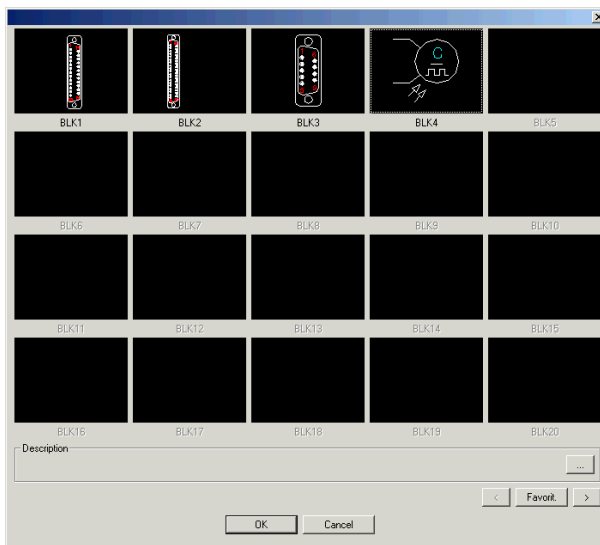

Press “...” from this window and access **Symbol Configuration** (see Sect. 4.2), to set the referencing prefix and the description of the symbol to be viewed in the lower part of the window.

For some symbol categories you only get the description in the lower part of the window.

Un-configured symbols (without prefix) require a temporary reference during drawing insertion.


Some symbol categories like Returns, Registration Ref, Terminals and Connectors **do not open an immediate-use window**.



See “16.1 Symbol insertion”

Registration Reference Structure

Registration Reference is the only symbol category where the graphic part (structure) is drawn automatically using the program “16.8 Custom Blk Suite”.

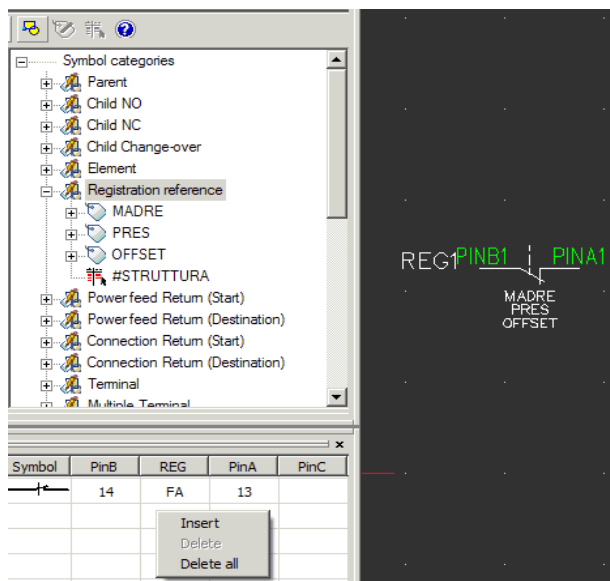

Pressing “#Structure” activates the configuration window.

From the “structure” window, right clicking opens the command menu

Press **Insert** to add an element to the structure, a modifiable default value is inserted into the pin contacts.

Press **Delete** to delete a structure element.

Delete all deletes the whole structure.

Just select the “Registration Reference” item from the category tree (as per the figure) and **drag it onto the drawing** (Drag&Drop) to automatically set the graphic structure and its attributes.

During the “**Create Block**” operation the suggested destination route is not complete. Press search “...” and specify one of the folders by choosing between **Cnt** (contactors coils), **Aus** (auxiliaries for switches, buttons etc..) or **Tsa** (additional heads).



Registration References stored in the Aus folder are normally drawn vertically. Unlike for other categories, no name is suggested for Reg. Ref.

16.9 Black Box



Pop-menu > *Blk*

This is a new command **useful for the fast and easy creation of standard symbols compatible with the operation of SPAC Automazione**. It consents the creation of Blocks with Parent and Element categories; it is consented to change both the symbol name and the path proposed by default.

Parent symbol

It is enabled the selection of the “Registration reference symbol” (auxiliaries or contactors), the insertion point and the eventual rotation.

By default, the **Rif2 generic registration reference** is proposed.

Element symbol

The selection of the “Registration Reference Symbol” is frozen.



(See “17.1 Categories of symbols”).

Attributo	Valore
PINA1	1
PINB1	2
PINA2	3
PINB2	4
PINA3	5
PINB3	6

Black Box differentiates from program “Custom Blk Suite” because it creates the symbols in a standard way so they are not customizable graphically.

The advantage of this command is the fact that the symbol creation is very easy and straightforward.

It is suggested to create **new Black Boxes directly on the connection wires** (do not create the symbol on an empty space), in this way the associated pins are created automatically.

A Black Box symbol that is created in an **empty space will not have the graphical reference lines (break lines)**, then it will not be able to cut the wires automatically.

(See “17.3 Blk symbols”)




(See “16.8 Custom Blk Suite”)




To make it possible that Blk symbols cut the wires during their insertion on the drawing (system based on the reference lines “Break lines”) **it is required to create new Black Boxes directly on the connection wires (do not create the symbol on an empty space).**

The procedure to create a symbol is very fast, the command requires only 2 points for the construction of a rectangle (box) as indicated in the figure below:

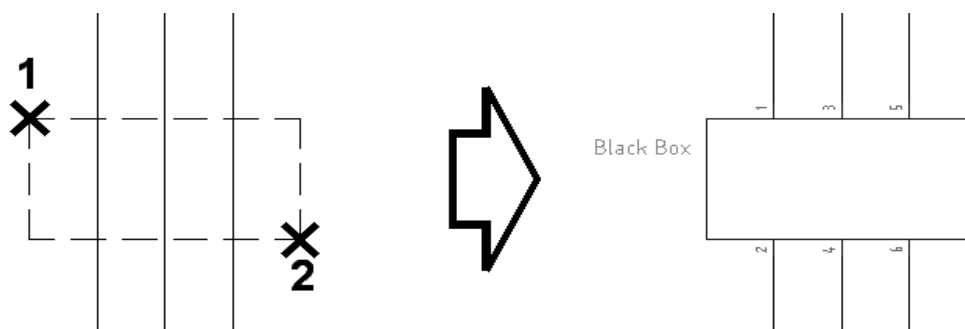

Example of the creation of a standard symbol "Black Box"

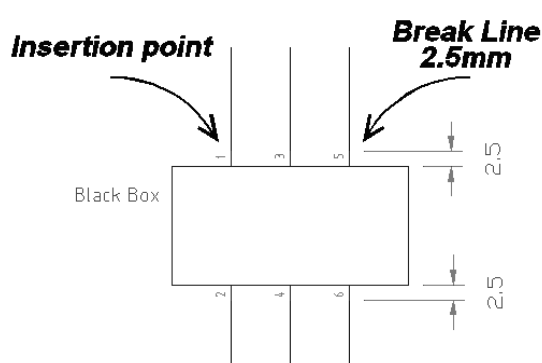

Wire cutting system based on "Break line".

For uniformity, the symbol insertion point is set to coincide with the "Break line" on the upper left (external final point).

Immediately after the rectangle construction (box), the window for the new symbol configuration is opened.

The symbols created with Black Box and the slides associated are memorized on the folder **Spac\Libraries\Blk\Black-Box**. It is possible to modify the suggested path pressing the browse button "**Modify Path**".

Black-Box+n is proposed as the symbol name. The "n" is a consecutive number from those already present on the selected folder. It is possible to modify the suggested value by typing a different name with the keyboard.

After confirm with the OK button, the new symbol is inserted and memorized.

It is possible to re-use the symbol selecting it with the command "**16.6 Blk Library**".



The slide to see the block's image on the symbol insertion box (see "**16.6 Blk Library**"), is created automatically.

17 Customization

17.1 Categories of symbols

This section describes how a series of attributes must be organized in order to make a symbol compatible.

The various symbols are divided into categories and the attributes in each category have different characteristics and requirements. During the insertion of a symbol there are no visual differences between blocks belonging to different families, and it is therefore very important that such differences are correctly attributed when the block is created. The symbol categories are:

- Parent symbol
- Registration reference symbol
- Child symbol
- Element symbol
- Return symbol
- Accessory symbols
 - Terminal symbol
 - Plug symbol
 - Terminal block symbol



(See “**16.8 Custom Blk Suite**”)

(See “**16.9 Black Box**”)




For all these categories the block must always be drawn entirely on layer 0. There are no restrictions as regards color or line type. However, to ensure consistency, reference should be made to those that have already been drawn.



WARNING: Take care not to confuse the BYLAYER logic color with color white no. 7. The program uses Bylayer to draw wires and it is important to distinguish these two entities (wire and symbol) in terms of color when drawing the diagram

Parent symbol

The parent symbol is essential for all operations, including cross-referencing (see Sect. 7.1). During this operation, the program lists on the parent symbol all the records (sheet and segment position) of the “Child symbol” with the same name and vice versa.

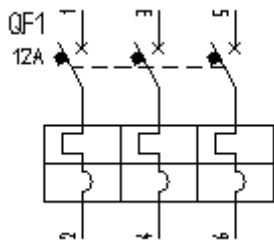

Example of a parent symbol

Coil relays, switches, thermal devices, pushbuttons, selector blocks, etc. that **have the Pres=M attribute** are therefore parent symbols.

Use the “Ddatte” command to check the attributes contained in the symbols to identify the related family.

A block that includes the following set of attributes is considered a parent symbol:

Label	Default	Type	Description
Nome			Component reference
PinA1		P	First input wiring pin number
PinB1		P	First output wiring pin number
PinN		P	Following wiring pin numbers
Pres	M	IP	<u>This is the main parent symbol ID.</u>
Tipo		IP	Contains catalogue codes of associated materials
Costruttore		IP	Contains the brand of the associated materials
Quadro		IP	Reference of home electrical panel
Descrizione	Switch*	IP	General description of the component
Codice	REF2*	IP	Registration reference block name (for cross-reference)
Offset	@15,@-5,0*	IP	Registration reference block position (for cross-reference)
Funzione1		IP	Component function row 1
Funzione2		IP	Component function row 2
Supporto		IP	Optional for data extraction (Overtemperature)

N.B.: data marked with (*) are examples. **Type P=Preset** **Type I=Invisible**

Nome During block insertion the drawing will hold the element REFERENCE as a value. This attribute is essential for the block to be recognized by the program during processing (see Sect. 4.7).

Pin These attributes contain the component’s wiring reference numbers (see Sect. 4.2 and Sect. 7.2).

We have designated as a standard the **PinA** (top) attributes as input points to the block, and **PinB** (bottom) as output points. The number indicates whether it is the first, second, etc. pin pair.

We have drawn all pin attributes using a specific font of the same name. They are green color no. 3 to distinguish them by thickness when printed and to make them easier to locate in the diagram on the screen.

Pres	The PRES attribute is essential as it assigns the parent symbol definition to a block. Symbols that belong to this family must also have two other attributes, Codice and Offset. This is essential in order to carry out cross-reference operations and to obtain automatic insertion of registration reference blocks
Tipo	The Tipo attribute hosts the <u>Catalogue code</u> of the material that is to be associated with the component during the drawing phase. It is therefore important to allow the bill of materials to recognize the block (<i>see Sect. 8.1</i>). To insert more material codes (macrocodes) separate codes using the “;” character.
Costruttore	The COSTRUTTORE attribute hosts the <u>material brand</u> that is to be associated with the component during the drawing phase. This data is important for management of the bill of materials (<i>see Sect. 8.1</i>).
Quadro	The QUADRO attribute contains the <u>reference of the electrical panel</u> to which the component is physically connected in the diagram (<i>see Sect. 4.3</i>). The presence of this attribute makes it possible to differentiate between the various processing actions, on the basis of the specific electrical panel. It is indeed possible to create the bill of materials, terminal blocks, etc. for one panel at a time.
Descrizione	The DESCRIZIONE attribute contains a <u>general comment</u> about the component. The various component calibrations are not defined. It is used by the symbols legend (<i>see Sect. 14.1</i>).
Codice	The value of the CODICE attribute is <u>the name of the “Registration reference symbol”</u> (in the Riferim directory) that must be associated with the parent element after cross-referencing to contain the child component position registration (<i>see Sect. 7.1</i>). On some components the code value is already set. For example, the default value for relay coil blocks is REF1, that for switches (all types) is REF2. These values can, of course, be changed from Symbol Configuration (<i>see Sect. 4.2</i>).



A few parent blocks do not have codes because the REGn attributes are directly included for registration of child blocks (Parents with fixed reference).

Offset	This is the attribute that is used to indicate the <u>(x, y) position</u> for the insertion of the registration reference block described in the code attribute. The standard value for this attribute (e.g. @0,@-10.0) indicates where this attribute will be positioned (considering the insertion point of the parent block). The three values to be expressed are separated by a comma and indicate, respectively: X co-ordinate increment from parent block insertion point Y co-ordinate increment from parent block insertion point rotation of registration reference symbol.
Funzione1	This is used to insert the data regarding internal operation of the plant. This value is used to create the Function Legends (the value shown in the tables is the sum of Funzione1 and Funzione2).
Funzione2	This is the second row of Funzione1.
Supporto	Optional (for “9.1 Overtemperature” or “14.5 Labels”).


Registration reference symbol

The Registration Ref. Symbol (or registration "X") is essential for cross-reference operations. The program associates this symbol with the "Parent symbol" that must receive the position list (sheet-segment) for the various "Child symbol".

The criterion by which references are associated is very simple:

The parent symbol contains a code attribute, the value of which is the name of the reference to be received, and an offset attribute, the value of which describes the position (using co-ordinates in relation to the parent symbol insertion point). All blocks are saved in the Riferim directory:

- 1. **Cnt** contains the references used for all coil types.
- 2. **Aus** contains the references for switches, pushbuttons, selectors, etc.
- 3. **Tsa** contains the titles to be added.

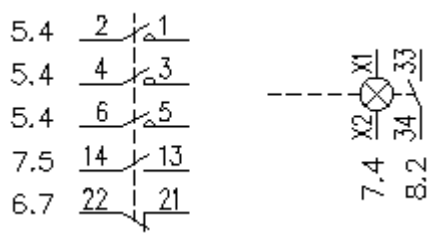

The X registration blocks and the titles to be added have the Pres=R attribute (and are therefore references).

These symbols are automatically placed onto the drawing by the cross-reference function.

Use the "Ddatte" command to check the attributes in the symbols in order to identify the related family.

Example of a reference symbol



Parents with a fixed registration reference (with no code or offset attributes) form a single block with a registration reference (this must be devoid of parent and Pres attributes).

A block that contains the following attributes is considered to be a reference symbol:

Label	Default	Type	Description
Madre		IP	Associated parent reference
PinA0	13*	P	First input pin wiring number
PinB0	14*	P	First output pin wiring number
PinN		P	Following wiring pin numbers
Reg0	FA*	P	Records the open child position
Reg1	FC*	P	Records the closed child position
Regn		P	Records the child symbol position
Offset	@0,-18*	IP	Additional block reference position (for cross-reference)
Pres	R	IP	<u>Registration reference identification</u>

Note: Data marked with (*) are examples. **Type P=Preset** **Type I=Invisible**



(See "16.8 Custom Blk Suite")

(See "16.9 Black Box")

Madre	The MADRE attribute hosts the <u>name of the “Parent symbol”</u> to which the reference is associated. This is the only link between blocks that are separated graphically but are linked conceptually. Parent values are completed automatically.
Pin	These attributes contain the <u>reference numbers for wiring</u>. Every pair of pin attributes (PinA and PinB) must be pre-set using the values indicated on the child symbol. Pin labels have the same number as the associated record, i.e. Reg3 is associated with PinA3 and PinB3 wiring numbers.
Reg	A REG attribute must be created for every contact symbol that is to be recorded. This attribute is used to accept the registration of the “Child symbol” position corresponding to the parent with which the reference is associated. REG is pre-set with the child PRES type. E.g.: if REG=FA an open (contact) child will be recorded, if REG=FC a closed one will be recorded.




With standard settings even-numbered Reg items are associated with open contacts, and odd-numbered Reg items with closed and transfer contacts

Pres	The PRES=R attribute assigns the definition of Registration reference symbol to this block.
Offset	This is the attribute indicating the <u>(x,y) position</u> where to insert an additional registration reference block (described in the Codice attribute), such as “Additional Headings” (Tsa): The default value of this attribute (E.g. @0,@-10,0) indicate where the additional reference symbol will be placed (relatively to the parent symbol insertion point); the three values, comma-separated mean: - Horizontal offset (X axis) from the parent symbol insertion abscissa - Vertical offset (T axis) from the parent symbol insertion ordinate - Rotation in degrees.

Child symbol

During cross-referencing, child symbols are recorded with their position (sheet and segment) in the “**Parent symbol**” with the same name, and vice versa.

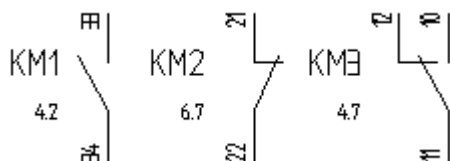

Example of a child symbol

Contact blocks, auxiliary switch elements, additional pushbutton elements, selectors, etc. **that have the Pres=F* attribute** are therefore child symbols.

Use the “Ddatte” command to check the attributes in the symbols so as to identify the related family.

A block that has the following set of attributes is considered a child symbol:

Label	Default	Type	Description
Nome			Component reference (as a parent reference)
PinA1		P	First input pin wiring number
PinB1		P	First output pin wiring number
Funzione1		IP	Function of the parent symbol, row 1.
Funzione2		IP	Function of the parent symbol, row 2.
Pres	FA*	IP	<u>This is the main child symbol ID</u>
Reg		P	Records the position of the parent symbol

Note: data marked with (*) are examples. **Type P=Preset Type I=Invisible**

Nome	During the insertion of a block into a drawing the NOME hosts the <u>reference of the corresponding “Parent symbol”</u> as a value. This is essential to ensure that the block can be recognized by all program processing.
Pin	These attributes contain the component <u>wiring reference</u> numbers (see Sect. 4.2 and Sect. 7.2). We have established as a standard, block input PinA attributes (high) and block output PinB attributes (low). <u>These are automatically completed (during cross-referencing) with the values written in the “Registration reference symbol”.</u>
Pres	The PRES attribute is essential in that it assigns the Child symbol definition to the block.
Reg	The presence of this REG attribute is essential to <u>accept the position of the corresponding parent block</u> (completed automatically during cross-referencing).
Funzione1	This is used to insert, in the symbol, data concerning its function inside the project. This value is extracted automatically from the related “Parent Symbol”; the visibility status is valued according to the setting of “ Functions near contacts ” (see Sect. 4.2).
Funzione2	It’s the second row of Funzione 1.



Besides the letter F, the standard value of the PRES attribute also requires additional characters to specify the child type, as shown in the “Pres identification for child symbols table”.

Pres identification for child symbols

The following table shows all the possible combinations for describing the Pres attribute for a child symbol.

PRES	Description
FA	Make contact
FC	Break contact
FAP	Open power contact
FCP	Closed power contact
FT	Triple (power) contact
FS	Transfer contact
FL	Lamp
FA2	Double make contact
FC2	Double break contact
FA+n	N make contacts
FC+n	N break Contacts
FAP2	Double open power contact
FCP2	Double closed power contact
FAP+n	N open power contacts
FCP+n	N closed power contacts
F*_RE	Open/closed/transfer contact or triple delayed pick-up contact (on D)
F*P_RE	Open/closed/ delayed pick-up power contact (on D)
F*+n_RE	N open/closed/ delayed pick-up power contact (on D)
F*P+n_RE	N open/closed/ delayed pick-up power contact (on D)
F*_RD	Open/closed/transfer contact or triple delayed drop-off contact (off D)
F*P_RD	Open/closed/ delayed drop-off power contact (off D)
F*+n_RD	N open/closed/ delayed drop-off contacts (off D)
F*P+n_RD	N open/closed/ delayed drop-off power contacts (off D)
F*_RED	Open/closed/transfer contact or triple delayed pick-up-drop-off contact (on-off D)
F*P_RED	Open/closed/ delayed pick-up-drop-off power contact (on-off D)
F*+n_RED	N open/closed/ delayed pick-up-drop-off contacts (on-off D)
F*P+n_RED	N open/closed/ delayed pick-up-drop-off power contacts (on-off D)
FM+n	Module + N (position). For special uses (see “15.7 TeSys U”).


F (child)	+ A (open)	+ P (if power)	+ n (number of contacts)	+ _RE (pick-up delay)
F (child)	+ C (closed)	+ P (if power)	+ n (number of contacts)	+ _RD (drop-off delay.)
F (child)	+ T (triple)			+ _RED (pick-up/drop-off delay)
F (child)	+ S (transfer)			
F (child)	+ L (lamp)			



WARNING: some conditions can be obtained by using different combinations: e.g. Ft (Triple power child) is equivalent to FAP3.

Element symbol

A block that does **NOT** include an attribute with a PRES label is considered to be an element symbol (and consequently does not have Reg attributes).

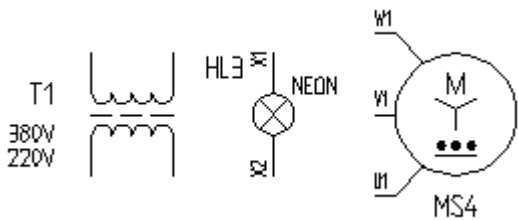

Example of element symbols

Blocks such as lamps, fuses, resistors, transformers, capacitors, valves, etc., that **do not have a Pres attribute** are therefore element symbols.

Use the “Ddatte” command to check the attributes in the symbols to identify the related family.

A block that has the following attributes is considered to be an element symbol:

Label	Default	Type	Description
Nome			Component reference
PinA1		P	First input wiring pin number
PinB1		P	First output wiring pin number
PinN		P	Following wiring pin numbers
Tipo		IP	Contains catalogue codes of associated material
Costruttore		IP	Contains the brand of the material type
Quadro		IP	Home electrical panel reference
Descrizione	Lamp*	IP	General component description
Codice		IP	Optional (for compatibility with previous 7/8 release)
Funzione1		IP	Component function row 1.
Funzione2		IP	Component function row 2.
Supporto		IP	Optional for data extraction


Note: data marked with (*) are examples. **Type P=Preset Type I=Invisible**



The characteristics of element symbol attributes are the same as those described for parent symbols.

Return symbol

The Return symbol is essential for cross-reference operations. During this procedure stores the position (sheet-segment) of power feed returns and/or connection returns with the same number as the signal. **The connection takes place between the start and destination symbols.**

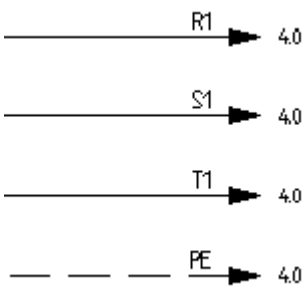

The start returns have the **PRES=P** attribute, while destination symbols have the **PRES=A** attribute.

The name of the return symbol must have the prefix **_ALIM** (Power returns) or **_SIGN** (Connection returns).

Blocks of arrows for interrupted mechanical links are also return symbols.

A block that includes the following set of attributes is considered a return symbol:

Example of returns at the start point


Label	Default	Type	Description
Segnale			Name of the wire or power feed that is subject of a return.
Pres	P or A	IP	<u>Identifies whether it is a start or destination return.</u>
#Linea		I	Reference associated with return <u>branch</u> .
Reg		P	Records the connection position

Note: data marked (*) are examples. **Type P=Preset** **Type I=Invisible**

Segnale During the insertion of a block onto a drawing the SEGNALE attribute requires the wire or power feed number. During the cross-reference procedure the start returns that have the same attribute value are recorded with the destination returns and vice versa.

Pres The PRES attribute is essential as it assigns the definition of the **start (P) or destination (D) return symbol** to the block.

#Linea The #LINEA symbol is specific to the category of return symbols. It is used to separate the path of two power feeds (or wires) that have the same number or to distinguish two or more start returns that have the same signal value.

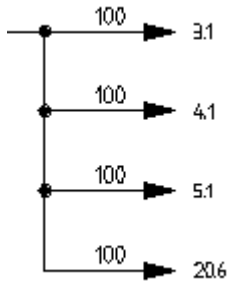

For example: power feed number 100 must serve four usages and so four start returns with the same signal value of 100 are drawn. However, they must be distinguished by #LINEA in order to avoid registration errors during cross-referencing. For this reason, #linea A is associated with the first 100 signal, #linea B with the second, and so on.

The same process must be carried out on the four destination returns: #line A is associated with the first 100 destination signal, "B" to the second, and so on.

#LINEA is invisible and must therefore be setup during block insertion (**such as branch**). During normal use, #Line is ignored during symbol insertion via the "Enter" key.

Reg The REG attribute accepts the registration of the corresponding concatenated return position (carried out automatically during cross-referencing).


Accessory symbols



- Terminal symbol
- Plug symbol
- Terminal block symbol.

Terminal symbol

The terminal symbol is used by the “**6.1 Insert terminals**” command. This function automatically completes the data contained in these attributes.

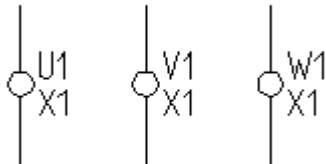

This category of symbols is characterized by the presence of attributes that are all in “preset” mode. Visibility status can be customized and does not affect performance.

Use the “Ddatte” command to check the attributes in the symbol in order to identify the related family.

Example of a terminal symbol

A block that includes the following set of attributes is considered a terminal symbol (with the following standards: invisible attributes are defined as being 1 mm high, all others are green (color no. 3) and 2 mm high).

Label	Default	Type	Description
Quadro		P	Home panel of the terminal block.
Morsettiera		P	Home terminal block of the terminal.
Sezione		P	Terminal diameter in mm ² .
Numi		P	Number or name of input wire.
Numm		P	Number or name of terminal.
Numo		P	Number or name of output wire.
Livello (**)		P	Indicates the level of a multiple terminal.
Notem		IP	Available for the list of components connected upstream.
Notev		IP	Available for the list of components connected downstream.
Utenza		IP	Main usage component (<i>see Sect. 6.4</i>).
Rip		IP	Number of repetitions in terminal block.
Raggio	1*	IP	Wire breaking parameter. If radius = 1 wire is broken at 2 mm.
Supporto		IP	Optional for data extraction.

Note: data marked with (*) are examples. **Type P=Preset** **Type I=Invisible**


():** This attribute is only in symbols that represent multiple terminals.

Quadro	The Quadro attribute contains the <u>electrical panel (reference)</u> to which the terminal block of the terminal is physically connected in the diagram. The presence of this attribute makes it possible to differentiate processing depending on the electrical panel.
Morsettiera	This is the reference of the terminal home terminal block (green with height of 2).
Sezione	The SEZIONE attribute contains the size of the terminal. This data is essential as the terminal blocks can be sorted by this value (<i>see Sect. 6.3</i>).
Numi	The value of the NUMI attribute (green with height of 2 if visible) is the number of the wire entering the terminal. The data is automatically obtained during the insertion of the terminal if the wire has already been numbered.

Numm	The value of the NUMM attribute (green with height of 2 if visible) is a number (or name) to identify the terminal. This data can be managed automatically by the program, which assigns an incremented numerical value each time
Numo	The value of the NUMO attribute (green with height of 2 if visible) is the number of the wire leaving the terminal. The data is automatically obtained during the insertion of the terminal if the wire has already been numbered. NumO has the same value as NumI when “Input = Output” is set.
Livello	Symbol-only attribute that represents multiple terminals in order to distinguish between the various levels for a terminal.
Notem	The contents are user-definable. The description of the components that are connected upstream (or to the left) of the terminal can be entered manually.
Notev	Like Notem but for components that are connected downstream (or to the right of) the terminal.
Utenza	Completion is <u>optional</u>. It is handled by using specific commands (<i>see Sect. 6.4</i>), and indicates the reference element of the terminal. If there is a connection between two terminals (from different terminal blocks), the first will have the second as a usage. Terminals can be sorted according to this value.
Rip	RIP (repetition) contains the number of any repeats of the terminal in the terminal block (shared with the jumper). If RIP is empty it corresponds to 1
Raggio	This contains the measurement for breaking the wire into which the terminal is inserted.

Plug symbol

The plug symbol is used by the “6.2 Insert connectors” command. This function automatically completes the data in the attributes.

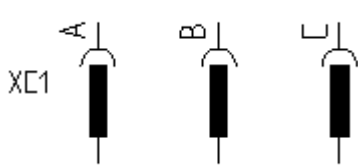

This category of symbols is characterized by the presence of attributes that are all in “preset” mode. Visibility status is user-definable and does not affect performance.

Use the “Ddatte” command to check the attributes in the symbol and identify the related family.

Example of a connector or plug

A block that includes the following attributes is considered a plug symbol:

Label	Default	Type	Description
Quadro		IP	Home panel of the plug or the connector.
Morsettiera		P	Connector reference (visible).
Sezione		IP	Not used.
Numi		IP	Input wire number or name.
Numm		P	Number of the connector or plug pin (visible).
Numo		IP	Output wire number or name.
Notem		IP	Available for the list of components connected upstream.
Notev		IP	Available for the list of components connected downstream.
Utenza		IP	Main usage component (see Sect. 6.4).
Rip		IP	Not used.
Raggio	2.5*	IP	Wire break value. If REP=2.5 the wire is broken by 5 mm.
Supporto		IP	Optional for data extraction.

Note: data marked with (*) are examples. Type P=Preset Type I=Invisible




For ease of use, the plug symbol has the same attributes as the terminal, but they are used differently.

Descriptions in *italics* indicate the differences between plug symbols and terminal symbols.

Terminal block symbol

This category of symbols is related to the “**6.3 Terminals and connectors**” function, which automatically draws the terminal blocks according to the number and type of terminal symbols in the electrical diagram.

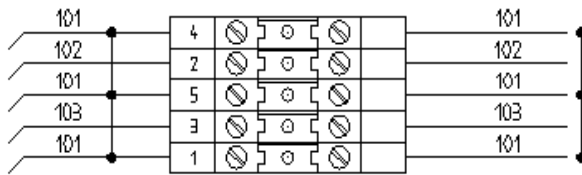

The terminal block symbol (more commonly known as **Terminal Return**) is usually stored with a precise sequence of attributes to ensure uniformity and facilitate data access (in earlier versions attribute sequence was mandatory in order for the program to run properly).

CB0.4/4	4	⊙	101	1.4A
CB0.4/4	4	⊙	101	1.4A
CB0.4/4	4	⊙	101	1.4B
CB0.4/4	4	⊙	102	1.5A
CB0.4/4	4	⊙	103	1.5A

The various terminal symbol models available in the library only differ graphically and in the position and state of visibility of the attributes.

Example of symbols in a terminal block.

The sequence in a terminal block is the same as that with which they are selected (one at a time) when being created. If the block is saved with a single selection (window) the attributes will be saved inversely in relation to the sequence in which they were created.

A block that includes the following set of attributes is considered to be a terminal block symbol (or terminal return):

Label	Default	Type	Description
R_Morsettiera		IP	Terminal home terminal block.
R_Sezione		IP	Terminal diameter in mm ² .
R_Numi		IP	Input wire number or name.
R_Numm		IP	Terminal number or identification.
R_Numo		IP	Output wire number or name.
R_Fgcat		IP	Sheet and terminal segment position in the drawing.
R_Note-Mo		IP	Name of the component connected upstream.
R_Note-Va		IP	Name of the component connected downstream.
R_Quadro		IP	Home panel of the terminal block.
R_Utenza		IP	Main usage component name.
Crs_Conn_Point		IP	Reference position for external jumpers.

Symbols with no “point” cannot be drawn with a “traditional” jumper. While those without the “Crs Conn Point” attribute are not compatible with external jumpers.



By “*traditional*” jumper we mean ones drawn between terminals with the same Num1 value placed consecutively.

During the automatic drafting of the terminal block a jumper is drawn between the terminals that require it (multi-line, 0.5 mm thick). The insertion point is determined by a point (drawn by the Point command) in the symbol.



WARNING: In terminal block symbols with multiple terminals it is necessary to associate an entire group of attributes (except R_Morsettiera block and R_Sezione, which are single items). E.g.

For *Level 1*: R_Numi1, R_Numm1, R_Numo 1, etc.

For *Level 2*: R_Numi 2, R_Numm 2, R_Numo 2, etc.

17.2 Symbol creation

Creating a block means storing part of a drawing that may be used repetitively in other drawings. The creation of a library of blocks is based on the assumption that the groups of blocks are created before actually being used. In any case, the graphic part must be drawn, using the normal AutoCAD commands and observing a few rules, including any specific standards requirements.

New symbols can be created in 2 ways :

- 1 – Using the specific wizard **Custom Blk Suite** (see “16.8 Custom Blk Suite”).
- 2 – Using the traditional CAD commands

Use of traditional CAD commands.

After completing the graphics the attributes must be associated using the “**Ddattdef**” command. Their position is governed by the fact that some will be visible on the drawing.

The graphic part of a file that is associated with the attributes is saved using the “**Mblock**” command. Once the file has been created, the selected objects are deleted from the drawing. These can be restored by means of the OOPS function.

Use the “**Ddinsert**” command to insert blocks into a drawing. Blocks are files with the .DWG extension and can therefore be managed like normal drawings as regards any changes/updates.



The use of these commands is described in the AutoCAD user’s manual.

Graphics

For the program run properly, **block graphics must be drawn on Layer 0** (including the attributes). There are no restrictions as regards the use of colors and line types, although to ensure uniformity it is preferable to use existing colors and line types.

Do not mix the BYLAYER logic color with (color 7) white, as the program uses the Bylayer to draw wires and it is important to distinguish in terms of color between the two entities (wire and symbol) when drawing the diagram.

Attributes

Attributes are entities made up of text. To use attributes you must first define them using the Ddattdef command. These become like parts that must be included when storing a block. Only by means of attributes can information be picked up and transferred to external databases. A block without attributes is therefore to be considered as only a purely graphic element.

Different attributes can be associated with a block, provided that every attribute has a different label. In the case of a block with more than one attribute, the program will request the value of each attribute. A constant attribute maintains the same value every time the block is inserted. Attributes may be invisible (their value is not displayed in the drawing), checked or preset.



(See “16.8 Custom Blk Suite”)

(See “16.9 Black Box”)



The use of these commands is described in the AutoCAD user’s manual.

Attribute modes

The 4 modes, (I) Invisible, (C) Constant, (Ch) Check and (P) Preset, can be defined from the “Attribute modes” dialogue window of the “Ddattedef” command.

Invisible	When invisible mode is selected the information concerning the attribute is not displayed in the drawing when the block is inserted. This is useful if you do not want to see an attribute on the screen or if there are so many attributes that they would over fill the drawing if displayed.
Constant	Constant mode gives a fixed value to the attribute whenever this is inserted into the block. As opposed to other modes, the value of a constant attribute cannot be changed. When Constant mode is active you cannot associate Check and Preset modes. The program does not use Constant mode for symbols in the library, so that data in attributes can be changed at any time using the Ddatte command.
Check	If an attribute is defined using this mode you can check the accuracy of the value when inserting the related block (in practice the same prompt appears twice to confirm insertion).
Preset	The program does not make use of blocks with an attribute in Check mode. This mode allows the creation of attributes that are variable but which are not requested during the insertion of a block. When a block that includes a preset attribute is inserted the value of the attribute is not requested and the default value is automatically assigned to it (or, if there is no previously chosen standard value, no value will be set). The symbol libraries often use the Preset mode, so that the least information possible is requested while drawing.



These variables are described in the details of the AutoCAD user’s manual.

Slide

A slide file is a raster image of the current window on which you are working.

Only a current window slide file is created. A slide file of the print display is created, which includes the windows and their contents.

Parts of the drawing that are not within the screen, and deactivated or frozen layers, are not included in the slide file.

The slide is the image that is displayed in the symbol insertion drop-down menus. Slides are files with SLD extensions and they must be saved using the “**Mslide**” command in the same directory in which the symbol to be represented is resident.

In order to comply with the proportions of the rectangular symbol insertion box (see Sect. 17.3) the image must be proportioned with a breadth:height ratio of **1:0.75** (aspect_ratio = 0.75).



Many symbol slides are grouped together in libraries (Slidelib), files with the extension .SLB. These images cannot be changed without re-creating the entire image library.

17.3 Blk symbols

New symbols can be customized by means of the **BLK** library. This empty library can be used to implement the library by adding any symbols that are not included in standard symbol libraries.

When creating a new symbol the following rules apply:

- The **graphic part of a block must always be drawn on LAYER 0**; there are no restrictions as regards the use of colors and line types, although to ensure consistency, reference should be made to those that have already been used.
- Avoid using the logical color **BYLAYER**, which can be confused with color 7 white. The program uses Bylayer to draw wires (see “4.1 Setup”).
- Symbols must be designed to **snap** (2.5 mm) and proportional to **wire pitch** (7.5 or 10 mm).



(See “16.8 Custom Blk Suite”)

(See “16.9 Black Box”)

The symbol name must be chosen in relation to the name of the free cell to which it is to be associated (from BLK1 to BLK400). Each symbol must be associated with an image (slide) to be displayed in the dialogue window. The slide must be stored using the same name as the symbol to be shown.

The BLK symbols and relative slides must be stored in the specific Librerie\Blk directory.



(See “17.1 Categories of symbols”).

The specific rules regarding parent, child, element, etc. symbol categories must be observed in the construction stage to make sure that new Blk symbols are compatible with the program functions. Any type of symbol can be created even if it does not belong to the categories referred to above.

Thus if a Blk symbol contains the correct attributes, it is treated to all effects as a normal symbol from the other libraries:

the “**Pref**” must be implemented each time to configure both referencing parameters and descriptions; for symbols not configured you are asked to input a reference each time they are used.



“**Symbol Configuration**” (See Sect. 4.2).




In previous program versions, prefixes and descriptions were stored into Ascii files with extension PRE and DES; you can import these files with the appropriated function.

To make sure that Blk symbols are able to **break wires** when these are inserted into the drawing, proceed as follows.

Automatic wire breaking is based on the **Break line** references.

In the following example the symbol on the left has no reference lines, while the same one on the right has been drawn correctly and can thus break the wires automatically:

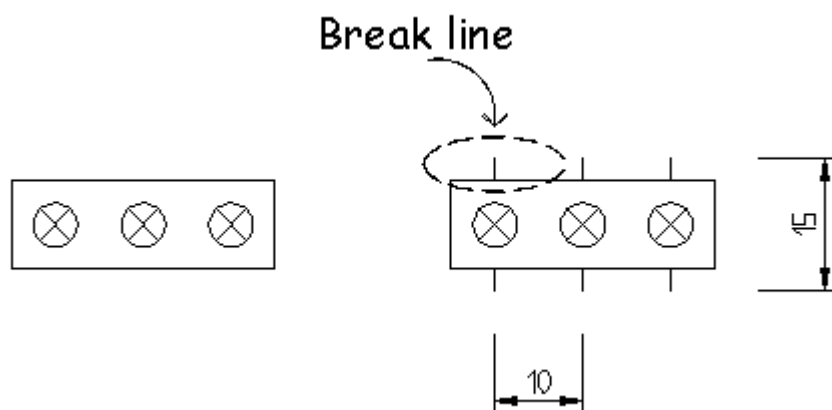

Example of symbol with break wire reference lines.


The lines serve to indicate the overall dimensions of the symbol. In this example the wire pitch (10 mm) and symbol width (15 mm) are shown.

To ensure uniformity, the symbol insertion point must coincide with the top left “Break line” (last external point).




Symbols without “reference lines” are inserted into the drawing in the traditional manner.

Insertion point

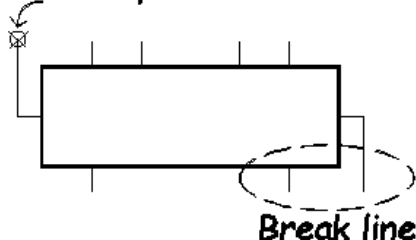

“Break lines” can be used to create special configurations as is illustrated in the adjacent figure. These must always take into account the correct insertion point position.

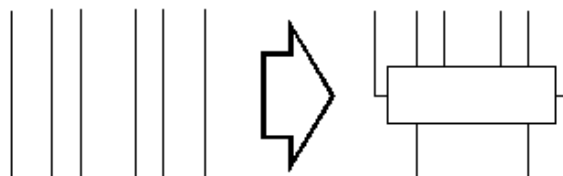

Always check that all “Break lines” have the same horizontal or vertical orientation.

In the example, the Blk 3 symbol cannot break the wires, as it does not conform to this rule.

A symbol with reference lines but with no attributes is always inserted in the traditional manner, without breaking the wires. The following message highlights this condition:

The inserted block does not have attributes.

BLK3



Always check the symbol insertion point using the “Base” command. This is essential to “break wires” during insertion.

17.4 Mblk macrosymbols

A macrosymbol is a symbol that contains other symbols. Creating macros is useful for storing already completed circuit segments. A similar result can be obtained using the “[3.8 Store sheet](#)” function. The difference consists in their use: with macrosymbols, references can immediately be assigned to the components they contain.

The following rules must be observed when creating a new macrosymbol:

- **Macros must always be created on LAYER 0.**
- Connections must be drawn in logical color **BYLAYER**. The program uses this color to draw wires (see “[4.1 Setup](#)”).
- Macrosymbols must be drawn to **snap** (2.5 mm) and proportional to **wire pitch** (7.5 or 10 mm).
- Save macrosymbols in the most **neutral form** possible, i.e., without references, wire numbers and material code associations, to allow greater flexibility.
- Macrosymbols should preferably be provided with all necessary connection points.

Select the name of the macrosymbol in relation to the name of the free cell to which it is to be associated (from MBLK1 to MBLK60). An image (slide) must be associated with each macrosymbol to be displayed in the dialogue box. This must be stored using the same name as the macrosymbol it represents.

Store MBLK symbols and related slides in the specific Librerie\Blk directory.

Macroblocks and slides are created using “Wblock” and “Mslide” commands. Please refer to the specific user manual for operating details.

Click on an Mblk symbol box to display its description. Descriptions can be added or changed using [Pref](#).



“Symbol Configuration” (see Sect. 4.2).



In previous program versions, prefixes and descriptions were stored into Ascii files with extension PRE and DES; you can import these files with the appropriated function.

17.5 Menu customization

Menu customization is performed through the **CUI** command.

The menu file name depends on the program version:

- **Spac2011.cuix** (for the AutoCAD applicative version) located in folder Utente.
- **Scad2011.cuix** (for the Oem version) located in folder Cad\Support.

The menu file (**cuix** or **cui**) is the **command container**, there are cases (e.g. symbols) where you are required to change the command details: apply these changes in the menu support file **Scad.mnz** (the same for all versions, located in folder Utente).


Example:

The figure shows the command contained in the menu file used to insert the Blk from 1 to 20 :

```
[ 1 - 20 ... ] ^c^c^pSP_MENU P13BLK_1; SP_EXE_MENU
```

The function executed from this command is described in the menu support file (**mnz**):

```
("P13BLK_1" "C:IC_MN" "1" "blk" "" "" ("BLK1" "BLK2"...
```

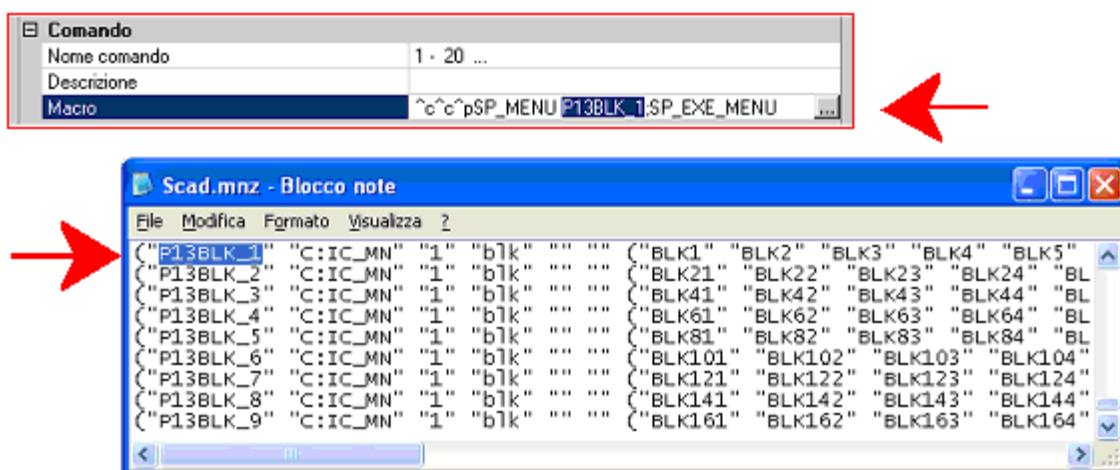

Highlighted text shows the link between the Mnu and Mnz files.



Such modifications are not suggested to beginners; remember that symbols can be customized without modifying the menu using the user BLK symbol library (see Sect. 16.1).

Anyway, we suggest to backup the original menu before modifying it.

To simplify and accelerate such modifications, we suggest not to change existing commands, but to create new ones. In this case you avoid the need to update the SLB files (slide libraries) in order to fit your modifications.

There are 5 different insertion commands, each one specialized on specific needs.



WARNING : menus customizations **are not replicated or kept** when the software is updated.

Normal direct insert

This is used to **insert a standard symbol** that does not belong to any of the parent, child, element, etc. categories. The insertion takes place without calling up a dialogue window.

Command line contained in the menu file (**cui**) :

```
[Earth      ]^c^c^pSP_MENU P11CEI15_93;SP_EXE_MENU
```

The text in brackets [...] is the command item displayed in the pop-up menu.

Command line contained in the menu support file (**mnz**) :

```
("P11CEI15_93" "C:IC_UNO" "cei15" "C1100")
```

or (to rotate the variable symbol):

```
("P11CEI15_93" "C:IC_UNO_ROT" "cei15" "C1100")
```

"P11CEI15_93" (variable) is the link between the menu file and Mnz files. **C:IC_UNO** and **C:IC_UNO_ROT** are the functions for the direct insertion; "**Cei15**" is the name of the folder where to search the symbol (you can specify whatever folder name existing in the folder Librerie) while **C1100** is the name of the symbol to be inserted.



Compliance with the syntax specified in the example above is essential.

RFSS direct insert

This is used for the **insertion** of a symbol in a dialogue box. **RFSS** stands for "Automatic Symbol Family Search". This function, amongst others, handles wire breaks whenever a symbol with the necessary characteristics is drawn (see "Reference lines" Sect. 16.1):

Command line contained in the menu file (**cui**) :

```
[NO contact ]^c^c^pSP_MENU P11CEI15_1;SP_EXE_MENU
```

The text in brackets [...] is the command item displayed in the pop-up menu.

Command line contained in the menu support file (**mnz**) :

```
("P11CEI15_1" "C:IC_UNO" "cei15" "C2001")
```

"P11CEI15_1" (variable) is the link between the menu file and Mnz files. **C:IC_UNO** is the function for inserting symbols from the dialogue window using the RFSS system; "**Cei15**" is the name of the directory in which to search for the symbols (the name of any directory in the Libraries path specified during software installation can be used). "**C2001**" is the name of the symbol to be inserted.



Compliance with the syntax specified in the example above is essential.

Normal insert via a window

This is used to **insert a standard symbol** that does not belong to any of the parent, child, element, etc. categories. The insertion takes place by calling up a dialogue window.

Command line contained in the menu support file (mnz) :

```
"C:IC" nil "cei15" "Return on components" "CEI15A" "_insert" ("C1075" "C1076"  
"C1077" "C1078") ("pause" "" "" "")
```

C:IC is the function for the insertion via window; **nil (or number)** an internal parameter (indicates the section used in the file SpacMenu.ini), **"CEI15"** is the name of the directory in which to search for the symbol (the name of any directory in the Libraries path specified during software installation can be used). **Returns on components** is the user-definable name of the dialogue window. **"CEI15A"** is the name of the slide library file (.SLB) that contains the slide images to be displayed in the dialogue window (.SLB files must be stored in the User directory). Whenever free slides (.SLD files) are to be used, it suffices to remove the text in inverted commas ("").

The first list contains the sequence of symbols that belong to the dialogue window. Each symbol must be associated with an image (having the same name) contained in slidelib (SLB) or among the free slides (SLD).

The second list contains the block insertion parameters. **Pause** can be used to select the symbol insertion point. Pause may be replaced by an x,y co-ordinate to insert a symbol directly into a precise point of the drawing; the sequence of three "" groups corresponds to three <Enter>.

A maximum of 20 blocks can be displayed per dialogue box.



Compliance with the syntax specified in the example above is essential.

Insert RFSS via a window

This is used for the **insertion** of a symbol in a dialogue box. **RFSS** stands for "Automatic Symbol Family Search". This function, amongst others, handles wire breaks whenever a symbol with the necessary characteristics is drawn (see "Reference lines" Sect. 16.1):

Command line contained in the menu support file (mnz) :

```
"C:IC_MN" nil "IEC" "Transfer contacts" "IECA" ("SC1" "SC10" "SC1A" "SC10A")
```

C:IC_MN is the function for inserting symbols from the dialogue window using the RFSS system; **nil (or number)** an internal parameter (indicates the section used in the file SpacMenu.ini), **"IEC"** is the name of the directory in which to search for the symbols (the name of any directory in the Libraries path specified during software installation can be used). **Transfer Contacts** is the user-definable name of the dialogue box. **IECA** is the name of the slide library file (.SLB) that contains the slide images to be displayed in the dialogue window (.SLB files must be stored in the Utente directory). Whenever free slides (.SLB files) are to be used, it suffices to remove the text in inverted commas ("").

The first list contains the sequence of symbols that belong to the dialogue box. Each symbol must be associated with an image (having the same name) contained in slidelib (SLB) or among the free slides (SLD).

A maximum of 20 blocks can be displayed per panel.



Compliance with the syntax specified in the example above is essential.

Insert automatic by dialogue

This is used to **insert a symbol** by means of a dialogue window that automatically “sees” the symbols to be loaded (insertion occurs without breaks in the wires). This system is used to insert title blocks, sheet title symbols, revision symbols, etc.

Command line contained in the menu support file (**mnz**) :

```
"C:IC" nil "SIMBOLI" "Sheet Title Symbol" "" "_insert" "TITOLO" ("0,0" "" "" "")
```

C:IC is the function for inserting symbols from the dialogue window; **nil (or number)** an internal parameter (indicates the section used in the file SpacMenu.ini), **“SIMBOLI”** is the name of the directory in which to search for the symbols (the name of any directory in the Libraries path specified during software installation can be used). **“Sheet title symbol”** is the user-definable name of the dialogue window. **“”** means that the image is contained in an .SLD file (free slide). The name of the slidelib (.SLB file) containing the slide images can be inserted in any case (.SLB files must be stored in the Utente directory).

“TITOLO” is the prefix of the blocks to be loaded automatically. All the symbols that are called TITOL00 TITOL01 TITOL02, etc. will therefore be searched for in the specific directory in sequence. As a rule, the first symbol must be 0. If names do not follow on in sequence, symbols cannot be displayed. In practice, if TITOL01 is removed, TITOL02, 3, etc. will not be displayed in the dialogue window.

The **list** contains the block insertion parameters. **0,0** is the x,y co-ordinate for inserting a symbol directly into a precise point of the drawing. If the co-ordinate is replaced by **pause**, the insertion point must be selected. The sequence of three **“”** groups corresponds to three <Enter> commands. A maximum of 20 blocks can be displayed per dialogue box.



Compliance with the syntax specified in the example above is essential.

18 Caneco

18.1 Caneco

CANECO is a calculation program (OPTIONAL) for electrical networks built to European standards. It is used to dimension and check all low-voltage installations. The modular structure of the program enables the simultaneous management of general graphics, single-feed diagrams, calculations, information regarding the calculation of protection, and raceway, cable and circuit network dimensioning.


CANECO incorporates a complete calculation function for defining protection and cables for all circuit-related requirements. It is useful for engineers and saves time spent in changing absorption, cable lengths, etc. Phase loads, either in individual panels or in the entire installation, can be optimized automatically or manually.

For each circuit, the program revises and displays the power available in the panels. CANECO also calculates absorption levels for all panels or busbars up to power feeds starting from terminal circuits, according to specific utilization coefficients for each circuit and distribution and to simultaneity coefficients amongst users within the same circuit.

All data and the main results of calculations are displayed in a single window. Other information is available giving details of all calculation aspects, protection, ICCs, selectivity... CANECO's main purpose is for the design of cables and circuit protection. These data can also be pushed allow the software to be used as test software.

CANECO is an independent program. It performs all calculations independently and automatically constructs single-feed graphic representations without the use of any other graphics software.

It is also possible to **interact with CANECO**: data extracted from planimetric diagrams created using **SPAC Impianti** are processed by the calculation software. The results can be imported into single-feed diagrams created.

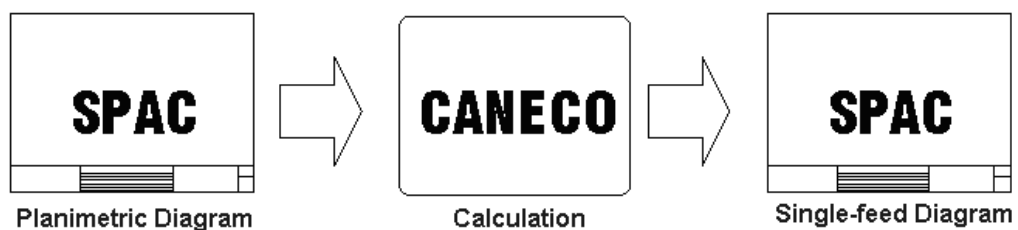

The flow chart gives a schematic illustration of the complete combination of the 3 steps. This means that the user only produces the documents that are required, i.e. "Planimetric diagram" and "Calculation" only or "Calculation" and "Single-feed" only.


SPAC Impianti is also capable of managing the **direct flow from "Planimetric diagram" to "Single-feed diagram"**. This does not, of course, include the results of calculations, and it must always be remembered that the values shown in the tables are not checked by the software.



CANECO and SPAC Impianti are optional software packages not supplied.

Export data from planimetric

This function exports data from a planimetric drawing created using *SPAC Impianti* to *CANECO*. The function asks the user to **select the power feed** from which to extrapolate data concerning the connected circuits.

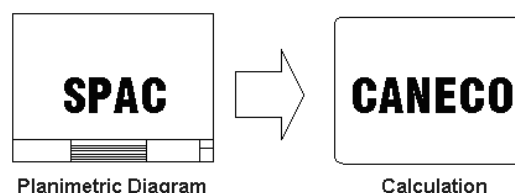


The **Export data** function creates **.IMP** files in the current job order directory.



In the previous versions of SPAC Impianti, data were stored in the Linee.txt and Utilizz.txt files. Caneco is compatible in terms of importing these files.

Import data to Caneco

Enter Caneco and **open a new job**: select New from the Caneco File menu (Ctrl+N). The program displays the following window in which the user must enter the basic settings, to be redefined when the next set of data are imported (.IMP file).

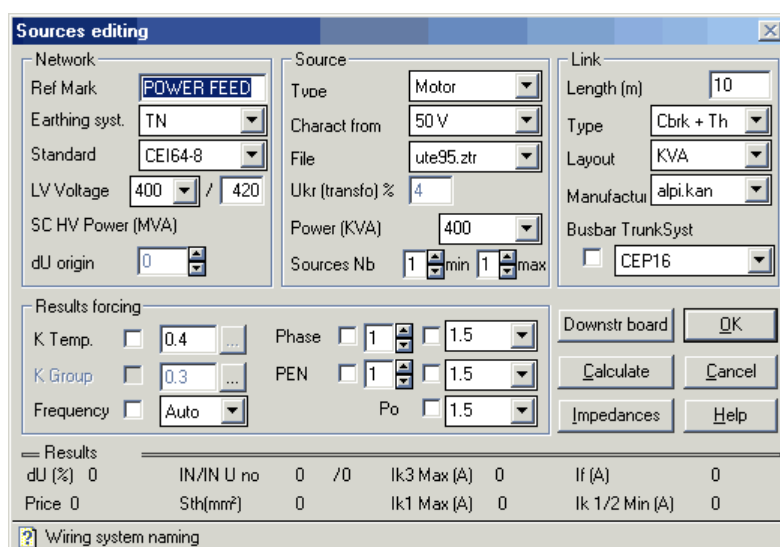


Press Calculate and then confirm by pressing OK to proceed to the QGBT panel table, which is completely empty.

It is important to save the CANECO design as soon as this is started - in the job order directory containing the .IMP files to be imported.

Please refer to the specific user's manual supplied with the product.

To import data that have been exported from the planimetric diagram into the .IMP files, select **"Import/Export"** and then **"Text..."** from the **File** drop-down menu. From the dialogue box shown in the example, select **"Import SPAC"**.

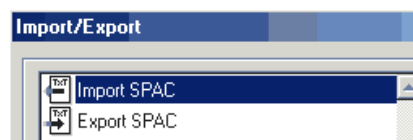

To import data contained in the Linee.txt and Utilizz.txt files from previous versions of SPAC Impianti 4.x, select "Import/Export" and then "SPAC" from the File drop-down menu.




WARNING: Using this function, CANECO imports .IMP files into the directory used to store the design. **It is therefore essential to store the CANECO design in the current job order directory before importing data.**


Export data from Caneco

This function is used to export the results of calculations and checks carried out by CANECO to program in order to create the “single-feed” diagram.


Within CANECO select “**Import/Export**” and then “**Text...**” from the **File drop-down menu**. From the dialogue window shown at right, select “**Export SPAC**”.

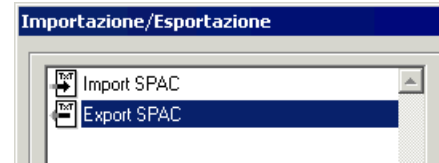

A large number of export and import configurations can be defined from this dialogue box (please refer to the specific user’s manual). **The program is already configured to export and import data to and from SPAC Automazione. Simply press Execute to complete the operation.**

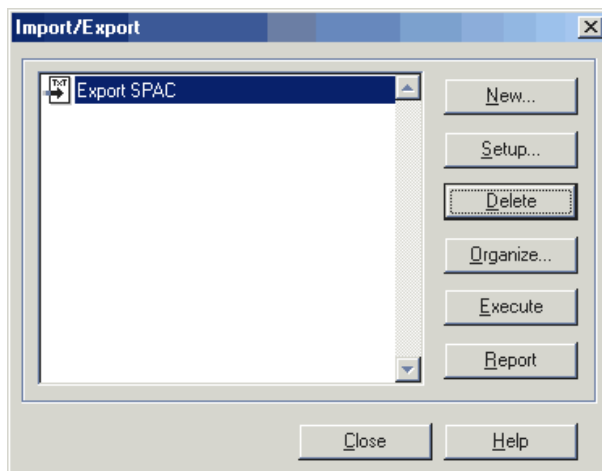

It is possible to define which parts of the project are to be extracted:

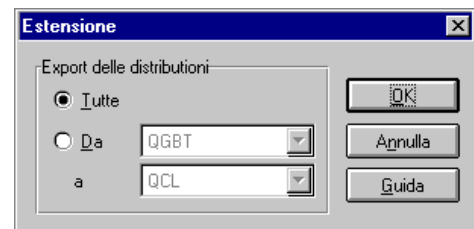

Enabling **All** the export is complete.

This operation creates seven new **.IMP** files in the job order directory (Alim, Blindo, Circuiti, Infogen, Param, Percorsi and Qt.imp).


Use “**Import single-feed diagram**” to create the single-feed diagram and complete the table automatically.

18.2 Import single-feed diagram

This command is used to draw the functional single-feed diagram automatically, complete with graphics and “data table”.


The **Import single-feed diagram** function uses the **.IMP** files in the current job order directory.

To enable automatic creation of the “**data tables**” including **calculation results** obtained by CANECO, first run the “Export data from CANECO” command.

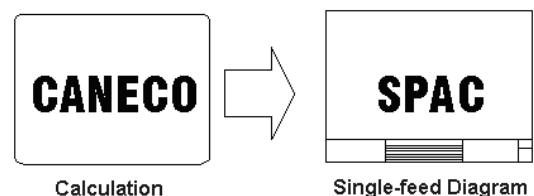

Always save the CANECO design in the job order directory that contains the .IMP files to be imported.

The “**Coordinate Y**” configuration corresponds to the component position as shown in the example figures:

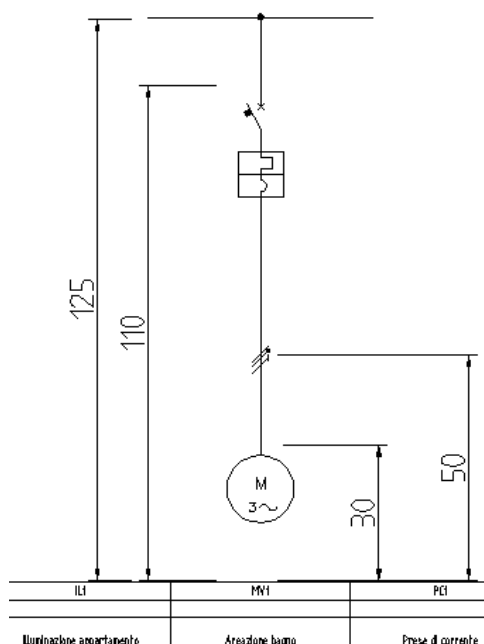

The single-feed diagram must be imported automatically in association with the use of “Single-feed title blocks” suitable for 10-circuit data tables” (use “Select table” to access those that are available)

Return order

The drawing is created starting with the current sheet and continuing on subsequent sheets as required. There are two types of priority for circuit layout.


- From Caneco** The various circuits are drawn using the layout as seen in CANECO.
- Alphanumerical** Circuits are drawn in alphabetical sequence on the basis of reference codes.

NOTE: When data are imported, this does not exclude the possibility of making subsequent changes and customizing using normal drawing tools.

Import directly from planimetric drawing

The **Import single-feed diagram** function uses the .IMP files in the current job order directory.

If you do not have the CANECO calculation software, or only need to effect the graphic part of the drawing (without calculations), the .IMP files created by the **SPAC Impianti “Export data (IMP)”** can be imported directly.

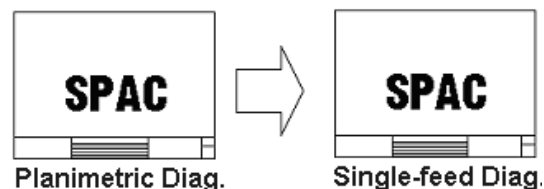

Run “Export data from CANECO” to complete “data tables” automatically, including the results of calculations obtained by CANECO.



CANECO and SPAC Impianti are optional software packages that are not supplied with.

19 Machinery options

19.1 Machinery options



Pop-menu > *Util*

The “**Machinery Options Configurator**” is the name given to a function group permitting a “**block**” management of project schemes and documentation.

The “block” management permits to process an existing project extracting a new machinery based on parts already drawn and configured in a master **drawing**. A master drawing is a user-drawn scheme, created with all the possible “blocks” composing the most complete machinery available.

Starting from the **master drawing basic scheme**, you choose which block to add or remove building a new machinery, an **Option** derived from the complete one. Options are managed by the external application “**19.2 Configuration**”, where you define the consistency **conditions**, or boundaries in order to avoid mounting incoherent parts. Once conditions are set, you can use program “**19.3 Machinery configurator**” to assembly the final machinery, applying Options to the master drawing. Finally the new electrical scheme (or project) is generated with command “**19.4 Scheme generator**”.

Here a summary of the steps to follow:

1 – **Create a master drawing**, with a 'full-optionals' machinery.

Example: a machinery can be built in different ways, and sold with more or less Options. The master drawing must contain all the parts that can be used to build the most complete machinery, with all possible motors, operators, commands, panels etc.

2 – Split the master drawing in “blocks”, associating them to the Options using command “**Option**”.

Note: backup the master drawing (e.g. in Librerie\Configuratore) before extracting a new machinery from it, because unused options will be deleted.

3 – **Export information** concerning Options, saved in a file with extension.Cm (machinery configuration) with command “**Export Data**”.

Note: save or copy the *.cm file to folder Librerie\Configuratore.

4 – Run program “**19.2 Configuration**” (you are not required to close the program in the meantime), open the Cm file (of the master drawing, 'full optionals') and **define the conditions**. Then update the Cm file.

Note: you can save the .Cm file with a different name to keep the original version.

5 – Run program “**19.3 Machinery configurator**” and open the Cm file you just got from “Configurator Generator”, you can now begin to **assemble the new project** of a machinery derived from the master drawing, with desired Options. Each configuration (with more or less options or accessories) have to be registered in a different .Cm file (basic scheme+ Options).

Note: each Cm file must have a name different from the one derived from the complete master.


6 – Open the **master drawing** and import the desired Machinery Configuration (Cm file) with command “**19.4 Scheme generator**”.



WARNING : backup the full master drawing (e.g. in Librerie\Configuratore) before extracting a new machinery from it, because unused options will be deleted

Options marking

This command applies to a **master drawing** created with all possible parts that, combined, build the 'full optionals' machinery and its electrical scheme.

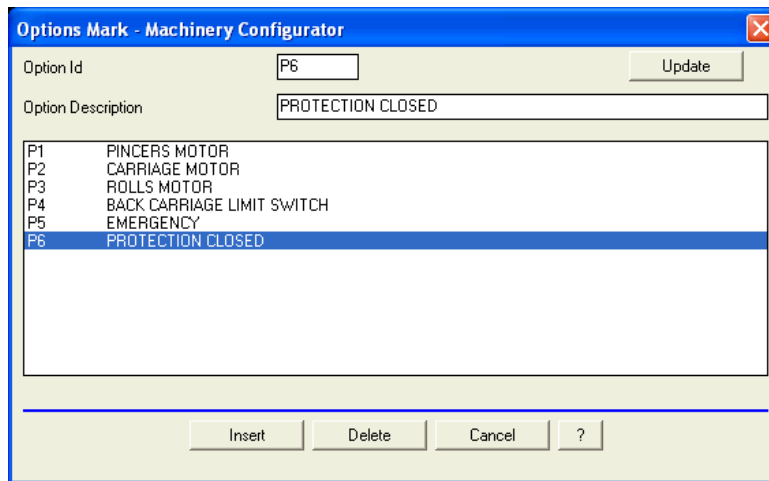

To create a new option fill in fields **Id** and **Description**, the press **“Insert”** and select on the drawing the objects related to the option.

“Delete” removes graphical objects from an existing Option: you can select and remove from the single object to the entire sheet or multisheet.

Machinery Options list


"Insert" adds new objects to an existing Option, so you can add objects drawn on different sheets to a single option, grouping power supplies, auxiliaries, buttons, etc.

So, disabling an Option, all associated objects will be removed from the scheme and related documents.


Options example:

Option Id : **P1** (Motor 1) marked at page 3, 6 and 12 (motors, auxiliaries and panel).


Option Id : **P2** (Motor 2) marked at page 3, 6 and 12 (motors, auxiliaries and panel).

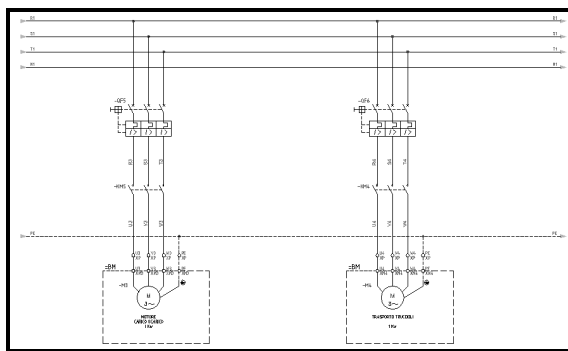


Page 3 Options P1 and P2 (Motors scheme).

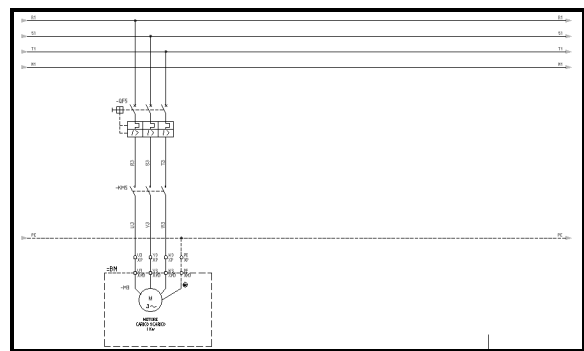


Page 3 Option P1 only.

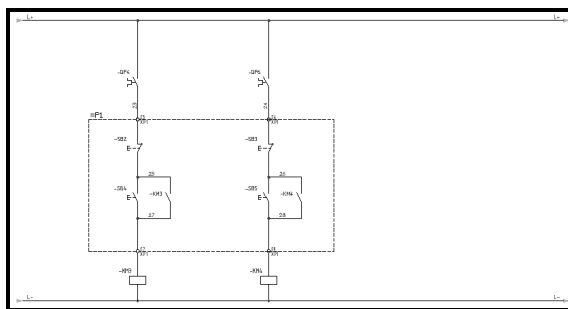


Page 6 Option P1 and P2 (Auxiliaries scheme).

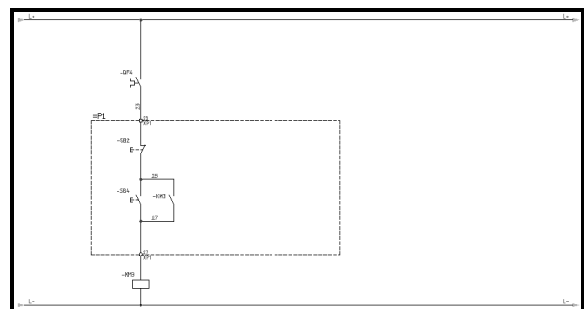

Page 6 Option P1 only.

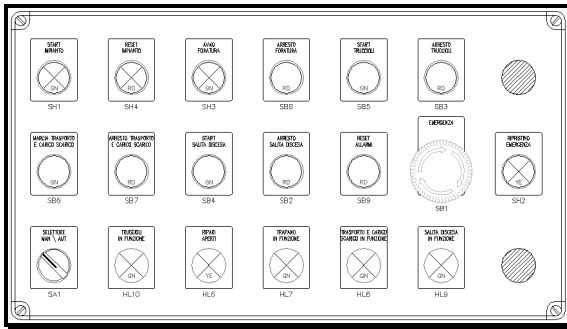

Page 12 Option P1 and P2 (Panel).

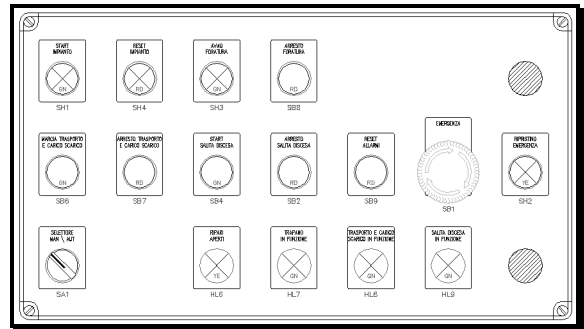


Page 12 Option P1 only.

This sample shows the importance of a detailed marking of all sheets.

Information concerning Options is saved in a file with .Cm extension (machine configuration) with command "Export Data".

Highlight marks

This is used to highlight in the drawing objects relates to a specific mark; the list reports marks existing on the current sheet only.

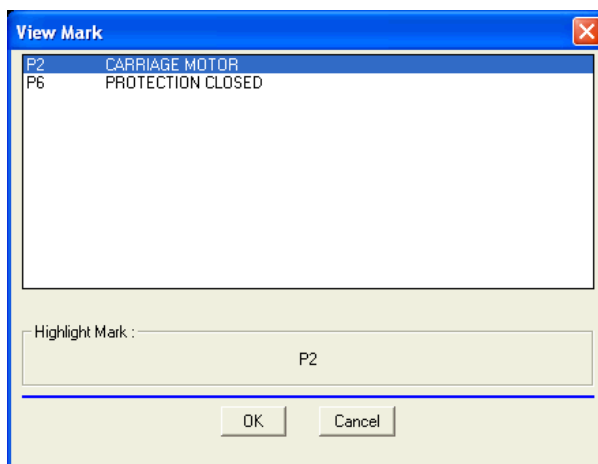

To change these values (add or remove objects) use command "Option".

Remove marks

This is used to **remove all the marks** existing in the current multisheet.

To remove mark one by one (or in groups) use command "Option".

Export Data

This command applies to a **final master drawing only**, created with all the possible "blocks" composing the most complete machinery available.

Information concerning Options, are exported in a.Cm file (machinery configuration), used by program "19.2 Configuration" to **define the conditions** to derive a new machinery drawing from the master one.




You are advised to backup the full master drawing (e.g. in Libreria\Configuratore) before extracting a new machinery from it, because unused options will be deleted.

19.2 Configuration generator

This tool manages Options and data exported from the **ultimate master drawing** (see “*Export Data*” Sect. 19.1), **defining the consistency conditions** for the Options that were generated.

Program “**Configuration generator**” can be launched from the program group, clicking on the icon shown at left.

To open the .Cm file Cm exported from the drawing, select **Open** from the File menu (or press button “Open existing configuration”):

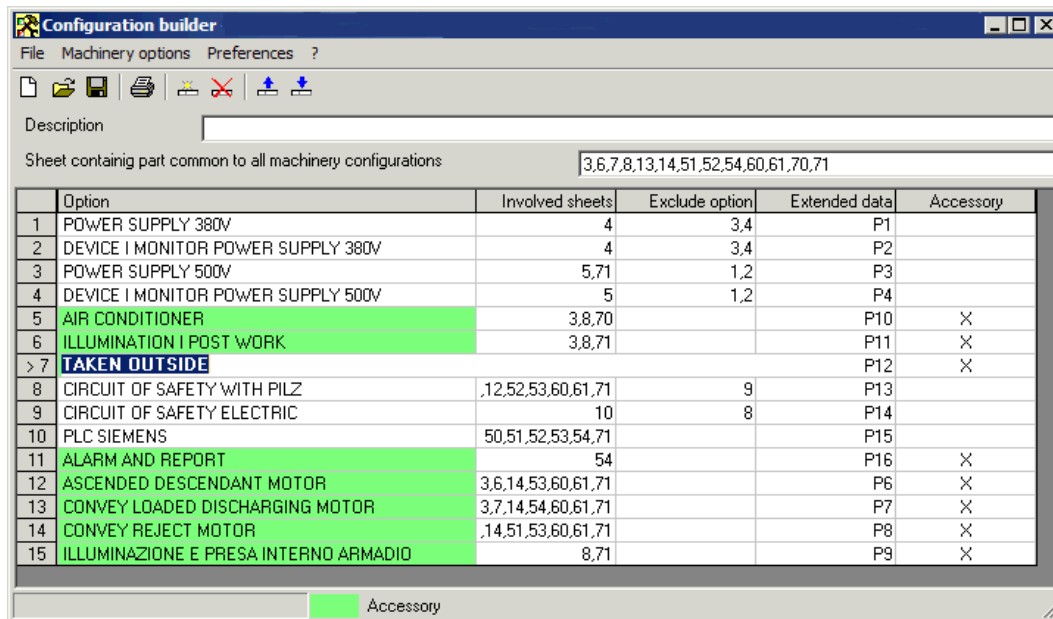

List of Machinery Options in the “Configuration Generator”.

When opening a Cm file, the Options list is shown with its descriptions and Id (identificative). Now you have to :

- 1 – **Sort Options** (moving rows upward or downward) in order to have a more readable and intuitive list.
- 2 – Insert all pages common to each Option combination into field “**Sheet containing part common to all machinery configurations**”. This page list must contain sheets with markers, too, excluding only pages where all entities are marked.
- 3 – Set Options that can’t coexist in column “**Exclude option**”. In the previous image you can see Option 1 (380V power supply) excludes Option 2 (220V power supply), because the scheme can contain only a supply circuit (two are not allowed). Each option can exclude one or more other options.
- 4 – Set Option not strictly required for the machinery to work in column “**Accessory**”. These options are marked with a different color, set with command “**Preferences**”.
- 5 – Save the .Cm file exported from the drawing with the new settings. You can save the .Cm file with a new name, too, if you want to keep the original one.


Now you can run program “**19.3 Machinery configurator**” and open the newly generated Cm file, and start **assembling a project** of a machinery with desired Options.

19.3 Machinery configurator

This is used to **assembly a Machinery project with desired Options**, beginning from data previously saved in the .Cm file by “19.2 Configuration”.

Program “**Machinery Configurator**” can be launched from the program group, clicking on the icon shown at left.

To open the .Cm file Cm exported from the drawing, select **Open** from the File menu (or press button “Open existing configuration”):

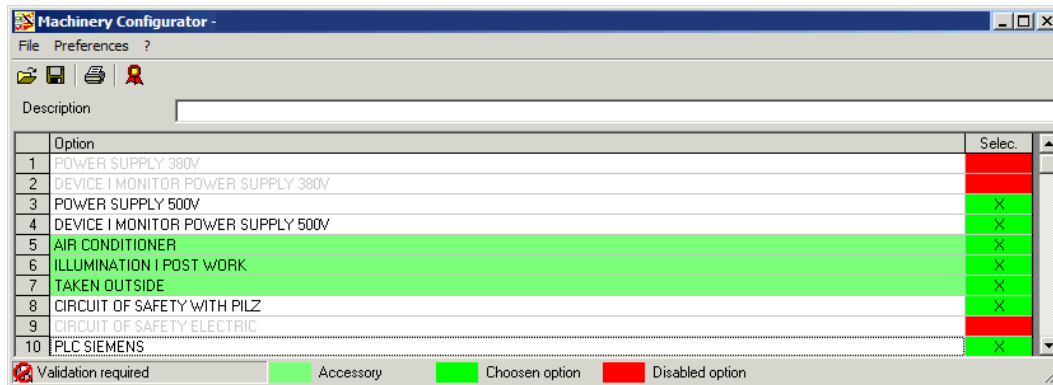

List of Options in the “Machinery configurator”.

When opening a Cm file, the Options list is shown with its descriptions and the “selection” field. Now you have to:

1 – **Select required Options** for the machinery to work; enabled options are marked in green (or another color set using command “**Preferences**”), excluded ones are marked in red. Options are enabled clicking cells in column “Select.”.

2 – **Select “Accessory” Options**, not required for the machinery to work. “Accessory” options are marked with the color set in “Preferences”.

3 – **Verify** your choices: pressing button “**Verify choices**” you check if all parts (options) essentials for the machinery to work have been set.

4 – If the project is “**Invalid**”, a report (message list) shows which Options caused the error, for example:

Configuration invalid for the following reasons:

Option 7 – Piece counter – is essential for the machinery to work.

5 – If the project is “**Validated**”, you can save the machinery project. Each possible machinery combination (among accessories and Options) has to be saved in different .Cm files.

Now you can **open the master drawing** (containing all the possible machinery parts) and import a Machinery Configuration (.Cm file) using command “19.4 Scheme generator”.




Save the .Cm file with a different name, both from full master and original one.

19.4 Scheme generator




Pop-menu > *Util*

This is used to import a **Machinery Configuration** (from a validated .Cm file) previously got from program “19.3 Machinery configurator”.

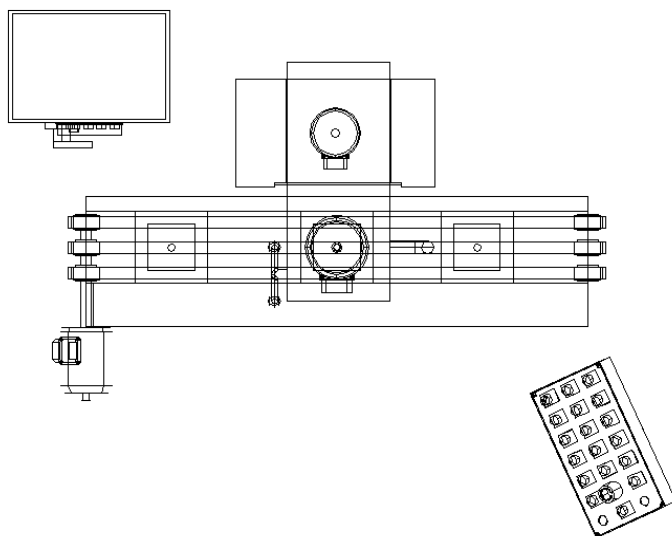

Complete “master drawing” example.

Then you obtain the machinery previously configured.

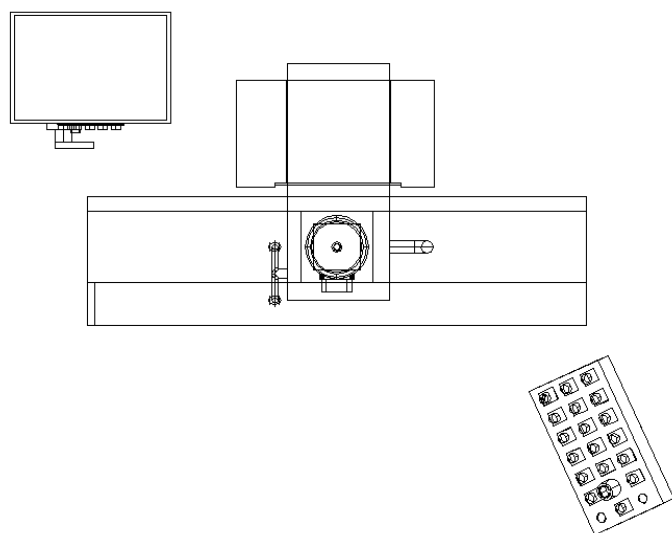

Project with some Options disabled.

Ensure the **master drawing** (or equivalent, duplicated) complete of all possible parts of the machinery before running command “Scheme generator”.

All multisheet pages (master drawing) containing parts common to selected Options of this machinery (see Sect. 19.2), are kept, and so all graphical entities concerning enabled “Option” .

Objects related to disabled Options are removed.

When the process has come to end, you can compact the multisheet removing sheets that have been completely emptied (see “3.7 Shift sheet”).



WARNING : You are advised to keep a copy of the master drawing always (e.g. storing it in the Librerie\Configuratore folder).

19.5 Scada




Pop-menu > *Layout* > *Applications*

This function allows you to interact with the software **GraphWorX32 of Iconics**.

Iconics Genesis-32 is a group of programs allowing software solutions to view **HMI/SCADA**. The three main programs are: Graphworx32, Trendworx32, Alarmworx32.

The software suites will be used in the Scada projects to manage graphics interface, alarms, historical database and reports (data collection and reporting).

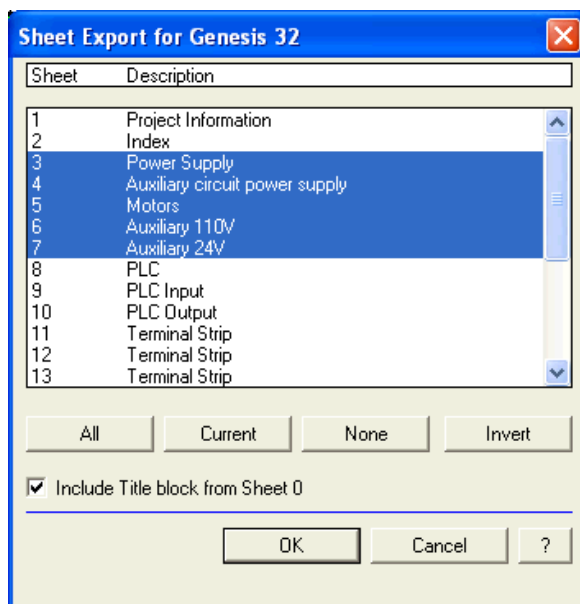

1 – Export data

Information regarding the drawing is saved in the job order folder Wmf with the specific command “**Export for Scada**”.



2 – Convert data.

Activate the program “**Cad2Genesis**” (even without closing the drawing) and select the Wmf folder containing the exported drawing data then press the green symbol .

Now the gdf-GraphWorX32 compatible files are created in the Wmf folder.

NOTE: Cad2Genesis can be activated from the folder Program\Lisp of SPAC by double clicking on the file Cad2Genesis.exe.



Iconics Genesis-32 is optional software not supplied.

20 Cable module


20.1 Cable module

Cable Module is a cable processing program (OPTIONAL). It can be used in conjunction with SPAC Automazione, to ensure improved management functions compared to the standard “11.1 Cables” function.

CM (Cable Module) provides additional information (not supplied with standard functions) but does not alter the characteristics of SPAC Automazione screen pages.

The program uses specific graphic markers (labels) to insert information into connections in the drawing to specify the cable to which they belong and the relative wires (or conductors). Cables can be laid while drawing and this can be done under any condition: connections between components and terminal blocks inside or outside the panel, with or without supporting terminals.


Cable Module commands can be accessed from the specific “Cable Module” toolbar.

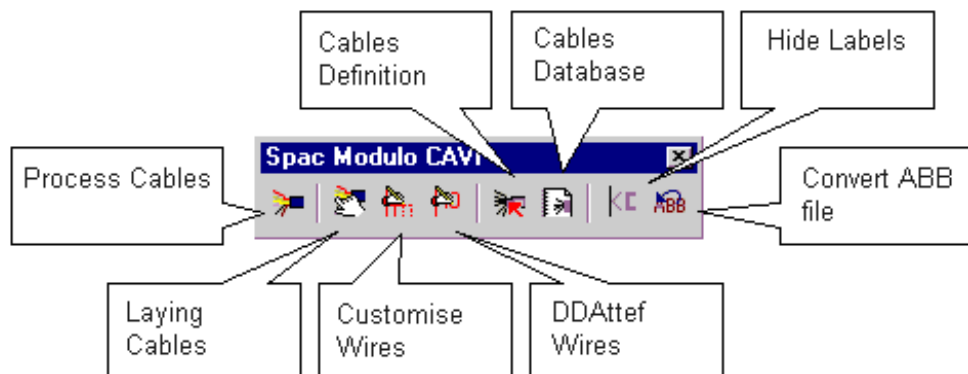

20.2 Lay cables

The “Lay Cables” command can be used to select and lay multi-wire cables directly on the diagram drawing. This operation is necessary in order to define “internal panel” connections between terminal blocks (or connectors) and components, either on other panels or on the same panel.


- **Enable New Cable**
- **Enable Existent Cable**

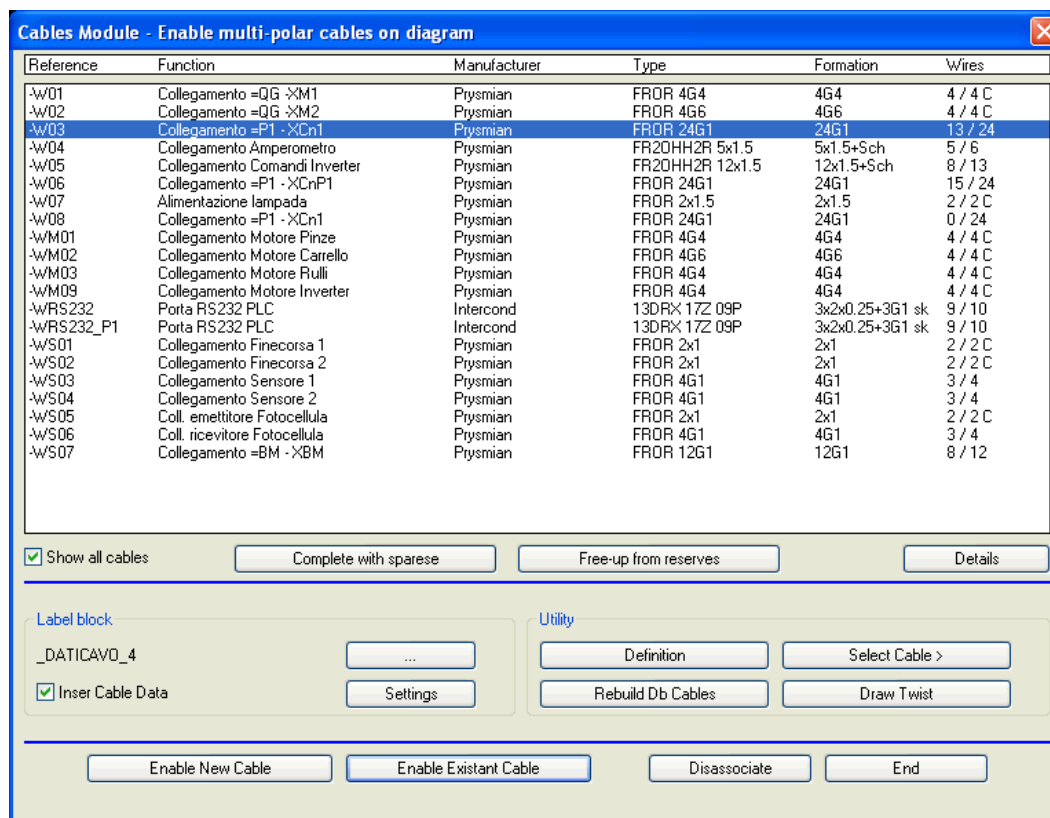

The command opens a window with the list of all existing wires. Activating the “**Show all cables**” option it is possible to filter the list of “complete” cables (or completed by “**Spares**”), those items are identified with a “**C**” character.

Pressing the “**Definition**” button it is possible to prepare all the cables required before the laying: even if new cables will be placed in the “Existing Cables” list, ready to be associated in the drawing.

“**Select cable >**” activates the cable selected on the scheme; it is required to select an ID in a wire already laid (see “**Cable Label block**”).

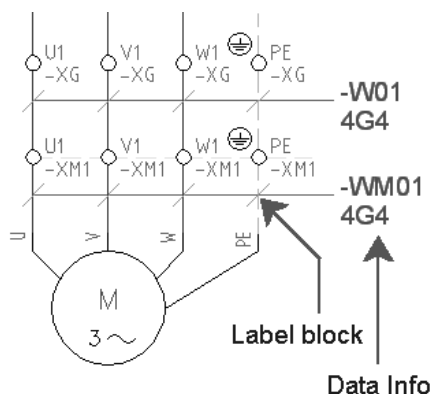

During a cable laying, the wires selected are identified with an **ID Block** (see “**Cable Label block**”) and with the **Cable's Indications** (see “**Cable Data Info**”).

This feature consents the customization of the characteristics related to the “Cable's Indications” (pressing “**Settings**”), and the selection (or modification) of the ID type (pressing “...”).


The IDs and the indications are removed automatically pressing the “**Disassociate**” button while laying a cable.



When the ID is present it is suggested to use a “neutral” ID type (only graphical).

Enable New Cable

Executes the **“20.2 Lay cables”** on the drawing of a new cable (not contained in the list). It is possible to select one wire at a time, or click on an empty space to **activate the “fence” selection**.

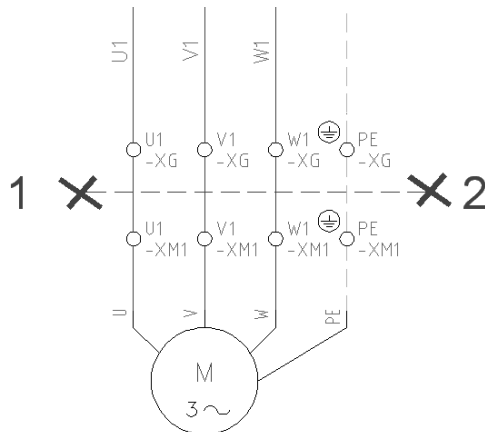

The point at which the wire with the “fence” is selected is used as the **“Cable Label block”** insertion point.

The selection, from left to right or vice versa, defines the sequence in which wires are assigned.

In the example the available conductors are displayed in a dialogue window from which a request is sent to assign wires U1, V1, W1 and PE in that sequence to the cable conductors.

After the “fence” compare the window to set the cable type:

Cables Module - New Multipolar Cable Definition

New Cable Ref.: **-W01** -W Formatting: **01**

Function: **Collegamento =QG -XM1**

Disturbance: **/**

Length (m): **8m**

Number Conductors: **4**

Cable Data

Prismian **FROR 4G4** **4G4**

Cavo multipolare FROR FLEXipiù 450/750 V e 300/500 V Sez. 4G4 mmq - Grigio

Start Panel: **=QG**

Destination Panel: **=BM**

Conductor Id	Section	Twist
1 BN	4	
2 BK	4	
3 GY	4	
4 GNYE	4	

Cable already defined (select one to acquire the material)

Reference	Function	Manufacturer	Type	Formation	Description	Cond.
-W02	Collegamento =QG -XM2	Prismian	FROR 4G6	4G6	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-W03	Collegamento =P1 -XCn1	Prismian	FROR 24G1	24G1	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	24
-W04	Collegamento Amperometro	Prismian	FR20HH2R 5x1.5	5x1.5+Sch	Cavo multipolare schermato FR20HH2R SCREENFLEX	6
-W05	Collegamento Comandi Inverte	Prismian	FR20HH2R 12x1.5	12x1.5+Sch	Cavo multipolare schermato FR20HH2R SCREENFLEX	13
-W06	Collegamento =P1 -XCn1	Prismian	FROR 24G1	24G1	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	24
-W08	Collegamento =P1 -XCn1	Prismian	FROR 24G1	24G1	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	24
-WM01	Collegamento Motore Pinze	Prismian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-WM02	Collegamento Motore Carrello	Prismian	FROR 4G6	4G6	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-WM03	Collegamento Motore Rulli	Prismian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-WM09	Collegamento Motore Inverter	Prismian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-WRS232	Porta RS232 PLC	Intercond	13DRX 17Z 09P	3x2x0.25+3G1 sk	Cavo combinato per collegamento BUS InterBus per pos 10	
-WRS232_P1	Porta RS232 PLC	Intercond	13DRX 17Z 09P	3x2x0.25+3G1 sk	Cavo combinato per collegamento BUS InterBus per pos 10	
-WS03	Collegamento Sensore 1	Prismian	FROR 4G1	4G1	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4
-WS04	Collegamento Sensore 2	Prismian	FROR 4G1	4G1	Cavo multipolare FROR FLEXipiù 450/750 V e 300/500	4

OK - (Automatic) Manual selection Annulla ?

The cable ID is incremented automatically according to the prefix set and the format.

It is possible to select the characteristics of the new cable from the database (pressing “...”) or from those of the cables already defined (contained in the list on the bottom).

The operation is equivalent to the one on the **Definition Cable** command, used often for the preparation of the required cables before the laying.


Number Conductors: **4**

The **“Number Conductors”** indicates the quantity of wires selected with the “fence” and works as a filter to facilitate the selection of the cable type.

The selection of the **Departure and Arrival Panels** is not mandatory, however, this information is useful to add more details to a cable and their indication facilitates the “Cables Processing” phase (see par. 20.5).

- Automatic Laying** The association of wires U1, V1, W1 and PE to the cable’s conductors (threads) is **done automatically**, according to the selection order when designing the “fence” (from SX to DX or vice versa).
- Manual Laying** The association is executed manually wire by wire, in the same way as in the “**Enable Existent Cable**” command.

The Automatic laying is the approach suggested to save time and to avoid the confirmation for each single wire selected with the “fence”.

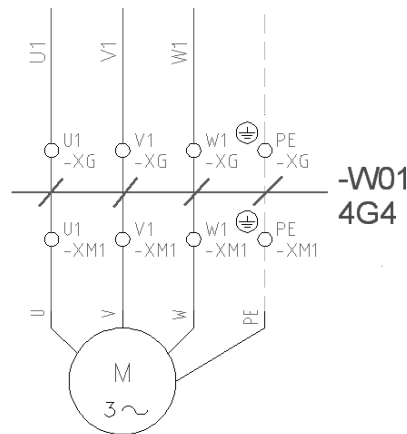

Automatic cable laying –W01

The indentifications (one for each wire) and the indications (one for each laying) are inserted automatically.

In case of a wrong operation, it is required to delete the laying using the “**Disassociate**” command, and then execute the laying command again (the identifications and the indications are removed automatically).

The wire’s conductors (threads) that were not assigned during the automatic laying, could be reused with the “**Enable Existent Cable**” command.



If the wire’s conductors that were not assigned must remain free, then the “**Complete with Spares**” button must be pressed (cables identified with “C” letter).

2/4	Example of a cable with 2 wires still available.
2/4 C	Example of a complete cable (con 2 spare wires).
4/4 C	Example of a complete cable (without spare wires).

The cables laid with this command are ready to be designed using “**20.5 Cable processing**” command.

The “Cables Processing” feature consents the visualization, in a general and a global way, of the laying executed, and eventually to make changes.


Example of an automatic laying:

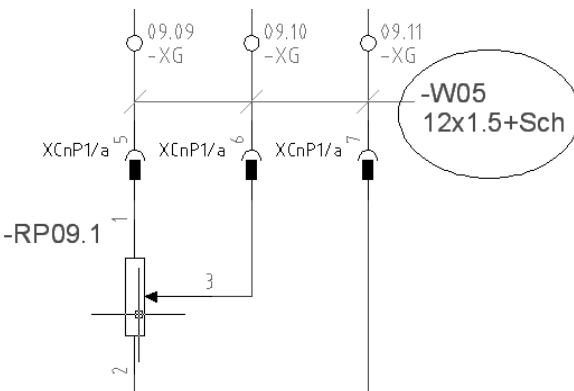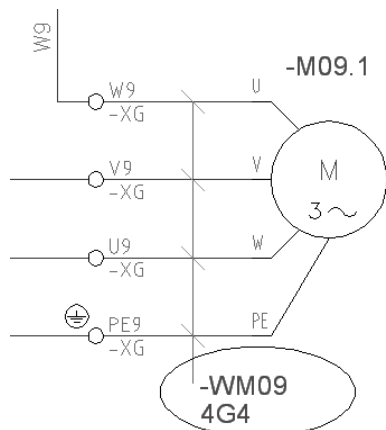

For this example we have use the **Cable Label block** “_DatiCavo_4” (neutral) associating the **Cable Data Info** (Cable Name + Composition) set with the Arial font.

Enable Existent Cable

This function enables the **“20.2 Lay cables”** command on the drawing. It is possible to select one wire at a time or insert a point in space, which automatically enables selection in **“fence”** mode.


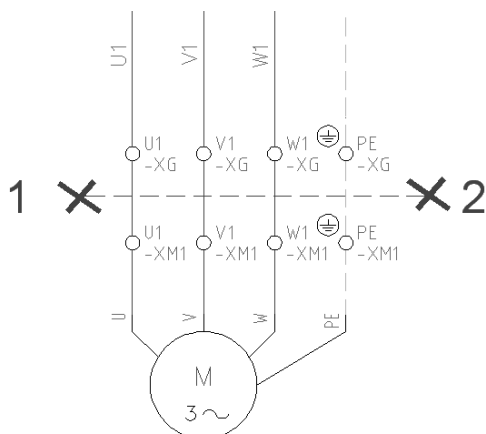


It is possible to make several “fences” after the confirmation.

The point at which the wire with the “fence” is selected is used as the **“Cable Label block”** insertion point.

The selection, from left to right or vice versa, defines the sequence in which wires are assigned.

In the example the available conductors are displayed in a dialogue window from which a request is sent to assign wires U1, V1, W1 and PE in that sequence to the cable conductors.

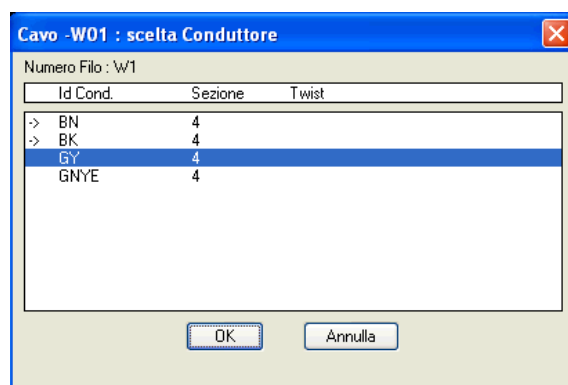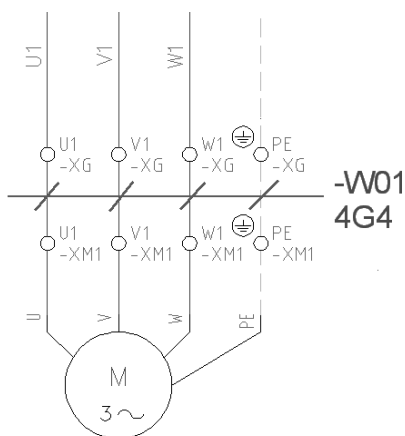


Cable Laying – W01 with 4G4 composition

After the “assigning” of the wire’s conductors (threads) to the selected wires, **the identifications and the indications are inserted automatically.**



Note: Even though several fences are selected, these refer to the laying of conductors that belong to the same cable. The selection is only allowed if wires are already numbered.

 The next time the command is activated, the program displays the conductors that have already been used. When all available conductors have been used, the program displays a letter **“C”** to indicate that the cable is complete.



Cable Details

Complete cables are hidden in the list. To view these, select **“View all cables”**. Cables completed manually using **“Spares”** are also displayed.

This is used to view details about cable function, manufacturer, type, make-up, etc. entered during **“Definition”** of the cable.

In some cases “assign” is not carried out. There are two possible reasons for this.

1 - The wire selected is linked to a “Power returns” (or connections). If the function does not “assign” the cable conductor the following message is displayed in the command line:

POWER FEED <NO.>: label cannot be placed in the requested position

Let us analyse the selections that have been made in *Figure A*, and the result obtained in *Figure B*:

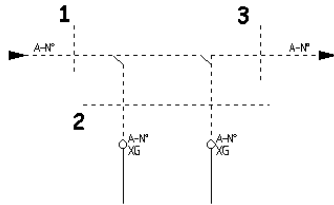


Figure A

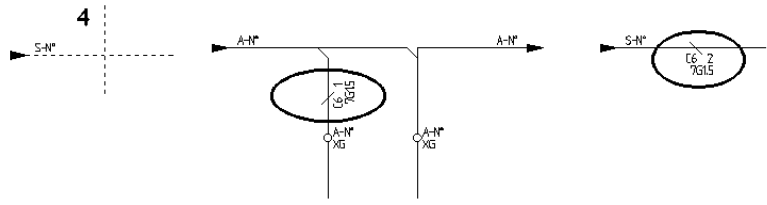


Figure B

- Point 1** The point that has been selected is not valid as two wires pass through it.
- Point 2** The first wire selected is assigned. The second is not valid as two wires pass through it
- Point 3** The selected point is not valid as the wire is linked to a power feed or signal start return. Sections of the branch after the circuit cannot therefore be analysed.
- Point 4** The selected point is valid as the wire is linked to one power feed (or connection) destination return and the branch can therefore be analysed.

2 - More than one wire has been selected. If the function does not “assign” the cable conductor the following message is displayed:

WIRE <No.>: label cannot be placed in the requested position

Let us analyse the selections that have been made in *Figure C*, and the result obtained in *Figure D*:

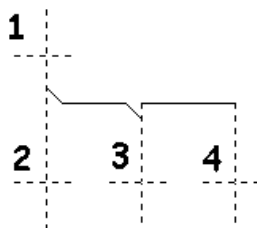


Figure C

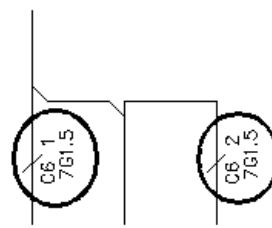


Figure D

- Point 1** The selected point is not valid as two wires pass through it.
- Point 2** The selected point is valid as only one wire passes through it.
- Point 3** The selected point is not valid as two wires pass through it.
- Point 4** The selected point is valid as only one wire passes through it.



In presence of a single wire, it is better to use only the identification with data (without the indication).

Definition

The cables needed to run the “20.2 Lay cables” command can be defined at two different stages:

1. **While drawing:** using the specific command to record the necessary cable types and related information each time.
2. **During “Select cable”** in the make-up stage: suitable for changing cables recorded in stage (1) or creating cables that were not planned.

Reference	Manufacturer	Type	Formation	Description	Cond.
-w01	Pysmian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G4 mmq - Grigio	4
-w02	Pysmian	FROR 4G6	4G6	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G6 mmq - Grigio	4
-w03	Pysmian	FROR 24G1	24G1	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 24G1 mmq - Grigio	24
-w04	Pysmian	FR20HH2R 5x1.5	5x1.5+Sch	Cavo multipolare schermato FR20HH2R SCREENFLEX S2 450/750 V Sez. 5x1.5 m	6
-w05	Pysmian	FR20HH2R 12x1.5	12x1.5+Sch	Cavo multipolare schermato FR20HH2R SCREENFLEX S2 450/750 V Sez. 12x1.5 m	13
-w06	Pysmian	FROR 24G1	24G1	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 24G1 mmq - Grigio	24
-w07	Pysmian	FROR 2x1.5	2x1.5	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 2x1.5 mmq - Grigio	2
-wM01	Pysmian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G4 mmq - Grigio	4
-wM02	Pysmian	FROR 4G6	4G6	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G6 mmq - Grigio	4
-wM03	Pysmian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G4 mmq - Grigio	4
-wM09	Pysmian	FROR 4G4	4G4	Cavo multipolare FROR FLEXipiu 450/750 V e 300/500 V Sez. 4G4 mmq - Grigio	4
-wRS232	Intercond	13DRX 17Z 09P	3x2x0.25+3G1 sk	Cavo combinato per collegamento BUS InterBus per posa mobile	10
-wRS232_P1	Intercond	13DRX 17Z 09P	3x2x0.25+3G1 sk	Cavo combinato per collegamento BUS InterBus per posa mobile	10

The cable ID is proposed automatically, and is incremented according to the prefix and the format; it is possible to type a different name from the one proposed (max. 12 characters).

It is possible to select the characteristics of the new cable type from the database (pressing “...”) “Cable database” (see 4.2) or from the cables already defined (contained in the list on the top).

It is necessary to insert the Descriptions, Functions, Interference and Length (optional data). The selection of the **Departure and Arrival Panels** is not mandatory and the two values are useful to add further details to the cable. Their presence facilitate the work on the “Cables’ Processing” phase (see 20.5).

Pressing **Add** the new cable will be registered in the list of those already defined.

To modify the cables already defined (or deleted) it is required top use the “Change” and “Delete” functions.

The **Clear** button empty all these fields (see “Rebuild cable file”). The Cable’s index is contained on the file **DbSpac.mdb** that is contained on each Job Order folder.





The Cable Definition is recalled automatically during the “Enable New Cable” command.

Cable Label block

The **Label block** affects the graphics of the block inserted during the “Lay Cables” (see 20.2 Lay cables). The wires selection point using the “fence” is used as the position for the insertion.



The block has two functions: **visual**, by immediately indicating that a cable has been laid, **informative**, in that it “contains” data relating to the cable, conductor, make-up, type, etc.

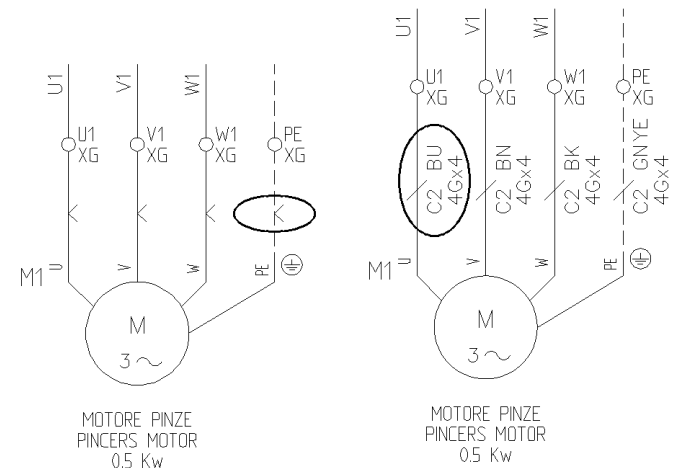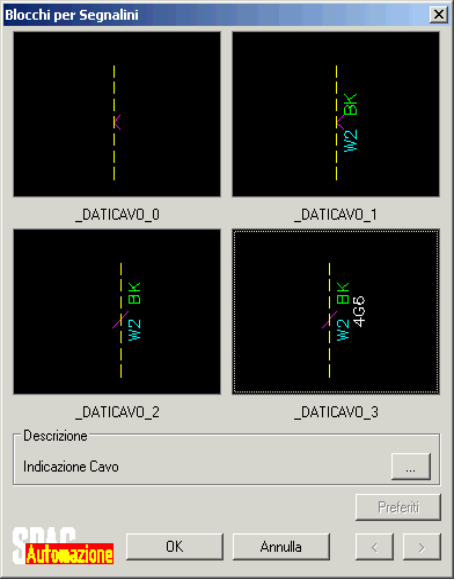

Example of label “_Daticavo_0” and “_Daticavo_3”.

Labels are stored in the Librerie\Simboli directory. Each .DWG block corresponds to an .SLD image (slide) with the same name that is displayed in the dialogue window.

New labels can be customized and saved in the same directory as existing labels. The name of the block must follow on consecutively from those already there (_Daticavo_5, _Daticavo6, etc.), with a maximum of 20 labels (the dialogue box can display a maximum of 20 windows).

A block with the name **_DATICAVO_ n°** that contains the following set of attributes is considered to be a Cable label symbol:

Label	Description
Cavo (Cable)	Cable reference (“C2” in the example).
Vena (Thread)	Wire assigned to a cable (“BU” in the example).
TipoCavo (CableType)	Type of cable (FROR 450/750V” in the example).
Formazione (Composition)	Make-up of the cable (“4Gx4” in the example).
Costruttore (Manufacturer)	Manufacturer (“General Cavi” in the example).
Note (Notes)	Additional remarks added by the user.



When the “Cable Data Info” is present, it is suggested to use a “neutral” identification type (only graphical for example _DatiCavo_4.dwg).



(See Sect. 20.3 “Wire Label block”, “20.6 Hide labels”).




WARNING: The graphic content of label symbols (for example “<” or “/”) is important as this makes it possible to select attributes that are completely invisible.

Cable Data Info

The cables data indication is inserted automatically during the “Cable Laying” (see 20.2 Lay cables). The wires selection point using the “fence” is used as the position for the insertion.



The indication is optional, given that it could be contained in the same way inside the block **Cable Label block** (mandatory).

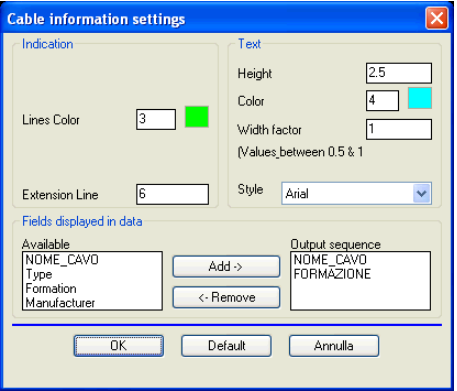


It is possible to customize the “Cable’s Indications” pressing the “Settings” button.

The information that is intended to be visible (Name, Type, Composition and Manufacturer) must be added on the “Output Sequence” list.

Pressing **Default** the configuration is memorized “locally” for the next usage (seei “4.2 Settings”). If the action is confirmed without pressing Default, the configuration will be considered occasional and used a single time.


Application Example:

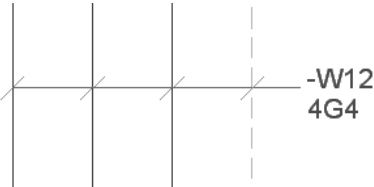

Cable Indication Example

In this example a neutral identification block is associated to the indication (_DatiCavo_4.dwg).

This configuration with 2 visible data (Name and Composition) is suggested by default (common use).

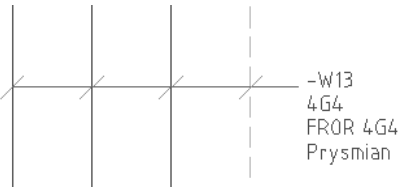

As in the previous example, but with all the data visible: **Name, Composition, Typo and Manufacturer.**



In this example an identification block with visible attributes is associated to the indication (_DatiCavo_1.dwg).

This configuration is suggested only when the conductors color visualization is required.



There are no indications in this example.

The visible information is the identification block’s attributes (_DatiCavo_3.dwg).

This configuration is suggested when a single wire is selected.

To insert an “Indication” manually it is necessary to use the command “11.4 Cable information”.



(See “Cable Label block”).



It is possible to modify the graphical representation of the “Indications” that are already present on the scheme using the command “11.4 Cable information”.


Disassociate

Deletes the operation related to the “association” of the cable’s conductors (threads) to the wires selected on the drawing by means of the “20.2 Lay cables” command.

Consents the **disassociation of the threads associated to a cable** by the selection of a wire or by using the “fence”. **The identifications and the Cable’s indications (if present) are removed automatically.**

Twist


This command is used to design the cable twisting.

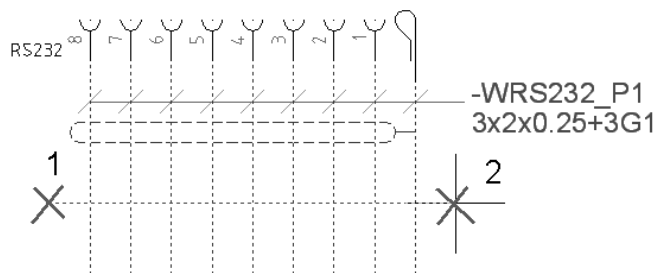

It is enough to insert the first point (1) in an empty space and the “fence” selection mode is activated automatically.

The wires selection line using the “fence” is used as the position for the twist design.

The twist design is **executed only for the pairs of conductors that are effectively twisted** on the “Cable database” (see 4.2).

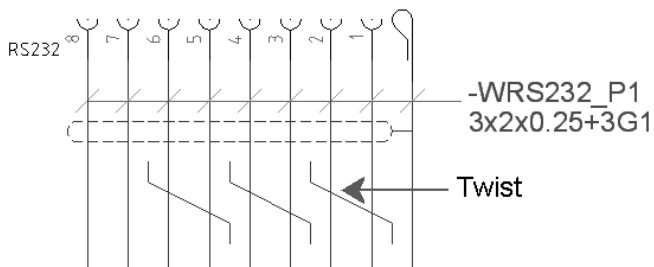

Example of a Twist design

Nr	Wire ID	Section	Twist
1	WH - White	0,25	2
2	BN - Brown	0,25	1
3	GN - Green	0,25	4
4	YE - Yellow	0,25	3
5	GY - Grey	0,25	6
6	PK - Pink	0,25	5
Sch7	Sch - Shield	1	

Spares

A certain number of conductors in cables are usually kept free so that they are available for subsequent changes to the installation.

Complete cable with spares **Completes the cable leaving some “spare” conductors free.** Cable conductors that are not “assigned” are made unavailable for later associations.

Cables with spares are marked by the letter “C” to indicate that the cable is complete.

Clear cable of spares Makes “spare” cable conductors available again. This function cancels the “Complete with spares” command.

Rebuild cable file

This command is used to update Cable indices that have been used in the job order (or to create a new one if this does not exist).




The cable index is contained in the DbSpac.mdb file

20.3 Customize wires


To customize a wire means to manage **wires that belong to the same branch but have different characteristics**. For instance, single-pole cables can be created and connections can be made between wires with different diameters. Different colored wires and wires of different types can be used on the same branch (same wire number).

It is possible to select one wire at a time or insert a point in space to enable selection in **“fence”** mode. The program uses the point on which **“fence”** mode is selected as the **“Wire Label block”** insertion point and to define which wires are to be customized.

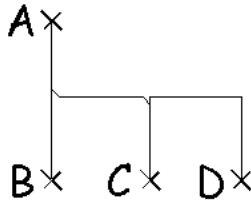


This connection (or branch) serves to illustrate the various wire customization options obtained according to the insertion point. The branch drawn this way connects:

- A to B
- A to C
- C to D

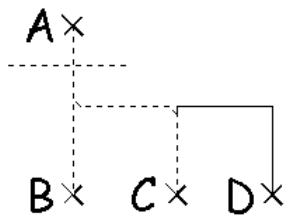


Selection 1:

The two wires connecting **A to B** and **A to C** are changed.

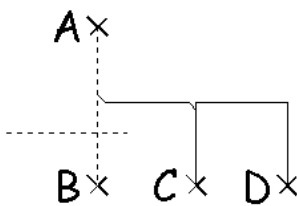


Selection 2:

Only the wire connecting **A to B** is changed.

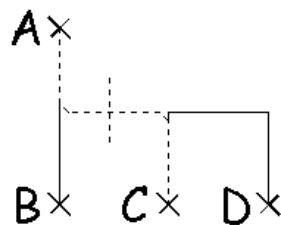


Selection 3:

Only the wire connecting **A to C** is changed.

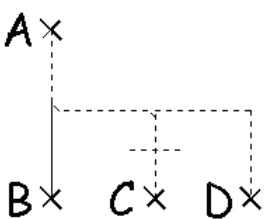

Selection 4:

The two wires connecting **A to C** and **C to D** are changed.

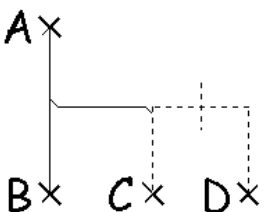


Selection 5:

Only the wire connecting **C to D** is changed.



The above is not valid if the example is drawn with standard connections (not serial or parallel).

The same branch used in the example with **standard connections** (not serial or parallel), is considered as a connection that starts from the top and leads down. Unlike the one in the example above, the branch connected this way connects **A to B**, **A to C** and **A to D**.

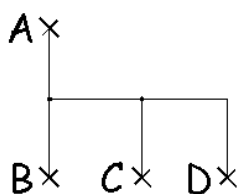

In this case (standard connection), “selection 3” of the previous example (serial-parallel) changes the two wires connecting **A to C** and **A to D**.

Use the “**Connection**” and “**Automatic Connection**” commands to change the type of connection (see Sect. 4.6).


The “customization” function opens the following dialogue window, which is divided into two parts that are active according to whether a wire or a power feed is selected.

Press “...” to change cable characteristics from the “**Cable database**”. The color can be changed from the specific drop-down menu.

The “**Wire Label block**” block is inserted into the drawing to highlight wires that have been “customized”.

The “**Always insert labels**” command forces label insertion even when these are not necessary (for instance, on the same branch).

Example of “Customize wires”:

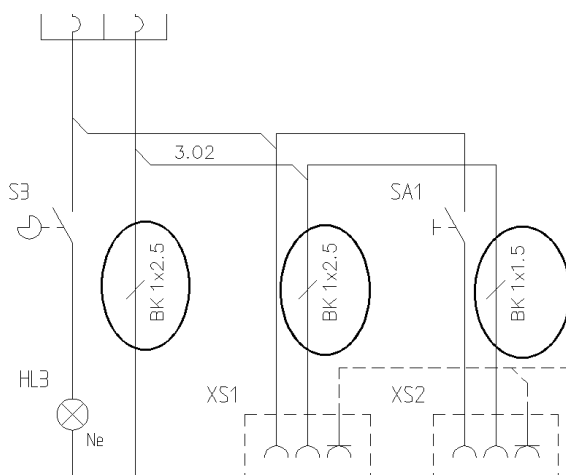

Connection number **3.02** is made up of 3 wires:

1st wire: color BK and diameter 1x2.5 (connects the switch to lamp HL3).

2nd wire: color BK and diameter 1x2.5 connects the switch to socket XS1).



3rd wire: color BK and diameter 1x1.5 (connects socket XS1 with socket XS2).



(See Sect. 20.8 “**Wire customization errors**”).

Wire Label block

The choice of label affects the graphics of the block inserted by the “20.3 Customize wires” command. The label has two functions: **visual**, by immediately indicating that a change has been carried out, **informative**, in that it “contains” data relating to make-up, type, etc.

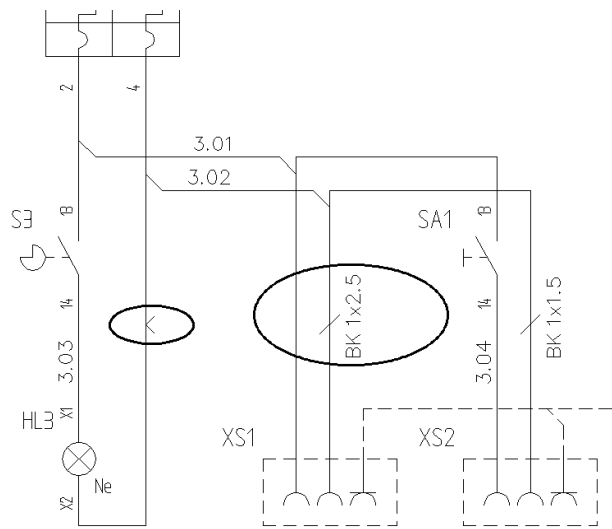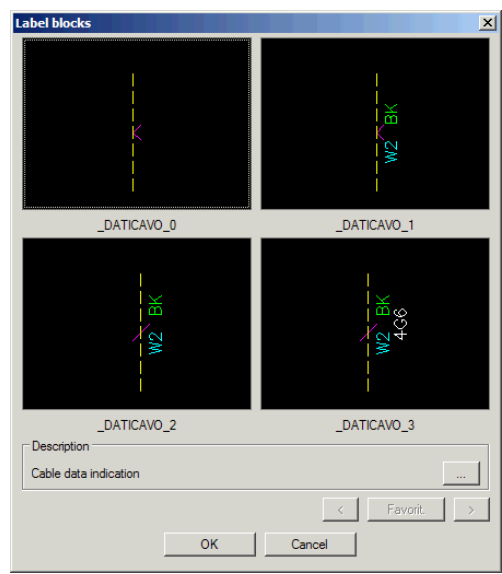

Example of label “_Datunip_0” and “_Datiunip_3”.

Labels are stored in the Librerie\Simboli directory. Each .DWG block corresponds to an .SLD image (slide) with the same name that is displayed in the dialogue window.

New labels can be customized and saved in the same directory as existing labels. The name of the block must follow on consecutively from those already present (_Datiunip_4, _Datiunip_5, etc.), with a maximum of 20 labels (the dialogue box can display a maximum of 20 windows).

A block with the name **_DATIUNIP_no** that contains the following set of attributes is considered to be a Wire label symbol:

Label	Description
Formazione (Composition)	Make-up of the wire.
Colore (Color)	Color of the wire.
Costruttore (Manufacturer)	Manufacturer.
Codice (Code)	Type of wire.
Note Notes)	Additional remarks added by the user.

 (See Sects. 20.2 “Cable Label block”, “20.6 Hide labels”).


 **WARNING:** The graphic content of label symbols (for example “<” or “/”) is important as this makes it possible to select attributes that are completely invisible.

20.4 Ddattef wire data

This command is used to change wire data (type, color, diameter, etc.), in relation to a single wire, a branch, or all the wires drawn on the sheet.


Either select one wire at a time, or enter a point in space to enable selection in “fence” mode. The program used the “fence” selection as the “Tick label” insertion point. This mnemonic symbol indicates that the wire has been checked.

The “Ddattef” command displays the following dialogue window, which is divided into two parts that are enabled according to whether a wire or a power feed is selected.

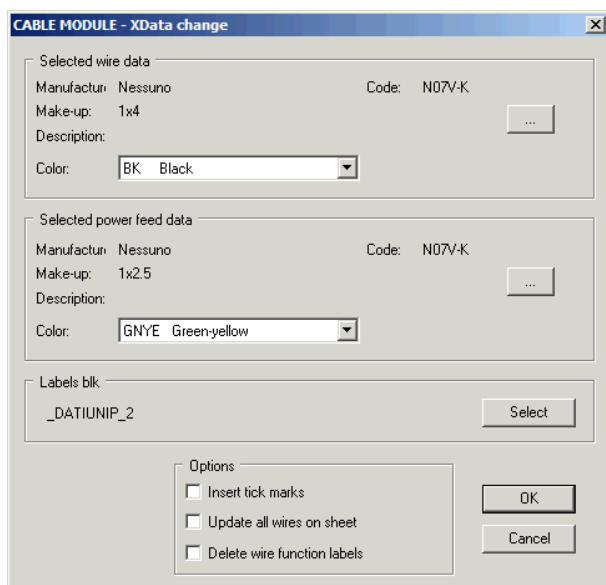

Press “...” to change wire characteristics from the “Cable database”. The color can be changed from the specific drop-down menu.

The “Tick label” block is inserted into the drawing to highlight wires that have been changed (or checked).

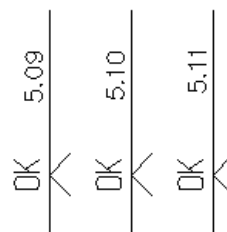

Example of “Tick labels”.

☐ Insert tick marks☐ Update all wires on sheet☐ Delete wire function labels

This command enables “Tick labels”. These are useful for highlighting changes to or checks on wires. **This symbol is only mnemonic.**

All wires on the sheet are changed. Previous wire selections are not taken into account.

In case of wires or branches that have already been changed using the “20.3 Customize wires” command, this function allows the user to remove previous labels and standardize cable type on the entire branch.




(See Sect. “20.6 Hide labels”, see Sect. 20.8 “Ddattef wire data errors”).

20.5 Cable processing

During cable processing the program extracts from the drawing all the numbered and valid wires that are needed to connect the components, **irrespective of the panel to which they belong**.

The “**20.1 Cable module**” program offers greater cable processing potential over “**11.1 Cables**” while the philosophy of operation remains unchanged.

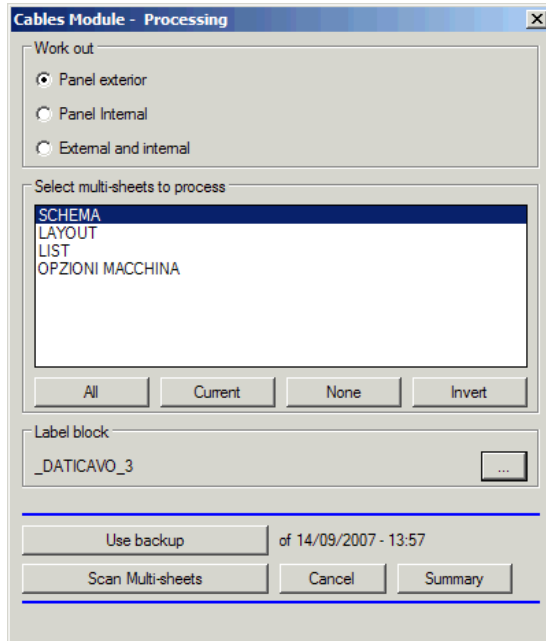


When enabled, the function presents this dialogue box from which to select the data to be processed:

- **Panel exterior** (all connections that link components, terminals and connectors belonging to different panels).
- **Panel interior** (all connections that link components, terminals and connectors belonging to the same panel).
- **Panel exterior and interior** (all connections that link components, terminals and connectors).

Press **Scan multisheets** to process all the multisheets selected from the list.

Use **Save** grants immediate access to previously stored cable data (stored using **Save**) in the “**MCables-Data.MDB**” database without having to repeat the scan.

By way of example, the two circuits drawn in the following figures 1 and 2 show the “Panel exterior” connections, with reference to panel =QG (MAIN PANEL).

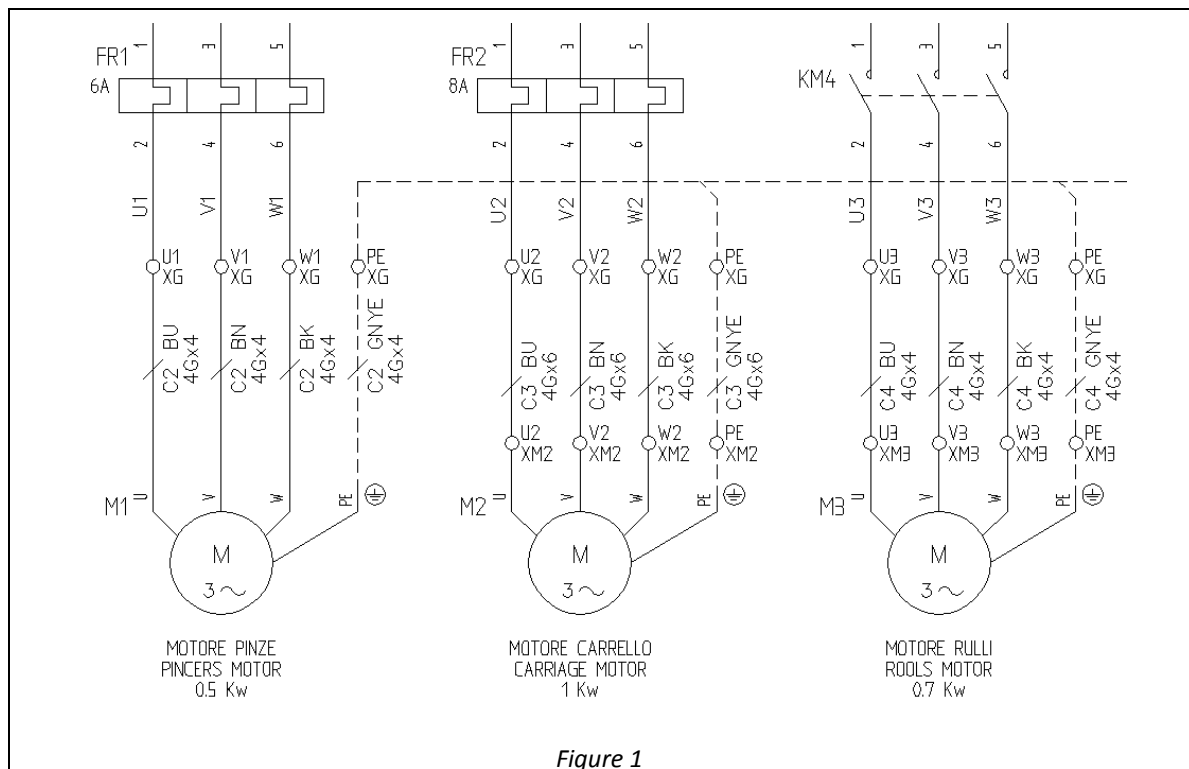

The elements in Figure 1 are arranged in the following home panels:

Main panel =QG terminal block XG FR1, FR2 and KM4	Panel = QG is connected to panel = BM (machine-mounted) by the following wires: - U1, V1, W1, PE for motor M1. - U2, V2, W2, PE for motor M2. - U3, V3, W3, PE for motor M3.
Machine-mounted=BM terminal block XM2 and XM3 M1, M2 and M3	

Figure 1 shows multi-core cables that have been laid by means of the “20.2 Lay cables”, command, whereas in the second circuit (Figure 2 below) the cables have not yet been laid. In this case we shall define these during the cable processing stage.

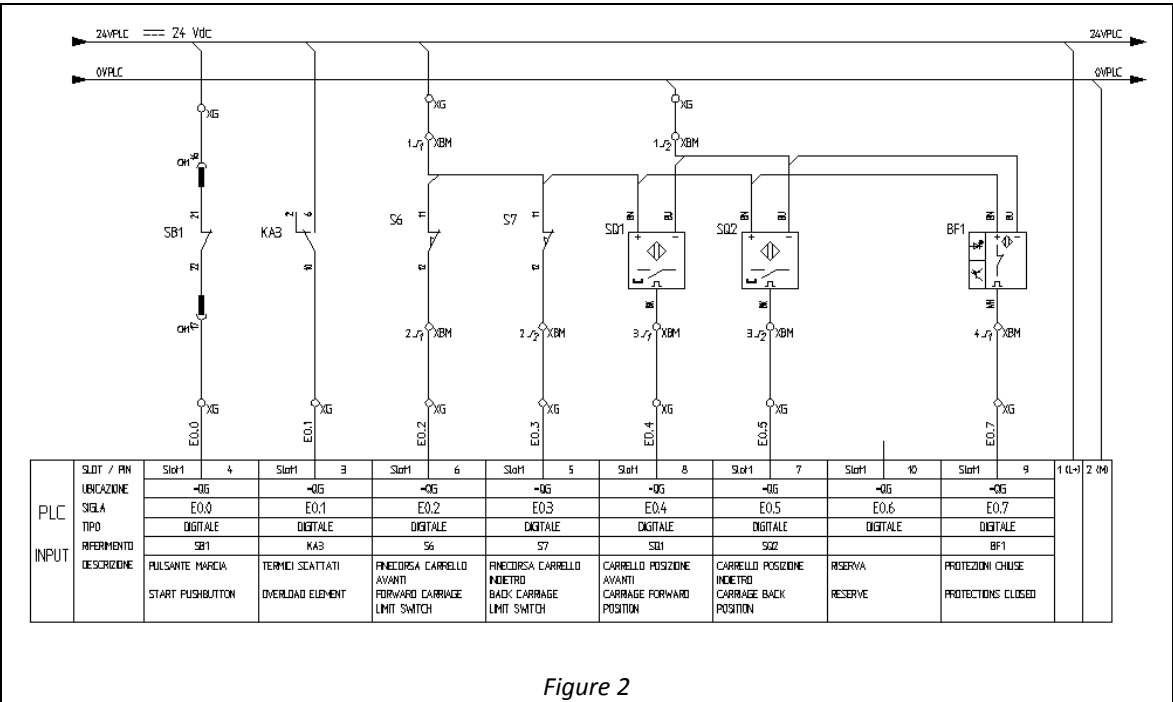


Figure 2

The elements in figure 2 are arranged in the following home panels:

Main panel =QG terminal block XG Input board from E0.0 to E0.7	Panel = QG is connected to panel = BM (machine-mounted) by the following wires: 24VPLC, 0VPLC, E0.2, E0.3, E0.4, E0.5 and E0.7.
Machine-mounted =BM terminal block XB1 S6, S7, SQ1, SQ2 and BF1	

After scanning, the following dialogue box is displayed: it contains the connecting wires shown in figure 2, between the terminals belonging to terminal block XG on panel =QG and the terminals belonging to terminal block XBM of panel =BM .

Cables processing

Start

Panel	Type	Name	Description
=QG	MORSETTIERA	XG	Main Panel Terminal Strip

Destin. points

Panel	Type	Name	Description
=BM	MORSETTI MULTIPLI	XBM	On Board Signals Terminal Strip
=BM	MORSETTIERA	XM1	Pincers Motor Terminal Strip
=BM	MORSETTIERA	XM2	Carriage Motor Terminal Strip
=BM	MORSETTIERA	XM3	Rolls Motor Terminal Strip
=P1	SPINA	CN1	Control Panel - Connector 1
=P1	SPINA	CN2	Control Panel - Connector 2
=P1	SPINA	CN3	Control Panel - Connector 3
=QG	MORSETTIERA	XG	Main Panel Terminal Strip
=QG	COMPONENTI		

CONNECTIONS

Panel	Terminal...	NMP/Pin	Wirenum...	NMA/Pin	Terminal...	Panel	Usage	Cable	Conductor	Bundle
=QG	XG	34	0VPLC	1_2	XBM	=BM	=BMSQ...	C1	1	
=QG	XG	33	24VPLC	7_1	XBM	=BM	=BMSQ...	C1	2	
=QG	XG	33	24VPLC	1_1	XBM	=BM	=BMSQ...	C1	9	
=QG	XG	57	I103.15	4_1	XBM	=BM	=BMSQ...	C1	7	
=QG	XG	56	I103.13	3_2	XBM	=BM	=BMSQ...	C1	6	
=QG	XG	55	I103.12	3_1	XBM	=BM	=BMSQ...	C1	5	
=QG	XG	54	I103.11	2_2	XBM	=BM	=BMSQ...	C1	4	
=QG	XG	53	I103.10	2_1	XBM	=BM	=BMSQ...	C1	3	

CONDUCTORS of C1

Conductor	Sect.
A 1	1.5
A 2	1.5
A 3	1.5
A 4	1.5
A 5	1.5
A 6	1.5
A 7	1.5
L 8	1.5
A 9	1.5
L GNYE	1.5

Current cable: C1 =BM XBM Connections General Cavi FROR 3... 10G1.5 8 su 10

Cable

.CSV file Output Update Save Exit

Click on the column headings in "CONNECTIONS", to select the order in which to display data:

- Term/Comp** Starting terminal block or components (in relation to the START area).
- NMP/Pin** The NumM value (terminal or pin number) on the start terminal or connector (in relation to the selection in the START area).
- Wire number** Number of the conductor or wire
- NMA/Pin** The NumM value (terminal or pin number) on the destination terminal or connector (in relation to the selection in the DESTINATIONS area).
- Term/Comp** Destination terminal block or components (in relation to the DESTINATIONS area).
- Panel** Destination panel, if more than one has been selected.
- Usage** The content of the usage attribute (optional) is shown on the destination terminal. If the usage data already exists this must indicate which component the downstream terminal is connected to (see "6.4").
- Cable** Reference of the cable used for the connection.
- Conductor** Conductor or wire of the cable used for the connection.
- Bundle** Bundle of which the conductor or the cable belongs to.

Multiple selections can also be made from the DESTINATION area list. In this case, the groups of connections relating to each destination terminal block, connector or component that have been selected are displayed, in that sequence, in the CONNECTIONS area. This sequence always applies to within individual groups of connections.



(See Sect. 20.8 "Errors during cable scanning").



The Cables Module manage also the cables with an end that is not connected to any component, for example the connections to the screen (see "20.8 Unconnected Cables").

Cable choice

The “Definition function executed by the “20.2 Lay cables” command (or pressing button “...””) was used to store a number of cables, which are now available. If no predefined cables are available, use the “Cable management” function.

Ref.	Description	Manufacturer	Type	Make-up
C1	Connection =BM -XBM	General Cavi	FROR 300/500V	10G1.5
C2	Connection =BM Motor1	General Cavi	FROR 450/750V	4Gx4
C3	Connection =BM Motor2	General Cavi	FROR 450/750V	4Gx6
C4	Connection =BM Motor3	General Cavi	FROR 450/750V	4Gx4
C5	Connection =P1 -CN1	General Cavi	FROR 300/500V	19G1.5
C6	Connection =P1 -CN2	General Cavi	FROR 300/500V	7G1.5
C7	Connection =P1 -CN3	General Cavi	FROR 300/500V	7G1.5

 
Examples of associations:

1. Select start panel and terminal block =QG (Main Panel) TERMINAL BLOCK XG and destination =BM XBM.
2. Select C1 from the current cable list to view conductor make-up.
3. Click on wire 0VPLC and select, for example, conductor 1.

Associations may be made in three ways:



By pressing the Associate button.



By using the right mouse key to enable the command menu and select the “Associate” command.



Drag & Drop, select the wire and drag it onto the conductor required.

The following result is obtained: in the connections window, wire 0VPLC is associated with “Cable C1” - “Conductor 1”. In the cable window, “Conductor” 1 is now **Associated** and not **Free**.

Panel	Terminal...	NMP/Pin	Wirenum...	NMA/Pin	Terminal...	Panel	Usage	Cable	Conductor	Bundle
=QG	XG	34	0VPLC	1_2	XBM	=BM	=BNI-SQ...	C1	1	
=QG	XG	33	24VPLC	7_1	XBM	=BM	=BNI-SQ...	C1	2	
=QG	XG	33	24VPLC	1_1	XBM	=BM	=BNI-S7...	C1	9	
=QG	XG	57	I103.15	4_1	XBM	=BM	=BNI-SF...	C1	7	
=QG	XG	56	I103.13	3_2	XBM	=BM	=BNI-SQ...	C1	6	
=QG	XG	55	I103.12	3_1	XBM	=BM	=BNI-SQ...	C1	5	
=QG	XG	54	I103.11	2_2	XBM	=BM	=BNI-S7...	C1	4	
=QG	XG	53	I103.10	2_1	XBM	=BM	=BNI-S6...	C1	3	

Conductor	Sect.
A 1	1.5
A 2	1.5
A 3	1.5
A 4	1.5
A 5	1.5
A 6	1.5
A 7	1.5
L 8	1.5
A 9	1.5
L GNYE	1.5



Conductors marked in green with “F” are Free. Those shown in red with “A” are Associated.

Under normal operating conditions, **multiple wires are selected** (using the Shift + Ctrl keys) to speed up the “Wire-conductor association” process.

Multiple wires are often selected to streamline operation. Below are two examples of when this function should be used:

CONNECTIONS

Panel	Terminal	NMP/Pin	Wirenum	NMA/Pin	Terminal	Panel	Usage	Cable	Conductor	Bundle		
=QG	XG	34	0V/PLC	1_2	XBM	=BM	=BM-SQ...	C1	1			
=QG	XG	33	24V/PLC	7_1	XBM	=BM	=BM-SQ...	C1	2			
=QG	XG	33	24V/PLC	1_1	XBM	=BM	=BM-S7...	C1	3			
=QG	XG	57	I103.15	4_1	XBM	=BM	=BM-BF...	C1	7			
=QG	XG	56	I103.13	3_2	XBM	=BM	=BM-SQ...	C1	6			
=QG	XG	55	I103.12	3_1	XBM	=BM	=BM-SQ...	C1	5			
=QG	XG	54	I103.11	2_2	XBM	=BM	=BM-S7...	C1	4			
=QG	XG	53	I103.10	2_1	XBM	=BM	=BM-S6...	C1	3			
								</				

Select 3 wires and 1 conductor:

These are associated automatically **starting from the selected conductor** (conductor 2).



There must be a sufficient number of free conductors available to perform the associations.

CONNECTIONS

Panel	Terminal	NMP/Pin	Wirenum	NMA/Pin	Terminal	Panel	Usage	Cable	Conductor	Bundle
=QG	XG	34	0V/PLC	1_2	XBM	=BM	=BM-SQ...	C1	1	
=QG	XG	33	24V/PLC	7_1	XBM	=BM	=BM-SQ...	C1	2	
=QG	XG	33	24V/PLC	1_1	XBM	=BM	=BM-S7...	C1	9	
=QG	XG	57	I103.15	4_1	XBM	=BM	=BM-BF...	C1	7	
=QG	XG	56	I103.13	3_2	XBM	=BM	=BM-SQ...	C1	6	
=QG	XG	55	I103.12	3_1	XBM	=BM	=BM-SQ...	C1	5	
=QG	XG	54	I103.11	2_2	XBM	=BM	=BM-S7...	C1	4	
=QG	XG	53	I103.10	2_1	XBM	=BM	=BM-S6...	C1	3	
				</						

Select 3 wires and 3 conductors:

These are associated automatically **starting from the selected conductor** (conductor 2) on wires after the first.



The number of wires selected must correspond with the number of free conductors selected.

An “association” can be removed in three ways:



By pressing the Disassociate key (even on multiple selections).

Associate to cable
Disassociate from cable
Associate to cable bundle
Disassociate from cable bundle
Details

By using the right mouse key to enable the command menu and select the “**Disassociate**” command (even on multiple selections).

See conductor
See cable
Disassociate

By right-clicking on the conductor and selecting the “**Disassociate**” command (even on multiple selections).

- Now select the remaining wires (from 24V/PLC to E0.7) using the multiple selection function and associate these with cable C1 starting from conductor 2, to complete the connections between =QG XG and =BM XBM. Cable C1 is used by 7 out of the 10 available conductors.

C1	=BM XBM Connections	General Cavi	FROR 3...	10G1.5	8 su 10
C1	=BM XBM Connections	General Cavi	FROR 3...	10G1.5	8 su 10
C2	=BM Motor 1 Connections	General Cavi	FROR 4...	4Gx4	4 su 4
C3	=BM Motor 2 Connections	General Cavi	FROR 4...	4Gx6	4 su 4
C5	=P1 CN1 Connector Connections	General Cavi	FROR 3...	19G1.5	15 su ...
C6	=P1 CN2 Connector Connections	General Cavi	FROR 3...	7G1.5	5 su 7
C7	=P1 CN3 Connector Connections	General Cavi	FROR 3...	7G1.5	5 su 7

Cable list

The example shows cables C2, C3 and C4 as being complete as they were associated during drawing using the “**20.2 Lay cables**” command. In this case it is possible to proceed with a check or to make any necessary changes.

A cable may be used for connections on multiple terminal blocks, connectors or components.



(See Sect. 20.8 “**Cable processing errors**”).



Cable processing is contained in the MCables-Data.MDB database.

Wire detail

This command is used to display all data concerning one wire, including the sheet number on which it is drawn and the multi-sheet that contains that sheet. Right-click to enable.

View conductor

This is used to display the wire (connection) with which a conductor is associated. In case of multiple selections on conductors, the command automatically displays the overall status (all the conductors that have been selected must start from the same panel and terminal block). Right-click to enable.

View cable


This is used to display all the wires that are associated with the complete cable. The command automatically displays the overall status (all the conductors that have been selected must start from the same panel and terminal block). Right-click to enable.

Update

After associating cable wires and conductors the drawing must be updated with the information produced as a result of cable processing and related changes. Press “Update” to perform the following operations:

- Introduce into the drawing the labels relating to the associations that have been made.
- Remove from the drawing the labels relating to associations that have been removed.
- Change labels relating to connections that have been changed.
- Change labels relating to conductors and cables changed using the “Cable management” function.

This drawing shows the results obtained for cable C1 associations.

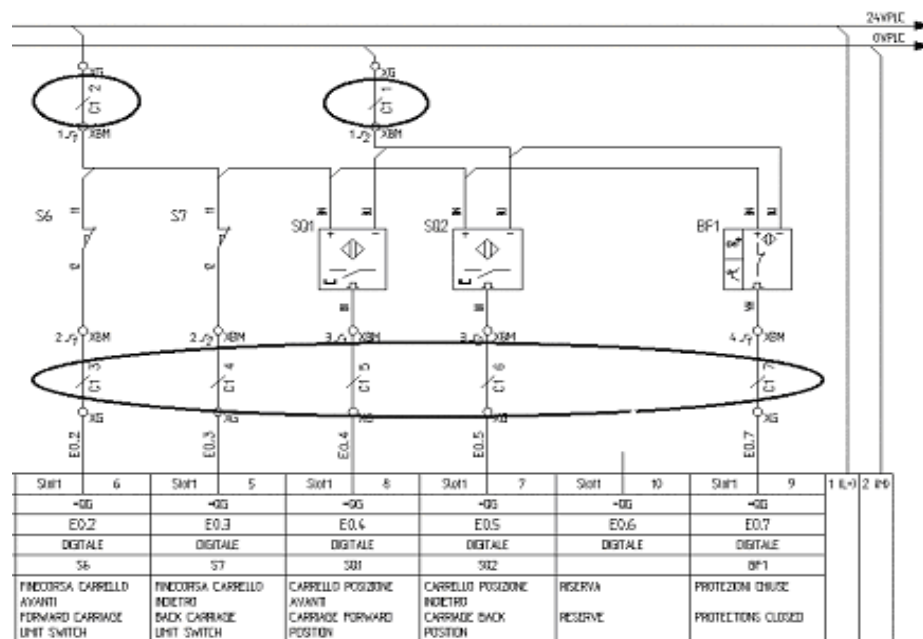

Labels are only inserted into drawings where possible. If the program cannot define a section of the connection in which to insert the label, this is omitted.

Cable bundle choice

Press button “...” to display the dialogue where to define the **Cable bundle** you are going to associate to the links.

Cables Module - Bundles Cables Definition

Reference	Description	Length (m)
WF1	Connection cable from QG to BM	8

Add

Change

Delete

Bundle reference

WF1

Description

Connection cable from QG to BM

Length (m)

8

Save

Cancel

A cable bundle is made of conductors and mono or multipolar cables grouped in a unique path.

Its definition requires a Reference, a description and a path length.

Once defined, you can assign a conductor or a cable to the bundle right-clicking on it with the mouse.

Right clicking with the mouse to pop-up the command menu, then select “**Associate to cable bundle**”. Monopole cables can be assigned with multiple selections while for multipole cables is sufficient to select a single conductor to assign the entire cable to the bundle.

Associate to cable

Disassociate from cable

Associate to cable bundle

Disassociate from cable bundle

Details

The same menu contains the command to disassociate cables from a bundle (“**Disassociate from cable bundle**”).

In the example figure monopole conductors U3, V3, W3, PE and cable C2 are associated to the bundle WF1.


CONNECTIONS

Panel	Terminal...	NMP/Pin	Wirenum...	NMA/Pin	Terminal...	Panel	Usage	Cable	Conductor	Bundle
=QG	XG	30	-0V	1	CN2	=P1	=P1:HL...	C6	1	WF1
=QG	XG	25	+24V	5	CN2	=P1	=P1:HL...	C6	5	WF1
=QG	XG	48	7.11	4	CN2	=P1	=P1:HL...	C6	4	WF1
=QG	XG	47	7.10	3	CN2	=P1	=P1:HL...	C6	3	WF1
=QG	XG	46	7.09	2	CN2	=P1	=P1:HL...	C6	2	WF1

CONDUCTORS of C6

Conductor	Sect.
A 1	1.5
A 2	1.5
A 3	1.5
A 4	1.5
A 5	1.5
L 6	1.5
L GNYE	1.5

File

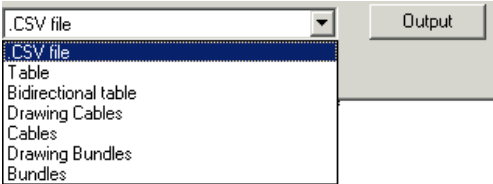


Select the “File” output to export cable data to an file (CSV also compatible with Microsoft Excel). When creating this file, it is possible to select the fields required. The file is saved in the job order directory and called **Cables-List**.

In the make-up window, each piece of information from the “Available fields” list that is placed into the “fields in output sequence” through the use of **Add**, represents a column in the file.

- Standard

Represents the factory settings in the output fields (where present).
- Default

Press **Default** to store configuration in “local” mode for future use (see “4.2 Settings”). When confirmed without pressing Default, the configuration is perceived as temporary and used only once.

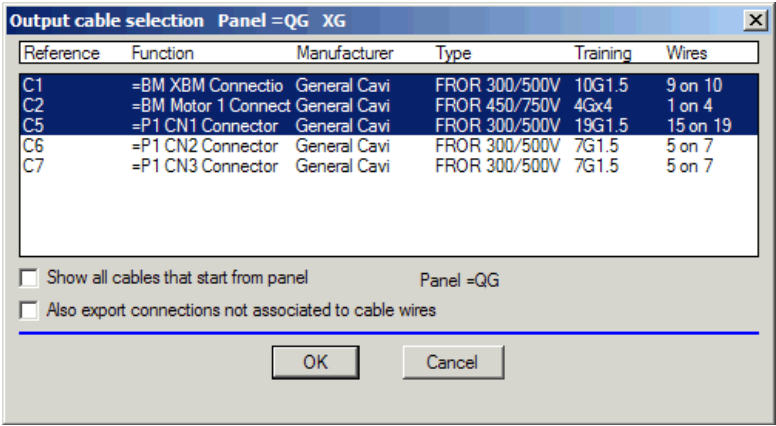

Use the Output function to select cables to be exported (by default all cables are selected).
The cables in the list are linked to the start terminal block.

- View all cables that start from the panel

When enabled, this option displays all the cables linked to the panel (for example =QG), irrespectively of the start terminal block, connector or component.
- Also export connections that are not associated with cable conductors

When enabled, this option exports all single-pole cables used for the connection as well as the multi-pole cables.




The option for exporting single-pole cables is especially useful for processing “Panel interior” where many connections are usually handled this way.

Table

CAVONCABLE	TIPO\TYPE	QUADRO MORSETTIERA \ BOARD GROUP STRING					= 00 XG				
		NR. FILE CONDUCTOR	NR. NO.	TIPO TYPE	FOLIO SHEET	UTENZA DESTINATION					
C2	FRDR 450/750V 4Gx4	BU	1	EK5	5						
C3	FRDR 450/750V 4Gx6		2	EK5	5						
C4	FRDR 450/750V 4Gx4		3	EK5	5						
C1	FRDR 300/500V 10G15		4	EKE4	5						
			5	EK5	5						
			6	EK5	5						
			7	EK5	5						
			8	EKE4	5						
			9	EK5	5						
			10	EK5	5						
			11	EK5	5						
			12	EKE4	5						
			13	EK5	5						
			14	EKE4	5						
			15	EK5	5						
			16	EKE4	5						
			17	EK5	5						
			18	EKE4	5						
			19	EK5	5						
			20	EKE4	5						
			21	EK5	5						
			22	EKE4	5						
			23	EK5	5						
			24	EKE4	5						
			25	EK5	5						
			26	EKE4	5						
			27	EK5	5						
			28	EKE4	5						
			29	EK5	5						
			30	EKE4	5						
			31	EK5	5						
			32	EKE4	5						
			33	EK5	5						
			34	EKE4	5						
			35	EK5	5						
			36	EKE4	5						
			37	EK5	5						
			38	EKE4	5						
			39	EK5	5						
			40	EKE4	5						
			41	EK5	5						
			42	EKE4	5						
			43	EK5	5						
			44	EKE4	5						
			45	EK5	5						
			46	EKE4	5						
			47	EK5	5						
			48	EKE4	5						
			49	EK5	5						
			50	EKE4	5						
			51	EK5	5						
			52	EKE4	5						
			53	EK5	5						
			54	EKE4	5						
			55	EK5	5						
			56	EKE4	5						
			57	EK5	5						
			58	EKE4	5						
			59	EK5	5						
			60	EKE4	5						
			61	EK5	5						
			62	EKE4	5						
			63	EK5	5						
			64	EKE4	5						
			65	EK5	5						
			66	EKE4	5						
			67	EK5	5						
			68	EKE4	5						
			69	EK5	5						
			70	EKE4	5						
			71	EK5	5						
			72	EKE4	5						
			73	EK5	5						
			74	EKE4	5						
			75	EK5	5						
			76	EKE4	5						
			77	EK5	5						
			78	EKE4	5						
			79	EK5	5						
			80	EKE4	5						
			81	EK5	5						
			82	EKE4	5						
			83	EK5	5						
			84	EKE4	5						
			85	EK5	5						
			86	EKE4	5						
			87	EK5	5						
			88	EKE4	5						
			89	EK5	5						
			90	EKE4	5						
			91	EK5	5						
			92	EKE4	5						
			93	EK5	5						
			94	EKE4	5						
			95	EK5	5						
			96	EKE4	5						
			97	EK5	5						
			98	EKE4	5						
			99	EK5	5						
			100	EKE4	5						

Example of cable table.

The output is specific to start terminal blocks and connectors.

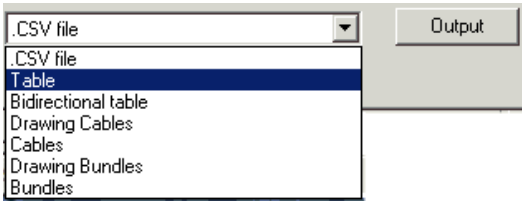


When “Table” is selected, the program automatically draws all the cables starting from the specific panel and terminal block, according to the previous make-up.

The table is re-created each time the cable make-up is changed (it is not updated automatically).

The table symbol to use can be chosen among the 4 available (Listatcv0, 1, 2 and 3.dwg) in the Symbols folder (for customizations or changes).

(See “Table Customization”).

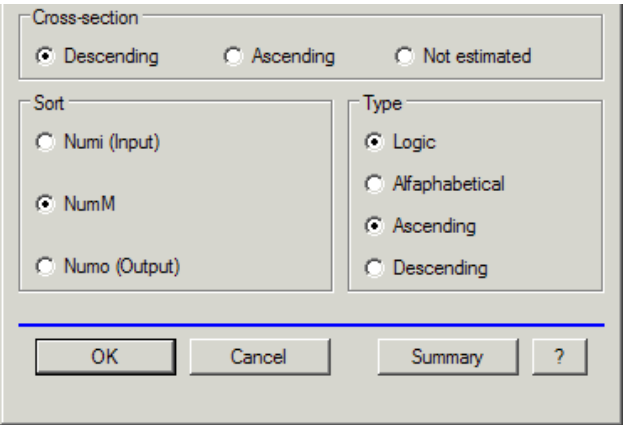

The command asks the user to define the terminal sequence parameters for creating the terminal block. This sequence is not requested in the case of connectors and terminal blocks with multiple terminals.

You are not allowed to make new sorting on the terminals modified with command “Edit terminal block” (see Sect. 6.3). In this case the dialogue where to choose sorting doesn’t appear.

The following sequence parameters can be used:

- Diameter

This is the diameter of the terminal, in mm. This type of sequence has **top priority**. All terminals with the same diameter are grouped together and in each group the sequence is dictated by other variables.
This sequence does not affect connectors.
- Term. order

By default the program sequences terminals according to the wire number. (NumI/NumO).

Sequence according to NumM (terminal number) can only be used when this data has been used correctly when inserting terminals into the drawing.

Sequence according to usage is only feasible after assigning the necessary information to all terminals in the drawing (see “6.4 Usage”).

The NumI, NumM etc. sequence is **the priority sequence** when the diameter variable has been set as “**Not considered**”.
- Type

Logic gives priority to items in the list according to characters, numbers, then numbers associated with characters.

Alphabetic gives priority to items in the list according to numbers, then numbers associated with characters and then characters (ASCII character set sequence).

Ascending and descending affect both characters and numbers.

Bi-directional Table

Same features as a normal table (not bi-directional), the difference is just the position of data: **specific for cables feeding into or leaving Terminals and Connectors.**

[illegible]

Bidirectional table

.CSV file
Table
Bidirectional table
Drawing Cables
Cables
Drawing Bundles
Bundles

Output

Every cable change means consequent table regeneration (it is not updated automatically).

The table symbol is chosen from 3 options: (Table_Cable_Terminal0, 1, and 2.dwg), which are found in the Symbol folder (for any Customization).

(See “Table Customization”).

Example of bi-directional table.

Bidirectional Cables Table

Terminal block / Connector: =QG

Origin Mark: =QG

Destination Mark: =P1, =BM

> <

OK Cancel

The command asks you to indicate the Origin and Destination Panels:

Set the drawing “side” to be used for each panel by using the “<” and “>” buttons.

Table Customization

You can customize new blocks by storing them in the same folder as other blocks. The block name must be consecutive to existing names (**Listatcv0**, Listatcv1, etc.. for normal tables and **Table_Cable_Terminal0**, Table_Cable_Terminal1 etc.. for bi-directional ones), with a maximum of 20 blocks (the dialogue window can view max. 20 windows).

1 - Data fields contained in the table

Information contained in these symbols can be parameterized. Set the data that should be viewed by following the fields in the following tables:

Tag \ Label	Information related to Terminals and Usage
R_QUADRO	Panel the terminal belongs to (attribute Panel)
R_MORSETTIERA	Terminal reference (attribute Terminal)
R_NUMI	Input wire number (attribute NumI of terminal)
R_NUMM	Terminal number (attribute NumM of terminal)
R_NUMO	Output Wire Number (attribute NumO of Terminal)
R_FG	Terminal Sheet Number
R_FGCAT	Sheet Number and position in terminal segments
R_LIVELLO	Level number for multiple terminals (attribute terminal Level)
R_TIPO	Terminal type (material code)
R_UTENZA	Terminal usage (Panel and name, extracted from Usage attribute)
R_PU	Terminal Usage (No. Pin, extracted from Usage attribute)
R_FU	Usage Description (Functions1 and 2 or terminal board description)
R_NOTEM	Notes upstream of terminal (Panel and name, extracted from NoteM attribute)
R_PNM	Notes upstream of terminal (No. Pin, extracted from NoteM attribute)
R_FNM	Description of Notes Upstream of terminal (Functions 1 and 2 or terminal board description)



The “Notes upstream” of terminal are considered as opposite side of usage (*see Sect. 6.4*).

Tag \ Label	Information related to Cables
R_NOMECC	Cable Reference (or connection wire)
R_NOMECC+	Destination Cable Reference (only for Bi-directional Table)
R_SZ	Section Cable
R_SZ+	Destination Section Cable (only for Bi-directional Table)
R_NF	Number Wire
R_NF+	Destination Number Wire (only for Bi-directional Table)
R_TIPOC	Cable Type (or connection wire)
R_TIPOC+	Destination Cable Type (only for Bi-directional Table)
R_LC	Cable length
R_LC+	Destination cable Length (only for Bi-directional Table)
R_DC	Cable Disturbance Value
R_DC+	Destination Cable Disturbance Value (only for Bi-directional Table)
R_FC	Cable Function
R_FC+	Destination Cable Function (only for Bi-directional Table)
R_ID	Cable Conductor Identifier (or color with connection wires)
R_ID+	Destination cable conductor identifier (only for Bi-directional Table)



Attributes must be Invisible or Pre-assigned.

The pre-assigned default value corresponds to maximum width (in mm) for each field (set in the default value for each attribute).

Listatcv and Table_Cable_Terminal symbol attributes (Tag\Label of fields) are drawn just once, at the top or left of each information column.

		ORIGINE ORIGIN M	DESIGNA DESIGNA
CAVO NR. CABLE NO.	TIPO TYPE		LIV LEV
R_NOME C	R_TIPO C		R_LC
↓			

Exploded Table Symbol.

The distance (step) for repetition of attributes (based on height of each cell) is defined by distance and position of dimension points.

A further dimension point gives the max. repetition limit.

The “**dimension points**” are placed on the drawing using the “**Point**” command.

2 – Data separation character

In order to enable separator management, you must (manually) insert the following section in the local job order configuration file **SPAC_Cfg.ini** or in the starting configuration file associated with the customer.

[SEPARATORE_STR_UTENZA]

Carattere_Separatore=/

Indicates the separation character (e.g. / o -)

Spazio_Prima_e_Dopo=0

"1" a space is inserted before and after the separators.

"0" no spaces inserted.

3 – Table dimension points

To define the distance for the attribute step (Tag\Label of fields) and repetition limit (end of table).

[illegible]

Exploded Table Symbol..

The figure shows 3 vertical and 3 horizontal points.

The 2 points nearest to each other give the distance (step) for attribute repetition, while the third gives the max. repetition limit.


If the dimension points are not visible, use the command "Point Style", to check their status.

“Dimension points” are drawn using the **“Point”** command.




The “Point Style” (Ddptype) command sets the graphic form and visibility of dimension points.

Drawing

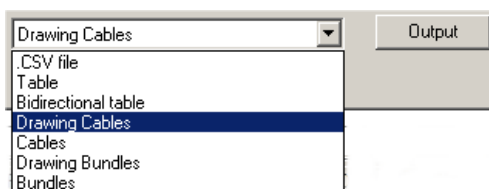

Select “Drawing” to execute the graphic layout of the cable make-up defined previously.

The Output function enables the user to select which cables are to be exported (by default all cables are selected).

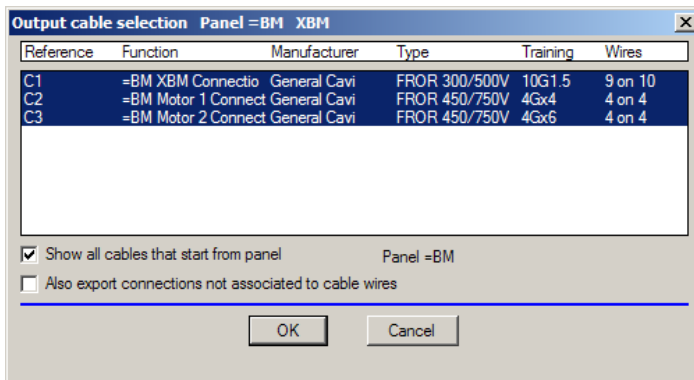

The cables shown in the list are linked to the start terminal block. By enabling the item “View all cables that start from the panel”, it is possible to view all the cables linked to the panel, (example =QG (Main Panel)) irrespective of the start terminal block or connector.

Toggleing “Export links not associated to cable wires”, all links to monopole conductors are drawn, too.

The table is updated each time cable make-up is changed (it is not updated automatically).





QUADRO \ PANEL				CAVI ESTERNI \ EXTERNAL CABLES					DESTINAZIONE \ LOCATION			
Foglio n° SHEET REF.	DESCRIZIONE DESCRIPTION GROUP	SEZIONE CROSS-SECTION	SEZIONE CROSS-SECTION	IDENTIFICAZIONE CODE IDENTIFICATION	CAVO NR. CABLE N.	LUNGHEZZA LENGTH [m]	DISTURBO NOISE LEVEL	IDENTIFICAZIONE CODE IDENTIFICATION	DESCRIZIONE DESCRIPTION GROUP	DESCRIZIONE DESCRIPTION	Foglio n° SHEET REF.	
08/6C	=0G/-XG	55	08.03	1	-W04 FR20H2R 5x15 Collegamento Amperometro	4m	/	1	7	=P1/XCn1	Conn. 1 collegamento pulsantiera	08/6D
08/6C	=0G/-XG	56	08.04	2				8	=P1/XCn1	Conn. 1 collegamento pulsantiera	08/6D	
08/7C	=0G/-XG	57	08.05	3				9	=P1/XCn1	Conn. 1 collegamento pulsantiera	08/7D	
08/7C	=0G/-XG	58	08.06	4				10	=P1/XCn1	Conn. 1 collegamento pulsantiera	08/7D	
08/6C	=0G/-XG	59	Seh	1				Seh				
09/4C	=0G/-XG	64	09.05	1	-W05 FR20H2R 12x15 Collegamento Comandi Inverter	15m	/	1	1	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/4C
09/4C	=0G/-XG	61	09.06	2				2	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/4C	
09/5C	=0G/-XG	62	09.07	3				3	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/5C	
09/6C	=0G/-XG	63	09.08	4				4	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/6C	
09/4E	=0G/-XG	65	09.09	5				5	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/4E	
09/4E	=0G/-XG	66	09.10	6	-W06 FROR 24G1 Collegamento Comandi Inverter	4m	/	6	6	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/4E
09/5E	=0G/-XG	67	09.11	7				7	=P1/XCn1/a	Conn. Modulare collegamento P1 la	09/5E	
09/7C	=0G/-XG	68	Seh	1				Seh				
10/1C	=0G/-XG	69	10.01	1				1				
10/2C	=0G/-XG	69	10.02	1				2	1	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/1C
10/3C	=0G/-XG	70	10.03	1	-W06 FROR 24G1 Collegamento P1 - XCn1	4m	/	3	3	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/2C
10/4C	=0G/-XG	71	10.04	1				4	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/3C	
10/5C	=0G/-XG	72	10.05	1				5	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/4C	
10/6C	=0G/-XG	73	10.06	1				6	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/5C	
12/7A	=0G/-XG	74	12.01	1				7	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	10/6C	
12/7B	=0G/-XG	75	12.02	1	-W06 FROR 24G1 Collegamento P1 - XCn1	4m	/	8	8	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	12/7B
12/7D	=0G/-XG	76	12.03	1				9	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	12/7B	
14/4C	=0G/-XG	77	14.01	1				10	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	12/7D	
14/4C	=0G/-XG	78	14.02	1				11	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	12/8D	
14/2C	=0G/-XG	79	14.03	1				12	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/4C	
14/2C	=0G/-XG	80	14.04	1	-W07 FROR 24G1 Collegamento P1 - XCn1	4m	/	13	13	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/2C
14/1C	=0G/-XG	81	14.05	1				14	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/2C	
14/1E	=0G/-XG	82	14.06	1				15	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/1C	
14/1E	=0G/-XG	83	14.07	1				16	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/1E	
10/1E	=0G/-XG	84	10.08	1				17	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/2C	
09/2E	=0G/-XG	85	09.09	1	-W08 FROR 24G1 Collegamento P1 - XCn1	4m	/	18	18	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	14/1E
09/2E	=0G/-XG	86	09.10	1				19	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	09/2E	
09/2F	=0G/-XG	87	09.11	1				20	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	09/2E	
09/2F	=0G/-XG	88	09.12	1				21	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	09/2F	
09/2F	=0G/-XG	89	09.13	1				22	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	09/2F	
09/2F	=0G/-XG	90	09.14	1	-W09 FROR 24G1 Collegamento P1 - XCn1	4m	/	23	2	=P1/XCn1/b-c	Conn. Modulare collegamento P1 la	09/2F
09/2F	=0G/-XG	91	09.15	1				3				
09/2F	=0G/-XG	92	09.16	1				4				
09/2F	=0G/-XG	93	09.17	1				5				
09/2F	=0G/-XG	94	09.18	1				6				
09/2F	=0G/-XG	95	09.19	1	-W10 FROR 24G1 Collegamento P1 - XCn1	4m	/	7	U	=BM/-M09.1	MOTORE INVERTER	09/2E
09/2F	=0G/-XG	96	09.20	1				8	V	=BM/-M09.1	MOTORE INVERTER	09/2E
09/2F	=0G/-XG	97	09.21	1				9	W	=BM/-M09.1	MOTORE INVERTER	09/2F
09/2F	=0G/-XG	98	09.22	1				10	PE	=BM/-M09.1	MOTORE INVERTER	09/2F
09/2F	=0G/-XG	99	09.23	1				11				

Example of cable drawing.

The table symbol is selected from 2 options available (TBL_Wire0 and 1 .dwg); those tables are contained in the folder libreria\Simboli and it is possible to make customizations (see “Customization of the Cable Drawing block”).

The pages required to complete the composition are consecutive to the first one indicated as the starting number.

    In the cable drawing the connection type is indicate dgraphically:

Symbol	Description
	Cable connected to terminal . The value is the terminal NumM .
	Cable connected to multiple terminal . The value identifies two data items: terminal NumM and Level (NumM_Liv).
	Cable connected to connector . The value identifies the connecting Pin (NumM) on the connector.
	Cable connected directly to the component (direct connection) . The value identifies the connecting Pin on the component.

Cables Module version 3.0

In the previous versions of the Cables Module (until Release 3.0), the table symbol used was Listacav.dwg on the "Simboli" folder. Customizations of this parametrical symbol that are not properly executed are identified with the message:

***** Error: Incorrect LISTACAV block.**

The TBL_Wire0.dwg table symbol (present on recent versions - after 3.0) reproduce the table symbol Listacav.dwg.

Customization of the Cable Drawing block

It is possible to customize new blocks memorizing them in the same folder of those already present. The block's name must be consecutive to the existent names (**TBL_Wire0**, **TBL_Wire 1**, etc..), for a maximum of 20 blocks (the dialog box can visualize a maximum of 20 windows at a time).

1 – Attributes on block table

The information contained in these symbols are parametric, so it is possible to set the data to be visualized according to the fields listed in the next tables:

Tag \ Label	Starting (Source) component data
%Q1%	Starting Group Panel
%N1%	Starting Group ID
%P1%	Starting Group Pole
%SH1%	Starting Component Sheet-Coordinates
%MC1%	Starting Marking
%FC1%	Starting Component Function
%BT1%	Starting Graphical Symbol
%AREA1%	Graphical line SX creation point

Tag \ Label	Destination component data
%Q2%	Destination Group Panel
%N2%	Destination Group ID
%P2%	Destination Group Pole
%SH2%	Destination Component Sheet-Coordinates
%MC2%	Destination Marking
%FC2%	Destination Component Function
%BT2%	Destination Graphical Symbol
%AREA2%	Graphical line DX creation point


Tag \ Label	Cable Data
%NC%	Multi-polar Cable ID
%CC%	Wire or Cable Manufacturer
%CM%	Wire or Cable Material Code
%C%	Wire or Cable internal code
%FC%	Composition
%T%	Wire or Cable Type
%CF%	Multi-polar Cable Function
%I%	Wire or Cable ID Anima Color / Number
%S%	Wire or Cable Section
%L%	Wire or Cable length
%EC%	Extended Color
%LC%	Multi-polar Cable Length
%NL%	Interference

Tag \ Label	General Data
%NF%	Wire or Cable ID
%AREA%	Design area
%STEP%	Lines Increment Step
%ROWS%	Maximum number of rows
%SP%	Space Character

2 – Attributes position on the table

The attributes are used to define the position of the information required, **the maximum field length or the line extension is indicated on each attribute default value.**

QUADRO \ PANEL				CAVI ESTERNI		
FOGLIO RIF. SHEET REF.	ORIGINE ORIGIN MARK	TERMINALE TERMINAL	NR. FILO WIRE NO.	SEZIONE NOMINALE (mm ²) CONDUCTOR CROSS-SECTION	IDENTIFICATIVO ANIMA CORE IDENTIFICATION	CAVO NR. CABLE N.
DESIGNAZIONI DESIGNATION GROUP						
%SH1%	%Q1%/%N1%	%P1%	%NF%	%AREA1% %S%	%I%	%NC% %CM% %CF%

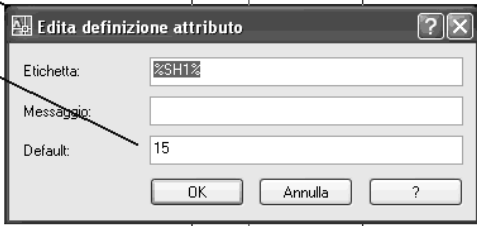

Exploded Table Symbol.


On the example, the attribute **%SH1** is shown (Sheet – Starting component Coordinates), The text align (center, right or left), the character font, the color and the text height will be the same as those used for the creation of the attribute.

The maximum length of the text is indicated on the attribute “Default” field (15mm); usually this value corresponds with the value on the column where it is located (see quote on the drawing).

The attribute **%SH1** (during the design) is repeated at the distance indicated on **%STEP%** for the maximum of repetitions indicated in **%ROWS%**. (%STEP% and %ROWS% are **invisible attributes** with Magenta color - 6).


The attributes **%AREA%** (1 and 2) define the starting point and the lines’ color. The line length is indicated on the “Default” (%AREA% are **invisible attributes** with Red color - 1).

Cables

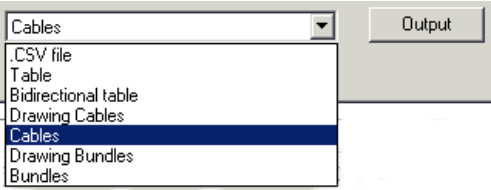

Select “Cables” to draw each cable in table form.

The Output function enables the user to select which cables are to be exported (by default they can all be selected).

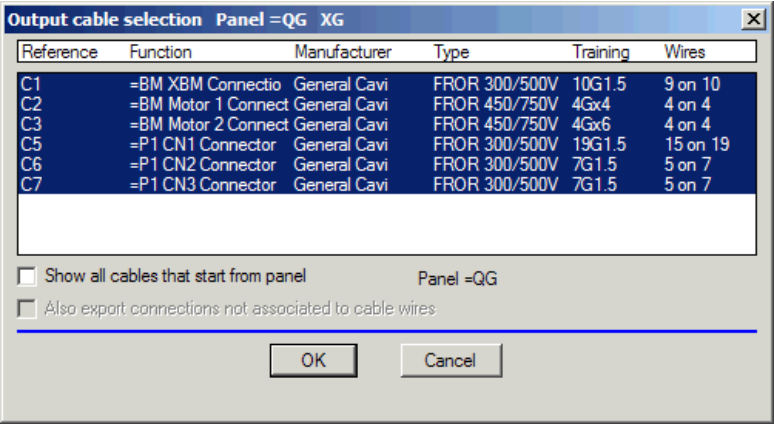

The cables shown in the list are linked to the start terminal box. By enabling the item “**View all cables that start from the panel**”, it is possible to display all the cables connected to the panel (example =QG (Main Panel)) irrespective of the start terminal block or connector.

After confirming the cables, the program proceeds to configure the parameters for drawing the table.


Press **Default** to store the configuration in “local” mode for future use (see “4.2 Settings”). If confirmed without pressing Default, the configuration is perceived as temporary and used only once.

The following cable tables show the cable returns used in the various examples (the cable is usually described with the “heading” fields and **Conductor** and **Wire** data).

Sigla Cavo : C1 Formazione : 10G15 Tipo : FROR 300/500V Funzione : Collegamento =BM -XBM		Sigla Cavo : C2 Formazione : 4Gx4 Tipo : FROR 450/750V Funzione : Collegamento =BM Motore1		Sigla Cavo : C3 Formazione : 4Gx6 Tipo : FROR 450/750V Funzione : Collegamento =BM Motore2		Sigla Cavo : C4 Formazione : 4Gx4 Tipo : FROR 450/750V Funzione : Collegamento =BM Motore3	
ID_Vena	NFilo	ID_Vena	NFilo	ID_Vena	NFilo	ID_Vena	NFilo
1	0VPLC	BU	U1	BU	U2	BU	U3
2	24VPLC	BN	V1	BN	V2	BN	V3
3	E0.2	BK	w1	BK	w2	BK	w3
4	E0.3	GNYE	PE	GNYE	PE	GNYE	PE
5	E0.4						
6	E0.5						
7	E0.7						
8							
9							
GNYE							
Cable table C1		Cable table C2		Cable table C3		Cable table C4	

The table is updated each time the cable make-up is changed (it is not updated automatically).

Draw bundles

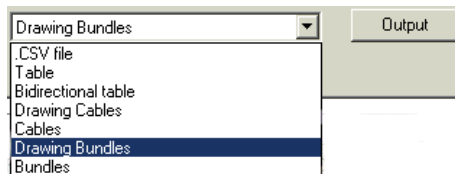

Select “Draw bundles” to lay the cable bundles previously built.

Pressing the Output button you are asked which bundles export (they are all selected by default).

Cables Bundles										
PANEL				Cable/Wire			DESTINATION			
PANEL	SHEET	NR. MORSETTO	TERMINAL NO.	Cable/Wire	Bundle	LENGTH [m]	Cable/Wire	WIRE NO.	TERMINAL NO.	PANEL
=P1 CN2	7/4D	1	-0V	C6 7015 / 1	WF1	8	C6 7015 / 1	-0V	30	7/4E
	7/5C	2	7.09	C6 7015 / 2			C6 7015 / 2	7.09	46	7/5C
	7/6C	3	7.10	C6 7015 / 3			C6 7015 / 3	7.10	47	7/6C
	7/7C	4	7.11	C6 7015 / 4			C6 7015 / 4	7.11	48	7/7C
	7/8C	5	+24V	C6 7015 / 5			C6 7015 / 5	+24V	25	7/8C
				C6 7015 / 6			C6 7015 / 6			
				C6 7015 / GNYE			C6 7015 / GNYE			

Example of cable bundle drawing.

The table symbol used is Listacav.dwg in the symbols directory. If this parametric symbol is customized incorrectly the following message is displayed:

***** Error: Incorrect LISTAFASCI block.**

The sheets needed to complete make-up follow on consecutively from the first, which is the starting sheet.

Bundles



Select “Bundles” to draw each bundle in tabular representation.

Pressing the Output button you are asked which bundles export (they are all selected by default).

Sigla Fascio : WF1			
Guaina collegamento da =QG a =BM			
	Id	Formazione	Tipo
Unip.	U3	1x4 BK	
Unip.	V3	1x4 BK	
Unip.	W3	1x4 BK	
Unip.	PE	1x4 GNYE	
Multip.	C1	10G15	
Multip.	C2	4Gx4	
Multip.	C3	4Gx6	


After having selected the bundles to draw, you have to configure the parameters for drawing the table.

Press **Default** to set the configuration as job order default for the next operations (see “4.2 Settings”). If you confirm the command without pressing Default, this configuration is not saved, and used only once.

Cable bundle table.

20.6 Hide labels

This function makes label symbols visible or invisible.

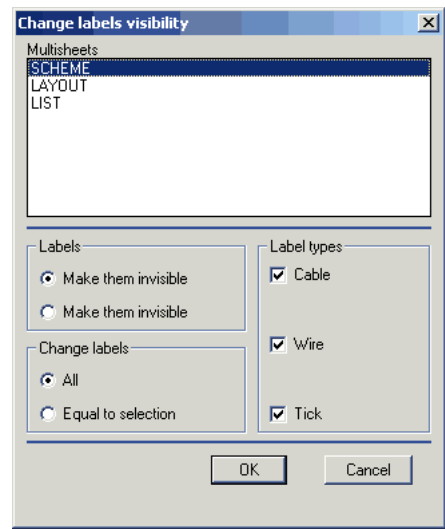

This function satisfies the need to print drawings with or without the information concerning customization of wires, cable laying or connection checks.

The visible or invisible label status can be changed on all three categories or according to the selection:

- **Cable Label block** (symbol “_Daticavo_n”).
- **Wire Label block** (symbol “_Datiunip_n”).
- Tick (used by “20.4 DDattef wire data”)

20.7 Convert ABB file

This command is used to import cable associations defined using the standard functions of “11.1 Cables”.


Data are imported by converting .ABB files contained in the job order directory (**Cables-Data.Abb**).



Cable Module is an (OPTIONAL) cable-processing program that improves and enhances the standard “11.1 Cables” command.

20.8 Unconnected Cables

The Cables Module manage the cables with an end not connected to any component

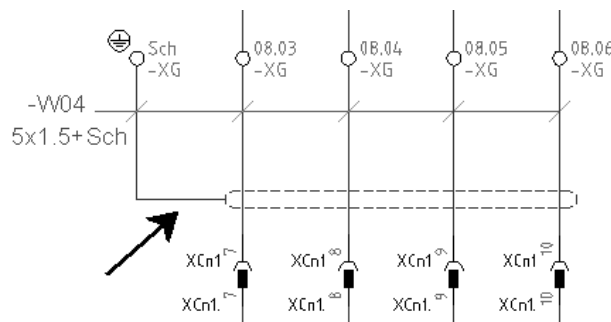

An application example is the **connection to the screen** as illustrated in the figure.

The conductor is connected to the first end with terminal Sch – XG, while the second end is not connected.

=QG	-XG	55	08.03	7	XCn1	=P1	-W04	1
=QG	-XG	56	08.04	8	XCn1	=P1	-W04	2
=QG	-XG	57	08.05	9	XCn1	=P1	-W04	3
=QG	-XG	58	08.06	10	XCn1	=P1	-W04	4
=QG	-XG	59	Sch				-W04	Sch

Cable with a not connected end

20.8 Error messages

- Errors during cable scanning
- Ddattef wire data errors
- Cable processing errors
- Wire customization errors

Errors during cable scanning

List of the error messages that may occur while scanning information, useful for the “20.5 Cable processing” function.

N	Message	Description
1	Multisheet: <DWGname> Sheet: <sheet no.> Return at (<x> <y>) and return at (<x> <y>) connected to the same branch but with different signal attribute. The branch is not processed.	Message generated while searching for the branch when the system discovers a connection that starts and ends with two returns with different signal values. In this case no name can be assigned to the connection.
2	Multisheet: <DWGname> Sheet: <sheet no.> Return at (<x> <y>) and return at (<x> <y>) connected to the same branch but with incorrect PRES attributes. The branch is not processed.	Message generated while searching for the branch when the system discovers a connection that starts and ends with two returns that are two starts or two destinations or the PRES attribute is different from P and A.
3	Multisheet: <DWGname> Sheet: <sheet no.> Return at (<x> <y>) with incorrect PRES attribute. The branch is not processed.	Message generated while searching for the branch when the system discovers a connection that starts or ends with a return that has a PRES attribute that is different to "P" and "A".
4	Multisheet: <DWGname> Sheet: <sheet no.> Equipotential network with more than 1 branch connected to the return at (<x> <y>) with attribute PRES = P. The branch is not processed.	Message generated while searching for the branch when the system discovers an equipotential network with branches drawn so that a start return is connected to multiple destination branches. Change branches and draw correctly.
5	ProgramNetwork:insertBranch Branch cannot be inserted: branch name is not consistent with network name.	Message generated when a branch is connected to an equipotential network but the branch name is not the same as that of the network.

Ddattef wire data errors

List of the error messages that may occur with the “20.4 DDattef wire data” command.

N	Message	Description
1	no.<num networks discarded> networks discarded because they contain returns.	The “Ddattef wire data” command cannot be run on equipotential networks that contain returns.

Cable processing errors

List of the error messages that may occur with the “**20.5 Cable processing**” command.



N	Message	Description
1	Cannot open <name cable database>.	"Use last save" has been selected but there is no wiring database.
2	Error in reading library path.	Library path not found.
3	Selection contains associated connections.	This message appears during “Associate” (or drag & drop) operations on the list of connections when one or more of the connections selected have already been associated..
4	Cannot associate: The conductor selected is not available.	This message appears during “Associate” operations when a conductor selected from the list has already been associated.
5	Cannot associate: Current cable complete.	This message appears during “Associate” operations when the current or selected cable is complete.
6	Cannot associate: Not enough free conductors in current cable.	When executing “Associate” on a free conductor selected from the list, the program checks how many free conductors there are in the cable, starting with the one that has been selected. If there are fewer free conductors than connections to be associated this error message is generated.
7	Cannot associate: The number of connections and conductors that have been selected do not correspond.	With “Associate” several conductors (multiple selection), the program associates the connections with the conductors that have been selected. When the number of conductors does not match the number of connectors, this error message is generated.
8	Cannot associate: Selected conductors are not all free.	As in point (7), in this case the conductors that have been selected are not all free.
9	Cannot delete label.	During “Update”, for some reason the program cannot delete a label from the connections to be disassociated.
10	Cannot change label.	During “Update”, for some reason the program cannot change a label on the connections to be updated.
11	Definition of CABLEDATA label not found. Cannot insert new labels.	During “Update” there are some labels to be inserted into the drawing and the label block is missing.
12	Cannot find a suitable position for automatic label insertion. Insert manually.	During “Update” there are some labels to be inserted into the drawing and the symbol insertion point search function cannot find a valid point.
13	Cannot find multisheet On which to insert label. Label not inserted.	As in point (12), the symbol insertion point search function found the valid point but when “Update” is run the multisheet no longer exists.
14	"Error saving wiring database."	Problems in connection with writing the Mdb file.

15	Conductor <Conductor-name> of cable <Cable-name> is associated with a connection belonging to multisheet <Dwg-name> that was not included in the last scan. To obtain the information requested a new multisheet scan is necessary.	This message appears with "View connector". While scanning to search for associated conductors search _DatiCavo_n symbols) in the job order labels may be found on drawings that were discarded by subsequent searches for connections. The cable conductor found in the label appears to be "associated" but the connection is not displayed.
16	Cannot find connection associated with conductor <Conductor-name> of cable <Cable-name>	This message appears with "View connector" when the wiring database and connection associated with the conductor does not correspond.
17	Conductor <Conductor-name> of cable <Cable-name> is associated with a connection inside panel <Panel-name>. To obtain the information requested, re-run the command selecting the <panel interior> option.	This message appears with "View connector" when information is requested about conductors associated with "panel interior" connections when processing "panel exterior".
18	Conductor <Conductor-name> of cable <Cable-name> is associated with a connection outside panel <Panel-name>. To obtain the information requested, re-run the command selecting the <panel exterior> option.	This is the opposite of point (17). It appears when information is requested about conductors associated with "panel exterior" connections when processing "panel interior".
19	Conductor <Conductor-name> starts from a different panel to the first conductor that was selected. Cannot display start and destination.	This message appears with "View connector" when more than one conductor is selected (from the list of conductors). All must be associated with connections that start from the same panel as the first conductor that was selected.
20	Conductor <Conductor-name> starts from a different terminal block (components) to the first conductor that was selected. Cannot display start and destination.	Like in point (19), all the conductors that are selected must be associated with the same start terminal block (or components).
21	Cannot open multisheet <Dwg-name> in read.	Problems encountered in opening the drawing. Check dwg file status (during data reading stage).
22	Cannot open multisheet <Dwg-name> in write.	Problems encountered in opening the drawing. Check dwg file status (during data reading stage).

Wire customization errors

List of the error messages that may occur when using the “20.3 Customize wires” command.

The “_DATIUNIP_n” labels used to customize individual wires are “bands” that group together all the wires that pass through the point in which they are inserted, attributing to those wires the characteristics contained in the label. When the user selects the point on a section of equipotential network, all the wires of the network that pass through that point are highlighted.

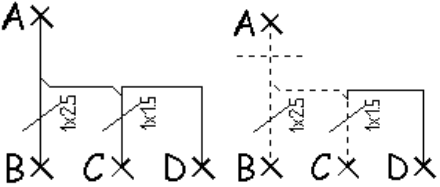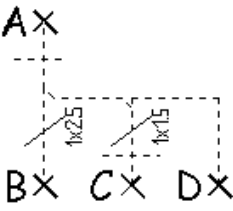N	Message	Description
1	The selection point (<x> <y> <z>) has been discarded because the changes requested for the wires that have been selected are not consistent with data contained in existing labels and cannot be changed.	This error is only generated when some of the selected wires have labels that also affect other wires not included in the current selection In this case the existing labels cannot be changed. If the data to be inserted into the new labels are not the same as those in existing labels, the error is generated <i>Example:</i>  <i>In the selection in the example the error is generated because two wires pass through point C, the first connects “A to C” and the other connects “C to D”:</i> <i>Label 1x1.5 concerns these two wires, while the selection that has been made also affects the wires that connect “A to B” and “A to C”.</i> <i>The change to data in the label is not therefore allowed and only the “A to B” connection is updated.</i> <i>The correct selection, using two “fences”, to change all wires is shown below.</i> 
2	Definition of label <name Label-block> not found.	This message is generated if there are labels to be inserted into the drawing and the label symbol block is missing.

Index

A

Absolute incremental Prefix - Sheet referencing	146
Absolute incremental Sheet - Prefix referencing	145
Absolute Prefix	91
AMW file.....	219; 251
Annotation Materials.....	250
Assign Pens	65
Assign usage	196
Associate Materials	233; 251
Attribute changes	338
Attribute features.....	100
Attributes.....	428
Automatic numbering.....	108
Automatic wire numbering.....	153

B

Bill sorted by panel abd reference.....	238
Bill sorted by type.....	239
Bill table.....	241; 248
Bit numbering.....	313
Black Box	413
Blk.....	226; 409; 413; 430
Board	312
Bocchiotti	348
Boom	57
Bundles (CM)	479

C

Cabinet	359
Cabinet exterior.....	359
Cabinet interior.....	361
Cable bundle.....	469
Cable database	109
Cable definition	285
Cable label	456
Cable labels.....	388
Cable module.....	449
Cable processing.....	463
Cable table.....	284; 285
Cables	110; 279; 286
Cables (CM)	449; 478
Cabur	348
Calculations	437
Caneco.....	437
Categories of symbols.....	415
Cembre	348
Change sheet	49

Change symbols	396
Child symbol.....	205; 393; 420
Clear sheet	61
Colour codes	112
Colours.....	102; 112; 295
Compact database	231
Compact view	245
Component	362
Component reference.....	99; 142
Component referencing	88
Configuration	77
Configuration PLC	322
Configuration wires numbers.....	95
Connection.....	133; 137
Connection returns	92; 135
Connector drawing	182
Connector symbol.....	426
Connector table	182
Connectors.....	232
Connectors Database	113
Contactors	203
Copy between sheets.....	60
Copy dictionary	303
Copy symbol.....	397
Create multisheet	43
Cross legend.....	126
Cross referencing	201
Cross-reference legend	217
Cross-referencing editing.....	203
Cross-referencing errors	211
CSV file	248; 260; 355
CTB file	65
Custom Blk Suite	409
Customer Fields	39
Customer management	38
Customise wires	459

D

Data indications	169
Data migration and customization utility.....	21
Database Cables.....	286
Database informations.....	220
Database Materials	219
Database PLC	317
Database print.....	221
Database utilities	231
DbCenter	251
Ddattef.....	162; 197
Ddattef wire data.....	462
Delete numbers.....	161
Delete Revisions.....	67

Delete sheet	51
Delete symbol.....	396
Delete translation.....	307
Dictionary	290; 303
Distinta per Quadro e Tipo	240
Distinta per Sigla.....	238
Distinta Preventiva	235
DMW file	241; 244; 364
Draw bundles (CM).....	479
Draw cables	283
Drawing cables (CM).....	475
DSS file.....	249; 364
DWF file.....	63
DXF file.....	58

E

Edit code.....	222
Edit connectors.....	190
Edit macro	231
Edit symbol.....	397
Edit terminal block.....	185
Edit translation	309
Edtt.....	309
Element symbol.....	395; 422
Exchange files	344
Export Attribute.....	342
Export Bill	244
Export database.....	220
Export Plc I-O	331
Export Settings.....	79
Extensive view	245
External bill of materials.....	244

F

Favorites	401
Fence	94; 150; 392
Fence terminals	462
Filter	228; 256; 259
Find.....	37
Find codes.....	230
Fornitura Materiali	235
Free referencing	90
Function legend	125; 335

G

Grafoplast.....	348

H

Hardlock	17; 18
Hardware protection key.....	17; 18
HASP	17
Head	203
HH Quick Wire	136
Hide labels	480

I

Ignore symbols	353
Import Attribute	342
Import Bill	244
Import CSV file.....	248

Import database.....	220
Import Settings	80
Import Single feed.....	278
Import single-feed diagram.....	439
Importing phrases	305
Incremental.....	145
In-Line cross-reference OFF.....	393
Insert Connectors.....	176
Insert phrases.....	290
Insert RFSS	403; 433
Insert stored sheets	56
Insert symbols	258
Insert Terminals	171
Inserting a code.....	222
Installation	14
Installation Layout	386
Internal bill of materials.....	236
Internal panel wiring	158
Inverter	405
I-O Bit legend	333
I-O Import/Export	331

J

Job Order	28
Job Order copy.....	40
Job Order management	30
Job Order sharing.....	41
JPG file	63

L

Labels	348
Language extensions.....	308
Last sheet	50
Last used symbols	402
Lay cables.....	450
Layout	225; 386
Layout scale	359
Legenda Bit Plc.....	126
LibCenter.....	258
Local configuration	78
Location	75; 98; 128
Location labels	400
Location Manager	98
Location Marks	75
Location setting.....	128
Location Symbol.....	75
Loop Diagram.....	121; 166

M

Machinery configurator	445
Machinery options	441
Marking.....	345
Master title blocks	76
Materials	233
Materials Database	219; 251
Matrix Patching.....	175
Mblk macrosymbols.....	432
Menu customisation	403; 433
Metel.....	220
Migrator.....	21
Modernotecnica.....	348
Modules Library	405
Modules PLC	319
Move between sheets.....	61

Multiple terminals	174
Multisheet	29; 30
Multisheet Scan	138

N

Navigator	351
New dictionary	303
New phrases	301
News	24
Next sheet	50
Node	133
Number Sheets	62
Number Summary	161
Number wires	95; 149; 275
Number with Returns	152
Number with terminals.....	152
NumI	171; 198; 199
NumI and NumO settings	199
NumM.....	171; 186; 189; 198
NumO	171; 199

O

Offset.....	205; 296; 417; 419
Options machinery	441
Original configuration.....	78
Output Table and File	355
Overtemperature.....	243; 261
Overtemperature table.....	271

P

Panel.....	381
Panel front.....	375
Panel Hierarchy	196
Panel rear	375
Panel setting.....	127
Panel symbols.....	376
Panel wiring.....	372
Parallel.....	137
Parent symbol.....	205; 390; 416
Partex	348
PDF file.....	63
Phoenix Contact	348
Phrase database	300
Phrases	301
Pin.....	86
Pin reference	208
Plate.....	361
Plc	405
PLC Configuration	322
PLC database	317
PLC drawing.....	327
Plc I/O bits	311
Plc symbols.....	315
Plug symbol	426
Positional.....	147; 156
Positional identification.....	90
Positional numbering.....	101
Power feeds.....	130
Power returns.....	92; 132
Preferences.....	94
Prefix – Sheet in Absolute incremental identification.....	89
Prefix – Sheet in Relative incremental identification.....	89
Prefix archive	86; 87; 143
Previous sheet	50

Print Bill.....	247
Print page setup.....	64
Print sheets	63
Processed blocks.....	296
Pushbutton panel.....	371

Q

Quick Wire	136

R

Raceway.....	361
RailDesigner 2	183
Real-time cross-reference	216
Recover database.....	231
Reference symbol	412
Registration reference symbol.....	418
Relative incremental Prefix - Sheet referencing.....	147
Relative incremental Sheet - Prefix referencing.....	146
Remove installation	23
Rename panel	127; 194
Rename terminal block.....	194
Renumbering.....	151
Return signal	207
Return symbol.....	92; 423
Review	66
Revision legend	124
Revision Legend	69
Revision Symbol	68

S

Salvaguarda Pin.....	83
Save Pin.....	210
Save wires	155
Scada.....	447
Schneider Electric.....	326; 378
Search	
Connettor	351
Element	351
Return.....	351
Terminal.....	351
Selection Preview.....	96
SEQ file.....	331
Serial	137
Settings	78
Settings Translator	294
Setup.....	15; 77
Sheet.....	29
Sheet – Prefix Absolute incremental identification.....	89
Sheet – Prefix in Relative incremental identification	89
Sheet 0	49
Sheet Dimensioning	81
Sheet legend	72
Sheet review	66
Sheet slides	76
Sheet title.....	48; 71
Sheet title legend	124
Shield	138
Shift sheet	52
Shift symbol	398; 399
Signal data.....	109
Single feed Data tables.....	276
Single feed draw.....	273
Single-feed	439
Single-feed diagram	439

SLD file	76; 429
Slide	429
Smartkey.....	18
Snap-to-segment block insertion	392
Spac_cfg.ini.....	40; 78
Split multisheet.....	58
Start settings.....	40
Store sheet	54
Stored sheets.....	56
Substitution of a block.....	343
Summaries PLC	331
Summary	48
Symbols insertion	94
Symbol attributes	100
Symbol Configuration	84
Symbol insertion.....	389
Symbol legend	125; 337
Symbol referencing.....	88
Symbols	77; 258; 389
Symbols Blk.....	430
Symbols Plc.....	315
Symbols Pushbutton.....	376

T

Table	355
Table cables (CM)	471
Table of job orders	36
Terminal block	122; 363
Terminal block drawing	180
Terminal block List.....	184
Terminal block symbol.....	427
Terminal block table	181
Terminal box.....	108
Terminal Box.....	173
Terminal Database.....	113
Terminal fence.....	173
Terminal settings	102
Terminal symbol	424
Terminals block.....	178
TeSys U	378
Title.....	48
Topographic manager.....	364
Translation.....	292

Translator blocks.....	289

U

Unicode 16	308
Uninstall	23
Unity Pro	326
Unravel Panel Wires.....	381
Unravel Settings	385
Unravelling	227
Unsplit.....	59
Update from a file	247
Update phrases	301
Update terminals	193
Updating Lists and Tables.....	139
Usage	181; 188; 195
Used numbers list	157

V

Visibility.....	339
Visualizzazione Compatta	239; 240
VV Quick Wire	136

W

Weidmuller	348
Wild card symbol	302
Wire	133
Wire data	109
Wire label.....	348; 461
Wires.....	149
Wires already numbered.....	155
Wires Labels.....	106

X

X Copy symbol.....	397
XG Last used symbols.....	402
XS Edit symbol.....	397
XX last symbol	397

Questa pubblicazione, o parte di essa, non può essere riprodotta in nessuna forma, con nessun mezzo e per nessuno scopo.

Questo prodotto è fornito dalla SDProget Industrial Software S.r.l. nella forma presente e senza alcuna garanzia, esplicita o implicita, relativa alla sua commerciabilità o all'idoneità per applicazioni specifiche.

SDProget si riserva il diritto di apportare modifiche o miglioramenti ai propri prodotti in qualsiasi momento. Questa pubblicazione descrive lo stato del prodotto al momento della pubblicazione stessa.