


# PAR 2 RGBW Zoom

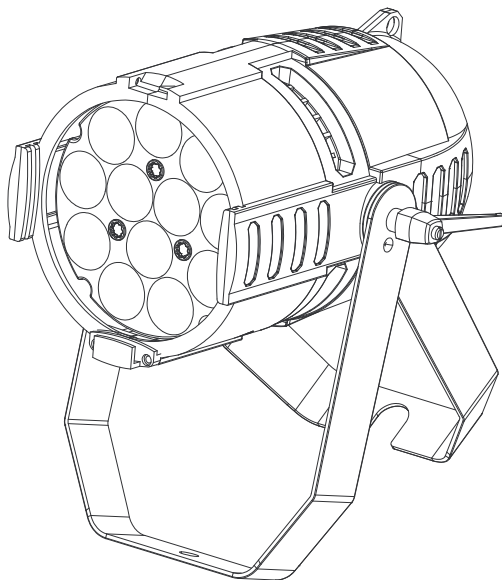

## User Manual



Professional Entertainment Technology

© 2013-2014 Martin Professional ApS. Information subject to change without notice. Martin Professional and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. The Martin logo, the RUSH by Martin logo, the RUSH by Martin name, the Martin name and all other trademarks in this document pertaining to services or products by Martin Professional or its affiliates and subsidiaries are trademarks owned or licensed by Martin Professional or its affiliates or subsidiaries.

Martin Professional • Olof Palmes Allé 18 • 8200 Aarhus N • Denmark • [www.martin.com](http://www.martin.com)

Manual: Revision D

# Table of contents

|   |    |
|---|----|
| Safety information .....                          | 4  |
| Introduction .....                                | 9  |
| Before using the product for the first time ..... | 9  |
| Physical installation .....                       | 10 |
| Fastening the fixture to a flat surface .....     | 10 |
| Mounting the fixture on a truss .....             | 10 |
| Securing with a safety cable .....                | 11 |
| AC power .....                                    | 11 |
| Linking fixtures to power in a chain .....        | 12 |
| Fixture overview .....                            | 12 |
| Control data link .....                           | 14 |
| Tips for reliable data transmission .....         | 14 |
| Connecting the DMX data link .....                | 15 |
| Fixture setup .....                               | 15 |
| Using the control menus .....                     | 15 |
| DMX function settings .....                       | 15 |
| Dimming curves .....                              | 16 |
| Blackout or Hold if DMX signal stops .....        | 17 |
| Display panel backlight sleep mode .....          | 17 |
| White balance adjustment .....                    | 18 |
| Fixture test .....                                | 18 |
| Single stand-alone scene .....                    | 19 |
| Fixture information .....                         | 19 |
| Reset .....                                       | 19 |
| Effects .....                                     | 20 |
| Maintenance .....                                 | 22 |
| Cleaning .....                                    | 22 |
| Fuse replacement .....                            | 23 |
| Service and repairs .....                         | 23 |
| DMX protocol .....                                | 24 |
| 5-channel mode .....                              | 24 |
| 9-channel mode .....                              | 24 |
| Control menus .....                               | 26 |
| Troubleshooting .....                             | 27 |
| Specifications .....                              | 28 |

## Safety information



### WARNING!

Read the safety precautions in this manual before installing, powering, operating or servicing this product.

The following symbols are used to identify important safety information on the product and in this manual:



**Warning!**

**Safety hazard. Risk of severe injury or death.**



**Warning!**

**Powerful light emission. Risk of eye injury.**



**Warning!**

**Refer to manual for important safety information.**



**Warning!**

**Hazardous voltage. Risk of lethal or severe electric shock.**



**Warning!**

**Hot surfaces and fire hazard.**



**Warning!** Risk Group 1 product according to EN 62471. Avoid staring directly into the beam and do not view the light output with optical instruments or any device that may concentrate the beam.

This lighting fixture is for professional use only – it is not for household use. The fixture must be installed by a qualified technician. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls. It produces a powerful, concentrated beam of light that can create a fire hazard or a risk of eye injury if the safety precautions below are not followed.



Install, operate and service RUSH by Martin™ products only as directed in their user manuals, or you may create a safety hazard or cause damage that is not covered by product warranties. Follow the safety precautions listed below and observe all warnings in this manual and printed on the product. Keep this manual for future use. [www.audio-luci-store.it](http://www.audio-luci-store.it)

For the latest user documentation and other information about this and all Martin™ products, please visit the Martin website at <http://www.martin.com>

If you have any questions about how to install, operate or service the fixture safely, please contact your Martin™ distributor (see [www.martin.com/distributors](http://www.martin.com/distributors) for details) or call the Martin™ 24-hour service hotline on +45 8740 0000, or in the USA on 1-888-tech-180.

Respect all locally applicable laws, codes and regulations when installing, operating or servicing the fixture.



### **Protection from electric shock**

Do not expose the fixture to rain or moisture.

Disconnect the fixture from AC power before carrying out any installation or maintenance work, such as changing the lamp, and when the fixture is not in use.

Ensure that the fixture is electrically connected to ground (earth).

Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.

Socket outlets or external power switches used to supply the fixture with power must be located near the fixture and easily accessible so that the fixture can easily be disconnected from power.

Replace defective fuses with ones of the specified type and rating only.

Isolate the fixture from power immediately if the power plug or any seal, cover, cable, or other component is damaged, defective, deformed, wet or showing signs of overheating. Do not reapply power until repairs have been completed.

Before using the fixture, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.

Use only Neutrik PowerCon cable connectors to connect to the fixture's power sockets.

Do not connect devices to power in a chain that will exceed the electrical ratings of any cable or connector used in the chain.

The supplied power input cable is rated 6 A and can safely supply only one fixture with mains power. Do not connect any device to the fixture's MAINS OUT connector when using this cable. If you replace this cable and also use the replacement cable to supply only one fixture with mains power, the replacement cable must also be rated 6 A minimum, have three conductors 18 AWG or 0.75 mm<sup>2</sup> minimum conductor size, have an outer cable diameter of 6 - 15 mm (0.2 - 0.6 in.) and be temperature-rated to suit the application. In the USA and Canada the cable must be UL listed, type SJT or equivalent. In the EU the cable must be type H05VV-F or equivalent.

To connect fixtures to mains power in a chain, you must first obtain 14 AWG or 1.5 mm<sup>2</sup> power input and throughput cables that are 16 A rated and temperature-rated to suit the application. In the USA and Canada the cables must be UL-listed, type SJT or equivalent. In the EU the cables must be type H05VV-F or equivalent. Suitable cables with Neutrik PowerCon connectors are available from Martin™ (see Mounting bracket

Accessories on page 30). If you use these cables, you can connect fixtures to power in a linked chain, MAINS OUT throughput socket to MAINS IN input socket, but do not link more than:

- eight (8) RUSH PAR 2 fixtures in total at 100-120 V, or
- eighteen (18) RUSH PAR 2 fixtures in total at 200-240 V.

The voltage and frequency at the MAINS OUT socket are the same as the voltage and frequency applied to the MAINS IN socket. Only connect devices to the MAINS OUT socket that accept this voltage and frequency.



### **Protection from burns and fire**

Do not use the fixture to illuminate surfaces within 200 mm (8 in.) of the fixture.

Do not operate the fixture if the ambient temperature ( $T_a$ ) exceeds 40° C (104° F).

The surface of the product casing can reach up to 85° C (185° F) during operation. Avoid contact by persons and materials. Allow the fixture to cool for at least 15 minutes before handling.

Keep flammable materials well away from the fixture. Keep all combustible materials (e.g. fabric, wood, paper) at least 200 mm (8 in.) away from the fixture housing.

Ensure that there is free and unobstructed airflow around the fixture. Provide a minimum clearance of 100 mm (4 in.) around fans and air vents.

Do not attempt to bypass thermostatic switches or fuses.

Do not stick filters, masks or other materials onto any optical component.



### **Protection from eye injury**

Do not stare directly in to the light output.

Do not look at LEDs with magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.

To minimize the risk of eye irritation or injury, disconnect the fixture from power at all times when the fixture is not in use, and provide well-lit conditions to reduce the pupil diameter of anyone working on or near the fixture.



### **Protection from injury**

Fasten the fixture securely to either a fixed surface or fixed structure when in use. The fixture is not portable when installed.

Ensure that any supporting structure and/or hardware used can hold at least 10 times the weight of all the devices they support.

If suspending from a rigging structure, fasten the fixture to a rigging clamp. Do not use safety cables as the primary means of support.

If the fixture is installed in a location where it may cause injury or damage if it falls, install as directed in this manual a secondary attachment such as a safety cable that will hold the fixture if a primary attachment fails. The secondary attachment must be approved by an official body such as TÜV as a safety attachment for the weight that it secures, must comply with EN

60598-2-17 Section 17.6.6 and must be capable of bearing a static suspended load that is ten times the weight of the fixture and all installed accessories.

Check that all external covers and rigging hardware are securely fastened.

Do not operate the fixture with missing or damaged covers, shields or any optical component.

Block access below the work area and work from a stable platform whenever installing, servicing or moving the fixture.

In the event of an operating problem, stop using the fixture immediately and disconnect it from power. Do not attempt to use a fixture that is obviously damaged.

Do not modify the fixture or install other than genuine RUSH by Martin™ parts.

Refer any service operation not described in this manual to a qualified technician.



# Introduction

The RUSH PAR 2 RGBW Zoom™ is a bright single-lens LED PAR Can with fully premixed color from 12 RGBW LEDs and a 10 to 60° motorized zoom. It offers electronic dimming and strobe and features a bracket for floor or truss mounting.

The PAR 2 RGBW Zoom can be controlled using any DMX-compliant controller.

The fixture is supplied with a 1.5 m (5 ft) power cable (local power plug not included) and a folding mounting bracket.

## Before using the product for the first time

1. Read 'Safety information' on page 4 before installing, powering, operating or servicing the fixture.
2. Unpack and ensure that there is no transportation damage before using the fixture. Never attempt to operate a damaged fixture.
3. If the fixture is not going to be hard-wired to an AC mains power source, install a local power plug (not supplied) on the end of the supplied power cable.
4. Before operating, ensure that the voltage and frequency of the local power source match the mains power requirements of the fixture.
5. Check the RUSH support pages on the Martin Professional website at [www.martin.com](http://www.martin.com) for the most recent user documentation and technical information about the fixture. RUSH by Martin™ user manual revisions are identified by the revision letter at the bottom of the inside cover.

When the fixture is powered on for the first time, it may smoke slightly as it warms up, but this will only last a few minutes and is no cause for concern.

# Physical installation



**Read ‘Safety information’ on page 4 before installing the fixture.**

The fixture is designed for indoor use only and must be used in a dry location with adequate ventilation. Ensure that none of the fixture’s ventilation slots are blocked.

Fasten the fixture to a secure structure or surface. Do not stand it on a surface or leave it where it can be moved or fall over. If you install the fixture in a location where it may cause injury or damage if it falls, secure it as directed in this user manual using a securely anchored safety cable that will hold the fixture if the primary fastening method fails.

Martin™ can supply safety cables and rigging clamps that are suitable for use with the fixture (see ‘Accessories’ on page 30).

## Fastening the fixture to a flat surface

The fixture can be fastened to a hard, fixed, flat surface that is oriented at any angle. Ensure that the surface can support at least 10 times the weight of all fixtures and equipment to be installed on it.

Fasten the fixture securely. If you install the fixture in a location where it may cause injury or damage if it falls, install a safety cable as directed in ‘Securing with a safety cable’ on page 11.

## Mounting the fixture on a truss

The fixture can be clamped to a truss or similar rigging structure in any orientation. When installing the fixture hanging vertically down, you can use an open-type clamp such as a G-clamp. When installing in any other orientation, you must use a half-coupler clamp (see illustration on right) that completely encircles the truss chord.



To clamp the fixture to a truss:


1. Check that the rigging structure can support at least 10 times the weight of all fixtures and equipment to be installed on it.
2. Block access under the work area.
3. Fold the legs of the mounting bracket together and bolt a rigging clamp securely to the mounting bracket. The bolt used must be M12, grade 8.8 steel minimum. It must pass through both mounting bracket legs and be fastened with a self-locking nut.
4. Working from a stable platform, hang the fixture with its clamp on the truss and fasten the clamp securely.

5. Secure the fixture with a safety cable as directed below.

### Securing with a safety cable

Secure the fixture with a safety cable (or other secondary attachment) that is approved for the weight of the fixture so that the safety cable will hold the fixture if a primary attachment fails.

Loop the cable through one of the safety cable attachment points on the fixture (see arrows in illustration on right) and around a secure anchoring point.

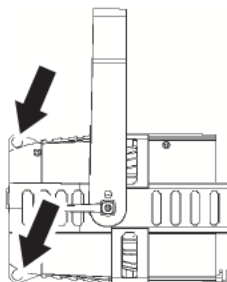

### AC power



**Read 'Safety information' on page 4 before connecting the fixture to AC mains power.**



**Warning! The mains power input cable supplied with the fixture is rated 6 A and can supply only one fixture with mains power. Do not connect any device to the fixture's MAINS OUT power throughput socket when using this input cable. If you want to connect other fixtures to the MAINS OUT socket, see 'Linking fixtures to power in a chain' on page 12.**

For protection from electric shock, the fixture must be grounded (earthed). The power distribution circuit must be equipped with a fuse or circuit breaker and ground-fault (earth-fault) protection.

Socket outlets or external power switches used to supply the fixture with power must be located near the fixture and easily accessible so that the fixture can easily be disconnected from power.

Do not insert or remove live Neutrik PowerCon connectors to apply or cut power, as this may cause arcing at the terminals that will damage the connectors.

Do not use an external dimming system to supply power to the fixture, as this may cause damage to the fixture that is not covered by the product warranty.

The fixture can be hard-wired to a building electrical installation if you want to install it permanently, or a power plug (not supplied) that is suitable for the local power outlets can be installed on the supplied power cable.

If you install a power plug on the power cable, follow the plug manufacturer's instructions and connect the wires in the power cable as shown in this table:

|                  | Earth, Ground or ⊕ | Neutral or N | Live or L |
|------------------|--------------------|--------------|-----------|
| <b>US system</b> | Green              | White        | Black     |
| <b>EU system</b> | Yellow/green       | Blue         | Brown     |

The fixture has an auto-ranging power supply that accepts AC mains power at 100-240 V at 50/60 Hz. Do not apply AC mains power at any other voltage or frequency to the fixture.


### Linking fixtures to power in a chain

If you obtain a 14 AWG / 1.5 mm<sup>2</sup> power input cable and 14 AWG / 1.5 mm<sup>2</sup> throughput cables from Martin™ (see 'Accessories' on page 30), you can relay mains power from one fixture to another by connecting fixtures to power in a linked daisy-chain, MAINS OUT throughput socket to MAINS IN input socket.

Using 14 AWG or 1.5 mm<sup>2</sup> cables from Martin™, you can link:

- Maximum eight (8) RUSH PAR 2 RGBW Zoom fixtures in total at 100-120 V, or
- Maximum eighteen (18) RUSH PAR 2 RGBW Zoom fixtures in total at 200-240 V.

### Fixture overview

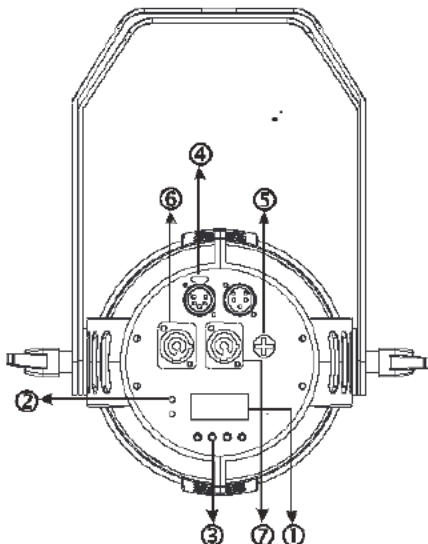

## 1 - Display

## 2 - LEDs

The two LEDs on the rear of the fixture have the following functions:

|       |    |                          |
|-------|----|--------------------------|
| POWER | On | Power on                 |
| DMX   | On | Valid DMX signal present |

## 3 - Buttons

|       |   |
|-------|---|
| MENU  | <ul style="list-style-type: none"><li>• Activate the menu, or</li><li>• Return to the previous level of the menu structure, or</li><li>• Press and hold to exit the menus</li></ul> |
| DOWN  | Go down a menu level  |
| UP    | Go up a menu level  |
| ENTER | Confirm the selected function   |

## 4 – 5-pin XLR DMX input/output sockets

## 5 – Primary (mains power) fuse F1

The T 6.3A fixture fuse is located in a fuse holder next to the power input/output connectors.

## 6 – AC mains power IN


A blue Neutrik PowerCon socket is provided to connect the fixture to AC mains power.

## 7 – AC mains power OUT (THRU)

See 'Safety information' on page 4. The light-grey Neutrik PowerCon socket can be used to supply power to other fixtures only if the supplied power input cable is replaced as directed in this manual and safety limits are respected.

## Control data link

A DMX 512 data link is required in order to control the fixture via DMX. The fixture has 5-pin XLR connectors for DMX data input and output.

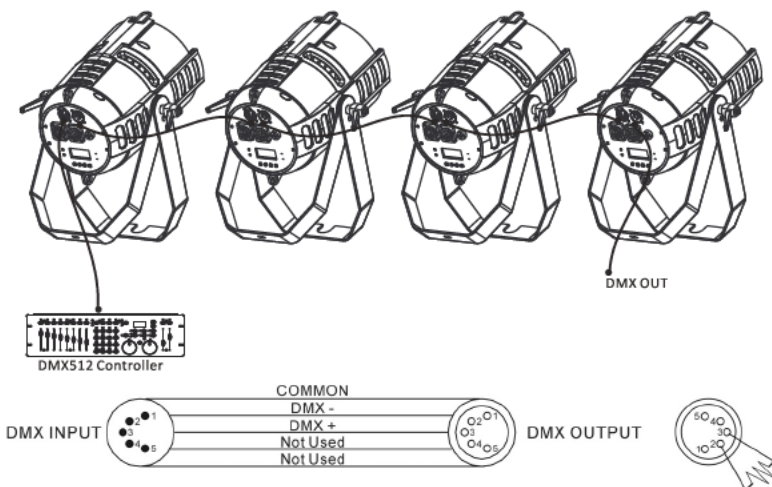

The number of daisy-chained fixtures is limited by the number of DMX channels required by the fixtures in relation to the maximum 512 channels available in one DMX universe. Note that if independent control of a fixture is required, it must have its own DMX channels. Fixtures that are required to behave identically can share the same DMX address and channels. To add more fixtures or groups of fixtures when the above limit is reached, add a DMX universe and another daisy-chained link.

### Tips for reliable data transmission

Use shielded twisted-pair cable designed for RS-485 devices: standard microphone cable cannot transmit control data reliably over long runs. 24 AWG cable is suitable for runs up to 300 meters (1000 ft.). Heavier gauge cable and/or an amplifier is recommended for longer runs. The pinout on all connectors is pin 1 = shield, pin 2 = cold (-), and pin 3 = hot (+). Pins 4 and 5 in the 5-pin XLR connectors are not used in the fixture but are available for possible additional data signals as required by the DMX512-A standard. Standard pinout is pin 4 = data 2 cold (-) and pin 5 = data 2 hot (+).

To split the link into branches, use a splitter such as the Martin 4-Channel Opto-Isolated RS-485 Splitter/Amplifier.

Terminate the link by installing a DMX termination plug in the output socket of the last fixture. The termination plug, which is a male XLR plug with a 120 Ohm, 0.25 W resistor soldered between pins 2 and 3, "soaks up" the control

signal so it does not reflect and cause interference. If a splitter is used, terminate each branch of the link.

## **Connecting the DMX data link**

To connect the fixture to data:

1. Connect the DMX data output from the controller to the first fixture's male XLR DMX input connector.
2. Connect the first fixture's DMX output to the DMX input of the next fixture and continue connecting fixtures output to input. Terminate the last fixture on the link with a DMX termination plug.

## **Fixture setup**

This section explains the fixture characteristics that can be set to determine how it can be controlled and will behave. These settings are made using the menus available in the control panel. Settings are retained in memory when the fixture is powered off.

A complete map of the control menu structure and brief explanations of their purposes can be found in 'Control menus' on page 26.

## **Using the control menus**

To access the control menus or to return to the next highest level in the menu structure, press the MENU button. Navigate the menu structure using the DOWN, UP and ENTER buttons. If you have selected a menu option, confirm your selection and set that option using the ENTER button, or if you want to return to the next highest level in the menu structure without making a change, press the MENU button.

To exit the menus, press and hold the MENU button.

## **DMX function settings**

DMX function settings include the DMX address and DMX control mode.

### ***DMX addressing***

The DMX address, also known as the start channel, is the first channel used to receive instructions from a DMX controller. The fixture can be controlled using signals sent by a DMX controller over a different number of channels depending on which DMX mode it is set to.

For example:

- In 5-channel mode, if the first fixture has a DMX address of 1, then DMX address 6 is available for the next fixture, address 11 for the next fixture and so on.

- In 9-channel mode, if the first fixture has a DMX address of 1, then DMX address 10 is available for the next fixture, address 19 for the next fixture and so on.

For independent control, each fixture must be assigned its own control channels. Two fixtures of the same type may share the same address, if identical behavior is desired. Address sharing can be useful for diagnostic purposes and grouped control.

To set the fixture's DMX address:

1. In the fixture's control panel, use the UP and DOWN buttons to select DMX ADDRESS and press ENTER. The fixture's currently set DMX address will blink in the display.
2. Use the UP and DOWN buttons to select a new address.
3. Once the new address has been selected, press ENTER to confirm it (or to return to the higher level of the menu structure without making a change, press MENU).

### ***DMX channel modes***

The fixture provides two control modes enabling varying degrees of DMX control and enabling the efficient use of DMX channel bandwidth. For the effects available and control details, see 'DMX protocol' on page 24. The different modes are:

**5-channel mode** – Individual control of red, green, blue and white channels for color mixing plus zoom.

**9-channel mode** – Full-range dimming with 16-bit fine control, shutter/strobe effects, individual control of red, green, blue and white channels for color mixing, 'color wheel' effect and zoom.

To set a fixture's DMX channel mode:

1. Select CHANNEL MODE and press ENTER.
2. Use the DOWN and UP buttons to select the desired DMX mode and press ENTER to set (or, to return to the higher level of the menu structure without making a change, press MENU).

### **Dimming curves**

Four dimming curves are available:


DIMMER 1: LINEAR – The increase in light intensity appears to be linear as DMX value is increased.

DIMMER 2: SQUARE LAW – light intensity control is finer at low levels and coarser at high levels.

DIMMER 3: INVERSE SQUARE LAW – light intensity control is coarser at low levels and finer at high levels.




DIMMER 4: S-CURVE – light intensity control is finer at low levels and high levels and coarser at medium levels.

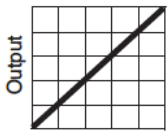


Optically linear

DIMMER 1

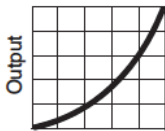


Square law

DIMMER 2

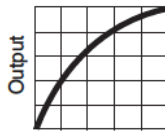

Inverse square law

DIMMER 3

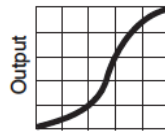

S-curve

DIMMER 4

To set the fixture's dimming curve:

1. Select DIMMER and press ENTER. The currently set mode will blink in the display.
2. Use the DOWN and UP buttons to select DIMMER1, DIMMER 2, DIMMER 3, or DIMMER 4.
3. Once the mode has been selected, press ENTER to set (or, to return to the higher level of the menu structure without making a change press MENU).

### Blackout or Hold if DMX signal stops

You can decide how the fixture should behave if you are controlling the fixture via DMX and you stop sending the DMX signal.

1. Select BLACKOUT and press ENTER. The currently set blackout mode will blink in the display.
2. Using the DOWN and UP buttons, select YES or HOLD to decide how the fixture should respond if it stops receiving a DMX signal:
  - If you select YES, the fixture will black out
  - If you select HOLD, the fixture will continue to show the effect that it is displaying at the time.
3. Press ENTER to confirm your choice (or, to return to the higher level of the menu structure without making a change press MENU).

### Display panel backlight sleep mode

To set the display panel backlight to remain on all the time or to automatically switch off when the control panel is not in use:

1. Select BACKLIGHT and press ENTER.
2. Use the DOWN and UP buttons to select ON (display backlight constantly on) or OFF (display backlight turns off when not in use). Press ENTER to confirm (or, to return to the higher level of the menu structure without making a change, press MENU).

## White balance adjustment

You can adjust the white balance of the fixture (to match other fixtures, for example) by adjusting the amount of red, green or blue in the white output. To adjust the white balance mix:

1. Select WHITE BALANCE and press ENTER.
2. Use the DOWN and UP buttons to select RED or GREEN or BLUE.
3. Press ENTER to confirm.
4. Use the DOWN and UP buttons to change the value (125-255).
5. Once the correct value has been selected, press ENTER to confirm (or, to return to the higher level of the menu structure without making a change, press MENU).

## Fixture test

Automatic tests of all effects or manual test of individual effects can be run from the control menus.

### ***Automatic effects test***

To perform a complete test of all of the fixture's effects:

1. Select FIXTURE TEST and press ENTER to confirm. The automatic test will run.
2. To stop the test and return to a higher level of the menu structure, press MENU.

### ***Manual effects test***

The Manual effects test menu can be used to test the fixture's effects individually and to set a single standalone scene that the fixture will show each time it is powered on:

1. Select MANUAL TEST and press ENTER.
2. Use the DOWN and UP buttons to select an effect: dimmer, red, green, blue, white, color wheel, shutter or zoom. Press ENTER to confirm your selection.
3. Use the DOWN and UP buttons to change the value (000-255). The test will be the equivalent of sending this DMX value to the selected effect.
4. Press ENTER to confirm your selection and activate the effect (or, to return to the higher level of the menu structure without making a change, press MENU).
5. If you have confirmed a selection with the ENTER button, press MENU to return to the list of effects.
6. If you want, you can now select another effect and set a value for it as described above. This effect will be added to the effects that you have already set.

By combining effects in this way, you can set a mix of RGBW colors plus a strobe, for example.

Note that if you set a color wheel effect, you override any RGBW values that have been set. If you set an RGBW color, you override any color wheel value that has been set.

## **Single stand-alone scene**

If you power the fixture off while it is running the effect – or the combination of effects – that you have set in the MANUAL TEST menu (see above), it will hold that setting in memory. The next time you power the fixture on, it will display those effects. This feature lets you set a stand-alone scene that runs automatically each time the fixture is powered on.

Note that when the fixture is running a single stand-alone scene, it will not respond to DMX control signals.

## **Fixture information**

### ***Fixture temperature readout***

To check the onboard temperature of the fixture:

1. Select TEMP and press ENTER. The display will show the temperature of the unit.
2. To return to a higher level of the menu structure, press MENU.

### ***Fixture operating time***

The fixture operating time counter monitors the total number of hours the fixture has been in operation since manufacture. To display the counter:

1. Select FIXTURE TIME and press ENTER. The display will show the time the unit has been running.
2. To return to a higher level of the menu structure, press MENU.

### ***Firmware version***

To see which software version is installed in the fixture:

1. Select FIXTURE VERSION and press ENTER. The firmware version will be shown.
2. To return to a higher level of the menu structure, press MENU.

## **Reset**

To reset the fixture to its factory default settings:

1. Select RESET and press ENTER to confirm.
2. The fixture will now reset to its default settings.

# Effects

See 'DMX protocol' on page 24 for a full list of the DMX channels and values required to control the different effects.

## ***Color control***

All DMX modes offer full RGBW color mixing.

Besides color mixing, the following 36 color presets can be selected directly in 9-channel mode:

|                 | <b>Red</b> | <b>Green</b> | <b>Blue</b> | <b>White</b> |
|-----------------|------------|--------------|-------------|--------------|
| <b>Color 1</b>  | 255        | 0            | 0           | 0            |
| <b>Color 2</b>  | 255        | 25           | 0           | 0            |
| <b>Color 3</b>  | 255        | 50           | 0           | 30           |
| <b>Color 4</b>  | 255        | 100          | 0           | 0            |
| <b>Color 5</b>  | 255        | 150          | 0           | 0            |
| <b>Color 6</b>  | 255        | 200          | 0           | 50           |
| <b>Color 7</b>  | 255        | 255          | 0           | 0            |
| <b>Color 8</b>  | 200        | 255          | 0           | 0            |
| <b>Color 9</b>  | 150        | 255          | 0           | 10           |
| <b>Color 10</b> | 100        | 255          | 0           | 0            |
| <b>Color 11</b> | 50         | 255          | 0           | 50           |
| <b>Color 12</b> | 0          | 255          | 0           | 0            |
| <b>Color 13</b> | 0          | 255          | 25          | 0            |
| <b>Color 14</b> | 0          | 255          | 50          | 10           |
| <b>Color 15</b> | 0          | 255          | 100         | 0            |
| <b>Color 16</b> | 0          | 255          | 150         | 0            |
| <b>Color 17</b> | 0          | 255          | 200         | 10           |
| <b>Color 18</b> | 0          | 255          | 255         | 0            |
| <b>Color 19</b> | 0          | 200          | 255         | 0            |
| <b>Color 20</b> | 0          | 150          | 255         | 10           |
| <b>Color 21</b> | 0          | 100          | 255         | 0            |
| <b>Color 22</b> | 0          | 50           | 255         | 50           |
| <b>Color 23</b> | 0          | 0            | 255         | 0            |
| <b>Color 24</b> | 25         | 0            | 255         | 0            |
| <b>Color 25</b> | 50         | 0            | 255         | 0            |

|                 | <b>Red</b> | <b>Green</b> | <b>Blue</b> | <b>White</b> |
|-----------------|------------|--------------|-------------|--------------|
| <b>Color 26</b> | 100        | 0            | 255         | 0            |
| <b>Color 27</b> | 150        | 0            | 255         | 50           |
| <b>Color 28</b> | 200        | 0            | 255         | 0            |
| <b>Color 29</b> | 255        | 0            | 255         | 0            |
| <b>Color 30</b> | 255        | 0            | 200         | 0            |
| <b>Color 31</b> | 255        | 0            | 150         | 0            |
| <b>Color 32</b> | 255        | 0            | 100         | 0            |
| <b>Color 33</b> | 255        | 0            | 50          | 50           |
| <b>Color 34</b> | 255        | 0            | 25          | 0            |
| <b>Color 35</b> | 0          | 0            | 0           | 255          |
| <b>Color 36</b> | 255        | 255          | 255         | 255          |

### ***Zoom***

Zoom can be controlled via DMX in 9-channel mode, allowing the beam angle to be varied from 10° to 60°.

### ***Shutter effect***

The electronic 'shutter' effect is available in 9-channel mode. It provides instant open and blackout, variable speed regular and random strobe.

### ***Electronic dimming***

Overall intensity can be adjusted 0-100% using electronic dimming in 9-channel mode. Two channels can be used to control intensity: the first gives coarse 0-100% control, the second gives 16-bit fine adjustment.

# Maintenance



**Read ‘Safety information’ on page 4 before servicing the fixture.**

Refer any service operation not described in this user manual to a qualified service technician.

Disconnect mains power before cleaning or servicing the fixture.

Service the fixture in an area where there is no risk of injury from falling parts, tools or other materials.

## Cleaning

Excessive dust, smoke fluid, and particle buildup degrades performance, causes overheating and will damage the fixture. Damage caused by inadequate cleaning or maintenance is not covered by the product warranty.

The cleaning of external optical lenses must be carried out periodically to optimize light output. Cleaning schedules for lighting fixtures vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the fixture. Environmental factors that may result in a need for frequent cleaning include:

- Use of smoke or fog machines.
- High airflow rates (near air conditioning vents, for example).
- Presence of cigarette smoke.
- Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example).

If one or more of these factors is present, inspect fixtures within their first 100 hours of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation. If in doubt, consult your RUSH by Martin dealer about a suitable maintenance schedule.

Use gentle pressure only when cleaning, and work in a clean, well-lit area. Do not use any product that contains solvents or abrasives, as these can cause surface damage.

To clean the fixture:

1. Disconnect the fixture from power and allow it to cool for at least 15 minutes.
2. Vacuum or gently blow away dust and loose particles from the outside of the fixture and the air vents with low-pressure compressed air.

3. Clean the LED lenses by wiping gently with a soft, clean lint-free cloth moistened with a weak detergent solution. Do not rub the surface hard: lift particles off with a soft repeated press. Dry with a soft, clean, lint-free cloth or low-pressure compressed air. Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water.
4. Check that the fixture is dry before reapplying power.

### **Fuse replacement**

If the fixture is completely dead, the fixture's primary fuse F1 may have blown and it may be necessary to install a new fuse. This fuse is located in a fuseholder next to the Mains OUT socket on the connections panel (see **5** in 'Fixture overview' on page 12).

To change the fuse:

1. Disconnect the fixture from power and allow it to cool for at least 15 minutes.
2. Use a large flat-bladed screwdriver to unscrew the cap of the fuseholder.
3. Replace the fuse with one of the same type and rating only.
4. Reinstall the fuseholder cap before reapplying power.

### **Service and repairs**

There are no user serviceable parts inside the fixture. Do not open the housing.

Refer any service or repair operation not described in this manual to an authorized RUSH by Martin™ service technician. Do not try to carry out such an operation yourself, as doing so may present a health or safety risk. It may also cause damage or malfunction, and it may void your product warranty.

Installation, on-site service and maintenance can be provided worldwide by the Martin Professional Global Service organization and its approved agents, giving owners access to Martin's expertise and product knowledge in a partnership that will ensure the highest level of performance throughout the product's lifetime. Please contact your RUSH by Martin supplier for details.

# DMX protocol

## 5-channel mode

| Channel | Value | Function           | Fade type | De-fault |
|---------|-------|--------------------|-----------|----------|
| 1       | 0-255 | Red 0 → 100%       | Fade      | 0        |
| 2       | 0-255 | Green 0 → 100%     | Fade      | 0        |
| 3       | 0-255 | Blue 0 → 100%      | Fade      | 0        |
| 4       | 0-255 | White 0 → 100%     | Fade      | 0        |
| 5       | 0-255 | Zoom wide → narrow | Fade      | 128      |

## 9-channel mode

| Channel | Value  | Function  | Fade type | De-fault |
|---------|--|---|-----------|----------|
| 1       | 0-255  | Dimming coarse 0→100%   | Fade      | 0        |
| 2       | 0-255  | Dimming fine  | Fade      | 0        |
| 3       | 0-7<br>8-15<br>16-131<br>132-167<br>168-203<br>204-239<br>240-247<br>248-255 | <b>Shutter</b><br>Off<br>Open<br>Shutter strobe effect, slow → fast<br>Fast close, slow open<br>Slow close, fast open<br>Pulse open and close<br>Shutter strobe effect, random strobe<br>Open | Snap      | 12       |
| 4       | 0-255  | Red 0 → 100%  | Fade      | 0        |
| 5       | 0-255  | Green 0 → 100%  | Fade      | 0        |
| 6       | 0-255  | Blue 0 → 100%   | Fade      | 0        |
| 7       | 0-255  | White 0 → 100%  | Fade      | 0        |
| 8       | 0-10<br>11-15<br>16-20<br>21-25<br>26-30<br>31-35<br>36-40<br>41-45<br>46-50 | <b>Color wheel effect (color presets)</b><br>Open (white)<br>Color 1<br>Color 2<br>Color 3<br>Color 4<br>Color 5<br>Color 6<br>Color 7<br>Color 8   | Snap      | 0        |



| Channel | Value   | Function                               | Fade type | De-fault |
|---------|---------|--|-----------|----------|
|         | 51-55   | Color 9                                |           |          |
|         | 56-60   | Color 10                               |           |          |
|         | 61-65   | Color 11                               |           |          |
|         | 66-70   | Color 12                               |           |          |
|         | 71-75   | Color 13                               |           |          |
|         | 76-80   | Color 14                               |           |          |
|         | 81-85   | Color 15                               |           |          |
|         | 86-90   | Color 16                               |           |          |
|         | 91-95   | Color 17                               |           |          |
|         | 96-100  | Color 18                               |           |          |
|         | 101-105 | Color 19                               |           |          |
|         | 106-110 | Color 20                               |           |          |
|         | 111-115 | Color 21                               |           |          |
|         | 116-120 | Color 22                               |           |          |
|         | 121-125 | Color 23                               |           |          |
|         | 126-130 | Color 24                               |           |          |
|         | 131-135 | Color 25                               |           |          |
|         | 136-140 | Color 26                               |           |          |
|         | 141-145 | Color 27                               |           |          |
|         | 146-150 | Color 28                               |           |          |
|         | 151-155 | Color 29                               |           |          |
|         | 156-160 | Color 30                               |           |          |
|         | 161-165 | Color 31                               |           |          |
|         | 166-170 | Color 32                               |           |          |
|         | 171-175 | Color 33                               |           |          |
|         | 176-180 | Color 34                               |           |          |
|         | 181-185 | Color 35                               |           |          |
|         | 186-190 | Color 36                               |           |          |
|         | 191-192 | Open (white)                           |           |          |
|         |         | <b>Color wheel rotation effect</b>     |           |          |
|         | 193-214 | Clockwise rotation fast → slow         |           |          |
|         | 215-221 | Stop (wheel stops at current position) |           |          |
|         | 222-243 | CCW rotation slow → fast               |           |          |
|         |         | <b>Random colors</b>                   |           |          |
|         | 244-247 | Random color, fast                     |           |          |
|         | 248-251 | Random color, medium                   |           |          |
|         | 252-255 | Random color, slow                     |           |          |
| 9       | 0-255   | Zoom wide → narrow                     | Fade      | 128      |

## Control menus

To access the control menus, press the MENU button. Use the UP and DOWN buttons to navigate the menus. Select any required menu option using the ENTER button. For more information, see 'Using the control menus' on page 15.

Default fixture settings are shown in **bold**.

| Menu             | Setting/value    | Explanation   |
|------------------|------------------|---|
| DMX Address      | <b>1–512</b>     | Set fixture's DMX address   |
| Channel Mode     | <b>5 channel</b> | Select DMX mode   |
|                  | <b>9 channel</b> |   |
| Dimmer Curve     | <b>1</b>         | Optically linear  |
|                  | <b>2</b>         | Square law  |
|                  | <b>3</b>         | Inverse square law  |
|                  | <b>4</b>         | S-curve   |
| Blackout         | <b>Yes</b>       | Set fixture behavior if DMX signal stops: blackout or hold current effect |
|                  | <b>Hold</b>      |   |
| Backlight        | <b>On</b>        | Automatically turn off display backlight when not in use                  |
|                  | <b>Off</b>       |   |
| White balance    | <b>Red</b>       | RGB fixture white balance adjustment                                      |
|                  | <b>Green</b>     |   |
|                  | <b>Blue</b>      |   |
| Manual Test      | <b>Red</b>       | Manually test individual effects<br>Set stand-alone scene                 |
|                  | <b>Green</b>     |   |
|                  | <b>Blue</b>      |   |
|                  | <b>White</b>     |   |
|                  | <b>Zoom</b>      |   |
|                  | <b>Dimmer</b>    |   |
| <b>Strobe</b>    |                  |   |
| Auto Test        |                  | Automatic test of all effects   |
| Temp.            |                  | Display fixture's current temperature                                     |
| Fixture time     |                  | Display total operation time  |
| Firmware Version |                  | Display currently installed firmware version                              |
| Reset            |                  | Force a fixture reset   |

## Troubleshooting


This section describes a few common problems that may occur during operation and provides some suggestions for easy troubleshooting:

| Symptom  | Potential cause  | Remedies  |
|--|--|---|
| No light from fixture or fans not working.                                   | Power supply issue, such as blown fuse, faulty connector or damaged cable.   | Check whether fixture's power indicator LED is lit.<br>Check all power connections and cables.<br>Replace fixture's primary fuse.   |
| One of the control channels is unresponsive or only responds intermittently. | DMX setup or DMX link fault.<br>Damaged step motor or cable connection.  | See next section.<br>Contact your RUSH by Martin™ authorized distributor or service center for assistance.  |
| Fixture does not respond to DMX control.                                     | Incorrect DMX addressing.<br><br>Fault on DMX link due to damaged connector or cable, or potential interference from proximity to a high-voltage installation. | Ensure that fixture's DMX address matches address set on DMX control device.<br>Check that fixture DMX LED is on, and if not, check all DMX cables and connections.<br>Ensure that DMX link is terminated.<br>Check that all components on DMX link use standard DMX polarity.<br>Attempt to control the fixture with another DMX control device.<br>Move or shield link if it is close to an unshielded high-voltage installation. |

# Specifications

## Physical

Dimensions (LxWxH)..... 266x287x329 mm (10.5x11.3x13.0 in.)  
 Weight..... 5.5 kg (12.1 lbs.)

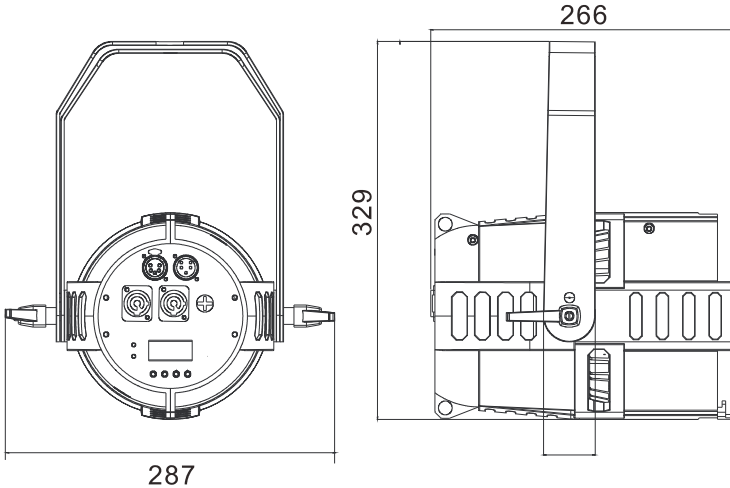

## Dynamic Effects

Color mixing..... RGBW  
 Color presets ..... 36 color presets plus full white, 'color wheel' effects  
 Electronic dimming ..... 0 - 100%, four dimming curve options  
 Strobe and pulse effects ..... Variable speed and action, random strobe  
 Electronic 'shutter' effect..... Instant open and blackout  
 Zoom..... Motorized

## Control and Programming

Control options ..... DMX, stand-alone scene  
 DMX channels ..... 5/9  
 White balance control ..... RGB adjustment  
 DMX address setting ..... Control panel with LCD display  
 Stand-alone programming ..... Control panel with LCD display  
 Protocol..... USITT DMX512/1990

## Optics

Light source ..... 12 x 10 W RGBW Osram Ostar LEDs  
 Minimum LED lifetime..... 50 000 hours (to >70% luminous output)\*  
 Beam angle ..... 10° - 60°

*\*Figure obtained under manufacturer's test conditions*

## Construction

Color ..... Black  
 Housing..... Aluminum

Protection rating ..... IP 20

### Installation

Mounting points ..... Adjustable bracket, surface or truss mount  
Location ..... Indoor use only  
Orientation ..... Any  
Minimum distance to illuminated surfaces ..... 2 m (6.4 ft.)  
Minimum distance to combustible material ..... 0.2 m (8 in.)

### Connections

AC power input ..... Neutrik PowerCon  
AC power throughput ..... Neutrik PowerCon  
DMX data in/out ..... 5-pin locking XLR

### Electrical

AC power ..... 100-240 V nominal, 50/60 Hz  
Typical power consumption ..... 151 W  
Fuse ..... T 6.3 A  
Power supply unit ..... Auto-ranging electronic switch mode

### Maximum power and current

120 V, 60 Hz ..... 1.3 A, 151 W, PF 0.993  
230 V, 50 Hz ..... 0.7 A, 148 W, PF 0.961  
*Measurements made at nominal voltage with all LEDs at full intensity.  
Allow for a deviation of +/- 10%.*

### Thermal

Cooling ..... Forced air (temperature regulated, low noise)  
Maximum ambient temperature (Ta max.) ..... 40° C (104° F)  
Minimum ambient temperature (Ta min.) ..... 0° C (32° F)  
Total heat dissipation\* ..... 520 BTU/hr.  
*\*Calculated, +/- 10%, at full intensity, full white*

### Approvals



EU safety ..... EN 60598-2-17 (EN 60598-1), EN 62471, EN 62493  
EU EMC ..... EN 55015, EN 55103-1, EN 55103-2,  
..... EN 61000-3-2, EN 61000-3-3, EN 61547  
US safety (pending) ..... UL 1573  
US EMC ..... FCC Part 15 Class A  
Canadian safety (pending) ..... CSA C22.2 No. 166  
Canadian EMC ..... ICES-003 Class A  
Australia/NZ ..... C-TICK N4241

## Included Items

- Power cable, 6 A, 18 AWG, 0.75 mm<sup>2</sup>, UL- listed, H05VV-F, 1.5 m, without mains plug
- Mounting bracket

## Accessories

### *Cables, 16 A, for connection to power in chains*

- Power input cable, 14 AWG, SJT, 1.5 mm<sup>2</sup>, H05VV-F, with PowerCon input connector, 3 m (9.8 ft.) ..... P/N 11541508
- Power relay cable, 14 AWG, SJT, 1.5 mm<sup>2</sup>, H05VV-F, with PowerCon connectors, 1.4 m (4.6 ft.) ..... P/N 11541509
- Power relay cable, 14 AWG, SJT, 1.5 mm<sup>2</sup>, H05VV-F, with PowerCon connectors, 2.25 m (7.4 ft.) ..... P/N 11541510
- Power relay cable, 14 AWG, SJT, 1.5 mm<sup>2</sup>, H05VV-F, with PowerCon connectors, 3.25 m (10.7 ft.) ..... P/N 11541511

### *Power connectors*

- Neutrik PowerCon NAC3FCA  
power input connector, cable mount, blue..... P/N 05342804
- Neutrik PowerCon NAC3FCB  
power output connector, cable mount, light grey ..... P/N 05342805

### *Installation hardware*

- Half-coupler clamp..... P/N 91602005
- G-clamp (suspension vertically downwards only) ..... P/N 91602003
- Quick-trigger clamp (suspension vertically downwards only).. P/N 91602007
- Safety cable, safe working load 50 kg ..... P/N 91604003

 
## Related Items

- RUSH Software Uploader 1™ ..... P/N 91611399

## Ordering Information

- RUSH PAR 2 RGBW Zoom™ in cardboard box ..... P/N 90280040

*Specifications are subject to change without notice. For the latest product specifications, see [www.martin.com](http://www.martin.com)*



### Disposing of this product

RUSH by Martin™ products are supplied in compliance with Directive 2012/19/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), where applicable. Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of RUSH by Martin products





Innovation • Quality • Performance