

# *AZedit Software User Manual*

*Up to and including version 3.4.0*

## **PROPRIETARY NOTICE**

The product information and design disclosed herein were originated by and are the property of Telex Communications, Inc. Telex reserves all patent, proprietary design, manufacturing, reproduction, use and sales rights thereto, and to any article disclosed therein, except to the extent rights are expressly granted to others.

## **COPYRIGHT NOTICE**

Copyright 2008 by Telex Communications, Inc. All rights reserved. Reproduction, in whole or in part, without prior written permission from Telex is prohibited.

## **WARRANTY NOTICE**

See the enclosed warranty card for further details.

## **CUSTOMER SUPPORT**

Technical questions should be directed to:

Customer Service Department  
RTS/Telex Communications, Inc.  
12000 Portland Avenue South  
Burnsville, MN 55337 USA  
Telephone: 800-392-3497  
Fax: 800-323-0498

## **RETURN SHIPPING INSTRUCTIONS**

Customer Service Department  
Telex Communications, Inc. (Lincoln, NE)  
Telephone: 402-467-5321  
Fax: 402-467-3279  
Factory Service: 800-553-5992

Please include a note in the box which supplies the company name, address, phone number, a person to contact regarding the repair, the type and quantity of equipment, a description of the problem and the serial number(s).

## **SHIPPING TO THE MANUFACTURER**

All shipments of product should be made via UPS Ground, prepaid (you may request from Factory Service a different shipment method). Any shipment upgrades will be paid by the customer. The equipment should be shipped in the original packing carton. If the original carton is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the equipment should be wrapped in paper and surrounded with at least four (4) inches of excelsior or similar shock-absorbing material. All shipments must be sent to the following address and must include the Proof of Purchase for warranty repair. Upon completion of any repair the equipment will be returned via United Parcel Service or specified shipper, collect.

Factory Service Department  
Telex Communications, Inc.  
8601 East Cornhusker Hwy.  
Lincoln, NE 68507 U.S.A.  
Attn: Service

# Table of Contents

---

<b>INTRODUCTION .....</b>	<b>3</b>	<b>SETTINGS FOR RVON CARD GROUP BOX .....</b>	<b>59</b>
Introduction .....	3	SETTINGS FOR PASS-THROUGH SERIAL VIA .....	
AZedit Description .....	3	ETHERNET GROUP BOX .....	60
Getting Started .....	3	SETTINGS FOR CONNECTED DEVICES GROUP BOX .....	60
AZedit Installation and Configuration .....	4	GPIO-16 Configuration Window .....	62
Uninstalling AZedit .....	4	SELECT GPIO-16 GROUP BOX .....	62
Connection to Matrix Intercom System .....	6	GPIO-16 CONFIGURATION GROUP BOX .....	63
Intercom Configuration Description .....	6	Configure Logging Window .....	64
Master Controller Intercom Configuration .....	7	Authentication Configuration Window .....	66
AZedit Intercom Configuration Settings .....	8	SESSIONS SETTINGS GROUP BOX .....	67
Setup File Configuration Settings .....	9	INTERCOM USERS GROUP BOX .....	67
Modes of Operation .....	9	Add/Edit User Window .....	68
Connecting to ONLINE Mode from FILE Mode .....	9	SNMP Configuration Window .....	70
Connecting / Disconnecting - SERVER Mode .....	10	SYSTEM INFORMATION GROUP BOX .....	70
Trouble Connecting? .....	11	COMMUNITY STRINGS GROUP BOX .....	71
		VALID HOSTS GROUP BOX .....	71
<b>GENERAL USAGE TOOLS .....</b>	<b>13</b>	Application Preferences Window .....	73
Status Bar .....	13	Startup/Shutdown Page .....	73
Standard Tool Bar .....	14	Alphas Page .....	75
Navigation Toolbars .....	20	Logging Page .....	76
Frequently Used Toolbar Operations .....	27	General Page .....	78
Frequently Used Column Features .....	30	Advanced Page .....	80
Keyboard Shortcuts .....		Authentication Page .....	83
upto and including version 3.4.0 and later .....	34	Maintenance Page .....	85
		Keypanels/Ports Window .....	86
<b>SCREEN DESCRIPTION .....</b>	<b>39</b>	SCROLL ENABLE GROUP BOX .....	87
Ethernet Settings .....	39	KEYPANEL/PORT SETTINGS GROUP BOX .....	88
LEFT CONTROLLER (ACTIVE) GROUP BOX .....	41	PORT STATUS GROUP BOX .....	89
RIGHT CONTROLLER (STANDBY) GROUP BOX .....	41	LISTEN KEYS GROUP BOX .....	89
Communications .....	43	TALK KEYS GROUP BOX .....	91
IP ADDRESS GROUP BOX .....	44	Keypanel/Port Configuration Window .....	93
Available Intercoms .....	45	Setup Page .....	93
INTERCOMS GROUP BOX .....	45	PANEL GROUP BOX .....	93
SELECTED INTERCOM GROUP BOX .....	45	DEFAULT VIEW GROUP BOX .....	94
Secondary AZedit Sessions .....	47	SHOW TYPE GROUP BOX .....	95
CONNECTION GROUP BOX .....	47	SETUP PAGE OPTIONS GROUP BOX .....	96
BAUD RATE GROUP BOX .....	47	Advanced Page .....	96
PROTOCOLS ENABLED GROUP BOX .....	48	PRIORITIES GROUP BOX .....	96
Resources Page .....	49	Vox Page .....	98
ASSIGNMENT TYPE RESOURCES GROUP BOX .....	50	Gain Setup Window .....	99
INTERCOM SETUP GROUP BOX .....	51	POINT-TO-POINT LISTEN GAINS GROUP BOX .....	99
Options Page .....	53	PARTY LINE LISTEN GAINS GROUP BOX .....	100
Intercom Sizing Wizard .....	56	I/O GAINS GROUP BOX .....	100
RVON Configuration Window .....	58	Select Key Assignment Window .....	102

---

<i>Party Lines Window</i> .....	104	<i>UPL RESOURCE GROUP BOX</i> .....	160
<i>SCROLL ENABLE GROUP BOX</i> .....	105	<i>SCROLL ENABLE GROUP BOX</i> .....	160
<i>PARTY LINE TALLIES GROUP BOX</i> .....	106	<i>UPL Statements Window</i> .....	162
<i>Special Lists Window</i> .....	108	<i>Edit UPL Statement Window</i> .....	164
<i>SCROLL ENABLE GROUP BOX</i> .....	109	<i>UPL STATEMENT GROUP BOX</i> .....	164
<i>IFBs Window</i> .....	111	<i>INPUT A GROUP BOX</i> .....	165
<i>Edit IFB Window</i> .....	113	<i>OPERATION GROUP BOX</i> .....	166
<i>IFB</i> .....	113	<i>INPUT B GROUP BOX</i> .....	167
<i>SCROLL ENABLE GROUP BOX</i> .....	113	<i>OUTPUT ACTION GROUP BOX</i> .....	168
<i>INPUT GROUP BOX</i> .....	114	<i>VOX Window</i> .....	171
<i>OUTPUT GROUP BOX</i> .....	114	<i>THRESHOLD GROUP BOX</i> .....	172
<i>LISTEN SOURCE GROUP BOX</i> .....	115	<i>HOLD TIME GROUP BOX</i> .....	172
<i>IFB Priorities Window</i> .....	116	<i>OPTIONS GROUP BOX</i> .....	173
<i>SET PRIORITY OF SELECTED PORTS GROUP BOX</i> .....	116	<i>Crosspoint Gains Window</i> .....	175
<i>IFB Listen Destination Window</i> .....	118	<i>GAIN CONTROLS GROUP BOX</i> .....	176
<i>IFB Special Lists Window</i> .....	120	<i>OPTIONS GROUP BOX</i> .....	176
<i>SCROLL ENABLE GROUP BOX</i> .....	121	<i>Party Line Gains Window</i> .....	178
<i>Program Listen Source Window</i> .....	123	<i>GAIN CONTROLS GROUP BOX</i> .....	179
<i>GPI Output Window</i> .....	125	<i>OPTIONS GROUP BOX</i> .....	179
<i>Edit GPI Output Window</i> .....	127	<i>Input/Output Gains Window</i> .....	181
<i>GPI OUTPUT GROUP BOX</i> .....	127	<i>GAIN CONTROLS</i> .....	181
<i>SCROLL ENABLE GROUP BOX</i> .....	127	<i>OPTIONS GROUP BOX</i> .....	182
<i>INPUT GROUP BOX</i> .....	128	<i>Port Alphas Window</i> .....	184
<i>OUTPUT GROUP BOX</i> .....	128	<i>Edit Port Alpha/Description Window</i> .....	187
<i>GPI Input Window</i> .....	129	<i>Alpha Windows</i> .....	189
<i>Edit GPI Input Window</i> .....	130	<i>Edit Alpha/Description Window</i> .....	191
<i>GPI INPUT GROUP BOX</i> .....	131	<i>GPI Input and DIM Description Windows</i> .....	193
<i>KEYPANEL GROUP BOX</i> .....	131	<i>Edit GPI Input and Dim Descriptions Window</i> .....	194
<i>KEY NUMBER GROUP BOX</i> .....	131	<i>I/O Card Description Window</i> .....	195
<i>KEY TYPE GROUP BOX</i> .....	131	<i>Edit I/O Card Description Window</i> .....	196
<i>ISO Window</i> .....	132	<i>PAP/LCP Description Window</i> .....	197
<i>Edit ISO Window</i> .....	134	<i>Edit PAP/LCP Description Window</i> .....	198
<i>ISO GROUP BOX</i> .....	134	<i>Port Status Window</i> .....	200
<i>SCROLL ENABLE GROUP BOX</i> .....	134	<i>Clear Port Status Window</i> .....	203
<i>OPTIONS GROUP BOX</i> .....	135	<i>SELECT SCOPE OF OPERATION GROUP BOX</i> .....	203
<i>OUTPUT GROUP BOX</i> .....	135	<i>SELECT ITEMS TO CLEAR GROUP BOX</i> .....	203
<i>GPIO-16s Window</i> .....	136	<i>Master Controller Status Window</i> .....	204
<i>Edit GPIO-16 Window</i> .....	137	<i>Standby Master Controller Status Window</i> .....	206
<i>GPIO-16 GROUP BOX</i> .....	137	<i>DBX Link Status Window</i> .....	208
<i>CONFIGURATION GROUP BOX</i> .....	137	<i>I/O Card Status Window</i> .....	212
<i>Select GPIO-16 Window</i> .....	138	<i>PAP &amp; LCP-102 Status Window</i> .....	214
<i>Assignment Group Window</i> .....	139	<i>UIO-256 Status Window</i> .....	216
<i>SCROLL ENABLE GROUP BOX</i> .....	140	<i>Trunk Master Status Window</i> .....	218
<i>LCP-102 Window</i> .....	142	<i>Trunk Inspection Window</i> .....	220
<i>LCP-102 GROUP BOX</i> .....	143	<i>ORIGINATION ASSIGNMENTS GROUP BOX</i> .....	221
<i>MODE GROUP BOX</i> .....	144	<i>DESTINATION ASSIGNMENTS GROUP BOX</i> .....	221
<i>SETUP PAGE 1 THROUGH PAGE 4 GROUP BOX</i> .....	144	<i>Remote Intercoms Status Window</i> .....	222
<i>PAP-32 Window</i> .....	145	<i>SELECT AN OPERATION... GROUP BOX</i> .....	223
<i>PROGRAM INPUTS GROUP BOX</i> .....	146	<i>RVON Connection Status Window</i> .....	224
<i>IFBs GROUP BOX</i> .....	147	<i>SELECT LOCAL CARD AND CHANNEL GROUP BOX</i> .....	224
<i>ARP-32 Window</i> .....	148	<i>REMOTE CONNECTION INFORMATION GROUP BOX</i> .....	225
<i>INPUTS GROUP BOX</i> .....	149	<i>CONNECTION INFORMATION GROUP BOX</i> .....	225
<i>OUTPUTS GROUP BOX</i> .....	150	<i>VOIP PLAYOUT STATISTICS GROUP BOX</i> .....	226
<i>Crosspoint Status Window</i> .....	151	<i>NETWORK STATISTICS GROUP BOX</i> .....	228
<i>IS TALKING TO... GROUP BOX</i> .....	152	<i>ERROR COUNTS GROUP BOX</i> .....	229
<i>IS LISTENING TO... GROUP BOX</i> .....	152	<i>SERIAL TO ETHERNET GROUP BOX</i> .....	230
<i>Crosspoint Inspection Window</i> .....	154	<i>ETHERNET TO SERIAL GROUP BOX</i> .....	231
<i>Inter-Panel Dim Table Window</i> .....	156	<i>Master Controller Version Information Window</i> .....	232
<i>UPL Resources Window</i> .....	158	<i>I/O Card Version Information Window</i> .....	233
<i>Edit UPL Resource Window</i> .....	160	<i>Keypanel Version Information Window</i> .....	234

<i>GPIO-16 Version Information Window</i> .....	235
<i>Log Viewer Window</i> .....	236
<i>Keypanel Screen Saver Window</i> .....	239
<i>Keypanel Passwords Window</i> .....	241
<i>Select Intercom Window</i> .....	242
<i>Add Intercom Window</i> .....	243
<i>INTERCOM GROUP BOX</i> .....	243
<i>IP ADDRESS GROUP BOX</i> .....	244
<i>Select User Window</i> .....	245
<i>Add User Window</i> .....	246
<i>USER GROUP BOX</i> .....	246
<i>COPY SETTINGS FROM GROUP BOX</i> .....	246
<i>Connected Users Window</i> .....	247
<i>Create Desktop Shortcut Window</i> .....	248
<i>Cronus Passwords Window</i> .....	249
<i>Paste Special Window</i> .....	251
<i>ADVANCED GROUP BOX</i> .....	251
<i>SCROLL ENABLES GROUP BOX</i> .....	252
<i>INDIVIDUAL KEY SETTINGS GROUP BOX</i> .....	252
<i>MISCELLANEOUS GROUP BOX</i> .....	253
<i>SETUP PAGES GROUP BOX</i> .....	254
<i>COPY SETUP PAGES GROUP BOX</i> .....	254
<i>KEYS GROUP BOX</i> .....	255
<i>DESTINATION GROUP BOX</i> .....	256
<i>Partial Save Window</i> .....	257
<i>SELECT SUBSET TO SAVE GROUP BOX</i> .....	258
<i>Advanced Partial Save Selection Window</i> .....	261
<i>ITEMS TO OPERATE ON... GROUP BOX</i> .....	261
<i>SCOPE OF OPERATION GROUP BOX</i> .....	262
<i>Send All Window</i> .....	263
<i>Check For Duplicate Alphas Window</i> .....	265
<i>Refresh Screens</i> .....	267
<i>Search For Key Assignment Window</i> .....	267
<i>SEARCH FOR: GROUP BOX</i> .....	268
<i>REPLACE WITH: GROUP BOX</i> .....	269
<i>Search Status: Window</i> .....	270
<i>Key Assignment Grid Window</i> .....	272
<i>Keypanel Print Options Window</i> .....	273
<i>SELECT KEYPANELS GROUP BOX</i> .....	273
<i>SELECT REPORT TYPE GROUP BOX</i> .....	274
<i>Other Print Windows</i> .....	275













# List of Figures

---

FIGURE 1.	Status Bar - AZedit .....	13
FIGURE 2.	Ethernet Configuration Window .....	40
FIGURE 3.	Communications Window .....	43
FIGURE 4.	Available Intercoms Window .....	45
FIGURE 5.	Secondary AZedit Sessions Window .....	47
FIGURE 6.	Intercom Configuration Window - Resources Page .....	49
FIGURE 7.	Intercom Configuration Window - Options Page .....	53
FIGURE 8.	RVON Configuration Window .....	59
FIGURE 9.	GPIO-16 Configuration Window .....	62
FIGURE 10.	Configure Logging Window .....	65
FIGURE 11.	Authentication Configuration Window .....	66
FIGURE 12.	Add User and Edit User Windows .....	68
FIGURE 13.	SNMP Configuration Window .....	70
FIGURE 14.	Application Preferences Window - Startup/Shutdown page .....	73
FIGURE 15.	Configuration Change Warning .....	74
FIGURE 16.	AZedit Exit Message .....	74
FIGURE 17.	Application Preferences - Alphas page .....	75
FIGURE 18.	Application Preferences - Logging Page .....	76
FIGURE 19.	Application Preferences - General Page .....	78
FIGURE 20.	ONLINE Save Warning Message .....	79
FIGURE 21.	Application Preferences - Advanced Page .....	80
FIGURE 22.	Application Preferences - Authentication Page .....	83
FIGURE 23.	Application Preferences - Maintenance Page .....	85
FIGURE 24.	Keypanel/Ports Window .....	87
FIGURE 25.	Listen, Talk and Talk Level 2 Assignments .....	90
FIGURE 26.	Show Volume Example .....	91
FIGURE 27.	Keypanel/Port Configuration Setup Window .....	93
FIGURE 28.	Keypanel/Port Configuration - Advanced Page .....	96
FIGURE 29.	Keypanel/Port Configuration - Vox Page .....	98
FIGURE 30.	Gain Setup Window .....	99
FIGURE 31.	Gain Reset Window .....	101
FIGURE 32.	Select Key Assignments for Listen and Talk Keys .....	102
FIGURE 33.	Party Lines Window .....	104
FIGURE 34.	Special Lists Window .....	108
FIGURE 35.	IFBs Window .....	111
FIGURE 36.	Edit IFB Window .....	113
FIGURE 37.	IFB Priorities Window .....	116
FIGURE 38.	IFB Listen Source Window .....	118
FIGURE 39.	IFB Special Lists Window .....	120
FIGURE 40.	Program Listen Source Window .....	123
FIGURE 41.	GPI Outputs Window .....	125
FIGURE 42.	Edit GPI Output Window .....	127
FIGURE 43.	GPI Inputs Window .....	129
FIGURE 44.	Edit GPI Input Window .....	130

---

FIGURE 45.	ISO Window .....	132
FIGURE 46.	Edit ISO Window .....	134
FIGURE 47.	GPIO-16 System Window .....	136
FIGURE 48.	Edit GPIO-16 Window .....	137
FIGURE 49.	Select GPIO-16 Window .....	138
FIGURE 50.	Assignment Group Window .....	140
FIGURE 51.	LCP-102 Window .....	143
FIGURE 52.	PAP-32 Setup Window .....	145
FIGURE 53.	ARP-32 Setup Window .....	148
FIGURE 54.	Crosspoint Status Window .....	151
FIGURE 55.	Inter-Panel Dim Setup Window .....	156
FIGURE 56.	UPL Resources Window .....	158
FIGURE 57.	Edit UPL Resource Window .....	160
FIGURE 58.	UPL Statement Window .....	162
FIGURE 59.	Edit UPL Statement Window .....	164
FIGURE 60.	VOX Window .....	171
FIGURE 61.	Crosspoint Gain Window .....	175
FIGURE 62.	Party Line Gains Window .....	178
FIGURE 63.	Input/Output Gains Window .....	181
FIGURE 64.	Port Alpha Window .....	185
FIGURE 65.	Edit Port Alpha / Description Window .....	187
FIGURE 66.	Alpha Windows in AZedit .....	190
FIGURE 67.	Edit Alpha/Description Window .....	191
FIGURE 68.	GPI Input Descriptions and DIM Descriptions .....	193
FIGURE 69.	Edit GPI Input and Dim Descriptions Window .....	194
FIGURE 70.	I/O Card Descriptions Window .....	195
FIGURE 71.	Edit I/O Card Description Window .....	196
FIGURE 72.	PAP and LCP Descriptions Window .....	197
FIGURE 73.	Edit PAP/LCP Description Window .....	198
FIGURE 74.	Port Status Window .....	200
FIGURE 75.	Show Enhanced Status Columns .....	202
FIGURE 76.	Clear Port Status Window .....	203
FIGURE 77.	Master Controller Status Window .....	204
FIGURE 78.	Standby Master Controller Status Window .....	206
FIGURE 79.	DBX Link Status Window .....	208
FIGURE 80.	I/O Card Status Window .....	212
FIGURE 81.	PAP and LCP Status Window .....	214
FIGURE 82.	UIO Status Window .....	216
FIGURE 83.	Trunk Master Status Window .....	218
FIGURE 84.	Trunk Inspection Window .....	220
FIGURE 85.	Remote Intercom Status Window .....	222
FIGURE 86.	Clear Key Assignments Window .....	223
FIGURE 87.	RVON Connection Status - Card / Channel Page .....	224
FIGURE 88.	RVON Connection Status - Connection Page .....	225
FIGURE 89.	RVON Connection Status - VOIP Page .....	226
FIGURE 90.	RVON Connection Status - Network Page .....	228
FIGURE 91.	RVON Connection Status - Errors Page .....	229
FIGURE 92.	RVON Connection Status - Pass-Through Page .....	230
FIGURE 93.	Master Controller Version Information Window .....	232
FIGURE 94.	I/O Card Version Information Window .....	233
FIGURE 95.	Keypanel Version Information Window .....	234
FIGURE 96.	GPIO-16 Version Information Window .....	235
FIGURE 97.	Log Viewer Window .....	238
FIGURE 98.	Keypanel Screen Saver Window .....	239
FIGURE 99.	Keypanel Passwords Window .....	241
FIGURE 100.	Select Intercom Window .....	242
FIGURE 101.	Add Intercom Window .....	243
FIGURE 102.	Select User Window .....	245
FIGURE 103.	Add User Window .....	246
FIGURE 104.	Connected Users Window .....	247

FIGURE 105.	Create Desktop Shortcut Window .....	248
FIGURE 106.	Cronus Passwords Window .....	249
FIGURE 107.	Paste Special Window .....	251
FIGURE 108.	Partial Save Window .....	257
FIGURE 109.	Advanced Partial Save Selection .....	261
FIGURE 110.	Send All Window and Send All Window with Details Selected .....	263
FIGURE 111.	Checking for Duplicate Alphas... progression window .....	265
FIGURE 112.	Duplicate Alphas Window .....	266
FIGURE 113.	Search For Key Assignment Search For: Window .....	267
FIGURE 114.	Search For Key Assignment - Replace with: Window .....	269
FIGURE 115.	Search Status Window and the Search Status - Replace Window .....	270
FIGURE 116.	Key Assignment Grid .....	272
FIGURE 117.	Keypanel Print Options Window .....	273
FIGURE 118.	Print Preview Window .....	275



# *Introduction*

---

---

## *Introduction*

Intercom system configuration has never been easier with the advent of Telex's AZedit Intercom System software. AZedit is a Windows®-based, full-featured configuration software, providing online and offline configuration capabilities. It gives you the ability to manage multiple intercom systems, assign and reassign users to different ports, as well as dynamically add intercom hardware to your system setup without jumper changes. AZedit has the capability to load pre-set configuration files, which means configurations saved to a disk can be uploaded to the "live" application at anytime without interruption. AZedit's configuration capabilities allow you to make changes directly to the application or upload changes from a file created at an earlier time.

---

## *AZedit Description*

**AZedit** is automatically configured to work on any Telex intercom system. This means, if you have an ADAM, ADAM CS, Zeus, or Cronus intercom system, AZedit displays only resources available for that intercom system. On the other hand, if you have a multi-frame ADAM intercom system, AZedit displays all the available resources configured in your system, even if they are not presently being used.

---

## *Getting Started*

The AZedit software comes with a CD used to install the application onto a central computer.

### **Minimum Requirements for Software Installation**

- Pentium Processor
- 64 MB Ram
- Microsoft® Internet Explorer 5.01 and higher or NT Service Pack 6.0.
- Microsoft® Windows 98, NT, 2000, XP.

---

## AZedit Installation and Configuration

During installation, AZedit creates six (6) sub-folders within the application folder. These folders are :

- The **Auth** folder is the default folder where authentication files are stored.
- The **Firmware** folder is the default folder where the application looks for firmware update files.
- The **Log** folder is the default location where the application saves the log files.
- The **Res** folder is the default location where the application saves restriction files.
- The **SNMP** folder is the default location where the application saves SNMP configuration files.
- The **USB** folder is where the USB drivers reside for you to download for USB use.
- The **V3XX** (versions) folder is where the application stores the AZedit.exe file, the help files, and setup files used with AZedit.

When you remove the application, these sub-folders are not to be removed.

**NOTE:** In earlier versions of AZedit, not all of these folders are present.

To **install AZedit**, do the following:


1. Insert the **AZedit CD** into the CD-ROM drive.  
*The CD begins Autorun installation of the software.*
2. Select all the **defaults**, when prompted.
3. When finished, click **OK**.  
*AZedit opens.*

---

## Uninstalling AZedit

To **uninstall the software**, do the following:


1. From the Start menu, select **Settings**, and then **Control Panel**.  
*The Control Panel window appears.*

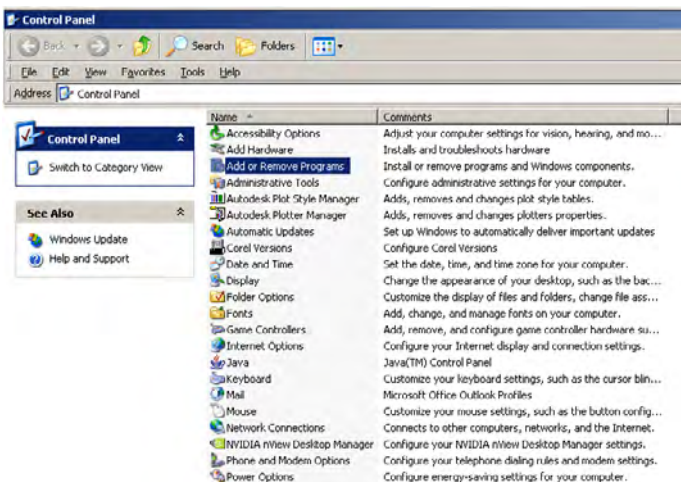


2. From the Control Panel window, select **Add or Remove Programs**.  
*The Add or Remove Programs window appears.*



- Using the window slider, scroll to and select the **AZedit** program.

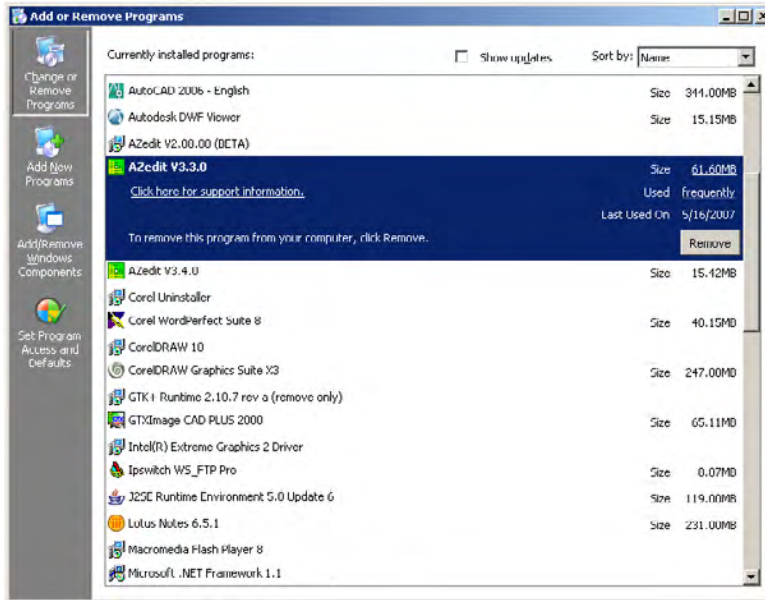

- Click **Remove**.  
*An Add or Remove Programs warning appears*

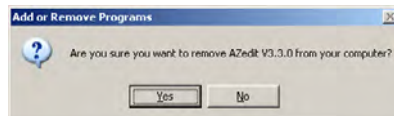

- Click **OK**.  
*The windows uninstaller runs and AZedit is removed.*

---

## Connection to Matrix Intercom System

Using Table 1, determine the type of intercom system you have and the type of connection you are using. Verify the cabling from the intercom system to the computer running AZedit is correct.

**TABLE 1.** Connecting to the Intercom System

	<b>ADAM</b>	<b>ADAM CS</b>	<b>Cronus</b>	<b>Zeus &amp; ZeusII</b>
<b>Serial RS-232</b>	<b>J1 connected to computer running AZedit</b>	<b>J900 connected to computer running AZedit</b>	<b>J1 connected to computer running AZedit</b>	<b>J25 connected to computer running AZedit</b>
<b>USB</b>	N/A	N/A	<b>J7 connected to computer running AZedit. The USB drivers are located in C:\Telex\AZedit\USB.</b>  <b>For more information on the USB connection, see the Cronus User Manual - 93507770000.</b>	N/A
<b>Ethernet/ Network</b>	<b>J1 on the Master Controller back card connected to the Ethernet connection on the computer or to a network switch</b>  <b>NOTE:</b> This cabling requires a crossover cable.	N/A	<b>J8 connected to the Ethernet connection on the computer or a network switch</b>  <b>NOTE:</b> This cabling requires a crossover cable.	N/A

---

## Intercom Configuration Description

AZedit intercom configuration is primarily made up of resources and options related to your intercom system. **Resources** are the number of intercom ports, party lines, etc. available on a system. **Options** describe such things as the number of talk levels for each talk key, or the number of setup pages for each keypad. These resources and options may be changed to accommodate your unique environment.

Some options slightly modify the operation of the intercom system. Some resource and option settings are limited by the amount of available hardware.

For example, in a Resource list, the number of ports is limited to the number of **AIO** (Audio Input Output) cards in the intercom system. For other resources and options, the quantity is primarily limited by the amount of available memory in the master controller.

The intercom configuration is actually defined in three places within your intercom system: 1) in the master controller 2) in AZedit and 3) in each setup file. We normally recommend you set the intercom configuration in the master controller first, and then apply these settings to AZedit afterward. Once you have done this, your setup files are automatically set to the same settings as the master controller and AZedit. The only time where a user might not want all three (3) settings to match is when configuring several independent intercom systems. The following paragraphs contain a more detailed discussion of the three (3) resource settings, and how to manage the memory limitations.

**NOTE:** The only time a user might not want all three (3) settings to match is when configuring several independent intercom systems.

---

## *Master Controller Intercom Configuration*

The master controller configuration is the backbone for your intercom system. Whatever is defined here, is allowed for actual intercom operation. It is possible to increase or decrease the quantities of some types of resources and options in the master controller to free up memory for larger quantities of other resources. There are also reasons why you might want to reduce or eliminate quantities of resources and options not required:

### **Advantages of reducing master controller intercom configuration settings**

- The intercom system powers up faster with fewer resources.
- Less memory resources are used in the system controller. For example, in larger, multi-frame intercom systems, where the number of intercom ports can exceed several hundred, the configuration information for the ports requires a large portion of the system memory. In such cases, unused IFBs, ISOs etc. can be removed from the resource configuration to make room for resources being used.
- Scroll lists are smaller (when viewing them either in AZedit or from a keypanel).
- AZedit connects to the intercom system faster (fewer items to upload).
- AZedit updates faster (fewer items to query).
- Saving/Loading files is faster (less data to upload, less data to save/load).
- Setup files require less disk space with fewer resources.
- Checks for duplicate names (alphas) is faster with fewer resources.
- Sending changes to the intercom system is faster with fewer resources.
- You cannot mistakenly configure resources that do not exist (i.e. using ports that do not have AIO Cards).

### **Disadvantages of reducing master controller intercom configuration settings**

- If you add more hardware later (more AIO Cards, for example), you must readjust your master controller and AZedit configuration settings. Changing settings in the master controller can take up to 10 minutes. You may also have to reconfigure your setup files. This may require 2-3 minutes per file if you have several files.

---

## AZedit Intercom Configuration Settings


**NOTE:** In AZedit versions before 2.0, AZedit.ini, located in the AZedit folder, defined the quantity for each resource and option. These quantities can be changed.

In AZedit versions 2.0 and higher, the .ini file is not used. The application defaults are defined through the registry editor (*Run/Regedit*).

To ensure you are viewing the intercom configuration for the application, do the following:


1. If you have been working on a setup file in FILE mode, **save any changes** you have made. If you have been working on the online setup file in ONLINE mode, **send your changes** to the intercom system.
2. Select **New** from the File menu, or click the **New File** button.

*A warning message appears.*

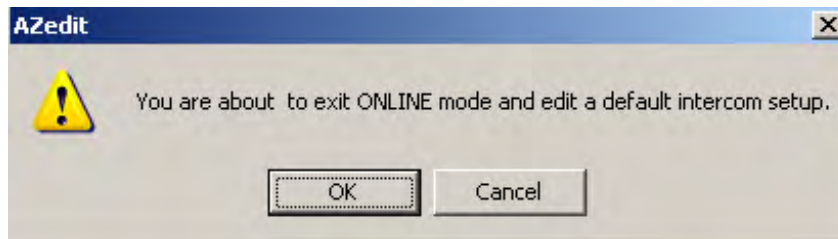

3. Click **OK**.
4. From the Options menu, select **Intercom Configuration**.

*A warning message appears.*

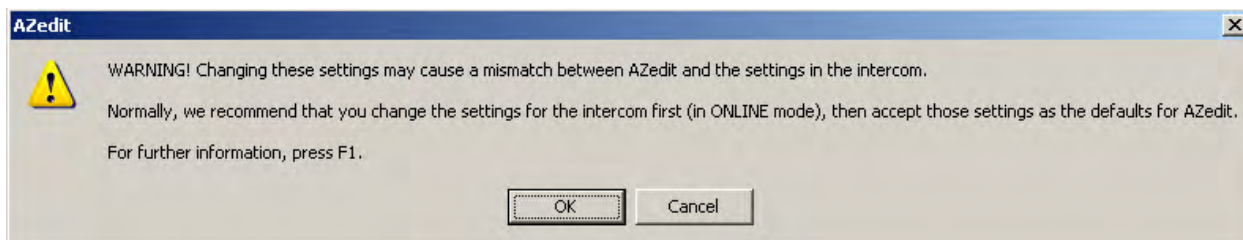

5. Click **OK**.  
*The Intercom Configuration window appears.*
6. Click the **Resources** page.  
*When you first install AZedit, it is set to the default resources for a single frame ADAM intercom system. If you are using AZedit with an ADAM CS Intercom System, or with a multi-frame ADAM Intercom System, you must change this. Although you can change the AZedit resource settings at this time, we recommend that you change the master controller configuration settings first, then select those settings as the AZedit default settings when prompted to do so.*

---

## Setup File Configuration Settings

Whenever you open a setup file, the intercom configuration settings for that setup file are loaded. You can change the intercom configuration to different settings than the AZedit default settings. However, the only time you might want to do this is when you are creating setup files for several different intercom systems, each with a different set of resources. Usually, you create your setup files using the default application resources.

To **create a new file with the default configuration settings**, do the following:

1. From the File menu, select **New**.  
*If you are in Online mode, a message indicating “You are about to exit ONLINE mode and edit a default intercom setup”.*
2. Click **OK**.  
*AZedit enters FILE mode and opens a default intercom setup file.*

---

## Modes of Operation

There are three different modes AZedit can run in: File, Online, and Server mode.

**FILE:** File mode indicates the computer is not communicating with the intercom system. In this mode the user can create new setup files and open/edit existing setup files, without the worry of interrupting users.

File mode is an excellent way to make a lot of changes that can be uploaded to the intercom system as a batch change without interruptions. The changes made in File mode can also be saved to a disk for upload at a later time. This also ensures a backup of changes made to the system.

**ONLINE:** Online mode indicates the computer is communicating with the intercom system. Users can make changes to the intercom configuration or send setup files to the intercom system.

**SERVER:** Server mode indicates the computer is online and operating in Server mode. Users can view current intercom system configurations, as well as intercom activity.

While in Server mode, no changes can be made. This eliminates any redundancy of effort by more than one user.

---

## Connecting to ONLINE Mode from FILE Mode

Once you have finished making changes to the intercom system in FILE mode and have saved changes, you may want to connect to the intercom system from FILE mode to upload the changes.

To **connect to ONLINE mode**, do the following:

1. From the menu bar, select **Online**.  
*The Online drop-down menu appears.*
2. From the drop-down menu, select **Connect**.  
*The word ONLINE appears in the lower right-hand corner of the main AZedit window.*

---

To **disconnect from ONLINE mode**, do one of the following:

#### Using the New file option

1. From the File menu, select **New**.  
*A message indicating “you are about to exit ONLINE mode and edit a default intercom setup” appears.*
2. Click **OK** to accept. Otherwise, click **Cancel**.  
*The word FILE appears in the lower right-hand corner of the main AZedit window.*

#### Using the Open file option

1. From the File menu, select **Open**.  
*A message indicating “You are about to exit ONLINE mode and open a file” appears.*
2. Click **OK** to accept. Otherwise, click **Cancel**.  
*The Setup browse window appears for you to choose the setup you would like to open. Also, the word FILE appears in the lower right-hand corner of the main AZedit window.*

#### Using the Save file option

1. From the File menu, select **Save**.  
*The Save (Online setup) browse window appears.*
2. In the File Name text box, enter the **setup file name** to be saved (for example, *Setup\_9302003.adm*).
3. Click **Enter**.  
*The Confirmation - ONLINE Save As window appears.*
4. When the option to stay online or enter file mode appears, select **Enter FILE Mode**. Otherwise, select **ONLINE**.
5. Click **Continue**. Otherwise, click **Cancel** to cancel the upload and return to the main AZedit window.  
*The upload of the setup file begins. You see a status bar until it is finished uploading the data. Once the file is uploaded, the word FILE appears in the lower right-hand corner of the main AZedit window.*

---

## Connecting / Disconnecting - SERVER Mode

Monitoring the status of the intercom system is vital to effective and efficient operation. Server Mode allows the user to view real-time intercom activity. Remember, changes to the intercom system may not be made in SERVER Mode.

**NOTE:** You must be in ONLINE Mode before you can enter SERVER Mode.

To **connect using SERVER Mode**, do the following:

- > From the Online menu, select **Server Mode**.  
*A check mark appears next to Server Mode when it is active, the background in all fields turns purple, and the word SERVER appears in the lower right-hand corner of the main AZedit window.*

To **disconnect from SERVER Mode**, do the following:

- > From the Online menu, select **Server Mode**.  
*The check mark is removed from Server Mode, the background in all fields returns to white, and the word ONLINE appears in the lower right-hand corner of the main AZedit window.*

---


## Trouble Connecting?

If you are **having trouble connecting to the intercom system**, try the following:

- Verify the power to the intercom is ON.
- Verify the intercom cable is properly connected to the PC. Refer to the cable information you received with your intercom system.
- Verify the COM port and the Baud rate settings are correct.

To **adjust the COM port and Baud rate settings**, do the following:

1. From Options menu, select **Communications**.  
*The Communications window appears.*

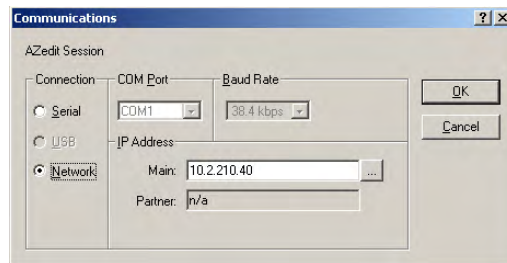

2. Verify or select the **proper settings**.
3. Click **OK**.  
*The Communications window closes.*

By default, AZedit is set for COM1 and 38,400kbps (38.4K baud). The baud rate set in AZedit must match the baud rate setting of the master controllers in the ADAM or ADAM CS frame (Dip Switch #1). The 38,400kbps setting provides the fastest possible file uploads and downloads, but you may experience more communication errors operating at this speed than at a lower baud rate setting. Cable lengths of 30-50 ft. (9-15 meters) have been used successfully with the 38,400kbps setting. However, this may not always work under all operating conditions.

**NOTE:** If you are experiencing communication problems operating at this speed, check the Master Controller Status window (*Status/Master Controller Status*). Rapid communication errors on the right side of the window indicates a problem. In such cases, check cable construction or cable routing, or use a shorter cable. You may have to try different scenarios before one permits operation at 38,400kbps.





## General Usage Tools

### Status Bar

The **Status Bar** runs along the bottom of the AZedit application. It displays information such as mode, assignments, users, and transmit/receive status.

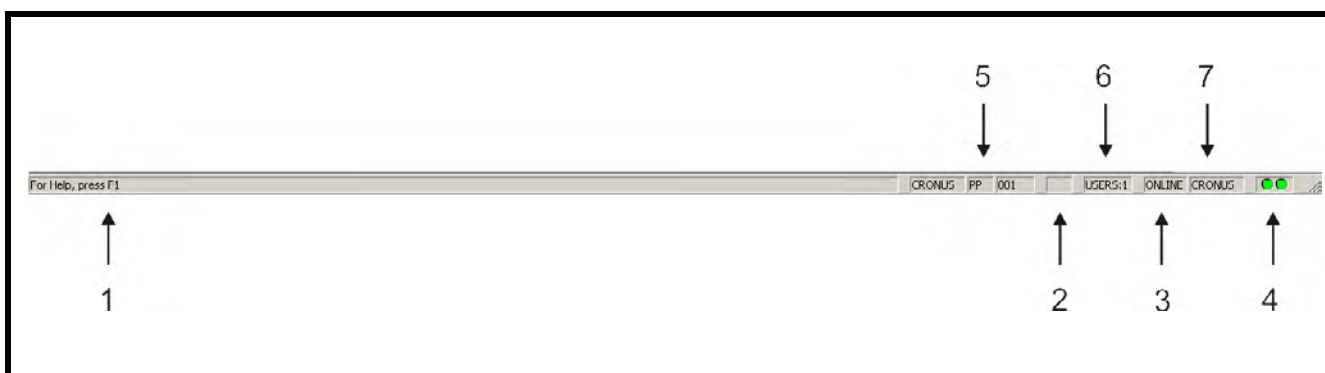


FIGURE 119. Status Bar - AZedit

1. **Help:** By browsing over an icon, a brief description of the button or icon appears.
2. **Logging Information:** When enabled, this field shows the word *LOGGING* when logging is active.
3. **MODE information:** This field shows which mode AZedit is running: FILE, ONLINE, or SERVER. For more information on modes, See “Modes of Operation” on page 9.
4. **Tx/Rx Information:** These lights display the transmit and receive status of the intercom system. Green lights mean operation is normal. Red lights mean there is a problem.
5. **Assignment Information:** When you hover over or click in a key assignment field, the assignment information is displayed in these three fields. This is only available when connected to the intercom.
6. **User information:** When connected to the intercom, this field shows the number of users also connected.
7. **Intercom Information:** When connected to the intercom, this field shows the name of the intercom to which you are connected.

## Standard Tool Bar

The **Standard Toolbars** at the top of the AZedit application window help you perform common tasks within the application easily and quickly. Each icon represents a different task you can perform. You can customize the toolbars to have only the icons you use most. In addition, there is a second customizable standard toolbar available, if needed.

Both the Standard Toolbar and the Standard Toolbar 2 can either be docked to the top of the window or float separate from the window. By default, the Standard Toolbars are docked to the top of the application.



### New Icon

The New icon creates a new setup file for AZedit. New is also available from the File menu.

- If you are currently editing a file in FILE mode, clicking New clears all settings and open a new, blank setup file (you are prompted for confirmation first).
- If you are in FILE mode, but no changes have been made, clicking New immediately starts a new setup file without any prompts.
- If you are in ONLINE mode, clicking New causes the computer to disconnect from the intercom system and enter FILE mode (A confirmation message appears). Then, a new, blank setup file is opened.
- If you are operating in SERVER mode, you cannot start a new file.

**Note:** You can also use *File/New* from the menu bar in AZedit to start a new setup file.



### Open Icon

The Open icon opens an existing AZedit setup file. Open is also available in the File menu.

- If you are currently editing a file in FILE mode, clicking Open clears all settings and opens a file that you select from disk (you are prompted for confirmation first).
- If you are in FILE mode, but no changes are made, clicking Open immediately lets you select a file to open from disk without any prompts.
- If you are in ONLINE mode, clicking Open causes the computer to disconnect from the intercom system and enter FILE mode (you are prompted for confirmation). Then, you can select a file to open.
- If you are operating in SERVER mode, you cannot open a file.

**Note:** You can also use *File/Open* from the menu bar in AZedit to open a setup file.



### Merge Icon

The Merge icon combines the contents of a previously saved file into the file you are currently editing. Typically, merge is used with partial setup files previously saved using partial save.

**Note:** You can also use *File/Merge* from the menu bar in AZedit to merge two setup files.



### Save Icon

The Save icon saves the current AZedit setup file. Save is available in the File menu and via the Save button.








- If you are currently editing a new file in FILE mode, clicking Save lets you select a file name and location to save.
- If you are in FILE mode, and editing a previously opened setup file, clicking Save allows you to save the file with the same file name or with a different name.
- If you are in ONLINE mode, clicking Save causes the computer to upload the current intercom system configuration and merge it with any changes you have made but not sent to the intercom system. This assures that the latest settings are saved.











For example, if one or two keypad operators change key assignments on their keypanels while you are editing the Online configuration, both your changes and their changes are saved.











- If you are operating in SERVER mode, you cannot save a file.




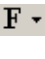
**Note:** By default, all setup files are saved in a folder called Setups, which is located in your AZedit program folder. This folder is not deleted if you use the Uninstall utility to remove AZedit. We recommend that you save your files in this folder.


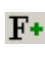

**Note:** You can also use *File/Save* from the menu bar in AZedit to use Save.

	<p><b>Save As Icon</b></p> <p>The Save As icon saves the current AZedit setup file under another file name. Use the Save As operation to save an existing file you want to change without losing the original setup file. Save As is available in the File menu and via the Save As button.</p> <ul style="list-style-type: none"> <li>• If you are currently editing a new file in FILE mode, clicking on Save As lets you select a file name and location to save.</li> <li>• If you are in FILE mode, and editing a previously opened setup file, clicking Save As allows you to save the file with a new file name.</li> <li>• If you are in ONLINE mode, clicking Save As causes the computer to upload the current intercom system configuration and merge it with any changes you have made but not sent to the intercom system. This assures the latest settings are saved.</li> </ul> <p>For example, if one or two keypanel operators change key assignments on their keypanels while you are editing the Online configuration, both your changes and their changes are saved.</p> <ul style="list-style-type: none"> <li>• If you are operating in SERVER mode, you cannot use Save As.</li> </ul> <p><b>Note:</b> By default, all setup files are saved in a folder called Setups, which is located in your AZedit program folder. This folder is not be deleted if you use the Uninstall utility to remove AZedit. We recommend that you save your files in this folder.</p> <p><b>Note:</b> You can also use <i>File/Save As...</i> from the menu bar in AZedit to access Save As.</p>
	<p><b>Partial Save Icon</b></p> <p>The Partial Save icon lets you save parts of the setup file you are currently working on. Later, you can send the partial configuration to the intercom system using the Send File command. On the other hand, you can use the Merge command to merge the partial file into another setup file you are working on. For example, you might use Partial Save to save all of your UPL Resources and UPL Statements in their own file. You can then merge this file into your other setup files using the Merge command.</p> <p><b>Note:</b> You can also use <i>File/Partial Save...</i> from the menu bar in AZedit to perform a partial save.</p>
	<p><b>Print Icon</b></p> <p>The Print icon opens the Print window. You can print the configuration information for whatever view you are currently viewing.</p> <p><b>Note:</b> You can also use <i>File/Print...</i> from the menu bar in AZedit to print a window.</p> <p>For more information, see “Keypanel Print Options Window” on page 273.</p>
	<p><b>Print Preview Icon</b></p> <p>The Print Preview icon opens a display window to let you see how the printed page looks before you print it.</p> <p><b>Note:</b> You can also use <i>File/Print Preview</i> from the menu bar in AZedit to access Print Preview.</p>
	<p><b>Print Setup Icon</b></p> <p>The Print Setup command lets you select a printer, the orientation of the paper, and any other options that are available for your selected printer.</p> <p><b>Note:</b> You can also use <i>File/Print Setup...</i> from the menu bar in AZedit to access Print Setup.</p>
	<p><b>Communications Icon</b></p> <p>The Communications icon displays the Communications window. From this window you can configure the type of connection your intercom system is using: Serial, USB, or Network.</p> <p><b>Note:</b> You can also use <i>Options/Communications</i> from the menu bar to access the communications window.</p> <p>For more information, see “Communications” on page 43.</p>
	<p><b>Clear Icon</b></p> <p>The Clear icon (cancel changes command) cancels the operation without making changes.</p> <p>Unlike Undo, which only lets you work on a “stack” of changes (last change made, is the first change undone), cancel changes lets you move from window to window and clear the changes made to any item. In addition, when you select an item and then select cancel changes, the confirmation dialog asks whether you would like to Cancel Changes for ALL items of the selected type.</p> <p>For example, if you are viewing the IFB window and click on an IFB, then select Cancel Changes, the confirmation dialog reads “Are you sure you want to Cancel Changes for the selected IFB?”, and a check box that reads “Cancel Changes for ALL IFBs”.</p> <p><b>Note:</b> Cancel Changes is available only in ONLINE mode and only when an item is selected that has been changed since the last time changes were saved or sent to the intercom system.</p> <p><b>Note:</b> You can also use <i>Edit/Cancel Changes</i> from the menu bar in AZedit to cancel changes that have been made.</p>





	<p><b>Abort Icon</b></p> <p>The Abort icon erases any changes you have made to the ONLINE configuration. You must be in ONLINE mode to select this.</p> <p>If SERVER or FILE is indicated, Abort Changes is not available.</p> <p><b>Note:</b> You can also use <i>Online/Abort Changes</i> from the menu bar in AZedit to abort changes that have been made.</p>
	<p><b>About Icon</b></p> <p>The About icon displays a window that details the AZedit version, its build date, and copyright information.</p> <p><b>Note:</b> You can also use <i>Help/About AZedit</i> from the menu bar to access the About window.</p>
	<p><b>Activate (Send All Changes) Icon</b></p> <p>The Activate (Send All) icon sends changes made in AZedit to the Master Controller and the keypanels. Send Changes is only available in ONLINE mode. If SERVER or FILE is indicated, Send Changes is not available.</p> <p>When you make changes, the changed items are highlighted in yellow. When you select Send Changes, these items are sent to the intercom system.</p> <p>For more information, see “Send All Window” on page 263.</p> <p><b>Note:</b> You can also use <i>Online/Send Changes</i> from the menu bar in AZedit to send changes made to the master controller.</p>
	<p><b>Alpha Copy Icon</b></p> <p>The Alpha Copy icon opens the Copy Alpha window. The Copy Alpha window helps you quickly copy and paste selected alpha or alias names.</p> <p>For example, you could copy all Alpha names and paste them to all Alias names. You may want to do this if you have just added trunking to a stand alone intercom system and must employ using Alias names.</p> <p><b>Note:</b> You can also use <i>Alphas/Advanced Copy Utility...</i> from the menu bar in AZedit to open the Copy Alphas window.</p>
	<p><b>Refresh Alphas Icon</b></p> <p>The Refresh Alphas icon allows you to upload all current alphas from the intercom system to AZedit. Refresh Alphas is only available in ONLINE mode. This allows it to retrieve the most current configuration and status information from the intercom system.</p> <p><b>Note:</b> You can also use <i>Alphas/Refresh Alphas</i> from the menu bar in AZedit to perform a Refresh Alphas.</p>
	<p><b>Paste Icon</b></p> <p>The Paste icon pastes the contents of the Windows Clipboard into the current configuration window (if that window is of the same type as the one that was copied).</p> <p>The paste command is only used after the copy command. (To select certain items you want to paste, or to simultaneously paste to multiple windows, you can use Paste Special instead of Paste.)</p> <p><b>Note:</b> You can also use <i>Edit/Paste</i> from the menu bar in AZedit to paste selected items into the setup configuration.</p>
	<p><b>Preferences Icon</b></p> <p>The Preferences icon opens the Preferences window. Preferences are optional user settings for AZedit.</p> <p>For more information, see “Application Preferences Window” on page 73.</p> <p><b>Note:</b> You can also use <i>Options/Preferences</i> from the menu bar in AZedit to access the Preferences window.</p>
	<p><b>Redo Icon</b></p> <p>The Redo icon allows you to redo up to 20 consecutive changes you previously canceled with the Undo Button.</p> <p>The Redo command is cleared every time you save your setup file or send your changes to the intercom system.</p> <p><b>Note:</b> You can also use <i>Edit/Redo</i> from the menu bar in AZedit to perform a redo.</p>
	<p><b>Resources Icon</b></p> <p>The Resources icon opens the resource page of the Intercom Configuration window. In this window you can configure your intercom system manually or use the Intercom Sizing Wizard to help in configuring your system.</p> <p>For more information, see “Resources Page” on page 49.</p> <p><b>Note:</b> You can also use <i>Options/Intercom Configuration</i> from the menu bar in AZedit to access the Resources window.</p>
	<p><b>Intercom Icon</b></p> <p>The Intercom icon opens the Select Intercom window. From this window, you can change the intercom system you are viewing.</p> <p><b>Note:</b> You can also use <i>Authentication/Change Intercom</i> to change intercom systems.</p>





	<p><b>Send Icon (Send File)</b></p> <p>The Send icon lets you select a file from disk, view its contents, and then send it to the intercom system. If the file is a complete setup file, all configuration information in the intercom system is overwritten. If the file was created using the Partial Save command, only those items contained in the file are overwritten in the intercom system.</p> <p>Send is only available in ONLINE mode.</p> <p><b>Note:</b> You can also use <i>Edit/Send File</i> from the menu bar in AZedit to access send file.</p>		<p><b>Authentication Icon</b></p> <p>The Authentication icon opens the authentication configuration window.</p> <p>For more information, see “Authentication Configuration Window” on page 66.</p> <p><b>Note:</b> You can also use <i>Authentication/Configuration...</i> from the menu bar in AZedit to access the authentication configuration window.</p>
	<p><b>SNMP Icon</b></p> <p>The SNMP icon opens the SNMP Configuration window. From this window you can configure SNMP to work with your intercom system.</p> <p>For more information, see “SNMP Configuration Window” on page 70.</p> <p><b>Note:</b> You can also use <i>Options/SNMP Configuration...</i> from the menu bar in AZedit to open the SNMP Configuration window.</p>		<p><b>Connected Users Icon</b></p> <p>The Connected Users icon opens the Connected Users window, which displays a list of all users currently logged on to the Intercom.</p> <p>For more information, see “Connected Users Window” on page 247.</p> <p><b>Note:</b> You can also use <i>Authentication/Show Connected Users</i> from the menu bar in AZedit to open the Connected Users window.</p>
	<p><b>Toolbar Icon</b></p> <p>The Toolbar icon displays or hides the Standard Toolbar.</p> <p><b>Note:</b> You can also use <i>View/Standard Toolbar</i> from the menu bar in AZedit to show or hide the toolbar.</p>		<p><b>Connect Icon</b></p> <p>The Connect icon connects the intercom system when AZedit is in FILE mode. Before connecting, the program checks to see if you have made any changes to your current intercom setup file. If there are changes, you can cancel the connection and save your file before connecting. If there are no changes, the current intercom system setup file is immediately upload from the intercom system master controller, and this overwrites any setup file currently open. After you are connected, ONLINE is displayed in the lower-right corner of the window. In ONLINE mode, you can view the intercom system configuration and make changes, and you can also check various intercom statistics, such as which crosspoints are closed, which keys are active on a specific keypanel, the versions of firmware in various system devices, etc.</p> <p><b>Note:</b> You can also use <i>Online/Connect</i> from the menu bar in AZedit to connect the AZedit to the intercom system.</p>
	<p><b>Toolbars Drop Down Menu Icon</b></p> <p>The Toolbars drop down menu displays a list of the different types of toolbars available to show or hide in AZedit.</p> <p>You can show or hide:</p> <ul style="list-style-type: none"> <li>• Standard toolbar</li> <li>• Standard 2 toolbar</li> <li>• Navigation toolbar</li> <li>• Navigation 2 toolbar</li> <li>• Status Bar</li> <li>• Key Assignment Grid</li> </ul>		<p><b>Copy Icon</b></p> <p>The Copy icon copies the entire window content you are currently viewing.</p> <p><b>Note:</b> You can also use <i>Edit/Copy</i> from the menu bar in AZedit to perform a copy.</p>
	<p><b>What's New Icon</b></p> <p>The What's New icon opens the developer's notes that describe the features, by version, within the AZedit application.</p> <p><b>Note:</b> You can also use <i>Help/What's New</i> from the menu bar in AZedit to access the What's New document.</p>		<p><b>Create Shortcut Icon</b></p> <p>The Create Shortcut button opens the Create Desktop Shortcut window. You can create a shortcut on your desktop to the intercom system.</p> <p>For more information, see “Create Desktop Shortcut Window” on page 248.</p> <p><b>Note:</b> You can also use <i>Authentication/Create Shortcut</i> from the menu bar in AZedit to create a shortcut for AZedit on the desktop.</p>







	<p><b>Cut Icon</b></p> <p>The Cut icon cuts selected information and temporarily places it on the clipboard until you paste it to a different field.</p> <p><b>Note:</b> If you cut information and do not paste it before cutting more information, the original information cut is permanently lost.</p> <p><b>Note:</b> You can also use <i>Edit/Cut</i> from the menu bar in AZedit to perform a cut.</p>
	<p><b>Duplicate Alphas Icon</b></p> <p>The Duplicates? icon checks for duplicate alphas in your system after you have been modifying the setup file. By default, AZedit prompts to check for duplicate alphas whenever you open a file from disk.</p> <p>In a large-scale intercom system, the possibility exists that you may accidentally assign the same name (alpha) to two different resources. Two resources of the same type can NEVER have the same name (for example, two intercom ports cannot have the name DIR1).</p> <p>For more information, see “Check For Duplicate Alphas Window” on page 265.</p> <p><b>Note:</b> You can also use <i>Alphas/Check for Duplicate Alphas</i> from the menu bar in AZedit to check for duplicate alphas.</p>
	<p><b>Ethernet Configuration Icon</b></p> <p>The Ethernet Configuration icon opens the Ethernet Setup window. Configure the Ethernet connection for the intercom system.</p> <p>For more information, see “Ethernet Settings” on page 39.</p> <p><b>Note:</b> You must be connected to the intercom using a serial or USB connection to configure Ethernet for the intercom system</p> <p><b>Note:</b> You can also use <i>Options/Ethernet Configuration</i> from the menu bar in AZedit to open the Ethernet Configuration window.</p>
	<p><b>Font Drop Down Menu Icon</b></p> <p>The Font drop down menu displays several different text sizes for viewing the setup windows. If you select one of the larger text sizes, the complete setup information does not fit on your window. In this case, scroll bars appear on the window.</p>

	<p><b>Shrink Icon</b></p> <p>The Shrink icon gives you the ability to manually decrease the size of the font in the application with the click of the mouse.</p> <p><b>Note:</b> You can also use <i>View/Font Size</i> from the menu bar in AZedit to set the size of text displayed in windows.</p>
	<p><b>Grow Icon</b></p> <p>The Grow icon gives you the ability to manually increase the size of the font in the application with the click of the mouse.</p> <p><b>Note:</b> You can also use <i>View/Font Size</i> from the menu bar in AZedit to set the size of text displayed in windows.</p>
	<p><b>GPIO-16 Icon</b></p> <p>The GPIO-16 icon opens the GPIO-16 Configuration window. From this window you can setup various configuration options, such as IP Addressing, Ethernet settings, and Master Controller settings.</p> <p>For more information, see “GPIO-16 Configuration Window” on page 62.</p> <p><b>Note:</b> You can also use <i>Options/GPIO-16 Configuration</i> from the menu bar in AZedit to open the GPIO-16 window.</p>



	<p><b>Assignment Grid Icon</b></p> <p>The Key Assignment Grid icon provides easy access to key assignments for programming keypanels. To use the grid, click the assignment type combo box and select the assignment type from the list that appears. Based on the assignment selected, the alphas appear in the grid below. Click the border of the grid's outer frame and drag the mouse to resize the grid. Once the alpha appears that you wish to assign, place the mouse pointer over the assignment, hold down the left mouse button, and drag the assignment to the desired key (either talk or listen).</p> <p>The assignment types are abbreviated:</p> <ul style="list-style-type: none"> <li>PP – Point-to-Point</li> <li>PL – Party Line</li> <li>IFB – Interrupt Fold-Back</li> <li>IFB SL – Interrupt Fold-Back Special List</li> <li>SL – Special List</li> <li>GPIout – GPI output</li> <li>ISO – Isolate</li> <li>UPL – Universal Programming Language (resource)</li> <li>SPCL – Special Function (e.g. AL, AF, AC, etc...)</li> </ul> <p>For more information, see “Key Assignment Grid Window” on page 272.</p> <p><b>Note:</b> You can also use <i>View/Key Assignment Grid</i> from the menu bar in AZedit to open the Assignment Grid.</p>
	<p><b>Forward Icon</b></p> <p>The Forward icon allows the user to follow the same sequence of windows used to go back. Forward must be used in conjunction with Back.</p> <p><b>Note:</b> You can also use <i>View/Go Forward</i> from the menu bar in AZedit to advance to the next window.</p>
	<p><b>NavBar 2 Icon</b></p> <p>The NavBar 2 icon allows the user to show or hide the Navigation 2 Toolbar.</p> <p><b>Note:</b> You can also use <i>View/Navigation Toolbar 2</i> from the menu bar in AZedit to show or hide the Navigation Toolbar 2.</p>
	<p><b>NavBar Icon</b></p> <p>The Nav Bar icon allows the user to show or hide the Navigation Toolbar.</p> <p><b>Note:</b> You can also use <i>View/Navigation Toolbar</i> from the menu bar in AZedit to show or hide the Navigation Toolbar.</p>




	<p><b>Paste Special Icon</b></p> <p>The Paste Special icon opens the Paste Special window. Paste Special is available in the Edit menu. It gives you greater control over pasting than you get when using the Paste command. You can paste portions of the Windows Clipboard to a window. On the other hand, you can paste to multiple windows.</p> <p>For more information, see “Paste Special Window” on page 251.</p> <p><b>Note:</b> You can also use <i>Edit/Paste Special</i> from the menu bar in AZedit to open the Paste Special window.</p>
	<p><b>Back Icon</b></p> <p>The Back icon allows you to go to previously viewed (up to 20 consecutively previous) windows.</p> <p><b>Note:</b> You can also use <i>View/Go Back</i> from the menu bar in AZedit to return to the previous window.</p>
	<p><b>Refresh Icon</b></p> <p>The Refresh icon restores the current configuration and status information about an intercom station in AZedit. Use Refresh with any window that provides status information.</p> <p>For example, if you are viewing a particular Keypanel/ Port window, by selecting Refresh you can see the keys currently activated. For each key that is ON, a red dot appears above the key.</p> <p>The windows refresh automatically every few seconds. However, the time between refreshes can vary, depending on intercom activity, and the size of the intercom system. Use Refresh to ensure you are viewing the most recent information for a particular window.</p> <p><b>Note:</b> You can also use <i>View/Refresh</i> from the menu bar in AZedit to perform a refresh.</p>
	<p><b>Search Icon</b></p> <p>The Search icon opens the Search For Key Assignment window. From this window you can search for all ports or resources in an intercom system. Search (and Replace) helps you change ports without searching for all ports that are affected. Search is sometimes useful, for example, when you are moving a user from one intercom port to another. You have to search for all keypanels with keys assigned to that person's old port, and change them to the new port.</p> <p>For more information, see “Search For Key Assignment Window” on page 267.</p> <p><b>Note:</b> You can also use <i>Edit/Search for key assignment</i> from the menu bar in AZedit to open the search for key assignment window.</p>

	<p><b>User Icon</b></p> <p>The User icon opens the Select User window. From this window, switch User profiles logged onto the intercom system.</p> <p>For more information, see “Select User Window” on page 245.</p> <p><b>Note:</b> You can also use <i>Authentication/Change User</i> from the menu bar in AZedit to open the Select User window.</p>
	<p><b>Server Status Icon</b></p> <p>The Server Status icon turns Server Mode ON and OFF. This button is only available in ONLINE mode.</p> <p>For more information about AZedit modes of operation, see “Modes of Operation” on page 9.</p> <p><b>Note:</b> You can also use <i>Online/Server Mode</i> from the menu bar in AZedit to switch to Server Mode.</p>
	<p><b>Status Bar Icon</b></p> <p>The Status Bar icon shows or hides the status bar located at the bottom of the AZedit application window.</p> <p>For more information, see “Status Bar” on page 13.</p> <p><b>Note:</b> You can also use <i>View/Status Bar</i> from the menu bar in AZedit to advance to the next window.</p>
	<p><b>Toolbar2 Icon</b></p> <p>The Toolbar2 icon displays or hides the Standard Toolbar2.</p> <p><b>Note:</b> You can also use <i>View/Standard Toolbar2</i> from the menu bar in AZedit to show or hide the Standard Toolbar2.</p>
	<p><b>Undo Icon</b></p> <p>The Undo icon can undo up to 20 consecutive previously made changes. The Undo command is cleared every time you save your setup file or send your changes to the intercom system in ONLINE mode.</p> <p><b>Note:</b> You can also use <i>Edit/Undo</i> from the menu bar in AZedit to undo previous modifications.</p>
	<p><b>Error Information Icon</b></p> <p>The Error Information icon opens the Error Information window, which displays enhanced error information on recently occurring errors.</p> <p><b>Note:</b> You can also use <i>Help/Error Information</i> from the menu bar in AZedit to open the Error Information window.</p>





## Navigation Toolbars


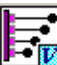



The **Navigation Toolbars** at the bottom of the AZedit application window help you to maneuver around the application easily and quickly. Each icon represents a different window that you can open by simply clicking. Besides being able to jump to different windows within AZedit, you can customize the navigation toolbars to have only the icons you use. For example, you can customize the navigation bar to have an icon for the Keypanel/Ports window, the RVON and all the status windows. In addition, there is a second navigational bar available, if needed.







Both the Navigation and Navigation 2 Toolbars can either be docked to the bottom of the window or float separate from the window. By default, the Navigation Toolbars are docked to the bottom of the application window.






	<p><b>AGRPs Alpha Icon</b></p> <p>The AGRPs Alpha icon opens the Assignment Group Alphas window. From this window you can create or modify descriptions and alphas for assignment groups in your intercom system.</p> <p><b>Note:</b> You can also get to the Assignment Group Alphas window by selecting <i>Alphas/Assignment Groups</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>
	<p><b>DIMs Description Icon</b></p> <p>The DIMs Description icon opens the Inter-panel Dim Descriptions window. From this window you can create or modify the description for inter-panel DIMs in your intercom system.</p> <p><b>Note:</b> You can also get to the DIMs Description window by selecting <i>Alphas/Dim Table</i> from the AZedit menu bar.</p> <p>For more information, see “GPI Input and DIM Description Windows” on page 193.</p>
	<p><b>Gains Drop Down Menu Icon</b></p> <p>The Gains drop down menu icon displays a list of three options: Crosspoint, Party Line, and I/O Gains windows.</p> <p>From these windows you can modify gain settings for crosspoints, party lines, and inputs/outputs in your intercom system.</p> <p><b>NOTE:</b> You can also get to the Gains drop down menu by selecting <i>System/Gains</i> from the AZedit menu bar.</p> <p>For more information, see “Crosspoint Gains Window” on page 175, “Party Line Gains Window” on page 178, or “Input/Output Gains Window” on page 181.</p>








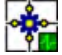




	<p><b>GPIs Icon</b></p> <p>The GPIs Icon opens the GPI Input window. From this window, you can designate or modify the port, alpha, the key number, and the key type for GPIs in your intercom system.</p> <p><b>Note:</b> You can also get to the GPI Input window by selecting <i>System/GPI Input</i> from the AZedit menu bar.</p> <p>For more information, see “GPI Input Window” on page 129.</p>
	<p><b>IFBs Alphas Icon</b></p> <p>The IFB Alphas icon opens the IFB Alphas window. From this window you can modify the description, alpha, and alias of IFBs in your intercom system.</p> <p><b>Note:</b> You can also get to the IFB Alphas window by selecting <i>Alphas/IFB</i> from the AZedit menu bar</p> <p>For more information, see “Alpha Windows” on page 189.</p>
	<p><b>IFB Drop Down Menu Icon</b></p> <p>The IFB Drop Down Menu icon opens the IFBs window. From this window you can view, create, and modify IFBs in the intercom system.</p> <p>Use the drop down arrow to display a list of four options to choose to view. These include:</p> <ul style="list-style-type: none"> <li>• IFB Priority</li> <li>• PGM Listen Source</li> <li>• IFB Listen Destination</li> <li>• IFB Special List</li> </ul> <p>From these windows you can view the IFB priorities, configure the PGM Listen Source, IFB listen destinations, or the IFB special lists windows.</p> <p>For more information, see “IFB Priorities Window” on page 116, “Program Listen Source Window” on page 123, “IFB Listen Destination Window” on page 118, or “IFB Special Lists Window” on page 120.</p>
	<p><b>IFB SL Alphas Icon</b></p> <p>The IFB SL Alpha icon opens the IFB Special List Alphas window. From this window you can rename default alphas, aliases, and descriptions for IFB Special Lists in your intercom system.</p> <p><b>Note:</b> You can also get to the IFB SL Alphas window by selecting <i>Alphas/IFB Special List</i> from the AZedit menu bar</p> <p>For more information, see “Alpha Windows” on page 189.</p>







	<p><b>I/O Cards Alphas Icon</b></p> <p>The I/O Cards Alpha icon opens the IO Card Descriptions window. From this window, you can modify I/O card descriptions for cards in your intercom system.</p> <p><b>Note:</b> You can also get to the I/O Card Alphas window by selecting <i>Alphas/I/O Card</i> from the AZedit menu bar</p> <p>For more information, see “I/O Card Description Window” on page 195.</p>
	<p><b>I/O Card Versions Icon</b></p> <p>The I/O Card Versions icon opens the IO Card Versions window. From this window, you can view I/O card versions and upgrade I/O card firmware versions.</p> <p><b>Note:</b> You can also get to the I/O Card Versions window by selecting <i>Status/Software Versions/I/O Cards</i> from the AZedit menu bar</p> <p>For more information, see “I/O Card Version Information Window” on page 233.</p>
	<p><b>ISO Alphas Icon</b></p> <p>The ISO Alpha icon opens the ISO Alphas window. From this window you can rename default alphas, aliases and descriptions for ISOs in your intercom system.</p> <p><b>Note:</b> You can also get to the ISO Alphas window by selecting <i>Alphas/ISO</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>
	<p><b>Keypanels/Ports Status Icon</b></p> <p>The Keypanel/Ports Status icon opens the Keypanel/Ports Status window. From this window, you can view the status of the Keypanel/Ports and upgrade keypanel firmware versions.</p> <p><b>Note:</b> You can also get to the Keypanel/Ports Status window by selecting <i>Status/Keypanel/Ports</i> from the AZedit menu bar.</p> <p>For more information, see “Port Status Window” on page 200.</p>
	<p><b>Keypanel/Ports Icon</b></p> <p>The Keypanel/Ports icon opens the Keypanels/Ports window. From this window, you can configure keypanels in your intercom system.</p> <p><b>Note:</b> You can also get to the Keypanel/Ports window by selecting <i>System/Keypanel Assignment</i> from the AZedit menu bar.</p> <p>For more information, see “Keypanels/Ports Window” on page 86.</p>



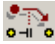


	<p><b>Listen Destination Icon</b></p> <p>The Listen Destination icon opens the Listen Destination window. From this window you can configure listener ports and output ports for IFBs in your intercom system.</p> <p>For more information, see “IFB Listen Destination Window” on page 118.</p>
	<p><b>Master Controller Version Icon</b></p> <p>The Master Controller Version icon opens the Master Controller Version window. From this window you can view Master Controller version information and upgrade the master controller firmware.</p> <p>For more information, see “Master Controller Version Information Window” on page 232.</p>
	<p><b>PAPs and LCPs Descriptions Icon</b></p> <p>The PAPs and LCPs Description icon opens the PAP and LCP Descriptions window. From this window you can create or modify the descriptions for PAPs or LCP-102s in your intercom system.</p> <p>For more information, see “Edit PAP/LCP Description Window” on page 198.</p>
	<p><b>PAPs and LCPs Status Icon</b></p> <p>The PAPs and LCPs Status icon opens the PAP and LCP Status window. From this window you can view the status for PAPs or LCPs in your intercom system.</p> <p><b>Note:</b> You can also get to the PAPs and LCP-102 by selecting <i>Status/PAP and LCP-102</i> from the AZedit menu bar</p> <p>For more information, see “PAP &amp; LCP-102 Status Window” on page 214.</p>
	<p><b>PL Gains Icon</b></p> <p>The PL Gains icon opens the Party Line Gains window. From this window you can modify gain settings for party lines in your intercom system.</p> <p><b>Note:</b> You can also get to the PL Gains window by selecting <i>System/Gains/Party Line Gains</i> from the AZedit menu bar.</p> <p>For more information, see “Party Line Gains Window” on page 178.</p>
	<p><b>Keypanel/Ports Alphas Icon</b></p> <p>The Keypanel/Ports Alpha icon opens the Keypanel/Port Alphas window. From this window you can create or modify descriptions, output alphas, input alphas, and aliases for keypanel/ports in your intercom system.</p> <p><b>Note:</b> You can also get to the Keypanel/Port Alphas window by selecting <i>Alphas/Keypanels/Ports</i> from the AZedit menu bar.</p> <p>For more information, see “Port Alphas Window” on page 184.</p>

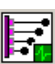




	<p><b>RVON Connection Status Icon</b></p> <p>The RVON Connection Status icon opens the RVON Connection Status window. From this window you can display Card/Channel, Connection, VOIP, Network, Errors, and Pass-Through status information for RVON devices in your intercom system.</p> <p><b>Note:</b> You can also get to the RVON Connection window by selecting <i>Status/RVON Connection</i> from the AZedit menu bar.</p> <p>For more information, see “RVON Connection Status Window” on page 224.</p>
	<p><b>RYs Icon</b></p> <p>The RYs icon opens the GPI Outputs window. From this window you can determine input and output ports, as well as individual scroll enable settings.</p> <p><b>Note:</b> You can also get to the GPI Output window by selecting <i>System/GPI Output</i> from the AZedit menu bar.</p> <p>For more information, see “GPI Output Window” on page 125.</p>
	<p><b>SLs Icon</b></p> <p>The SLs icon opens the Special Lists window. From this window you can create and configure special lists in your intercom system.</p> <p><b>Note:</b> You can also get to the Special Lists window by selecting <i>System/Special Lists</i> from the AZedit menu bar.</p> <p>For more information, see “Special Lists Window” on page 108.</p>
	<p><b>UIO Status Icon</b></p> <p>The UIO Status icon opens the UIO Status window. From this window you can view the status for UIO-256 and GPIO-16 units in your intercom system.</p> <p><b>Note:</b> You can also get to the UIO Status window by selecting <i>Status/UIO</i> from the AZedit menu bar.</p> <p>For more information, see “UIO-256 Status Window” on page 216.</p>
	<p><b>URs Alphas Icon</b></p> <p>The URs Alpha icon opens the UPL Resource Alphas window. From this window you can create or modify the description, alpha, and alias for UPL resources in your intercom system.</p> <p><b>Note:</b> You can also get to the UPL Resources window by selecting <i>Alphas/UPL Resource</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>






	<p><b>Versions Drop Down Menu Icon</b></p> <p>The Versions Drop Down Menu icon opens the Select Device window. From this window, select the device for which you want to view status. Options include Master Controllers, Keypanels, I/O Cards, or GPIO-16s.</p> <p>Use the drop down arrow to display a list of four options to choose to view. These include:</p> <ul style="list-style-type: none"> <li>• Master Controllers</li> <li>• I/O Cards</li> <li>• Keypanels</li> <li>• GPIO-16s</li> </ul>
	<p><b>XCP Status Icon</b></p> <p>The XCP Status icon opens the Crosspoint Controller Status window. From this window, you can view the status of crosspoints in your intercom system.</p> <p>For more information, see “Crosspoint Status Window” on page 151.</p>
	<p><b>XCP Icon</b></p> <p>The XCP icon opens the Crosspoints Status window. From this window you can create and configure crosspoints used in your intercom system.</p> <p><b>Note:</b> You can also get to the Crosspoint Status window by selecting <i>System/Crosspoint</i> from the AZedit menu bar.</p> <p>For more information, see “Crosspoint Status Window” on page 151.</p>
	<p><b>GPIOs Icon</b></p> <p>The GPIOs icon opens the GPIO-16s window. From this window you can enable/disable Ethernet, change IP Addresses, and view information concerning GPIO-16 units in your intercom system.</p> <p><b>Note:</b> You can also get to the GPIO-16 window by selecting <i>System/GPIO-16</i> from the AZedit menu bar.</p> <p>For more information, see “GPIO-16s Window” on page 136.</p>
	<p><b>DBX Status Icon</b></p> <p>The DBX Status icon opens the DBX Links Status window. From this window you can view the status of DBX cards installed and upgrade the firmware.</p> <p><b>Note:</b> You can also get to the DBX Links Status window by selecting <i>Status/DBX Links</i> from the AZedit menu bar.</p> <p>For more information, see “DBX Link Status Window” on page 208.</p>



	<p><b>Trunks Status Icon</b></p> <p>The Trunks Status icon opens the Trunk Status window. From this window can view the status of trunked lines in your intercom system.</p> <p><b>Note:</b> You can also get to the Trunk Status window by selecting <i>Status/Trunks</i> from the AZedit menu bar.</p> <p>For more information, see “Trunk Inspection Window” on page 220.</p>
	<p><b>AGRPs Icon</b></p> <p>The AGRPs icon opens the Assignment Groups window. From this window you can create, modify, and delete assignment groups in your intercom system.</p> <p><b>Note:</b> You can also get to the Assignment Groups window by selecting <i>System/Assignment Groups</i> from the AZedit menu bar.</p> <p>For more information, see “Assignment Group Window” on page 139.</p>
	<p><b>DIMs Icon</b></p> <p>The DIMs icon opens the Inter-panel Dim Tables window. From this window you can add and remove ports to and from DIM tables in your intercom system.</p> <p><b>Note:</b> You can also get to the Inter-panel DIM Table window by selecting <i>System/Dim Table</i> from the AZedit menu bar.</p> <p>For more information, see “Inter-Panel Dim Table Window” on page 156.</p>
	<p><b>GPIs Alpha Icon</b></p> <p>The GPIs Alpha icon opens the GPI Input Description window. From this window you can change the default description of the GPI Input.</p> <p><b>Note:</b> You can also get to the GPI Input Descriptions window by selecting <i>Alphas/GPI Input</i> from the AZedit menu bar.</p> <p>For more information, see “GPI Input and DIM Description Windows” on page 193.</p>
	<p><b>Icoms Status Icon</b></p> <p>The Icoms Status icon opens the Remote Intercoms Status window.</p> <p>This window displays a two-column status window and four operations (radio buttons) that can be performed from this window. The text description of options 1 and 3 can change depending on the intercom selected in the status list.</p> <p><b>Note:</b> You can also get to the Remote Intercom Status window by selecting <i>Status/Remote Intercom</i> from the AZedit menu bar.</p> <p>For more information, see “Remote Intercoms Status Window” on page 222.</p>



	<p><b>Priorities Icon</b></p> <p>The Priorities icon opens the IFB Priorities window. From this window, you can configure IFB priorities for selected IFB assignments in your intercom system.</p> <p>For more information, see “IFB Priorities Window” on page 116.</p>
	<p><b>IFBs Icon</b></p> <p>The IFBs icon opens the IFBs window. From this window you can configure scroll enable actions, input ports, output ports, DIM level, and listen source ports.</p> <p>For more information, see “IFBs Window” on page 111.</p>
	<p><b>IFB SL Icon</b></p> <p>The IFB SL icon opens the IFB Special Lists window. From this window you can create and configure IFB special lists for your intercom system.</p> <p>For more information, see “IFB Special Lists Window” on page 120.</p>
	<p><b>I/O Cards Status Icon</b></p> <p>The I/O Cards Status icon opens the IO Card Status window. From this window you can view the status of the I/O cards in the intercom system and upgrade firmware for most of the cards in your intercom system.</p> <p><b>Note:</b> You can also get to the I/O Cards Status window by selecting <i>Status/I/O Cards</i> from the AZedit menu bar.</p> <p>For more information, see “I/O Card Status Window” on page 212.</p>
	<p><b>IO Gains Icon</b></p> <p>The IO Gains icon opens the IO Card Gains window. From this window you can set or modify gain levels for IO cards in your intercom system.</p> <p><b>Note:</b> You can also get to the I/O Gains window by selecting <i>System/Gains/Input / Output Gains</i> from the AZedit menu bar.</p> <p>For more information, see “Input/Output Gains Window” on page 181.</p>
	<p><b>ISOs Icon</b></p> <p>The ISOs icon opens the ISOs window. From this window you can create and configure ISO assignments in your intercom system.</p> <p><b>Note:</b> You can also get to the ISOs window by selecting <i>System/ISO</i> from the AZedit menu bar.</p> <p>For more information, see “ISO Window” on page 132.</p>

	<p><b>KPs Version Icon</b></p> <p>The KPs Version icon opens the Keypanel Versions Information window. From this window you can view keypanel/port versions and upgrade firmware.</p> <p><b>Note:</b> You can also get to the Keypanel Version Information window by selecting <i>Status/Software Versions/Keypanels</i> from the AZedit menu bar.</p> <p>For more information, see “Keypanel Version Information Window” on page 234.</p>
	<p><b>LCPs Icon</b></p> <p>The LCPs icon opens the LCP-102s window. From this window you can configure LCPs in your intercom system.</p> <p><b>Note:</b> You can also get to the LCP-102s window by selecting <i>System/LCP-102 Assignment</i> from the AZedit menu bar.</p> <p>For more information, see “PAP &amp; LCP-102 Status Window” on page 214.</p>
	<p><b>Logs Icon</b></p> <p>The Logs icon opens the Log Viewer window. From this window you can view log files (if enabled) in your intercom system. You can view these files by date and/or times.</p> <p><b>Note:</b> You can also get to the Log Viewer window by selecting <i>Logging/View Log</i> from the AZedit menu bar.</p> <p>For more information, see “Log Viewer Window” on page 236.</p>
	<p><b>Standby Status Icon</b></p> <p>The Standby Status icon opens the Standby Master Controller Status window. From this window you can view the standby master controller status and upgrade firmware.</p> <p><b>Note:</b> You can also get to the Standby Master Status window by selecting <i>Status/Standby Controller</i> from the AZedit menu bar.</p> <p>For more information, see “Standby Master Controller Status Window” on page 206.</p>
	<p><b>PAP Icon</b></p> <p>The PAP icon opens the PAP-32 window. From this window you can configure PAP-32s for your intercom system.</p> <p><b>Note:</b> You can also get to the Crosspoint Status window by selecting <i>System/Crosspoint</i> from the AZedit menu bar.</p> <p>For more information, see “PAP-32 Window” on page 145.</p>

	<p><b>PL Alphas Icon</b></p> <p>The PL Alphas icon opens the Party Line Alphas window. From this window you can create or modify party line descriptions, alphas, and aliases.</p> <p><b>Note:</b> You can also get to the Party Line Alphas window by selecting <i>Alphas/Party Line</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>
	<p><b>PLs Icon</b></p> <p>The PLs icon opens the Party Line window. From this window you can configure party lines for your intercom system.</p> <p><b>Note:</b> You can also get to the Party Lines window by selecting <i>System/Party Line</i> from the AZedit menu bar.</p> <p>For more information, see “Party Lines Window” on page 104.</p>
	<p><b>RVON Icon</b></p> <p>The RVON icon opens the RVON Configuration window. From this window you can configure the origination and destination points, device types, codec information, and serial pass through information for RVON devices in your intercom system.</p> <p><b>Note:</b> You can also get to the RVON Configuration window by selecting <i>System/Miscellaneous/RVON Configuration</i> from the AZedit menu bar.</p> <p>For more information, see “RVON Configuration Window” on page 58.</p>
	<p><b>RYs Alpha Icon</b></p> <p>The RYs Alpha icon opens the GPI Output Alphas window. From this window you can create or modify descriptions, alphas, and aliases for GPI Outputs in your intercom system.</p> <p><b>Note:</b> You can also get to the GPI Output Alphas window by selecting <i>Alphas/GPI Output</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>
	<p><b>SL Alphas Icon</b></p> <p>The SL Alphas icon opens the Special List Alphas window. From this window you can create or modify descriptions, alphas, and aliases for special lists in your intercom system.</p> <p><b>Note:</b> You can also get to the Special List Alphas window by selecting <i>Alphas/Special List</i> from the AZedit menu bar.</p> <p>For more information, see “Alpha Windows” on page 189.</p>

	<p><b>TM Status Icon</b></p> <p>The TM Status icon opens the Trunk Master Status window. From this window you can view the trunk master status for your intercom system.</p> <p><b>Note:</b> You can also get to the Trunk Master Status window by selecting <i>Status/Trunk Master</i> from the AZedit menu bar.</p> <p>For more information, see “Trunk Master Status Window” on page 218.</p>
	<p><b>UPL Icon</b></p> <p>The UPL icon opens the User Programmable Logic Statements window. From this window you can create, enable, disable, and delete user programmable statements for your intercom system.</p> <p><b>Note:</b> You can also get to the User Programable Logic window by selecting <i>System/UPL Statements</i> from the AZedit menu bar.</p> <p>For more information, see “UPL Statements Window” on page 162.</p>
	<p><b>URs Icon</b></p> <p>The URs icon opens the User Programmable Logic Resources window. From this window you can view and scroll enable user programmable logic resources in your intercom system.</p> <p><b>Note:</b> You can also get to the User Programmable Logic Resources window by selecting <i>System/UPL Resources</i> from the AZedit menu bar.</p> <p>For more information, see “UPL Resources Window” on page 158.</p>
	<p><b>Vox Icon</b></p> <p>The Vox icon opens the Vox Settings window. From this window you can configure vox settings for specific ports in your intercom system.</p> <p><b>Note:</b> You can also get to the Vox Settings window by selecting <i>System/Vox</i> from the AZedit menu bar.</p> <p>For more information, see “VOX Window” on page 171.</p>
	<p><b>XPT Gains Icon</b></p> <p>The XPT Gains icon opens the Crosspoint Gain window. From this window you can set and adjust gains for crosspoints defined in your intercom system.</p> <p><b>Note:</b> You can also get to the Crosspoint Gain window by selecting <i>System/Gains/Crosspoint Gains</i> from the AZedit menu bar.</p> <p>For more information, see “Crosspoint Gains Window” on page 175.</p>

	<p><b>ARPs Icon</b></p> <p>The ARPs icon opens the ARP-32 Assignment window. From this window you can create and modify ARP options for units in your intercom system.</p> <p><b>Note:</b> You can also get to the ARP-32 Assignment window by selecting <i>System/ARP-32 Assignment</i> from the AZedit menu bar.</p> <p>For more information, see “ARP-32 Window” on page 148.</p>
	<p><b>GPIO-16 Version Icon</b></p> <p>The GPIO-16 Version icon opens the GPIO-16 Version Information window. From this window you can view GPIO-16 version information and upgrade the GPIO-16 firmware.</p> <p><b>Note:</b> You can also get to the GPIO-16 Version Information window by selecting <i>Status/Software Versions/GPIO-16</i> from the AZedit menu bar.</p> <p>For more information, see “GPIO-16 Version Information Window” on page 235.</p>

	<p><b>Lstn Src Icon</b></p> <p>The Lstn Src icon opens the Program Listen Source window. From this window you can configure program listen source options for IFBs in your intercom system.</p> <p><b>Note:</b> You can also get to the Program Listen Source window by selecting <i>System/PGM Listen Source</i> from the AZedit menu bar.</p> <p>For more information, see “Program Listen Source Window” on page 123.</p>
	<p><b>Alpha Icon</b></p> <p>The Alpha icon opens the Keypanel/Port Alphas window (see, “Port Alphas Window” on page 184). From this window you can modify keypanel/port descriptions, input alphas, output alphas, and aliases.</p> <p>Use the drop down arrow to display a list of 12 options to choose to view. These include:</p> <ul style="list-style-type: none"> <li>• Party Line</li> <li>• IFB</li> <li>• IFB Special List</li> <li>• Special List</li> <li>• GPI Output</li> <li>• ISO</li> <li>• UPL Resource</li> <li>• Assignment Groups</li> <li>• GPI Input</li> <li>• DIM Tables</li> <li>• I/O Cards</li> <li>• PAP and LCP-102</li> </ul> <p>For more information, see “Alpha Windows” on page 189.</p>




---

## Frequently Used Toolbar Operations

Below are many of the most frequent toolbar operations used in AZedit.

### Show/Hide the Status Bar

To **show/hide the status bar**, do the following:

- > From the View menu, select **Status Bar** or click the status icon.   
*The Status Bar appears (or disappears) at the bottom of the AZedit application window.*

### Show/Hide the Toolbars

**NOTE:** These instructions can be applied to either the Standard Toolbar(2) or the Navigation Toolbar(2).

To **show the toolbar**, do the following:

- > From the View menu, select **Navigation/Standard Toolbar** or **Navigation/Standard Toolbar 2**.  
*A check mark appears next to your selection and the toolbar appears.*

To **hide the toolbar**, do the following:

- > From the View menu, select **Navigation/Standard Toolbar** or **Navigation/Standard Toolbar 2**.  
*The check mark is removed from next to your selection and the toolbar disappears.*

**NOTE:** When the Toolbars are not docked to the application window, you can hide them by clicking the **X** in the upper right corner of the toolbar.

### Dock and Undock the Toolbars


Often you may need to create space on the application desktop, but do not want to lose the usefulness of the toolbars. AZedit gives you the freedom to have docked or floating (undocked) toolbars. The floating toolbars can be moved inside or outside the application desktop, giving you more space to work.

You can dock toolbars on the top, bottom, and sides of the application window.

**NOTE:** These instructions can be applied to either the Standard Toolbar(2) or the Navigation Toolbar(2).

To **undock a toolbar**, do the following:

- > On the far left side of a toolbar, click and drag **the toolbar** away from its docked position.  
*The toolbar becomes detached from the application desktop.*

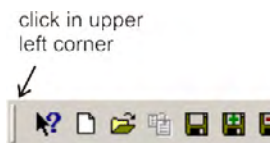

**NOTE:** You can also undock the toolbar by double-clicking the upper-right side of the toolbar. The toolbar returns to its last floating position.

---

To **dock a toolbar**, do the following:

- > On the toolbar, click the **blue banner** and drag it to the desired docking position on the application desktop.  
*The toolbar docks itself to the specified position.*




**NOTE:** You can also dock the toolbar by double-clicking the upper-right side of the toolbar.

### Customize a Toolbar

Customize the Standard, Standard2, Navigation, Navigation2 toolbar to arrange your most used icons

To **customize a toolbar**, do the following:

1. From the view menu, select **Customize Toolbars**.  
*The Customize Toolbars flyout menu appears.*
2. From the flyout menu, select **Standard, Standard 2, Navigation, or Navigation 2**, depending upon the toolbar you want to customize.  
*The Customize Toolbar screen appears.*

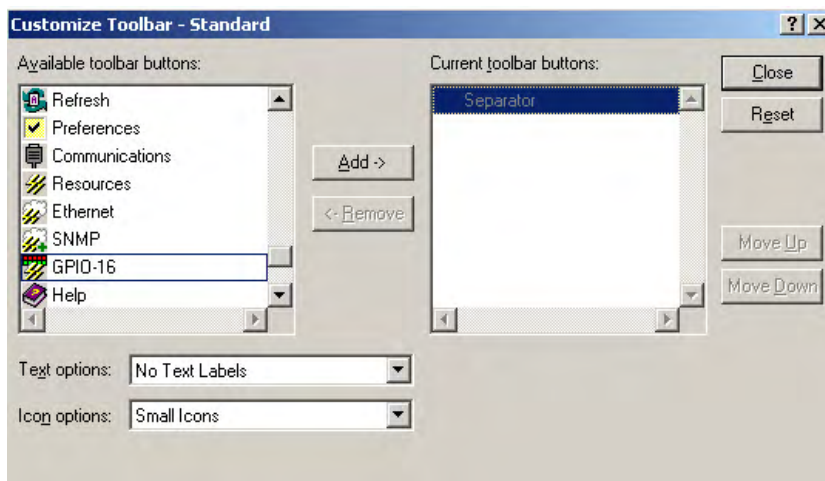

3. From the Available toolbar buttons list, select an **icon** you want to put on the toolbar.

**NOTE:** You can only move one (1) icon at a time when customizing a toolbar.


4. Click **Add**.  
*The icon moves to the Current toolbar buttons list.*

**NOTE:** To remove an icon from an existing toolbar, select the icon in the Current toolbar buttons list, and then click Remove.


5. Once you are finished moving the desired buttons to the current toolbar list, use the **Move Up** and **Move Down** buttons to select the toolbar position for your icons.




- From the Text Options drop down menu, select **Show Text Labels**, **Selective Text Right**, or **No Text Labels**.

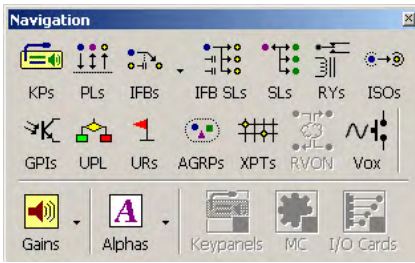

Show Text Labels

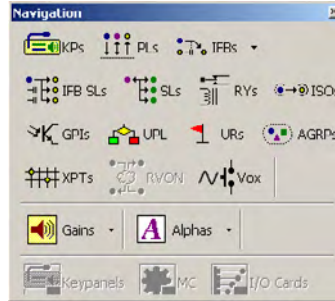


Selective Text Right

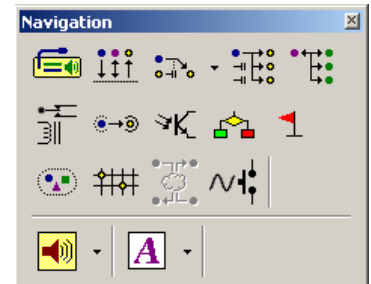

No Text Labels

- From the Icon Options drop down menu, select **Small Icons** or **Large Icons**.

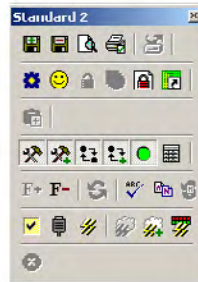

- When you are finished, click **Close**.  
*The toolbar automatically reflects the modifications.*

---


## Frequently Used Column Features

### Resize List Columns

Occasionally, the columns in AZedit are too narrow to display all their information at one time. When this happens, you can resize any column to any width you like.

To **resize a column**, do the following:

1. Open a **window** with a column view.
2. Place your cursor over a column marker, **left-click and hold** (see below).

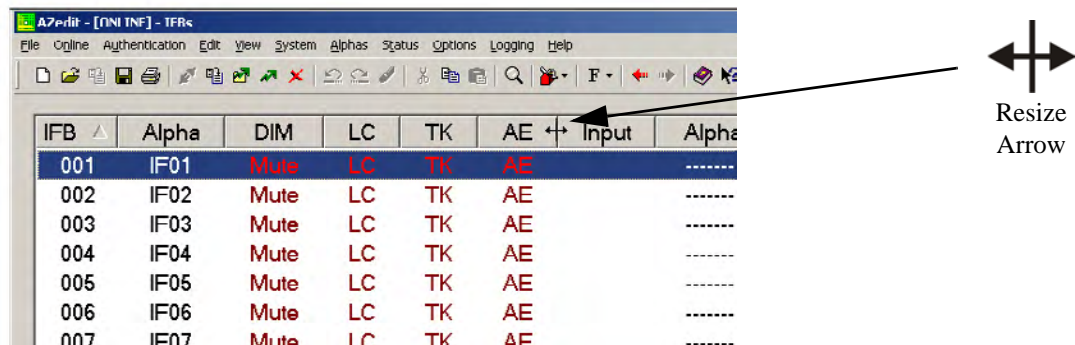

3. Drag your **cursor** to the desired column width.


**NOTE:** You can automatically resize columns to display all the information by double-clicking the resize spot.

## Hide and Display List columns

On many screens with column views, you have the ability to hide columns. This is useful because it allows you to hide columns you rarely use or do not want other users to see.

To **hide columns**, do the following:

1. Open the **window** (with column views) in which you want to hide a column.
2. Right-click the **column header**, and then select **Hide**.  
*The column closes.*

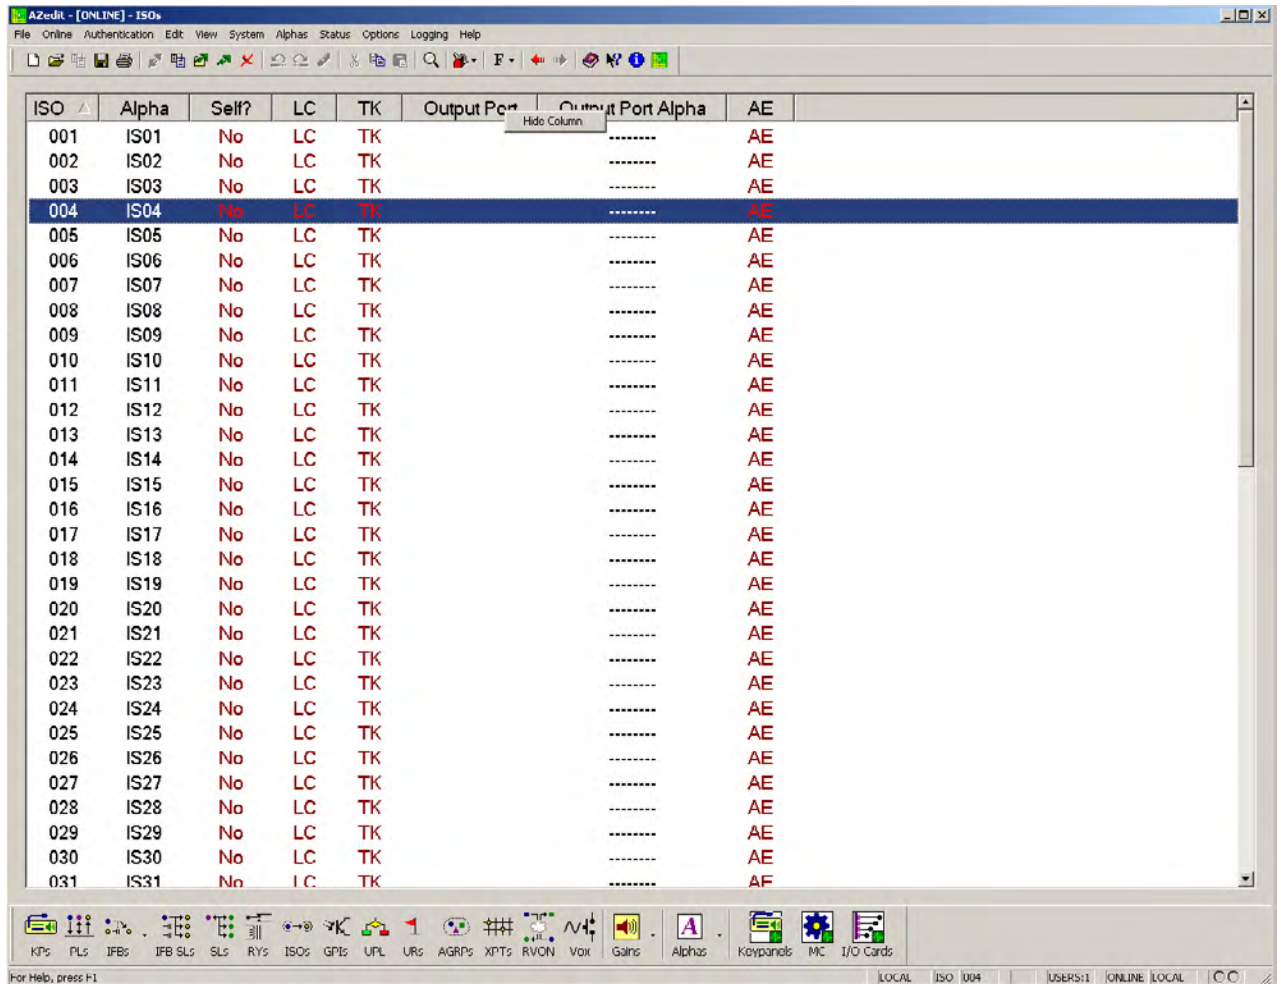

The screenshot shows the AZedit - [ONLINE] - ISOs window. The table contains the following data:


ISO	Alpha	Self?	LC	TK	Output Port	Output Port Alpha	AE
001	IS01	No	LC	TK		-----	AE
002	IS02	No	LC	TK		-----	AE
003	IS03	No	LC	TK		-----	AE
004	IS04	No	LC	TK		-----	AE
005	IS05	No	LC	TK		-----	AE
006	IS06	No	LC	TK		-----	AE
007	IS07	No	LC	TK		-----	AE
008	IS08	No	LC	TK		-----	AE
009	IS09	No	LC	TK		-----	AE
010	IS10	No	LC	TK		-----	AE
011	IS11	No	LC	TK		-----	AE
012	IS12	No	LC	TK		-----	AE
013	IS13	No	LC	TK		-----	AE
014	IS14	No	LC	TK		-----	AE
015	IS15	No	LC	TK		-----	AE
016	IS16	No	LC	TK		-----	AE
017	IS17	No	LC	TK		-----	AE
018	IS18	No	LC	TK		-----	AE
019	IS19	No	LC	TK		-----	AE
020	IS20	No	LC	TK		-----	AE
021	IS21	No	LC	TK		-----	AE
022	IS22	No	LC	TK		-----	AE
023	IS23	No	LC	TK		-----	AE
024	IS24	No	LC	TK		-----	AE
025	IS25	No	LC	TK		-----	AE
026	IS26	No	LC	TK		-----	AE
027	IS27	No	LC	TK		-----	AE
028	IS28	No	LC	TK		-----	AE
029	IS29	No	LC	TK		-----	AE
030	IS30	No	LC	TK		-----	AE
031	IS31	No	LC	TK		-----	AE

**NOTE:** You can only hide one column at a time.

3. Repeat **step 2** for any other columns you want to hide.

To **display hidden columns**, do the following:

1. Right-click the **column header**, and then select **Show Column**.  
*The Show Column popup menu displays.*
2. From the Show Column menu, select the **column** you want to show.  
OR  
Select **All** to show all the hidden columns.

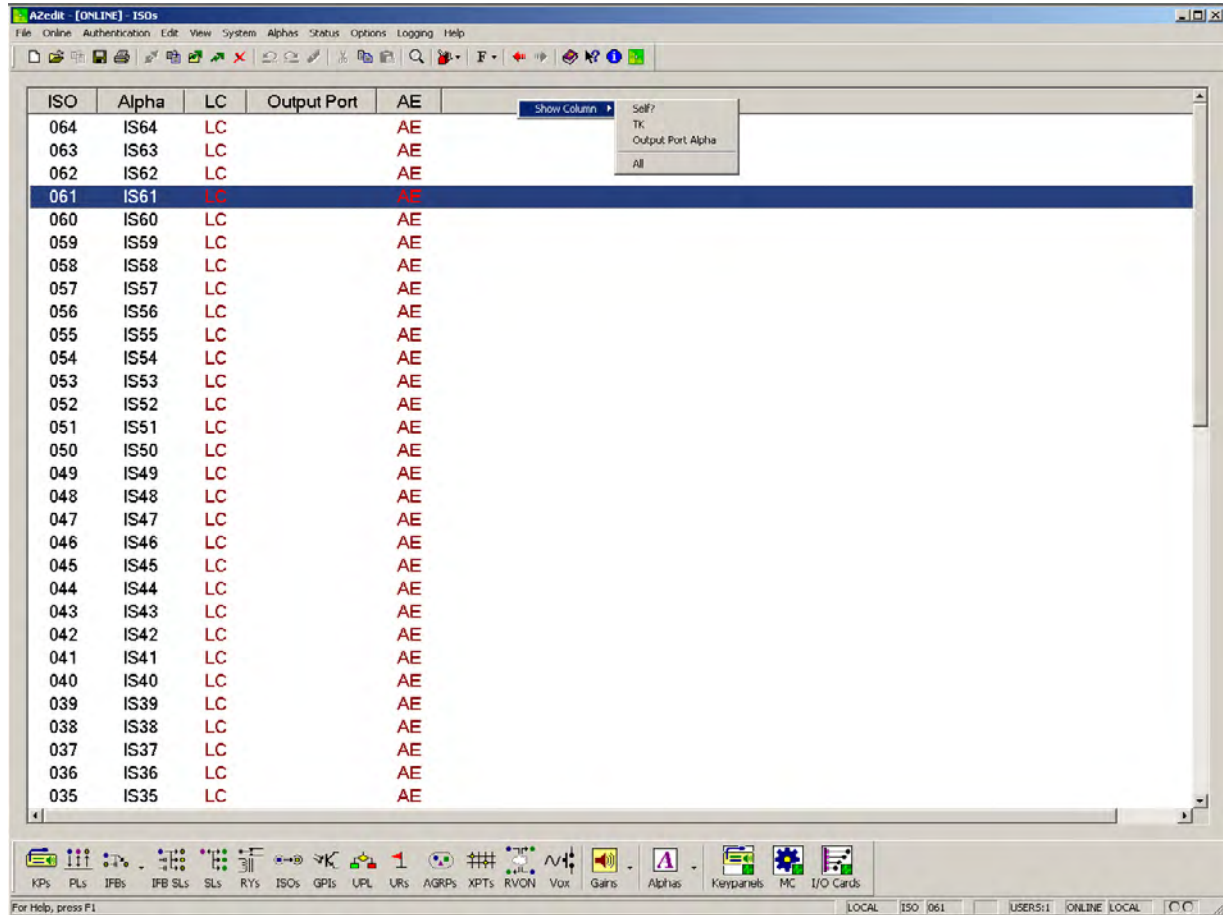


---

## Rearrange Columns

AZedit allows for many of its columns throughout the application to be rearranged. This means you can group columns together to better suit the information you want to view.

To **rearrange columns**, do the following:

1. In AZedit, open a **window** with columns.
2. Click and drag the **column header** to the position you desire.

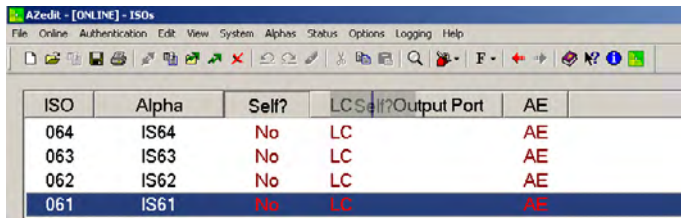

ISO	Alpha	Self?	LC	Self?	Output Port	AE
064	IS64	No	LC			AE
063	IS63	No	LC			AE
062	IS62	No	LC			AE
061	IS61	No	LC			AE

3. Repeat **step 2** until you have rearranged your columns to your satisfaction.

---

## Keyboard Shortcuts

upto and including version 3.4.0 and later

CONTEXT	KEYBOARD SHORTCUT	DESCRIPTION
All main windows	F1	Opens Help for the active window
All main windows	F2	Opens the Keypanels/Ports window
All main windows	F3	Opens the Party Line window
All main windows	F4	Opens the IFBs window
All main windows	F5	Opens the Special Lists window
All main windows	F6	Opens the GPI Outputs window
All main windows	F7	Opens the ISOs window
All main windows	F8	Opens the GPI Inputs window
All main windows	F10	Opens the Send All window (ONLINE mode only)
All main windows	F11	Opens the Crosspoint Status window
All main windows	F12	Opens the Send window (in ONLINE mode only)
All main windows	Shift+F1	Activates the “What’s This Help”
All main windows	Shift+F2	Opens the Port Alphas window
All main windows	Shift+F3	Opens the Party Line Alphas window
All main windows	Shift+F4	Opens the IFB Alphas window
All main windows	Shift+F5	Opens the Special Lists Alphas window
All main windows	Shift+F6	Opens the GPI Outputs Alphas window
All main windows	Shift+F7	Opens the ISO Alphas window
All main windows	Shift+F8	Opens the GPI Input Alphas window
All main windows	Shift+F12	Opens the Other Alphas window
All main windows	Shift+Alt+F5	Opens the IFB Special List Alphas window
All main windows	Shift+Alt+F10	Opens the Inter Panel Dim Descriptions
All main windows	Ctrl+space bar	Refreshes data; re-upload alphas from intercom (ONLINE mode only)
All main windows	Ctrl+Left arrow	Goes back to previous view
All main windows	Ctrl+Right arrow	Goes forward to next view
All main windows	Ctrl+Shift+F12	Refreshes alphas, re-upload alphas from intercom (ONLINE mode only)
All main windows	Ctrl+N	Creates a new file
All main windows	Ctrl+O	Opens a file
All main windows	Ctrl+M	Merges a File (FILE mode only)
All main windows	Ctrl+S	Saves current file
All main windows	Ctrl+A	Saves current file with a new name (Save As)

CONTEXT	KEYBOARD SHORTCUT	DESCRIPTION
All main windows	Ctrl+P	Performs a Partial Save
All main windows	Ctrl+G	Goes ONLINE (FILE mode only)
All main windows	Ctrl+L	Loads a file and mark changes for sending (ONLINE mode only)
All main windows	Ctrl+F10	Sends changes to intercom (ONLINE mode only)
All main windows	Ctrl+Shift+M	Displays the MC/AIO memory (ONLINE mode only)
All main windows	Ctrl+Shift+C	Displays AZedit communications statistics (ONLINE mode only)
All windows	Ctrl+C	Copies the current window data
All windows	Ctrl+V	Pastes the data copied to the clip board.
All windows	Alt+Backspace	Reverses last action
All windows	Ctrl+Z	Reverses the last action
All windows	Ctrl+Shift+Z	Does the last action over
All windows	Ctrl+F	Searches for key assignment
All windows	Ctrl+F12	Edits Alpha for most current resource (must be enabled in preferences)
Any Alpha window	Enter	Opens the Edit Alpha/Description window
Any text field	Shift+1 (on keypad)	Moves cursor to end of text field
Any text field	Shift+7 (on keypad)	Moves cursor to beginning of text field
All main windows	Ctrl+Shift+V	Opens the Select Device for Version Display (ONLINE mode only)
All windows	Ctrl+Backspace	Drops the first active menu down
Keypanel Ports window	Ctrl+Enter	Displays the Select Key Assignment window when the cursor is in a Listen or Talk field.
Keypanel / Ports window	Shift+Enter	Displays the Gain Setup window when cursor is in a Listen or Talk field.
Any Column view	Shift+Page Down	Selects all entries in column
Any Column view	Ctrl+Shift	Allows you to select blocks of the column entries
Any Column view	Ctrl	Allows you to select specific entries from the column.
Any main window	Ctrl+F2	Opens the LCP-102 window
Any main window	Ctrl+F8	Opens the UPL Resources window
Any main window	Ctrl+F9	Opens the Assignment Groups window
Any main window	Ctrl+F11	Opens the Vox Settings window
Any main window	Ctrl+F12	Opens the Edit Alpha/Description window
Keypanel/Ports window	Ctrl+W	Shows the current listen levels for the keypanel being viewed.
All windows	Alt+E	Opens the Edit drop down menu
All windows	Alt+T	Opens the Status drop down menu

CONTEXT	KEYBOARD SHORTCUT	DESCRIPTION
All window	Alt+O	Opens the Option drop down menu
All windows	Alt+L	Opens the Logging drop down menu
All windows	Alt+H	Opens the Help drop down menu
All windows	Alt+F	Opens the File drop down menu
All windows	Alt+N	Opens the Online drop down menu
All windows	Alt+U	Opens the Authentication drop down menu
All windows	Alt+A	Opens the Alphas drop down menu
All windows	Alt+V	Opens the View drop down menu
All main windows	Ctrl+Alt+F4	Opens the IFB Priorities window
All windows	Alt	Activates the main drop down menu
All sub-windows (i.e., keypanel/port configuration)	Ctrl+F1	Displays the help for whichever field is active on the sub-window.
All sub-windows	Alt+F4	Closes the active sub-window
Any notebook window (a window with tabbed pages)	Ctrl+Tab	Moves to the next page, going from left to right
Any notebook window (a window with tabbed pages)	Ctrl+Shift+Tab	Moves to the preceding page, going from right to left
Any window	Tab	Moves the cursor to the next field
Any window	Shift+Tab	Moves the cursor to the previous field
Any main window	Alt+F2	Opens the Select Gain Type window
Any main window	Alt+F3	Opens the Search for Key Assignment window
Any main window	Alt+F4	Exits the AZedit application
Any main window	Alt+F5	Opens the IFB Special Lists window
Any main window	Alt+F8	Opens the UPL Statements window
Any main window	Alt+F10	Opens the Inter Panel DIM Table window
Any main window	Ctrl+Shift+F2	Opens the PAP-32s window
Any main window	Ctrl+Shift+F4	Opens the IFB Listen Destinations window
Any main window	Ctrl+Shift+F8	Opens the UPL Resource Alphas window
All main windows	Ctrl+Shift+F9	Opens the Assignment Group Alpha window
All main windows	Ctrl+Shift+F10	Displays the right-click drop down menu for the active field, if any
All main windows	Ctrl+F6	Opens the GPIO-16s window
All main windows	Ctrl+F4	Opens the PGM Listen Source window



CONTEXT	KEYBOARD SHORTCUT	DESCRIPTION
Keypanel/Ports window, any talk or listen field	Ctrl+R	Toggles the key restriction state
	Ctrl+Shift+R	Toggles the key restriction state, and set all keys to the right to the same state
	Ctrl+Alt+R	Toggles the key restriction state, and set all keys to the left to the same state
	Ctrl+D	Toggles the latch disable state
	Ctrl+Shift+D	Toggles the latch disable state, and set all keys to the right to the same state
	Ctrl+Alt+D	Toggles the latch disable state, and set all keys to the left to the same state
Keypanel/Ports window, <i>View by Setup Page</i> set	Page Down	Displays the next setup page/panel
	Page Up	Displays the previous setup page/panel
LCP-102s window	Page Down	Displays the next setup page/panel
	Page Up	Display previous setup page/panel
Most windows	Ctrl+Page Down	Displays the next keypanel, PL, SL, etc....
	Ctrl+Page Up	Displays the previous keypanel, PL, SL, etc....
Keypanel/Ports window	Ctrl+Tab	Toggles between setup page and panel oriented views
	Ctrl+Shift+Tab	Toggles between setup page and panel oriented views (for all ports)
	Alt+>	Shifts the keypanel display to the left (when panel has more than 16 keys)
	Alt+<	Shifts the keypanel display to the right (when panel has more than 16 keys)
Keypanel/Ports window, KP-32 keypanel, <i>View by Panel Type</i> selected	Ctrl+T	Toggles the KP-32 key assignment viewing between talk and listen keys
Keypanel/Ports window	Ctrl+1	Displays talk level 1 key assignments
	Ctrl+2	Displays talk level 2 key assignments
	Ctrl+3	Displays talk level 3 key assignments
	Ctrl+4	Displays talk level 4 key assignments
	Ctrl+Shift+1	Displays listen level 1 key assignments
	Ctrl+Up	Displays previous key level
	Ctrl+Down	Displays next key level
	Ctrl+Home	Moves focus to port number edit box



# *Screen Description*


---

## *Ethernet Settings*

The **Ethernet Settings** window, shown in Figure 120, is used to configure an Ethernet connection between the matrix and AZedit.

**NOTE:** You must be connected to the intercom using a serial or USB connection to configure Ethernet for the intercom system.

**NAVIGATION:** From the menu bar, select *Options/Ethernet Setup...*

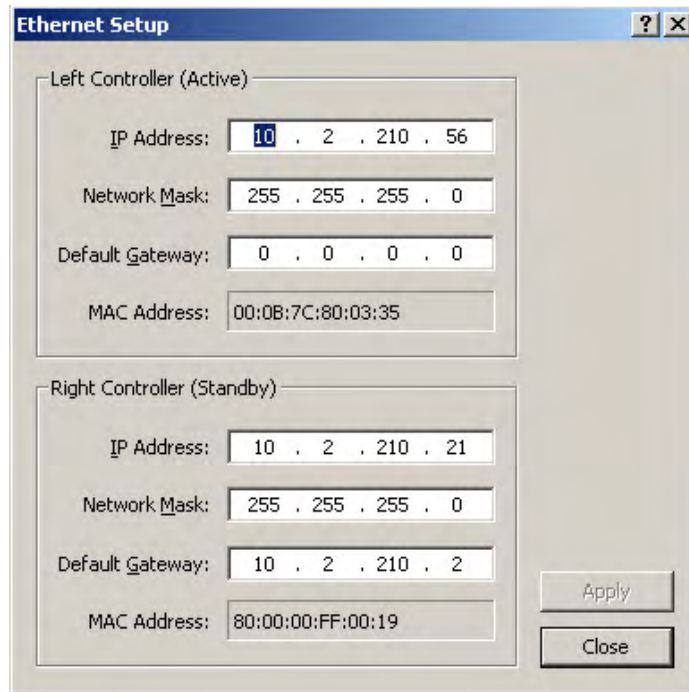

The image shows a window titled "Ethernet Setup" with a standard Mac OS X title bar (question mark, close, and zoom buttons). The window is divided into two main sections: "Left Controller (Active)" and "Right Controller (Standby)". Each section contains four input fields for network configuration. The "Left Controller" fields are: IP Address (10 . 2 . 210 . 56), Network Mask (255 . 255 . 255 . 0), Default Gateway (0 . 0 . 0 . 0), and MAC Address (00:0B:7C:80:03:35). The "Right Controller" fields are: IP Address (10 . 2 . 210 . 21), Network Mask (255 . 255 . 255 . 0), Default Gateway (10 . 2 . 210 . 2), and MAC Address (80:00:00:FF:00:19). At the bottom right of the window are two buttons: "Apply" and "Close".

Field	Left Controller (Active)	Right Controller (Standby)
IP Address	10 . 2 . 210 . 56	10 . 2 . 210 . 21
Network Mask	255 . 255 . 255 . 0	255 . 255 . 255 . 0
Default Gateway	0 . 0 . 0 . 0	10 . 2 . 210 . 2
MAC Address	00:0B:7C:80:03:35	80:00:00:FF:00:19

**FIGURE 120.** Ethernet Configuration Window

---

### **Left Controller (Active) Group Box**

The **Left Controller (Active)** group box displays the configuration options for the active master controller. The active master controller is the backbone for controlling communicating across the intercom system.

**NOTE:** When a failover occurs, the standby master controller becomes the active master controller. For example, if the Left Controller (Active) fails, the Right Controller (Standby) becomes the active controller. This means the Active controller is now in the Right slot (physically) in the intercom system.

#### **IP Address Field**

The **IP Address** field identifies the IP Address of the active master controller.

#### **Network Mask Field**

The **Network Mask** field identifies the network mask address of the active master controller. A network mask determines which computers can be accessed locally without using a gateway, and which computers can only be reached through a gateway.

#### **Default Gateway Field**

The **Default Gateway** field identifies the default gateway address of the active master controller. A default gateway is a node on a computer network that serves as an access point to another network. The gateway address is usually the IP Address of the router used to grant other computers access to a network.

#### **MAC Address Field**

The **MAC Address** field identifies the **MAC** (media access card) address of the active master controller. A MAC Address is a unique code (address) assigned to most forms of networking hardware. This address is permanently assigned to the hardware.

This field cannot be modified.

---

### **Right Controller (Standby) Group Box**

The **Right Controller (Standby)** group box displays the configuration options for the standby master controller. The right controller acts as a backup for the active master controller. This means if the active master controller fails, the right controller takes over the Active Controller spot.

**NOTE:** When a failover occurs, the standby master controller becomes the active master controller. For example, if the Left Controller (Active) fails, the Right Controller (Standby) becomes the active controller. This means the Active controller is now in the Right slot (physically) in the intercom system.

#### **IP Address Field**

The **IP Address** field identifies the IP Address of the standby master controller.

#### **Network Mask Field**

The **Network Mask** field identifies the network mask address of the standby master controller. A network mask determines which computers can be accessed locally without using a gateway, and which computers can only be reached through a gateway.

#### **Default Gateway Field**

The **Default Gateway** field identifies the default gateway address of the standby master controller. A default gateway is a node on a computer network that serves as an access point to another network. The gateway address is usually the IP Address of the router used to grant other computers access to a network.

---

## MAC Address Field

The **MAC Address** field identifies the MAC Address of the standby master controller. A MAC Address is a unique code (address) assigned to most forms of networking hardware. The address is permanently assigned to the hardware.

This field is cannot be modified.

## Apply Button

The **Apply** button applies the modifications to the Ethernet settings without closing the window.

## Close Button

The **Close** button closes the window without saving the modifications made.

To **configure Ethernet in AZedit**, do the following:

1. Verify the PC running AZedit is **connected to the intercom system** by either a serial connection or a USB connection.
2. In AZedit, from the Options menu, select **Ethernet Setup**.  
*The Ethernet Setup window appears.*

The screenshot shows the 'Ethernet Setup' dialog box. It has two main sections: 'Left Controller (Active)' and 'Right Controller (Standby)'. Each section contains four input fields: 'IP Address', 'Network Mask', 'Default Gateway', and 'MAC Address'. The 'Left Controller (Active)' fields are: IP Address (10 . 2 . 210 . 56), Network Mask (255 . 255 . 255 . 0), Default Gateway (0 . 0 . 0 . 0), and MAC Address (00:0B:7C:80:03:35). The 'Right Controller (Standby)' fields are: IP Address (10 . 2 . 210 . 21), Network Mask (255 . 255 . 255 . 0), Default Gateway (10 . 2 . 210 . 2), and MAC Address (80:00:00:FF:00:19). At the bottom right of the dialog are 'Apply' and 'Close' buttons.

### *Under Left Controller (Active)*

3. In the IP Address field, enter the **IP Address** of the active master controller.
4. In the Network Mask field, enter the **network mask address** of the active master controller.
5. In the Gateway Address field, enter the **gateway address** of the active master controller.

### *Under Right Controller (Standby)*

6. In the IP Address field, enter the **IP Address** of the standby master controller.
7. In the Network Mask field, enter the **network mask address** of the standby master controller.
8. In the Gateway Address field, enter the **gateway address** of the standby master controller.
9. Click **Apply**.  
*Ethernet is configured in AZedit.*


---

## Communications

The **Communications** window, shown in Figure 121, is used to select and configure the type of connection AZedit uses to communicate with the intercom system.

**NAVIGATION:** From the menu bar, select *Options/Communications*.

To access the **Communications window**, do the following:

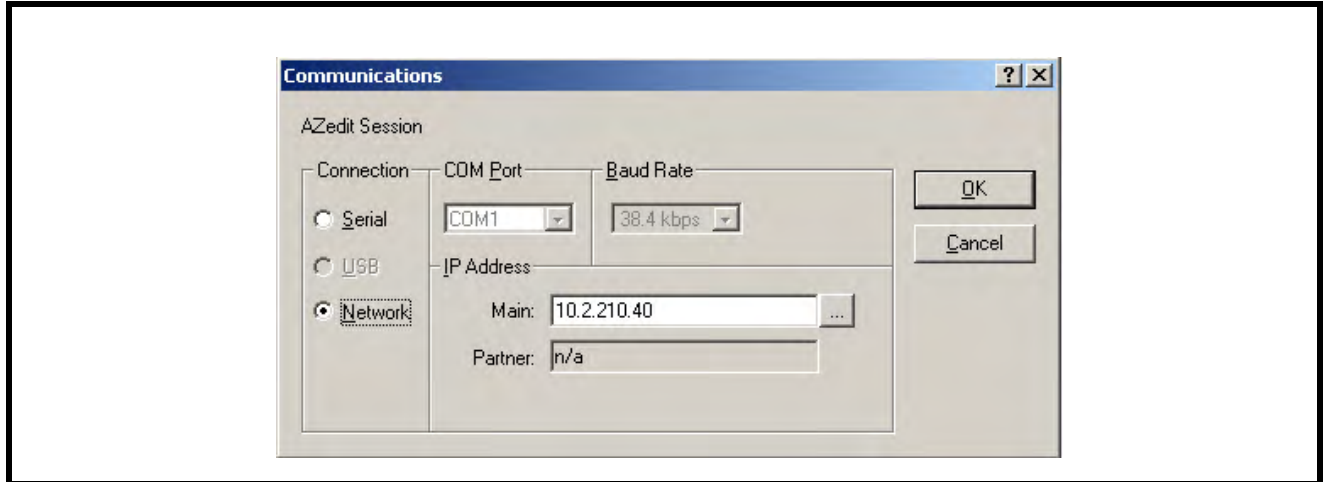

**FIGURE 121.** Communications Window

---

### Connection Radio Buttons

The **Connection** radio buttons identify the type of connection AZedit uses to communicate with the intercom system. The following connection types are available:

*Serial* - when selected, a serial connection is used to connect AZedit to the intercom system.

*USB* - when selected, a USB connection is used to connect AZedit to the intercom system.

*Network* - when selected, an Ethernet connection is used to connect AZedit to the intercom system.

### COM Port Drop Down Menu

The **COM Port** drop down menu identifies the COM port (of the PC running AZedit) to use for a serial connection.

By default, the following selections are available in the drop down menu:

*COM 1*

*COM 2*

*COM 3*

*COM 4*

**NOTE:** By default, COM 1–4 are listed in the drop down menu, however you can also manually enter the COM port number into this field, if desired.

---

## Baud Rate Drop Down Menu

The **Baud Rate** drop down menu identifies the baud rate the serial connection uses to send and receive audio and data.

Available selections are:

*9600bps*

*19.2kbps*


*38.4kbps*

## IP Address Group Box

### Main Field

The **Main** field identifies the IP Address given to the Active Master Controller. There are two IP Addresses AZedit can use to contact the intercom system – the Main and Partner. If AZedit gets no response from one of the IP Addresses, then it switches to the other IP Address.

### Browse Button

The **Browse** button  opens the Available Intercoms window. From this window you can select the intercom to which you want to connect with AZedit. For more information on the Available Intercoms window, see “Available Intercoms” on page 45.

### Partner Field

The **Partner** field identifies the IP Address given to the Standby Master Controller. When connected to the network with Ethernet an intercom system has two Master Controllers (the Active and Standby). The Standby Master Controller acts as the Active Master Controller's backup in failover protection.

### Advanced Button

The **Advanced** button opens the secondary AZedit sessions communications configuration window (see “Secondary AZedit Sessions” on page 47). From this window you can configure the COM port and baud rate for additional, serially connected AZedit sessions on the J9 and J10 connectors of the intercom system. This is available with ADAM systems only.

### OK Button

The **OK** button applies the modifications made and closes the window.

### Cancel Button


The **Cancel** button does not apply the modifications made and closes the window.




---

## Available Intercoms

The **Available Intercoms** window, shown in Figure 122, displays a list of intercom systems available to which AZedit can connect.

**NAVIGATION:** From the menu bar, select *Options/Communications* and press the browse button. 

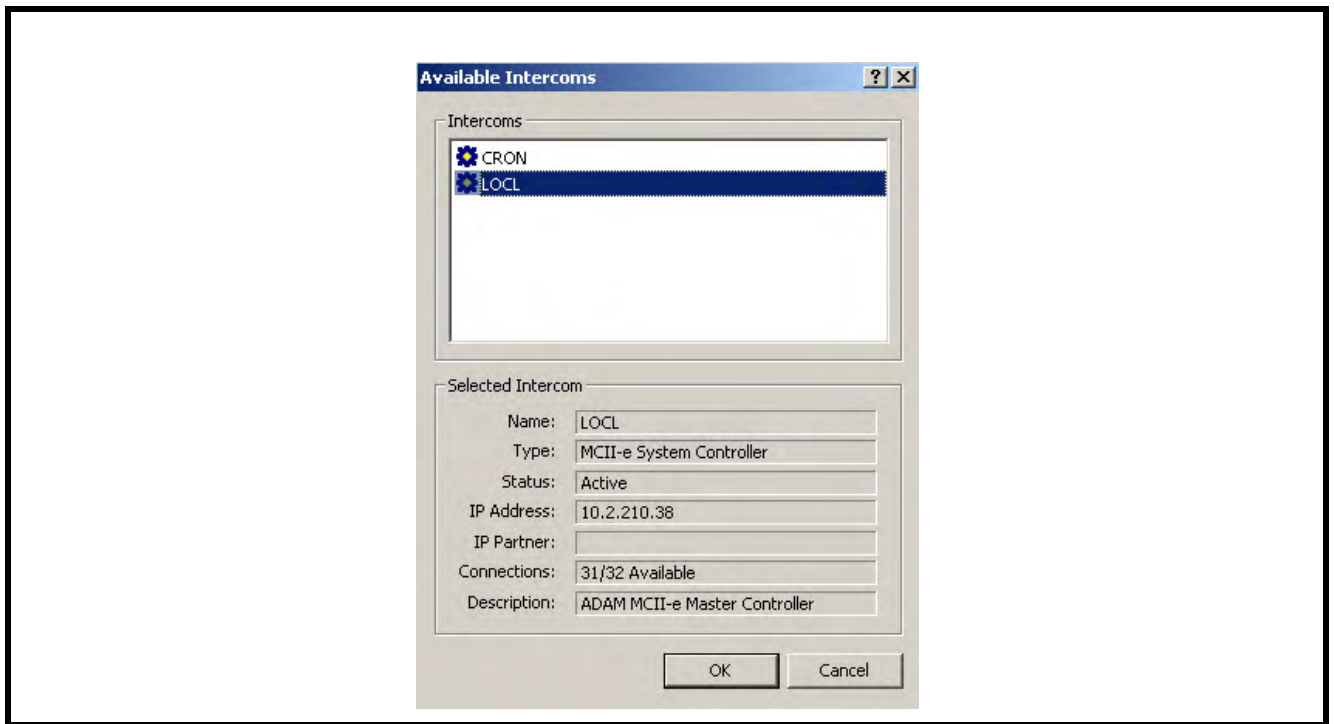

**FIGURE 122.** Available Intercoms Window

---

### Intercoms Group Box

The **Intercoms** group box displays a selectable list of intercoms (active and standby) in the system.

**NOTE:** When you have a Standby Master Controller installed, a black and white intercom icon appears in this window.

### Selected Intercom Group Box

The **Selected Intercom** group box displays information detailing the intercom selected from the Intercoms group box.

#### **Name Field**

The **Name** field displays the name of the selected intercom.

This field *cannot be modified*.

#### **Type Field**

The **Type** field displays the type of master controller used in the selected intercom.

This field *cannot be modified*.

---

### **Status Field**

The **Status** field displays the status of the master controller used in the selected intercom.

This field *cannot be modified*.

### **IP Address Field**

The **IP Address** field displays the active master controller IP Address of the selected intercom system.

This field *cannot be modified*.

### **IP Partner Field**

The **IP Partner** field displays the standby master controller IP Address of the selected intercom system, if used. The standby master controller serves as a backup to the active master controller in case of a failure.

This field *cannot be modified*.

### **Connections Field**

The **Connections** field displays the number of connections currently available on the intercom system.

This field *cannot be modified*.

### **Descriptions Field**

The **Description** field displays the description created for the selected intercom.

This field *cannot be modified*.

### **OK Button**

The **OK** button applies the selection made and closes the window.

### **Cancel Button**


The **Cancel** button does not apply the selection made and closes the window.

---

## Secondary AZedit Sessions

The **Secondary AZedit Sessions**, shown in Figure 123, is used to configure additional AZedit sessions (up to 3) connected to the same intercom system, but run on separate computers. Multiple sessions are not supported for ADAM CS. To use this feature, you must configure the advanced communications settings on the computer running the primary AZedit session which is connected to J1 of the XCP-ADAM-MC Master Controller Breakout Panel. Second and third computers can then be connected to J9 and J10 of the Master Controller Breakout Panel.

**NOTE:** From the menu bar, select *Options/Communications* and then press **Advanced**.

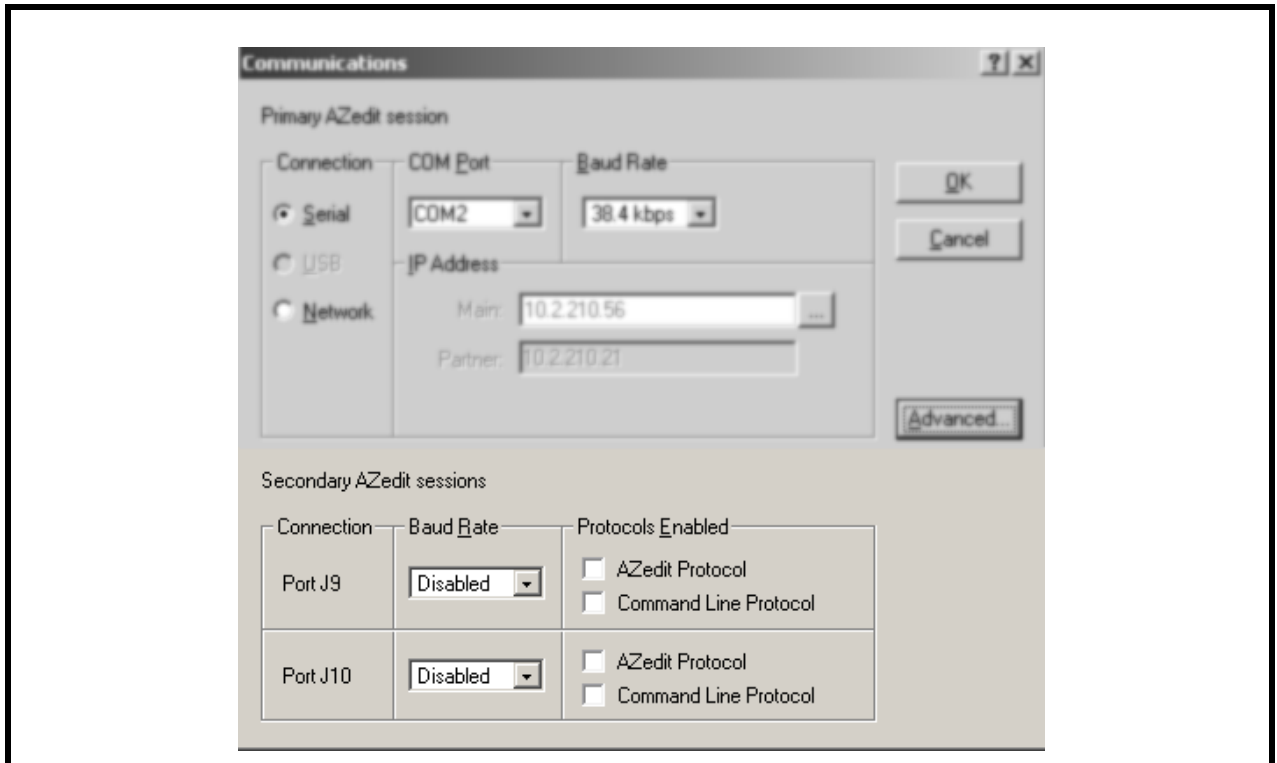

**FIGURE 123.** Secondary AZedit Sessions Window

---

### Connection Group Box

The **Connection** group box displays Port J9 and Port J10 which are used to connect multiple AZedit sessions on different computers to one intercom system.

---

### Baud Rate Group Box

#### **Baud Rate Drop Down Menu**

The **Baud Rate** drop down menu indicates the baud rate at which the multiple sessions are connecting to the intercom system.

Available selections are:

9600bps  
19.2kbps  
38.4kbps

---

## **Protocols Enabled Group Box**

### **AZedit Protocol Check Box**

The **AZedit Protocol** check box indicates AZedit is being used for the multiple session.

### **Command Line Protocol Check Box**

The **Command Line Protocol** check box indicates that command line protocol is being used for the multiple session.

---

## ***Intercom Configuration Window***

The **Intercom Configuration** window is used to configure AZedit to match the intercom system to which it is connected. This window contains two pages: Resources and Options. Resources are the quantities of intercom ports, party lines, etc. available. Options describe quantities for such things as the number of talk levels for each talk key or the number of setup pages for each keypanel. Some options slightly modify the operation of the intercom system.

**NAVIGATION:** From the menu bar, select *Options/Intercom Configuration* and then press **Intercom Sizing Wizard**.

Also available, is the Intercom Sizing Wizard. The Intercom Sizing Wizard, when used in ONLINE mode, polls the intercom system for its available resources and then displays the results in the resource page fields.

**NOTE:** You can use the Intercom Sizing Wizard in File mode to run test intercom system configurations. This is helpful when you are planning to implement a new system or upgrade an existing system.


**IMPORTANT:** This will cause a *First Birthday* on the Intercom System. A first birthday completely erases all data and resets the application to the factory defaults.

---

## Resources Page

The **Resources** page, shown in Figure 124, is used to define the resources available in intercom system such as the number of frames, the number of ports available, assignment type allocations, and intercom system setup.

**NAVIGATION:** From the menu bar, select *Options/Intercom Configuration* and then select **Resources**.

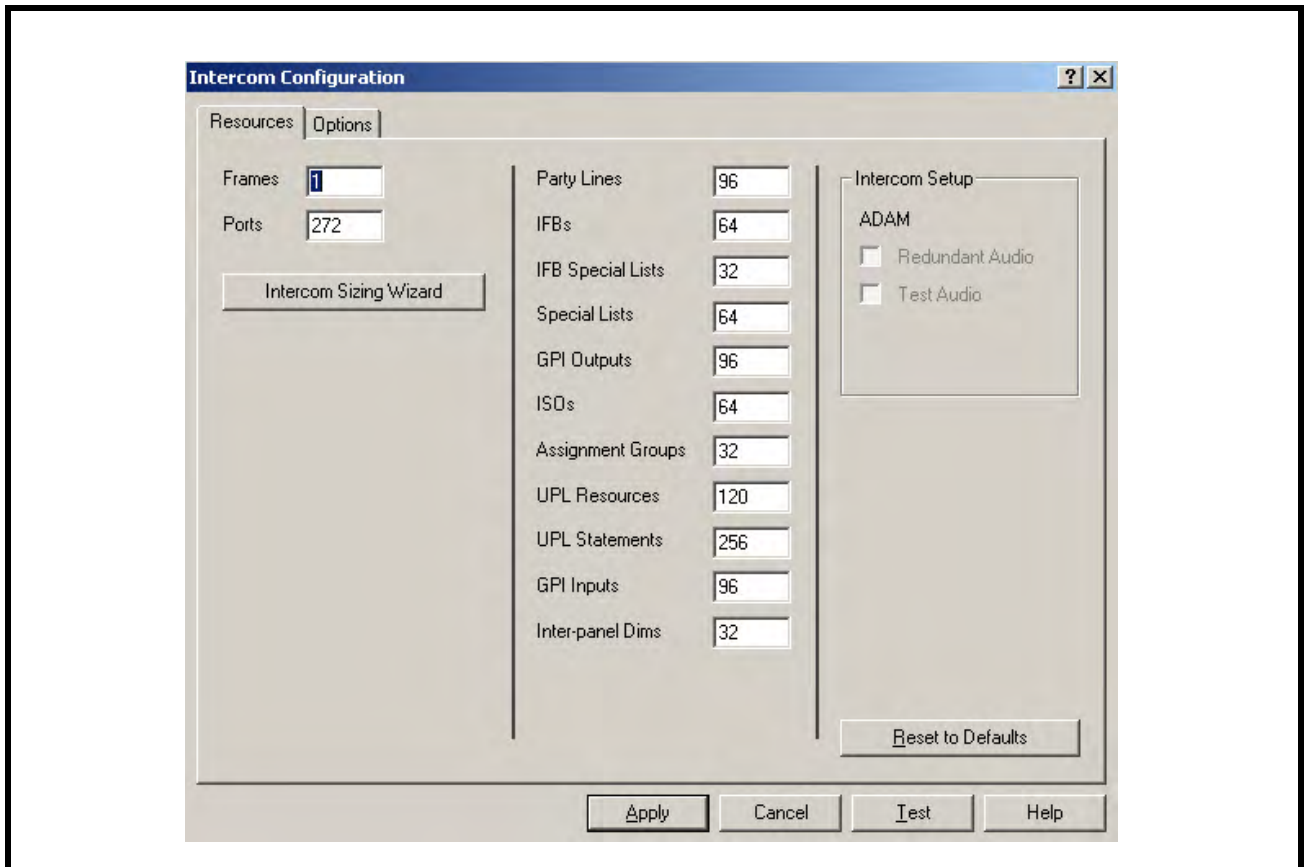

**FIGURE 124.** Intercom Configuration Window - Resources Page

### Frames Field

The **Frames** field identifies the number of frames in the intercom system. To make changes to this field you must use the *Intercom Sizing Wizard*.

### Ports Field

The **Ports** field identifies the number of ports in the intercom system. When multiple frames are used, this field displays the total number of ports available across every connected frame. To make changes to this field you must use the *Intercom Sizing Wizard*.

### Intercom Sizing Wizard Button

The **Intercom Sizing Wizard** button opens the Intercom Sizing Wizard. The intercom sizing wizard guides you through a series of questions related to your intercom system to determine the resources available to you.

---

## **Assignment Type Resources Group Box**

**NOTE:** Some resources listed in this section may not appear in all intercom systems. This list is dependent upon intercom system resource availability.

### **Party Lines Field**

The **Party Lines** field identifies the number of party lines allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no party lines are used. If party lines are reduced to 0, all party line (PL) features become inactive and do not appear in scroll lists.

For more information, see “Party Lines Window” on page 104.

### **IFBs Field**

The **IFBs** field identifies the number of IFB assignments allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no IFBs are used. If IFBs are reduced to 0, all IFB features become inactive and do not appear in scroll lists. Also, Program Assign Panels are not able to operate.

For more information, see “IFBs Window” on page 111.

### **IFB Special Lists Field**

The **IFB Special Lists** field identifies the number of IFBSL assignments allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no IFBs are used. If IFBs are reduced to 0, all IFB SL features become inactive and do not appear in scroll lists.

For more information, see “IFB Special Lists Window” on page 120.

### **Special Lists Field**

The **Special Lists** field identifies the number of Special List assignments allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no special lists are used. If special lists are reduced to 0, all special list (SL) features become inactive and do not appear in scroll lists.

For more information, see “Special Lists Window” on page 108.

### **GPI Outputs Field**

The **GPI Outputs** field identifies the number of GPI Outputs allowed in your intercom system. All ADAM, ADAM CS, and Zeus frames include 8 GPI inputs and 8 GPI outputs. (In a multi-frame ADAM system, only the GPI inputs and outputs of the first frame, called the master frame, are used.) Additional GPI inputs and outputs are supplied by optional UIO-256 Universal Input/Output frames. If you do not have any UIO-256 frames, you can reduce GPI inputs and outputs to eight. If you do not plan on using the GPI at all, you can reduce the quantity to 0. If GPI inputs or outputs are reduced to 0, all GPI features become inactive and do not appear in scroll lists.

The value range for this field is *1 to 8* to the local frame. With additional accessories, *up to 256 inputs* may be possible.

For more information, see “GPI Output Window” on page 125.

### **ISOs Field**

The **ISOs** field identifies the number of ISOs allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no ISOs are used. If ISOs are reduced to 0, all ISO features become inactive and do not appear in scroll lists.

For more information, see “ISO Window” on page 132.

---

## Assignment Groups Field

The **Assignment Groups** field identifies the number of Assignment Groups (AGRP) allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no AGRPs are used. If AGRPs are reduced to 0, all AGRP features become inactive and do not appear in scroll lists.

For more information, see “Assignment Group Window” on page 139.

## UPL Resources Field

The **UPL Resources** field identifies the number of UPL Resources allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no UPL resources are used. If UPL Resources is set to 0, all UPL resource features become inactive and do not appear in scroll lists.

For more information, see “UPL Resources Window” on page 158.

## UPL Statements Field

The **UPL Statements** field identifies the number of UPL Statements allowed in your intercom system. This field may be set to any amount within memory limits, or may be reduced to 0 if no UPL statements are used. If UPL statements are reduced to 0, UPL features become inactive.

For more information, see “UPL Statements Window” on page 162.

## GPI Inputs Field

The **GPI Inputs** field identifies the number of GPI Inputs allowed in your intercom system. The value range for this field is 1 to 8 local to the frame. With additional accessories, up to 256 inputs may be possible.

For more information, see “GPI Input Window” on page 129.

## Inter-panel Dims Field

The **Inter-Panel Dims** field identifies the number of inter-panel dims allowed in your intercom system. This field may be set to any amount, within memory limits, or may be reduced to 0 if no inter-panel dim tables are used. If inter-panel dims are reduced to 0, references to this feature become inactive.

For more information, see “Inter-Panel Dim Table Window” on page 156.

## PAP / LCP-102 Field

The **PAP/LCP-102** field identifies the number of PAP/LCP-102 devices allowed in your intercom system.

The maximum number of devices is 15 (*PAPs and LCPs combined*).

For more information, see “PAP-32 Window” on page 145.

For more information, see “Edit PAP/LCP Description Window” on page 198.

---

## Intercom Setup Group Box

The **Intercom Setup** group box displays the type of intercom system to which AZedit is connected and whether redundant audio, test audio, or high density audio is enabled.

## Intercom System Field

The **Intercom System** field indicates the type of intercom system to which AZedit is connected. This field also displays whether DBX (Dual Bus Expander) is being used. DBX is used to connect and pass audio between two ADAM intercom frames. Redundancy between frames can be achieved through the use of DBX cards.

---

## Redundant Audio Check Box

The **Redundant Audio** check box indicates redundant audio is being used. Redundant audio (also known as fail-over protection) means it is possible to disable any one DBX coaxial link without losing any audio between frames.

In order for redundant audio to exist, there must be two coaxial links between every pair of frames. For example, in a three frame system two links between frames 1 and 2, two links between frames 2 and 3, and two links between frames 1 and 3 (or six links in total) must exist. A non-redundant three frame system needs only one link between each pair of frames, (1-2, 2-3, and 1-3, or three links in total). When there are two links between a pair of frames, only one link is required to pass audio (although both carry the audio between frames, the audio is only used from one link). So, if one link is cut, the other link can immediately be used to provide the same audio.

## Test Audio Check Box

The **Test Audio** check box indicates test audio is enabled and being passed between frames. DBX cards use test audio to constantly monitor the audio being passed between frames. If an audio problem persists, the DBX cards try to correct it. Without test audio, the links between frames can be operational, but it is possible that no audio is being passed over the links.

## High Density Check Box

The **High Density** check box indicates the number of ports available for use within a multi-frame system. For example, a standard frame has 128 ports available for use; however, when high density is selected, the number of ports available becomes 256 including the DBX cards. (272 ports without DBX cards). As the number of frames increases, the number of ports available on each frame decreases to accommodate the number of DBX cards used to connect the frames.

**NOTE:** This option is only used with AIO-16 and RVON-16 cards.



---


## Options Page

The **Options Page**, shown in Figure 125, is used to view and/or modify system options, such as talk levels, setup pages per ports, panels with key labels, etc.

- In ONLINE or SERVER mode, this screen shows you the Options settings in the master controller.
- If you start AZedit in FILE mode (without opening a setup file) this screen shows you the AZedit Option settings.
- If you open a setup file in FILE mode, this screen shows you the Option settings for that setup file.

**NOTE:** We recommend you have a thorough understanding of the intercom configuration before modifying these options.

**NAVIGATION:** From the menu bar, select *Options/Intercom Configuration* and then select **Options**.

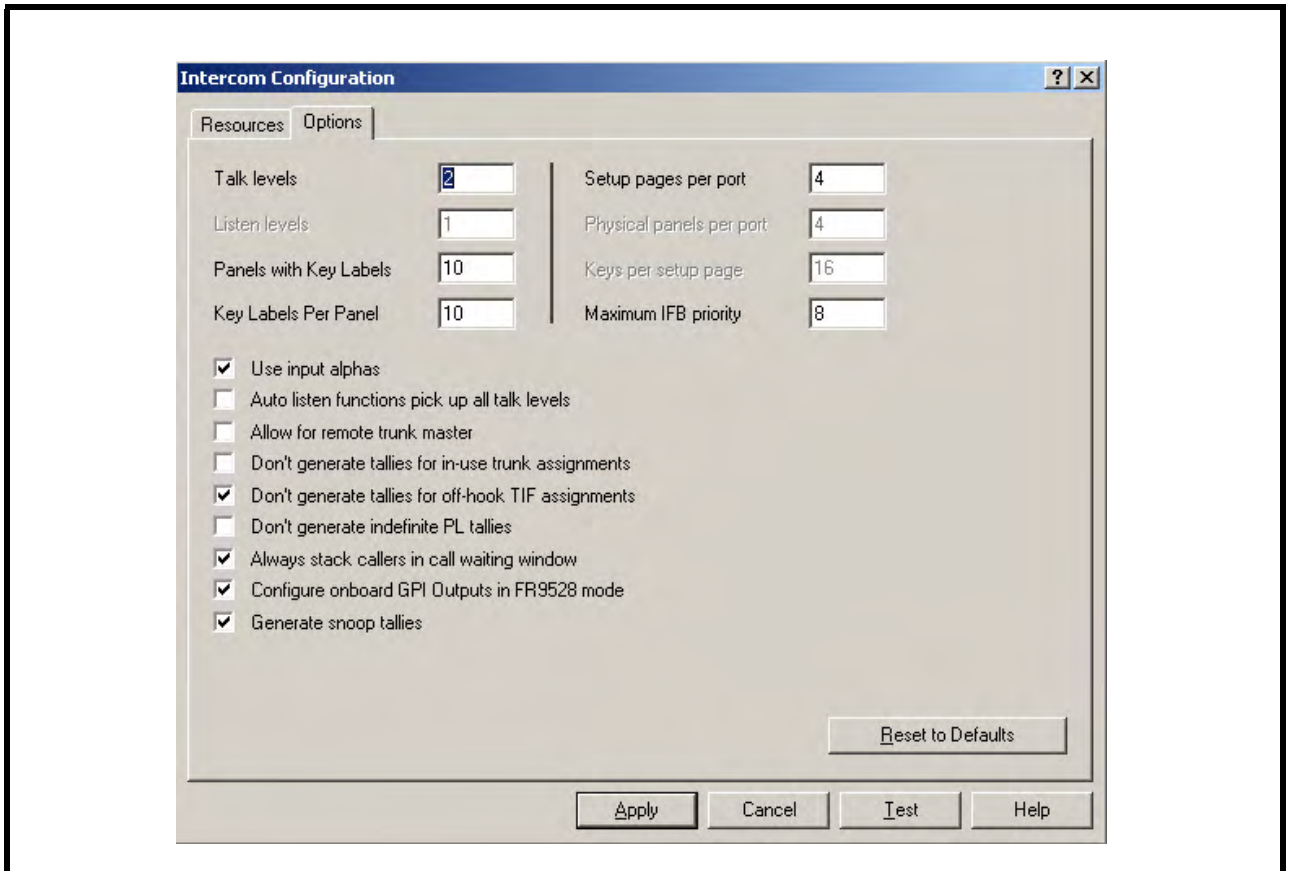

**FIGURE 125.** Intercom Configuration Window - Options Page

### Talk Levels Field

The **Talk Levels** field indicates the number of Talk Levels available in the system. By default this field is set to 2; however, you can change this number to accommodate your particular intercom system.

This field value can range from 2 to 4.

---

## **Listen Levels Field**

The **Listen Levels** field indicates the number of Listen Levels available in the system. Currently, one (1) listen level is supported.

This field *cannot be modified*.

## **Panels with Key Labels Field**

The **Panels with Key Labels** field indicates the number keypanels allowed to have key labels in the system. By default this value is set to 0.

This field value can range from 0 to 272.

## **Key Labels Per Panel Field**

The **Key Labels Per Panel** field indicates the number of key labels allowed per key panel in the system. By default this value is set to 0.

This field value can range from 0 to 64.

## **Setup Pages Per Port Field**

The **Setup Pages Per Port** field indicates the number of talk/listen key pairs allowed per port.

This field value can range from 4 to 15.

## **Physical Panels Per Port Field**

The **Physical Panels Per Port** field indicates the number of keypanels and expansion panels are allowed in the system. Currently, only one (1) keypanel and three (3) expansion panels are supported.

This field *cannot be modified*.

## **Maximum IFB Priority Field**

The **Maximum IFB Priority** field indicates the highest priority allowed to be assigned to an IFB in the system. IFB priorities determine which keypanel gets first access to an IFB in cases where two or more keypanels are trying to access the IFB at the same time. By default, the IFB priority for each intercom port can be individually set to any number from 0 through 3. With the priority set to 3, the keypanel overrides any other keypanel set to a lower priority. Keypanels that are set to the same priority can simultaneously access IFBs.

This field value can range from 1 to 8.

## **Use Input Alphas Check Box**

The **Use Input Alphas** check box indicates that input alphas are enabled for the system.

## **Auto Listen Functions Pick Up All Talk Levels Check Box**

The **Auto Listen Function Pick Up All Talk Levels** check box indicates the keypanel operator can automatically talk and listen to all talk levels when the talk key is activated. The listen-level adjustment only adjusts a single listen crosspoint level. This feature is only available when auto-listen is assigned to a key and the key also has several assigned talk levels.

**NOTE:** The listen-level adjustment only adjusts a single listen crosspoint level.

---

### **Allow For Remote Trunk Master Check Box**

The **Allow for Remote Trunk Master** check box indicates your intercom system is connected to a remote trunk master via a modem. In this case, there may be some data transmission delay, so the timeout period extends to compensate. In addition, the normal baud rate for direct connection to the trunk master (38.4 kbaud) changes to 9600 baud for the modem connection. (This overrides the setting of DIP switch 4 on the master controller in an ADAM or ADAM CS frame.)

### **Don't Generate Tallies For In-Use Trunk Assignments Check Box**

The **Don't Generate Tallies for In-Use Trunk Assignments** check box indicates you do not want to generate tallies for in-use trunk assignments.

### **Don't Generate Tallies For Off-Hook TIF Assignments Check Box**

The **Don't Generate Tallies for Off-Hook TIF Assignments** check box indicates you do not want to generate tallies for off-hook TIF assignments.

### **Don't Generate Indefinite PL Tallies Check Box**

The **Don't Generate Indefinite PL Tallies** check box indicates you do not want to generate tallies for indefinite PLs.

### **Always Stack Callers in Call Waiting Window Check Box**

The **Always Stack Callers in Call Waiting Window** check box indicates callers are stacked in the call waiting window.

### **Configure Onboard GPI Outputs in FR9528 Mode Check Box**

The **Configure Onboard GPI Outputs in FR9528 Mode** check box indicates you are using a FR9528 Relay Frame. Remove the check mark if you are using the GPI connector on your ADAM or ADAM CS frame, instead of FR9528.

### **Generate Snoop Tallies Check Box**

The **Generate Snoop Tallies** check box indicates you want to generate snoop tallies. Snoop tallies provide an indication to keypanel users that somebody is listening to them.

**NOTE:** To use Snoop Tallies, the keypanel must be working in HOT MIC (USM) mode. This is available only on KP-32 keypanels.

---

## Intercom Sizing Wizard


In AZedit version 2.08.00 or higher, an **Intercom Sizing Wizard** is provided to help users setup their intercom systems quickly and easily. The primary function of this wizard allows users to configure their intercom systems without worrying about incorrect configuration options. The wizard walks you through each step of setting up your intercom system, asking a series of specific questions, resulting in an easy and efficient setup procedure.

**NOTE:** You can use this wizard in ONLINE mode or FILE mode. If you plan on using the Intercom Sizing Wizard in ONLINE mode, you must remember to select the Allow Intercom Resizing in Online Mode checkbox.

### How to Use the Intercom Sizing Wizard

To select the **Allow Intercom Resizing in ONLINE mode**, do the following:


1. From the Option menu in AZedit, select **Preferences**.  
*The Application Preferences window appears.*
2. Click the **Advanced** page.  
*The Advanced window appears.*
3. Select the **Allow Intercom Resizing in ONLINE Mode** checkbox.

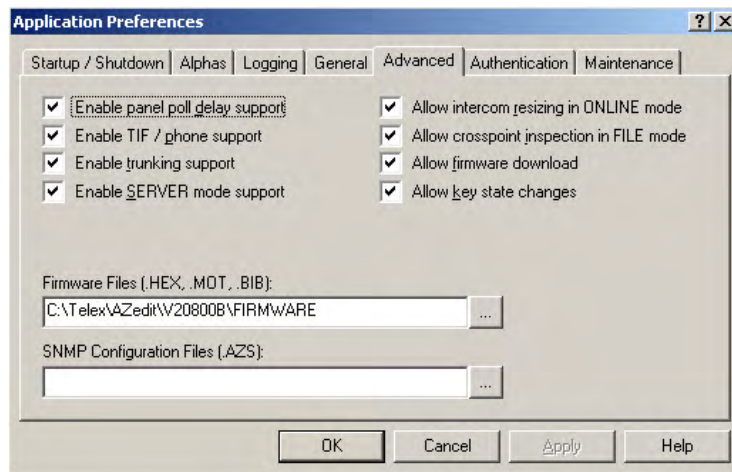


**NOTE:** You must use the Intercom Sizing Wizard if you are changing the number of frames, the number of ports, or the Intercom Setup options in your system.

To access the **Intercom Sizing Wizard**, do the following:

1. From the Options menu, select **Intercom Configuration**.  
*A warning message reading, "WARNING! You are about to reconfigure the intercom! The existing intercom setup is ERASED and intercom system will be reset" appears.*
2. Click **OK**.  
*The Intercom Configuration screen appears.*

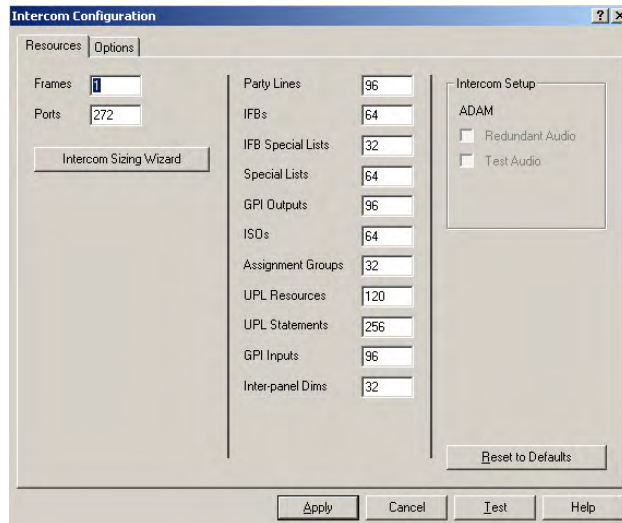

3. Click **Intercom Sizing Wizard**.  
*The Intercom Sizing Wizard begins.*

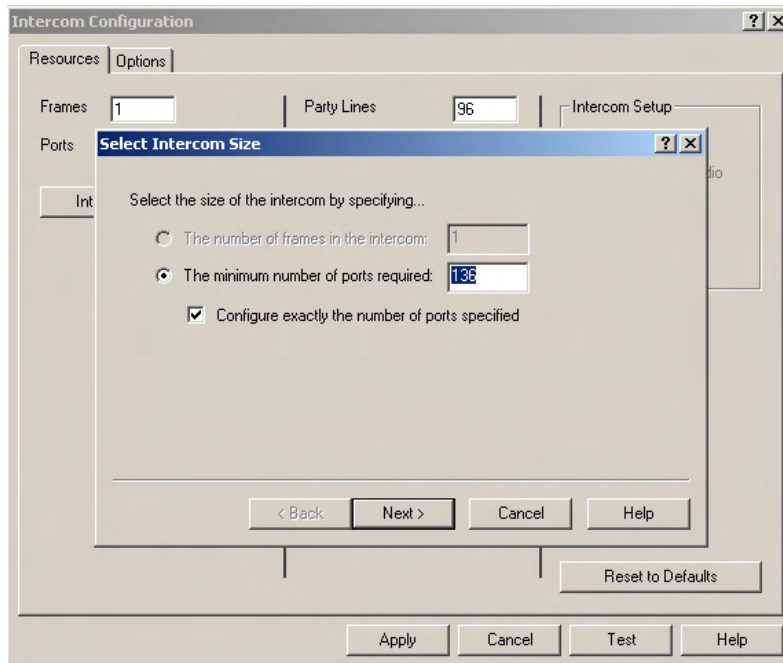

**NOTE:** In ONLINE mode, the wizard automatically determines your intercom system size, and then walks you through to get information that is more specific for configuring your system.

In FILE mode, you must pick your intercom system, and then the wizard walks you through the different options to determine the intercom system setup.

---

## More Configuration Windows

---

---

### RVON Configuration Window

---

The **RVON Configuration** window, shown in Figure 126, is used to configure RVON devices in the intercom system.

All five (5) RVON devices provide **VoIP** (Voice Over Internet Protocol) communications for the RTS® family of intercoms. In general, voice over IP means sending voice information in digital form using discrete packets, rather than the traditional telephone network. All of the RVON devices deliver an integrated solution for connecting custom keypanels to the Intercom Matrix over standard IP networks by supporting 8 or 16 channels (ports) of audio IN and OUT.

The RVON devices supported by AZedit are as follows:


- RVON-8 - provides eight channels IN and OUT of digital audio.
- RVON-1 - provides voice over IP (Internet Protocol) communications for the KP-32 and KP-812 families of keypanels.
- RVON-C - provides voice over IP (Internet Protocol) communications for the RTS® Cronus intercom system.
- RVON-16 - provides 16 channels IN and OUT of digital audio.

RVON devices are fully compatible with internationally recognized standards and support the following protocols: G.711, G.729AB, and G.723 (5.3k and 6.3k).

**NOTE:** RVONedit is a Windows®-based, **GUI** (Graphical User Interface) application designed exclusively for Telex RVON products. The application can be used to display or configure RVON (VoIP) options associated with the different devices. RVONedit is to the VoIP products as AZedit is to ADAM, Cronus, and Zeus. Please contact your customer service representative for ordering details. There are five (5) RVON devices in the RVON family:

- RVON-8
- RVON-1
- RVON-I/O
- RVON-C
- RVON-16

**NAVIGATION:** From the menu bar, select *System/Miscellaneous/RVON Configuration*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

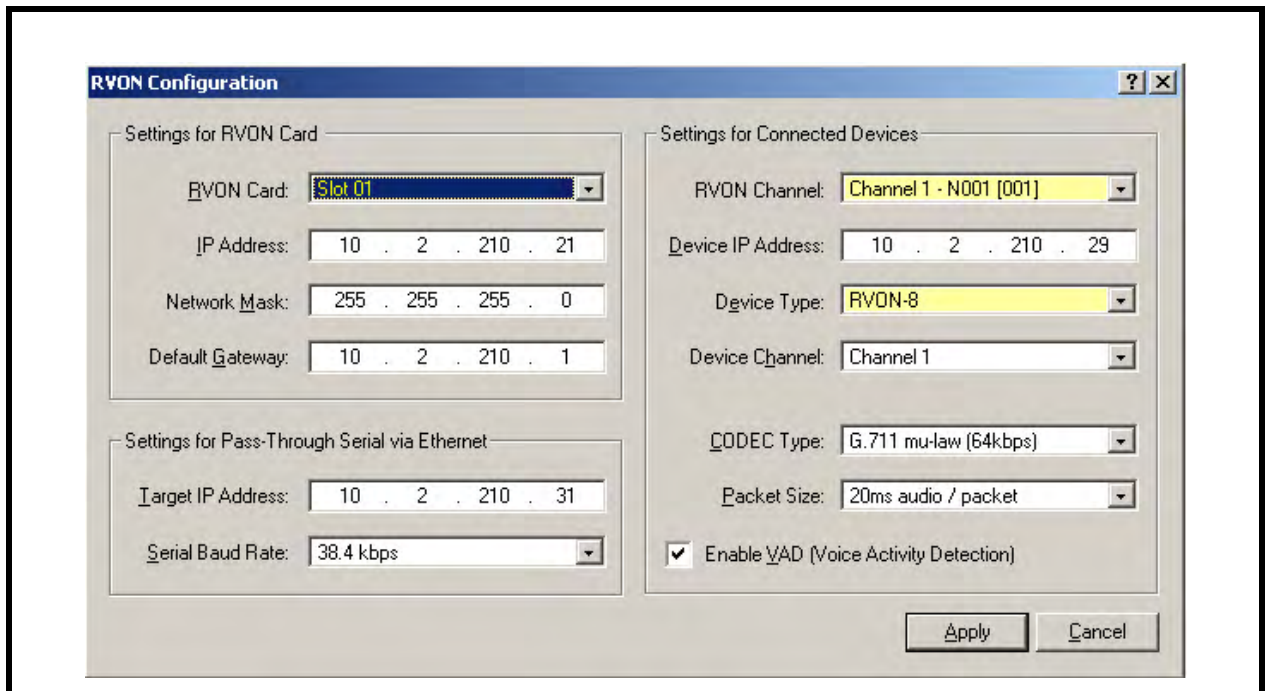


FIGURE 126. RVON Configuration Window

## Settings for RVON Card Group Box

### RVON Card Drop Down Menu

The **RVON Card** drop down menu is used to select the card slot where the RVON card resides.

### IP Address Field

The **IP Address** field indicates the IP Address of the RVON card.

**NOTE:** An **IP Address** is an identifier or numerical name for a computer or device on a network. Data between computers is routed over the network using these addresses to identify which computer a message is being sent to and which computer a message is being sent from. The format of an IP Address is a 32-bit numeric address written as four numbers separated by periods. For example, an IP Address looks like 10.100.1.1.

### Network Mask Field

The **Network Mask** field indicates the network mask address of the RVON card, if applicable.

**NOTE:** A network mask indicates which computers can be accessed locally without using a gateway, and which computers can only be reached through a gateway. The bits in the network mask determine what is a network and what is a computer.

### Default Gateway Field

The **Default Gateway** field indicates the default gateway address used of the RVON card, if applicable. The gateway address is the IP Address used when a connection outside your network is commenced.

---

## Settings for Pass-Through Serial Via Ethernet Group Box

### Target IP Address

The **Target IP Address** field displays the IP Address of the device to which you want to connect over Ethernet.

### Serial Baud Rate Drop Down Menu

The **Serial Baud Rate** drop down menu is used to select the baud rate at which the data is transmitted.

The available baud rates are:

*9600kbps*

*19.2kbps*

*38.4kbps*

---

## Settings for Connected Devices Group Box

### RVON Channel Drop Down Menu

The **RVON Channel** drop down menu is used to select the channel used to communicate to another device across the network.

### Device IP Address Field

The **Device IP Address** field indicates the device IP Address to which you want to connect.

### Device Type Drop Down Menu

The **Device Type** drop down menu is used to select the type of device to which you want to connect.

### Device Channel Drop Down Menu

The **Device Channel** drop down menu is used to select the channel on the device to which the RVON card communicates.

### Codec Type Drop Down Menu

The **Codec Type** drop down menu is used to select the codec type for this channel.

Selections available are:

*G.711ms law*

*G.711A law*

*G.729AB*

*G.723 (5.3k)*

*G.723 (6.3k)*

**NOTE:** A codec is an algorithm used to compress audio. There are five (5) codecs supported by Telex: G.711ms law, G.711A law, G.729AB, G.723 (5.3k), and G.723 (6.3k). The type of codec dictates the quality of audio you hear and the network bandwidth used. The packet size determines how much audio data is carried across the network in each transmitted packet. The codec type and packet size chosen require different amounts of bandwidth from the network.

The Intercom System Administrator and the Network Administrator might want to work together in choosing the codec type and packet size suitable for the size of the network.



---

## Packet Size Drop Down Menu

The **Packet Size** drop down menu is used to select the size of each audio packet.

Selections available are:

*10ms audio/packet*

*20ms audio/packet*

*30ms audio/packet*

As with the codec type, the packet size you choose for the audio transfer affects the audio you hear and the bandwidth you use over the network. Using a larger audio packet size results in less bandwidth use. However, the larger packet size can result in higher delays and longer gaps if the packet is lost. On the other hand, smaller packet sizes result in larger bandwidth use, but lower delays and smaller gaps if the packet is lost.

**NOTE:** The Intercom System Administrator and the Network Administrator may want to work together in choosing the codec type and packet size suitable for the size of the network.

## Enable VAD (Voice Activity Detection) Check Box

The **Enable VAD (Voice Activity Detection)** check box is used to enable VAD on the channel. VAD saves network bandwidth by stopping the flow of audio packets when silence is detected. VAD is similar to VOX.

---

## GPIO-16 Configuration Window

The **GPIO-16 Configuration** window, shown in Figure 127, is used to configure the GPIO-16 device. Some settings include the *IP Address*, *Network Mask*, and *Gateway Address*.

**NAVIGATION:** From the menu bar, select *Options/GPIO-16 Configuration*.

**NOTE:** Remember to send any change you make to the intercom system using *Edit/Send Changes* or the Activate button.



FIGURE 127. GPIO-16 Configuration Window


---

### Select GPIO-16 Group Box

#### IP Address Field


The **IP Address** field indicates the IP Address of the GPIO-16 device.

#### Lookup Button

The **Look-Up** button  is used to look up a GPIO-16 IP Address manually entered into the IP Address field. This IP Address may be on the other side of the gateway.

---

## Browse Button

The **Browse** button  opens the “Select GPIO-16 Window” on page 138. From this window, you can select a GPIO-16 device from a list of all the devices on the local network that can respond to a broadcast. The MAC Address, IP Address, and a description of the device are displayed in the window.

**NOTE:** If this is the first time the GPIO-16 is being used, only the MAC Address of the unit displays.

## GPIO-16 Configuration Group Box

### MAC Address Field

The **MAC Address** field displays the MAC Address of the GPIO-16. This field is not configurable.

**NOTE:** Do not confuse the MAC Address with an IP Address. The MAC Address is a fixed address that identifies a physical piece of hardware on a network. An IP Address, on the other hand, is a network identifier for a computer or device on a TCP/IP network. Where, typically, MAC Addresses are hard-coded to a device, an IP Address is not.

### Description Field

The **Description** field is used to enter a unique description, up to 48-characters, for the GPIO-16 device. This description appears in the GPIOs window (*System/GPIO-16*).

### New IP Address Field

The **New IP Address** field is used to enter or change the IP Address for the GPIO-16 device.

### Network Mask Field

The **Network Mask** field is used to enter a network mask, if applicable, for the GPIO-16 device.

**NOTE:** A network mask is a 32-bit number indicating the range of IP Addresses residing on a single IP/Subnet/Supernet. An example of a network mask is 255.255.255.0.

### Default Gateway Field

The **Default Gateway** field is used to enter the default gateway address for the GPIO-16 device.

**NOTE:** A default gateway is a node on a computer network that serves as an access point to another network.

### Ethernet Settings Drop Down Menu

The **Ethernet Settings** drop down menu is used to select the Ethernet settings for the GPIO-16 device.

The values for this field are:

*10Mbps, Half-Duplex*

*100Mbps, Half-Duplex*

*10Mbps, Full-Duplex*

*100Mbps, Full-Duplex*

*Auto negotiate* - The GPIO-16 automatically alternates between 100Mbps half-duplex and 10Mbps half-duplex in an attempt to determine what link speeds are supported.

---

## Current Settings Field

The **Current Settings** field displays the current Ethernet speed, selected by the auto-negotiate menu item.

## Primary MC Field

The **Primary MC** field indicates the IP Address of the primary master controller.

## Current Button

The **Current** button  is used to select the IP Address of the intercom AZedit is communicating with.

## Primary MC Browse Button

The **Primary MC Browse** button is used to display all intercoms on the local network that can respond to a broadcast.

## Backup MC Field

The **Backup MC** field indicates the IP Address of the backup master controller.

## Apply Button

The **Apply** button sends all changes to the intercom. It saves all changes you have made and does not close the active window.

## Close Button

The **Close** button closes the current window without saving any changes.


---


## Configure Logging Window

The **Configure Logging** window, shown in Figure 128, is used to configure the connection type of the AZedit sessions where log messages are sent when the Log To File (See “Logging Page” on page 76.) option is selected. The Configure Logging window is only accessible when connected to AZedit using the J1 serial connection or using the target AZedit session.

**IMPORTANT:** If you are using an ADAM system, you must be running a MCII-e version 1.5.1 or later.

**NAVIGATION:** From the menu bar, select *Logging/Configure Logging*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

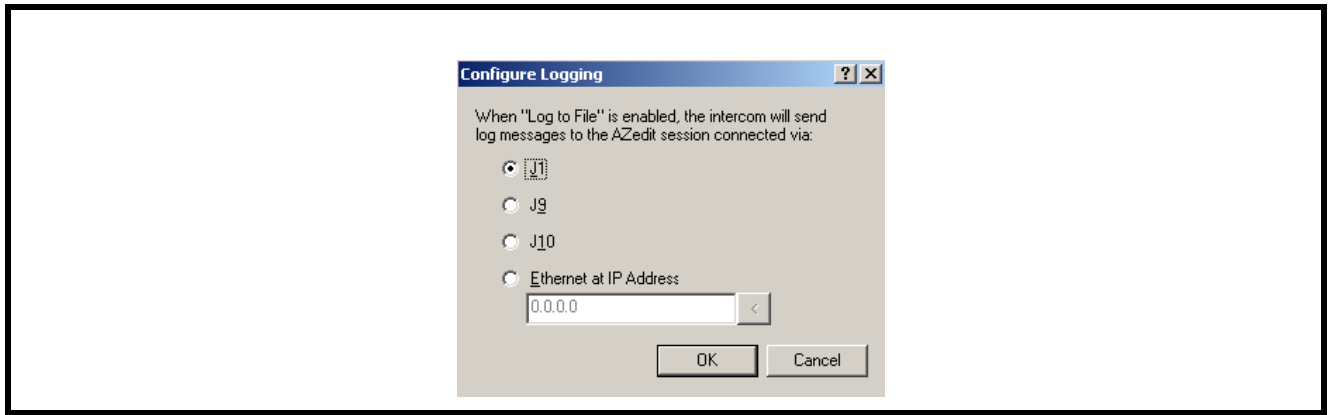

**FIGURE 128.** Configure Logging Window

**NOTE:** When a Cronus is connected and running, a USB radio button is seen. You may select the USB radio button to send log messages to another AZedit session connected via a USB connection.

### **J1 Radio Button**

The **J1** radio button indicates log messages are sent to another AZedit session connected serially over the J1 port.

**NOTE:** The only AZedit sessions allowed to configure the log destination are the AZedit session currently configured as that target destination for log messages or the main serial connection connected to J1 of the ADAM MC breakout panel. Restrictions can be set up for the AZedit destination session to restrict access to the Configure Logging window.

### **J9 Radio Button**

The **J9** radio button indicates log messages are sent to another AZedit session connected serially over the J9 port.

### **J10 Radio Button**

The **J10** radio button indicates log messages are sent to another AZedit session connected serially over the J10 port.

### **Ethernet Radio Button**

The **Ethernet** radio button indicates log messages are sent to another AZedit session connected over Ethernet.

### **IP Address Field**

The **IP Address** field is used to enter the IP Address of the computer running the AZedit session you want to send log messages to over Ethernet.

---

## Authentication Configuration Window

The **Authentication Configuration** window, shown in Figure 129, is used to configure authentication for your intercom system. Authentication is the process of determining whether someone is, in fact, who he or she declares to be. In private and public computer networks (including the Internet), and similarly AZedit, authentication is commonly done through the use of user profiles and passwords. Intercoms supporting authentication may require a username and password for each AZedit session.


With the introduction of Ethernet connections, it is easier for users to log onto AZedit from more places within the network and beyond. Because of this capability, the security of your Intercom can become compromised. With Authentication, a level of security is placed on your intercom that requires the use of profiles and personal passwords.


Authentication is enabled on J9, J10, USB or Ethernet sessions. However, the J1 or serial connection session is always be unauthenticated.

Authentication is configured through AZedit, where usernames and passwords are specified for each user. You can configure users as administrators for the different intercom systems or require a restrictions file to be present. Editing authentications requires Administrator status or connection on an authenticated system.

When user profiles are present, users can change their passwords and have passwords remembered for future automated logons. With the ability to have multiple AZedit sessions running different intercom sessions and allowing for multiple users on each computer, controlling access is made easier through the use of user profiles. User profiles include configuration, capabilities, communication settings, preferences and toolbar configurations. Profiles are stored separately for each intercom. For example, if you have three intercom systems (Intercom 1, Intercom 2, and Intercom 3), each intercom system has its own user profile folder.

**NAVIGATION:** From the menu bar, select *Authentication/Configuration*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

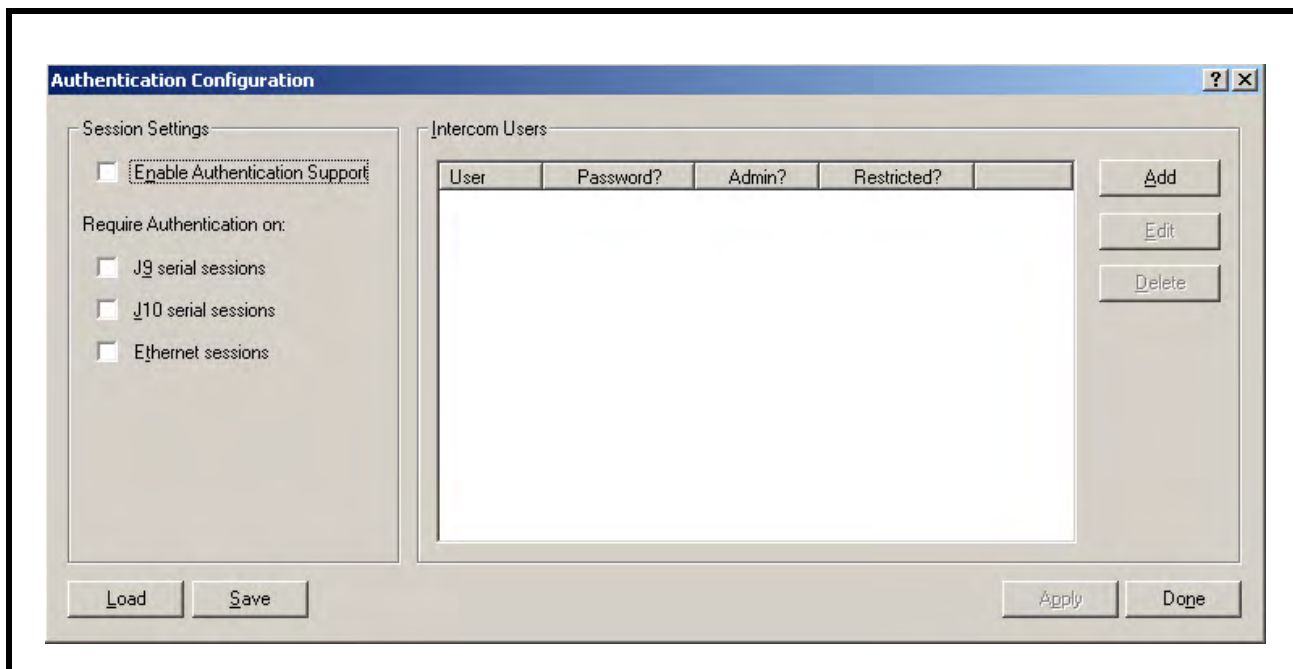

**FIGURE 129.** Authentication Configuration Window

---

---

## Sessions Settings Group Box

### **Enable Authentication Support Check Box**

The **Enable Authentication Support** check box is used to enable authentication for the current AZedit session.

### **Require Authentication On Check Boxes**

The **Require Authentication On** check boxes are used to select the types of connections that require authentication to use.

*J9* - All J9 serial sessions

*J10* - All J10 serial sessions

*Ethernet* - All Ethernet sessions

**NOTE:** When connected to a Cronus, a USB option is available.

---

## Intercom Users Group Box

### **User Column**

The **User** column displays the name of the user added to the authentication file.

### **Password? Column**

The **Password?** column displays whether the user has a password associated with the authentication file for the intercom.

### **Admin? Column**

The **Admin?** column displays if the user is an administrator for the intercom. If the user is an administrator, a *Yes* appears in the column. Otherwise, a *No* is displayed.

### **Restricted? Column**

The **Restricted?** column indicates a restrictions file should be used by AZedit. If a restrictions file is needed, a *Yes* appears in the column. Otherwise, a *No* is displayed.

### **Add Button**

The **Add** button opens the Add User window. From this window you can create users to add to the intercom users list. For more information, see “Add/Edit User Window” on page 68.

### **Edit Button**

The **Edit** button opens the Edit User window. From this window you can edit existing user profiles from the intercom users list. Highlight the **users profile**, and then click **Edit**.

### **Delete Button**

The **Delete** button deletes the selected user profile from the Intercom Users list.

### **Load Button**

The **Load** button is used to load the Authentication File to the current intercom system.

---

## Save Button

The **Save** button is used to save the current authentication file. If this is the first save performed, you must name the file. Files are saved to the file path defined in AZedit Preferences on the Authentication page. See “Authentication Page” on page 83.

## Apply Button

The **Apply** button sends all changes to all cards in the intercom. It saves all changes you have made and does not close the active window.

## Done Button

The **Done** button closes the current window after an Apply has been made. The Done button is the default button seen on the Authentication window.

## Cancel Button


The **Cancel** button closes the current window without saving or applying any modifications. The *Cancel* button appears only after you create or modify an authentication file. Otherwise, the *Done* button is shown.

---

## Add/Edit User Window

The **Add/Edit User** window, shown in Figure 130, is used to create or modify user profiles for use with authentication.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 📶

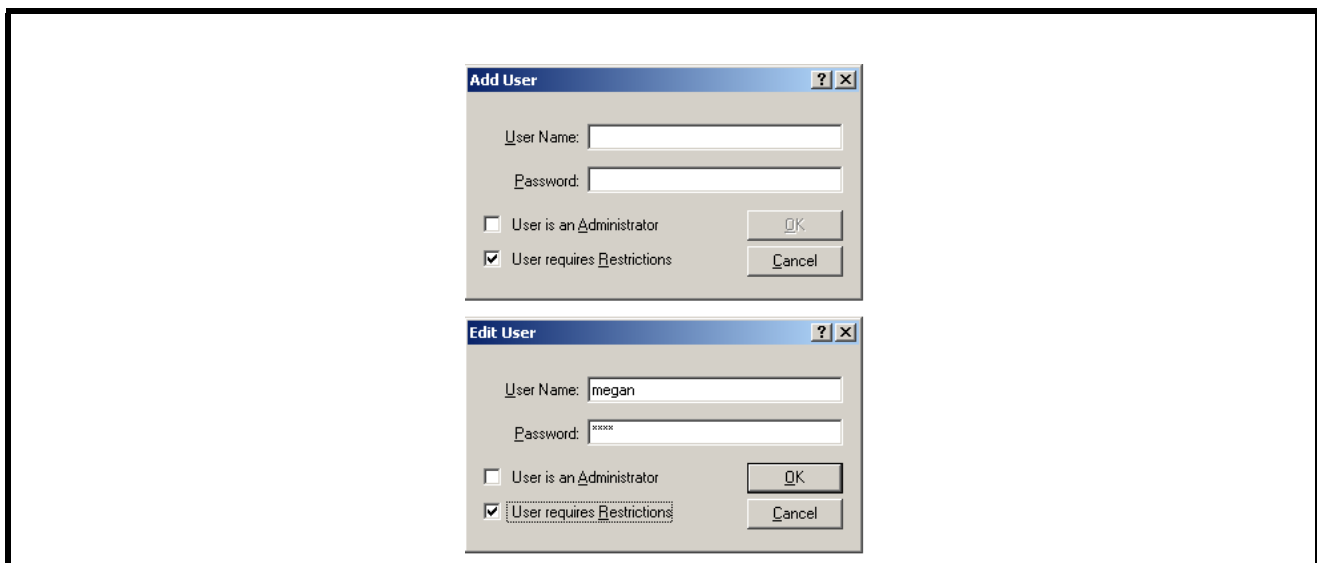

**FIGURE 130.** Add User and Edit User Windows

---

## User Name Field

The **User Name** field is used to enter the user name for the profile you create or modify in the authentication file.

There is *no character limit* on this field, however anything over 24 characters is truncated in the user name column on the Authentication Configuration window.



---

## Password Field

The **Password** field is used to enter or modify a password for the profile you create in the authentication file. Passwords display as asterisks (\*) when you enter them into the field.

There is no character limit on the password field. However, use the password tips below to create secure and easy to remember passwords.

To create a secure password that is easy for you to remember, follow these simple steps:

- Do not use personal information.
- Do not use real words. There are tools available to help attackers guess your password. With today's computing power, it doesn't take long to try every word in the dictionary and find your password, so it is best if you do not use real words for your password.
- Mix different character types. You can make a password much more secure by mixing different types of characters. Use some uppercase letters along with lowercase letters, numbers and even special characters such as '&' or '%'.
- Use a pass-phrase. Rather than trying to remember a password created using various character types which is also not a word from the dictionary, you can use a pass-phrase. Think up a sentence or a line from a song or poem that you like and create a password using the first letter from each word.

## User is an Administrator Check Box

The **User is an Administrator** check box is used to indicate the current user profile is an administrator for this intercom system. Administrator rights allow the user to make changes to the authentication file.

## User Requires Restrictions Check Box

The **User Requires Restrictions** check box indicates a restrictions file is applied to this user.

A **Restrictions File** is a set of permissions created for a specific user. For example, you can set restrictions so certain users are unable to create new users within the intercom system.

**NOTE:** Telex's Restriction Editor is a 32-bit Windows application designed to run under Windows 2000 and Windows XP. It may also run on Windows NT/95/98/ME with Internet Explorer V6.0 or later. Restrictions Editor requires a copy of AZedit.exe to be available in order to determine the AZedit menu structure for creating restrictions.


Restrictions Editor is a tool to create restriction files for use with AZedit Intercom software. Restriction Files allow administrators to manage user access to resources and features. AZedit includes support for user restrictions by reading and analyzing a text file (the restrictions file) that sends out the set of resources and features available to each user.


---

## SNMP Configuration Window

The **SNMP Configuration** window, shown in Figure 131, is used to configure **SNMP** (Simple Network Management Protocol) for your Intercom System. Simply put, SNMP allows you to send messages when specified events occur over the Intercom System.

**NAVIGATION:** From the menu bar, select *Options/SNMP Configuration*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

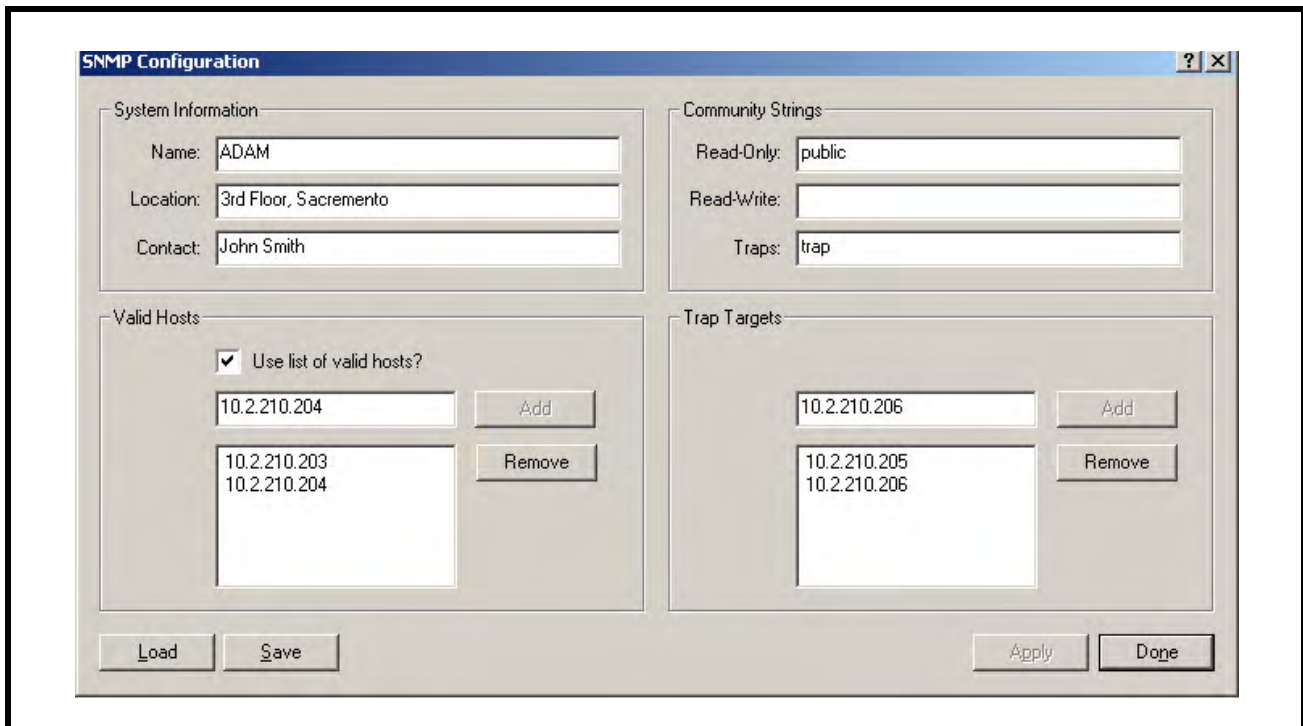

The screenshot shows the 'SNMP Configuration' window with a blue title bar and standard window controls. It is divided into four main sections: 'System Information', 'Community Strings', 'Valid Hosts', and 'Trap Targets'. The 'System Information' section has text boxes for 'Name' (ADAM), 'Location' (3rd Floor, Sacramento), and 'Contact' (John Smith). The 'Community Strings' section has text boxes for 'Read-Only' (public), 'Read-Write' (empty), and 'Traps' (trap). The 'Valid Hosts' section has a checked checkbox 'Use list of valid hosts?', a text box with '10.2.210.204', an 'Add' button, and a list box containing '10.2.210.203' and '10.2.210.204' with a 'Remove' button. The 'Trap Targets' section has a text box with '10.2.210.206', an 'Add' button, and a list box containing '10.2.210.205' and '10.2.210.206' with a 'Remove' button. At the bottom are 'Load', 'Save', 'Apply', and 'Done' buttons.

**FIGURE 131.** SNMP Configuration Window

---

### System Information Group Box

The **System Information** group box is used for documentation purposes. This is so the user knows which device is configured and where it is physically located.

#### Contact Field

The **Contact** field identifies the name of the Intercom System in which SNMP is configured.

Up to *100 characters* can be entered into this field.

#### Location Field

The **Location** field identifies the physical location of the intercom system (for example, 3rd floor, Sacramento).

Up to *100 characters* can be entered into this field.

---

## Contact Field

The **Contact** field identifies the name of the person responsible for the specified SNMP device.

Up to *100 characters* can be entered into this field.

## Community Strings Group Box

### Read-Only Field

The **Read-Only** field displays the password that provides read-only access via SNMP.

The default entry is *public*. Public allows every user access to Read the SNMP structure.

Up to *64 characters* can be entered into this field.

### Read-Write Field

The **Read-Write** field displays the password that provides read-write access via SNMP.

Up to *64 characters* can be entered into this field.

### Traps Field

The **Traps** field displays the trap identifier for the SNMP event monitor. The Traps community string specifies the community string included in all SNMP traps generated by the intercom.

The default entry is *trap*.

**NOTE:** A **SNMP Trap** is a notification event issued by a managed device (the Intercom System) to the network management station when an event or error occurs. When an event or error occurs, a message is sent to the SNMP Monitoring Software with the Trap Community String description.

## Valid Hosts Group Box

### Use List of Valid Hosts? Check Box

The **Use List of Valid Hosts?** check box is used to allow queries to the specified SNMP Monitoring machines. You can specify the IP Address of these machines in the Valid Host IP Address list.

### Valid Host Entry Field

The **Valid Host Entry** field is used to add up to five (5) IP Addresses of host machines that accept SNMP requests.

**NOTE:** You must enter a valid IP Address structure for the Add button to become active.

### Valid Host List

The **Valid Host** list displays the IP Addresses of the machine that accept SNMP queries.

### Add Button

The **Add** button adds the specified IP Address to the valid host list.

**NOTE:** You must enter a valid IP Address structure for the Add button to become active.

---

## Remove Button

The **Remove** button removes the selected IP Address from the valid host list. You can only remove one (1) IP Address at a time.

## Trap Targets Group Box

### Trap Target Entry Field

The **Trap Target Entry** field displays the IP Address of the computer where the trap messages are sent. You can have up to five (5) devices configured to accept these messages.

**NOTE:** You must enter a valid IP Address structure for the Add button to become active.

### Trap Target List

The **Trap Target** list displays a list of all the IP Addresses (computers) where you want Trap messages sent.

### Add Button

The **Add** button adds the IP Address in the trap target entry field to the trap target list.

**NOTE:** You must enter a valid IP Address structure for the Add button to become active.

### Remove Button

The **Remove** button removes the selected IP Address from the trap target list. You can only remove one (1) IP Address at a time.

### Load Button

The **Load** button is used to load the SNMP File to the current intercom system.

### Save Button

The **Save** button is used to save the current SNMP file. If this is the first save performed, you must name the file. Files are saved to the file path defined in Preferences on the Advanced page. See “Advanced Page” on page 80.

### Apply Button

The **Apply** button sends all changes to all cards in the intercom. It saves all changes you have made and does not close the active window.

### Done Button

The **Done** button closes the current window after an Apply has been made. The Done button is the default button seen on the SNMP Configuration screen.

### Cancel Button


The **Cancel** button closes the current window without saving or applying any modifications made. The *Cancel* button appears only after you create or modify an SNMP file. Otherwise, the *Done* button is shown.

---

## Application Preferences Window

The **Application Preferences** window, shown in Figure 132, is used to set application preferences for Startup/Shutdown operations, Alpha displays, Logging operations, General operations, Advanced operations, Authentication save options, and Maintenance operations.

**NAVIGATION:** From the menu bar, select *Options/Preferences*.

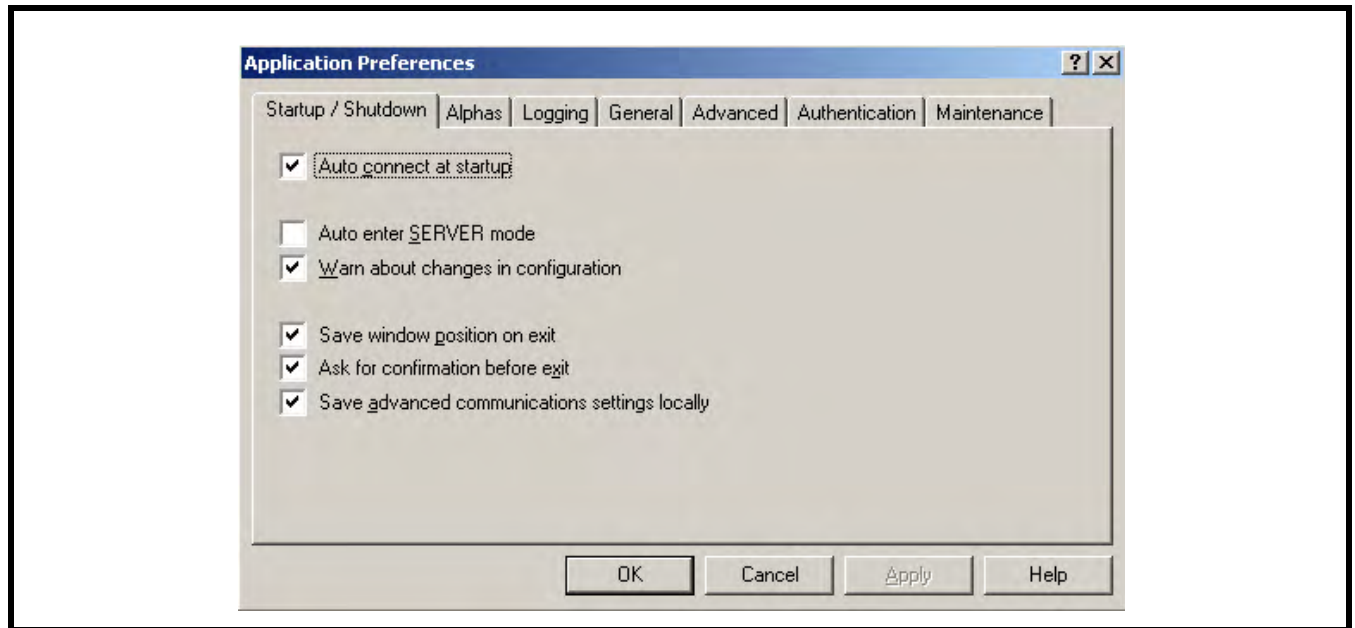

**FIGURE 132.** Application Preferences Window - Startup/Shutdown page

---

## Startup/Shutdown Page

The **Startup/Shutdown** page, shown in Figure 132, is used to configure startup and shutdown options for the AZedit application.

### Auto Connect at Startup Check Box

The **Auto Connect at Startup** check box indicates AZedit enters ONLINE mode when the application is started.


### Auto Enter SERVER Mode Check Box

The **Auto Enter SERVER Mode** check box indicates AZedit enters SERVER mode when the application is started.

---

### Warn About Changes in Configuration Check Box

The **Warn About Changes in Configuration** check box indicates a warning message (Figure 133) displays every time the Intercom Configuration window is accessed (*Options/Intecom Configuration*).

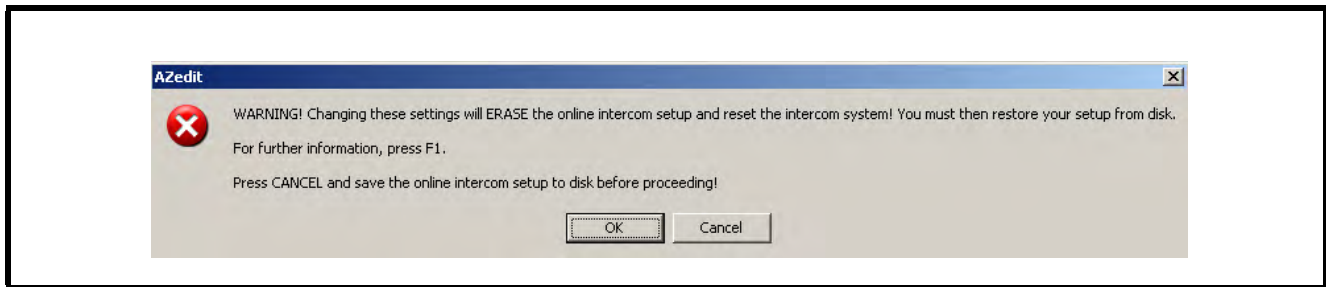

**FIGURE 133.** Configuration Change Warning


---

### Save Window Position on Exit Check Box

The **Save Window Position on Exit** check box indicates the current window position is saved upon exit. This setting keeps the last window placement when you close AZedit and remembers the setting when you open AZedit again.

### Ask For Confirmation Before Exit Check Box

The **Ask For Confirmation Before Exit** check box indicates the popup message below appears every time AZedit is closed.

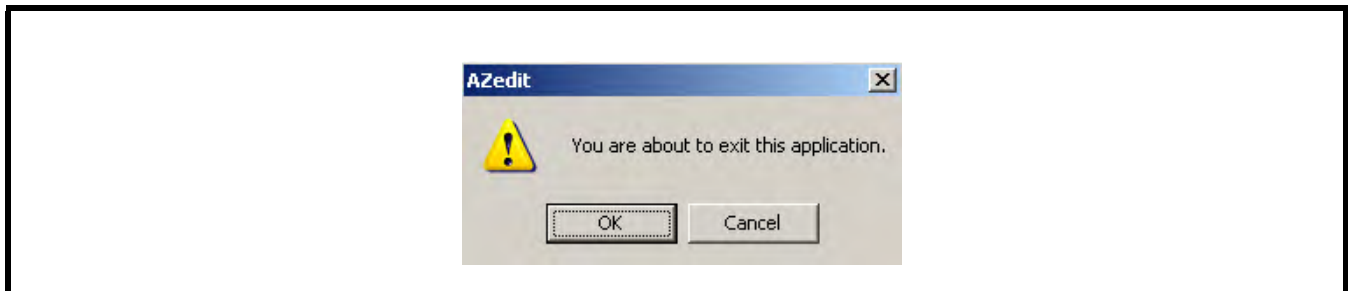


**FIGURE 134.** AZedit Exit Message

---

### Save Advanced Communication Settings Locally Check Box

The **Save Advanced Communication Settings Locally** check box indicates communication settings are saved locally on the intercom system.

The **Alphas** page, shown in Figure 135, is used to configure the way AZedit displays Alphas, from sorting to character length.

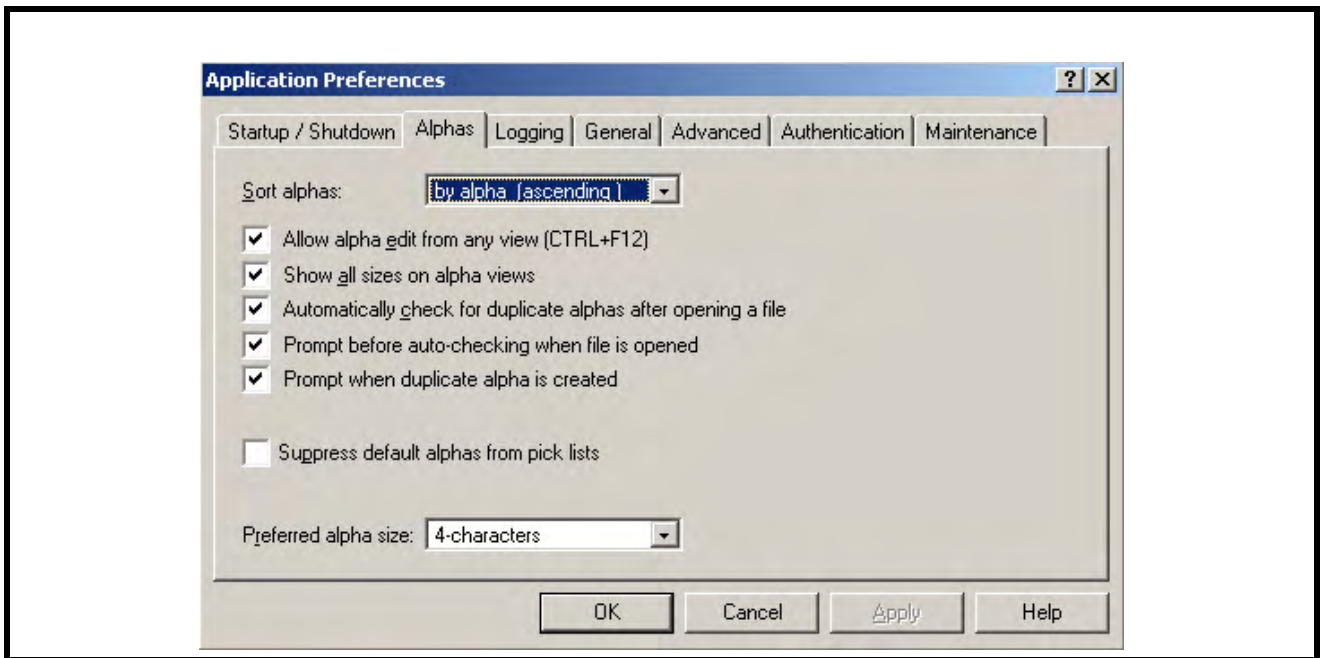

**FIGURE 135.** Application Preferences - Alphas page

### Sort Alphas: Drop Down Menu

The **Sort Alphas:** drop down menu is used to select how you would like to view alphas appearing in a list; either *by alpha* or *by number*. If *by alpha* is selected, the alphas appear in alphabetical order. If *by number* is selected, the alphas appear in numerical order.

### Allow Alpha Edit From Any View (CTRL+F12) Check Box

The **Allow Alpha Edit From Any View (CTRL+F12)** check box indicates changes to alphas on any screen within AZedit are allowed. By selecting this configuration option, you are not limited to editing alphas in the Alpha window.

### Show All Sizes on Alpha Views Check Box

The **Show All Sizes on Alpha Views** check box displays all alpha sizes (*4-, 6-, and 8-character*) in all alpha columns. These columns refer to the character size of the alpha.

**NOTE:** When you enter a 4-character alpha, and View All Sizes on Alpha Views, the 4-character alpha populates the 6-character and 8-character fields.

### Automatically Check for Duplicate Alphas After Opening a File Check Box

The **Automatically Check for Duplicate Alphas After Opening a File** check box indicates AZedit automatically searches a new file for duplicate alphas in the system. This can help decrease the possibility of having duplicate alphas for different ports.

### Prompt Before Auto-Checking When a File is Opened Check Box

The **Prompt Before Auto-Checking When a File is Opened** check box is used to display the message, “*Do you want to check for duplicate alphas?*” every time a new setup file is loaded.

---

### Prompt When Duplicate Alpha is Created Check Box

The **Prompt When Duplicate Alpha is Created** check box is used to display a warning message when a duplicate alpha is created on the intercom system.

By default the check box is selected.

### Suppress Default Alphas From Pick Lists Check Box

The **Suppress Default Alphas From Pick Lists** check box indicates any alpha with a default label is hidden in the application display.

### Preferred Alpha Size Drop Down Menu


The **Preferred Alpha Size** drop down menu displays alpha size options available to create and display in AZedit, including drop down lists throughout the application.

Options include: *4-character*, *6-character*, and *8-character*.

---

## Logging Page

The **Logging Page**, shown in Figure 136, is used to configure how logging in AZedit operates. You can also configure where Log Files are archived.

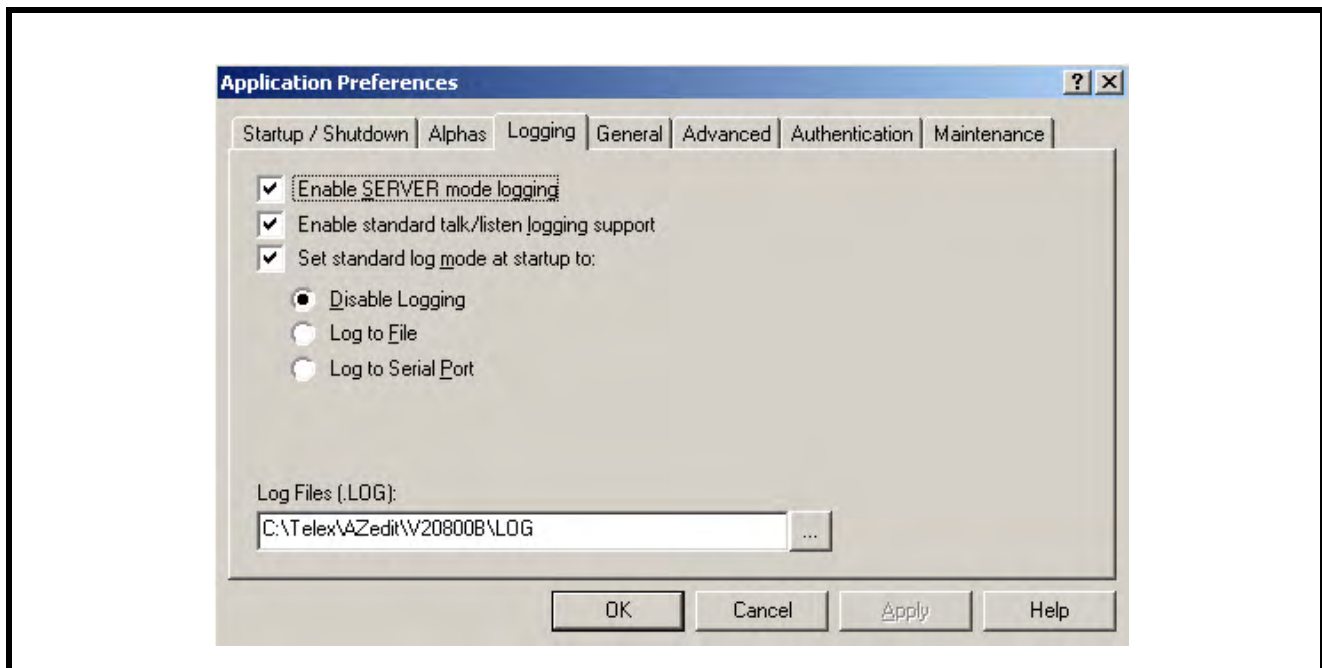

**FIGURE 136.** Application Preferences - Logging Page

---

### Enable SERVER Mode Logging Check Box

The **Enable SERVER Mode Logging** check box indicates events that occur in SERVER mode are logged to the Log File. For example, an intercom system requests a file from a keypanel. A record of this event is sent to the log file.



---

## Enable Standard Talk/Listen Logging Support Check Box

The **Enable Standard Talk/Listen Logging Support** check box indicates standard logging is active in ONLINE and FILE Mode. This is also known as key press logging.

## Set Standard Log Mode and Startup To Check Box

The **Set Standard Log Mode and Start To** check box allows the user to select how to log events when AZedit starts. The options are as follows:

### *Disable Logging*

Logging is not active.

### *Log to File:*

Log events are written to a predetermined file on the computer or network.

### *Log to Serial Port:*

Log events are sent to a device connected over a serial port.

## Log Files .LOG Field

The **Log Files .LOG** field indicates where log events are logged on the computer or network. You must have the *Log to File* radio button selected.


## Browse Button

The **Browse** button opens a navigation window you can use to navigate to a folder to log events on the computer or network.

---

## General Page

The **General Page**, shown in Figure 137, is used to further configure AZedit to fit your intercom system application. From this window you can configure AZedit to automatically create backup files (.bak), confirm file names, prompt an ONLINE save before going into FILE mode, etc.

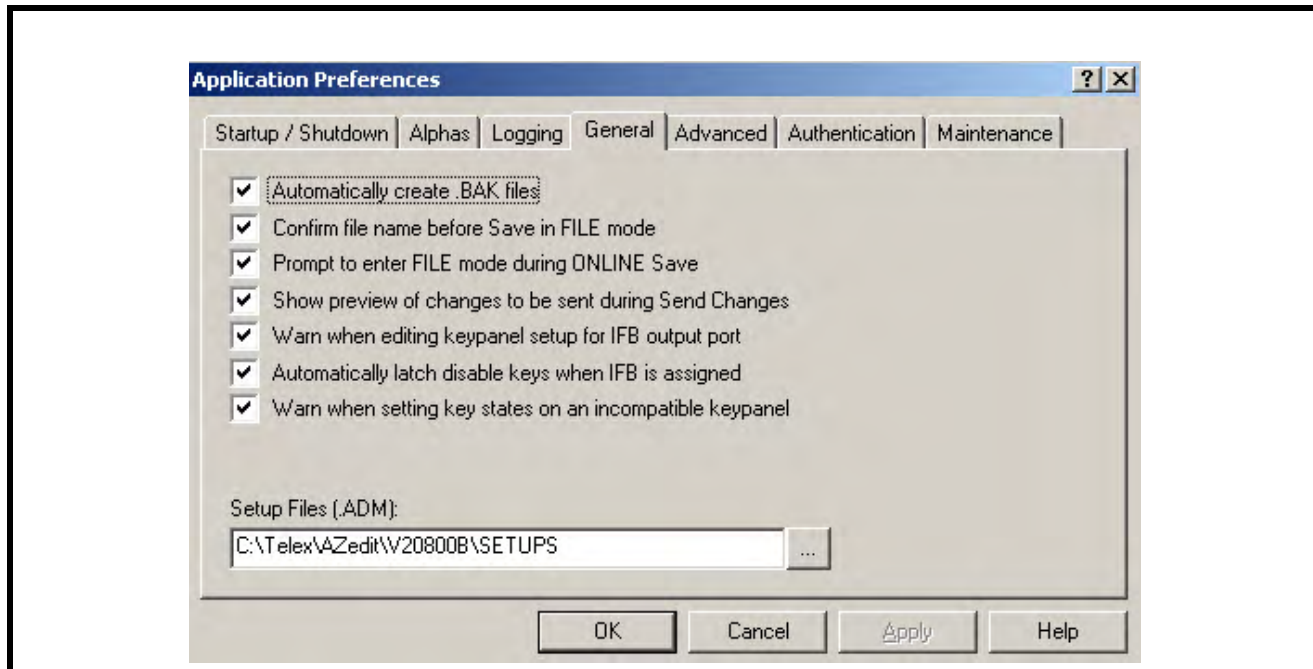

**FIGURE 137.** Application Preferences - General Page

---

### Automatically Create .BAK Files Check Box

The **Automatically Create .BAK Files** check box indicates AZedit automatically creates a backup file every time a Save is performed. The backup file is created in the same file as the setup file and retains all settings from the last Save made. The backup file can be useful when you want to return to the previously saved file settings.

By default, Automatically create .BAK files is selected.

### Confirm File Name Before Save in FILE Mode Check Box

The **Confirm File Name Before Save in FILE Mode** check box enables a confirmation message verifying the file name and save directory to be shown every time you save a setup file.


By default, Confirm File Name Before Save in FILE Mode is selected.

---

## Prompt to Enter FILE Mode During ONLINE Save Check Box

The **Prompt to Enter FILE Mode During ONLINE Save** check box indicates a confirmation window appears when a Save is performed in ONLINE mode. When you save the ONLINE configuration to a file on disk, AZedit always uploads the current intercom settings before proceeding with the save. These settings are merged with any changes you have made, but have not yet been sent to the intercom system. The file you save contains current system settings, plus any changes you have made.

**NOTE:** A backup copy of your system configuration is not needed for protection against power loss since the system's master controller retains the system configuration (even during a power outage). However, the backup copy does give you protection against a complete failure of the master controller itself. (A backup master controller in the ADAM or ADAM CS frame also accomplishes this.) In addition, a backup disk copy gives you protection against unwanted changes to the intercom system configuration

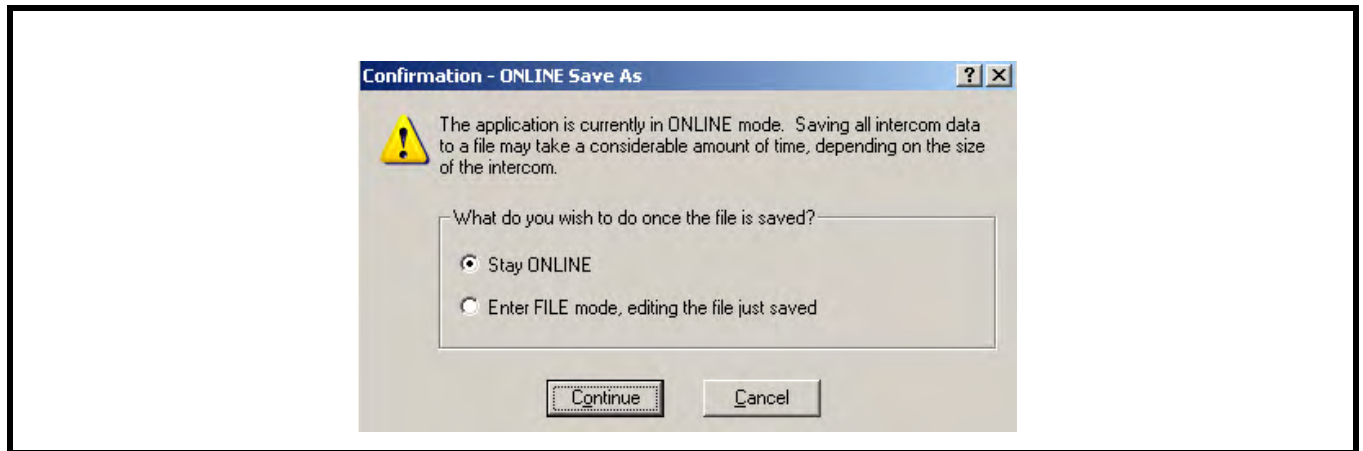

**FIGURE 138.** ONLINE Save Warning Message

When the confirmation window appears, you have two options when saving the setup file:

*Stay ONLINE:* AZedit stays in ONLINE mode when the save is performed. If you choose to stay in ONLINE mode, you can later send changes you have made to the intercom system, and your ONLINE configuration then matches what you have saved to disk.

**WARNING:** If you stay online, there is a risk of changes being made by another keypanel operator to the setup file after you save in ONLINE mode.

*Enter File mode, editing the file just saved:* AZedit enters FILE mode. If you choose to enter FILE mode the current system settings, plus your changes, are saved to disk; however, the changes are not sent to the intercom system. In this case, if you want to update the intercom system to match the file you have saved, you must enter ONLINE mode and send the file you saved to the intercom system.

## Show Preview of Changes to be Sent During Send Changes Check Box

The **Show Preview of Changes to be Sent During Send Changes** check box indicates the *Send All* window appears displaying a list of changes you made. This allows you to verify the changes before you send them to the intercom system.

By default, Show Preview of Change to be Sent During Send Changes is enabled.

For more information, see “Send All Window” on page 263.

---

## Warn When Editing Keypanel Setup for IFB Output Port Check Box

The **Warn When Editing Keypanel Setup for IFB Output Port** check box displays the message *“This port is configured as an IFB output bus for at least one IFB. There may not be a physical keypanel associated with this port every time changes are made to an IFB output port.”* This helps to insure no changes are made to existing IFB assignments.

## Automatically Latch Disable Keys when IFB is Assigned Check Box

The **Automatically Latch Disable Keys when IFB is Assigned** check box disables latching for keys with IFB assignments.

## Warn When Setting Key States on an Incompatible Keypanel Check Box

The **Warn When Setting Key States on an Incompatible Keypanel** check box displays the warning message *“This command may not work as expected due to physical design of this port’s keypanel”*, when an incompatible keypanel is being modified.

## Setup Files (.ADM): Field

The **Setup Files (.ADM)** field indicates where to save setup files on the computer or network.

## Browse Button




The **Browse** button opens a navigation window you can use to navigate to a folder to save setup files on the computer or network.

---

## Advanced Page

The **Advanced Page**, shown in Figure 139, is used to set advanced options for the currently connected intercom system. These options include: panel poll delay support, TIF support, Trunking support, SERVER mode support, allow intercom resizing in ONLINE mode, allow crosspoint inspection in FILE mode, allow firmware download and allow key state changes.

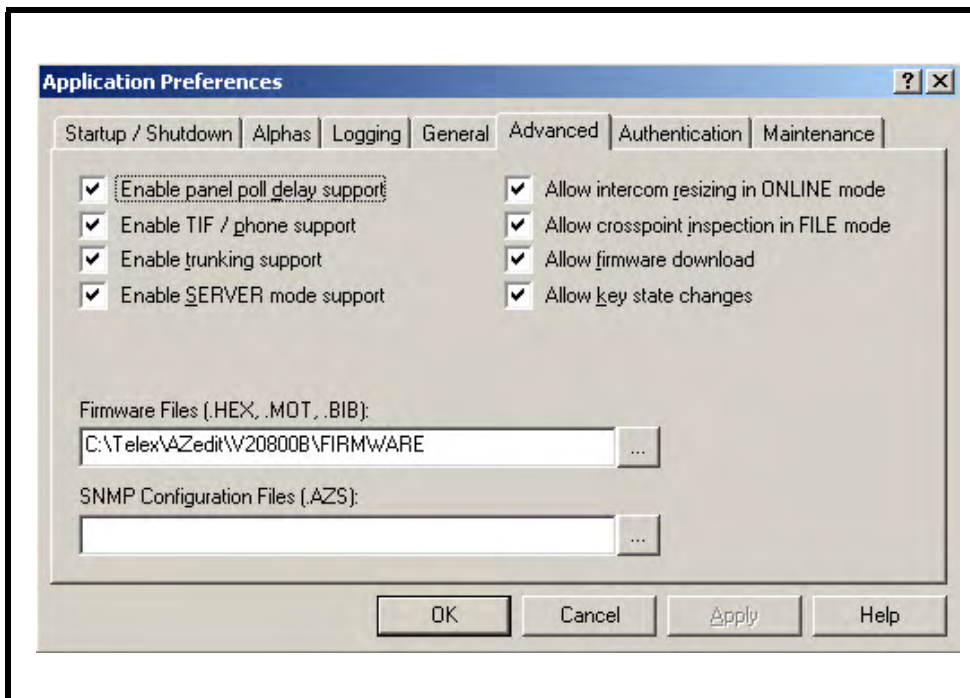

**FIGURE 139.** Application Preferences - Advanced Page

---

---

### **Enable Panel Poll Delay Support Check Box**

The **Enable Panel Poll Delay Support** check box enables panel poll support in AZedit. Panel Poll Delay is typically used when a keypanel's data line is connected to the intercom port via a modem link from a remote location. In this situation, there may be a slight delay in data transmission from the remote keypanel to the intercom system. This may cause sporadic operation or no operation at all. However, by setting a delay time, the intercom system waits a little longer for data transmissions from the remote keypanel.

### **Enable TIF/Phone Support Check Box**

The **Enable TIF/Phone Support** check box enables **TIF** (Telephone Interface Frame) or phone devices to be used with AZedit.

### **Enable Trunking Support Check Box**

The **Enable Trunking Support** check box enables the alias alphas and trunking on the system. **Aliases** are used only with trunked intercom systems. Alias names are used to identify destinations in your intercom system to AZedit administrators and keypanel operators in other intercom systems. Aliases are provided because sometimes an Alpha name being used in your intercom system is also being used in some other intercom system. In this case, you can enter an Alias name that does not conflict with the name already in use. Another reason you might want to use an Alias is some other name might be more meaningful to keypanel operators in another intercom system.

### **Enable SERVER Mode Support Check Box**

The **Enable SERVER Mode Support** check box allows users to enter into SERVER mode.

**NOTE:** When SERVER mode is on, you can view the online configuration and also observe intercom activity, but you cannot make any changes and you cannot manually load or send files.

### **Allow Intercom Resizing in ONLINE Mode Check Box**

The **Allow Intercom Resizing in ONLINE Mode** check box allows changes to the intercom system via the Intercom Sizing Wizard. If this option is not selected, no configuration changes may be made to the Intercom.

### **Allow Crosspoint Inspection in FILE Mode Check Box**

The **Allow Crosspoint Inspection in FILE Mode** check box allows users to review crosspoint connections in FILE mode. This option can be used to test new Setup file crosspoint configurations (Party Lines, Special Lists, etc....) before going "live" with the file.

### **Allow Firmware Download Check Box**


The **Allow Firmware Download** check box allows users to download firmware to connected devices in AZedit. If you do not want users to be able to download firmware to connected devices, clear the check box. For more information on how to download firmware, see X.


---

## Allow Key State Changes Check Box

The **Allow Key State Changes** check box allow users to turn the talk or listen key function ON and OFF in AZedit.

To **Turn Key States ON or OFF**, do the following:

1. In AZedit, click the **Keypanel/Ports icon**.   
*The Keypanel/Ports window appears.*
2. Right-click in a **listen** or **talk** field.  
*A pop-up menu appears.*

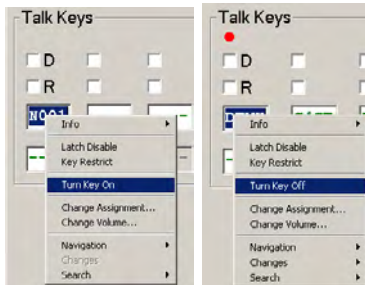

3. From the pop-up menu, select **Turn Key On** (*Turn Key Off*).  
*A red dot appears above the key assignment to signify the key is active.*

## Firmware Files (.HEX, .MOT, .BIB): Field

The **Firmware Files (.HEX, .MOT, .BIB):** field indicates where the firmware files are stored on the computer or network. By default, firmware files are stored in `C:\TELEX\AZedit\V3.X.X\FIRMWARE`.

### Browse Button

The **Browse** button opens a window you can use to navigate to a folder to save firmware files on the computer or network.

## SNMP Configuration Files (.AZS): Field

The **SNMP Configuration Files (.AZS):** field indicates where SNMP configuration files are stored on the computer or network. By default, SNMP configuration files are stored in `C:\TELEX\AZedit\V3.X.X\SNMP`.

### Browse Button

The **Browse** button opens a window you can use to navigate to a folder to save SNMP configuration files on the computer or network.

---

## Authentication Page


The **Authentication Page**, shown in Figure 140, is used to indicate where to store restriction and authentication files.

*Authentication* is the process of determining whether someone is, in fact, who he or she declares to be. In private and public computer networks (including the Internet), and similarly AZedit, authentication is commonly done through the use of user profiles and passwords. Intercoms supporting authentication may require a username and password for each AZedit session.

*Restrictions Editor*, a tool to create restriction files for use with AZedit, is a 32-bit Windows® application designed to run under Windows 2000® and Windows XP®. It may also run on Windows NT/95/98/ME® with Internet Explorer V6.0 or later.

Restriction files allow administrators to manage user access to resources and features. AZedit includes support for user restrictions by reading a text file (the restrictions file) and parsing out the set of resources and features available to each user.

**NOTE:** Restrictions Editor requires a copy of AZedit.exe be available in order to determine the AZedit menu structure for creating restrictions.

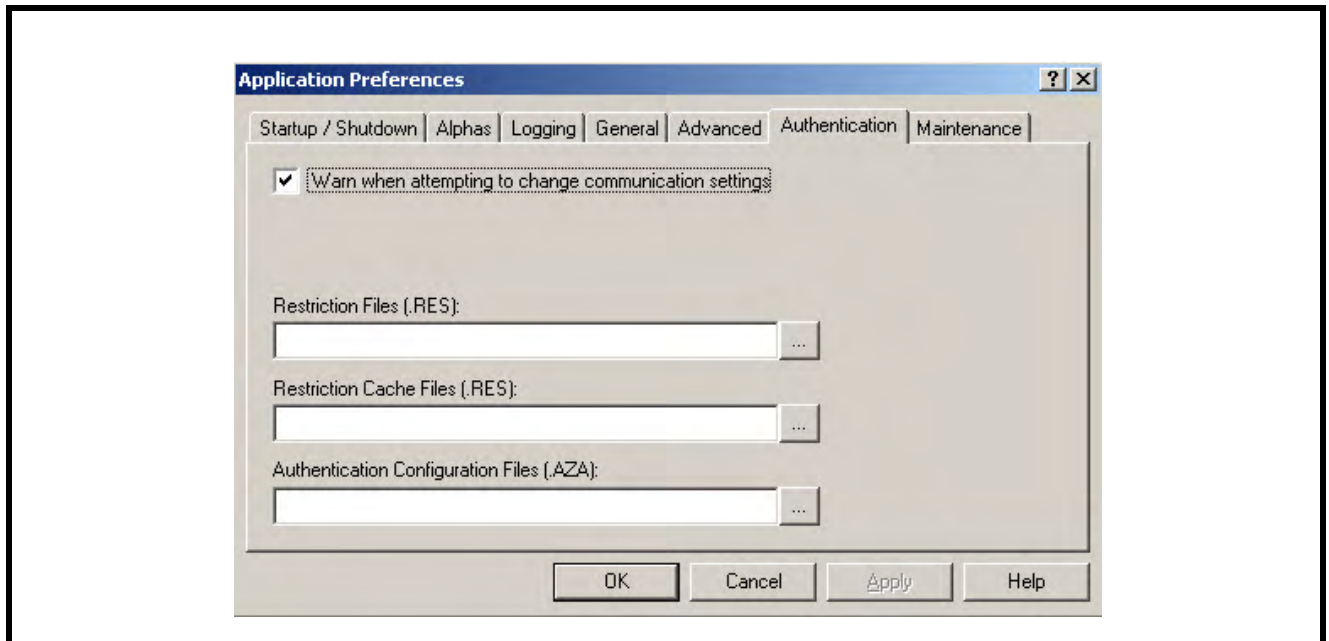

**FIGURE 140.** Application Preferences - Authentication Page

### Warn When Attempting to Change Communication Settings Check Box

The **Warn When Attempting to Change Communication Settings** check box displays a warning message when you make changes to the Communications window.

### Restriction Files (.RES): Field

The **Restriction Files (.RES):** field indicates where restriction configuration files are stored on the computer or network.

The Restrictions file can be on a network shared drive so one computer can run Restrictions Editor and create .RES files for each connected intercom from a central location. In addition, AZedit caches a copy of a .RES file on the local machine. So, if the network is down, AZedit is still able to access the most recent copy of the .RES file by using this cached version. If you are not using a network share, you do not have to specify the Restriction Files directory, AZedit only looks in the cache directory.

**NOTE:** Restriction files are only used with the Restriction Editor software. For more information, contact Telex Communications technical support.

---

## Browse Button



The **Browse** button opens a window you can use to navigate to a folder to save Restriction files on the computer or network.

### Restriction Cache Files (.RES): Field

The **Restriction Cache Files (.RES):** field indicates where to save the restriction files AZedit saves locally to prevent any downtime in case of network failure. The Restrictions Cache File saves these files in the Restrictions Cache Directory (C:\TELEX\AZEDIT\RES). If you are not using a network share, you do not have to specify the restriction files directory, AZedit only looks in the cache directory.

**NOTE:** Restriction files are only used with the Restriction Editor software. For more information, contact Telex Communications technical support.

## Browse Button



The **Browse** button opens a navigation window you can use to navigate to a folder to save Restriction Cache files on the computer or network.

### Authentication Configuration Files (.AZA) Field

The **Authentication Configuration Files (.AZA)** field indicates where to store the authentication configuration files. When using Authentication, AZedit creates an authentication configuration file (.AZA) that retains the settings you specify for AZedit use.

The AZedit Installation creates a directory under C:\Telex\AZedit\ called AUTH to hold these files. You can change where AZedit is to store these files, if desired.

## Browse Button




The **Browse** button opens a window you can use to navigate to a folder to save authentication files on the computer or network.



---

## Maintenance Page

The **Maintenance Page**, shown in Figure 141, is used to grant users specific user/device configuration abilities, such as adding, deleting and editing user and device profiles.

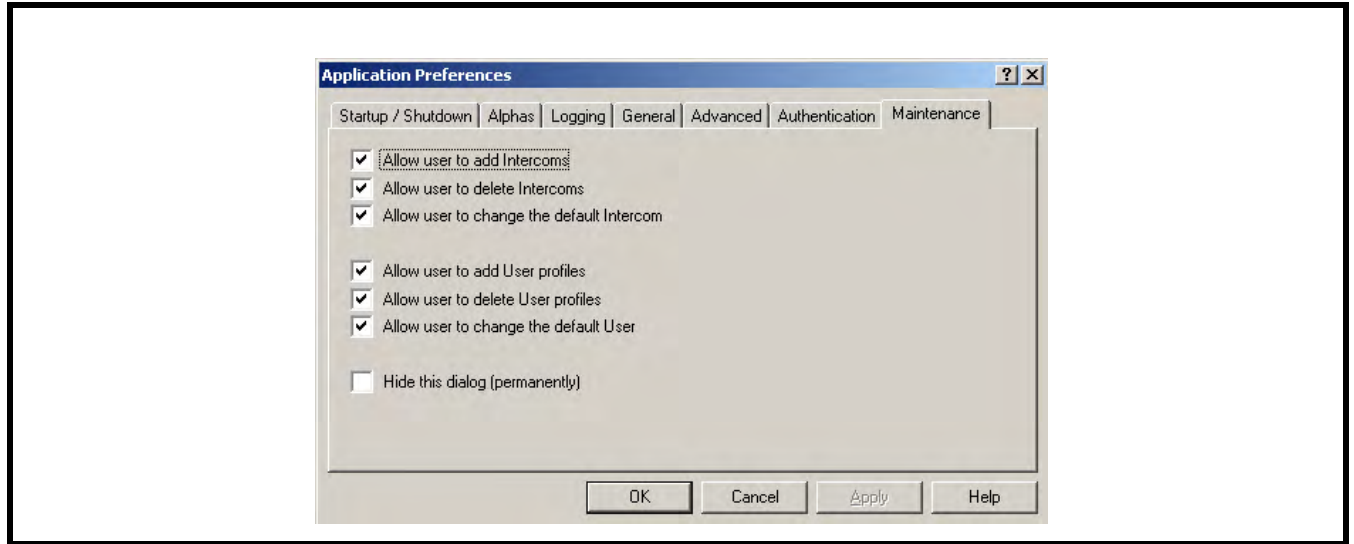

**FIGURE 141.** Application Preferences - Maintenance Page

---

### Allow User to Add Intercoms Check Box

The **Allow User to Add Intercoms** check box allows users to add intercom systems to the AZedit application.

### Allow User to Delete Intercoms Check Box

The **Allow User to Delete Intercoms** check box allows users to delete intercom systems from the AZedit application.

### Allow User to Change the Default Intercom Check Box

The **Allow User to Change the Default Intercom** check box allows users to change the default intercom system AZedit connects with.

### Allow User to Add User Profiles Check Box

The **Allow User to Add User Profiles** check box allows users to create user profiles used in AZedit.

### Allow User to Delete User Profiles Check Box

The **Allow User to Delete User Profiles** check box allows users to delete user profiles from the AZedit application.

### Allow User to Change the Default User Check Box

The **Allow User to Change the Default User** check box allows users to change the default user profile used when logging on to AZedit.

### Hide This Dialog (Permanently) Check Box

The **Hide This Dialog (Permanently)** check box to hide the maintenance page.

**IMPORTANT:** Once you choose this option, there is no way to turn this page back ON through AZedit. You must use Windows® Registry Editor to enable the maintenance page.

---


### Keypanels/Ports Window

---

The **Keypanels/Ports** window, shown in Figure 142, is used mainly to set up keypanels in the intercom system. However it can be used to do the following:

- *Keypanel Setup*: You use this window to connect a keypanel to a particular intercom port, and then set up that keypanel. Keypanel setup includes assigning the keys and options.
- *Non-keypanel Usage of a Port*: Even if you are not using a keypanel at a port, there may still be a few items you want to configure.
- *View Keypanel Activity*: You can view keypanel activity, such as key activations, during operation in ONLINE or SERVER mode.
- *GPI Input Assignment*: You can use GPI inputs to simulate keypanel keys even when no keypanel is connected at an intercom port. First, you use GPI Input setup to define which “key” to activate at a specific port. Then, use keypanel setup to select that port and assign the “key”.

**NAVIGATION:** From the menu bar, select *System/Keypanel Assignment*.

**IMPORTANT:** Remember to send any change you make to the intercom system using *Edit/Send Changes* or the Activate button. 

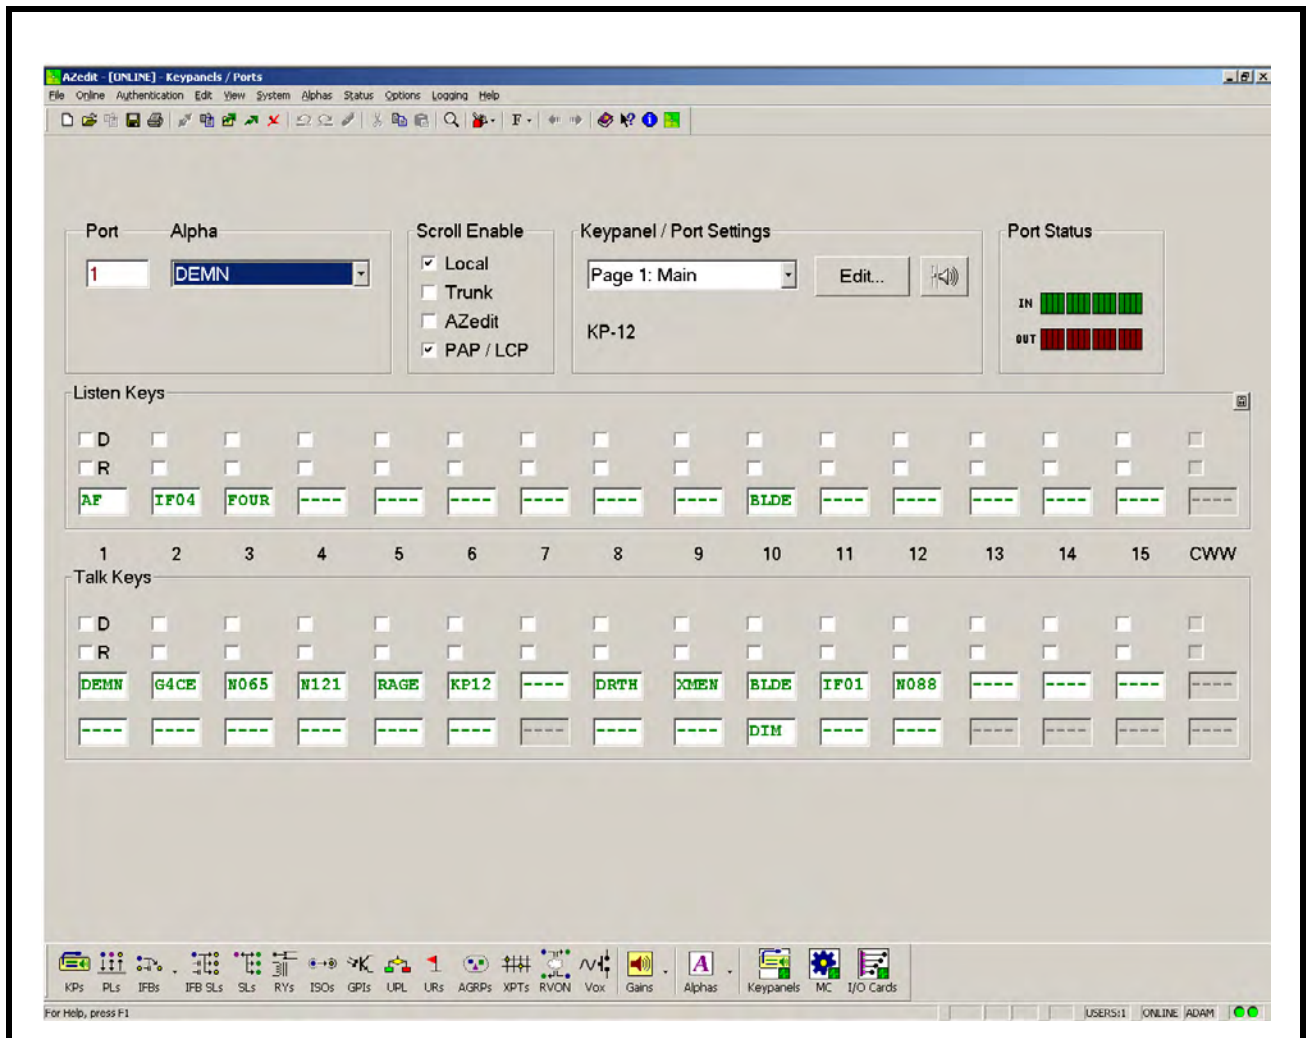


FIGURE 142. Keypanel/Ports Window

## Port Field

The **Port** field indicates the port number for the keypanel setup currently being viewed. Typing a different port number in this box shows the setup information for the specified port.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which in turn, automatically populates the Port field.

## Alpha Drop Down Menu

The **Alpha** drop down menu indicates the port alpha for the port setup currently being viewed.

**NOTE:** Once the port alpha has been entered, the Port field populates with the corresponding name.

## Scroll Enable Group Box

**Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypanel keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:

---

## Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they are not able to assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they are not able to copy it to any other key.

## Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

## AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

## LCP-102 Check Box

The **LCP-102** check box indicates the intercom port is displayed in the IFB input scroll list of an LCP-102 operating in PAP mode. When enabled, the port can be selected as the program source for an IFB input.

**NOTE:** The LCP-102 check box only appears in the Keypanels/Ports main screen.

---

## Keypanel/Port Settings Group Box

### Page Drop Down Menu

The **Page** drop down menu is used to select the page of keypanel assignments to view. Currently there are four pages available to view.

### Edit Button


The **Edit** button opens the Keypanel/Port Configuration window. From this window you can properly configure an intercom port for use with a keypanel. Some setup options include selection modes of keypanels, default views, setup page options, priorities, panel poll delays, IFB listen destinations, and **VOX** (Voice Operated Switch)<sup>1</sup>. For more information, see “Keypanel/Port Configuration Window” on page 93.

---

1. Vox or voice operated switch is a switch that activates when sound over a certain threshold is detected. It is usually used to turn on a transmitter or recorder when someone speaks. It is sometimes used instead of a push to talk button on transmitters or to save storage space on recording devices. The circuitry usually includes a delay or hold time threshold that leaves the circuit activated when the sound stops. This keeps the circuit from turning off during short pauses in speech.

---

### Gain Button






The **Gain** button  opens the Gain Setup window. From this window you can set the listen gains for point-to-point and party line assignment types and input/output gains. For more information, see “Gain Setup Window” on page 99.

---

### Port Status Group Box

The **Port Status** group box displays various status icons indicating processes running in the intercom system. The following items are displayed in the Port Status group (upper-right corner of the Keypanels / Ports screen). Most of these icons activate based on keypanel features detected by the intercom system master controller.

---

	<i>Heartbeat Icon:</i> Indicates a data device (keypanel, TIF, or Camera Delegate Panel) is connected to the intercom port.
	<i>Warning Icon:</i> Indicates the intercom port is defined as an IFB output (in the IFB Setup screen).
	<i>Headset Icon:</i> Indicates the connected keypanel has a headset selected.
	<i>LEDs Icon:</i> These icons display the on/off state of any local GPI inputs and outputs. These indicators function only when a keypanel with a local GPI port is connected. Bright Green/ Bright Red=On (Asserted), Green/ Red=Off (Inhibited) in 16 slices to show RVON GPI activity.
	<i>Question Mark Icon:</i> Indicates that the keypanel type you have selected (with the Edit button) does not match what is reported by the intercom system.

---

---

### Listen Keys Group Box

#### D (Latch Disable) Check Box


The **D (Latch Disable)** check box indicates the keypanel key cannot be latched ON by the user. Remove the check mark to activate latching capabilities for that key.

**NOTE:** You can also enable and disable the Latch Disable check box by pressing **Ctrl+D**.

#### R (Key Restrict) Check Box

The **R (Key Restrict)** check box indicates the keypanel key is restricted and cannot be modified by the user. Use this option to prevent a keypanel operator from changing a key assignment

**NOTE:** You can also enable and disable the Key Restrict check box by pressing **Ctrl+R**.

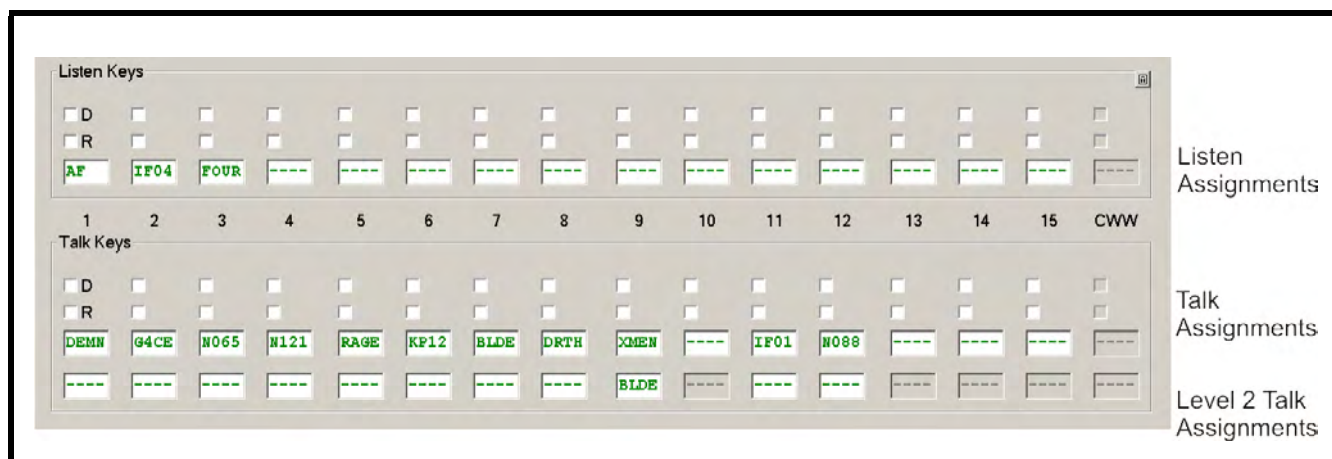

**FIGURE 143.** Listen, Talk and Talk Level 2 Assignments

## Listen Field

The **Listen** field (shown in Figure 143) displays the key assignments assigned to the keypanel listen keys. You can modify the listen assignment by right-clicking in the listen field you want to change and select **Change Assignment**. For more information on changing the key assignment, see “Select Key Assignment Window” on page 102.

The assignment types available are:

*Ports*

*Party Lines*

*IFBs*

*IFB Special Lists*

*Special Lists*

*GPI Outputs*

*ISOs*

*UPL Resources*

*Special Functions*

Depending on the type of keypanel being configured determines the number of keys displayed in the application window.

**NOTE:** By default listen assignment alphas are 4 characters in length. However, you can set the alpha length to 6 and 8 characters. To change the alpha character length, select *Options/Preferences* from the menu bar. When the Preferences window appears, go to the Alphas page. From the Preferred Alpha Size drop down menu, select the alpha size desired.


## CWW Field

The **CWW** (Call Waiting Window) field (shown in Figure 143) is used to receive and respond to callers in the intercom system who do not have key assignments. Typically, the CWW is the 16th key on the keypanel and has the special function *Auto-Follow* assigned to it. No key assignments can be made to this field.

The CWW window can also be used to view scroll lists and call people from the scroll list.

---

## Show Volume Button

The **Show Volume** button  displays the current listen levels for the keypanel being viewed. The listen levels only display on keys that have assignments configured.

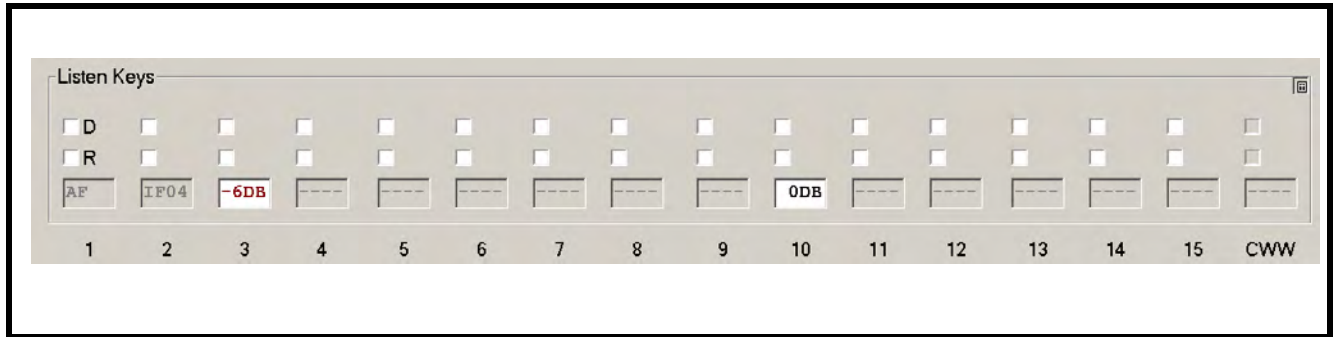


FIGURE 144. Show Volume Example

---

## Talk Keys Group Box

### D (Latch Disable) Check Box

The **D (Latch Disable)** check box indicates the keypanel key cannot be latched ON by the user. Remove the check mark to activate latching capabilities for that key.

**NOTE:** You can also enable and disable the Latch Disable check box by pressing **Ctrl+D**.

### R (Key Restrict) Check Box

The **R (Key Restrict)** check box indicates the keypanel key is restricted and cannot be modified by the user. Use this option to prevent a keypanel operator from changing a key assignment

**NOTE:** You can also enable and disable the Key Restrict check box by pressing **Ctrl+R**.

### Talk Field

The **Talk** field (as shown in Figure 143 on page 90) displays the key assignments assigned to the keypanel talk keys. You can modify the talk assignment by right-clicking in the listen field you want to change and selecting Change Assignment. For more information on changing the key assignment, see “Select Key Assignment Window” on page 102.

The assignment types available are:

- Ports*
- Party Lines*
- IFBs*
- IFB Special Lists*
- Special Lists*
- GPI Outputs*
- ISOs*
- UPL Resources*
- Special Function*

Depending on the type of keypanel being configured, determines the number of keys displayed in the application window.

---

**NOTE:** By default talk assignment alphas are 4 characters in length. However, you can set the alpha length to 6 and 8 characters. To change the alpha character length, select *Options/Preferences* from the menu bar. When the Preferences window appears, go to the Alphas page. From the Preferred Alpha Size drop down menu, select the **alpha size** desired.

## Level 2 Talk Field

The **Level 2 Talk** field, shown in Figure 143 on page 90, displays the key assignments for the keypanel level 2 talk keys. You can assign a level 2 talk key to activate along with a normal talk key assignment (talk level 1). Talk Level 2 is typically used with inter-panel dim tables, or to activate a relay or GPI Output. You can modify the special function by right-clicking in the listen field you want to change and selecting Change Assignment. For more information on changing the key assignment, see “Select Key Assignment Window” on page 102.

**NOTE:** The following causes a first birthday on your intercom. Be sure to save your Setup file.

You can only assign talk level 2 after you have assigned talk level 1. You can also activate additional talk levels. In the Options menu, select Intercom Configuration, then select the Options Page. You can set Talk levels to 2, 3, or 4. To have more than 2 talk levels requires the following firmware:

- ADAM Master Controller firmware version V9.6.1 or greater.
- ADAM Audio Input / Output card firmware version V9.5.1 or greater.

Assignments types available for level 2 talk are:

*Ports*

*Party Lines*

*IFBs*

*IFB Special Lists*

*Special Lists*

*GPI Outputs*

*ISOs*

*UPL Resources*

*Special Function* - for more information, see “Select Key Assignment Window” on page 102.

**NOTE:** By default, level 2 talk assignment alphas are 4 characters in length. However, you can set the alpha length to 6 and 8 characters. To change the alpha character length, select *Options/Preferences* from the menu bar. When the Preferences window appears, go to the Alphas page. From the Preferred Alpha Size drop down menu, select the **alpha size** desired.



---

## Keypanel/Port Configuration Window


The **Keypanel/Port Configuration Window** is used to configure a selected port. There are three (3) pages divided into logical option groups: *Setup*, *Advanced*, and *Vox*.

---

### Setup Page

The **Setup Page**, shown in Figure 145, is used to configure an intercom port for use with a keypanel. Each keypanel can have up to four (4) setup pages of key assignments, and each setup page can assign up to 16 pairs of talk/listen keys. Typically, one setup page is used for the main keypanel, and one setup page is used for each expansion panel connected to the main keypanel (if there are any).

**NOTE:** Some keypanels may have more or less than 16 keys. Therefore, there may be cases where all 16 keys on a setup page are not used. There may also be cases, such as with the KP-32 keypanel, where the keypanel itself uses not only all of the keys on one setup page, but also all of the keys on another setup page.

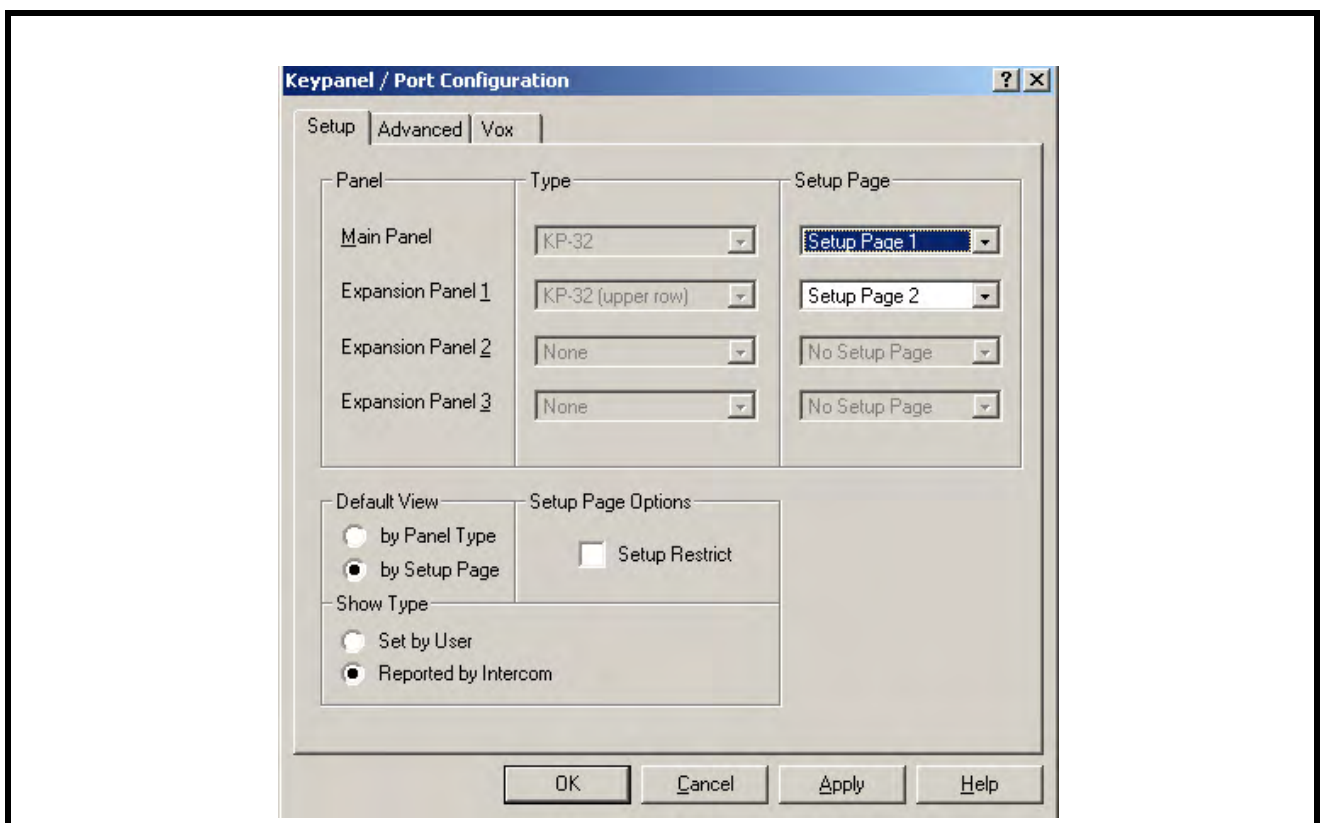

**FIGURE 145.** Keypanel/Port Configuration Setup Window

---

### Panel Group Box

The **Panel** group box displays the four types of setup pages allowed per port in AZedit. Currently, only four setup pages are supported - one main panel and three expansion panels.

### Type Drop Down Menu

The **Type** drop down menu identifies the type of keypanel or expansion panel being used.

---

## Setup Page Drop Down Menu

The **Setup Page** drop down menu identifies the setup page to display for the specified keypanel or expansion panel.

The available selections are: *Setup Page 1*, *Setup Page 2*, *Setup Page 3*, and *Setup Page 4*.

- If the keypanel and expansion panels have been automatically selected (AZedit in ONLINE mode and Show Type set to Reported by Intercom), the Setup Pages are also assigned automatically to match the keypanel/expansion panel configuration.
- If you have manually selected the keypanel and expansion panel types, then you must use the Setup Page selection boxes to assign a setup page to each keypanel and expansion panel. If you are not using expansion panels, assign a **page** to the Main keypanel, and select **No Setup Page** for all expansion panels.

### NOTE:

**KP-12:** There are two types of expansion panels for the KP-12: the EKP-12, with 12 keys, and the EKP-20, with 20 keys. One or more of each type can be connected to the KP-12 in any order, and there may not be an absolute relationship between setup pages and expansion panels. In this case, assign enough setup pages to expansion panels to take care of the total number of expansion panel keys available.

Example 1: Suppose there is only an EKP12 expansion panel connected to the KP-12. In this case, assign **Expansion Panel 1** to any available setup page. This takes care of all 12 keys on the expansion panel, with 4 keys left over.

Example 2: An EKP20 and an EKP-12 is connected to the KP-12. This means there are a total of 32 expansion panel keys available. In this case, assign Expansion Panel 1 to any available setup page to take care of the first 16 expansion keys. Then, assign **Expansion Panel 2** to another setup page to take care of expansion keys 17-32.

---


## Default View Group Box

### By Panel Type Radio Button

The **By Panel Type** radio button indicates the Keypanel/Ports window displays the correct quantity of Talk and Listen keys based on the Type settings. For example, a setup page assigned to the KP-12 displays only 12 Talk and Listen keys. Typically, view by Panel Type should be the preferred viewing mode

**NOTE:** When viewing the setup pages for a particular intercom port, you can switch back and forth between view *by Panel Type* and view *by Setup Page* by pressing **Ctrl+Tab** on the computer keyboard. If you want to change the view mode for all intercom ports, use **Shift+Ctrl+Tab**.

**NOTE:** For **KP-32 Users:** In view by Panel Type mode, all 32 keys on the KP-32 displays on one screen. In this mode, it is not possible to display the talk, listen, and talk level 2 assignments at the same time. Therefore, a selection arrow appears in the upper-right corner of the key group. Click the arrow to select which type of keys you want to assign.

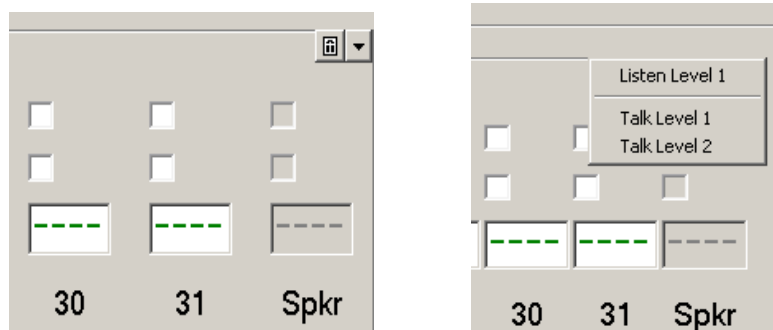


---

## By Setup Page Radio Button


The **By Setup Page** radio button indicates the Keypanel/Ports screen displays all 16 talk and listen key assignments available on a setup page, regardless of whether the keypanel or expansion panel has that number of keys.

**NOTE:** For **KP-32 Users:** In view by Setup Page mode, only 16 keys on the KP-32 displays in one screen. However, you can assign talk, listen, and talk level 2 all in the same screen as for any other keypanel.

To assign the first 16 keys, select the **setup page** currently assigned to the main keypanel.

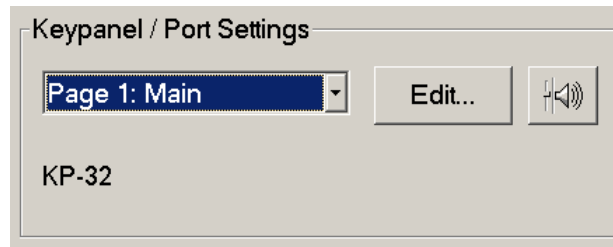

To assign the remaining 16 keys, select the **setup page** currently assigned to expansion panel Exp1.

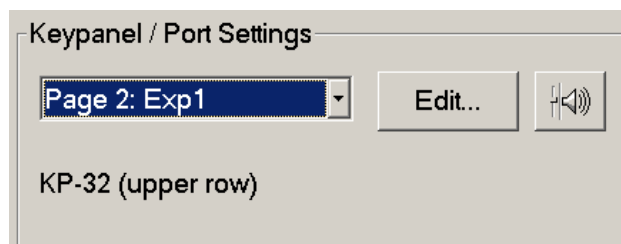

**NOTE:** When viewing the setup pages for a particular intercom port, you can switch back and forth between view *by Panel Type* and view *by Setup Page* by pressing **Ctrl+Tab** on the computer keyboard. If you want to change the view mode for all intercom ports, use **Shift+Ctrl+Tab**.

---

## Show Type Group Box

### Set by User Radio Button

The **Set by User** radio button enables manual selection of keypanel and expansion panel model names in the Type selection boxes. You must select Set by User if you want to setup keypanels in FILE mode. You must also select this option if your intercom system master controller cannot correctly determine (in ONLINE mode with Reported by Intercom selected) the type of keypanel connected to the intercom port.

Most of the keypanel types in the Type list box are self-explanatory, being various models of keypanels. A few selections, such as the TIF INTERFACE and the CDP-950 may not be thought of as keypanels, though they are specialized types of keypanels.

If you are using one or more GPI inputs to activate key assignments at a particular intercom port, we recommend you set Show Type to Set by User, and then set the Type list box for the Main Panel to Virtual. This helps to remind you, GPI inputs are being used to control key assignments for this port. For more information on this subject, see System GPI Description.

---

## Reported by Intercom Radio Button

The **Reported by Intercom** radio button enables the master controller to display the type of keypanel you select to view. You must be in ONLINE mode for this option to work properly.

---

## Setup Page Options Group Box

### Setup Restrict Check Box

The **Setup Restrict** check box indicates the keypanel operator cannot change the setup page they are viewing. By default, keypanel operators can change the setup page usage from their keypanels. If you do not want the keypanel operator to do this, select the Setup Restrict check box.

---

## Advanced Page

The **Advanced Page**, as shown in Figure 146, is used to further configure options for the selected port, such as priority levels, panel poll delay time, listen destinations, etc.

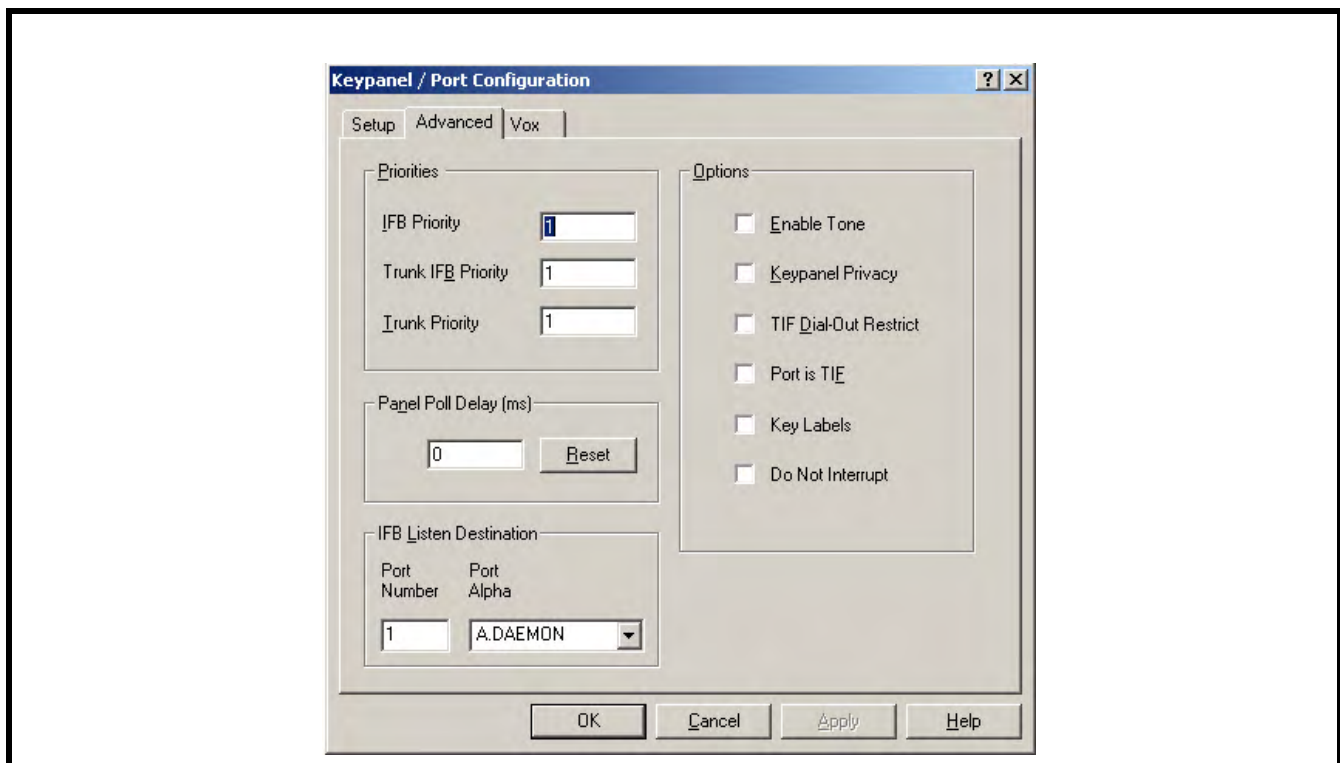


FIGURE 146. Keypanel/Port Configuration - Advanced Page

---

## Priorities Group Box

### IFB Priority Field

The **IFB Priority** field indicates the default IFB priority level for the selected port. This means any IFB assigned to this keypanel is assigned this priority automatically. You can change individual priority levels using the IFB Priority window. For more information, see "IFB Priorities Window" on page 116.

By default, this field is set to *three* (3), however the field value can range from 0 to 8.

---

### Trunk IFB Priority Field

The **Trunk IFB Priority** field indicates the default trunk IFB priority level for the selected port. This means any trunked IFB assigned to this keypanel is assigned this priority automatically. You can change individual priority levels using the IFB Priority window. For more information, see “IFB Priorities Window” on page 116.

This field value can range from *0 to 8*.

### Trunk Priority Field

The **Trunk Priority** field indicates the default trunk priority level for the selected port. This means any trunk assigned to this keypanel is assigned this priority automatically. You can change individual priority levels using the IFB Priority window. For more information, see “IFB Priorities Window” on page 116.

This field value can range from *0 to 8*.

### Panel Poll Delay (ms) Field

The **Panel Poll Delay (ms)** field indicates the amount of time, in ms, data is delayed in data transmissions from remote keypanel to the intercom system. Panel poll delay is used when a keypanel’s data line is connected to the intercom system using a modem link from a remote location. A slight delay in data transmission from the remote keypanel to the intercom system, may be seen and may cause sporadic or no operation. By setting the delay time, the intercom system waits longer for data transmissions from the remote keypanel.

This field ranges from *0 to 500ms*.

**IMPORTANT:** Connect only one remote keypanel per AIO card, and assign only one panel poll delay per AIO card. In addition, since excessive poll delay can impair system performance, use the minimum delay required to assure proper operation of the remote keypanel. However, allow for the possibility of fluctuations in the delay time.

---


## Vox Page

The **Vox** page, shown in Figure 147, is used to configure VOX on the selected port. Vox is the threshold level of audio at which a channel becomes active. When a threshold is set, a microphone does not activate until the preset audio level is attained. This prevents a channel from staying ON when no one is around in a high activity area.

Vox is supported in Cronus Intercom system and in intercoms with AIO-16 cards. Through AZedit, you can control enabling and disabling VOX, as well as setting the threshold level and the hold time.

VOX support requires the following minimum firmware versions:

- Master Controller V9.25.0, or Master Controller II-e V1.1.0
- DBX V1.15.0 with Peripheral Controller V10.15.0, or Peripheral Controller II-e V1.15.03
- AIO-16 V1.1.0 or later
- Cronus V1.1.0 or later

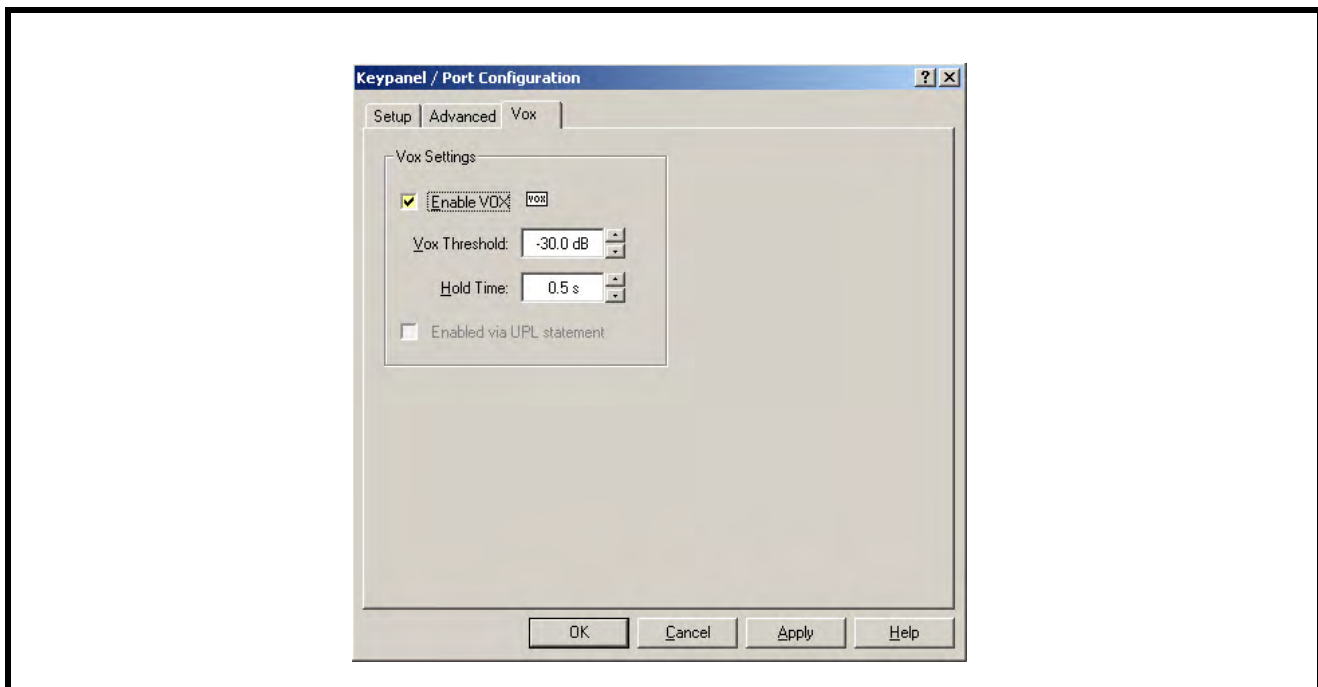

**FIGURE 147.** Keypanel/Port Configuration - Vox Page

---

### Enable VOX Check Box

The **Enable VOX** check box is used to activate Vox on the specified port.

**NOTE:** Cronus and the AIO-16 cards are the only devices with Vox support.

### Vox Threshold Box

The **Vox Threshold** box displays the level, in dB, at which Vox activates on the keypanel. Use the arrows to change the Vox level.

This field value can range from *0.0dB to -126.0dB*.

---

## Hold Time Box

The **Hold Time** box displays the amount of time, in seconds, the port stays open when no activity is present. Use the arrows to change the Hold Time amount.

This field value can range from *0.2 seconds to 12.5 seconds*.

## Enabled Via UPL Statement Check Box


The **Enabled Via UPL Statement** check box enables Vox to be activated on a port through the use of a UPL statement.

---

## Gain Setup Window

The **Gain Setup** window, shown in Figure 148, is used to set point-to-point, party line, and I/O listen gains or to reset gain levels to application defaults. Gain adjustments take effect when you send your changes to the intercom system. Gain settings are saved in your setup file, if you save it to disk.

**IMPORTANT:** Do not make an adjustment here, when it would be better to adjust an Analog Input gain. For example, suppose there is an external audio source connected at port 1, and keypanels at ports 2 through 5 have keys assigned to listen to the external audio source. Now, suppose all of the keypanel operators are always turning their volume controls down when listening to port 1, and then turning them up again to listen to everything else. You could adjust the point-to-point listen level from port 1 to each of the keypanel ports. However, the real problem is the external audio coming into port 1 is at a higher level than the normal system level. To correct this, reduce the analog input gain for port 1 instead of adjusting point-to-point gains for ports 2 through 5. You can access Analog Input/Output Gains by selecting Gains in the System menu (*System/Gains/Input Output Gains*).

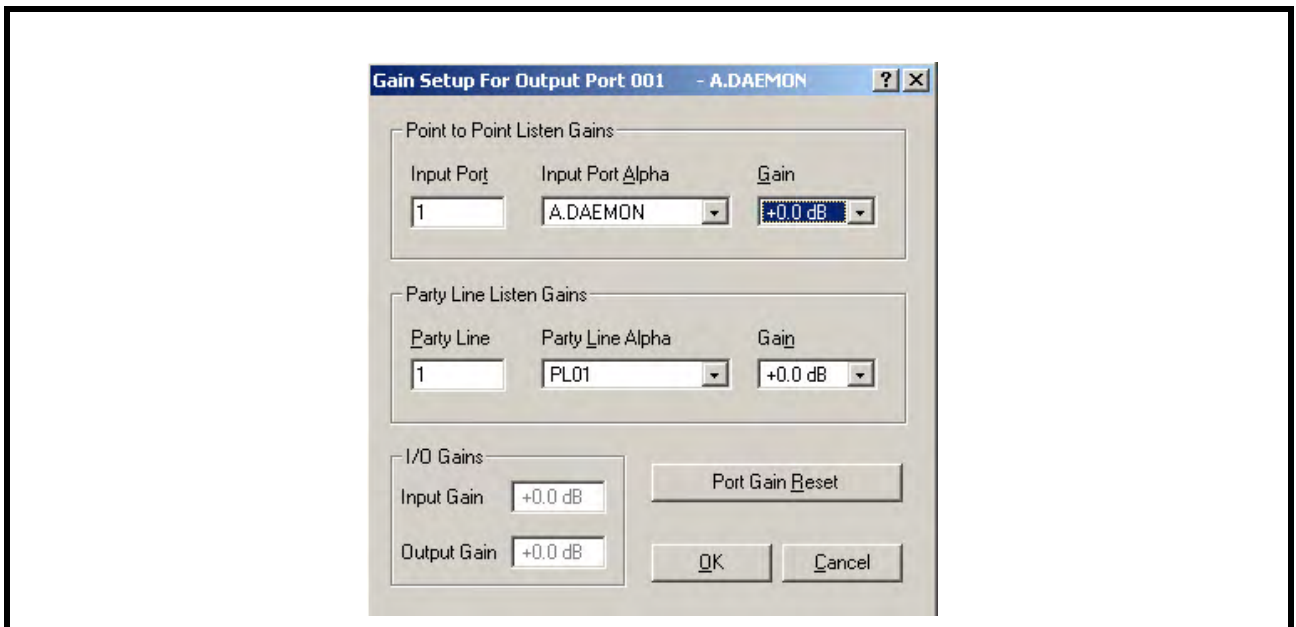

**FIGURE 148.** Gain Setup Window

---

## Point-to-Point Listen Gains Group Box

The **Point-to-Point Listen Gains** group box is used to adjust the level at which the currently selected intercom port “hears” a specified intercom port.

---

## Input Port Field

The **Input Port** field indicates the intercom port number where the audio source is connected. You can manually enter the port number to which you want to adjust the listen gain level.

**NOTE:** You can also use the Input Port Alpha drop down menu to select the port number to which you want to change the listen gain level.

## Input Port Alpha Drop Down Menu

The **Input Port Alpha** drop down menu displays a list of input ports to select from when you want to change the listen gain level. Once you have selected a port from this list, the Input Port field automatically populates with the input port number.

## Gain Drop Down Menu

The **Gain** drop down menu displays a list of gain levels, in dB, from which you can select the specified input port listen gain.

This field value can range from *6.0dB to -72.2dB or Mute*.

---

## Party Line Listen Gains Group Box

The **Party Line Listen Gains** group box is used to adjust the level at which the currently selected intercom port hears a specified party line.

## Party Line Field

The **Party Line** field indicates the port number of the party line where the audio source is connected. You can manually enter the port number of the party line you want to adjust the listen gain level.

**NOTE:** You can also use the Party Line Alpha drop down menu to select the party line port alpha to which you want to change the listen gain level.

## Party Line Alpha Drop Down Menu

The **Party Line Alpha** drop down menu displays a list of party line alphas from which you can choose to change the listen gain level. Once you have selected an alpha from this list, the Party Line field automatically populates with the party line port number.

## Gain Drop Down Menu

The **Gain** drop down menu displays a list of gain levels, in dB, from which you can set the specified party line port listen gain.

This field value can range from *6.0dB to -72.2dB or Mute*.

---

## I/O Gains Group Box

The **I/O Gains** group box is used to view input gain and output gain.

## Input Gain Field

The **Input Gain** field displays the amount of gain, in dB; the input level to the intercom port has been increased or decreased.

Gain adjustments can range from *+20dB to -20dB*.

**NOTE:** Gain adjustments take effect when you send your changes to the intercom system. Gain settings are saved in your setup file if you save it to disk.



---

## Output Gain Field


The **Output Gain** field displays the amount of gain, in dB, the output level to the intercom port has been increased or decreased.

Gain adjustments can range from *+20dB to -20dB*.

**NOTE:** Gain adjustments take effect when you send your changes to the intercom system. Gain settings are saved in your setup file if you save it to disk.

## Port Gain Reset Button

The **Port Gain Reset** button opens the gain reset window. You can choose to reset Point-to-Point listen gains and/or Party Line listen gains to the application defaults (0dB).

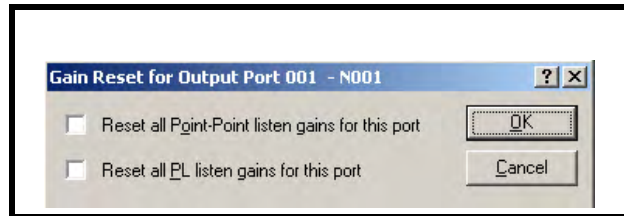

**FIGURE 149.** Gain Reset Window

---

## OK Button

The **OK** button applies the changes made and closes the Gain Setup window.


## Cancel Button

The **Cancel** button disregards the changes made and closes the Gain Setup window.

---

## Select Key Assignment Window

The **Select Key Assignment** window, shown in Figure 150, is used to change key assignments and special functions for listen and talk keys on the Keypanel/Ports window.

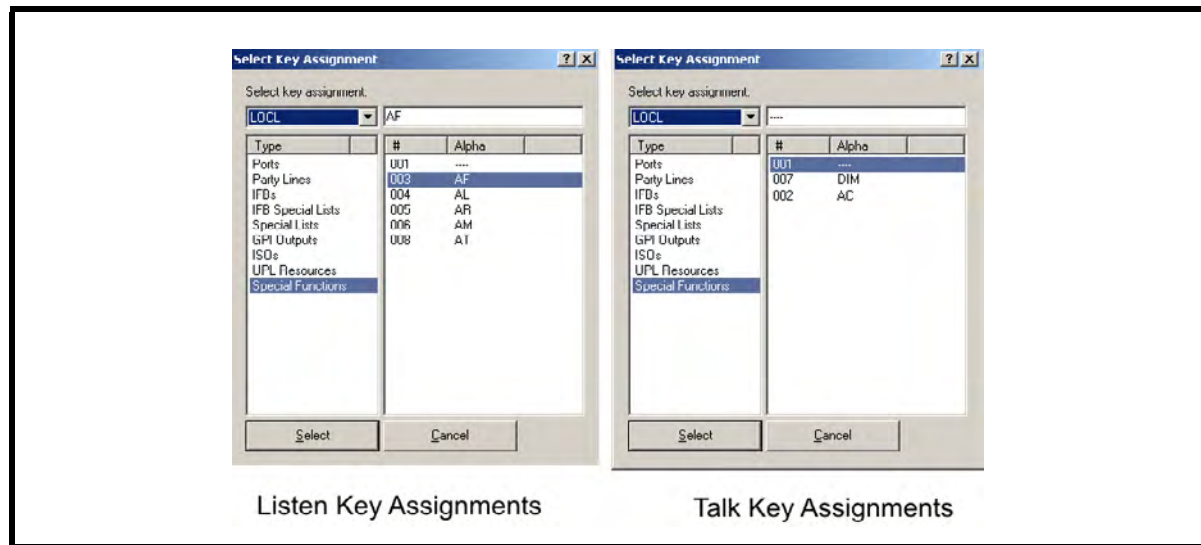

**FIGURE 150.** Select Key Assignments for Listen and Talk Keys

---

### Select Intercom System Drop Down Menu

The **Select Intercom System** drop down menu indicates the intercom for which you want to see key assignments. Once you have selected the intercom system to view, the assignment types appear in the Type List window.

**NOTE:** You must have Enable Trunking Support (*Options/Preferences/Advanced*) selected to view other intercom systems in AZedit.

### Type List Window

The **Type List** window displays a list of assignment types from which to choose. Once an assignment type is chosen, a list of port numbers and their alphas appear in the #/Alpha window.

The assignment types available are as follows:

*Ports*

*Party Lines*

*IFBs*

*IFB Special Lists*

*Special Lists*

*GPI Outputs*

*ISOs*

*UPL Resources*

*Special Functions* - There are separate special functions for talk and listen keys.

***Special Functions***

*Special Functions For Talk Keys*

---

*All-Call (AC)* - When a talk key is assigned as an All-Call talk key, activating the key also activates the talk paths for all talk keys to the left of it (up to, but not including another All-Call key).

**NOTE:** Another way of accomplishing the same thing is by setting up a special list. If you want to talk to the same group of destinations from any of several keypanels, a special list is a better choice, because once you set up the special list, you can assign it to any key without consideration of what is assigned to other keys.

*DIM* - DIM (for talk level 2 assignments only, when talk level 1 is a point-to-point key assignment) This assignment is used with inter-panel dim tables.

#### *Special Functions For Listen Keys*

*Auto-Follow (AF)* - This special function causes a listen key assignment to always be the same as the talk key paired with it. Auto-follow is a convenient assignment because you only have to assign a listen key once. Then, whenever you change the talk key assignment, the listen key automatically follows to the new assignment.

- Many users find it convenient to assign auto-follow to all listen keys. That way, they rarely have to bother with listen key assignments, because as they change talk key assignments, the listen key assignments automatically change as well.
- When you assign auto-follow to a listen key, you still have to manually activate the listen key to hear certain types of destinations. For example, if you activate a talk key to talk to a party line, you have to activate a listen key if you want to listen to the party line. The same is also true for belt packs connected to intercom ports. This is because party lines and belt packs cannot themselves activate talk crosspoints in the intercom system (the talk button on most belt packs is simply a microphone on/off switch). In cases where you need to activate both a talk and a listen key to communicate with a destination, try using auto-listen.

*Auto-Listen (AL)* - This special function causes a listen key assignment to always be the same as the talk key that is paired with it. Auto-Listen is similar to Auto-Follow EXCEPT listen automatically activates whenever the talk key is activated. Auto-listen is an effective listen key assignment for use with party lines or other non-keypanel devices such as belt packs. This is because these devices do not have the talk-back capability that keypanels have. If you find that you are always activating the listen key when you want to talk to a particular destination, you might want to assign auto-listen to that listen key. Auto-listen is generally required when listening to party lines or belt packs from a keypanel that does not have listen keys.

*Auto-Mute (AM)* - This special function causes a listen key assignment to always be the same as the talk key it is paired with. Auto-Mute is similar to Auto-Follow EXCEPT listening is automatically muted when the talk key is activated. Auto-mute is useful for talking to devices that echo your voice back to you. If you need to activate the listen key when conversing with a destination, but you hear an echo whenever you activate the talk key, consider assigning auto mute to the listen key.

*Auto-Reciprocal (AR)*-This special function causes a listen key's assignment to be the same as the talk key it is paired with. Auto-Reciprocal is similar to Auto-Follow EXCEPT listening is forced continuously ON, even when the talk key is off. Auto-reciprocal is useful, for example, when you wish to monitor a party line continuously from a keypanel without actually making the keypanel a listener on the party line.

*Auto-Table (AT)* - This special function causes a listen key's assignment to be the same as the Listen Source for whatever IFB is currently assigned to the talk key. (You define the Listen Source during IFB setup.) Auto Table is convenient in a broadcast environment when a director needs 2-way communication with the IFB talent, AND the IFB keys are being reassigned frequently during the course of a program to talk to new talent locations. Several IFBs can be set up in advance, and their Listen Sources can be defined. Then, when the IFB key is reassigned on the director keypanel, the Listen Source for each new IFB automatically becomes the listen key assignment for the IFB key.

**NOTE:** Use this assignment with a listen key only when the corresponding talk key has been assigned to an IFB.

## Party Lines Window


The **Party Lines** window, as shown in Figure 151, is used to create a port where any number of people can talk and/or listen to a group. A party line (also known as a conference line) is typically used when several users of non-keypanel devices (such as belt packs or camera intercoms) are engaged in a specific common activity and need to talk and/or listen to each other all the time. For example, a TV station has two control rooms and three studios. Because the producers in the control rooms want to talk to the everyone in the individual studios (but not all the studios), a dedicated port is setup to act as a party line for each studio. The producer can press one key (assigned to the designated party line) on the keypanel and talk to everyone assigned to that party line

**IMPORTANT:** Do not confuse party lines and special lists.

A *party line* is typically used when several users of non-keypanel devices (such as belt packs or camera intercoms) are engaged in a specific common activity and they need to talk and/or listen to each other all the time. Keypanels are almost never members of party lines (although they can be). However, a keypanel key can be assigned to occasionally talk or listen to a party line, if desired.

A *special list* is used when a keypanel operator needs to occasionally talk or listen to a group of intercom ports that are otherwise unrelated.

**NAVIGATION:** From the menu bar, select *System/Party Lines*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

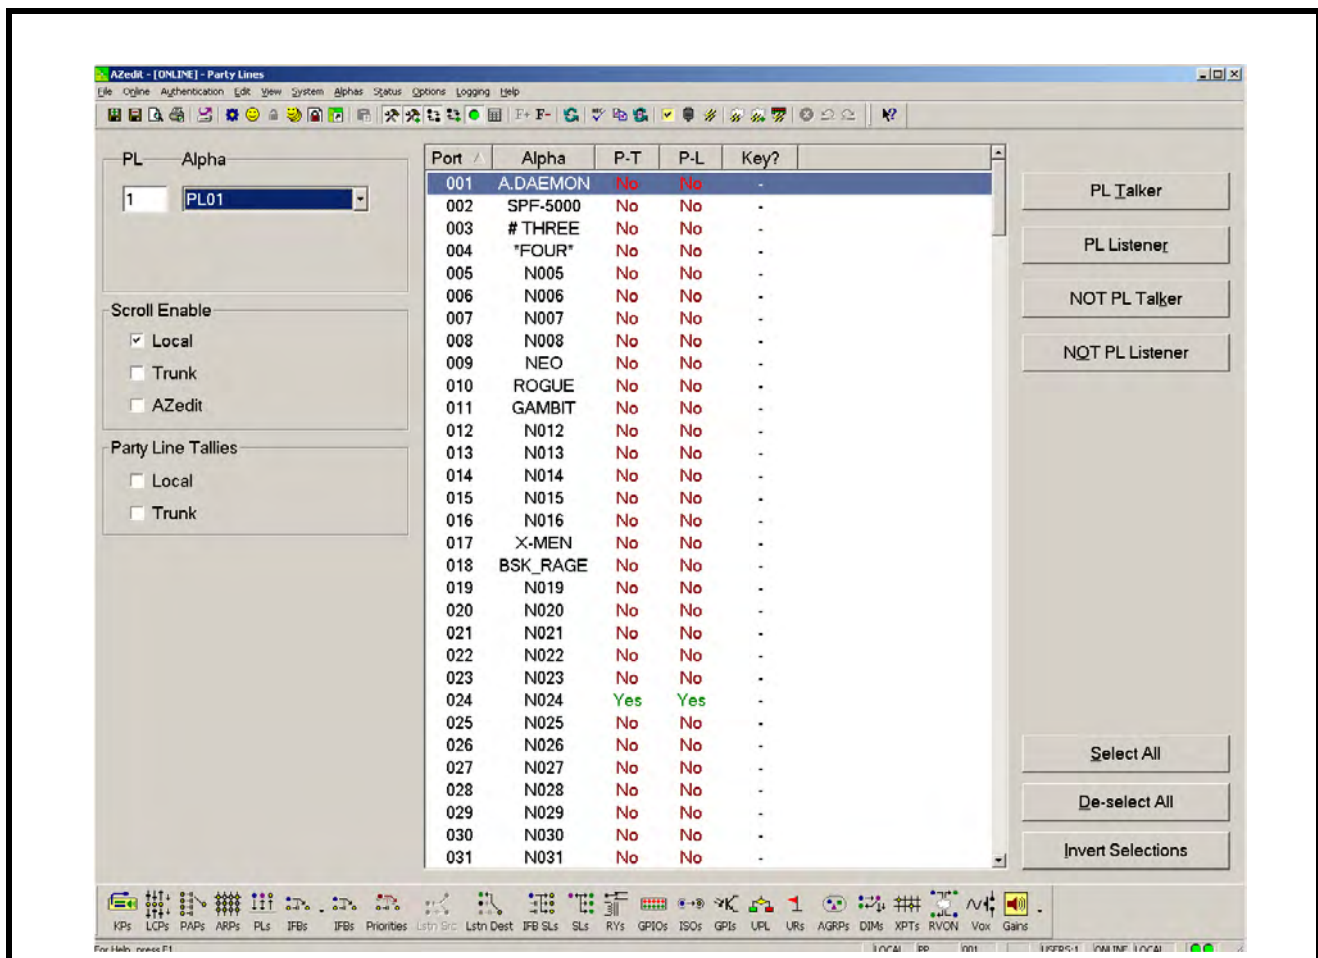


FIGURE 151. Party Lines Window

---

## PL Field

The **PL** field indicates the party line port number for which you are configuring.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which in turn automatically populates the Port field.

## Alpha Drop Down Menu

The **Alpha** drop down menu indicates the party line port alpha for the port setup currently being viewed.

**NOTE:** Once the port alpha has been entered, the Port field populates with the corresponding name.

## Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypanel keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:

### Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not be able to assign it to a key. Also, they are not able to assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they are not able to copy it to any other key.

### Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

### AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system are able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

---

## **Party Line Tallies Group Box**

**Party Line Tallies** are used when two (2) or more keypanels have keys assigned to talk to the same party line. Note, these are not keypanels that are members of the party line, but keypanels that can talk to the party line with an intercom key.

For example, two different keypanels have the same party line assigned to a talk key. If one of the keypanels activates the party line talk key, the tally indication is supplied at the other keypanel. Typically, the tally indication is a flashing alphanumeric display (KP9X series keypanels) or a continuously lit red LED indicator (most other keypanels). The tally indication tells the keypanel operator that activating the party line key breaks in on a conversation already in progress.

There are two configurable types of tally indicators - *Local Party Line Tallies* and *Trunk Party Line Tallies*.

### **Local Check Box**

The **Local** check box is used to enable local party line tallies on the local intercom system.

### **Trunk Check Box**

The **Trunk** check box is used to enable party line tallies on a remote intercom system.

### **Port Column**

The **Port** column displays a list of ports on the Intercom System.

### **Alpha Column**

The **Alpha** column displays a list of alphas for the ports on the intercom system.

### **P-T Column**

The **P-T** column indicates the port is a Party Line Talker. If there is a *green YES*, the port is a party line talker. If a *red NO* displays, the port is not a party line talker.

### **P-L Column**

The **P-L** column indicates the port is a Party Line Listener. If there is a *green YES*, the port is a party line listener. If a *red NO* displays, the port is not a party line listener.

### **Key? Column**

The **Key?** column provides a valid indication in ONLINE or SERVER mode only. This column indicates when an intercom port is talking or listening to the party line using intercom keys. It refreshes (updates with current information) frequently during normal operation.

To force a refresh, use the Refresh command in the View menu, or press **Ctrl+Space**.

Possible display indications are:

*\$Talk:* The port has a talk key pressed to talk to the party line.

*\$Listen:* The port has a listen key pressed to listen to the party line.

*\$Both:* The port has both a talk and listen key pressed for 2-way communication with the party line.

---

### **PL Talker Button**

The **PL Talker** button designates the selected port as a permanent talker on the currently viewed party line assignment. This means this port is always able to talk. The permanent talker assignment is usually only used with non-intelligent devices (i.e. devices that cannot instruct the intercom system on how to route the audio). This option is usually not used with keypanels.

**NOTE:** You can assign both PL Talker and PL Listener on party line assignments.

### **PL Listener Button**

The **PL Listener** button designates the selected port as a permanent listener on the currently viewed party line assignment. This means the port is always able to listen. The permanent listener assignment is usually only used with non-intelligent devices (i.e. devices that cannot instruct the intercom system on how to route the audio). This option is usually not used with keypanels.

**NOTE:** You are able to assign both PL Talker and PL Listener on the currently viewed party line assignment.

### **NOT PL Talker Button**

The **NOT PL Talker** button removes the PL Talk assignment from the selected port.

### **NOT PL Listener Button**

The **NOT PL Listener** button removes the PL Listen assignment from the selected port.

### **Select All Button**

The **Select All** button highlights all of the items from the Available or Selected list.

### **De-Select All Button**

The **De-select All** button de-selects any selected items from the Available or Selected list.

### **Invert Selections Button**

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.

## Special Lists Window


The **Special List** window, shown in Figure 152, is used to configure special lists in AZedit. A special list is a group of intercom ports keypanel operators can talk or listen to by activating a single key. Special lists are typically used for paging, All Call, Group Call, etc. Using AZedit, you can define the members of the special list. Once a special list has been set up, you typically assign it to a keypanel key using Keypanel setup. The keypanel operator can then activate the special list key to talk or listen to all members of the special list.

**IMPORTANT:** Do not confuse special lists and party lines.

A *special list* is used when a keypanel operator needs to occasionally talk or listen to a group of intercom ports that are otherwise unrelated.

A *party line* is typically used when several users of non-keypanel devices (such as belt packs or camera intercoms) are engaged in a specific common activity and they need to talk and/or listen to each other all the time. Keypanels are almost never members of party lines (although they can be). However, a keypanel key can be assigned to occasionally talk or listen to a party line, if desired.

**NAVIGATION:** From the menu bar, select *System/Special List*.

**IMPORTANT:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

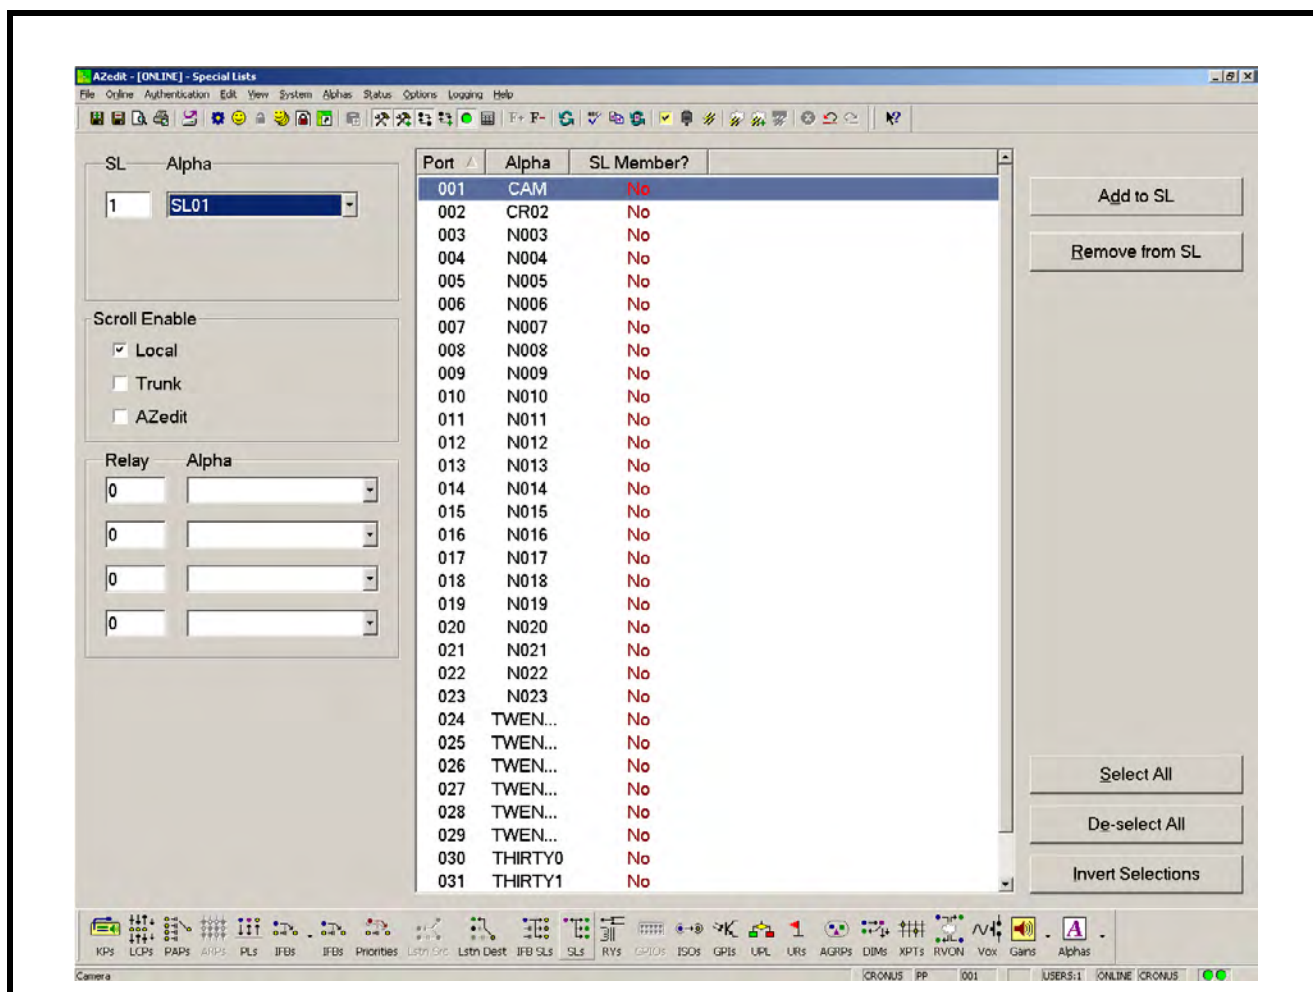


FIGURE 152. Special Lists Window



---

## SL Field

The **SL** field indicates the port number for which you are configuring a special list.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

## Alpha Drop Down Menu

The **Alpha** drop down menu indicates the special list port alpha currently being viewed.

**NOTE:** Once the special list alpha has been selected, the SL field populates with the corresponding port number.

## Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypad keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists.

However, access for everyone else is controlled as follows:

### Local Check Box

The **Local** check box indicates any keypad operator in your intercom system with a programmable keypad can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypad operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they are not able to assign it using keypad numeric entry (KP9X series keypads). And, if the destination name appears in any display on their keypad, they are not able to copy it to any other key.

### Trunk Check Box

The **Trunk** check box indicates any keypad operator in a remote intercom system with a programmable keypad can view the destination in a scroll list and assign it to a key on their keypad.

If you remove this check mark and send the change to the intercom system, remote keypad operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

### AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypad keys in the remote intercom system.

If you remove the check mark, remote AZedit users does not have access to these scroll lists.

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

## Relay Field

The **Relay** field contains the number assigned to a selected relay. Relays are switches that open and close. Relays are optional in special lists. If a relay is selected, then the relay closes when the special list currently being viewed is activated from a keypad.

---

## Alpha Drop Down Menu

The **Alpha** drop down menu contains the alpha assigned to the Special List currently being viewed.

**NOTE:** Once the relay alpha has been selected, the relay field populates with the corresponding relay number.

## Port Column

The **Port** column displays a list of all the ports in the intercom system.

## Alpha Column

The **Alpha** column displays the name assigned to the port.

**NOTE:** You can change these names to ones that are more meaningful to keypanel operators. Click on the row where you want to change the name, and then press Ctrl+F12.

## SL Member? Column

The **SL Member?** column displays whether the port is part of an special list. If the selected port belongs to a special list, a *green Yes* appears, otherwise, a *red No* appears in this column.

## Add to SL Button

The **Add to SL Button** adds selected ports to a special list. When a port is added to a special list, a *green Yes* appears in the SL Member? column.

## Remove from SL Button

The **Remove from SL Button** removes selected ports from a special list. When a port is added to a special list, a *green Yes* appears in the SL Member? column.

## Select All Button

The **Select All** button marks (highlights) all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


## IFBs Window

The **IFB** window, shown in Figure 153, displays configuration information for the IFB assignments created in your intercom system. IFB, also known as interrupted fold-back, interrupted feedback, or switched talk back, is a method for a keypanel operator to interrupt an audio source someone is listening to, and then talk to that listener. When the keypanel operator is finished talking and turns off the IFB key, the original audio source “folds back”, or reconnects, to the listener. IFB could be used, for example, to interrupt background music on a PA system while someone is paging. Mostly, though, it is used in broadcasting to cue talent, such as news anchors, field reporters, etc.

Use the Edit IFB window to create or modify IFB assignments.

To access the Edit IFB window, double-click an **IFB assignment**. The Edit IFB window appears. For more information, see “Edit IFB Window” on page 113.

**NAVIGATION:** From the menu bar, select *System/IFB*.

**IMPORTANT:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

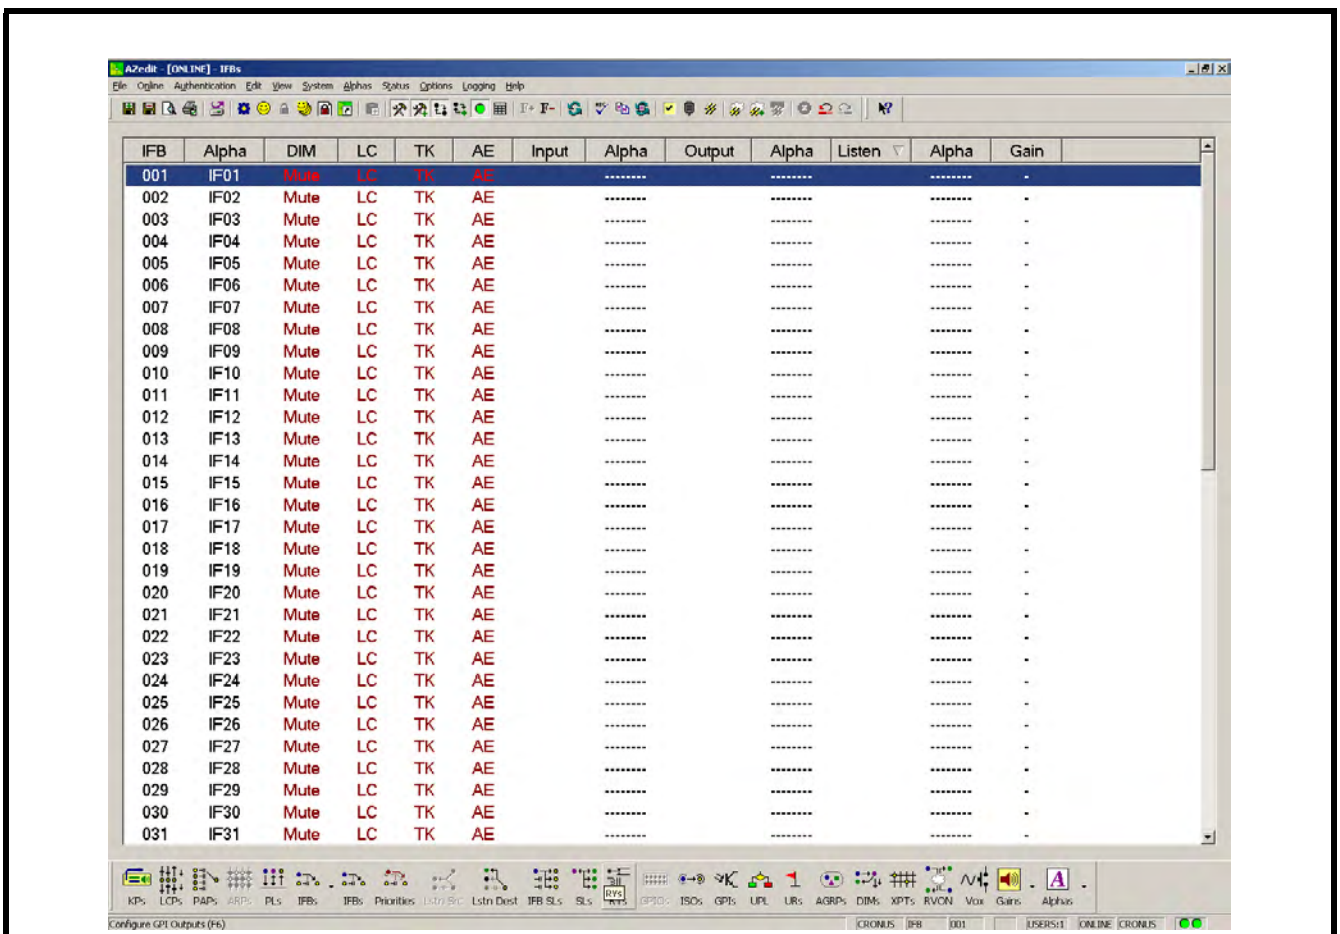


FIGURE 153. IFBs Window

## IFB Column

The **IFB** column displays the IFB number. This number is not configurable. However, you can control how many IFBs are available for use by changing the intercom configuration settings. See, “Resources Page” on page 49.

---

## Alpha Column

The **Alpha** column displays the name assigned to the IFB. Default names are IF01, IF02, etc. You can change these names to ones that are more meaningful to keypanel operators. See, “Alpha Windows” on page 189.

## DIM Column

The **DIM** column displays the dim level, in dB, for program audio.

This field value ranges from *-72.2dB* to *1.0dB* and *MUTE*. MUTE indicates there is no dimming value and the program audio mutes during IFB operation.

## LC Column

The **LC** column displays the scroll enable settings: *LC indicates Local*, *TK indicates Trunk*, and *AE indicates AZedit*. For each type of scrolling, the letters appear green if that type of scrolling is enabled, and brown (or red when selected) if that type of scrolling is disabled.

## TK Column

The **TK** column displays the scroll enable settings: *LC indicates Local*, *TK indicates Trunk*, and *AE indicates AZedit*. For each type of scrolling, the letters appear green if that type of scrolling is enabled, and brown (or red when selected) if that type of scrolling is disabled.

## AE Column

The **AE** column displays the scroll enable settings: *LC indicates Local*, *TK indicates Trunk*, and *AE indicates AZedit*. For each type of scrolling, the letters appear green if that type of scrolling is enabled, and brown (or red when selected) if that type of scrolling is disabled.

## Input Column

The **Input** column displays the input port number for the selected IFB.

## Alpha Column

The **Alpha** column displays the input port alpha for the selected IFB.

## Output Column

The **Output** column displays the output port for the selected IFB.

## Alpha Column

The **Alpha** column displays the output port alpha for the selected IFB.

## Listen Column

The **Listen** column displays the listen audio source to which the destination is listening. This is uninterrupted audio.

## Alpha Column

The **Alpha** column displays the listen source port alpha for the selected listen source.

---


## Gain Column


The **Gain** column displays the analog output gain for the intercom port designated as the IFB Output. If the IFB listening device connected to the output port does not have a volume control, you can adjust the analog output gain to suit the listener's preference. Adjust the analog output gain through either AZedit (*System/Gains/Input/Output Gains*) or from an LCP-102 operating in PAP mode.

---

## Edit IFB Window

The **Edit IFB** window, shown in Figure 154, is used to configure IFB assignments in your intercom system.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

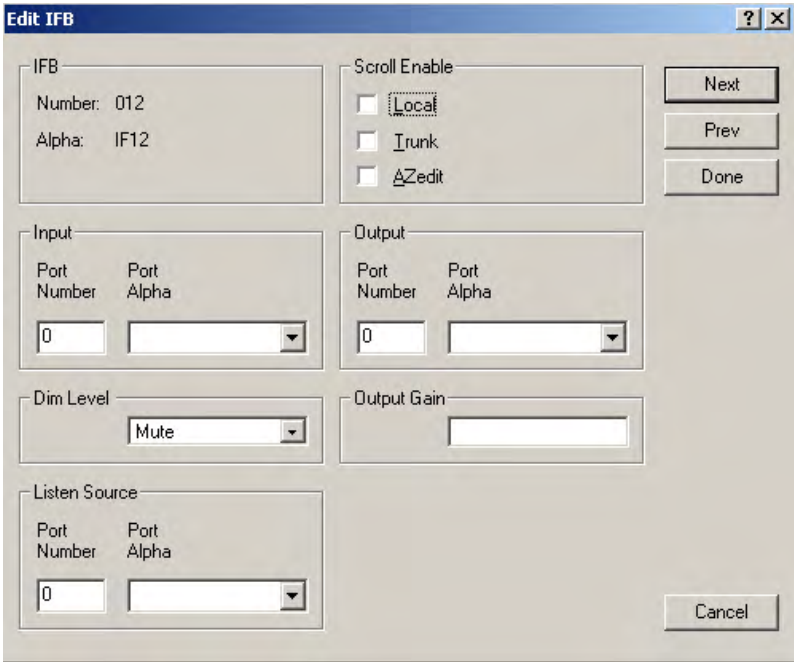

**FIGURE 154.** Edit IFB Window

---

## IFB

The **IFB** group box displays the IFB Number and Alpha. You can modify the Alpha using the IFB Alpha screen (*Alphas/IFB*). See, “Alpha Windows” on page 189.

---

## Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypad keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists.

However, access for everyone else is controlled as follows:

---

## Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they cannot assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they are not able to copy it to any other key.

## Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

## AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists.

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

## Input Group Box

### Port Number Field

The **Port Number** field indicates the Program Input port. Program Input is audio coming into the Matrix. Program input is sometimes referred to as Mix Minus (-).

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

### Port Alpha Drop Down Menu

The **Alpha** drop down menu indicates the IFB port alpha currently being viewed.

**NOTE:** Once the IFB alpha has been selected, the Port field populates with the corresponding IFB port number.

## Output Group Box

### Port Number Field

The **Port Number** field indicates the IFB output port. The IFB Output is the audio heard by the talent. For example, the Program Input plus the Talent's mic (so they can hear themselves talk) is routed and heard as the IFB output.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

---

## Port Alpha Drop Down Menu

The **Alpha** drop down menu indicates the IFB output port alpha currently being viewed.

**NOTE:** Once the IFB output port alpha has been selected, the Port field populates with the corresponding port number.

## Dim Level Drop Down Menu

The **Dim Level** drop down menu allows you to choose to diminish the speaker or headphone audio level by a specific amount.

Dim levels can range from  $-1.0dB$  to  $-72.2dB$  and *MUTE*.

**NOTE:** By default, the audio source mutes while the keypanel operator is talking. If you want the signal to diminish by a certain amount during IFB, select a different amount in the DIM Level drop down list.

## Output Gain Field

The **Output Gain** field displays the analog output gain (in dB) for the intercom port designated as the IFB output. If the IFB listening device connected to the output port does not have volume control, you can adjust the output gain to suit the listener's preferences on the Analog Input/Output Gains screen or from and LCP-102 operating in PAP mode.

Modifications to this field cannot be made.

To change the output gain for the port use the Analog Gain Input/Output Window (*Systems/Gain/Input/Output*). For more information, see "Input/Output Gains Window" on page 181.

---

## Listen Source Group Box

The **Listen Source** is audio usually mixed into the program input.

For example, anchors desk mic audio (listen source audio) mixed into the newscast (program input).

## Port Number Field

The **Port Number** field indicates the Listen Source port.

**NOTE:** Once the port number has been entered, the alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

## Port Alpha Drop Down Menu

The **Port Alpha** drop down menu indicates the listen source port alpha currently being viewed.


**NOTE:** Once the IFB output port alpha has been selected, the Port field populates with the corresponding port number. For more information, see AT on page 103.


---

## IFB Priorities Window

The **IFB Priorities** window, shown in Figure 155, is used to configure the IFB Port priority. This allows you to put higher priority on specific IFB assignments over other IFB assignments.

**NAVIGATION:** From the menu bar, select *System/IFB Priority*.

**IMPORTANT:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

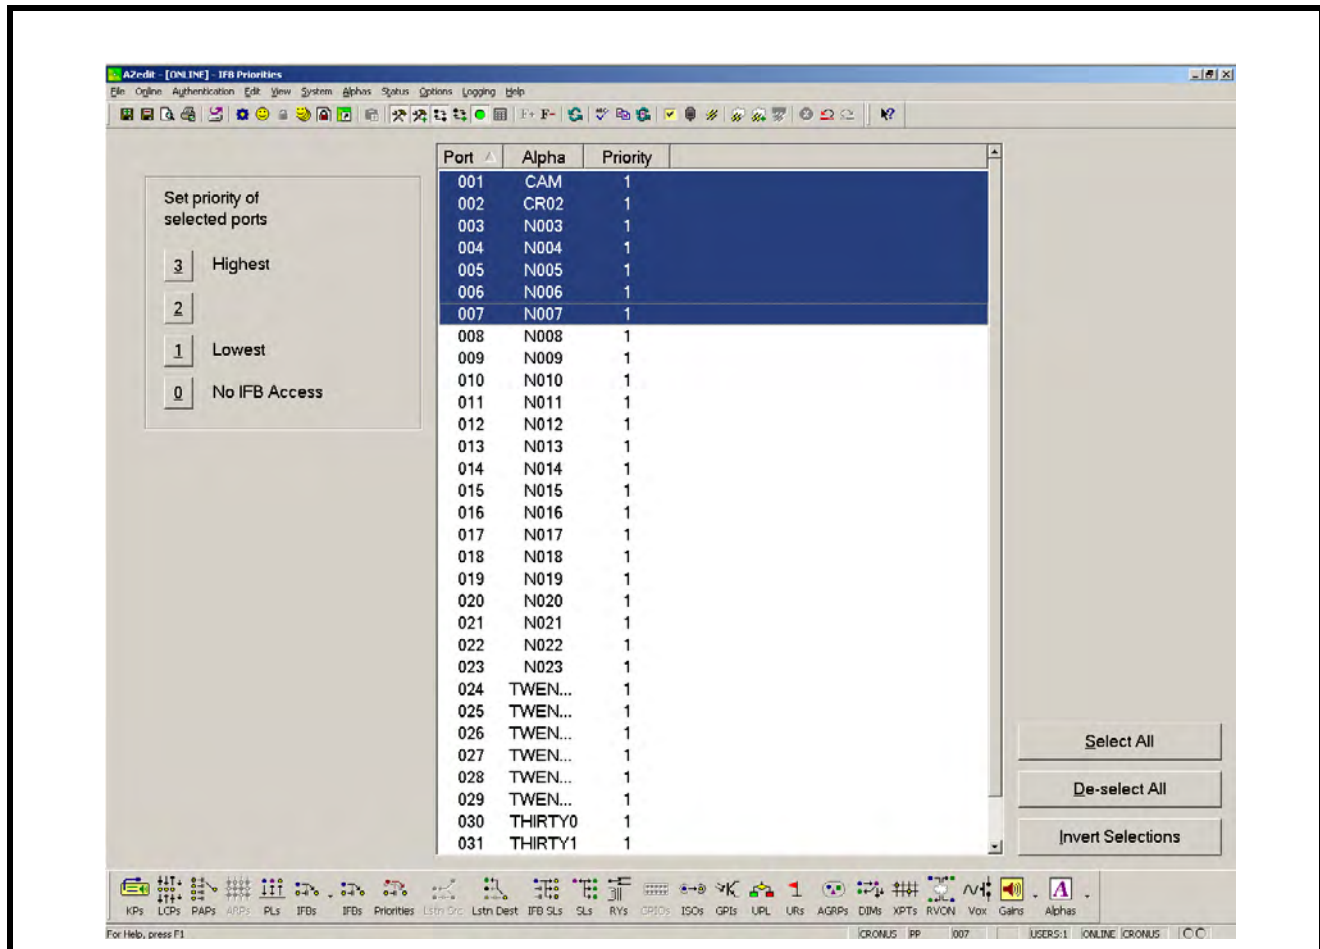


**FIGURE 155.** IFB Priorities Window

---

### Set Priority of Selected Ports Group Box

The **Set Priority of Selected Ports** group box allows the user to determine which keypanel gets first access to an IFB in cases where two or more keypanels are trying to access the IFB at the same time. By default, the IFB priority for each intercom port can be individually set from 0 through 3. With the priority set to 3, the keypanel overrides any other keypanel set to a lower priority. Keypanels that are set to the same priority can simultaneously access IFBs.



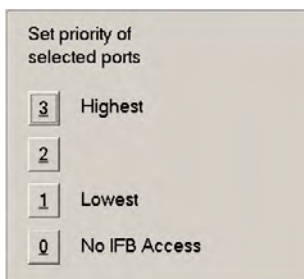

**NOTE:** You can add more IFB priority levels (up to 8) in the intercom configuration settings (*Options/Intercom Configuration/Options Page*). For more information, see “Resources Page” on page 49.

### **Port**

The **Port** column displays a list of IFB ports on the intercom system.

### **Alpha**

The **Alpha** column displays a list of alphas (if applicable) for the IFB ports on the intercom system.

### **Priority**

The **Priority** column displays the priority level for the selected IFB port.

### **Select All Button**

The **Select All** button marks (highlights) all of the items from the Available or Selected list.

### **De-Select All Button**

The **De-select All** button is used to de-select any selected items from the Available or Selected list.

### **Invert Selections Button**

The **Invert Selections** button reverses the selections in the current view.


For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


---

## IFB Listen Destination Window

The **IFB Listen Destination** window, shown in Figure 156, is used to configure the listen destinations for an IFB.

**NAVIGATION:** From the menu bar, select *System/IFB Listen Destination*.

**IMPORTANT:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

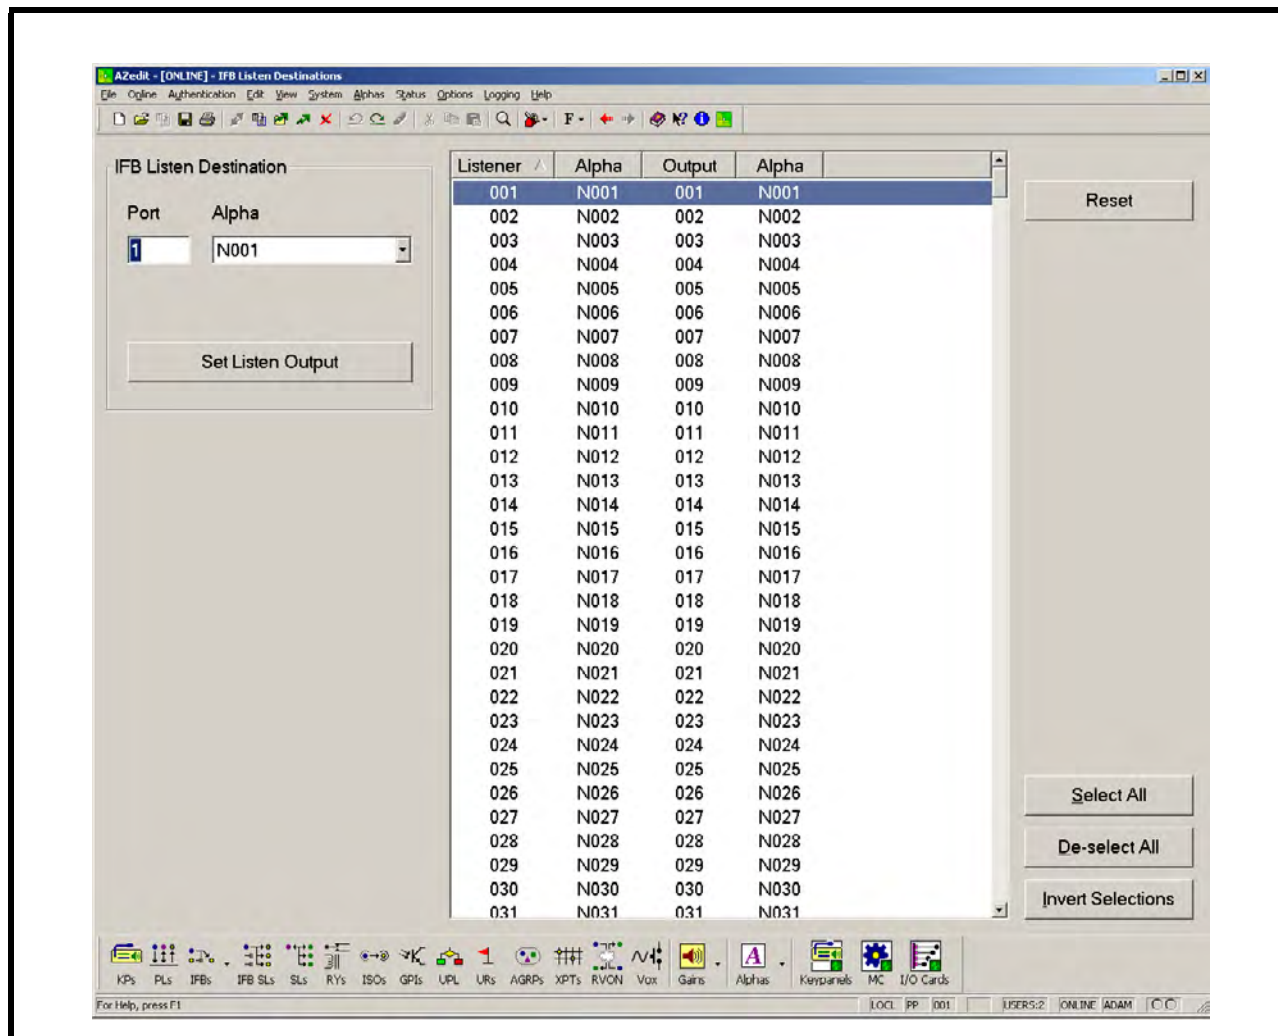

**FIGURE 156.** IFB Listen Source Window

---

### Port Field

The **Port** field contains the port number of the origin to which you want the listener port to connect.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

### Alpha Drop Down Menu

The **Alpha** drop down menu indicates the IFB listen origination port alpha.

**NOTE:** Once the alpha has been entered, the Port field populates with the corresponding name.

---

### **Set Listen Output Button**

The **Set Listen Output** button assigns the selected destination listen port to the selected port in the Listener column.

### **Listener column**

The **Listener** column displays the listen destination port.

### **Alpha column**

The **Alpha** column displays the listen destination alpha.

### **Output column**

The **Output** column displays the listen origin port.

### **Alpha column**

The **Alpha** column displays the listen origin alpha.

### **Reset Button**

The **Reset** button is used to return selected IFB listen destinations to their original configuration. Use the Select All, Invert Selections and De-Select All button to select the IFB listen destinations with which you want to work.

**NOTE:** To select several individual ports, press **Ctrl** on the keyboard and click the different ports you want to select.

### **Select All Button**

The **Select All** button highlights all of the items from the Available or Selected list.

### **De-Select All Button**

The **De-select All** button de-selects any selected items from the Available or Selected list.

### **Invert Selections Button**

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


## IFB Special Lists Window

The **IFB Special Lists** window, shown in Figure 157, is used to create and maintain IFB Special Lists. An IFB Special List is similar to a Special List, except the members are IFBs instead of ports.

**NOTE:** Requires the following minimum firmware versions:

- Master Controller v9.22.0
- DVX v1.13.0 with Peripheral Controller v10.13.0
- TM-2000 v8.5.1 (for remote access to IFB SLs)

**NAVIGATION:** From the menu bar, select *System/IFB Special Lists*.

**IMPORTANT:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

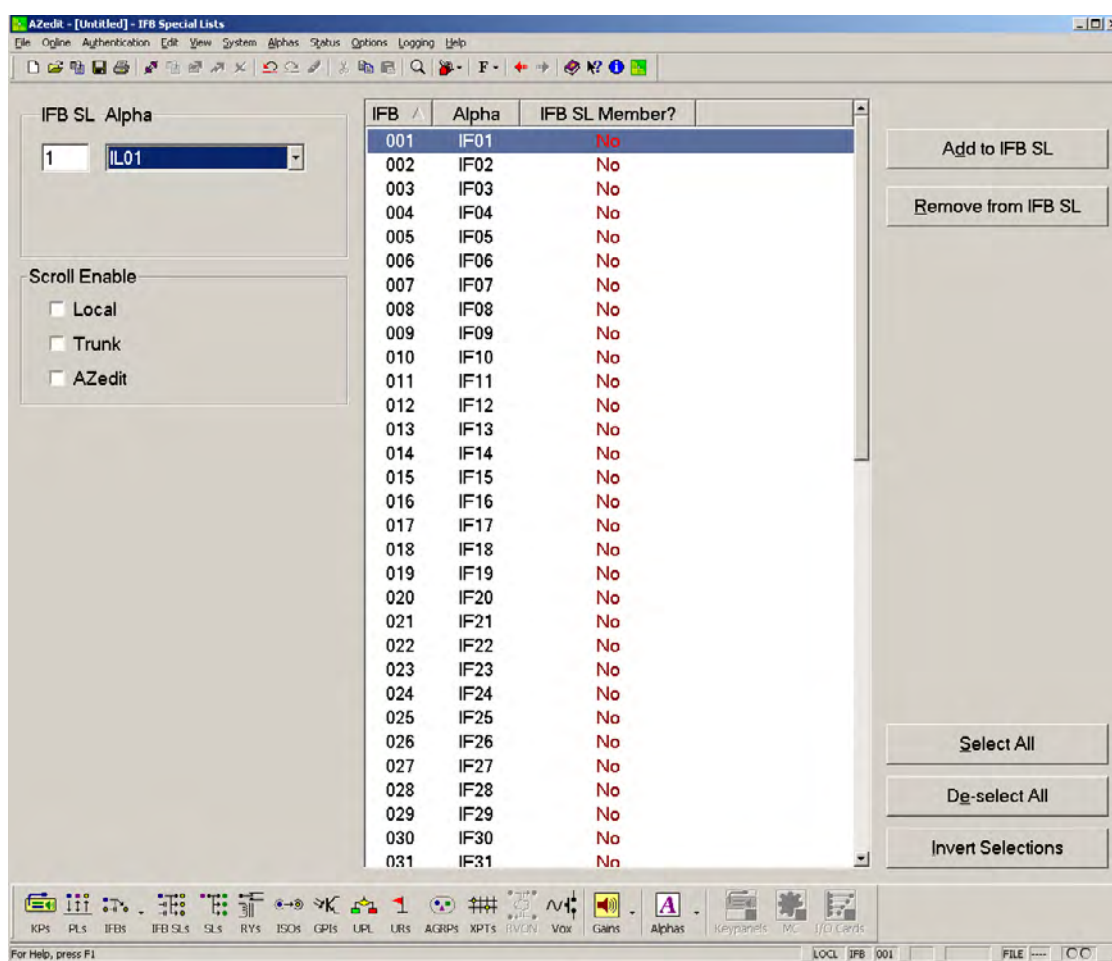


FIGURE 157. IFB Special Lists Window

---

## IFB SL Field

The **IFB SL** field indicates the IFB special list number. By default, you can have 32 IFB SLs. However, the number of IFB SLs is a configurable option on the Resources page of the Intercom Configuration screen, found on page 49. You can designate the number of IFB SLs from 0-999.

**NOTE:** Once the IFB SL number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

## Alpha Drop Down Menu

The **Alpha** drop down menu displays a list of IFB special list port alphas from which to select.

**NOTE:** Once the alpha has been entered, the IFB SL field populates with the corresponding number.

## Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypad keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:

### Local Check Box

The **Local** check box indicates any keypad operator in your intercom system with a programmable keypad can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypad operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they cannot assign it using keypad numeric entry (KP9X series keypads). And, if the destination name appears in any display on their keypad, they are not able to copy it to any other key.

### Trunk Check Box

The **Trunk** check box indicates any keypad operator in a remote intercom system with a programmable keypad can view the destination in a scroll list and assign it to a key on their keypad.

If you remove this check mark and send the change to the intercom system, remote keypad operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

### AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypad keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists.

The AZedit check box is only selectable if trunking has been activated.

**NOTE:** Once the port alpha has been selected, the SL field populates with the corresponding name.

---

## IFB Column

The **IFB** column displays a list of IFBs that can be added to the IFB special list. This number is not configurable. However, you can control how many IFBs are available for use by changing the intercom configuration settings, see “Resources Page” on page 49.

## Alpha Column

The **Alpha** column displays the name assigned to the IFB. Default names are IF01, IF02, etc. You can change these names using the IFB SL Alphas screen. For more information, see “Alpha Windows” on page 189.

## IFB SL Member? Column

The **IFB SL Member?** column displays whether the IFB is part of an IFB SL. If the selected port belongs to a special list, a *green Yes* appears, otherwise, a *red No* appears in this column.

## Add to IFB SL Button

The **Add to IFB SL** button adds selected IFBs to an IFB special list.

## Remove from IFB SL Button

The **Remove from IFB SL** button removes selected IFBs from the IFB special list.

## Select All Button

The **Select All** button highlights all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.


For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


---

## Program Listen Source Window

The **Program (PGM) Listen Source** window, shown in Figure 158, is used to direct the IFB PGM Listen Source audio when the IFB Program Input changes. The Program Listen Source Window is only used when IFB PGM Input changes are made using a **UPL** (User Programmable Logic) Statement, **PAP-32** (Program Assign Panel), or an **LCP-102** (Level Control Panel).

**NAVIGATION:** From the menu bar, select *System/PGM Listen Source*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

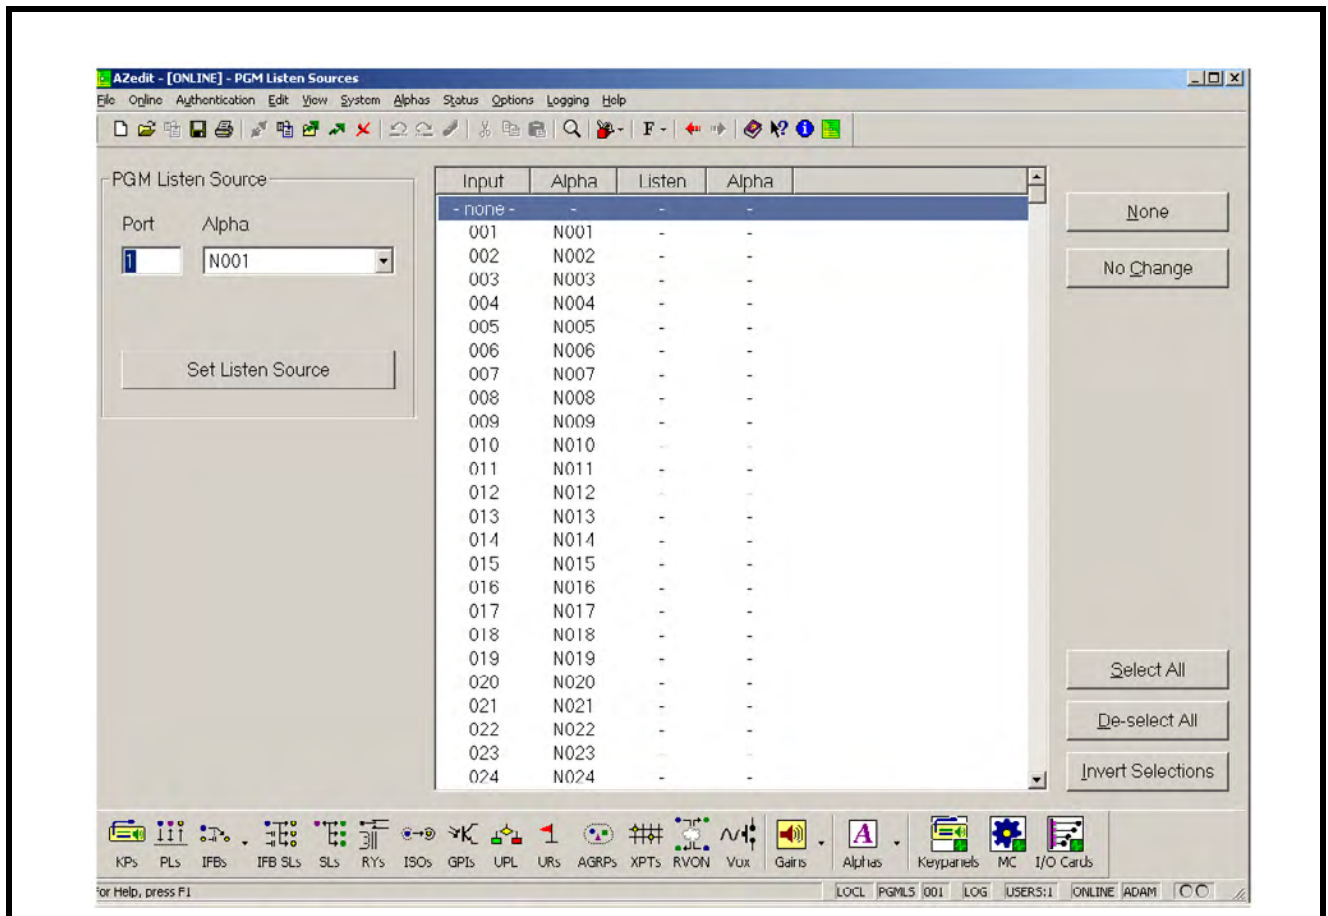

**FIGURE 158.** Program Listen Source Window

### Port Field


The **Port** field contains the port number for the PGM Listen Source (for example, news anchor's desk microphone). Once the port is entered, the Alpha drop down list populates with the ports associated alpha.

---

## Alpha Drop Down Menu

The **Alpha** drop down menu displays a list of program listen source port alphas from which the user can select. Once the port alpha is chosen, the port field automatically populates with the corresponding port number.

**NOTE:** To change the name of the port alpha, use the Port Alphas window. You can access the port alphas window using either of the following methods:

- From the Alphas menu, select **Port**.  
*The Port Alphas window appears.*
- Click the **Alphas** icon in the navigation toolbar.   
*The Port Alphas window appears.*

## Set Listen Source Button

The **Set Listen Source** button sets the IFB PGM listen source for the selected Program Input (Input column).

## Input Column

The **Input Column** displays a list of IFB program input ports in the intercom system.

## Alpha Column

The **Alpha** column displays the IFB program port alpha for the corresponding program input port.

## Listen Column

The **Listen** column displays the port number of the program listen source you assign to the selected program input port.

## Alpha Column

The **Alpha** column displays the port alpha of the program listen source you assign to the selected program input port.

## None Button

The **None** button clears the listen source assignment information when the program input assignment changes. When assigned, a *dash (-)* appears in the listen and alpha columns.

## No Change Button

The **No Change** button indicates the listen source assignment information does not change when the program input assignment changes. When assigned, *No Change* appears in the listen column.

## Select All Button

The **Select All** button highlights all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.



---


## GPI Output Window


The **GPI Output** window, shown in Figure 159, is used to display the configuration information for GPI Outputs.

Use the Edit GPI Output window to create or modify a GPI Output.

To access the Edit GPI Output window, double-click the **GPI Output** for which you want to edit. The Edit GPI Output window appears. For more information, see “Edit GPI Output Window” on page 127.

**NAVIGATION:** From the menu bar, select *System/GPI Output*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

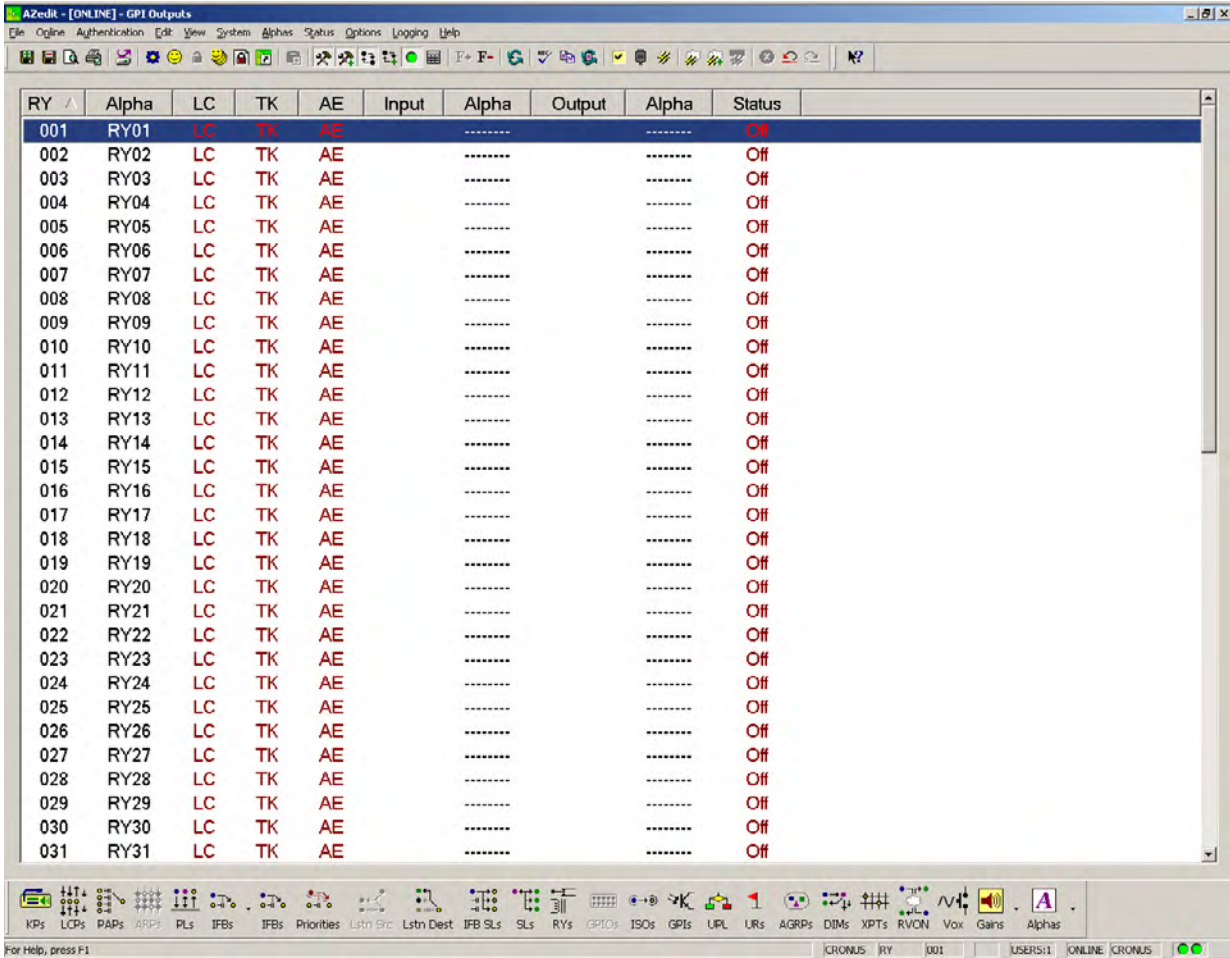

RY	Alpha	LC	TK	AE	Input	Alpha	Output	Alpha	Status
001	RY01	LC	TK	AE					On
002	RY02	LC	TK	AE					Off
003	RY03	LC	TK	AE					Off
004	RY04	LC	TK	AE					Off
005	RY05	LC	TK	AE					Off
006	RY06	LC	TK	AE					Off
007	RY07	LC	TK	AE					Off
008	RY08	LC	TK	AE					Off
009	RY09	LC	TK	AE					Off
010	RY10	LC	TK	AE					Off
011	RY11	LC	TK	AE					Off
012	RY12	LC	TK	AE					Off
013	RY13	LC	TK	AE					Off
014	RY14	LC	TK	AE					Off
015	RY15	LC	TK	AE					Off
016	RY16	LC	TK	AE					Off
017	RY17	LC	TK	AE					Off
018	RY18	LC	TK	AE					Off
019	RY19	LC	TK	AE					Off
020	RY20	LC	TK	AE					Off
021	RY21	LC	TK	AE					Off
022	RY22	LC	TK	AE					Off
023	RY23	LC	TK	AE					Off
024	RY24	LC	TK	AE					Off
025	RY25	LC	TK	AE					Off
026	RY26	LC	TK	AE					Off
027	RY27	LC	TK	AE					Off
028	RY28	LC	TK	AE					Off
029	RY29	LC	TK	AE					Off
030	RY30	LC	TK	AE					Off
031	RY31	LC	TK	AE					Off

**FIGURE 159.** GPI Outputs Window

---

### RY Column

The **RY** column displays the GPI Output number. This number is not configurable. However, you can control how many GPI Outputs are available for use by changing the intercom configuration (see “GPI Outputs Field” on page 50).

---

## Alpha Column

The **Alpha** column displays the name assigned to the GPI Output. Changes can be made to the Alpha using the GPI Output Alphas window (*Alphas/GPI Output*). Double-click on the **GPI Output** you want to change to access the Edit window.

## LC Column

The **LC** column displays the local scroll enable settings. A *red LC* indicates local scroll enable is not active. A *green LC* indicates local scroll enable is active.

## TK Column

The **TK** column displays the trunk scroll enable settings. A *red TK* indicates trunk scroll enable is not active. A *green TK* indicates trunk scroll enable is active.

## AE Column

The **AE** column displays the AZedit scroll enable settings. A *red AE* indicates AZedit scroll enable is not active. A *green AE* indicates AZedit scroll enable is active.

## Input Column

The **Input** column displays the GPI input port number configured for the GPI Input

## Alpha Column

The **Alpha** column displays the GPI input port alpha configured for the GPI Input

## Output Column

The **Output** column displays the GPI output port number configured for the GPI Output.

## Alpha Column

The **Alpha** column displays the GPI output port alpha configured for the GPI Output.

## Status Column

The **Status** column displays status information in ONLINE or SERVER mode. If the GPI Output is activated, ON displays; otherwise, OFF displays. The information in this column updates periodically.

**NOTE:** To force an update, select **Refresh** from the View menu at the top of the main window. Or, press **Ctrl+Space** on the keyboard.

---

## Edit GPI Output Window

The **Edit GPI Output** window, shown in Figure 160, is used to configure GPI outputs you want to use in your intercom system.

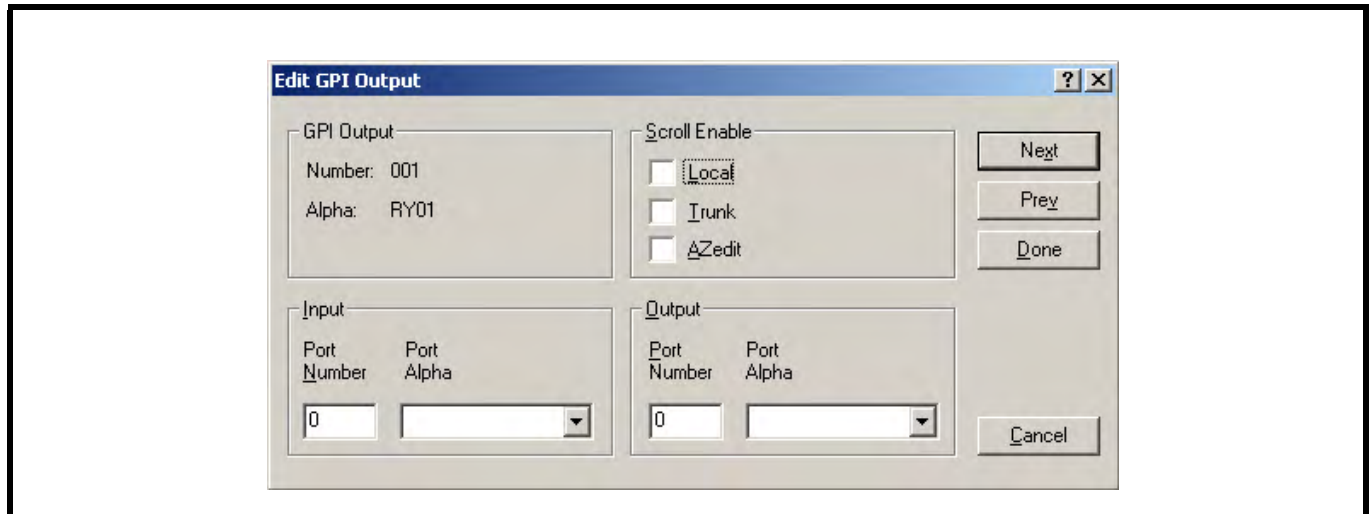


FIGURE 160. Edit GPI Output Window

---

### GPI Output Group Box

The **GPI Output** group box displays the GPI Output Number and Alpha. You can modify the Alpha using the GPI Output Alpha screen (*Alphas/GPI Output*).

---

### Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypanel keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:

#### Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they cannot assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they are not able to copy it to any other key.

#### Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

---

## AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypad keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists.

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

## Input Group Box

### Port Number Field

The **Port Number** field indicates the GPI Input port.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

### Port Alpha Drop Down Menu

The **Alpha** drop down menu indicates the GPI Input port alpha currently being viewed.

**NOTE:** Once the alpha has been selected, the Port field populates with the corresponding port number.

## Output Group Box

### Port Number Field

The **Port Number** field indicates the GPI Output port.

**NOTE:** Once the port number has been entered, the Alpha drop down menu populates with the corresponding name. You can also populate the Alpha drop down menu first, which, in turn, automatically populates the Port field.

### Port Alpha Drop Down Menu

The **Alpha** drop down menu indicates the GPI Output port alpha currently being viewed.

**NOTE:** Once the alpha has been selected, the Port field populates with the corresponding port number.

---


## GPI Input Window


The **GPI Input** window, shown in Figure 161, is used to display the configuration information for the intercom system GPI Inputs. GPI Inputs can be used to activate key assignments, as inputs to UPL statements and for many other applications.

Use the Edit GPI Input window to create or modify a GPI Input.

To access the Edit GPI window, double-click the GPI Input for which you want to edit. The Edit GPI Input window appears. For more information, see “Edit GPI Input Window” on page 130.

**NAVIGATION:** From the menu bar, select *Systems/GPI Input*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

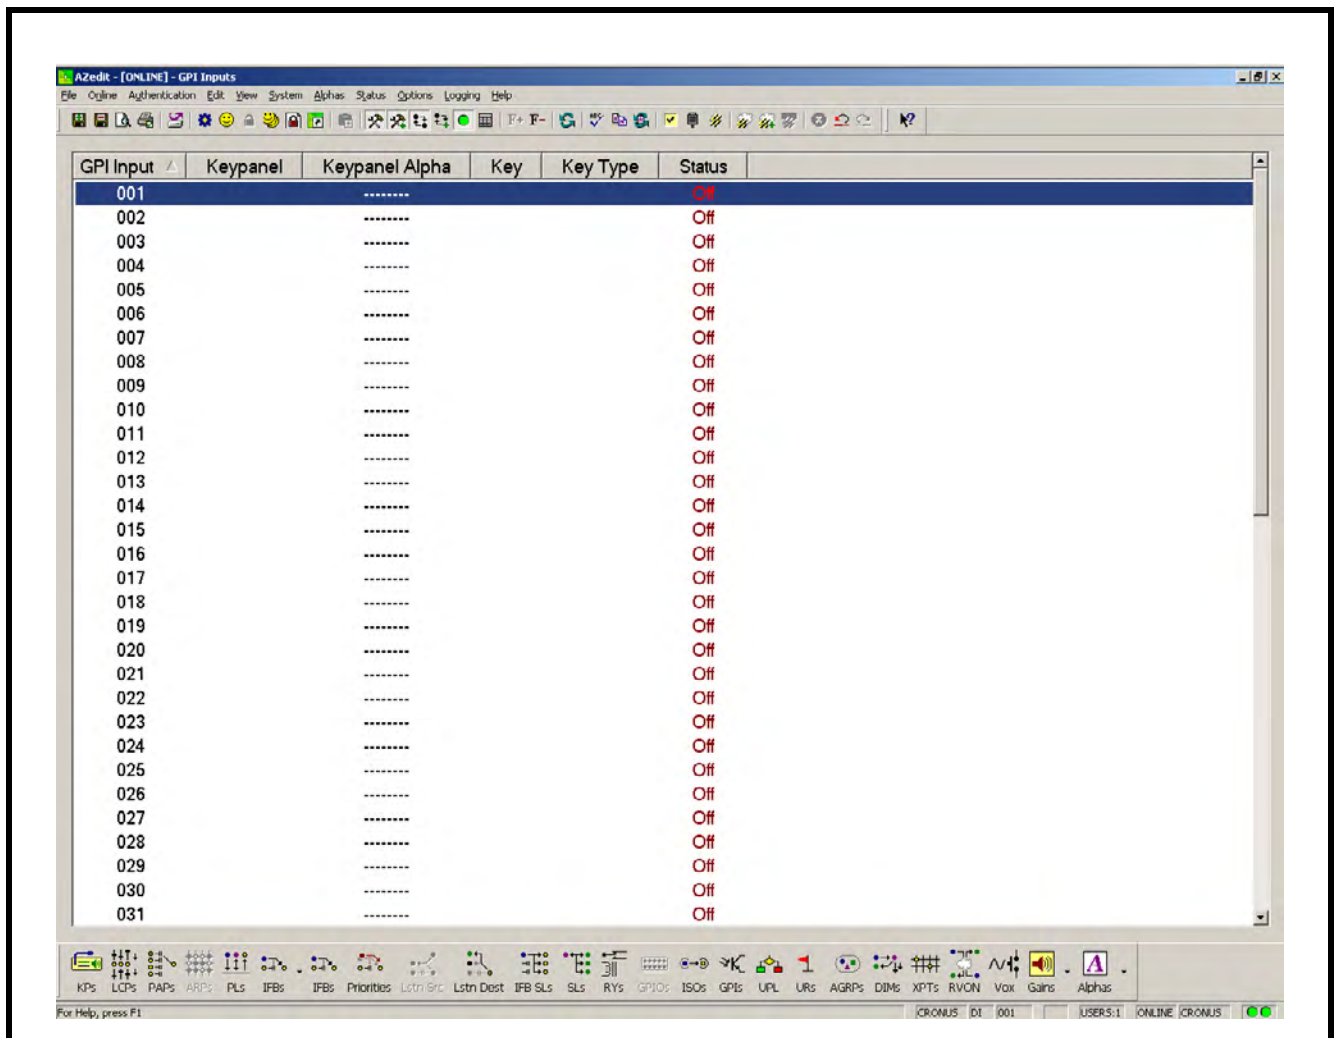

**FIGURE 161.** GPI Inputs Window

---

### GPI Input Column

The **GPI Input** column displays the GPI Input number. This number cannot be modified. However, you can control the number of GPI Inputs available for use by changing the intercom configuration (*Options/Configuration*). The basic system hardware has 8 GPI Inputs. If you do not have additional UIO-256 or GPIO-16 frames attached, you can limit your GPI Inputs to 8.

---

## Keypanel Column

The **Keypanel** column displays the keypanel number assigned to activate by the GPI Input.

## Keypanel Alpha Column

The **Keypanel Alpha** column displays the keypanel alpha of the keypanel activated by the GPI Input.

## Key Column

The **Key** column displays the key assigned to be activated by the GPI Input.

## Key Type Column

The **Key Type** column displays the type of key activated by the GPI Input - either *Talk* or *Listen*. This column is blank when *No Key* is selected as the key type.

**NOTE:** You can temporarily deactivate a GPI input by checking the No Key box. This is the same as entering 0 for the key number. The No Key assignment is included so that you can reactivate the GPI input again later without having to redefine all of the parameters.

## Status Column

The **Status** column displays status information in ONLINE or SERVER mode. If the GPI Input is active, ON displays. Otherwise, OFF displays. The information in this column updates periodically.


To force an update, select **Refresh** from the View menu at the top of the application window.

---

## *Edit GPI Input Window*

The **Edit GPI Input** window, shown in Figure 162, is used to configure the GPI Input to select the intercom port and the intercom “key” activated whenever the selected GPI input is activated. There does not have to be an actual keypanel installed at the selected intercom port. Each GPI input itself acts like a key. Alternatively, you can connect a keypanel to the intercom port and set up one or more GPI inputs as well. This would allow you to activate key assignments not only by pressing the keypanel keys, but also by activating the GPI inputs.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 📶

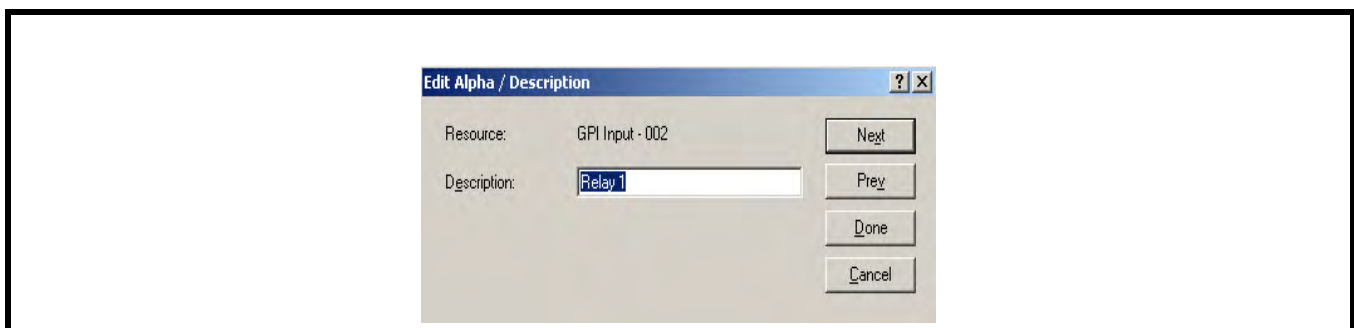

**FIGURE 162.** Edit GPI Input Window

---

---

## GPI Input Group Box

The **GPI Input** group box displays the number assigned to the GPI Input. This number cannot be modified. However, you can control the number of GPI Inputs available for use by changing the intercom configuration (*Options/Configuration*).

**NOTE:** Without a UIO-256, there are only eight (8) GPI Inputs with the basic system.

## Keypanel Group Box

### Port Number Field

The **Port Number** field indicates the port number of the keypanel activated by the GPI Input. When you populate this field, the corresponding Port Alpha appears in the drop down menu.

### Port Alpha Drop Down Menu

The **Port Alpha** drop down menu indicates the port alpha of the keypanel activated by the GPI Input. When you select a Port Alpha from the list, the corresponding Port Number appears in the port number field.

## Key Number Group Box

### Number Field

The **Number** field indicates the actual keypanel key number activated by the GPI Input. Numbering of keys begins at the bottom left, ending at the top right.

**NOTE:** Keypanel numbering differs between keypanel types.

## Key Type Group Box

The **Key Type** radio buttons are used to select the type of key activated by the GPI Input.

Selections available are:

- |                             |                                                                                                                                                                                                                             |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Talk Radio Button:</i>   | Sets the GPI port as a Talk key.                                                                                                                                                                                            |
| <i>Listen Radio Button:</i> | Sets the GPI port as a Listen key.                                                                                                                                                                                          |
| <i>No Key Radio Button:</i> | Temporarily deactivates a GPI input. This is the same as entering 0 for the key number. The No Key assignment is included so you can reactivate the GPI input again later without having to redefine all of the parameters. |



## ISO Window

The **ISO** (Isolate) window, shown in Figure 163, displays configuration settings for ISOs in the intercom system. An ISO is a type of key assignment used by a keypanel operator to separate an intercom port completely from the rest of the intercom system. ISOs are used when a user wants to have a private conversation with a particular intercom port. There is also an option, called ISO Self, which cuts the keypanel operator's keypanel off from the rest of the intercom system. When the ISO key is released, normal intercom operation is automatically restored.


ISO is often used in a broadcasting environment, and may be referred to as "Camera ISO". In this application, camera operators are often assigned to a party line. ISO provides a means for a keypanel operator to isolate a particular camera from the party line to direct the camera operator without outside interference.


Once all configurations have been sent to the intercom system, the keypanel operator is able to isolate the specified ISO output by pressing the ISO key.

Use the Edit ISO window to create or modify an ISO.

To access the Edit ISO window, double-click the ISO for which you want to edit. The Edit ISO window appears. For more information, see "Edit ISO Window" on page 134.

**NAVIGATION:** From the menu bar, select *System/ISO*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

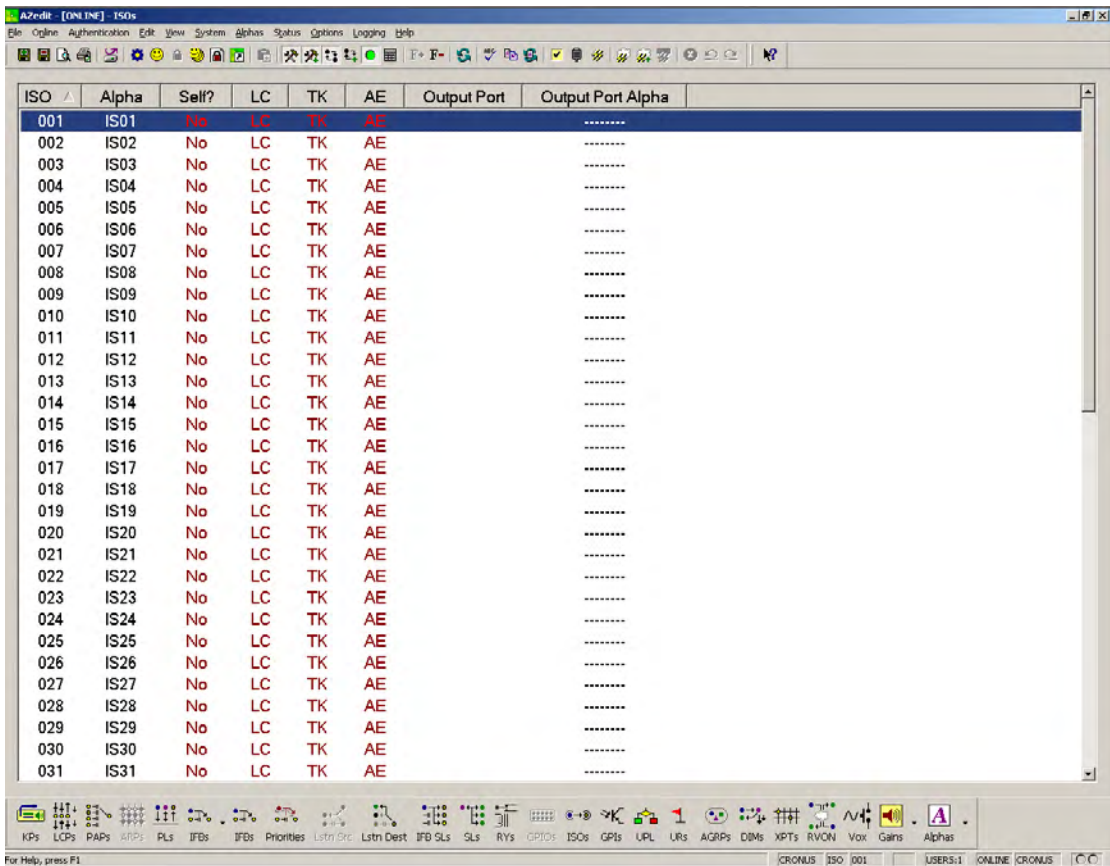

The screenshot shows the 'Azedit [ONLINE] ISOs' window. It contains a table with the following columns: ISO, Alpha, Self?, LC, TK, AE, Output Port, and Output Port Alpha. The table lists 31 ISOs (001 to 031). The 'Self?' column for all entries is 'No'. The 'LC' column for all entries is 'LC'. The 'TK' column for all entries is 'TK'. The 'AE' column for all entries is 'AE'. The 'Output Port' column for all entries is empty. The 'Output Port Alpha' column for all entries is '-----'. The window has a menu bar with 'File', 'Online', 'Authentication', 'Edit', 'View', 'System', 'Alphas', 'Status', 'Options', 'Logging', and 'Help'. The status bar at the bottom shows 'For Help, press F1', 'CRONUS ISO 001', 'USERS:1', 'ONLINE', and 'CRONUS'.

ISO	Alpha	Self?	LC	TK	AE	Output Port	Output Port Alpha
001	IS01	No	LC	TK	AE		-----
002	IS02	No	LC	TK	AE		-----
003	IS03	No	LC	TK	AE		-----
004	IS04	No	LC	TK	AE		-----
005	IS05	No	LC	TK	AE		-----
006	IS06	No	LC	TK	AE		-----
007	IS07	No	LC	TK	AE		-----
008	IS08	No	LC	TK	AE		-----
009	IS09	No	LC	TK	AE		-----
010	IS10	No	LC	TK	AE		-----
011	IS11	No	LC	TK	AE		-----
012	IS12	No	LC	TK	AE		-----
013	IS13	No	LC	TK	AE		-----
014	IS14	No	LC	TK	AE		-----
015	IS15	No	LC	TK	AE		-----
016	IS16	No	LC	TK	AE		-----
017	IS17	No	LC	TK	AE		-----
018	IS18	No	LC	TK	AE		-----
019	IS19	No	LC	TK	AE		-----
020	IS20	No	LC	TK	AE		-----
021	IS21	No	LC	TK	AE		-----
022	IS22	No	LC	TK	AE		-----
023	IS23	No	LC	TK	AE		-----
024	IS24	No	LC	TK	AE		-----
025	IS25	No	LC	TK	AE		-----
026	IS26	No	LC	TK	AE		-----
027	IS27	No	LC	TK	AE		-----
028	IS28	No	LC	TK	AE		-----
029	IS29	No	LC	TK	AE		-----
030	IS30	No	LC	TK	AE		-----
031	IS31	No	LC	TK	AE		-----

FIGURE 163. ISO Window



---

## ISO Column

The **ISO** column displays the default ISO number (001, 002, etc.). This number cannot be modified.

## Alpha Column

The **Alpha** column displays the name assigned to each ISO. You can change the default alphas (IS01, IS02, etc.) to more meaningful names using the Alpha ISO window (*Alphas/ISO*).

**NOTE:** The Alpha Size selected from the “Preferred Alpha Size Drop Down Menu” on page 76, determines the length of Alpha allowed. Selections are 4-, 6- and 8-character lengths.

## ISO Self? Column

The **ISO Self?** column displays whether the keypad’s active talk key assignment is suspended while the ISO key is pressed.

## LC Column

The **LC** column displays the local scroll enable settings. A *red LC* indicates local scroll enable is not active. A *green LC* indicates local scroll enable is active.

## TK Column

The **TK** column displays the trunk scroll enable settings. A *red TK* indicates trunk scroll enable is not active. A *green TK* indicates trunk scroll enable is active.

## AE Column

The **AE** column displays the AZedit scroll enable settings. A *red AE* indicates AZedit scroll enable is not active. A *green AE* indicates AZedit scroll enable is active.

## Output Port Column

The **Output Port** column displays the port number of the port to isolate when the ISO key is pressed.


## Output Port Alpha Column

The **Output Port Alpha** column displays the port alpha of the port to isolate when the ISO key is pressed.

---

## Edit ISO Window

The **Edit ISO** window, shown in Figure 164, is used to configure ISO assignments in the intercom system.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

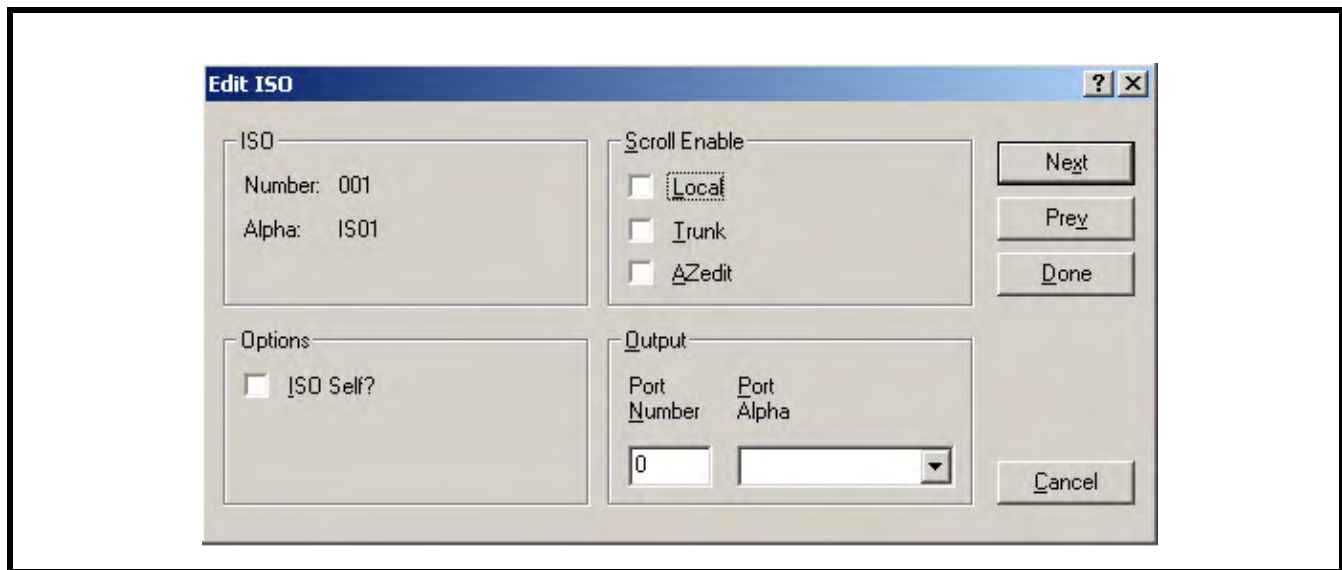


FIGURE 164. Edit ISO Window

---

### ISO Group Box

The **ISO** group box displays the ISO Number and Alpha. You can modify the Alpha using the ISO Alpha screen (*Alphas/ISO*).

---

### Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypanel keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:

#### Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also they cannot assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they are not able to copy it to any other key.

#### Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

---

**NOTE:** The trunk check box is only selectable if trunking has been activated.

### **AZedit Check Box**

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users cannot have access to these scroll lists.

**NOTE:** The AZedit check box is only selectable if trunking has been activated.

### **Options Group Box**

#### **ISO Self? Check Box**

The **ISO Self?** check box indicates the keypanel operator's talk key is suspended while the ISO key is active. By selecting this option, the keypanel operator, when the ISO key is selected, cannot be interrupted by another caller.

### **Output Group Box**

#### **Port Number Field**

The **Port Number** field indicates the port number of the port to isolate when the ISO key is pressed. Once the port number field is populated, the corresponding port alpha appears in the port alpha drop down menu.

#### **Port Alpha Drop Down Menu**

The **Port Alpha** drop down menu indicates the port alpha of the port to isolate when the ISO key is pressed. Once the port alpha is selected from the drop down menu, the corresponding port number appears in the port number field.

---


## GPIO-16s Window


The **GPIO-16s** window, shown in Figure 165, displays the setup options selected for each GPIO-16 frame configured in the intercom system.

Use the Edit GPIO-16s window to modify the GPIO-16 settings.

To access the Edit GPIO-16 window, double-click the **GPIO-16** you want to modify. The Edit GPIO-16s window appears. For more information, see “Edit GPIO-16 Window” on page 137.

**NAVIGATION:** From the menu bar, select *System/GPIO-16*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

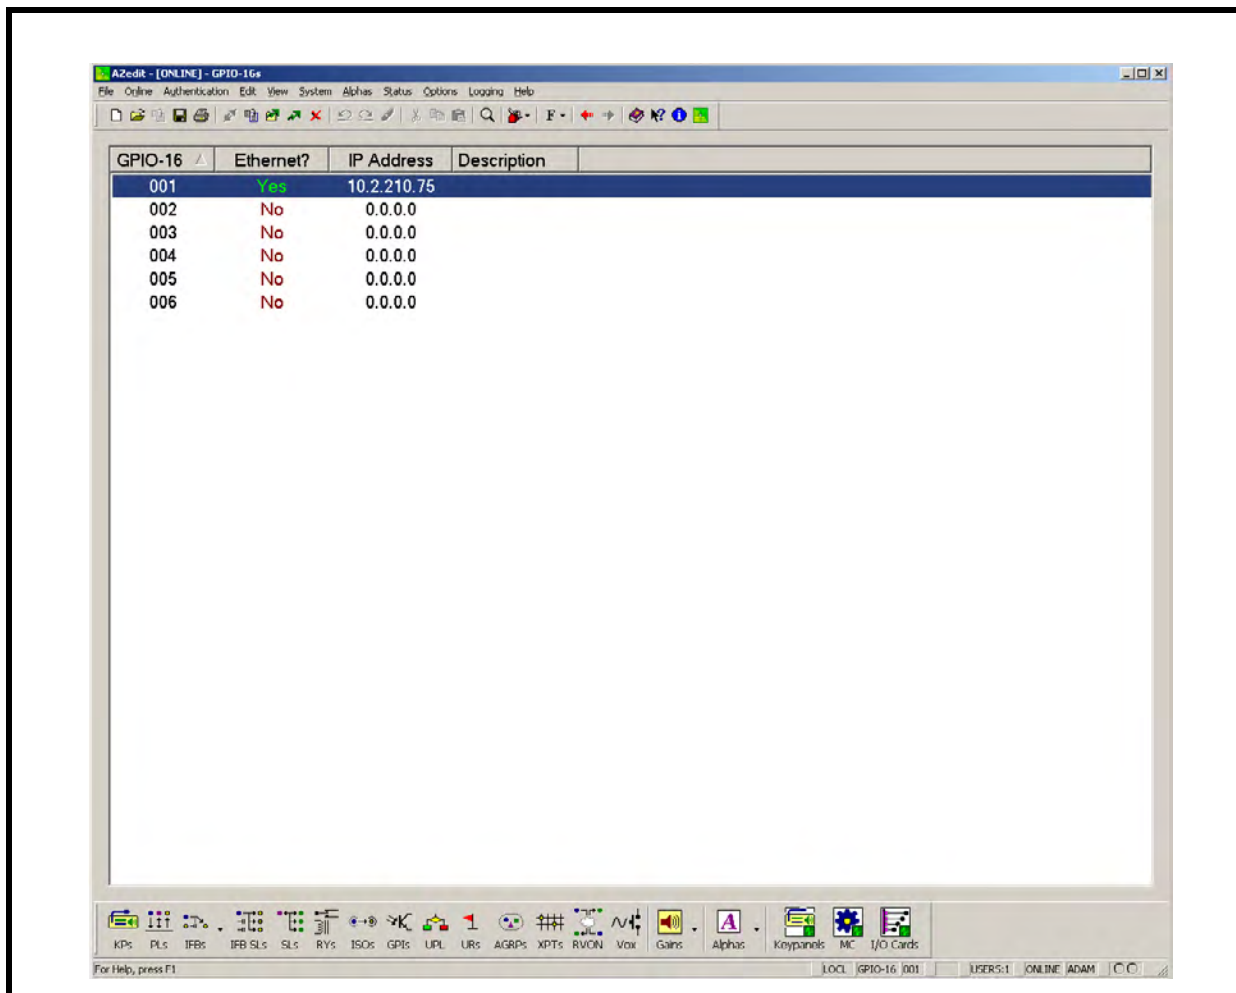

**FIGURE 165.** GPIO-16 System Window

---

## GPIO-16 Column

The **GPIO-16** column displays the GPIO-16 relay group number. By default, AZedit is configured for six (6) groups (each group consisting of 16 relays).

You can assign *up to 16 groups (with a maximum of 256 relays)*.

---

## Ethernet? Column

The **Ethernet?** column displays whether or not Ethernet is enabled on the GPIO-16 device.

## IP Address Column

The **IP Address** column displays the IP Address assigned to the GPIO-16 device.


## Description Column


The **Description** column displays a brief description of the GPIO-16 device. This description is created in the GPIO-16 Configuration screen (*Options/GPIO-16 Configuration*). For more information, see “GPIO-16 Configuration Window” on page 62.

---

## Edit GPIO-16 Window

The **Edit GPIO-16** window, shown in Figure 166, is used to modify existing GPIO-16 device settings, such as IP Address, and Ethernet connectivity. For complete configuration options, see “GPIO-16 Configuration Window” on page 62.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

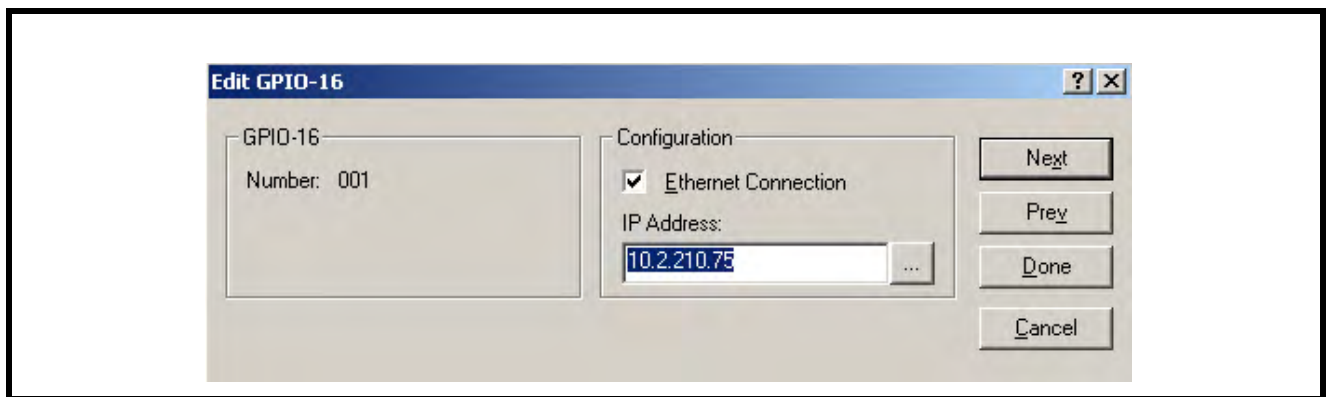

**FIGURE 166.** Edit GPIO-16 Window

---

## GPIO-16 Group Box

The **GPIO-16** group box displays the GPIO-16 relay group number.

This number *cannot be modified*.

## Configuration Group Box

### Ethernet Connection Check Box

The **Ethernet Connection** check box enables Ethernet on the GPIO-16 device.

### IP Address Field

The **IP Address** field indicates the IP Address for the selected GPIO-16 device.

---

## Browse Button


The **GPIO-16 Browse** button opens the Select GPIO-16 window. From this window, you can select a GPIO-16 device from a list of all the devices on the local network that can respond to a broadcast. For more information, see “Select GPIO-16 Window” on page 138.

**NOTE:** If this is the first time the GPIO-16 is being used; only the MAC Address of the unit appears.

---

## Select GPIO-16 Window

The **Select GPIO-16** window, shown in Figure 167, is used to select a GPIO-16 device from a list of all the devices on the local network that can respond to a broadcast. The MAC Address, IP Address, and a description of the device are displayed in the window.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. .

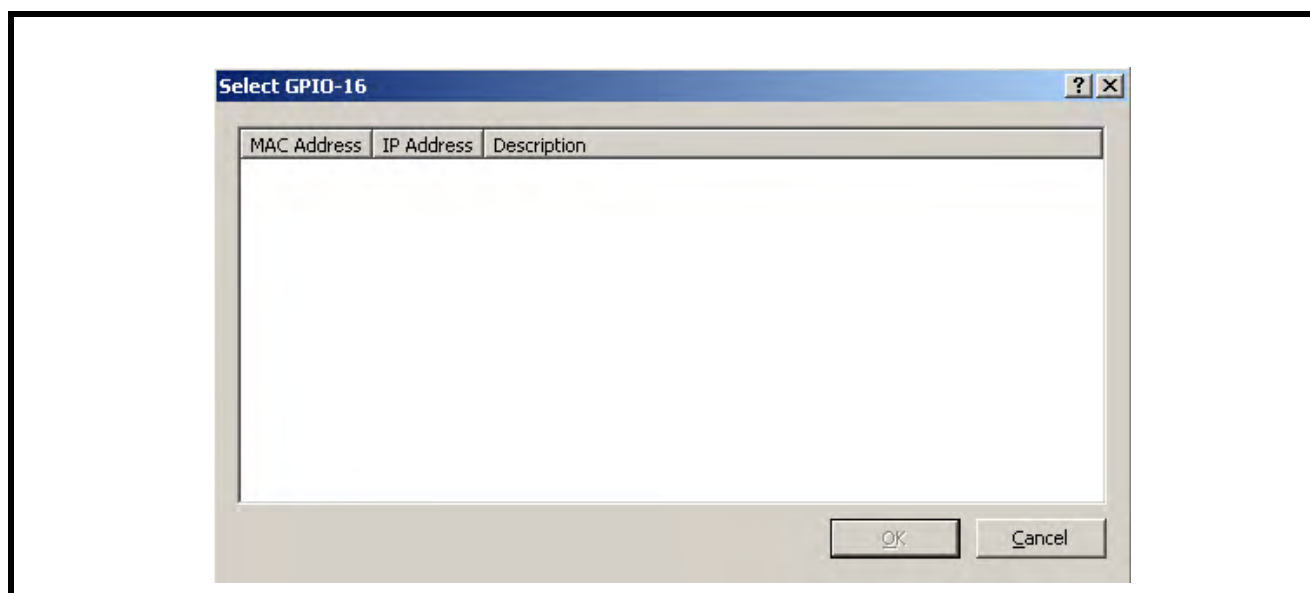


FIGURE 167. Select GPIO-16 Window

---

## MAC Address Column

The **MAC Address** column displays the MAC Address of the GPIO-16.

**NOTE:** If this is the first time the GPIO-16 is being used; only the MAC Address of the unit appears.

## IP Address Column

The **IP Address** column displays the IP Address of the GPIO-16 device.

**NOTE:** If this is the first time you are connecting the GPIO-16, this column may be blank.

## Description Column

The **Description** column displays a unique description of the GPIO-16. This description is configured in the GPIO-16 Configuration screen (*Options/GPIO-16 Configuration...*).

---

## Assignment Group Window

The **Assignment Group** window, shown in Figure 168, is used to configure Assignment Groups to be used in your intercom system. Assignment Groups are lists of random key assignments (both local and remote) of any key type, which is available in a single scroll list, to any keypanel. Assignment Groups logically group different types of key assignments into one single scroll list.

For example, you can combine all ports, party lines, and IFBs associated to a studio into one assignment group that can then be called up by a keypanel.


An Assignment Group has an alpha and description, as well as scroll restriction flags. They are not available to remote intercoms, however assignment groups can have remote keys assigned to them. In addition, assignment groups can contain key assignments that are scroll restricted.


**NOTE:** At the keypanel, press **PGM/SEL** in an idle state that brings up a list of Assignment Groups sorted by alpha. Press **PGM/SEL** again to select a specific group.

Requires the following minimum firmware versions:

- Master Controller v9.22.0
- DBX v1.13.0 with Peripheral Controller v10.13.0
- KP-32 v2.0.1
- KP-96 v8.9

**NAVIGATION:** From the menu bar, select *System/Assignment Groups*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

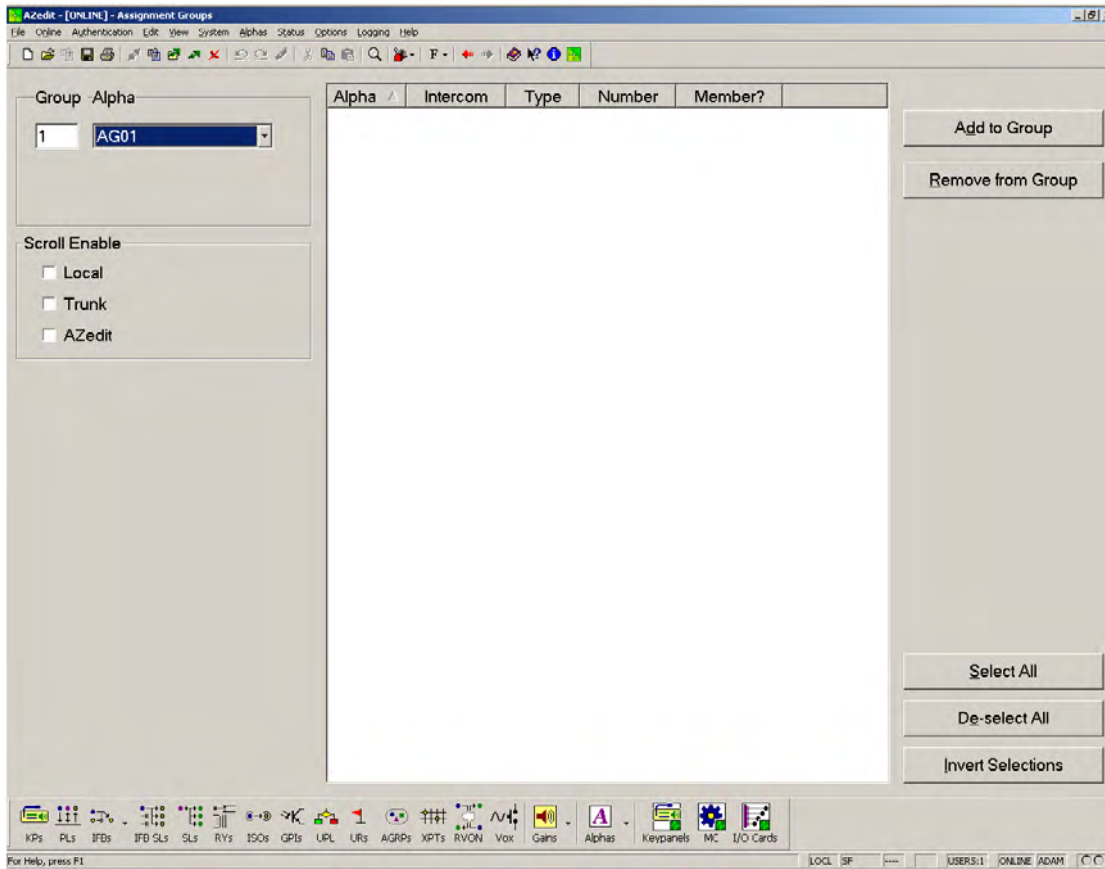

**FIGURE 168.** Assignment Group Window

## Group Field

The **Group** field indicates the assignment group number. By default, there are 32 assignment group positions available. Using the Intercom Configuration window (*Options/Intercom Configuration*), you can set the number of assignment groups allowed from 1 to 999.

When the Group field is entered, the alpha drop down menu automatically populates with the corresponding alpha name.

## Alpha Drop Down Menu

The **Alpha** drop down menu indicates the alpha name attached to the group number. When the Alpha name is selected from the drop down list, the group field automatically populates with the corresponding group number.

## Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypanel keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists. However, access for everyone else is controlled as follows:



---

## Local Check Box

The **Local** check box indicates any keypanel operator in your intercom system with a programmable keypanel can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypanel operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they are not able to assign it using keypad numeric entry (KP9X series keypanels). And, if the destination name appears in any display on their keypanel, they cannot copy it to any other key.

## Trunk Check Box

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

## AZedit Check Box

The **AZedit** check box indicates an AZedit user in a remote intercom system are able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists.

The AZedit check box is only selectable if trunking has been activated.

Once the port alpha has been selected, the SL field populates with the corresponding name.

## Alpha Column

The **Alpha** column displays Alpha of the assignment type in the assignment group.

## Intercom Column

The **Intercom** column displays the intercom name where the key assignment resides. Because AZedit supports trunking systems, multiple intercom systems may be connected and share port assignments.

## Type Column

The **Type** column displays the type of assignment for that port.

## Number Column

The **Number** column displays the port number where the assignment resides.

## Member? Column

The **Member?** column displays whether a key assignment is part of an Assignment Group. A *Y* appears in the column indicating it is part of the group.

## Add To Group Button

The **Add To Group** button opens the Select Key Assignment Window. From this window you can select different key assignments to add to the assignment group. For more information, see “Select Key Assignment Window” on page 102.

---

## Remove From Group Button

The **Remove From Group** button removes selected key assignments from the currently viewed Assignment group.

**NOTE:** You can select all the key assignments in an Assignment Group by selecting the top assignment, and then pressing Ctrl+Shift and clicking the bottom assignment. To select specific key assignments from the assignment group, press Ctrl and click the assignments you want to remove.

---

## LCP-102 Window


The **LCP-102** window, shown in Figure 169, is used to configure LCP-102 panels in the intercom system. The LCP-102 combines the features of an Analog I/O Gain Adjustment Panel, a Camera Delegate Panel, and a Program Assign Panel in a single frame.

It is easy to switch between its three panel modes and make rapid configuration changes using the menu selector on the front panel. In each mode, you can make up to 64 assignments and then adjust the levels for those assignments.

For example, in TRIMS mode, you can assign and adjust the analog input and output gains for up to 64 intercom ports. In PAP mode, you can select the program input source and set its level for each of 64 IFBs. In CDP mode, you can assign up to 64 intercom ports to any combination of party lines and then adjust the listen level for each participant on that party line. The LCP-102 connects to the auxiliary data port of any ADAM or ADAM CS Intercom System, and it also has a loop connector for connection to another auxiliary device, such as another LCP-102, or a UIO-256 Universal Input/Output frame. Since a single LCP-102 provides trim adjustments for 64 ports, only one unit is required to configure an ADAM CS Intercom System completely. For larger ADAM Intercom Systems, up to 15 additional LCP-102 frames can be connected via the loop connectors.

**NOTE:** In AZedit adjusting analog I/O gains is the same as adjusting analog I/O trims at an LCP-102. In addition, in the LCP-102 setup screen the Analog I/O Gains mode is the same as TRIMS mode at an LCP-102.

**NAVIGATION:** From the menu bar, select *System/LCP-102 Assignment*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

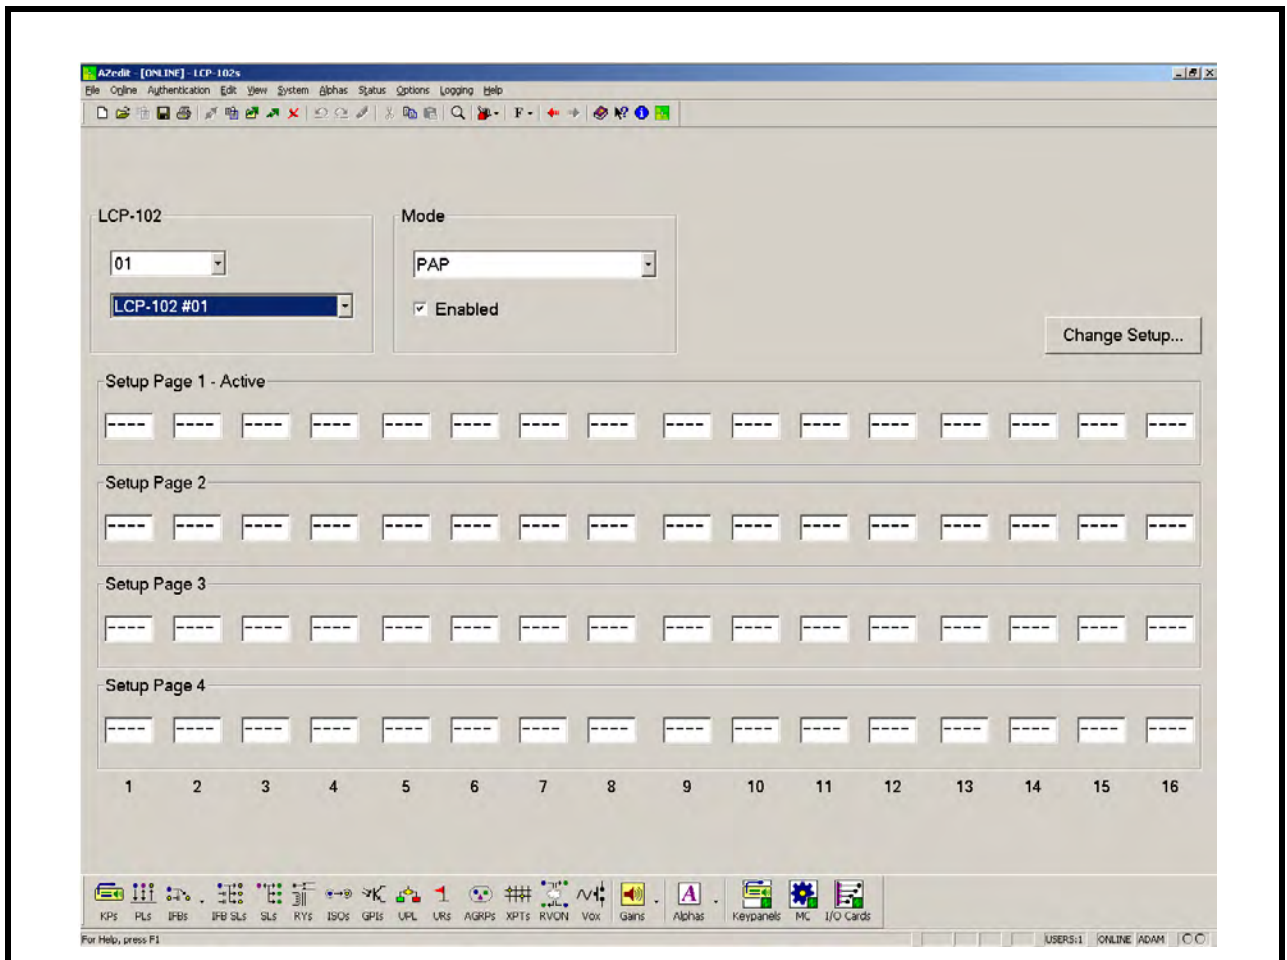



FIGURE 169. LCP-102 Window

## LCP-102 Group Box

### LCP-102 Frame ID/Polling ID Drop Down Menu

The **LCP-102 Frame ID/Polling ID** drop down menu is used to select the LCP-102 Frame ID and Polling ID you want to display.

In a multiple frame system, the different frames are designated as follows:

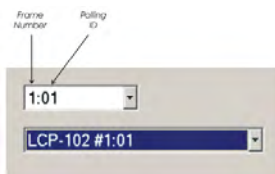

1: 01    2: 01

1: 02    2: 02

1: 03    2: 03

---

## LCP Description Drop Down Menu

The **LCP Description** drop down menu is used to select the Frame ID and Polling ID description from the drop down menu. Once you select the description, the FrameID/PollingID populates with the corresponding information.

## Mode Group Box

### LCP-102 Mode Drop Down Menu

The **LCP-102 Mode** drop down list is used to select the LCP-102 operating mode. There are three (3) display modes for the LCP-102:

- In *I/O Gains* mode you can assign and adjust the analog input and output gains for up to 64 intercom ports.
- In *PAP* mode, you can select the program input source and set its level for each of 64 IFBs.
- In *CDP* mode, you can assign up to 64 intercom ports to any combination of party lines and then adjust the listen level for each participant on that party line.

### Enabled Check Box

The **Enabled** check box indicates an operator at the LCP-102 can access the currently selected mode and change settings. If you remove the check mark, you can only access this mode and change settings using AZedit.

## Setup Page 1 through Page 4 Group Box

### LCP Key Assignment Field


The **LCP Key Assignment** field identifies the assignment for the key. You can manually add the assignment or you can right click and select Change Assignment, which displays the Select Key Assignment window. For more information, see “Select Key Assignment Window” on page 102.

**NOTE:**     *Active* displays next to the page number that is currently the active page on the LCP-102.

### Change Setup Button

The **Change Setup** button opens the Select Active Setup Page window. From this window select the page you want to set as the active Setup Page.

Selections include *Page 1*, *Page 2*, *Page 3*, and *Page 4*.

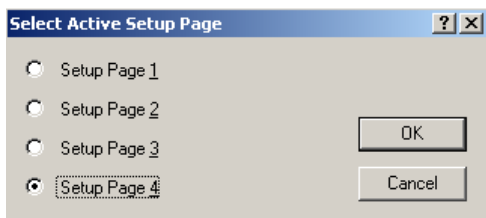


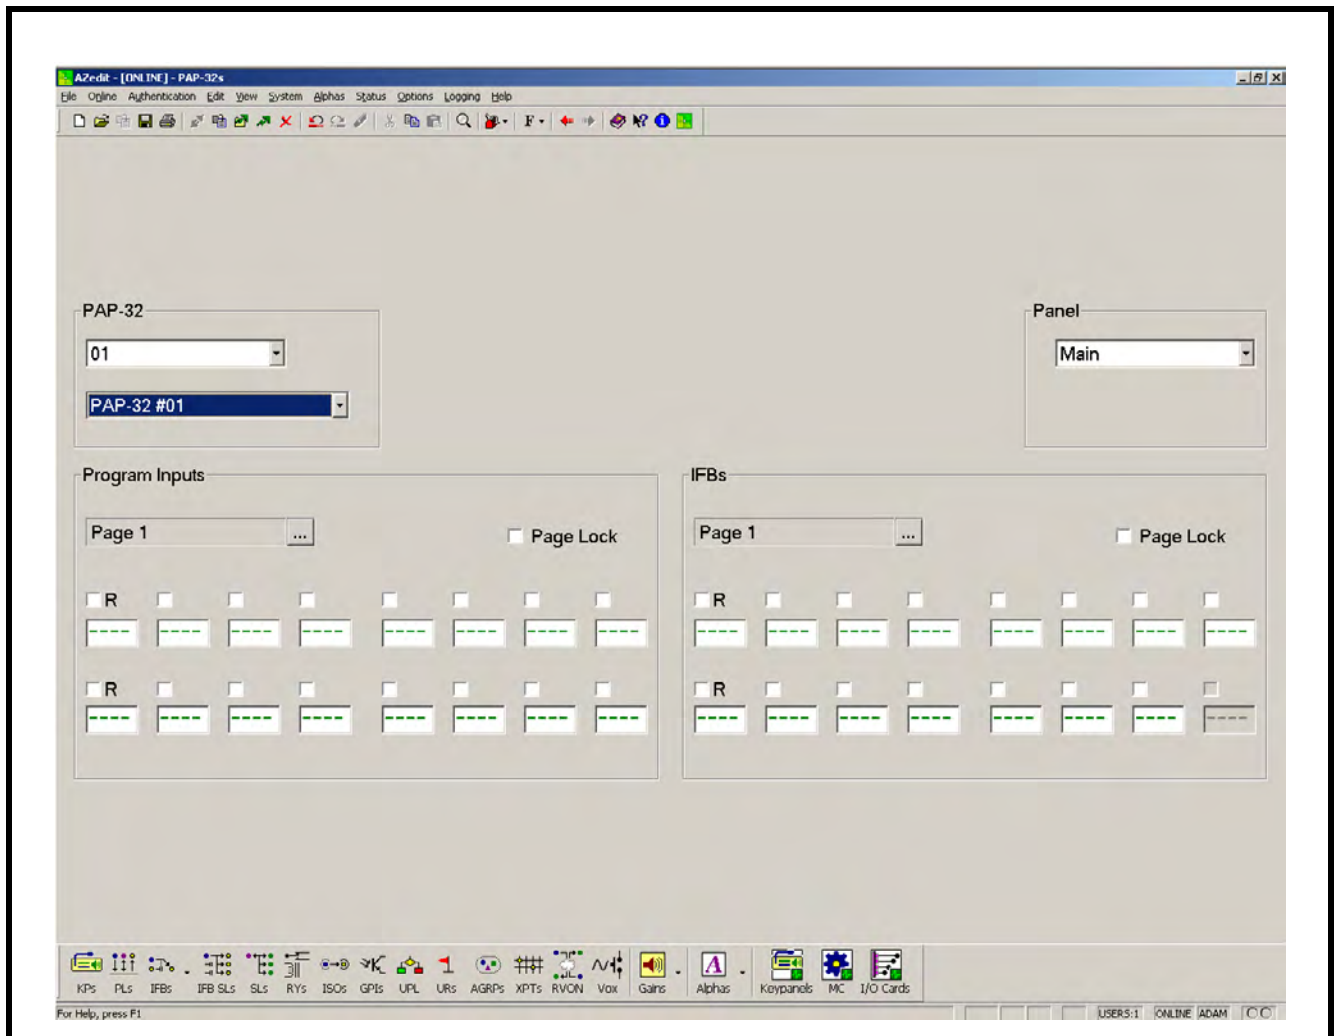
---

## PAP-32 Window

The **PAP-32** window, shown in Figure 170, is used to configure the PAP-32 in the intercom system. A PAP is an optional rack-mount component that lets a user select program input ports for IFBs without having to run AZedit. Changes made at the Program Assign Panel also appear in the IFB main screen in the configuration program.

**NAVIGATION:** From the menu bar, select *System/PAP-32 Assignment*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 



**FIGURE 170.** PAP-32 Setup Window

### PAP-32 Drop Down Menu

The **PAP-32** drop down menu is used to select the PAP-32 numbered resource (up to 15) you want to configure. Once you select the PAP-32 number, the PAP-32 Description automatically displays the corresponding description.

### PAP-32 Description Drop Down Menu

The **PAP-32 Description** drop down menu is used to select the PAP-32 resource you want to configure. Once you select the PAP-32 description, the PAP-32 number automatically displays the corresponding number.

---

## Panel Drop Down Menu

The **Panel** drop down menu is used to select which PAP panel you are currently configuring. By default, you have a main panel and three (3) expansion panels.


## Program Inputs Group Box

### Page Drop Down Menu

The **Page** drop down menu is used to select which PAP page you want to work with.

There are *eight (8) pages available* for each PAP-32 device.

- > Use the drop down button to make your selection.

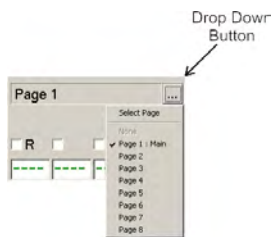

### (R) Restrict Check Box

The **(R) Restrict** check box is used to prevent a keypanel operator from changing a key assignment. (Alternatively, press **Ctrl+R** on the computer keyboard while selecting the **key assignment**.)

### Program Input Assignment Fields

The **Program Input Assignment** fields display the port for the source of audio. You can manually add the assignment or you can right click and select Change Assignment, which displays the Select Key Assignment window. For more information, see “Select Key Assignment Window” on page 102.

### Page Lock Check Box

The **Page Lock** check box is used to lock the current page configuration so assignments are not configurable from the front panel of the PAP.


---

## IFBs Group Box

### Page Drop Down Menu

The **Page** drop down menu is used to select which IFB page you want to work with. There are eight (8) pages available for each PAP-32 device.

- > Use the drop down button to make your selection.

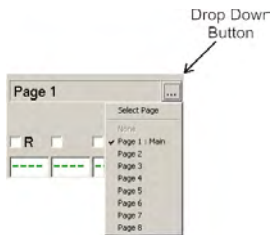

### (R) Restrict Check Box

The **(R) Restrict** check box is used to prevent a keypanel operator from changing a key assignment. (Alternatively, press **Ctrl+R** on the computer keyboard while selecting the **key assignment**.)

### IFB Assignment Fields

The **IFB Assignment** fields display the port for the destination of audio. You can manually add the assignment or you can right click and select Change Assignment, which displays the Select Key Assignment window. For more information, see "Select Key Assignment Window" on page 102.

### Page Lock Check Box


The **Page Lock** check box is used to lock the current page configuration so assignments are not configurable from the front panel of the PAP.


---

## ARP-32 Window

The **ARP-32** (Audio Routing Panel) window, shown in Figure 171, is used to configure the ARP-32 device within the intercom system. The ARP-32 provides the user with the ability to assign one of up to 16 crosspoints and/or up to 16 different crosspoints. Through the use of up to three (3) expansion panels, allowing for a total of 64 input keys and 63 output keys, in addition to the scroll key.

The sum total of ARPs and LCP-102s cannot exceed 15 in a system. The ARP-32 works with ADAM intercom matrix system with a MCII-e only. The ARP-32's key assignments and setup page assignments are stored by the ADAM MCII-e controller, and downloaded to the panel when it powers up. Changes made at the ARP-32 are automatically saved by the MCII-e. Changes can also be made using AZedit. ARP firmware version 0.0.1 and later allows configuration of crosspoint connections.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

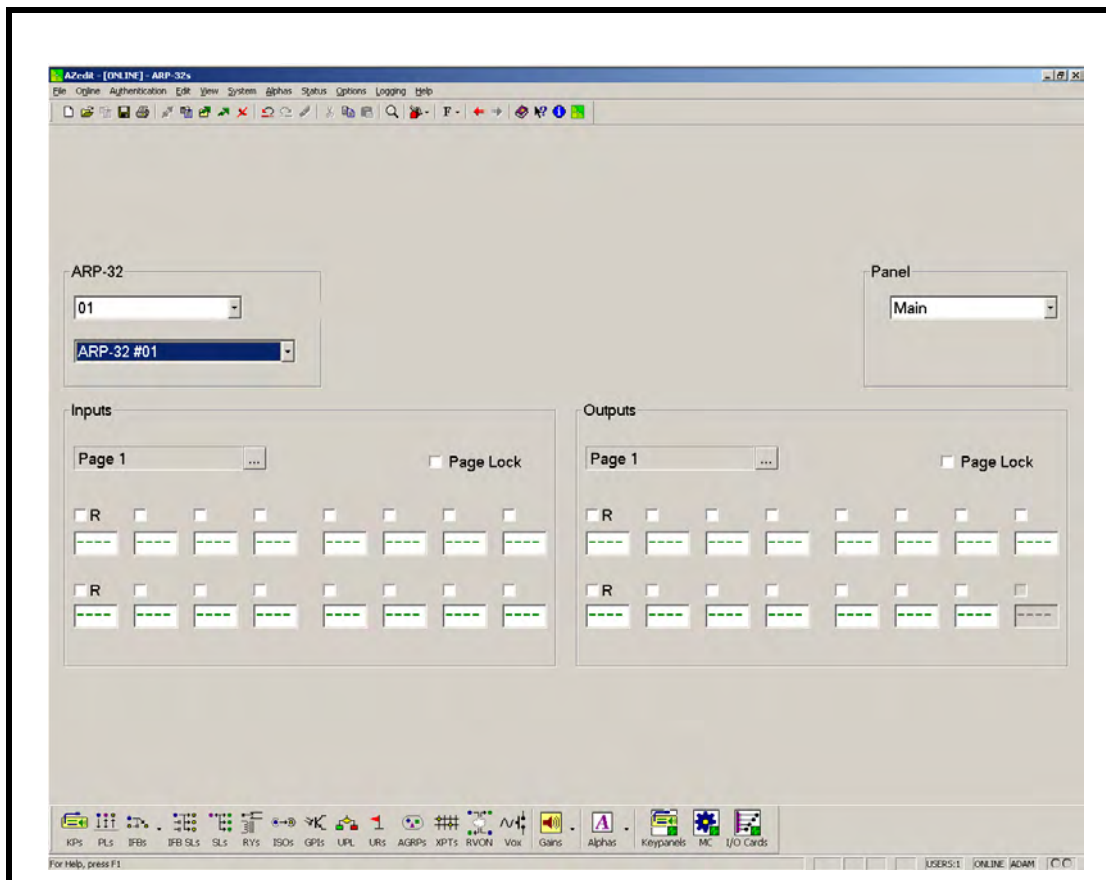

**FIGURE 171.** ARP-32 Setup Window

---

### ARP-32 Drop Down Menu

The **ARP-32** drop down menu is used to select the ARP-32 numbered resource (up to 15) you want to configure. Once you select the ARP-32 number, the ARP-32 Description automatically displays the corresponding description.

### ARP-32 Description Drop Down Menu

The **ARP-32 Description** drop down menu is used to select the ARP-32 resource you want to configure. Once you select the ARP-32 description, the ARP-32 resource automatically displays the corresponding number.



---

## Panel Drop Down Menu

The **Panel** drop down menu is used to select which ARP panel you are currently configuring. By default, you have a main panel and three (3) expansion panels.


## Inputs Group Box

### Page Drop Down Menu

The **Page** drop down menu is used to select which Input page you want to work with.

There are *eight (8) pages available* for each ARP-32 device.

- > Use the drop down button to make your selection.

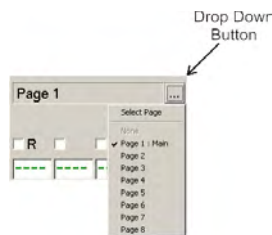

### (R) Restrict Check Box

The **(R) Restrict** check box is used to prevent a keypanel operator from changing a key assignment. (Alternatively, press **Ctrl+R** on the computer keyboard while selecting the **key assignment**.)

### Input Assignment Fields

The **Input Assignment** fields display the port for the source of audio. You can manually add the assignment or you can right-click and select **Change Assignment**, which displays the Select Key Assignment window. For more information, see “Select Key Assignment Window” on page 102.

### Page Lock Check Box

The **Page Lock** check box is used to lock the current page configuration so assignments are not configurable from the front panel of the ARP.

---


## Outputs Group Box

### Page Drop Down Menu

The **Page** drop down menu is used to select the Output page with which you want to work.

There are *eight (8) pages available* for each ARP-32 device.

- > Use the drop down button to make your selection.

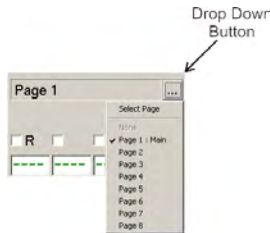

### (R) Restrict Check Box

The **(R) Restrict** check box is used to prevent a keypanel operator from changing a key assignment. (Alternatively, press **Ctrl+R** on the computer keyboard while selecting the **key assignment**.)

### Output Assignment Fields

The **Output Assignment** fields display the port for the destination of audio. You can manually add the assignment or you can right-click and select **Change Assignment**, which displays the Select Key Assignment window. For more information, see “Select Key Assignment Window” on page 102.

### Page Lock Check Box

The **Page Lock** check box is used to lock the current page configuration so assignments are not configurable from the front panel of the PAP.


## Crosspoint Status Window

The **Crosspoint Status** window, shown in Figure 172, is used to configure crosspoint connections in the intercom system. A crosspoint is the point where two ports intersect, in turn being able to talk and listen to each other. The crosspoint is basically the connecting point between the talker and the listener. There are separate talk and listen crosspoints between every intercom port and every other intercom port in the intercom system. In terms of crosspoints, talking from one port to a second port is the same thing as the second port listening to the first port. However, this does not mean that any intercom port can arbitrarily listen to another intercom port.

### Methods of Crosspoint Activation

- Keypanel Key Assignments:** Crosspoints turn on and off as keypanel operators press keys to talk and listen to each other.
- Forced Crosspoint:** The talk and listen ports on a specific intercom can always be forced to talk/listen to another intercom port.
- Party Lines:** When an intercom port is assigned to talk and/or listen to a party line, the talk and/or listen crosspoints are permanently closed between that intercom port and all other intercom ports that are members of the party line. Removing a member from a party line releases the crosspoints. Members are assigned to party lines using party line setup.
- Trunking Port:** Trunk ports are shown as talk and listen in the Crosspoint Status window.

**NAVIGATION:** From the menu bar, select *System/Crosspoint*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

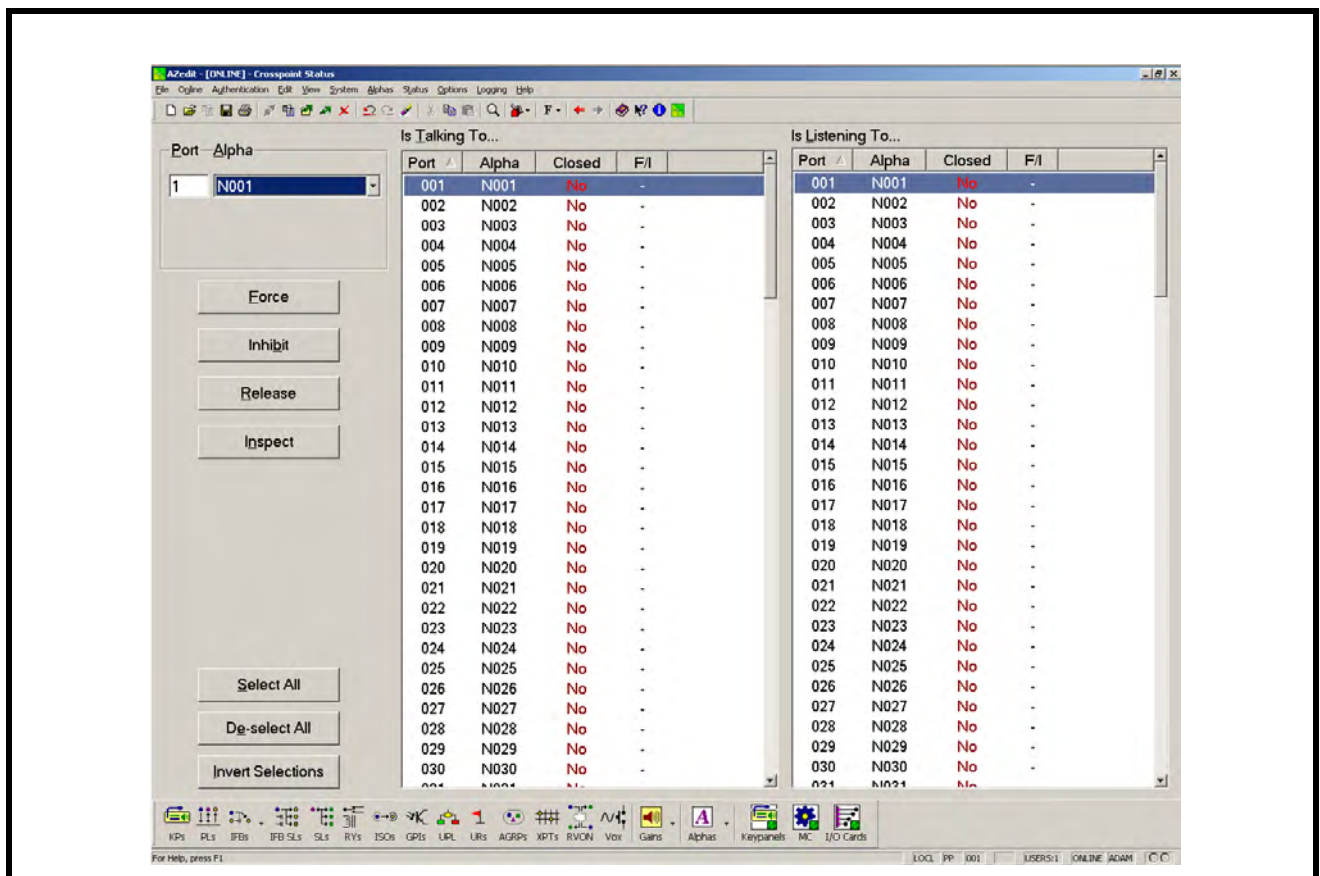


FIGURE 172. Crosspoint Status Window

---

## Port Field

The **Port** field displays the port number for the port currently being viewed.

**NOTE:** You can manually enter the port number in this field. Once the port is entered, the corresponding alpha appears in the Alpha field.

## Alpha Drop Down Menu

The **Alpha** drop down menu displays the port alpha for the port currently being viewed.

**NOTE:** Once you select an alpha from the list, the corresponding port number appears in the port field.

## Is Talking To... Group Box

The **Is Talking To....** columns are used to select a port or multiple ports to which the currently selected port is talking to.

**NOTE:** You can select more than one port to talk or listen to by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Port Column

The **Port** column displays the available port numbers.

## Alpha Column

The **Alpha** column displays the alphas of the available ports.

## Closed Column

The **Closed** column displays whether the crosspoint between two (2) ports is closed. If a crosspoint is closed, the port is being used. You can force a crosspoint by clicking the Force button.

## F/I Column

The **F/I** column shows if the crosspoint is forced closed or inhibited.

## Is Listening To... Group Box

The **Is Listening To....** columns are used to select a port or multiple ports to which the currently selected port is listening to.

**NOTE:** You can select more than one port to talk or listen to by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Port Column

The **Port** column displays the available port numbers.

## Alpha Column

The **Alpha** column displays the alphas of the available ports.


---

## Closed Column

The **Closed** column displays whether the crosspoint is closed. If a crosspoint is closed, the port is being used. You can force a crosspoint by clicking the Force button.

## F/I Column

The **F/I** column shows if the crosspoint is forced closed or inhibited. If the crosspoint is forced a green *F* appears in the column. If the port is inhibited a red *I* appears in the column.

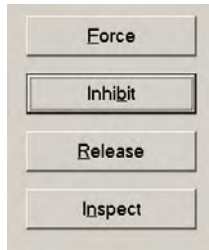

## Force Button

The **Force** button is used to force a crosspoint closure between the port currently showing and the port or ports selected.

## Inhibit Button

The **Inhibit** button is used to prohibit a crosspoint closure between the port currently showing and the port or ports selected.

## Release Button

The **Release** button is used to free the crosspoint closure between the port currently showing and the port or ports selected.

## Inspect Button

The **Inspect** button is used to provide detailed status information on the crosspoint connection between the port currently being viewed and the port selected. For more information, see “Crosspoint Inspection Window” on page 154.

## Select All Button

The **Select All** button highlights all of the items from the Is Talking To.. or Is Listening To... list.


## De-Select All Button

The **De-select All** button de-selects any selected items in the Is Talking To.. or Is Listening To... list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.

**Example:** If ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.

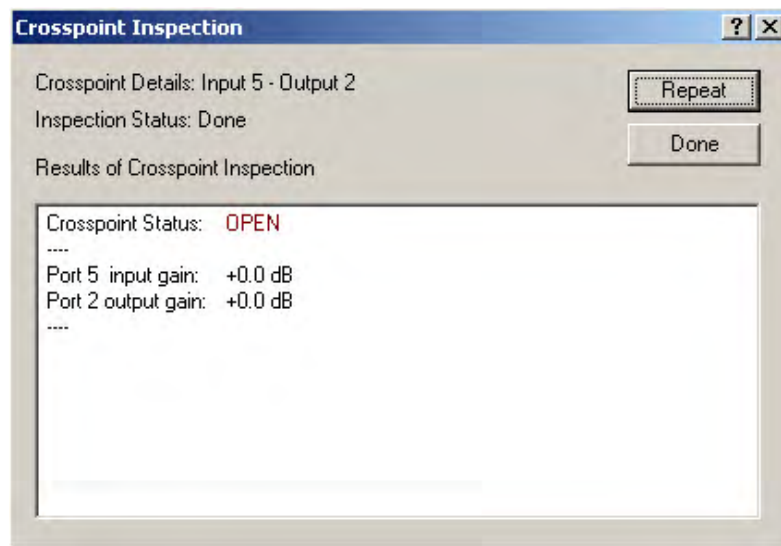

### *When the crosspoint is open*

Input Gain and Output Gain are displayed for the affected intercom ports.

#### **Example:**

Suppose you are inspecting the crosspoint for intercom port 1 listening to intercom port 2. Assume for a moment that the crosspoint was closed. In this case, the microphone signal from the person at intercom port 2 enters the intercom system at the port 2 input and is affected by the port 2 Analog Input Gain setting. The signal is internally routed to the output of intercom port 1. Assuming no other internal gain adjustments, the signal is only affected by the port 1 Analog Output Gain setting. AZedit already knows what settings you have entered for input and output gain, so even if the crosspoint is not closed; it displays the pertinent gain information as follows:

- Port 2 input gain: This is the current Analog Input Gain setting for intercom port 2. A setting of +0.0dB indicates that the port 2 input signals is entering the intercom system unaffected. Settings of +1.0dB, +2.0dB, etc. indicate that the port 2 input gain is being boosted. All other settings being equal, this means that all ports, including port 1 hears intercom port 2 at a higher level than normal. Settings of -1.0dB, -2.0dB, etc. have the opposite effect.
- Port 1 output gain: This is the current setting for the Analog Output Gain from intercom port 1. A setting of +0.0dB indicates that the port 1 output signal is exiting the intercom system unaffected. Settings of +1.0dB, +2.0dB, etc. indicate that the port 1 output gain is being boosted. All other things being equal, this means that port 1 hears all other ports, including port 2, at a higher level than normal. Settings of -1.0dB, -2.0dB, etc. have the opposite effect.

---

### ***When the crosspoint is closed***

The Input and Output Gain is displayed as described above. All other pertinent gain information for the entire audio path is displayed as follows:

**Current Gain:** This is the combined effect of any or all of the following settings which might currently be activated, and which can all modify the gain of a crosspoint:

- Crosspoint Gain
- Party Line Gain
- Inter-panel Dim Table participation
- IFB Dim Level (specified during IFB setup)
- Dim Crosspoint Volume (a UPL Statement Output Action specified during UPL statement setup)

A setting of +0.0dB indicates no effect. Settings of +1.0dB, +2.0dB, etc. indicate a boost in level. Settings of -1.0dB, -2.0dB, etc. indicate a cut in level. Generally, you rarely see more than one of the above settings affecting a crosspoint at the same time. However, there are occasions where this might happen. In this case, the settings are added together. When this happens, keep in mind that the numbers you are looking at are standard audio reference levels and not absolute numbers. When you add two audio signals together that are at the same audio level, you actually double the level. In terms of audio reference levels, each doubling of level represents a change of +6.0dB.

**Example:** Example: A keypanel operator at intercom port 1 presses a listen key to listen to a person at intercom port 2. Port 2 is also a member of party line 1, and the keypanel operator at port 1 is also listening to party line 1 via another listen key. This is an unlikely scenario, but if it does happen, the point-to-point listen gain for port 1 listening to port 2 is added together with the party line listen gain setting for port 1 listening to party line 1. If both of these settings happen to be +0.0dB, the result is a current gain of +6.0dB. The keypanel operator at port 1 perceives a slight boost in level from the person at intercom port 2 with respect to the other members of the party line.

**Overall path gain:** This number indicates the combined effect of the Crosspoint Gain, Input Gain, and Output Gain settings. A setting of +0.0dB indicates no effect: intercom port 2 hears intercom port 1 at the standard level. Settings of +1.0dB, +2.0dB, etc. indicate that the combined effect of all the adjustments cause port 2 to hear port 1 at a higher level than normal. Settings of -1.0dB, -2.0dB, etc. have the opposite effect.


### ***Crosspoint Inspection in FILE mode***


The primary purpose of the DEMO feature is to demonstrate to prospective users how the crosspoint inspection feature operates when no intercom connection is currently available. If Allow Crosspoint Inspection in FILE Mode is activated (Options menus, Preferences, Advanced tab), you can view a “DEMO” of crosspoint inspection. In FILE mode, AZedit has no way of knowing the actual status of a crosspoint. However, it can demonstrate the theoretical effect of a closed crosspoint by generating a random key press simulation and then looking up all of the relevant gain settings. It then displays this “DEMO” information in a manner similar to what was previously described above for a closed crosspoint.

## Inter-Panel Dim Table Window

The **Inter-Panel Dim Table** window, shown in Figure 173, is used to configure DIM on specific keypanels in the intercom system. An Inter-panel Dim Table is a list of two or more keypanels that are located in close proximity to one another. In this situation, if the keypanels are using a speaker/microphone combination, feedback can occur if two keypanels have keys activated with the same destination. On the other hand, if one keypanel has a key activated to talk to the destination and the other is receiving audio from the destination, by using an inter-panel dim table, the intercom system automatically mutes, or dim, one or both keypanel speaker outputs while this situation exists. When you configure a dim table, you can also define the amount of speaker dimming.

**NAVIGATION:** From the menu bar, select *System/Dim Table*

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

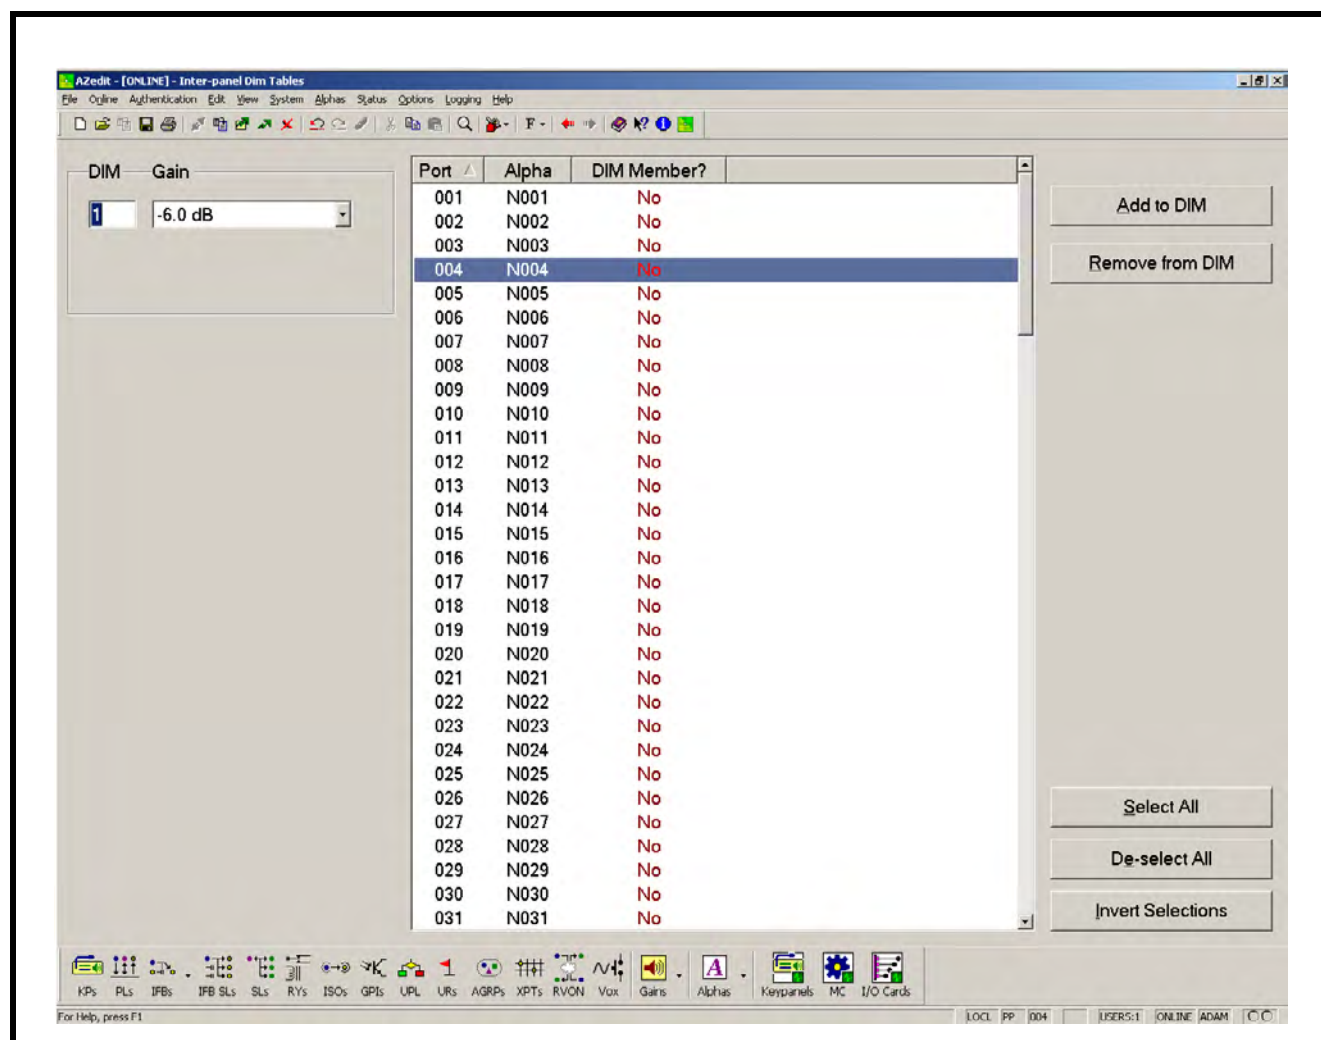

**FIGURE 173.** Inter-Panel Dim Setup Window

### DIM Field

The **DIM** field indicates the DIM table number you are configuring.

You can create *up to 32 tables* in AZedit.



---

## Gain Drop Down Menu

The **Gain** drop down menu is used to select the gain level, in dB, to associate with the DIM number.

Selections include:

*-1.0dB, -2.0dB, -3.0dB, -4.0dB, -5.0dB, -6.0dB, -7.0dB, -8.0dB, -9.0dB, -10.0dB, -12.0dB, -15.0dB, -18.0dB, -21.0dB, -24.0dB, -30.0dB, -36.0dB, -48.2dB, -62.7dB, -72.2dB, and Mute.*

## Port Column

The **Port** column displays available ports to add to the DIM Table.

**NOTE:** Select ports where there are keypanels connected that are very close to each other, typically within five (5) feet (1.5m) or keypanels where you are experiencing feedback problems.

**NOTE:** You can select more than one port to talk or listen to by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Alpha Column

The **Alpha** column displays the alphas of the available ports.

## DIM Member? Column

The **DIM Member?** column displays whether the port belongs to a DIM table or not. If the port belongs to DIM table, a green *Yes* appears in the column. If the port does not belong to a table, a red *No* appears in the column.

## Add to DIM Button

The **Add to DIM** button adds the selected ports to a DIM table.

**NOTE:** You can select more than one port to talk or listen to by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Remove From DIM Button

The **Remove From DIM** button removes selected ports from a DIM table.

## Select All Button

The **Select All** button highlights all of the items in the list.

## De-Select All Button

The **De-select All** button de-selects any selected items in the list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.

**Example:** If ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


## UPL Resources Window

The **UPL Resources** window, shown in Figure 174, is used to view current scroll enable settings for each UPL Resource in the intercom system. A UPL resource is a key assignment type used as an input condition for a UPL Statement. Once you have named a UPL resource, you assign it to a keypanel key using keypanel setup. Then, you use UPL statement setup to create a UPL Statement, which instructs the intercom system to perform a specific action when the UPL Resource key is pressed.

Use the Edit UPL Resource window to modify the scroll enable settings for the resource.

To access the Edit UPL Resource window, double-click the resource you want to modify. For more information, see “Edit UPL Resource Window” on page 160.

**NAVIGATION:** From the menu bar, select *System/UPL Resources*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

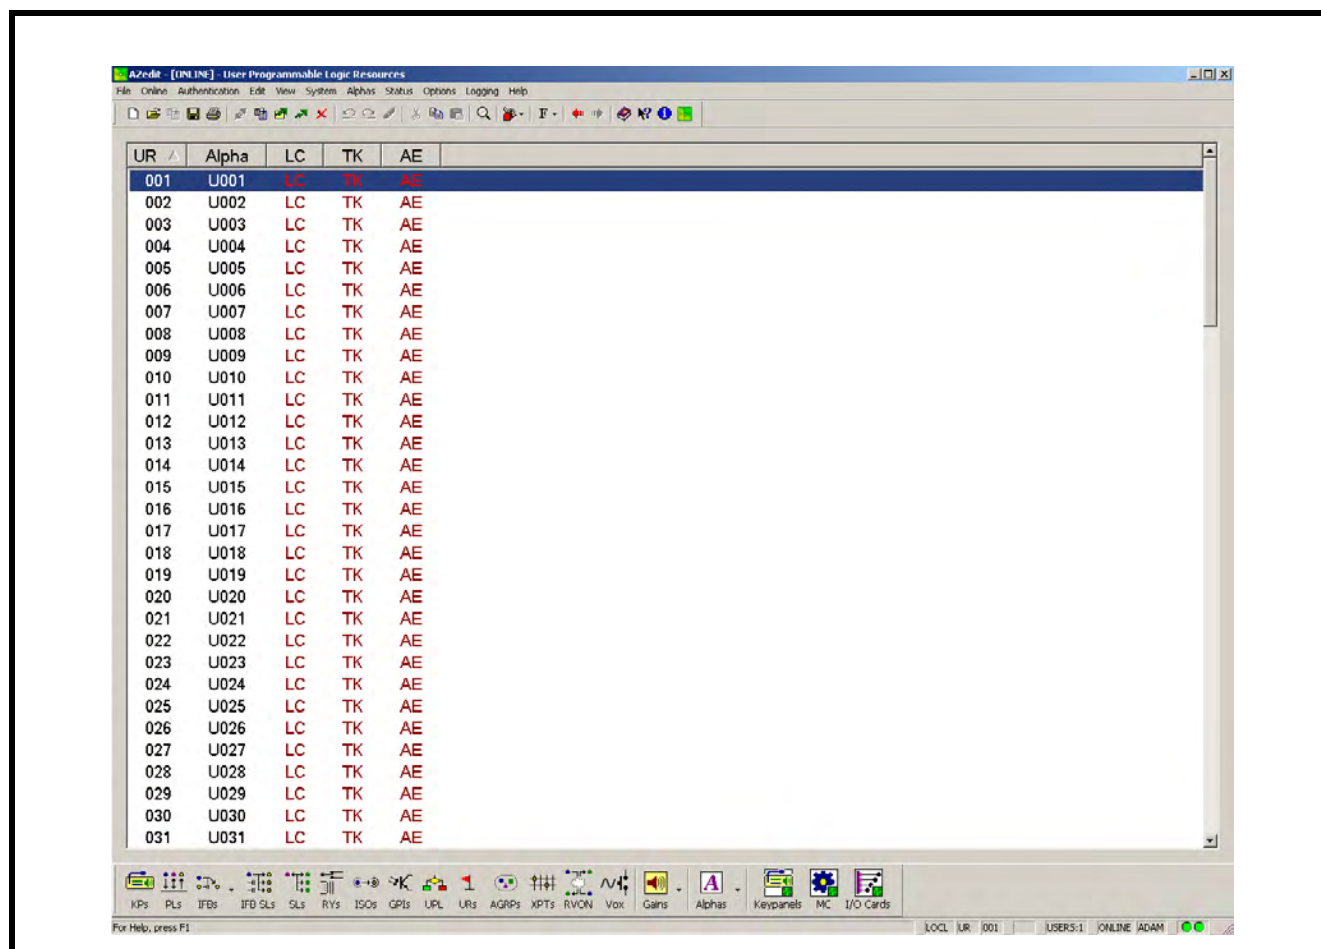


FIGURE 174. UPL Resources Window

---

## UR Column

The **UR** column displays the UR (UPL Resource) number.

This number *cannot be modified*.

## Alpha Column

The **Alpha** column displays the alpha (or name) of the UR Resource. UPL Resources have default names U001, U002, etc., however, these can be changed to a more recognizable name using the UPL Resource Alphas window (*Alphas/UPL Resource*). For more information, see “Alpha Windows” on page 189.

## LC Column

The **LC** column displays the local scroll enable settings. A *red LC* indicates local scroll enable is not active. A *green LC* indicates local scroll enable is active.

To enable or disable scroll enable, use the UPL Resources Edit screen, see “Alpha Windows” on page 189.

## TK Column

The **TK** column displays the trunk scroll enable settings. A *red TK* indicates trunk scroll enable is not active. A *green TK* indicates trunk scroll enable is active.

To enable or disable scroll enable, use the UPL Resources Edit screen, see “Alpha Windows” on page 189.

## AE Column


The **AE** column displays the AZedit scroll enable settings. A *red AE* indicates AZedit scroll enable is not active. A *green AE* indicates AZedit scroll enable is active.


To enable or disable scroll enable, use the UPL Resources Edit screen, “Alpha Windows” on page 189.

---

## Edit UPL Resource Window

The **Edit UPL Resource** window, shown in Figure 175, is used to set the scroll enable settings for the UPL resource. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypad keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

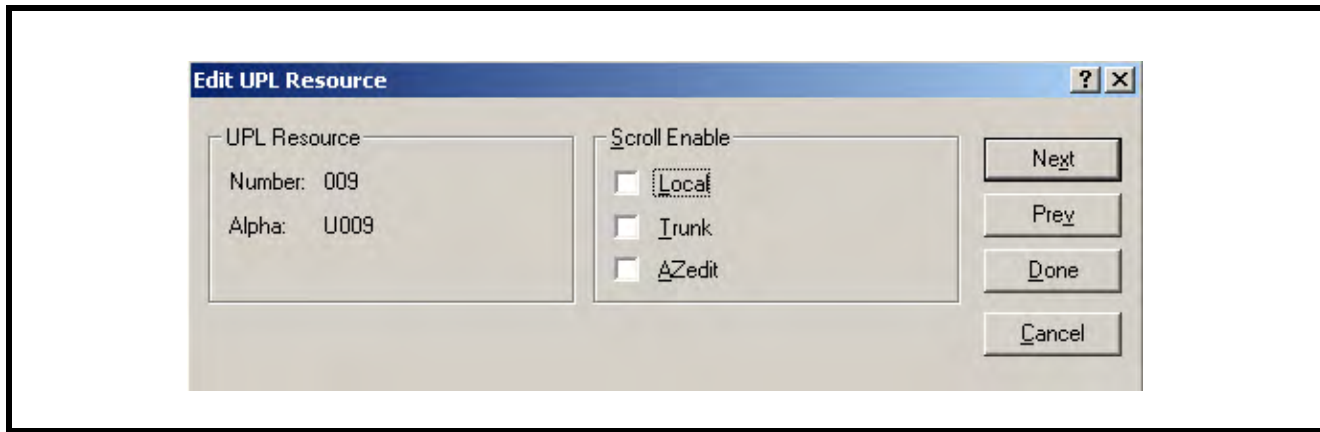

**FIGURE 175.** Edit UPL Resource Window

---

### UPL Resource Group Box

The **UPL Resource** group box contains the UPL Resource Number and Alpha you are currently modifying. These fields cannot be modified; however, you can use the UPL Resource Alphas window to modify the Alpha for the UPL resource. For more information, see “Alpha Windows” on page 189.

---

### Scroll Enable Group Box

The **Scroll Enable** check boxes appear in the setup views for the following destination types: intercom ports, party lines, IFBs, Special Lists, GPI Outputs, UPL Resources, and ISOs. The Scroll Enable check boxes control who can view destinations in scroll lists and assign those destinations to keypad keys. When you are using AZedit within your own intercom system, you always have access to the complete scroll lists.

However, access for everyone else is controlled as follows:

#### **Local Check Box**

The **Local** check box indicates any keypad operator in your intercom system with a programmable keypad can find the destination name in a scroll list and assign it to a key.

If you remove this check mark and send the change to the intercom system, keypad operators cannot see the destination name in their scroll lists, and therefore, are not able to assign it to a key. Also, they cannot assign it using keypad numeric entry (KP9X series keypads). And, if the destination name appears in any display on their keypad, they are not able to copy it to any other key.

---

## **Trunk Check Box**

The **Trunk** check box indicates any keypanel operator in a remote intercom system with a programmable keypanel can view the destination in a scroll list and assign it to a key on their keypanel.

If you remove this check mark and send the change to the intercom system, remote keypanel operators are not able to view the destination or assign it to a key by any means.

**NOTE:** The trunk check box is only selectable if trunking has been activated.

## **AZedit Check Box**

The **AZedit** check box indicates an AZedit user in a remote intercom system is able to view the destination in a scroll list and assign it to keypanel keys in the remote intercom system.

If you remove the check mark, remote AZedit users do not have access to these scroll lists.

The AZedit check box is only selectable if trunking has been activated.

## UPL Statements Window


The **UPL Statements** window, shown in Figure 176, displays information concerning the UPL statements configured for your intercom system. UPL is a powerful feature which lets you quickly and easily program the intercom system to perform output actions you specify based on input conditions you specify.


**Example:** You can program the intercom system to load a new setup file at a specified time or load whenever someone presses a particular keypanel key. On the other hand, you can program talk and listen paths to turn on or off at specified times. Using UPL Statement Setup, you can build the custom operations quickly and easily to get the most out of your intercom system.

Use the Edit UPL Statement window to create your customized UPL statements.

To access the Edit UPL Statement window, double click the **UPL Statement** you wish to create/modify. The Edit UPL Statement window appears. For more information, see “Edit UPL Statement Window” on page 164.

**NAVIGATION:** From the menu bar, select *System/UPL Statements*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

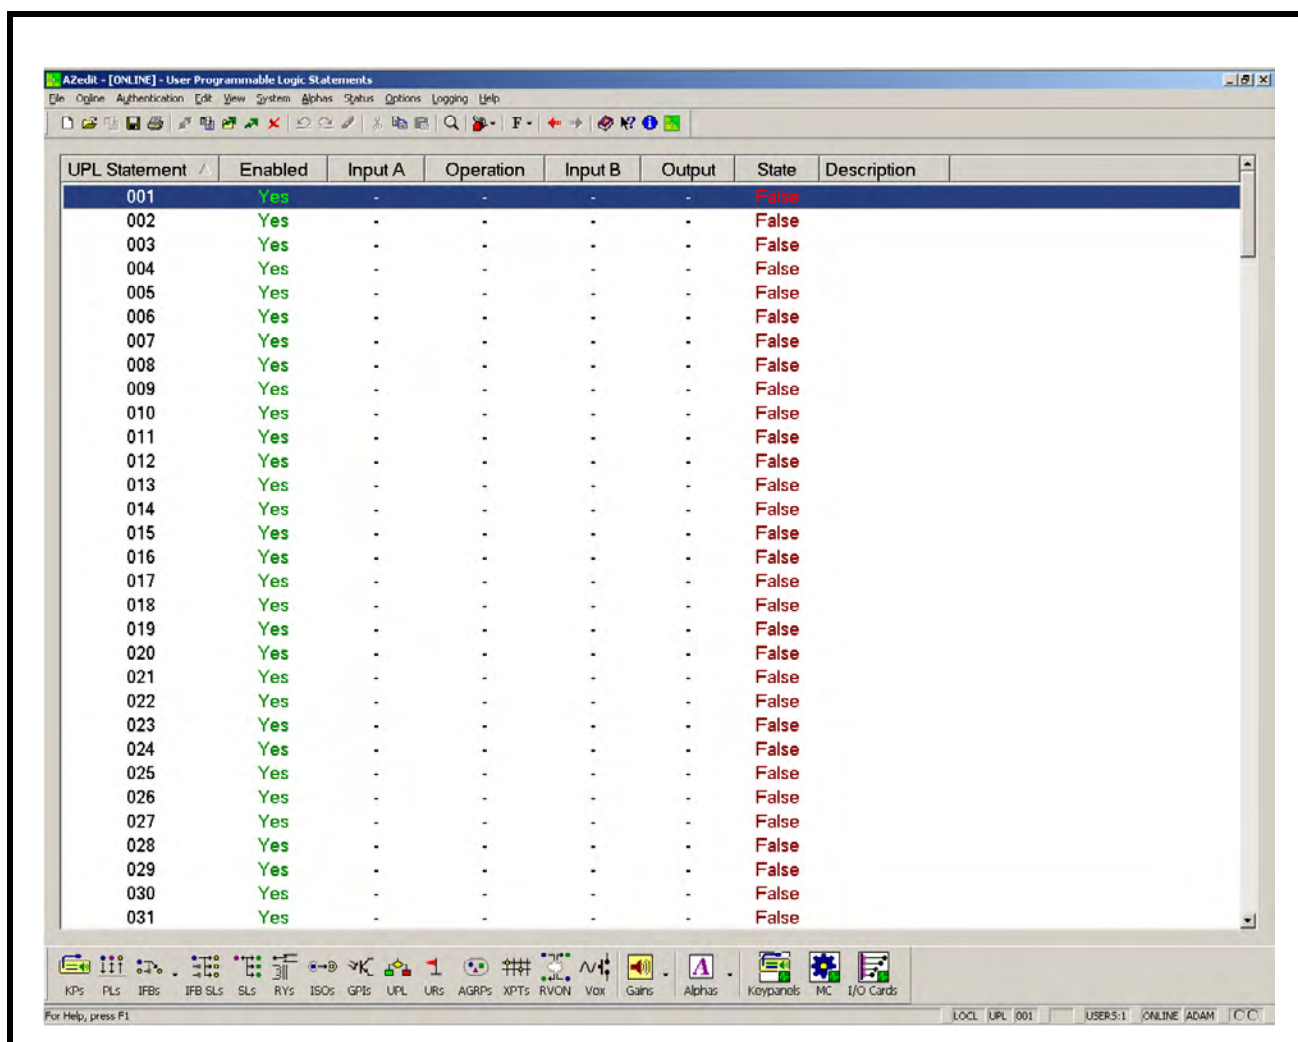

UPL Statement	Enabled	Input A	Operation	Input B	Output	State	Description
001	Yes	-	-	-	-	False	
002	Yes	-	-	-	-	False	
003	Yes	-	-	-	-	False	
004	Yes	-	-	-	-	False	
005	Yes	-	-	-	-	False	
006	Yes	-	-	-	-	False	
007	Yes	-	-	-	-	False	
008	Yes	-	-	-	-	False	
009	Yes	-	-	-	-	False	
010	Yes	-	-	-	-	False	
011	Yes	-	-	-	-	False	
012	Yes	-	-	-	-	False	
013	Yes	-	-	-	-	False	
014	Yes	-	-	-	-	False	
015	Yes	-	-	-	-	False	
016	Yes	-	-	-	-	False	
017	Yes	-	-	-	-	False	
018	Yes	-	-	-	-	False	
019	Yes	-	-	-	-	False	
020	Yes	-	-	-	-	False	
021	Yes	-	-	-	-	False	
022	Yes	-	-	-	-	False	
023	Yes	-	-	-	-	False	
024	Yes	-	-	-	-	False	
025	Yes	-	-	-	-	False	
026	Yes	-	-	-	-	False	
027	Yes	-	-	-	-	False	
028	Yes	-	-	-	-	False	
029	Yes	-	-	-	-	False	
030	Yes	-	-	-	-	False	
031	Yes	-	-	-	-	False	

FIGURE 176. UPL Statement Window

---

## UPL Statement Column

The **UPL Statement** column displays the number assigned to the UPL Statement.

This number *cannot be modified*.

## Enabled Column

The **Enabled** column indicates whether the UPL Statement is active or not. A *green Yes* appears when enabled, a *red No* indicates disabled.

## Input A Column

The **Input A** column displays the first type of input being used, such as GPI, keypanel, etc.

## Operation Column

The **Operation** column displays the operator used in the UPL Statements, such as AND, OR, XOR, etc.

## Input B Column

The **Input B** column displays the second type of input being used (if applicable), such as GPI, keypanel, etc.

Types of inputs used can be:

*UPL Statement*

*GPI Input*

*GPI Input (Local)*

*GPI Output*

*GPI Output (Local)*

*Talk Key*

*Listen Key*

*UPL Resource*

*Crosspoint*

*Input Talking*

*Output Listening*

*Headset Transfer*

*Target Date*

*Target Time*

*IFB Interrupted*

*Target Value*

*Vox Audio*

*Any Talk Key*

## Output Column

The **Output** column displays the type of output resulting from input A and input B, such as key closures, crosspoint forces or inhibits, etc.

---

## State Column

The **State** column displays the current state of the UPL statement. If the statement is active, a *red False* appears. If has not been sent to the intercom, - (*a dash*) appears. If the statement is currently active, a *green True* appears.

## Description Column

The **Description** column displays a brief, unique of the UPL statement. This makes it easier to differentiate between other UPL Statements.

---

## Edit UPL Statement Window

The **Edit UPL Statement** window, shown in Figure 177, is used to create and modify UPL statements used in your intercom system.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 📶

**FIGURE 177.** Edit UPL Statement Window

---

## UPL Statement Group Box

### Comment Field

The **Comment** field is used to enter a description or comment about the current UPL statement.

This field allows up to 32-characters.



---

## Enabled Check Box

The **Enabled** check box indicates the UPL statement is enabled and ready to use. Clear the check box to disable the UPL statement, but not delete it. You can use disabled UPL statements in the future, if desired.

## Input A Group Box

### Type and Variable Drop Down Menus

The **Type and Variable** drop down menu is used to select an input condition that causes the intercom system to perform an output action. Each UPL statement can have either one (1) or two (2) input conditions. Depending on what is selected from the Type drop down menu, dictates what variable is needed. Use Table 2 to determine the type and variables you want to use.

Types of inputs used can be:

**TABLE 2.** Input A Types and Variables

Input Condition	Input Description	Variables Needed
UPL Statement	If a specified UPL statement is true...	UPL Statement # and Description
GPI Input	If a system GPI Input is activated....	GPI Input # and Alpha
GPI Input (Local)	If a Local GPI Input is activated...	Port # and Alpha GPI Input # and Alpha
GPI Output	If a system GPI Output is activated...	GPI Output # and Alpha
GPI Output (Local)	If a Local GPI Output is activated...	Port # and Alpha GPI Output # and Alpha
Talk Key	If a specified Talk Key on a keypanel is ON...	Port # and Alpha Key #
Listen Key	If a specified Listen Key on a keypanel is ON...	Port # and Alpha Key #
UPL Resource	If a UPL Resource key is activated...	UPL Resource # and Description
Crosspoint	If a specified Crosspoint is activated...	Input # and Alpha Output # and Alpha
Input Talking	If a specified port is talking to anyone...	Input # and Alpha
Output Listening	If a specified port is listening to anyone...	Output # and Alpha
Headset Transfer	If the Headset Transfer switch on a keypanel is activated...	Port # and Alpha
Current Date	If the Current Date is...	Year, Month, and Day (YY/MM/DD).  <b>NOTE:</b> You must use the Operator drop down menu when using the Date and/or Time input.
Current Time	If the Current Time is...	Hour, Minute, Second (00:00:00) All times are entered in the 24-hour or military time format. For example, 1:00 pm is 13:00:00.  <b>NOTE:</b> You must use the Operator drop down menu when using the Date and/or Time input.
IFB Interrupted	If the specified IFB is interrupted...	IFB # and Alpha

**TABLE 2.** Input A Types and Variables

Input Condition	Input Description	Variables Needed
Counter	<p>If the Counter is...</p> <p>Counters count increments of time. Each counter is equal to 100ms of time. AZedit allows for up to 256 counters to be used.</p> <p>The counter input selection is used to write UPL statements to occur in a timed event. For example, when a key is pushed, wait 10 seconds before running the UPL statement to turn a light ON.</p>	<p>Counter #</p> <p><b>NOTE:</b> You must use the Operator drop down menu when using the Counter input.</p>
Vox Audio	If the Vox Audio is...	Input # and Alpha
Any Talk Key	If Any Talk Key is on a keypanel is ON....	Port # and Alpha

### Invert Input A Check Box

The **Invert Input A** check box is used to reverse the input condition.

For example, if the input condition is “Talk Key”, which by itself means, when a specified talk key is ON, run the assigned output. However, by selecting the Invert Input A check box, the meaning changes to “when a specified talk key is OFF, run the assigned output.

The invert check box is often used in one UPL statement to cancel an action caused by some other UPL statement.

### Operation Group Box

#### Operation Drop Down Menu

The **Operation** drop down menu is used to select the type of operator to use when joining Input A and Input B or when using the Current Date, Current Time, or the Counter input for Input A. In all other cases, the Operation drop down menu is not used.

**NOTE:** *Operators*, also known as logical operators, are used to construct more complex searches in a database. They help make a search more accurate. There are 3 logical operators: AND, OR and NOT. Operators for Two Input Conditions

Operator	Description
AND	If input A and input B are both true....then run the specified output.
OR	If input A or input B (or both) are true....then run the specified output.
XOR	If input A or input B (but not both) are true....then run the specified output.

#### *Operators for Current Date and Current Time*

Operator	Description
=	If the current date or time equals...
!=	When the current date or time does not equal...
<	When the current date or time is earlier than...
>=	When the current date or time is equal to or later than...
>	When the current date or time is later than...
<=	When the current date or time is equal to or earlier than...

**Example:** Operators for current time have a 5-second window. For example, if you create a test for a specific time (i.e., = 12:00:00), the given time is matched for a 5-second window. It returns a TRUE result for the time 12:00:00 through 12:00:05. A test for inequality returns TRUE for all but this 5-second window.

---

## Input B Group Box

### Type and Variable Drop Down Menus

The **Type** and **Variable** drop down menu is used to select an input condition that causes the intercom system to perform an output action. Each UPL statement can have either one (1) or two (2) input conditions. Depending on what is selected from the Type drop down menu, dictates what variable is needed. Use Table 3 on page 167 to determine the type and variables you want to use.

Types of inputs used can be:

**TABLE 3.** Input B Types and Variables

Input Condition	Input Description	Variables Needed
UPL Statement	If a specified UPL statement is true...	UPL Statement # and Description
GPI Input	If a system GPI Input is activated....	GPI Input # and Alpha
GPI Input (Local)	If a Local GPI Input is activated...	Port # and Alpha GPI Input # and Alpha
GPI Output	If a system GPI Output is activated...	GPI Output # and Alpha
GPI Output (Local)	If a Local GPI Output is activated...	Port # and Alpha GPI Output # and Alpha
Talk Key	If a specified Talk Key on a keypanel is ON...	Port # and Alpha Key #
Listen Key	If a specified Listen Key on a keypanel is ON...	Port # and Alpha Key #
UPL Resource	If a UPL Resource key is activated...	UPL Resource # and Description
Crosspoint	If a specified Crosspoint is activated...	Input # and Alpha Output # and Alpha
Input Talking	If a specified port is talking to anyone...	Input # and Alpha
Output Listening	If a specified port is listening to anyone...	Output # and Alpha
Headset Transfer	If the Headset Transfer switch on a keypanel is activated...	Port # and Alpha
Target Date	If the Target Date is...	Year, Month, and Day (YY/MM/DD).  <b>NOTE:</b> Target Date is used in conjunction with Current Date.
Target Time	Target Time is used in conjunction with Current Time.	Hour, Minute, Second (00:00:00) All times are entered in the 24-hour or military time format. For example, 1:00 pm is 13:00:00.  <b>NOTE:</b> Target Time is used in conjunction with Current Time.
IFB Interrupted	If the specified IFB is interrupted...	IFB # and Alpha
Target Value	Target Value is used in conjunction with the Counter input.  <b>NOTE:</b> Automatically switches input A to Counter.	The target value is an increment of time, in ms, to trigger an event. 1 counter equals 100ms. The counter input selection is used to write UPL statements to occur in a timed event. For example, when a key is pushed, wait 10 seconds before running the UPL statement to turn a light ON.
Vox Audio	If Vox Audio is...	Input # and Alpha
Any Talk Key	If Any Talk Key is on a keypanel is ON....	Port # and Alpha

---

## Invert Input B Check Box

The **Invert Input B** check box is used to reverse the input condition.

For example, if the input condition is “Talk Key”, which by itself means, when a specified talk key is ON, run the assigned output. However, by selecting the Invert Input A check box, the meaning changes to “when a specified talk key is OFF, run the assigned output.

The invert check box is often used in one UPL statement to cancel an action caused by some other UPL statement.

## Output Action Group Box

### Type and Variable Drop Down Menus

The **Type and Variable** drop down menu is used to select an output result that occurs when an input definition is met. Depending on what is selected from the **Type** drop down menu, dictates what variable is needed. Use Table 4 on page 168 to determine the type and variables you want to use.

Types of outputs used can be:

**TABLE 4.** Output Values

Output	Output Description	Variables Needed
Close Crosspoint	Close the crosspoint from the specified input to the specified output	Input Number, Alpha, Output Number, Alpha
Inhibit Crosspoint	Open the crosspoint from the specified input to the specified output.	Input Number, Alpha, Output Number, Alpha
Assert GPI Output	Activate the specified System GPI Output	GPI Output Number and Alpha
Inhibit GPI Output	Deactivate the specified System GPI Output	GPI Output Number and Alpha
Assert GPI Output (Local)	Activate the specified Local GPI Output	Port Number and Alpha, GPI Output Number and Alpha
Inhibit GPI Output (Local)	Deactivate the specified Local GPI Output	Port Number and Alpha, GPI Output Number and Alpha
Force Talk Key Closure	Force the specified talk key ON	Port Number, Alpha and Key Number
Force Talk Key Open	Force the specified talk key OFF	Port Number, Alpha and Key Number
Dim Crosspoint Volume	Cause the specified output to hear the specified input at a reduced volume level.	Input Number, Alpha, Output Number, Alpha and DIM amount (-1.0dB to -72.2dB, and Mute)
Load File	Cause a file to be loaded from disk and sent to the intercom system.  <b>NOTE:</b> AZedit must be in SERVER mode.	The Load File pulls files from the directory you have configured on the General page in the Preferences window. For more information, see “General Page” on page 78.
Force Listen Key Closure	Force the specified listen key ON	Port Number, Alpha, and Key Number
Force Listen Key Open	Force the specified listen key OFF	Port Number, Alphas, and Key Number
Clear Counter	Clear the Counter	Clears the counter input from the UPL statement. If you select 0 all counters are cleared
Inhibit Output	Open the output port.	Output Port Number, and Alpha

**TABLE 4.** Output Values

Output	Output Description	Variables Needed
Inform Command Line Protocol	THIS IS NOT CONFIGURABLE FROM AZEDIT. This option is used by command line protocol only. When a query is sent from the command line protocol to AZedit, a UPL statement is written with “Inform Command Line Protocol” as the output. This can be used to monitor the query sent from the command line protocol. For more information, contact customer service.	
Set Headset Transfer State	Set the Headset to the specified state.	Port Number, Alpha, Headset State Headset state selections are: <i>Turn Headset transfer OFF</i> <i>Turn Headset transfer ON</i> <i>Force Headset transfer OFF</i> <i>Force Headset transfer ON</i> <i>Release Headset transfer</i>  <b>NOTE:</b> The difference between Turn and Force is when force is used the user cannot change the headset transfer once the transfer is complete.
Set Talk Key LED State	Set the Talk Key LED State	Port Number, Alpha, Key, and LED State LED state selections are: <i>Local Control</i> <i>Solid Red</i> <i>Solid Green</i> <i>Solid Amber</i> <i>Slow Red Flash</i> <i>Slow Green Flash</i> <i>Fast Red Flash</i> <i>Fast Green Flash</i> <i>Slow Red Wink</i> <i>Slow Green Wink</i>
Set Listen Key LED State	Set the Listen Key LED State	Port Number, Alpha, Key, and LED State LED state selections are: <i>Local Control</i> <i>Solid Red</i> <i>Solid Green</i> <i>Solid Amber</i> <i>Slow Red Flash</i> <i>Slow Green Flash</i> <i>Fast Red Flash</i> <i>Fast Green Flash</i> <i>Slow Red Wink</i> <i>Slow Green Wink</i>

**TABLE 4.** Output Values

Output	Output Description	Variables Needed
Set IFB Program Input	Set the Program Input Port for an IFB assignment.	IFB Number, Alpha, Input Port Number, and Alpha  <b>NOTE:</b> If you set the Input Port Number to 0, you are assigning no input port.
Start Paging System Macro	Send a signal over a serial connection to a paging system to start a macro.  <b>NOTE:</b> The macro is stored in the paging system. AZedit sends an event to trigger the macro on the Paging System.	Macro Number
Stop Paging System Macro	Send a signal over a serial connection to a paging system to end the macro.  <b>NOTE:</b> The macro is stored in the paging system. AZedit sends an event to trigger the macro on the Paging System	Macro Number

**NOTE:** In most cases, when the input conditions for the UPL statement are true, the output action occurs. Then when the input condition ceases to be true, the output action terminates. The exceptions are Load File, Force Keys (talk and listen), and Force Headset Transfer. When a UPL statement loads a file, there is no way to “unload” the file when the UPL statement is no longer true. When a talk or listen key is forced ON, or a headset is force ON, with a UPL statement, you must use a second UPL statement to force the keys or headset OFF.

### Description Field

The **Description** field displays a plain-text description of the UPL statement you build. You can use this description to verify the UPL statement is constructed to run as anticipated.


## VOX Window

The **VOX** window, shown in Figure 178, is used to configure Vox on ports in your intercom system. VOX is an audio threshold level you set at the point a channel becomes active. When the threshold is set, a microphone does not activate until the preset audio level is attained. This prevents a channel from staying ON when no one is around in a high activity area. VOX is supported in Cronus Intercom systems and in intercoms with AIO-16 cards.

**NOTE:** VOX support requires the following minimum firmware versions:

- Master Controller V9.25.0, or Master Controller II-e V1.1.0
- DBX V1.15.0 with Peripheral Controller V10.15.0, or Peripheral Controller II-e V1.15.03
- AIO-16 V1.1.0 or later
- Cronus V1.1.0 or later

**NAVIGATION:** From the menu bar, select *System/Vox*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

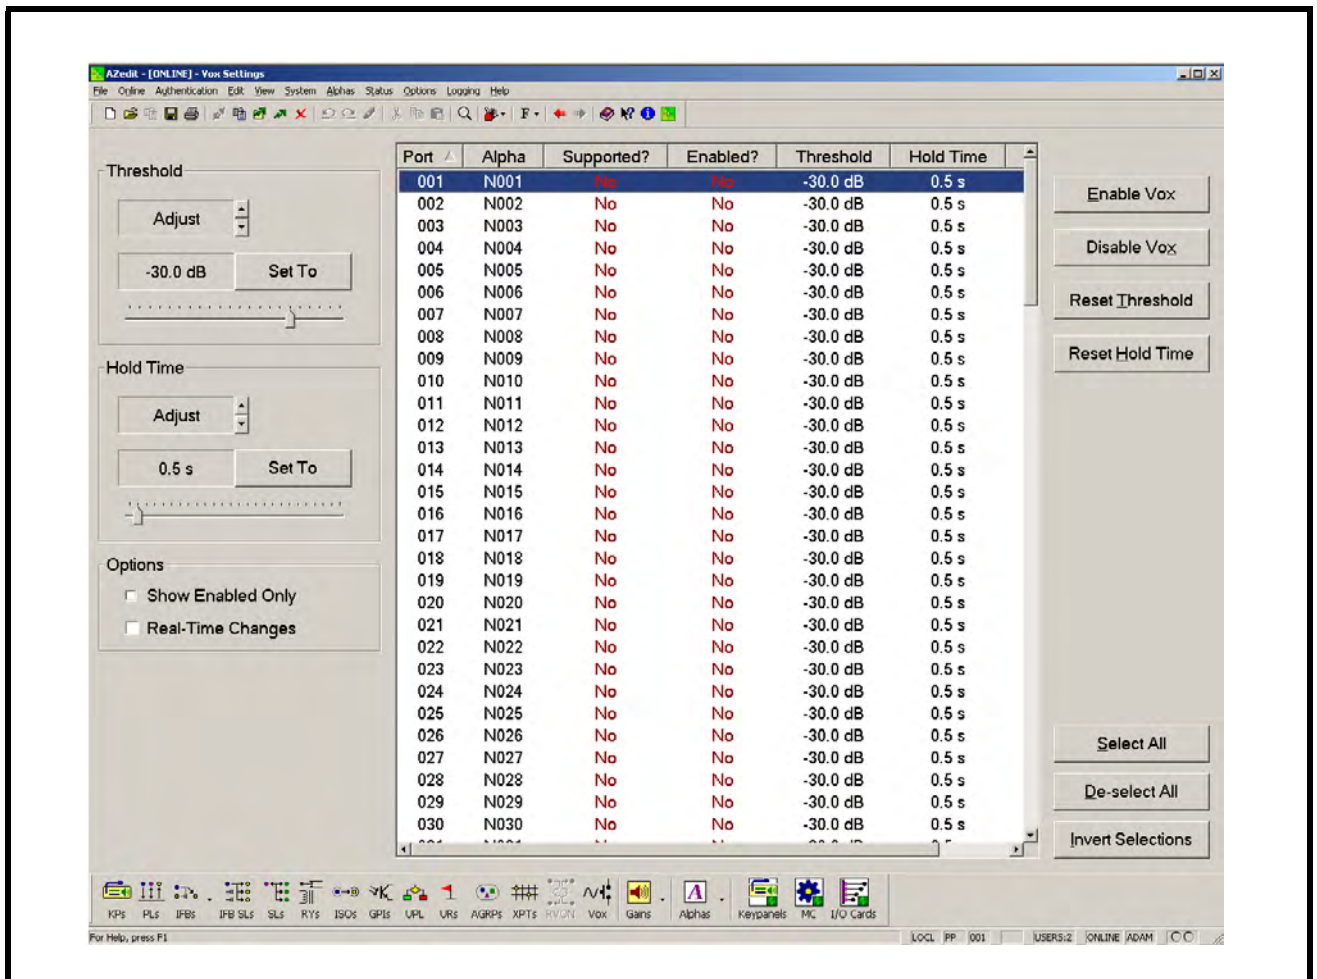


FIGURE 178. VOX Window

---

## Threshold Group Box

### Adjust Box

The **Adjust** box is used to fine tune the VOX threshold level, in dB, for the port after using the Set To slider. Use the adjustment arrows to increase or decrease the VOX threshold level in *.5dB* increments.

The range for this field is *-126dB* to *0.0dB*.


**NOTE:** The threshold change is only seen in the Threshold column to the right.

### Set To Button and Slider

The **Set To** button and **Slider** is used to quickly get to the approximate threshold level, in dB, you want to set for the port. Once you have used the slider, click the **Set To** button to set the level for the port. Use the Adjust arrows to fine tune the threshold level.

To **use the threshold slider**, do the following:

1. Click and hold the **slider**.
2. Drag the **slider** left to decrease the threshold amount or right to increase the threshold amounts.

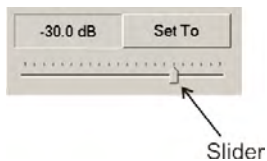

---

## Hold Time Group Box

### Adjust Box

The **Adjust** box is used to fine tune the hold time, in seconds, for the port after using the Set To slider. Use the adjustment arrows to increase or decrease the VOX threshold level in *.1* second increments.

The range for this field is *.02 seconds* to *12.5 seconds*.

**NOTE:** The time change is only seen in the Hold Time column to the right.

### Set To Button and Slider


The **Set To** button and **Slider** is used to quickly get to the approximate hold time you want to set for the port. Once you have used the slider, click the **Set To** button to set the time for the port. Use the Adjust arrows to fine tune the hold time.

To **use the hold time slider**, do the following:

1. Click and hold the **slider**.



- 
2. Drag the **slider** left to decrease the hold time amount or right to increase the hold time amount.

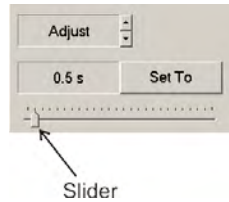

## Options Group Box

### Show Enabled Only Check Box

The **Show Enabled Only** check box is used to show vox enabled ports only. This feature is used to quickly view ports with vox enabled. If this check box is not selected, all available ports are shown.

### Real-Time Changes Check Box

The **Real-Time Changes** check box is used to make changes to the vox threshold in real time. When selected and in ONLINE mode, vox changes are automatically sent to the intercom system as you make the adjustments.

### Port Column

The **Port** column displays all available ports in the intercom.

### Alpha Column

The **Alpha** column displays the alphas for all the available ports in the intercom.

### Supported? Column

The **Supported?** column displays whether vox is supported on the intercom port. If vox is supported on the port, a *green Yes* appears in the column. If vox is not supported on the port, a *red No* appears in the column.

**NOTE:** Vox support requires the following minimum firmware versions:

- Master Controller V9.25.0, or Master Controller II-e V1.1.0
- DBX V1.15.0 with Peripheral Controller V10.15.0, or Peripheral Controller II-e V1.15.03
- AIO-16 V1.1.0 or later
- Cronus V1.1.0 or later

### Enabled? Column

The **Enabled?** column displays whether vox is enabled on the specified port. If vox is enabled on the port, a *green Yes* appears in the column. If vox is not supported on the port, a *red No* appears in the column.

To enable vox on the port, highlight the port or ports you want to enable, and then click **Enable Vox**.

**NOTE:** You can also enable vox from the Keypanel/Port Configuration Window. For more information, see “Vox Page” on page 98.

### Threshold Column

The **Threshold** column displays the audio level, in dB, at which vox activates on the port.

---

## Hold Time Column

The **Hold Time** column displays the time, in seconds, the port waits for the presence of audio before turning OFF.

## Audio? Column

The **Audio?** column indicates if audio is present on the port. If audio is present, a *green Yes* displays in the column. If there is not audio on the port, a *red No* appears in the column.

## Enable Vox Button

The **Enable Vox** button is used to enable vox on the selected port or ports. You can also use the Vox page in the Keypanel/Port Configuration window to enable or disable vox on a port. For more information, see “Vox Page” on page 98.

**NOTE:** You can select more than one port to enable by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Disable Vox Button

The **Disable Vox** button is used to disable vox on the selected port or ports. You can also use the Vox page in the Keypanel/Port Configuration window to enable or disable vox on a port. For more information, see “Vox Page” on page 98.

**NOTE:** You can select more than one port to disable by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Reset Threshold Button

The **Reset Threshold** button is used to return the threshold levels of the selected port or ports to the default level.

The default threshold level is *-30.0dB*.

**NOTE:** You can select more than one port to reset by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Reset Hold Time Button

The **Reset Hold Time** button is used to return the hold time for the selected port or ports to the default time.

The default hold time is *0.5 seconds*.

**NOTE:** You can select more than one port to reset by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Select All Button

The **Select All** button highlights all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button


The **Invert Selections** button reverses the selections in the current view. For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


---

## Crosspoint Gains Window

The **Crosspoint Gains** window, shown in Figure 179, is used to configure individual gain levels for crosspoints within the intercom system.

**NAVIGATION:** From the menu bar, select *System/Gains/Crosspoint*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

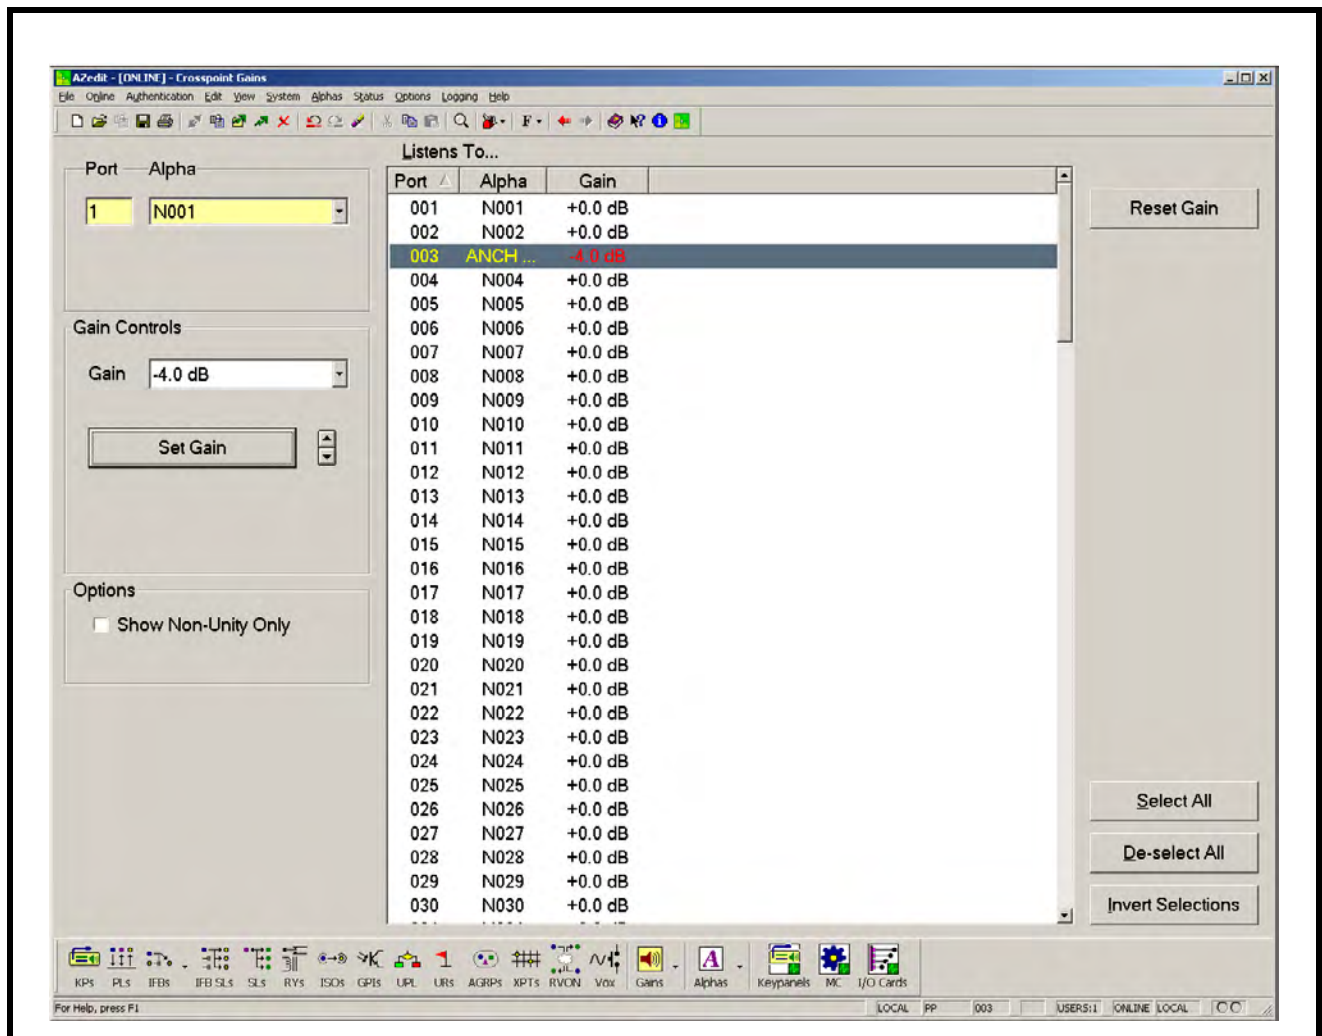

**FIGURE 179.** Crosspoint Gain Window

---

## Port Field

The **Port** field indicates the current port number you are viewing. Once this field is populated, the Alpha drop down menu displays the corresponding alpha for the port.

## Alpha Drop Down Menu

The **Alpha** drop down menu is used to select the alpha of the port you want to view. Once you have selected the alpha, the corresponding port number appears in the Port field.

## Gain Controls Group Box

### Gain Drop Down Menu

The **Gain** drop down menu is used to select the gain level, in dB, the current port hears the selected (highlighted) port (Listens To... columns). Once you have set the gain level, click **Set Gain**.

Gain level selections range from: *+6.0dB to -72.2dB*, and *Mute*.

**NOTE:** Use the Fine Tune Arrow buttons to increase or decrease the gain incrementally.

### Set Gain Button

The **Set Gain** button is used to set the gain of the selected port to the level selected from the Gain drop down menu.

**CAUTION:** Do not use the Set Gain button when using the up and down arrows, because the changes you make with the arrows are not reflected in the Gain drop down menu.

### Gain Increase/Decrease Arrows

The **Gain Increase/Decrease** arrows are used to fine tune the gain level, in increments, of the selected ports. The gain changes are only seen in the Gain column in the Listens To... group box.

## Options Group Box

### Show Non-Unity Only Check Box

The **Show Non-Unity Only** check box is used to show only those ports with non-unity gain levels. The default level of *+0.0dB* is also called the unity gain level. Normally, the list in the center of the screen shows the gains for all intercom ports. If you select the Show Non-Unity Only check box, only those intercom ports that are not set at the default level are shown.

## Port Column

The **Port** column displays all the ports in the intercom system.

## Alpha Column

The **Alpha** column displays the corresponding alpha to its port.

## Gain Column

The **Gain** column displays the gain level for each port.

---

## Reset Gain Button

The **Reset Gain** button is used to reset the gain to the unity level for the selected port or ports.

The unity level is *0.0dB*.

**NOTE:** You can select more than one port to reset by performing one of the following:

- To select random ports, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most port in the block**. All the ports in between the top and bottom port are selected.

## Select All Button

The **Select All** button highlights all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view.


For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.


---

## Party Line Gains Window

The **Party Line Gains** window, shown in Figure 180, is used to set the gain level, in dB, for ports listening to party lines.

**NAVIGATION:** From the menu bar, select *System/Gains/Party Line*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

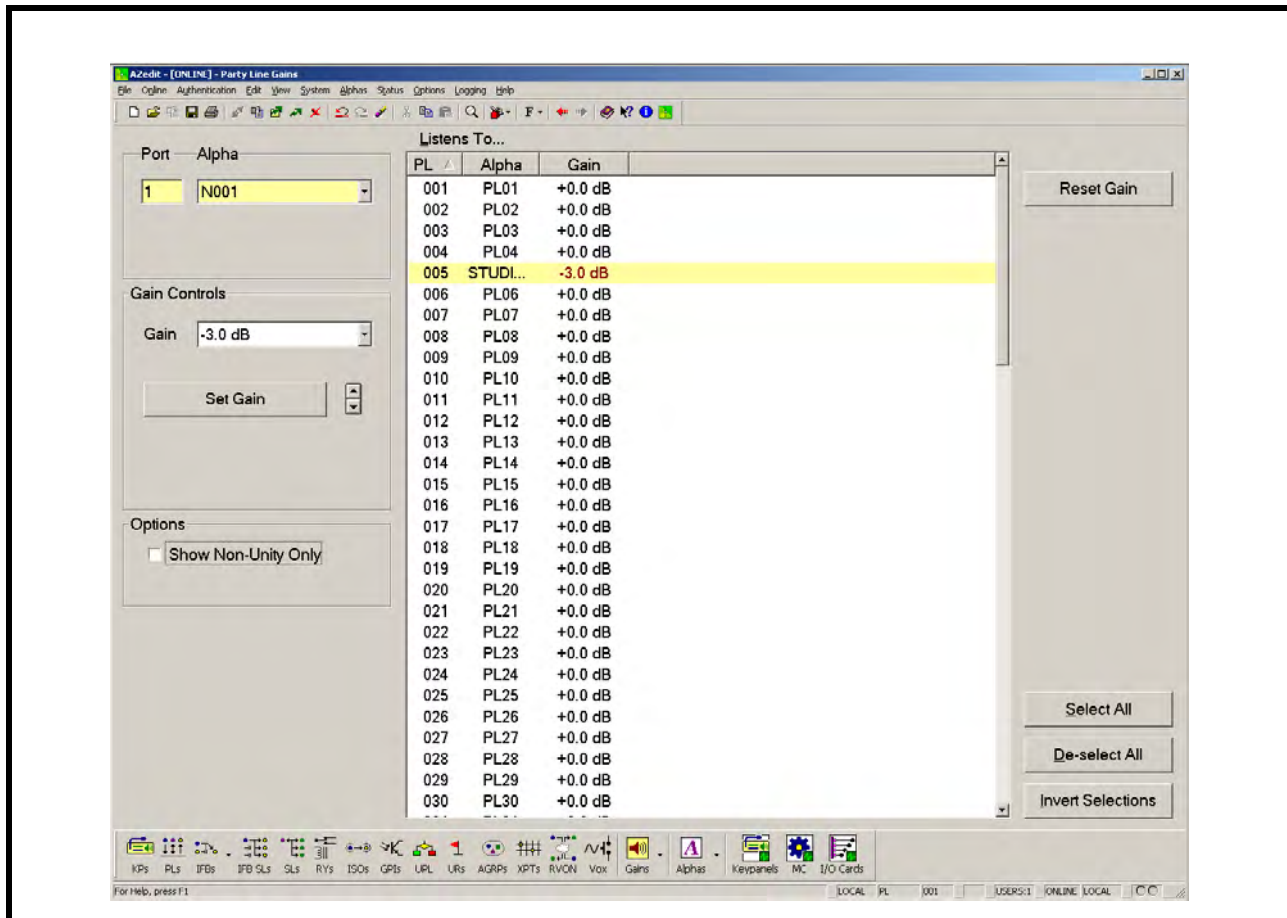

**FIGURE 180.** Party Line Gains Window

### Port Field

The **Port** field indicates the current port number you are viewing. Once this field is populated, the Alpha drop down menu displays the corresponding alpha for the port.

### Alpha Drop Down Menu

The **Alpha** drop down menu is used to select the alpha of the port you want to view. Once you have selected the alpha, the corresponding port number appears in the Port field.

---

## Gain Controls Group Box

### Gain Drop Down Menu

The **Gain** drop down menu is used to select the gain level, in dB, the current port hears the selected (highlighted) party line (Listens To... columns). Once you have set the gain level, click **Set Gain**.

Gain level selections range from: *+6.0dB to -72.2dB*, and *Mute*.

**NOTE:** Use the Fine Tune Arrow buttons to increase or decrease the gain incrementally.

### Set Gain Button

The **Set Gain** button is used to set the gain of the selected party line to the level selected from the Gain drop down menu.

**IMPORTANT:** Do not use the Set Gain button when using the up and down arrows, because the changes you make with the arrows are not reflected in the Gain drop down menu.

### Gain Increase/Decrease Arrows

The **Gain Increase/Decrease** arrows are used to fine tune the gain level in increments of the selected PLs. The gain changes are only seen in the Gain column in the *Listens To...* group box.

---

## Options Group Box

### Show Non-Unity Only Check Box

The **Show Non-Unity Only** check box is used to show only those party lines with non-unity gain levels. The default level of *+0.0dB* is also called the unity gain level. Normally, the list in the center of the screen shows the gains for all party lines. If you select the Show Non-Unity Only check box, only those party lines that are not set at the default level are shown.

### PL Column

The **PL** column displays all the party lines in the intercom system.

### Alpha Column

The **Alpha** column displays the corresponding alpha to the party line.

### Gain Column

The **Gain** column displays the gain level for each party line.

### Reset Gain Button

The **Reset Gain** button is used to reset the gain to the unity level for the selected party line.

The unity level is *0.0dB*.

**NOTE:** You can select more than one party line to reset by performing one of the following:

- To select random party lines, press and hold the **Ctrl** key and click the **party lines** you want to select.
- To select a block of party lines, click the **top-most party line in the block**; press and hold the **Ctrl + Shift**; press the **bottom-most party line in the block**. All the party lines in between the top and bottom are selected.

---

### **Select All Button**

The **Select All** button highlights all of the items from the Available or Selected list.

### **De-Select All Button**

The **De-select All** button de-selects any selected items from the Available or Selected list.

### **Invert Selections Button**

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.




---


## Input/Output Gains Window

The **Input/Output Gains** window, shown in “Input/Output Gains Window” on page 181, is used to configure the input and output gains for selected ports in your intercom system.

**NOTE:** Do not make an adjustment here when it would be better to adjust a crosspoint gain (see “Crosspoint Gains Window” on page 175). Usually you adjust an analog input or output gain when you need to interface an intercom port to an external device that operates at a different audio level than the intercom system. In this case, the adjustment corrects the level between that port and all other ports. You should use crosspoint gain when you want to adjust the level between two specific intercom ports.

**NAVIGATION:** From the menu bar, select *System/Gains/Input / Output*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

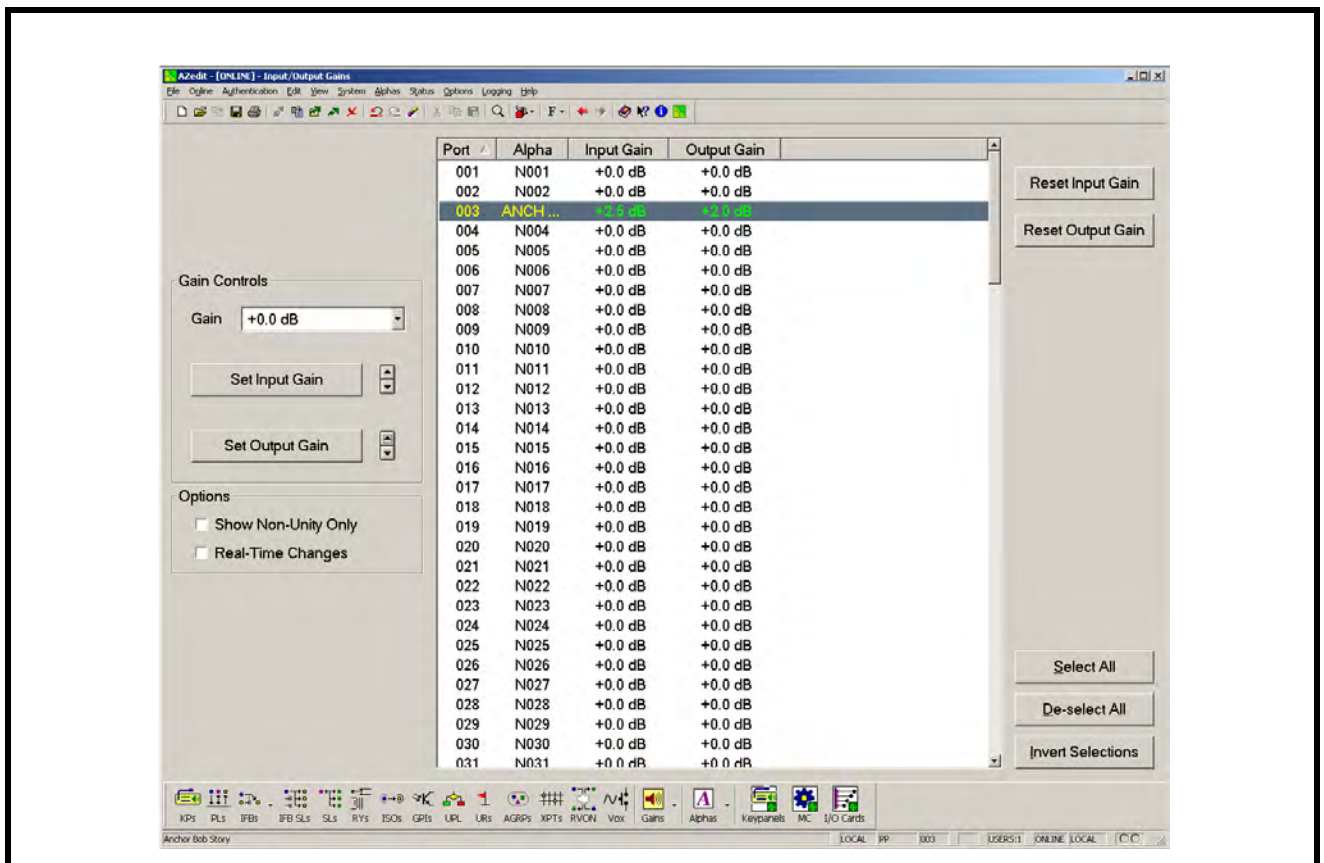

**FIGURE 181.** Input/Output Gains Window

---

## Gain Controls

### Gain Drop Down Menu

The **Gain** drop down menu is used to select the gain level, in dB, for the highlighted port (Listens To... columns). Once you have set the gain level, click either **Set Input Gain** or **Set Output Gain**.

Gain level selections range from: *+20.0dB* to *-20.0dB*.

**NOTE:** Use the Gain Increase/Decrease arrows to increase or decrease the gain incrementally.

---

## Set Input Gain Button

The **Set Input Gain** button is used to set the input gain (the level at which others hear you) of the selected port to the level selected from the Gain drop down menu.

**IMPORTANT:** Do not use the Set Gain buttons when using the up and down arrows, because the changes you make with the arrows are not reflected in the Gain drop down menu.

## Gain Increase/Decrease Arrows

The **Gain Increase/Decrease** arrows are used to fine tune the input port gain level in increments. The gain changes are only seen in the Input Gain column.

## Set Output Gain Button

The **Set Output Gain** button is used to set the output gain (the level at which you hear others) of the selected port to the level selected from the Gain drop down menu.

**IMPORTANT:** Do not use the Set Gain buttons when using the up and down arrows, because the changes you make with the arrows are not reflected in the Gain drop down menu.

## Gain Increase/Decrease Arrows

The **Gain Increase/Decrease** arrows are used to fine tune the output port gain level in increments. The gain changes are only seen in the Output Gain column.

## Options Group Box

### Show Non-Unity Only Check Box

The **Show Non-Unity Only** check box is used to show only those party lines with non-unity gain levels. The default level of  $+0.0dB$  is also called the unity gain level. Normally, the list in the center of the screen shows the gains for all party lines. If you select the Show Non-Unity Only check box, only those party lines that are not set at the default level are shown.

### Real-Time Changes Check Box

The **Real-Time Changes** check box is used to make changes to the Input and Output Gain levels in real time. When selected and in ONLINE mode, these changes are automatically sent to the intercom system as you make the adjustments.

### Port Column

The **Port** column displays a list of available ports to select.

### Alpha Column

The **Alpha** column displays the corresponding alphas to the ports.

### Input Gain Column

The **Input Gain** column displays the input gain level for each port.

### Output Gain Column

The **Output Gain** column displays the output gain level for each port.

---

### **Reset Input Gain Button**

The **Reset Input Gain** button is used to reset the Input Gain level to unity (*0.0dB*).

### **Reset Output Gain Button**

The **Reset Output Gain** button is used to reset the output gain level to 0.0dB (unity).

### **Select All Button**

The **Select All** button highlights all of the items from the Available or Selected list.

### **De-Select All Button**

The **De-select All** button de-selects any selected items from the Available or Selected list.

### **Invert Selections Button**

The **Invert Selections** button reverses the selections in the current view.

For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.

---

## ***Alpha Windows***

---

---

## Port Alphas Window

The **Port Alpha** window, shown in Figure 182, displays the ports and their corresponding input alphas, output alphas, aliases, and descriptions. Alphas are descriptive names assigned to ports to make them more recognizable to keypanel users than the default alphas.

In earlier versions, pre-version 2.06.00, a port had one alpha to represent both the input audio and the output audio of the port. For keypanels where both the input and output audio refer to the same device, there is no problem. However, in other applications where the input and output paths of a port are used for different purposes, such as IFB program inputs or listen sources on the input side and IFB output on the output side, one port alphas do not work. In AZedit version 2.06.00, separate input alphas and output alphas were introduced. By default, input alphas mirror the output alpha unless you specifically change the input alpha.

To enable input alphas you must select the Use Input Alphas check box in the Intercom Configuration Window. For more information, see “Use Input Alphas Check Box” on page 54.

**IMPORTANT:** When you select the Use Input Alphas from the Intercom Configuration window, the intercom system reconfigures itself and performs a First Birthday and remembers the system size.

When entering key assignments with input alphas enabled, you must enter the input alphas in the listen key assignments and output alphas in the talk key assignments.

To **use the input alpha feature**, you must have the following requirements:

- MC V9.17.0  
or
- DBX V1.9.0 with PC PV.10.9.0  
or
- Zeus V3.2.0


Aliases are used only when your intercom system is trunked. Aliases are used by AZedit administrators to identify remote destinations from local destinations that may share the same alpha in different intercom systems.

**NOTE:** Output alphas and input alphas only appear on the Port Alpha screen if enabled. All other Alpha screens show only alphas and aliases. To display output alphas, input alphas and aliases, you must set two (2) preferences and a configuration option. Aliases only appear in a trunk-enabled system. Aliases are names for ports seen by remote intercoms.

Use the Edit Alpha/Description window to create or modify the Port Alphas, Aliases, and Descriptions.

To access the Edit Alpha/Description window, double click the **Port** you wish to create/modify. The Edit Alpha/Description window appears. For more information, see “Edit Port Alpha/Description Window” on page 187.

**NAVIGATION:** From the menu bar, select *Alphas/Port*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

Port	Output (4)	Output (6)	Output (8)	Input (4)	Input (6)	Input (8)	Alias (4)	Alias (6)	Alias (8)	Description
001	N001	N001	N001	N001	N001	N001	N001	N001	N001	
002	N002	N002	N002	N002	N002	N002	N002	N002	N002	
003	N003	N003	N003	N003	N003	N003	N003	N003	N003	
004	N004	N004	N004	N004	N004	N004	N004	N004	N004	
005	N005	N005	N005	N005	N005	N005	N005	N005	N005	
006	N006	N006	N006	N006	N006	N006	N006	N006	N006	
007	N007	N007	N007	N007	N007	N007	N007	N007	N007	
008	N008	N008	N008	N008	N008	N008	N008	N008	N008	
009	N009	N009	N009	N009	N009	N009	N009	N009	N009	
010	N010	N010	N010	N010	N010	N010	N010	N010	N010	
011	N011	N011	N011	N011	N011	N011	N011	N011	N011	
012	N012	N012	N012	N012	N012	N012	N012	N012	N012	
013	N013	N013	N013	N013	N013	N013	N013	N013	N013	
014	N014	N014	N014	N014	N014	N014	N014	N014	N014	
015	N015	N015	N015	N015	N015	N015	N015	N015	N015	
016	N016	N016	N016	N016	N016	N016	N016	N016	N016	
017	N017	N017	N017	N017	N017	N017	N017	N017	N017	
018	N018	N018	N018	N018	N018	N018	N018	N018	N018	
019	N019	N019	N019	N019	N019	N019	N019	N019	N019	
020	N020	N020	N020	N020	N020	N020	N020	N020	N020	
021	N021	N021	N021	N021	N021	N021	N021	N021	N021	
022	N022	N022	N022	N022	N022	N022	N022	N022	N022	
023	N023	N023	N023	N023	N023	N023	N023	N023	N023	
024	N024	N024	N024	N024	N024	N024	N024	N024	N024	
025	N025	N025	N025	N025	N025	N025	N025	N025	N025	
026	N026	N026	N026	N026	N026	N026	N026	N026	N026	
027	N027	N027	N027	N027	N027	N027	N027	N027	N027	
028	N028	N028	N028	N028	N028	N028	N028	N028	N028	
029	N029	N029	N029	N029	N029	N029	N029	N029	N029	
030	N030	N030	N030	N030	N030	N030	N030	N030	N030	

FIGURE 182. Port Alpha Window

**NOTE:** If you load an existing 4-character alpha configuration file into the intercom system, and then set the alpha size to either six or eight, the larger alpha sizes display the default alpha (for example, N005), until they are edited.

## Port Column

The **Port** column displays a list of port numbers for the intercom system.

This number *cannot be modified*.

## Output Alpha (4) Column

The **Output Alpha (4)** column displays the 4-character output alpha of the port.

**NOTE:** When you enter a 4-character output alpha, and are viewing all sizes on Alpha views, the 4-character output alpha populates the 6-character field and the 8-character field.

## Output Alpha (6) Column

The **Output Alpha (6)** column displays the 6-character output alpha of the port.

## Output Alpha (8) Column

The **Output Alpha (8)** column displays the 8-character output alpha of the port.

---

### **Input Alpha (4) Column**

The **Input Alpha (4)** column displays the 4-character input alpha or the port.

**NOTE:** When you enter a 4-character input alpha, and are viewing all sizes on Alpha views, the 4-character input alpha populates the 6-character field and the 8-character field.

### **Input Alpha (6) Column**

The **Input Alpha (6)** column displays the 6-character input alpha of the port

### **Input Alpha (8) Column**

The **Input Alpha (8)** column displays the 8-character input alpha of the port.

### **Alias (4) Column**

The **Alias (4)** column displays the 4-character alias of the port.

**NOTE:** When you enter a 4-character alias, and are viewing all sizes on Alpha views, the 4-character alias populates the 6-character field and the 8-character field.

### **Alias (6) Column**

The **Alias (6)** column displays the 6-character alias of the port.

### **Alias (8) Column**

The **Alias (8)** column displays the 8-character alias of the port.


### **Description Column**

The **Description** column displays a more descriptive definition of the port.

---

## Edit Port Alpha/Description Window

The **Edit Port Alpha/Description** window, shown in Figure 183, is used to create or modify input alphas, output alphas, aliases and descriptions for selected ports.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

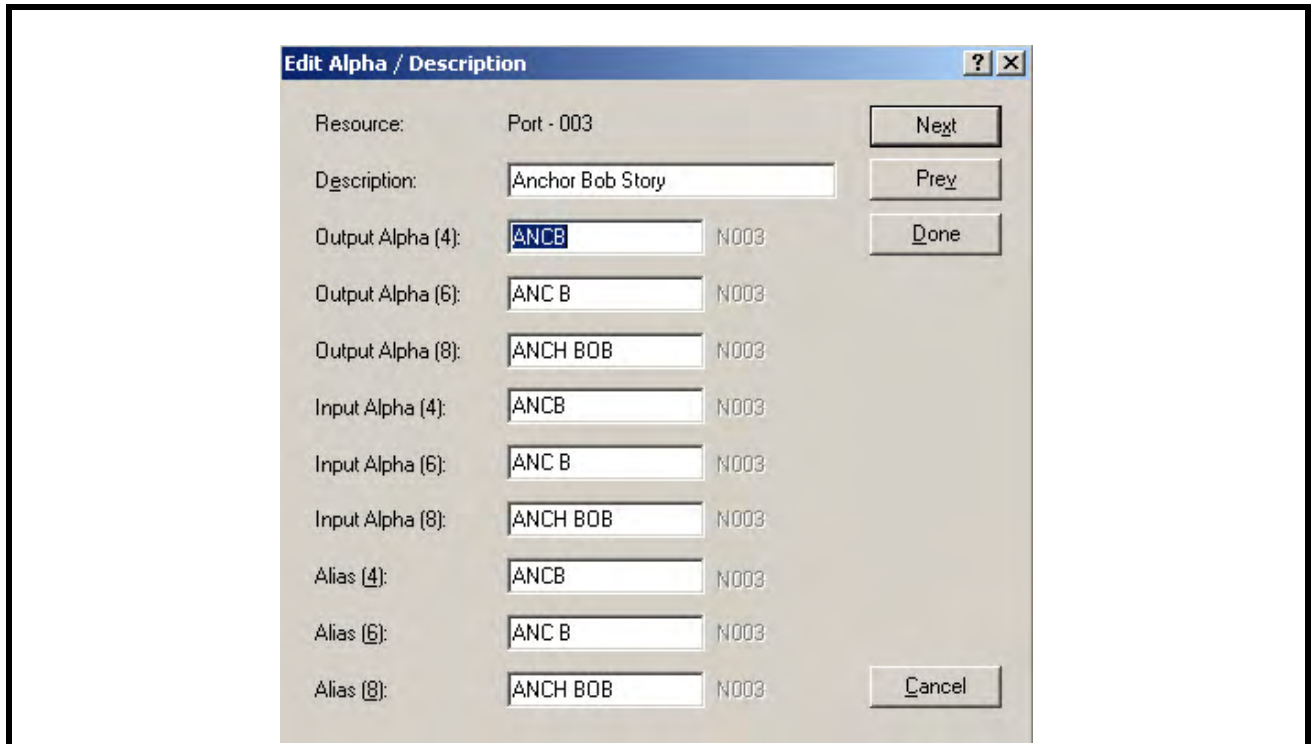


FIGURE 183. Edit Port Alpha / Description Window

---

### Resource Field

The **Resource** field displays the selected resource.

### Description Field

The **Description** field is used to enter a short, user-recognized definition of the resource.

There is a *24-character limit* on the description.

**NOTE:** Output alphas and input alphas only appear if they are enabled. If they are not enabled, the screen shows only alphas and aliases.

### Output Alpha (4) Field

The **Alpha (4)** or **Output Alpha (4)** field is used to change the default alphas (N001, N002, etc.) to a more meaningful name for your users (for example, CAM1, CAM2, etc.).

The alpha (4) field can only be *4 characters*.

---

## Output Alpha (6) Field

The **Alpha (6)** or **Output Alpha (6)** field is used to change the default alphas (N001, N002, etc.) to a more meaningful name for your users (for example, CAM1, CAM2, etc.).

The alpha (6) field may only have *up to 6 characters*.

## Output Alpha (8) Field

The **Alpha (8)** or **Output (8)** field is used to change the default alphas (N001, N002, etc) to a more meaningful name for your users (for example, CAM1, CAM2, etc.).

The alpha (8) field may only have *up to 8 characters*.

## Input Alpha (4) Field

The **Input Alpha (4)** field is used to change the default alphas (N001, N002, etc) to a more meaningful name for your users (for example, CAM1, CAM2, etc.).

The alpha (4) field may only have *up to 4 characters*.

## Input Alpha (6) Field

The **Input Alpha (6)** field is used to change the default alphas (N001, N002, etc) to a more meaningful name for your users (for example, CAM1, CAM2, etc.). The alpha (6) field may only have *up to 6 characters*.

## Input Alpha (8) Field

The **Input Alpha (8)** field is used to change the default alphas (N001, N002, etc) to a more meaningful name for your users (for example, CAM1, CAM2, etc.). The alpha (8) field may only have *up to 8 characters*.

## Alias (4) Field

The **Alias (4)** field is used to enter a *4-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.

## Alias (6)Field

The **Alias (6)** field is used to enter a *6-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.

## Alias (8) Field

The **Alias (8)** field is used to enter a *8-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.



---

## Alpha Windows

The **Alpha** windows, shown in Figure 184, display the ports and their corresponding alphas, aliases, and descriptions. Alphas are descriptive names assigned to ports to make them more recognizable to keypanel users than the default alphas. Aliases are descriptive names given to alphas that are named the same but reside in different intercom systems. Administrators use aliases to identify remote destinations from local destinations that may share the same alpha in different intercom systems. Aliases are only used when your intercom system is trunked.

The following windows all have the same columns (with the exception of the assignment group window which are not available to remote intercoms and do not have the alias column). For more information, see “Assignment Group Window” on page 139.

*Party Lines*

*IFBs*

*IFB SLs*

*Special Lists*

*GPI Output*


*ISOs*

*UPL Resources*

*Assignment Groups (does not have Alias columns)*

Use the Edit Alpha /Description window to create or modify the port alphas, aliases, and descriptions.

To access the Edit Alpha/Description window, double-click the **Resource** you wish to create/modify. The Edit Alpha/Description window appears. For more information on the Edit Alpha/Description window, see “Edit Alpha/Description Window” on page 191.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
PL	PL01	PL01	PL01	PL01	PL01	PL01	
001	PL02	PL02	PL02	PL02	PL02	PL02	
002	PL03	PL03	PL03	PL03	PL03	PL03	
003	PL04	PL04	PL04	PL04	PL04	PL04	
004	PL05	PL05	PL05	PL05	PL05	PL05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
RY	RY01	RY01	RY01	RY01	RY01	RY01	
001	RY02	RY02	RY02	RY02	RY02	RY02	
002	RY03	RY03	RY03	RY03	RY03	RY03	
003	RY04	RY04	RY04	RY04	RY04	RY04	
004	RY05	RY05	RY05	RY05	RY05	RY05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
IFB	IF01	IF01	IF01	IF01	IF01	IF01	
001	IF02	IF02	IF02	IF02	IF02	IF02	
002	IF03	IF03	IF03	IF03	IF03	IF03	
003	IF04	IF04	IF04	IF04	IF04	IF04	
004	IF05	IF05	IF05	IF05	IF05	IF05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
ISO	IS01	IS01	IS01	IS01	IS01	IS01	
001	IS02	IS02	IS02	IS02	IS02	IS02	
002	IS03	IS03	IS03	IS03	IS03	IS03	
003	IS04	IS04	IS04	IS04	IS04	IS04	
004	IS05	IS05	IS05	IS05	IS05	IS05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
IFB SL	IL01	IL01	IL01	IL01	IL01	IL01	
001	IL02	IL02	IL02	IL02	IL02	IL02	
002	IL03	IL03	IL03	IL03	IL03	IL03	
003	IL04	IL04	IL04	IL04	IL04	IL04	
004	IL05	IL05	IL05	IL05	IL05	IL05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
UR	U001	U001	U001	U001	U001	U001	
001	U002	U002	U002	U002	U002	U002	
002	U003	U003	U003	U003	U003	U003	
003	U004	U004	U004	U004	U004	U004	
004	U005	U005	U005	U005	U005	U005	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
SL	SL01	SL01	SL01	SL01	SL01	SL01	
001	SL02	SL02	SL02	SL02	SL02	SL02	
002	SL03	SL03	SL03	SL03	SL03	SL03	
003	SL04	SL04	SL04	SL04	SL04	SL04	
004	SL05	SL05	SL05	SL05	SL05	SL05	
005							

Resource	Alpha (4)	Alpha (6)	Alpha (8)	Alias (4)	Alias (6)	Alias (8)	Description
AGRP	AG01	AG01	AG01				
001	AG02	AG02	AG02				
002	AG03	AG03	AG03				
003	AG04	AG04	AG04				
004	AG05	AG05	AG05				
005							

FIGURE 184. Alpha Windows in AZedit

**NOTE:** If you load an existing 4-character alpha configuration file into the Intercom system, and then set the alpha size to either six or eight, the larger alpha sizes displays the default alpha (for example, N005), until they are edited.

## Resource Column

**NOTE:** Resource refers to the different resource types (PL, IFB, IFB SL, SL, RY, ISO, UR, and AGRP) for each window. The **Resource** column displays a list of resource numbers for the intercom system. This number cannot be modified.

## Alpha (4) Column

The **Alpha (4)** column displays the 4-character alpha of the port.

**NOTE:** When you enter a 4-character alpha, and are viewing all sizes on alpha views, the 4-character output alpha populates the 6-character field and the 8-character field.

## Alpha (6) Column

The **Alpha (6)** column displays the 6-character alpha of the resource.

## Alpha (8) Column

The **Alpha (8)** column displays the 8-character alpha of the resource.

---

### Alias (4) Column

The **Alias (4)** column displays the *4-character* alias of the resource.

**NOTE:** When you enter a 4-character alias, and are viewing all sizes on Alpha views, the 4-character alias populates the 6-character field and the 8-character field.

### Alias (6) Column

The **Alias (6)** column displays the *6-character* alias of the resource.

### Alias (8) Column

The **Alias (8)** column displays the *8-character* alias of the resource.

### Description Column

The **Description** column displays a more descriptive definition of the resource.


---

## *Edit Alpha/Description Window*

The **Edit Alpha/Description** window, shown in Figure 185, is used to create or modify the alpha, alias, and/or description of Party Lines, IFBs, IFB Special Lists, Special Lists, GPI Outputs, ISOs, UPL Resources, and Assignment Groups.

**NOTE:** Remember, assignment groups are not available to remote intercoms and do not have the alias column. For more information, see “Assignment Group Window” on page 139.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 📶

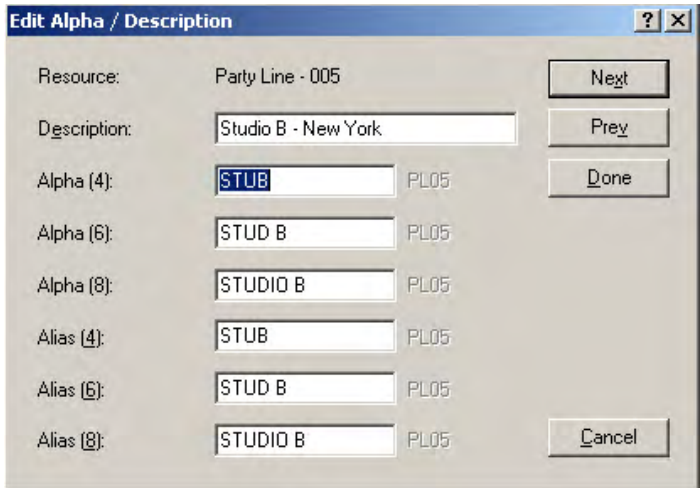

**FIGURE 185.** Edit Alpha/Description Window

---

### Resource Field

The **Resource** field displays the selected resource. This field cannot be modified.

---

## Description Field

The **Description** field is used to enter a short, user-recognized definition of the resource. There is a *24-character* limit on the description.

## Alpha (4) Field

The **Alpha (4)** field is used to change the default alphas (N001, N002, etc.) to a more meaningful name for your users (for example, CAM1, CAM2, etc.). The Alpha (4) field can only be *4 characters long*.

## Alpha (6) Field

The **Alpha (6)** field is used to change the default alphas (N001, N002, etc.) to a more meaningful name for your users (for example, CAM1, CAM2, etc.). The Alpha (6) field may be *up to 6 characters*.

## Alpha (8) Field

The **Alpha (8)** field is used to change the default alphas (N001, N002, etc.) to a more meaningful name for your users (for example, CAM1, CAM2, etc.). The Alpha (8) field may be *up to 8 characters*.

## Alias (4) Field

The **Alias (4)** field is used to enter a *4-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.

## Alias (6)Field

The **Alias (6)** field is used to enter a *6-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.

## Alias (8) Field

The **Alias (8)** field is used to enter a *8-character* alias. Alias names are used to identify destinations in a trunked intercom system to AZedit administrators and keypanel operators in other intercom systems.

---


## GPI Input and DIM Description Windows


The **GPI Input** and **DIM Description** windows, shown in Figure 186, displays the GPI Input resources and the DIM resources descriptions.

Use the Edit Alpha/Description window to create or modify the Descriptions for GPI Inputs and DIMs.

To access the Edit Alpha/Description window, double-click the **resource** you wish to create/modify. The Edit Alpha/Description window appears. For more information, see “Edit GPI Input and Dim Descriptions Window” on page 194.

**NAVIGATION:** From the menu bar, select *Alphas/GPI Input* or *Dim Table*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

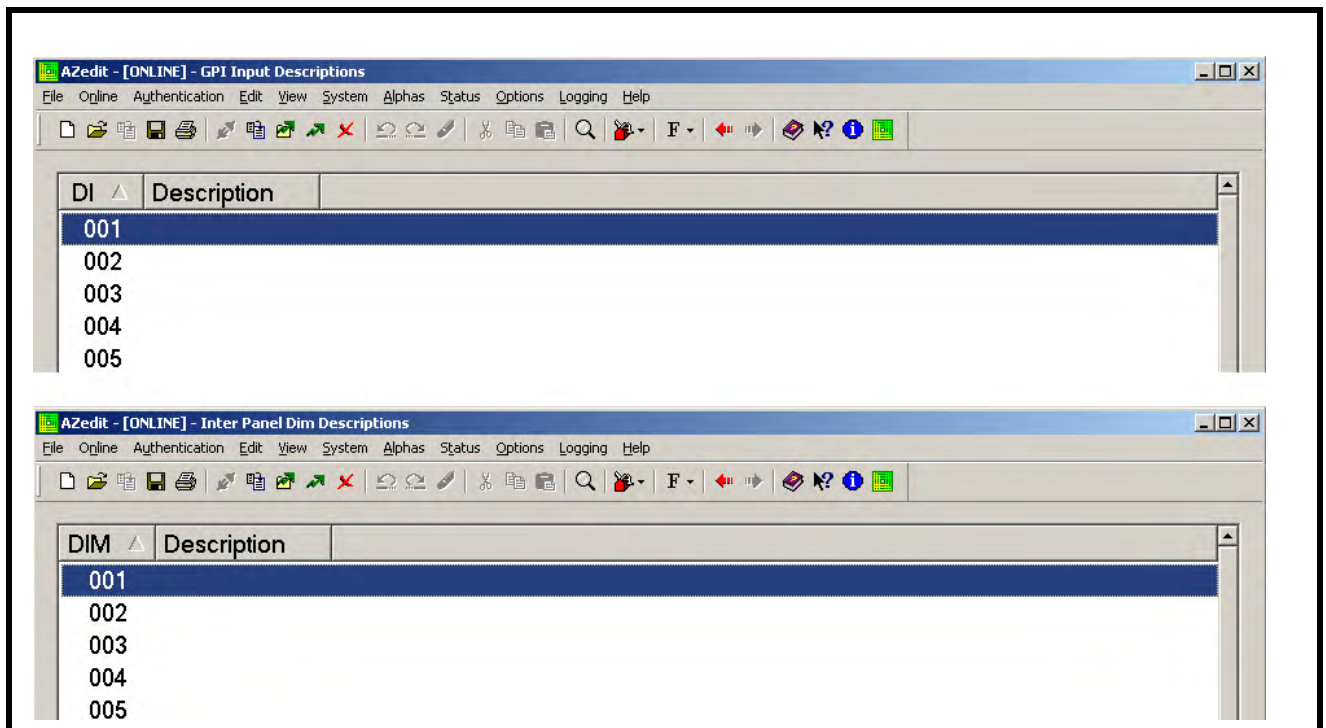

**FIGURE 186.** GPI Input Descriptions and DIM Descriptions

---

### Resource Column

**NOTE:** Resource refers to the different resource types (PL, IFB, IFB SL, SL, RY, ISO, UR, and AGRP) for each window. The **Resource** column displays a list of resource numbers for the intercom system. This number cannot be modified.


### Description Column


The **Description** column displays a more descriptive definition of the resource.

---

## *Edit GPI Input and Dim Descriptions Window*

The **Edit GPI Input and Dim Descriptions** window, shown in Figure 187, is used to create or modify the GPI Input and DIM table resource descriptions.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

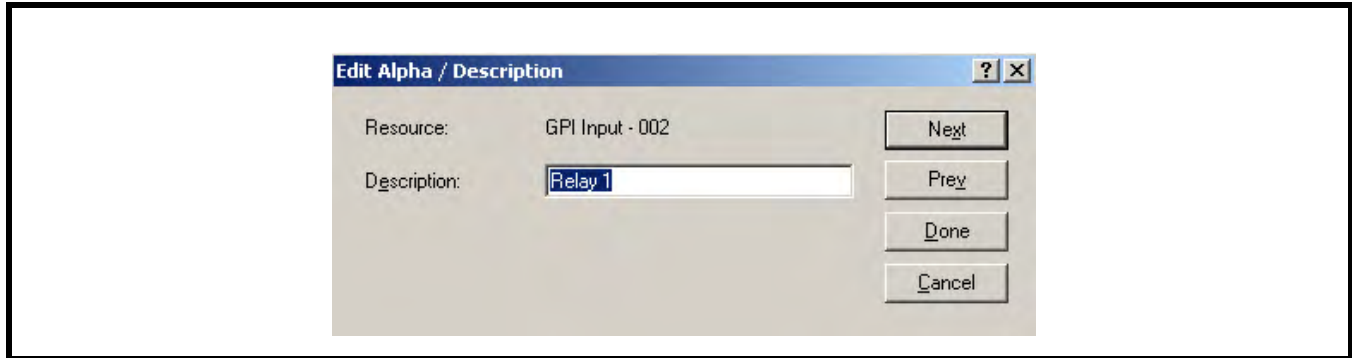

**FIGURE 187.** Edit GPI Input and Dim Descriptions Window

---

### **Resource Field**

The **Resource** field displays the selected resource.

This field *cannot be modified*.

### **Description Field**

The **Description** field is used to enter a short, user-recognized definition of the resource.

There is a *24-character limit* on the description.

---


## I/O Card Description Window


The **I/O Card Description** window, shown in Figure 188, displays the I/O card slot position and description.

Use the Edit Alpha/Description window to create or modify the I/O card description.

To access the Edit Alpha/Description window, double-click the **resource** you wish to create/modify. The Edit Alpha/Description window appears. For more information, see “Edit I/O Card Description Window” on page 196.

**NAVIGATION:** From the menu bar, select *Alphas/I/O Cards*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

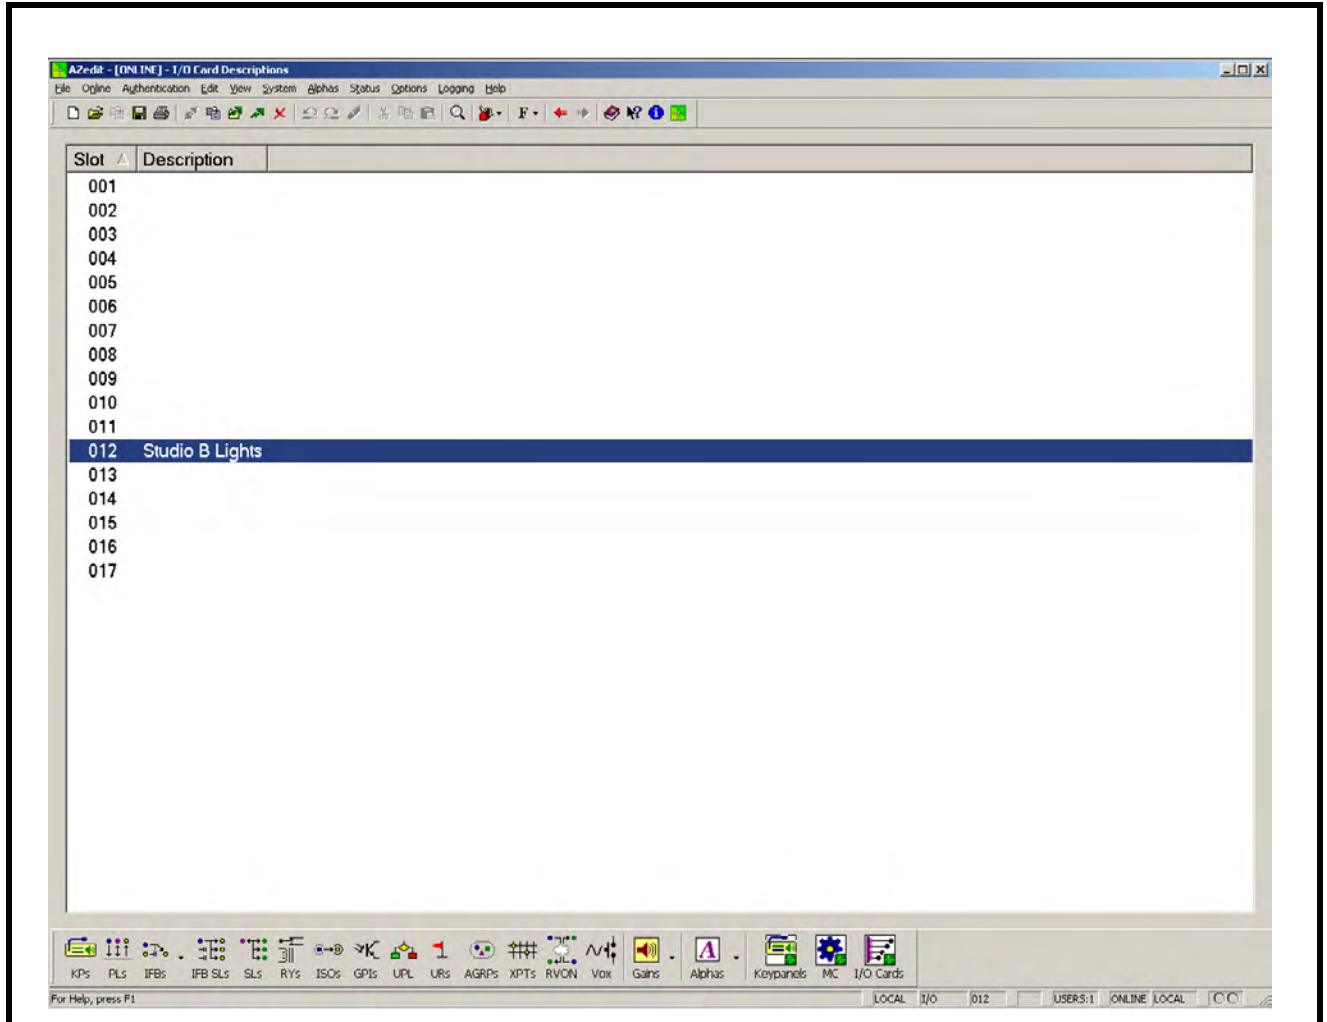

**FIGURE 188.** I/O Card Descriptions Window

---

### Slot Column

The **Slot** column displays the slot position of the I/O Card (slots 1-17).

This number *cannot be modified*.

---

## Description Column


The **Description** column displays the description of the I/O Card. If a description has not been assigned, the column is blank.

---

### *Edit I/O Card Description Window*

The **Edit I/O Card Description** window, shown in Figure 189, is used to create or modify the I/O Card description.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 📶

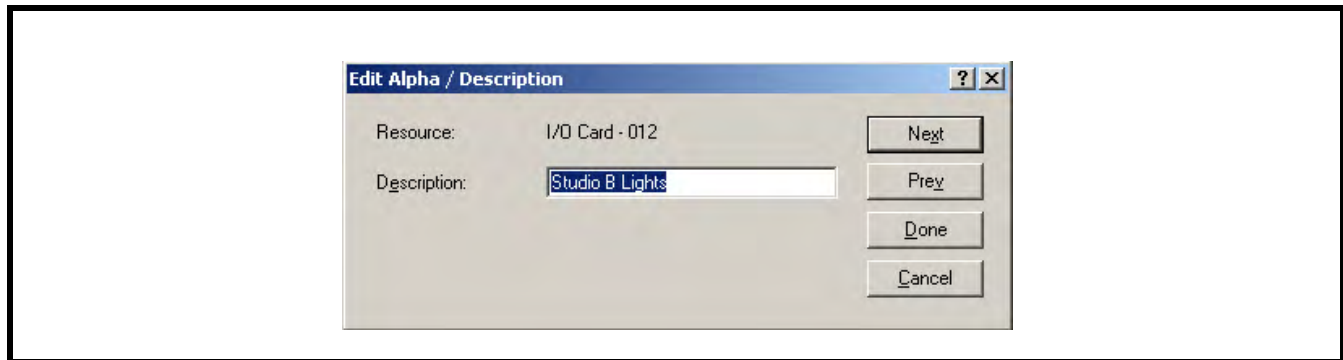

**FIGURE 189.** Edit I/O Card Description Window

---

## Resource Field

The **Resource** field displays the selected I/O Card.

This field *cannot be modified*.

## Description Field

The **Description** field is used to enter a short, user-recognized definition of the I/O Card.

There is a *24-character limit* on the description.



---


## PAP/LCP Description Window


The **PAP/LCP Description** window, shown in Figure 190, displays the PAP/LCP device number and description.

Use the Edit Alpha/Description window to create or modify the PAP/LCP description.

To access the Edit Alpha/Description window, double-click the **resource** you wish to create/modify. The Edit Alpha/Description window appears. For more information on the Edit Alpha/Description window, see “Edit PAP/LCP Description Window” on page 198.

**NAVIGATION:** From the menu bar, select *Alphas/PAP and LCP-102*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

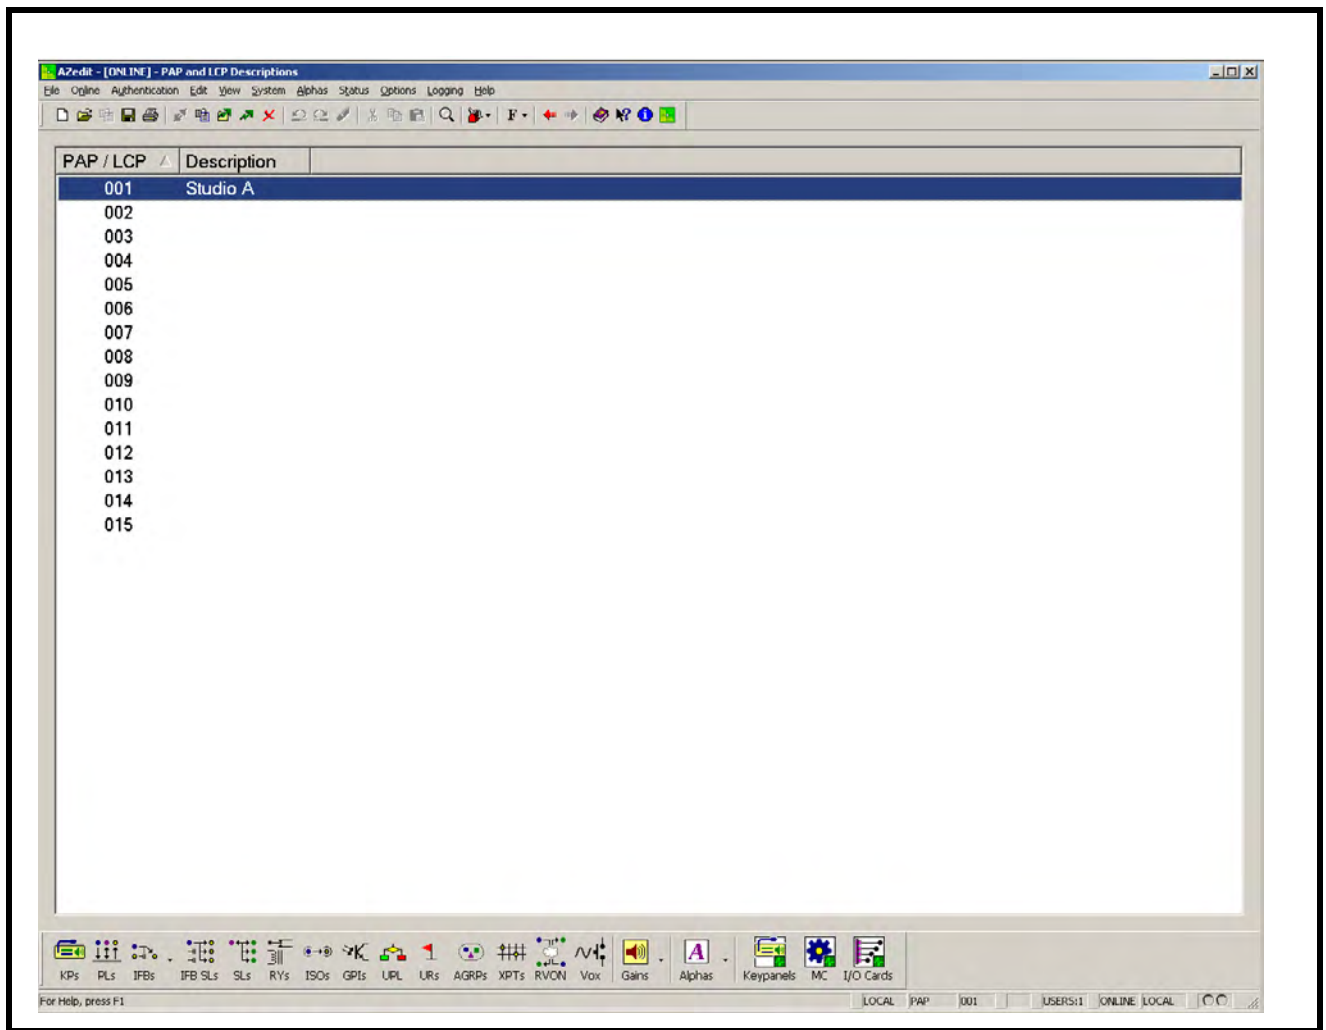

**FIGURE 190.** PAP and LCP Descriptions Window

---

### PAP/LCP Column

The **PAP/LCP** column displays PAP/LCP device (up to 15 devices).

This number *cannot be modified*.

---

## Description Column


The **Description** column displays the description of the PAP or LCP device. If a description has not been assigned, the column is blank.

---

### *Edit PAP/LCP Description Window*

The **Edit PAP/LCP Description** window, shown in Figure 191, is used to create or modify the I/O Card description.

**NOTE:** Remember to send any change you make to the intercom system using Edit|Send Changes or the Activate button.

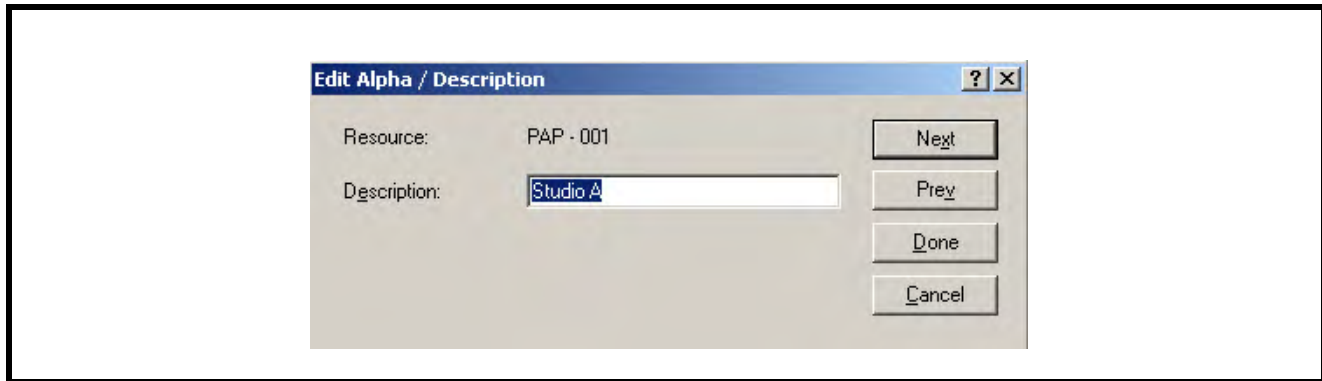

**FIGURE 191.** Edit PAP/LCP Description Window

---

## Resource Field

The **Resource** field displays the selected PAP or LCP.

This field *cannot be modified*.

## Description Field

The **Description** field is used to enter a short, user-recognized definition of the PAP or LCP.

There is a *24-character limit* on the description.

---

## ***Status Windows***

---

**Status Windows** are used to monitor different devices in the intercom system. AZedit displays status for the following windows:

*Port*

*Master Controller*

*Standby Controller*

*DBX Status Links*

*I/O Cards*

*PAP & LCP-102s*

*UIO-256*

*Trunk Master*

*Trunk Ports*

*Remote Intercoms*

*RVON Connection Status*


These windows are described in more detail on the following pages.

---

## Port Status Window

The **Port Status** window, shown in Figure 192, is used to view connection status and data communication errors between the master controller and data devices that are connected to intercom ports. Data devices include keypanels, camera delegate panels, and TIF telephone interfaces. You can also use this screen to upgrade the firmware in certain types of keypanels connected to intercom ports.

**NAVIGATION:** From the menu bar, select *Status/Port*.

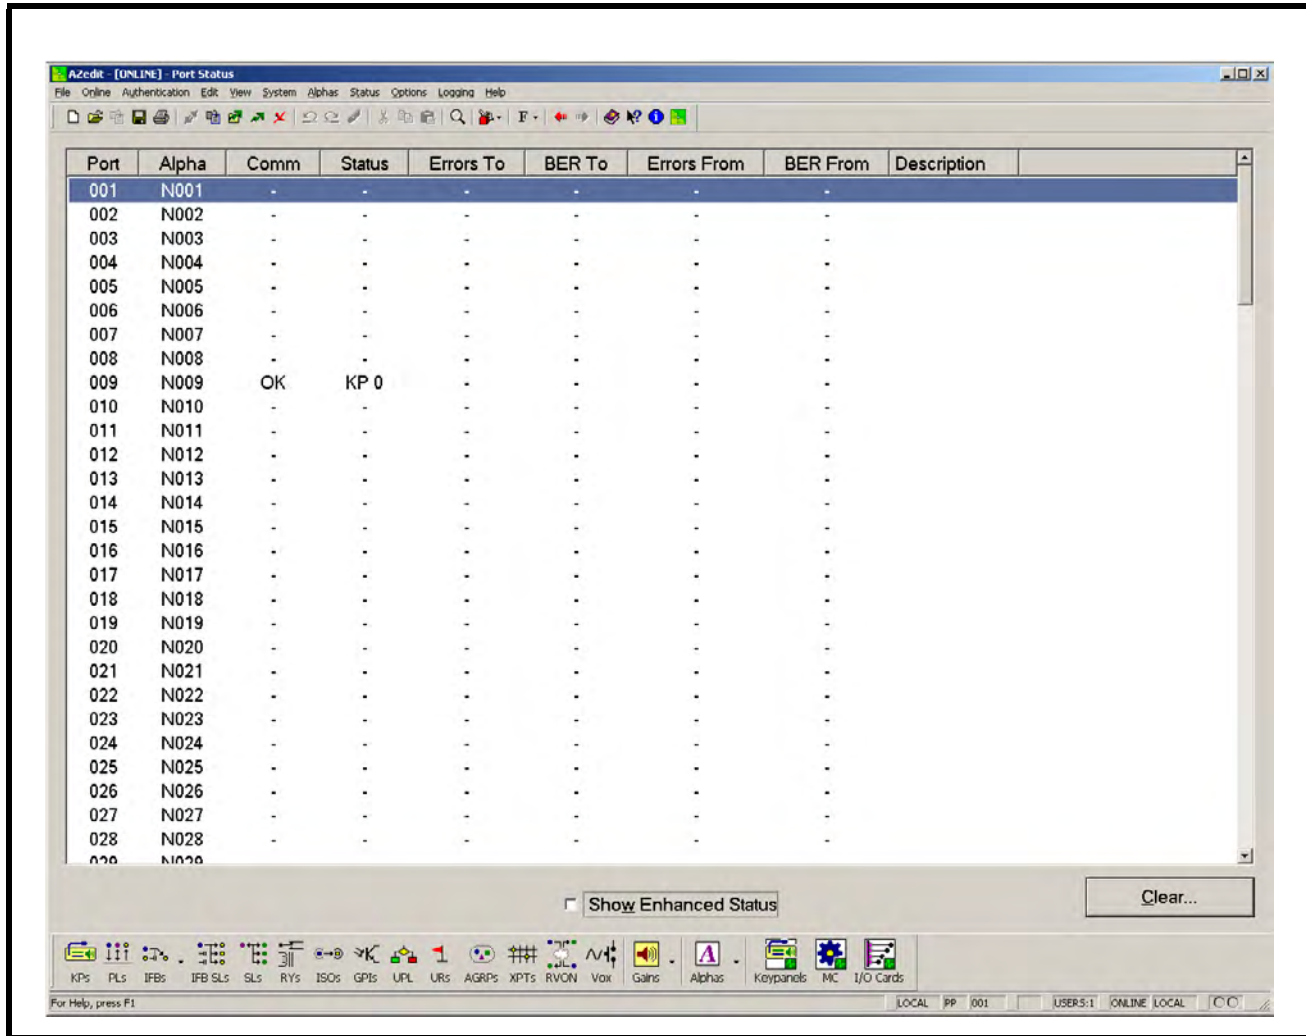

The screenshot shows the 'Azedit - [ONLINE] - Port Status' window. It features a menu bar (File, Online, Authentication, Edit, View, System, Alphas, Status, Options, Logging, Help) and a toolbar with various icons. The main area contains a table with the following columns: Port, Alpha, Comm, Status, Errors To, BER To, Errors From, BER From, and Description. The table lists 28 ports (001 to 028). Port 009 is highlighted, showing 'OK' in the Comm column and 'KP 0' in the Status column. Below the table is a 'Show Enhanced Status' checkbox and a 'Clear...' button. At the bottom, there is a row of icons for different device types (KPs, PLS, IFBs, etc.) and a status bar with text like 'LOCAL', 'JP', '001', 'USERS:1', 'ONLINE', 'LOCAL', and 'C'.

Port	Alpha	Comm	Status	Errors To	BER To	Errors From	BER From	Description
001	N001	-	-	-	-	-	-	
002	N002	-	-	-	-	-	-	
003	N003	-	-	-	-	-	-	
004	N004	-	-	-	-	-	-	
005	N005	-	-	-	-	-	-	
006	N006	-	-	-	-	-	-	
007	N007	-	-	-	-	-	-	
008	N008	-	-	-	-	-	-	
009	N009	OK	KP 0	-	-	-	-	
010	N010	-	-	-	-	-	-	
011	N011	-	-	-	-	-	-	
012	N012	-	-	-	-	-	-	
013	N013	-	-	-	-	-	-	
014	N014	-	-	-	-	-	-	
015	N015	-	-	-	-	-	-	
016	N016	-	-	-	-	-	-	
017	N017	-	-	-	-	-	-	
018	N018	-	-	-	-	-	-	
019	N019	-	-	-	-	-	-	
020	N020	-	-	-	-	-	-	
021	N021	-	-	-	-	-	-	
022	N022	-	-	-	-	-	-	
023	N023	-	-	-	-	-	-	
024	N024	-	-	-	-	-	-	
025	N025	-	-	-	-	-	-	
026	N026	-	-	-	-	-	-	
027	N027	-	-	-	-	-	-	
028	N028	-	-	-	-	-	-	

FIGURE 192. Port Status Window

### Port Column

The **Port** column displays a list of the ports in the intercom system.

### Alpha Column

The **Alpha** column displays a list alphas relative to the port it describes in the intercom system.

### Comm Column

The **Comm** column displays a list of communication statuses (*OK*, *BAD*, or *-*) of the ports.

---

## Status Column

The **Status** column displays the description of the errors for the device connected to the port.

Bad Cut: - Indicates that there was a connection with a data device, but communication has stopped.

OK KP 1-7 - This indicates the device connected to the port is a normally functioning keypanel. The numbers 1-7 indicates the keypanel DIP switch settings for switches SW1-1 through SW1-3 on the keypanel rear panel as summarized in the table below. Refer to the keypanel's user manual for information on DIP switch settings. In the case of a keypanel that does not have DIP switches on its rear panel, "KP 7" appears to indicate the keypanel is a normally functioning keypanel.

<u>Number</u>	<u>Switch Settings</u>		
	SW1-1	SW1-2	SW1-3
0	Open	Open	Open
1	Open	Closed	Open
2	Closed	Closed	Open
3	Closed	Closed	Open
4	Open	Open	Closed
5	Open	Closed	Closed
6	Closed	Closed	Closed
7	Closed	Closed	Closed

OK? - Indicates the data device connected to the port is a keypanel with an unknown or earlier version of software.

OK TIF - Indicates the data device connected to the port is a TIF Telephone Interface.

## Errors To Column

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the port.

## BER To Column

The **BER** (Burst Error Rate) column displays the number of errors sent to the port in the last 10 minutes.

## Errors From Column

The **Error To** column displays the number of errors the Master Controller logs as being sent from the port.

## BER From Column

The **BER** (Burst Error Rate) column displays the number of errors sent from the port in the last 10 minutes.


## Description Column

The **Description** column displays a short, user-recognized, definition of the resource.

---

## Show Enhanced Status Check Box

The **Show Enhanced Status** check box is used to show more status information. When selected, the BER To, Errors To, BER From and Errors From columns are replaced with Poll Delay, Requests, Power Ups, and KP Type (see Figure 193).

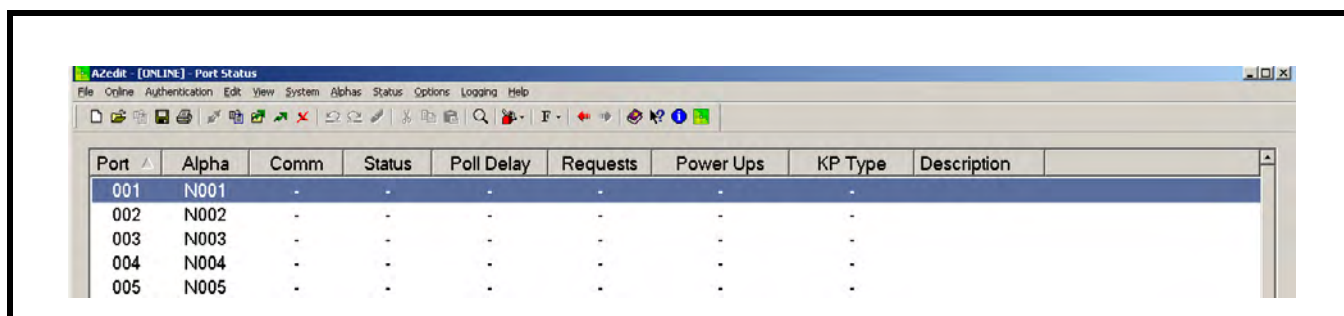

Port	Alpha	Comm	Status	Poll Delay	Requests	Power Ups	KP Type	Description
001	N001	-	-	-	-	-	-	
002	N002	-	-	-	-	-	-	
003	N003	-	-	-	-	-	-	
004	N004	-	-	-	-	-	-	
005	N005	-	-	-	-	-	-	

FIGURE 193. Show Enhanced Status Columns

---

## Poll Delay Column

The **Poll Delay** column reports the current poll delay setting. The poll delay is set in the Keypanel/Port Configuration window, see “Keypanel/Port Configuration Window” on page 93.

## Requests Column

The **Requests** column provides a running count of talk/listen key closures.

## Power Ups Column

The **Power Ups** column provides a running count of how many times the connected device has been turned ON.

## KP Type Column

The **KP Type** column reports the type of keypanel that is connected. If the port has been reserved for trunking, *Trunk Port* appears.


## Clear Button

The **Clear** button opens the Clear Port Status window (see “Clear Port Status Window” on page 203).

---

## *Clear Port Status Window*

The **Clear Port Status** window, shown in Figure 194, is used to define parameters to clear from a port or from selected ports.

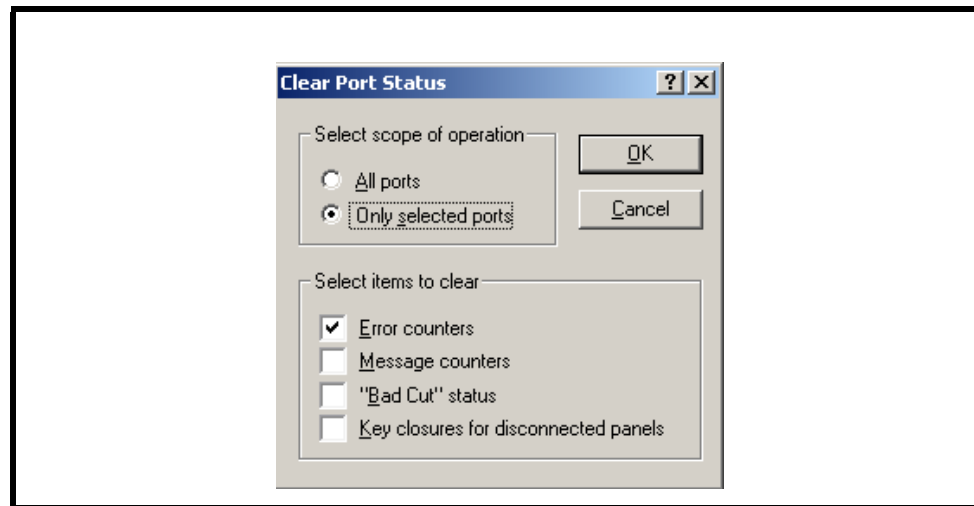

**FIGURE 194.** Clear Port Status Window

---

### **Select Scope of Operation Group Box**

#### **All Ports Radio Button**

The **All Ports** radio button indicates all ports in the intercom are selected for the Clear Port Status operation.

#### **Only Selected Ports Radio Button**

The **Only Selected Ports** radio button indicates only selected (highlighted ports) are selected for the Clear Port Status operation.

---

### **Select Items to Clear Group Box**

#### **Error Counters Check Box**

The **Error Counters** check box is used to configure error counters to be cleared with the Clear Port Status operation.

#### **Message Counters Check Box**

The **Message Counters** is used to configure message counters to be cleared with the Clear Port Status operation.

#### **“Bad Cut” Status Check Box**

The **“Bad Cut” Status** check box is used to configure “Bad Cut” Status to be cleared with the Clear Port Status operation.

#### **Key Closures for Disconnected Panels Check Box**


The **Key Closures for Disconnected Panels** check box is used to configure disconnected panel key closures to be cleared with the Clear Port Status operation.

---

## Master Controller Status Window

The **Master Controller Status** window, shown in Figure 195, is used to view connection status and data communication errors between the master controller and the configuration PC. You can also use this to upgrade the master controller firmware. For more information, see “Master Controller Description” on page 39.

**NAVIGATION:** From the menu bar, select *Status/Master Controller*.

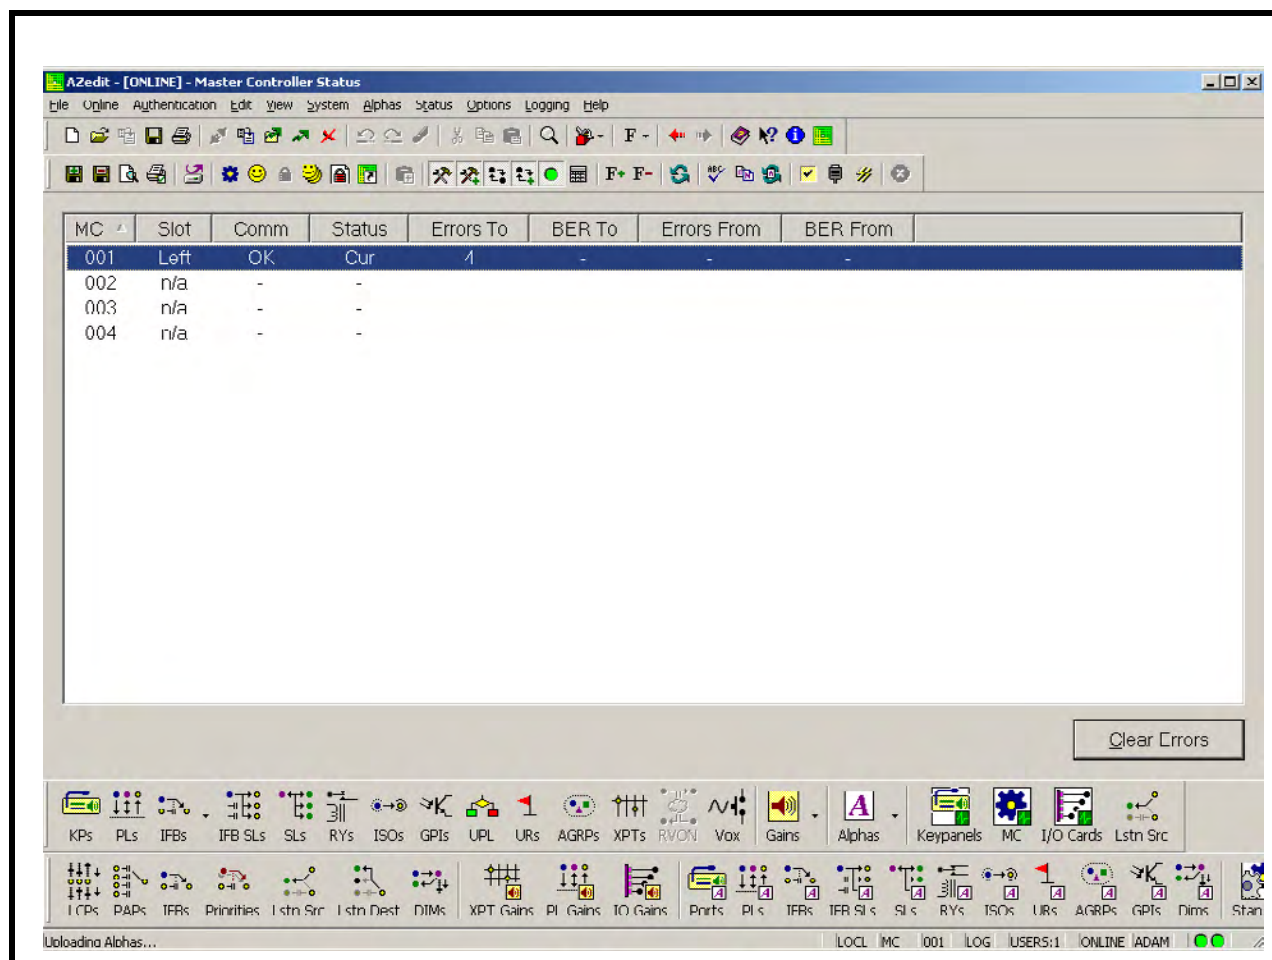

**FIGURE 195.** Master Controller Status Window

---

### MC Column

The **MC** column identifies the frame number for each active master controller. In a Zeus or ADAM CS intercom system, this number is always 001. This is also the case for a single-frame ADAM system, or for a multi-frame ADAM system that uses **DBX** (Dual Bus Expansion) cards. In a multi-frame ADAM system that uses **SBX** (Single Bus Expansion) cards, the numbers indicate the following:

- 001 Active master controller in master frame
- 002 Active master controller in first slave frame
- 003 Active master controller in second slave frame
- 004 Active master controller in third slave frame
- 005 Active master controller in fourth slave frame



---

### **Slot Column**

The **Slot** column indicates which master controller slot is the active slot and which slot is currently the standby master controller. This is not applicable for a Zeus Intercom System.

**NOTE:** In a multi-frame ADAM intercom system (with SBX cards), Slot indication is only provided for the active master controller in the master frame (frame 001).

### **Comm Column**

The **Comm** column displays a list of communication statuses (OK, BAD, or -) for the master controller.

### **Status Column**

The **Status** column displays the status of the master controller. OK indicates the master controller is functioning correctly. Anything else indicates a problem with the card.

### **Errors To Column**

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the master controller.

### **BER To Column**

The **BER To** column displays the number of errors that have been sent to the master controller in the last 10 minutes.

### **Errors From Column**

The **Error To** column displays the number of errors the Master Controller logs as being sent from the master controller.

### **BER From Column**

The **BER From** column displays the number of errors sent from the master controller in the last 10 minutes.

### **Clear Errors Button**

The **Clear Errors** button is used to clear the error counters.

## Standby Master Controller Status Window

The **Standby Master Controller Status** window, shown in Figure 196, is used to view connection status and data communication errors between the standby master controller and the configuration PC. You can also use this to upgrade the standby master controller firmware.

**NAVIGATION:** From the menu bar, select *Status/Standby Controller*.

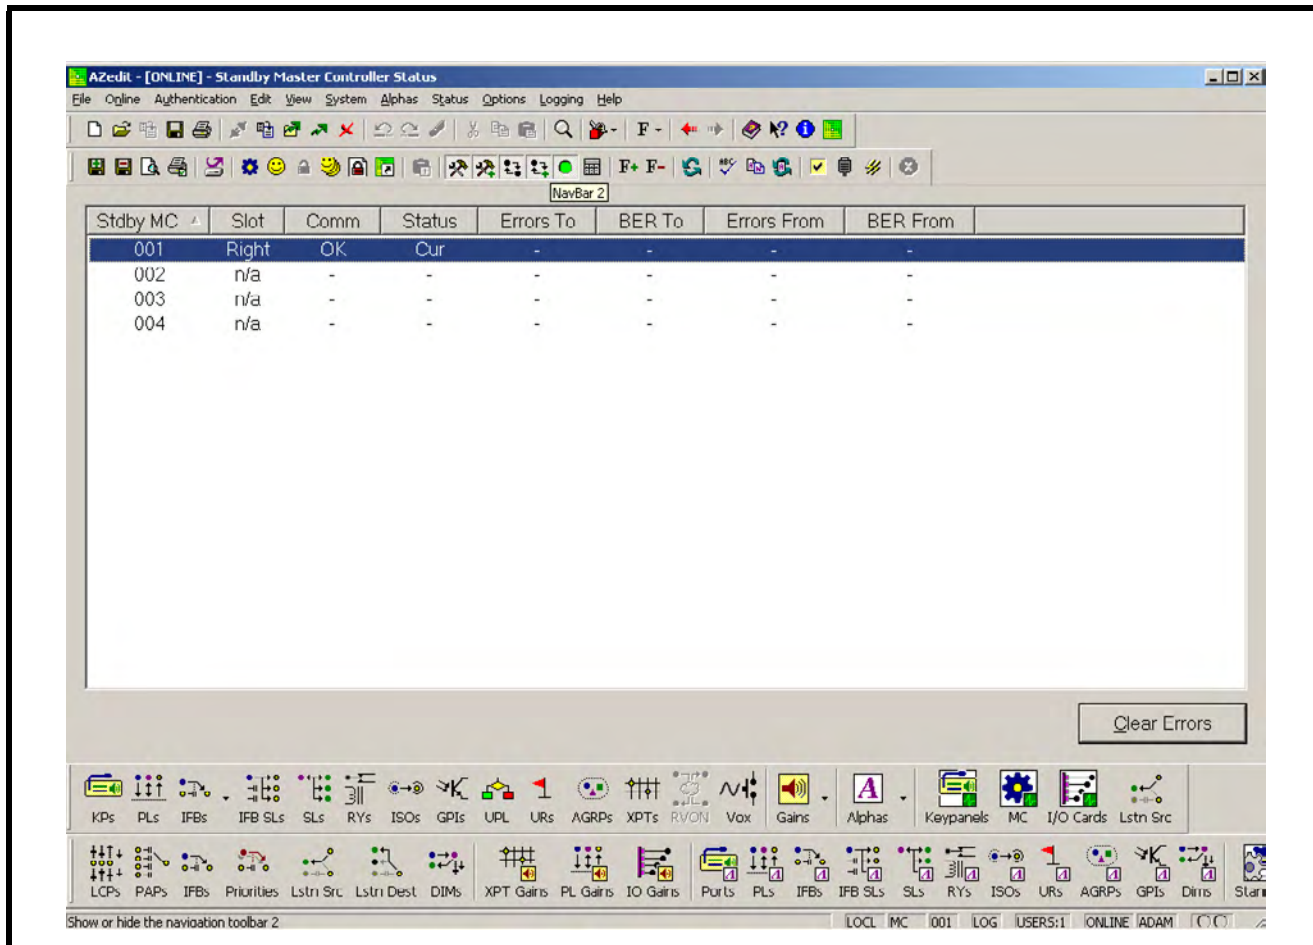


FIGURE 196. Standby Master Controller Status Window

### Standby MC Column

The **Standby MC** column identifies the frame number for each standby master controller. In a Zeus or ADAM CS intercom system, this number is always 001. This is also the case for a single-frame ADAM system, or for a multi-frame ADAM system using **DBX** (Dual Bus Expansion) cards. In a multi-frame ADAM system that uses **SBX** (Single Bus Expansion) cards, the numbers indicate the following:

- 001 Standby master controller in master frame
- 002 Standby master controller in first slave frame
- 003 Standby master controller in second slave frame
- 004 Standby master controller in third slave frame
- 005 Standby master controller in fourth slave frame

---

## Slot Column

The **Slot** column is not applicable for a Zeus Intercom System. For an ADAM or ADAM CS Intercom System, this column indicates which master controller slot is the active slot and which slot is currently the standby master controller.

**NOTE:** In a multi-frame ADAM intercom system (with SBX cards), Slot indication is only provided for the active master controller in the master frame (frame 001).

n/a – indicates there is not a standby master controller card inserted in any slot.

Right or Left – indicates which of the two available master controller card slots the standby controller is currently using.

## Comm Column

The **Comm** column displays a list of communication statuses (*OK*, *BAD*, or *-*) for the standby master controller.

## Status Column

The **Status** column displays the status of the standby master controller.

“-- --” - Two consecutive dashes indicate that there has never been any data communication between the standby controller and the master controller during the current edit session. This could be because the device is not connected.

Bad Cut: - This indicates that there was a connection to the standby controller, but it is now not connected or there may be a power failure or other problem somewhere in the system.

OK Cur - This indicates the standby controller is connected and operating, and is updated with the current intercom system configuration.

OK Old - This indicates the standby controller is connected and operating, but is not updated with the current intercom system configuration.

## Errors To Column

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the standby controller.

## BER To Column

The **BER To** column displays the number of errors sent to the standby controller in the last 10 minutes.

## Errors From Column

The **Error To** column displays the number of errors the master controller logs as being sent from the standby controller.

## BER From Column

The **BER From** column displays the number of errors sent from the standby controller in the last 10 minutes.

## Clear Errors Button


The **Clear Errors** button is used to clear the error counters.

---

## DBX Link Status Window

The **DBX Link Status** window, shown in Figure 197, is used to view the status of the DBX links between frames.

**NAVIGATION:** From the menu bar, select *Status/DBX Links*.

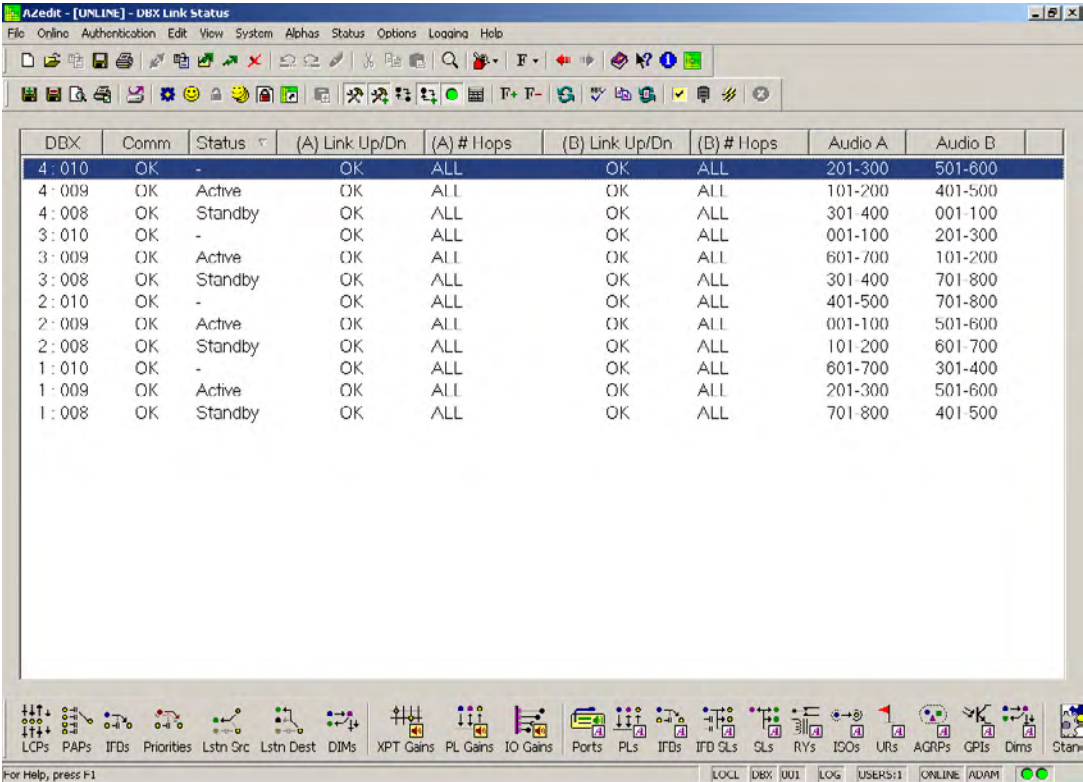

DBX	Comm	Status	(A) Link Up/Dn	(A) # Hops	(B) Link Up/Dn	(B) # Hops	Audio A	Audio B
4 : 010	OK	-	OK	ALL	OK	ALL	201-300	501-600
4 : 009	OK	Active	OK	ALL	OK	ALL	101-200	401-500
4 : 008	OK	Standby	OK	ALL	OK	ALL	301-400	001-100
3 : 010	OK	-	OK	ALL	OK	ALL	001-100	201-300
3 : 009	OK	Active	OK	ALL	OK	ALL	601-700	101-200
3 : 008	OK	Standby	OK	ALL	OK	ALL	301-400	701-800
2 : 010	OK	-	OK	ALL	OK	ALL	401-500	701-800
2 : 009	OK	Active	OK	ALL	OK	ALL	001-100	501-600
2 : 008	OK	Standby	OK	ALL	OK	ALL	101-200	601-700
1 : 010	OK	-	OK	ALL	OK	ALL	601-700	301-400
1 : 009	OK	Active	OK	ALL	OK	ALL	201-300	501-600
1 : 008	OK	Standby	OK	ALL	OK	ALL	701-800	401-500

**FIGURE 197.** DBX Link Status Window

### DBX Column

The **DBX** column displays DBX cards listed by frame and slot number.

For example, 1:009 indicates frame 1, card slot number 9.

### Comm Column

The **Comm** column displays the communications status of the DBX cards.

### Status Column

The Status column displays the status of data communication over the DBX cards. Statuses include:

- “-- --”: Two consecutive dashes indicate that there has never been any data communication over the DBX cards. This could be because the device is not connected.
- OK Active: This indicates the card is talking and is the active card in the frame.
- OK Standby: This indicates the card is talking and is the standby card in the frame.
- OK: Indicates the card is talking, but it is neither active nor standby.

---

### (A) Link Up/Dn Column

The (A) **Link Up/Dn** column displays the status of the links on DBX port A. Any of the following indications may appear

- “-- --”: the link is down
- OK #: the link is up (for # hops)
- OK All: the link is up (for ALL hops)

**NOTE:** The hops count indicates how many consecutive links are up.

**Example:** If card 1:009 reports Link A status of “OK 3 hops”, that means it could send a message out its Link A and that message could travel up to three (3) hops before coming to a down link. (A “hop” means the jump from one DBX card to another, and to continue a hop, the receiving DBX card turns around and transmits the message out its other port).

*OK ALL* means that all links are up (every card’s link status should read OK ALL).

### (A) # Hops Column

Any of the following indications are seen:

- “-- --”: the link is down
- OK #: the link is up (for # hops)
- All: the link is up (for ALL hops)

**NOTE:** The hops count indicates how many consecutive links are up.

**Example:** If card 1:009 reports Link A status of “OK 3 hops”, that means it could send a message out its Link A and that message could travel up to three (3) hops before coming to a down link. (A “hop” means the jump from one DBX card to another, and to continue a hop, the receiving DBX card turns around and transmits the message out its other port).

*OK ALL* means that all links are up (every card’s link status should read OK ALL).

### (B) Link Up/Dn Column

The (B) **Link Up/Dn** column displays the status of the links on DBX port B. Any of the following indications may appear:

- “-- --”: the link is down
- OK #: the link is up (for # hops)
- OK All: the link is up (for ALL hops)

**NOTE:** The hops count indicates how many consecutive links are up.

**Example:** If card 1:009 reports Link A status of “OK 3 hops”, that means it could send a message out its Link A and that message could travel up to three (3) hops before coming to a down link. (A “hop” means the jump from one DBX card to another, and to continue a hop, the receiving DBX card turns around and transmits the message out its other port).

*OK ALL* means that all links are up (every card’s link status should read OK ALL).

---

## (B) # Hops Column

Any of the following indications are seen:

-- --: the link is down  
OK #: the link is up (for # hops)  
All: the link is up (for ALL hops)

**NOTE:** The hops count indicates how many consecutive links are up.

**Example:** If card 1:009 reports Link A status of "OK 3 hops", that means it could send a message out its Link A and that message could travel up to three (3) hops before coming to a down link. (A "hop" means the jump from one DBX card to another, and to continue a hop, the receiving DBX card turns around and transmits the message out its other port).

ALL means that all links are up (in this case every card's link status should read OK ALL).

## Audio A Column

The **Audio A** column indicates whether Port A links are being used to pass audio from one frame to another (and shows which timeslots/ports are being driven). Any of the following indications can be given:

-- --: the link is not used for audio.  
###- ###: this link is used for the timeslots indicated.

### EXAMPLE 1

The following information displays for a 2-frame system without redundant DBX cards. There is one DBX card per frame (in slot 9). Both DBX cards are "active" in their frame, and ALL links are up.

DBX	STATUS	LINK A	LINK B	AUDIO A	AUDIO B
1:009	OK Active	OK ALL	OK ALL	-	129-252
2:009	OK Active	OK ALL	OK ALL	-	001-124

Link A is not used for audio in either direction. Link B, in frame 1, is being used to drive timeslots 129-252 from frame 2, and Link B in frame 2, and is being used to drive timeslots 1-124 from frame 1.

**NOTE:** In systems where there is only one (1) DBX card per frame (2 frame, and 3 frame systems without redundant controllers), and if test audio is enabled, then only 124 timeslots can be forwarded between frames. A DBX link can forward 128 timeslots, but test audio requires 4 timeslots per link. In the 256x256 (2 frame), and 384x384 (3 frame) system which have only one (1) DBX card per frame, all timeslots per link are needed for audio, but if test audio is enabled, the last timeslots in each frame are not available.

This means that the last four ports in each frame can listen to, but not talk to, ports in other frames. Similarly, ports in other frames can talk to, but not listen to, the last four ports in each frame. Within any frame, any port can talk or listen to any other port in that frame; the timeslots are only lost going between frames.

Test Audio is artificially generated audio by the DBX that it can produce, publish, forward, receive, and test. It is used by the DBX to ensure that the links are passing valid audio between frames. If the DBX detects that the link is up, but that the audio is corrupt, the DBX tears down the link and builds it up again.

### EXAMPLE 2

DBX	STATUS	LINK A	LINK B	AUDIO A	AUDIO B
1:009	OK Active	OK 1	--	129-252	-
2:009	OK Active	OK 1	--	001-124	-

---

In example 2, the link connecting Port B of 1:9 to Port B 2:9 has been broken. The audio automatically switched over to the A links, and the “hop” count for the A links shows 1 instead of ALL.

**NOTE:** Even though this intercom is called a 2-frame, non-redundant, system, it actually has redundant audio because both links go between frame 1 and 2. The intercom does not have redundant control because there is only one DBX card per frame, and if any card fails, connectivity is lost.

It is possible for the audio from frame 1 to frame 2 to be carried on one link, while audio in the other direction is carried on another link.

### Audio B Column

The **Audio B** column indicates whether Port B links are being used to pass audio from one frame to another (and shows which timeslots/ports are being driven). Any of the following indications can be given:

-- --: the link is not being used for audio.  
###- ###: this link is being used for the timeslots indicated.

### EXAMPLE 1

The following information would be displayed for a 2-frame system without redundant DBX cards. There is one DBX card per frame (in slot 9). Both DBX cards are “active” in their frame, and ALL links are up.

DBX	STATUS	LINK A	LINK B	AUDIO A	AUDIO B
1:009	OK Active	OK ALL	OK ALL	-	129-252
2:009	OK Active	OK ALL	OK ALL	-	001-124

Link A is not being used for audio in either direction. Link B, in frame 1, is being used to drive timeslots 129-252 from frame 2, and Link B in frame 2, and is being used to drive timeslots 1-124 from frame 1.

**NOTE:** In systems where there is only one (1) DBX card per frame (2 frame, and 3 frame systems without redundant controllers), and if test audio is enabled, then only 124 timeslots can be forwarded between frames. A DBX link can forward 128 timeslots, but test audio requires 4 timeslots per link. In the 256x256 (2 frame), and 384x384 (3 frame) system which have only one (1) DBX card per frame, all timeslots per link are needed for audio, but if test audio is enabled, the last timeslots in each frame are not available.

This means that the last four ports in each frame can listen to, but not talk to, ports in other frames. Similarly, ports in other frames can talk to, but not listen to, the last four ports in each frame. Within any frame, any port can talk or listen to any other port in that frame, the timeslots are only lost going between frames.

Test Audio is artificially generated audio by the DBX that it can produce, publish, forward, receive, and test. It is used by the DBX to ensure that the links are passing valid audio between frames. If the DBX detects that the link is up, but that the audio is corrupt, the DBX tears down the link and builds it up again.

## EXAMPLE 2

DBX	STATUS	LINK A	LINK B	AUDIO A	AUDIO B
1:009	OK Active	OK 1	--	129-252	-
2:009	OK Active	OK 1	--	001-124	-

In example 2, the link connecting Port B of 1:9 to Port B 2:9 has been broken. The audio automatically switched over to the A links, and the “hop” count for the A links shows 1 instead of ALL.

**NOTE:** Even though this intercom is called a 2-frame, non-redundant, system, it actually has redundant audio because both links go between frame 1 and 2. The intercom does not have redundant control because there is only one DBX card per frame, and if any card fails, connectivity is lost.

It is possible for the audio from frame 1 to frame 2 to be carried on one link, while audio in the other direction is carried on another link

## I/O Card Status Window

The **I/O Card Status** window, shown in Figure 198, is used to view connection status and data communication errors between Audio Input/Output Cards and the active Master Controller Card. You can also use this to upgrade the firmware in Audio Input/Output Cards and DBX Cards.

**NAVIGATION:** From the menu bar, select *Status/I/O Cards*.

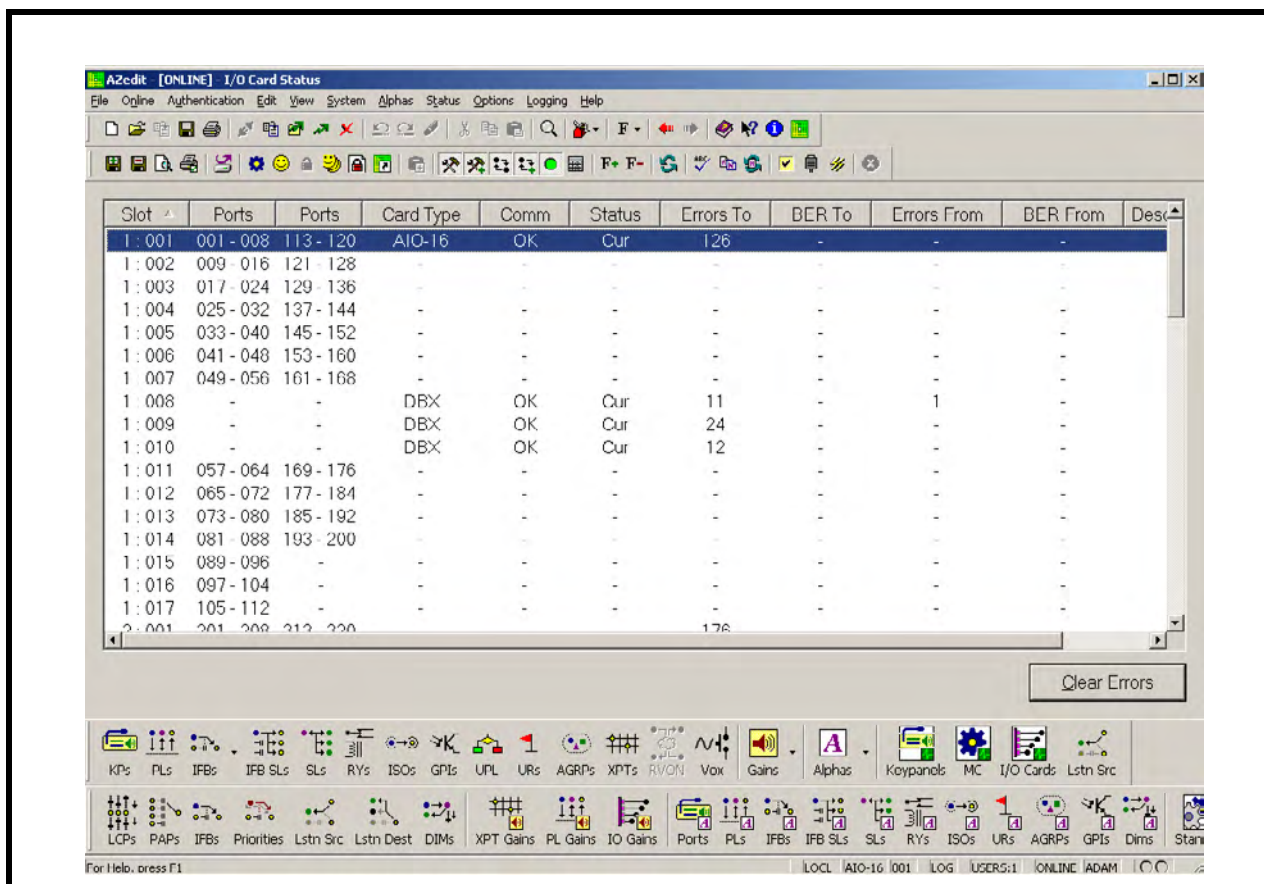


FIGURE 198. I/O Card Status Window



---

### **Slot Column**

The **Slot** column displays the card in relation to which frame and its position in the frame.

For example, 1:011, indicates the card is in Frame 1 and in Slot 11.

### **Port Column**

The **Port** column displays a list of the ports designated to that slot. This column shows AIO-8 card ports and the first half of the sixteen ports on an AIO-16.

### **Port Column**

The **Port** column displays a list of the ports designated to that slot. This column shows the second half of the sixteen ports on an AIO-16.

### **Card Type Column**

The **Card Type** column displays the type of card that is in the slot.

### **Comm Column**

The **Comm** column displays a list of communication statuses (OK, BAD, or -) of the ports.

(blank) = no card present

OK = the card is communicating with the master controller.

BAD = the card is not communicating with the master controller.

### **Status Column**

The **Status** column displays the communication status between the I/O card and the Master Controller.

CUR= The information from the master controller is current and up-to-date.

OLD= The information from the master controller is not current and out-of-date.

CUT= The information is bad and communication terminated.

### **Errors To Column**

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the I/O card.

### **BER To Column**

The **BER To** column displays the number of errors sent to the card in the last 10 minutes.

### **Errors From Column**

The **Error To** column displays the number of errors the Master Controller logs as being sent from the I/O card.

### **BER From Column**

The **BER From** column displays the number of errors sent from the card in the last 10 minutes.

### **Description Column**

The **Description** column displays a short, user-recognizable, definition of the resource.

## Clear Errors Button

The **Clear Errors** button is used to clear the error counters.

## PAP & LCP-102 Status Window

The **PAP & LCP-102 Status** window, shown in Figure 199, is used to view the status information for the PAP or LCP-102 devices. You can also download firmware updates to the devices from this window.

**NAVIGATION:** From the menu bar, select *Status/PAP and LCP-102*.

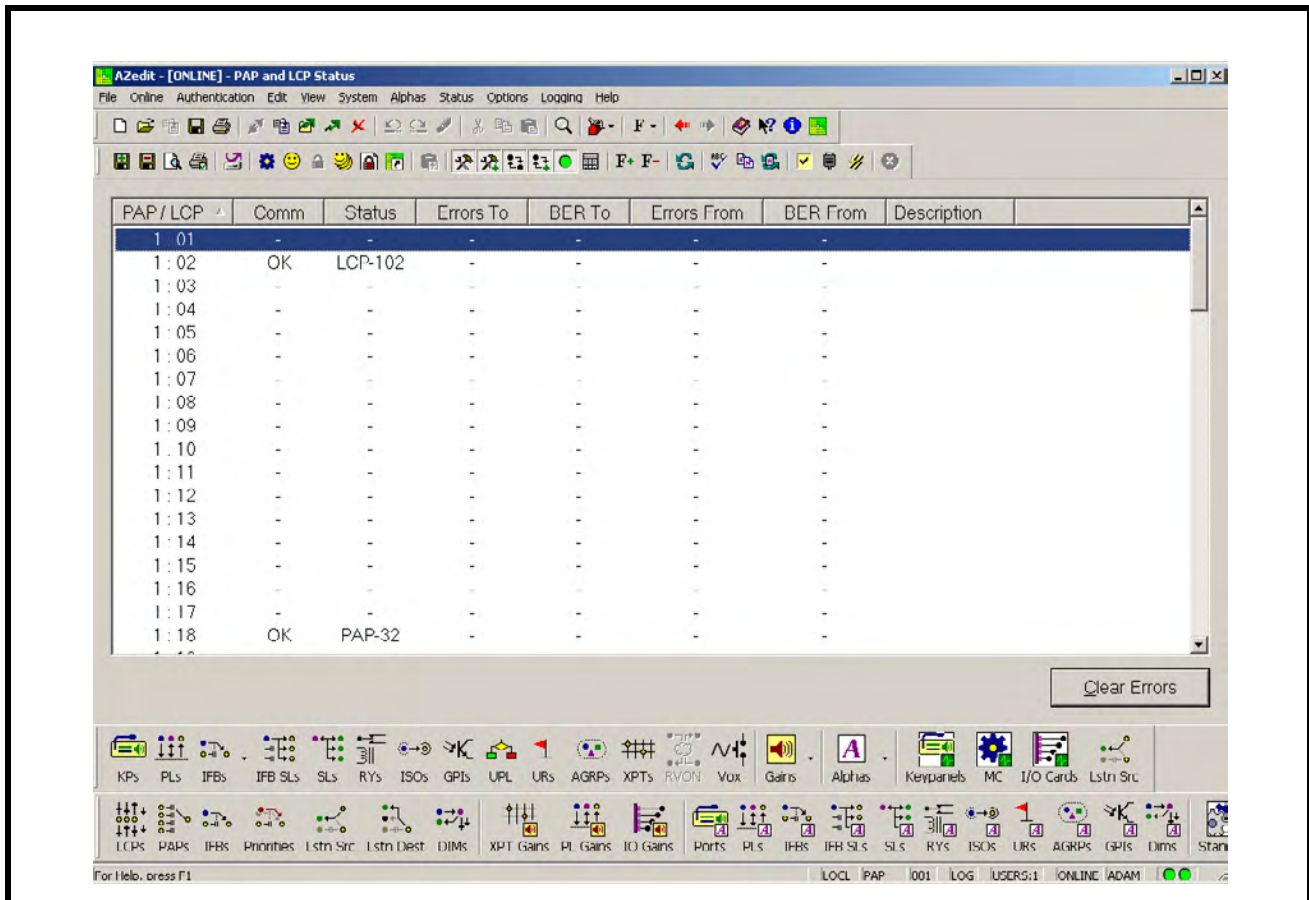


FIGURE 199. PAP and LCP Status Window

## PAP/LCP Column

The **PAP/LCP** column displays a list of all the PAP/LCP-102s in the intercom system.

## Comm Column

The **Comm** column displays a list of communication statuses (OK, BAD, or -) between the intercom system and the PAP/LCP-102 connections.

---

## Status Column

The **Status** column displays the communication status between the PAP or LCP-102 and the Master Controller.

- “-- --” Two consecutive dashes indicate there has never been any data communication between the PAP or LCP-102 and the master controller during the current edit session. This could be because the PAP or LCP-102 is not connected.
- Bad Cut: This indicates there was a connection to the PAP or LCP-102, but it is now not connected, or there may be a power failure or other problem somewhere in the system.
- OK PAP: This indicates the Program Assist Panel or LCP-102 is connected and operating.

## Errors To Column

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the PAP or LCP-102.

## BER To Column

The **BER To** column displays the number of errors sent to the PAP or LCP-102 in the last 10 minutes.

## Errors From Column

The **Error From** column displays the number of errors the Master Controller logs as being sent from the PAP or LCP-102.

## BER From Column

The **BER From** column displays the number of errors sent from the PAP or LCP-102. in the last 10 minutes.

## Description Column

The **Description** column displays description of the PAP or LCP device.

## Clear Errors Button


The **Clear Errors** button is used to clear the error counters.

---

## UIO-256 Status Window

The **UIO-256 Status** window, shown in Figure 200, is used to view status information for the UIO-256 and GPIO-16. You can also download firmware updates from this window.

**NAVIGATION:** From the menu bar, select *Status/UIO-256*.

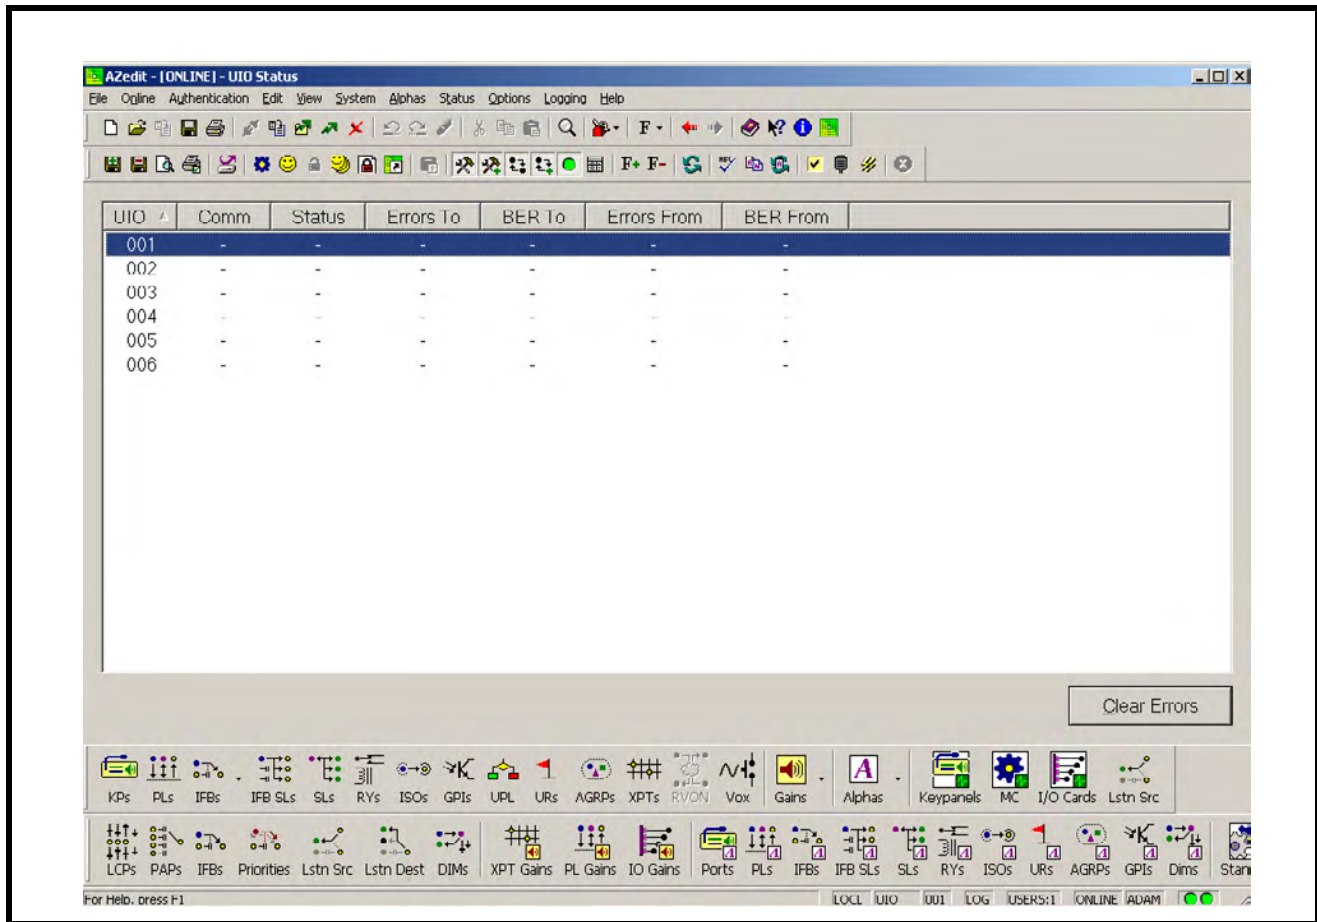

**FIGURE 200.** UIO Status Window

---

### UIO Column

The **UIO** column displays a list of all the UIO-256 units in the intercom system.

### Comm Column

The **Comm** column displays a list of communication statuses (OK, BAD, or -) of the UIO-256 units in the intercom system.

---

## Status Column

The **Status** column displays the status of the UIO-256 device.

- |          |                                                                                                                                                                                                                    |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| “-- --”: | Two consecutive dashes indicate that there has never been any data communication between the UIO-256 and the master controller during the current edit session. This could be because the device is not connected. |
| Bad Cut: | This indicates there was a connection to the UIO-256, but it is now not connected, or there may be a power failure or other problem somewhere in the system.                                                       |
| OK Cur:  | This indicates the UIO-256 is connected and operating, and is updated with the current intercom system configuration.                                                                                              |
| OK Old:  | This indicates the UIO-256 is connected and operating, but is not updated with the current intercom system configuration.                                                                                          |

## Errors To Column

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the UIO.

## BER To Column

The **BER To** column displays the number of errors sent to the UIO in the last 10 minutes.

## Errors From Column

The **Error To** column displays the number of errors the Master Controller logs as being sent from the UIO card.

## BER From Column

The **BER From** column displays the number of errors sent from the UIO in the last 10 minutes.


## Clear Errors Button

The **Clear Errors** button is used to clear the error counters.

# Trunk Master Status Window

The **Trunk Master Status** window, shown in Figure 201, is used to view status information for Trunk Master devices in your intercom system. You can also download firmware updates from this window.

**NAVIGATION:** From the menu bar, select *Status/Trunk Master*.

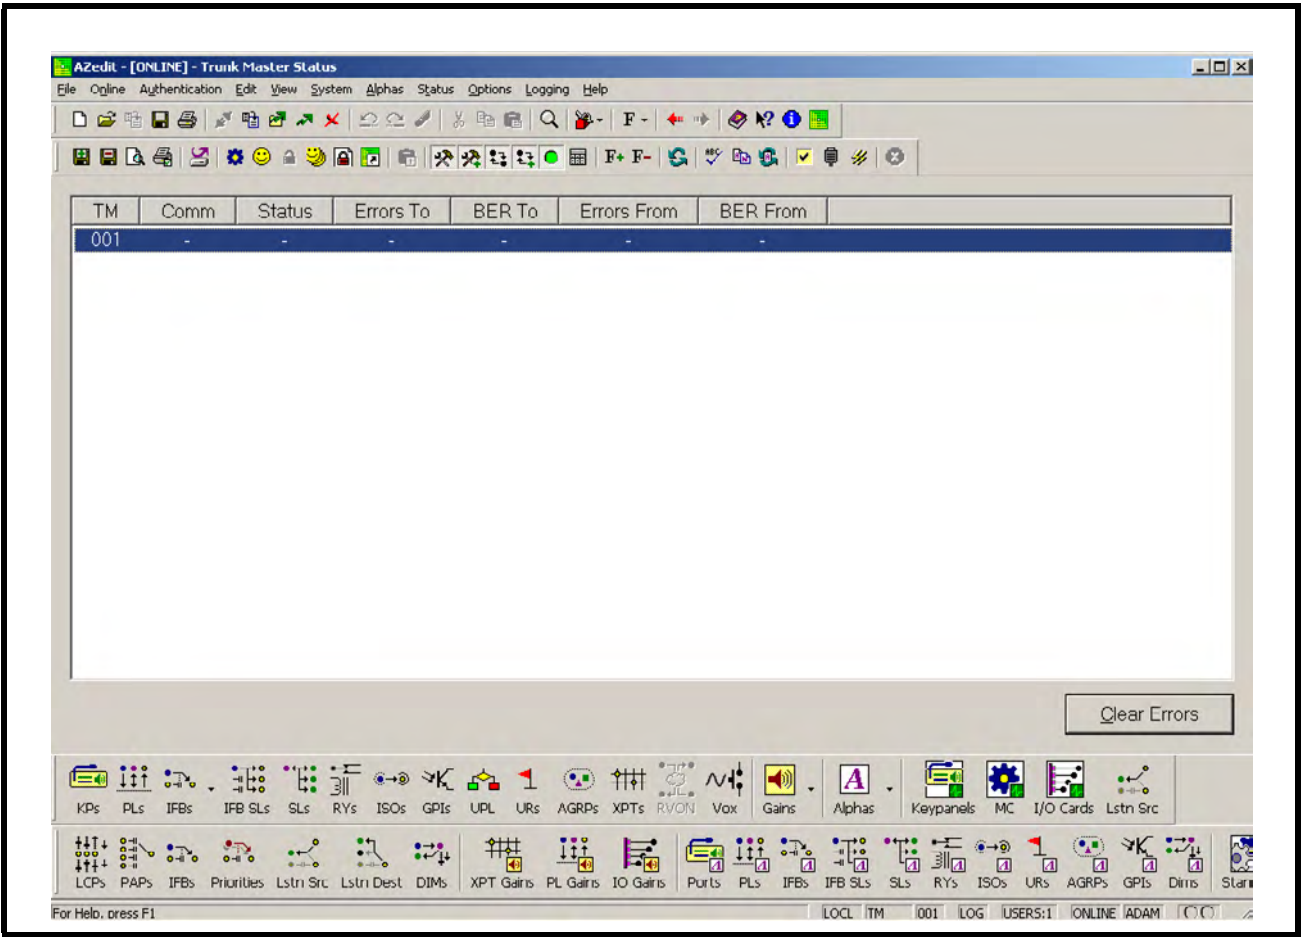

**FIGURE 201.** Trunk Master Status Window

## TM Column

The **TM** column displays a list of all trunk master connections.

## Comm Column

The **Comm** column displays a list of communication statuses (OK, BAD, or -) of the trunk master connections.

---

## Status Column

The **Status** column displays the data transfer status between the trunk master and the master controller.

- |          |                                                                                                                                                                   |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| “-- --   | “Two consecutive dashes indicate that there has never been any data communication between the trunk master and the local master controller.                       |
| Bad Cut: | Indicates that there was a connection to the trunk master, but it is now not connected, or there may be a power failure or other problem somewhere in the system. |
| OK Cur:  | This indicates the trunk master is connected and operating and is updated with the current intercom system configuration.                                         |
| OK Old:  | This indicates the trunk master is connected and operating but is not updated with the current intercom system configuration.                                     |

## Errors To Column

The **Errors To** column displays the number of errors the Master Controller logs as being sent to the Trunk Master.

## BER To Column

The **BER To** column displays the number of errors sent to the trunk master in the last 10 minutes.

## Errors From Column

The **Error To** column displays the number of errors the Master Controller logs as being sent from the trunk master.

## BER From Column

The **BER From** column displays the number of errors sent from the trunk master in the last 10 minutes.

## Clear Errors Button


The **Clear Errors** button is used to clear the error counters.

---

## Trunk Inspection Window

The **Trunk Inspection** window, shown in Figure 202, is used to view trunk ports for specified intercom ports. From this screen you can select the origination port and view trunked ports.

**NAVIGATION:** From the menu bar, select *Status/Trunk Ports*.

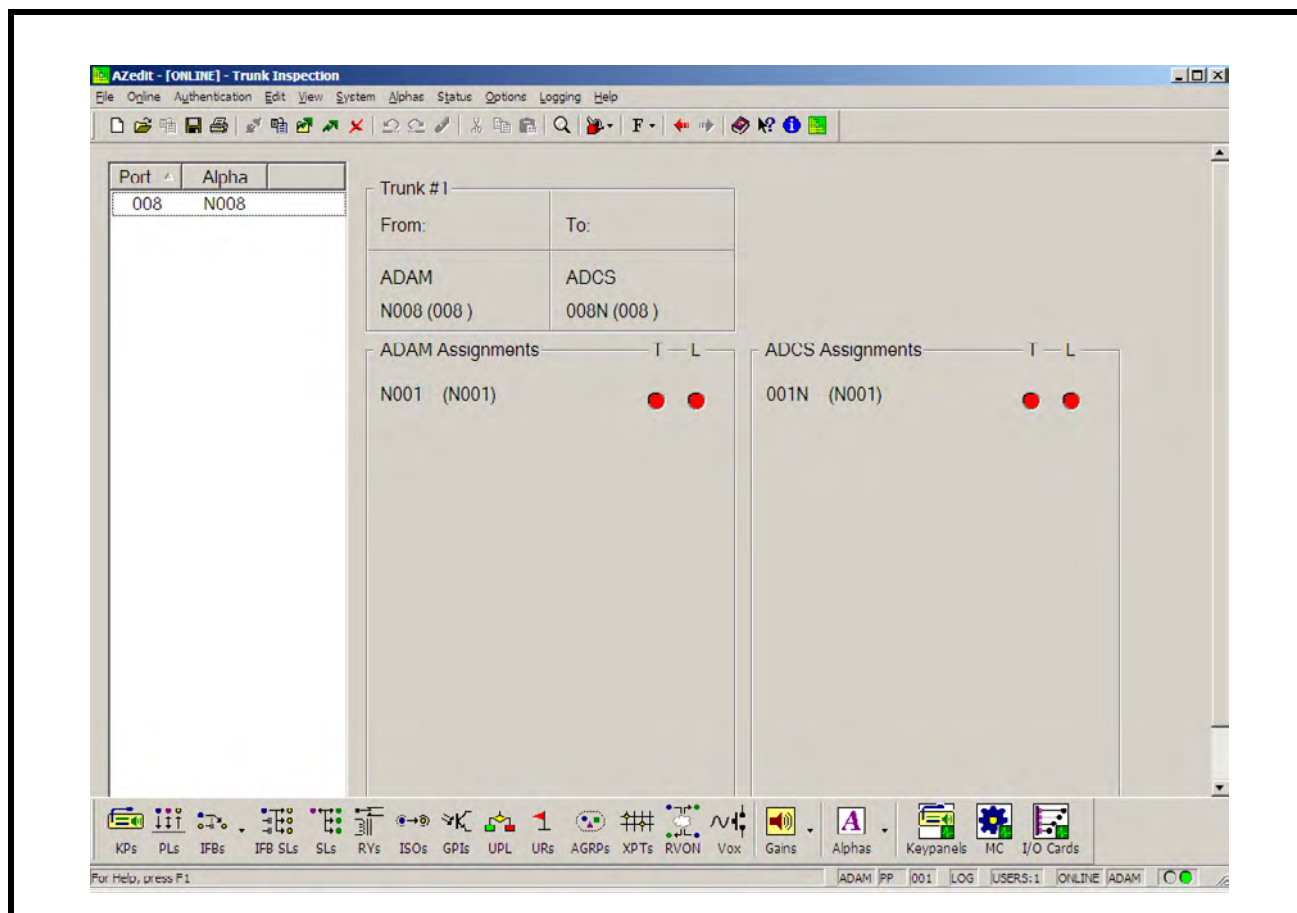

**FIGURE 202.** Trunk Inspection Window

---

### Port Column

The **Port** column displays port number of the port trunking is configured.

### Alpha Column

The **Alpha** column displays port alpha of the port trunking is configured.

### Trunk [number] Group Box

The **Trunk [number]** group box displays the number assigned to a trunk (for example, Trunk #1). You can define as many trunks as your system allows.

### From Fields

The **From** fields indicate the name of the intercom system and the port at the origin of the trunk.



---

## To Fields

The **To** fields indicate the name of the intercom system and the port at the destination of the trunk.

### Origination Assignments Group Box

The **Origination Assignments** group box displays the origination trunk ports (number and alpha) and whether talk and/or listen is assigned to them. If talk and/or listen is assigned, a *red circle* appears under the T/L.


### Destination Assignments Group Box

The **Destination Assignments** group box displays the destination trunk ports (number and alpha) and whether talk and/or listen is assigned to them. If talk and/or listen is assigned a *red circle* appears under the T/L.

# Remote Intercoms Status Window

The **Remote Intercoms Status** window, shown in Figure 203, is used to view the status of remote ports and perform minimal maintenance tasks.

**NAVIGATION:** From the menu bar, select *Status/Remote Intercoms*.

**NOTE:** Remember to send any changes you make to the intercom system using *Edit/Send Changes* or the Activate button. 

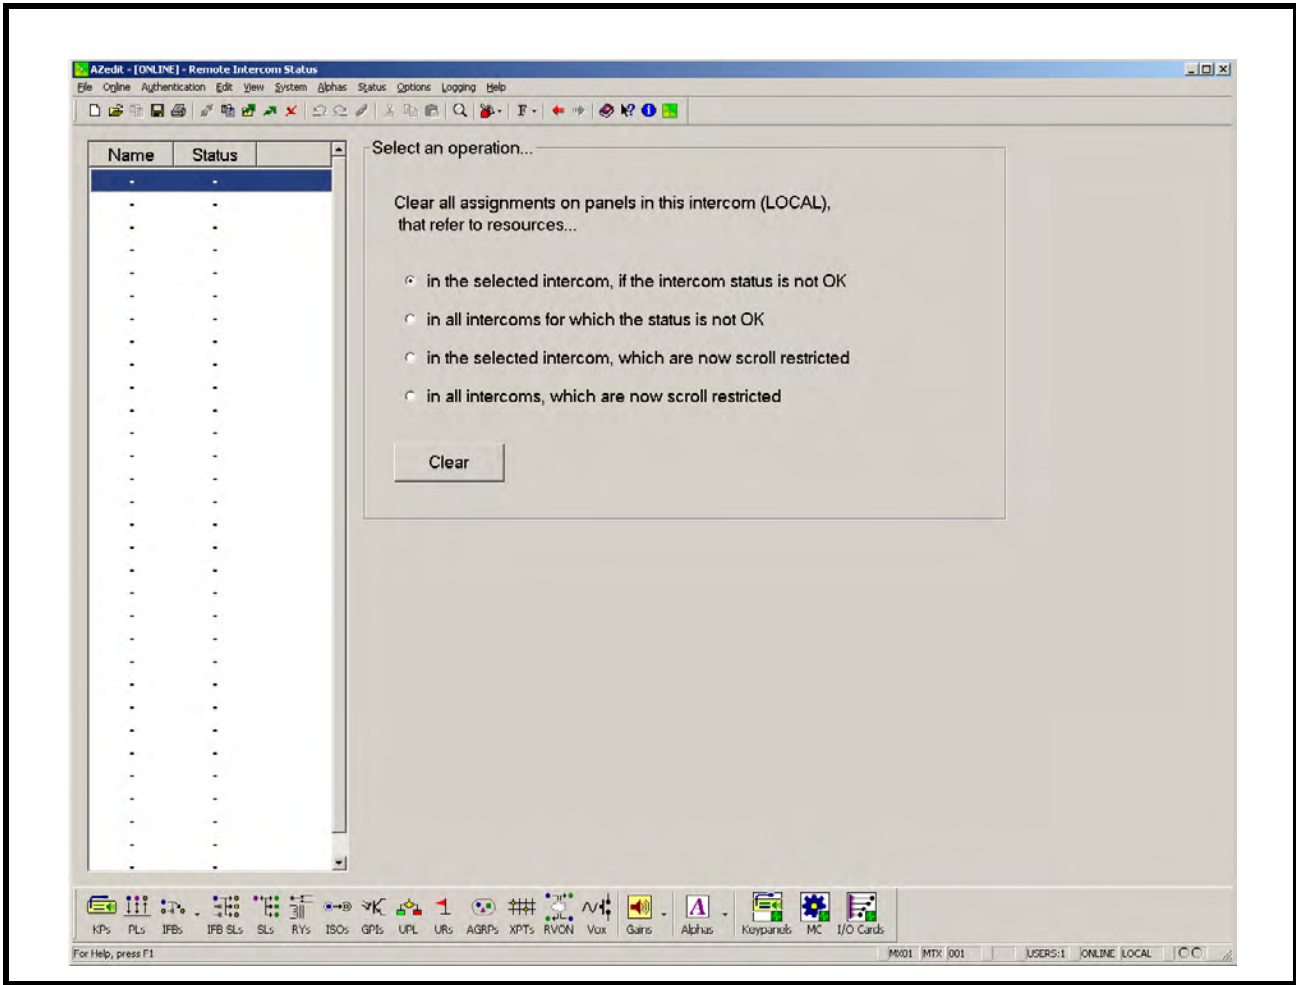


FIGURE 203. Remote Intercom Status Window

## Name Column

The **Name** column displays a selectable list of remote intercom names.

## Status Column

The **Status** column displays the communication status of the remote intercom. Available statuses are **OK** or **-**.

---

## Select an Operation... Group Box

There are four operations that can be performed, as indicated by the four radio button options on the right side of the screen. Depending on which intercom is highlighted in the list, the text description of options 1 and 3 changes.

The four options available are:


- Clear all key assignments in this intercom that refer to resources in all intercoms that are not communicating.
- Clear all key assignments in all intercoms that refer to resources in all intercoms that are not communicating.
- Clear all key assignments in this intercom that refer to resources in the selected intercom, where the resources are scroll restricted.
- Clear all key assignments in this intercom that refer to resources in all intercoms, where the resources are scroll restricted.

The first two options refer to the case where an intercom that used to be in service has been removed from service (disconnected from the Trunk Master). These options allow you to remove all key assignments for a disconnected intercom (or intercoms) from all keypanels in your intercom.

The last two options refer to the case where remote resources that had been available to this intercom, and had been programmed onto keys, are now scroll restricted and are not available to this intercom. These options allow you to remove restricted resource key assignments from all keypanels in your intercom.

### Clear Button


The **Clear** button is used to confirm the clear action. When the Clear button is clicked, the Clear Key Assignment window appears (see Figure 204). From this window, you can confirm the clearing of key assignments or canceling the operation.

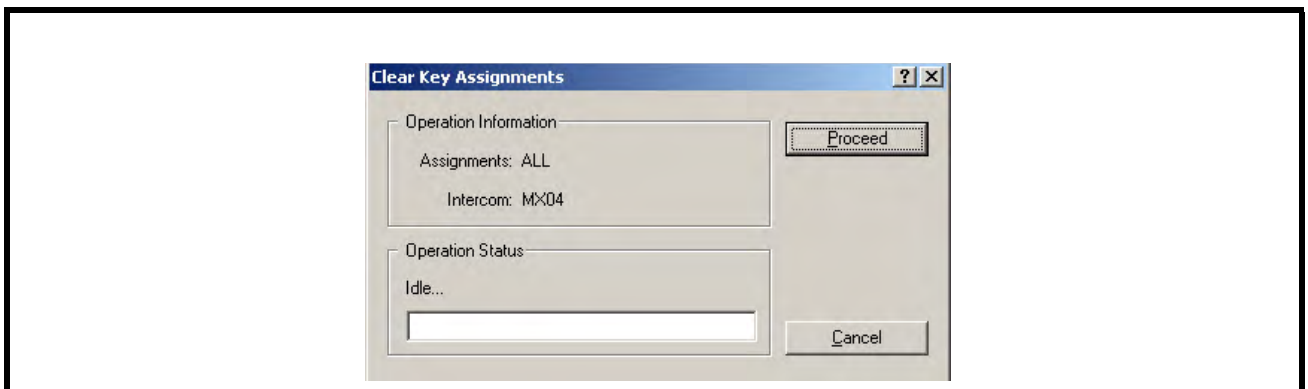

**FIGURE 204.** Clear Key Assignments Window

- > Click **Proceed** to confirm, otherwise click **Cancel**.

**NOTE:** When you click Proceed, you can watch the progress bar as it completes the Clear operation. Once complete, the following appears under Operation Status.

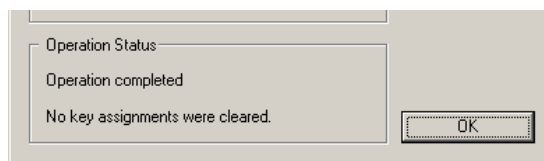

---


## *RVON Connection Status Window*

The **RVON Connection Status** window, shown in Figure 205, is used to view Card/Channel, Connection, VOIP, Network, Errors, and Pass-Through connection status information.

**NOTE:** To view the RVON Connection Status screens, make sure both AZedit and the RVON device are on the same Ethernet network. The reason this is important is because the statistics are updated once per second. At this rate of dynamic update, a serial port could not pass the data effectively.

**NAVIGATION:** From the menu bar, select *Status/RVON Connection*.

### **Card / Channel Page**

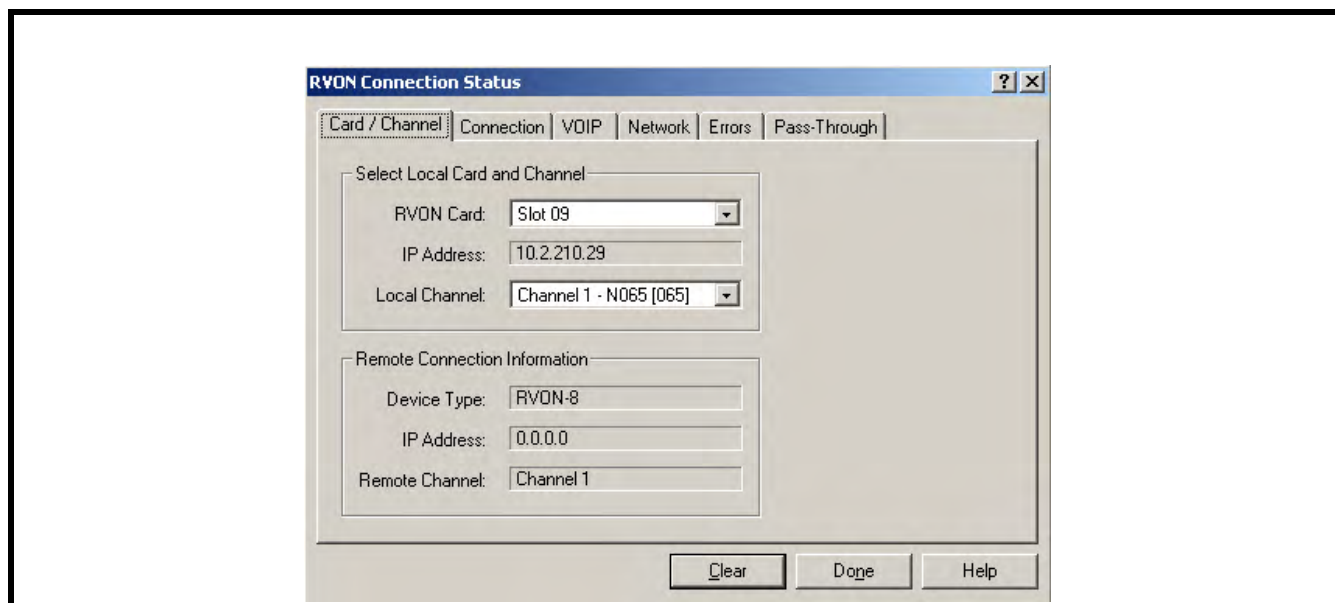

**FIGURE 205.** RVON Connection Status - Card / Channel Page

---

### **Select Local Card and Channel Group Box**

#### ***RVON Card Drop Down Menu***

The **RVON Card** drop down menu is used to select the card for which you want to view the status.

#### ***IP Address Field***

The **IP Address** field displays the IP Address of the selected device.

#### ***Local Channel Drop Down Menu***

The **Local Channel** drop down menu is used to select one of 8 or 16 (depending on the RVON device) channels supported by the RVON device.

---

## Remote Connection Information Group Box

### *Device Type Field*

The **Device Type** field displays the type of device the RVON card is connected to on the other end of the channel (for example, *RVON-1/VKP*).

### *IP Address Field*

The **IP Address** field displays the IP Address of the device connected at the other end of the channel.

### *Remote Channel Field*

The **Remote Channel** field displays the channel at the other end of the connection the RVON device is using.

## Connection Page

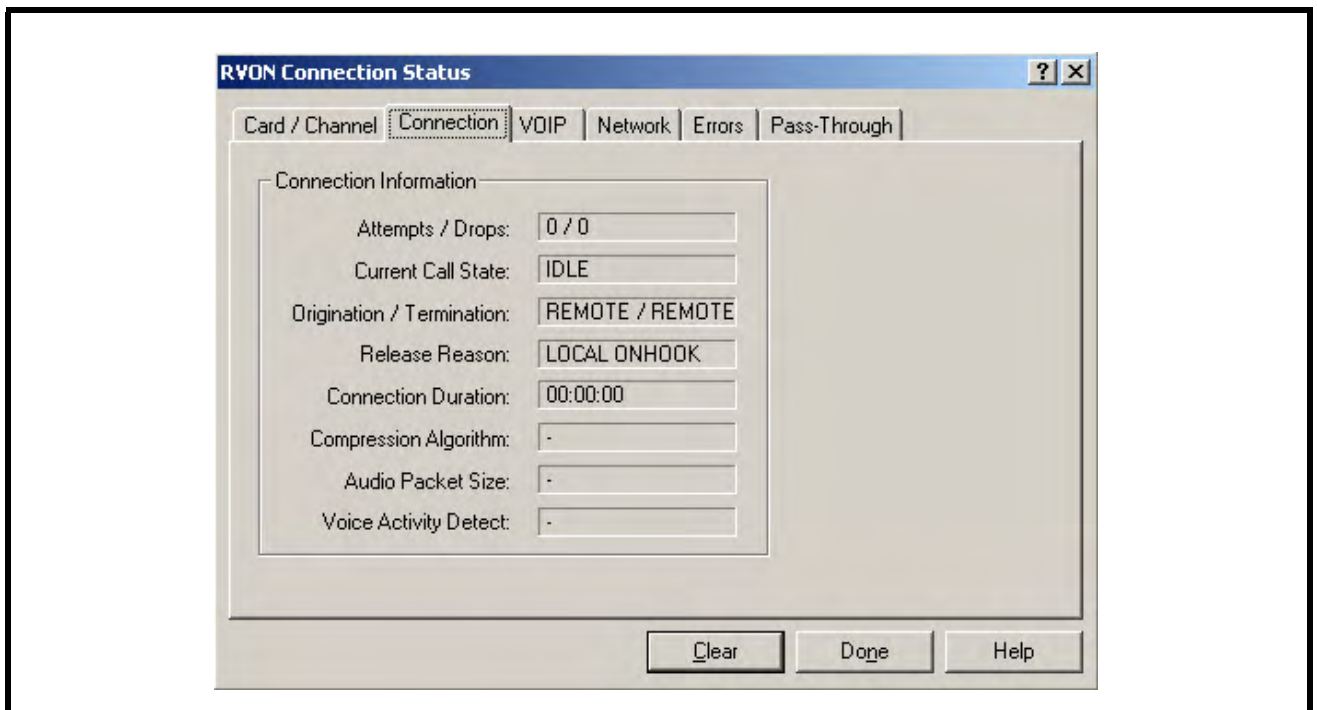


FIGURE 206. RVON Connection Status - Connection Page

---

## Connection Information Group Box

### *Attempts / Drops Field*

The **Attempts / Drops** field displays the number of times a call attempt is made and dropped.

**NOTE:** The number of attempts should always be one (1) greater than the number of drops.

### *Current Call State Field*

The **Current Call State** field displays the state of the connection. There are two (2) connection states: *Connected* or *Idle*.

---

### ***Origination / Termination Field***

The **Origination / Termination** field displays which end of the connection originated or terminated the call.

*Local* = RVON Device

*Remote* = Device at other end of the connection

### ***Release Reason Field***

The **Release Reason** field displays the reason the connection was terminated, for example, *congestion*, *network error*, *local release*, or *remote release*.


### ***Connection Duration Field***

The **Connection Duration** field displays the duration of the connection. This is shown as hh/mm/ss.

### ***Compression Algorithm, Audio Packet Size, and Voice Activity Detect (VAD) Fields***

The **Compression Algorithm**, **Audio Packet Size**, and **Voice Activity Detect (VAD)** fields display the type of configuration the connection is using. This can be different than the original configuration if both ends of the channel are not configured the same. If the configuration is different, these fields are displayed in red.

## **VOIP Page**

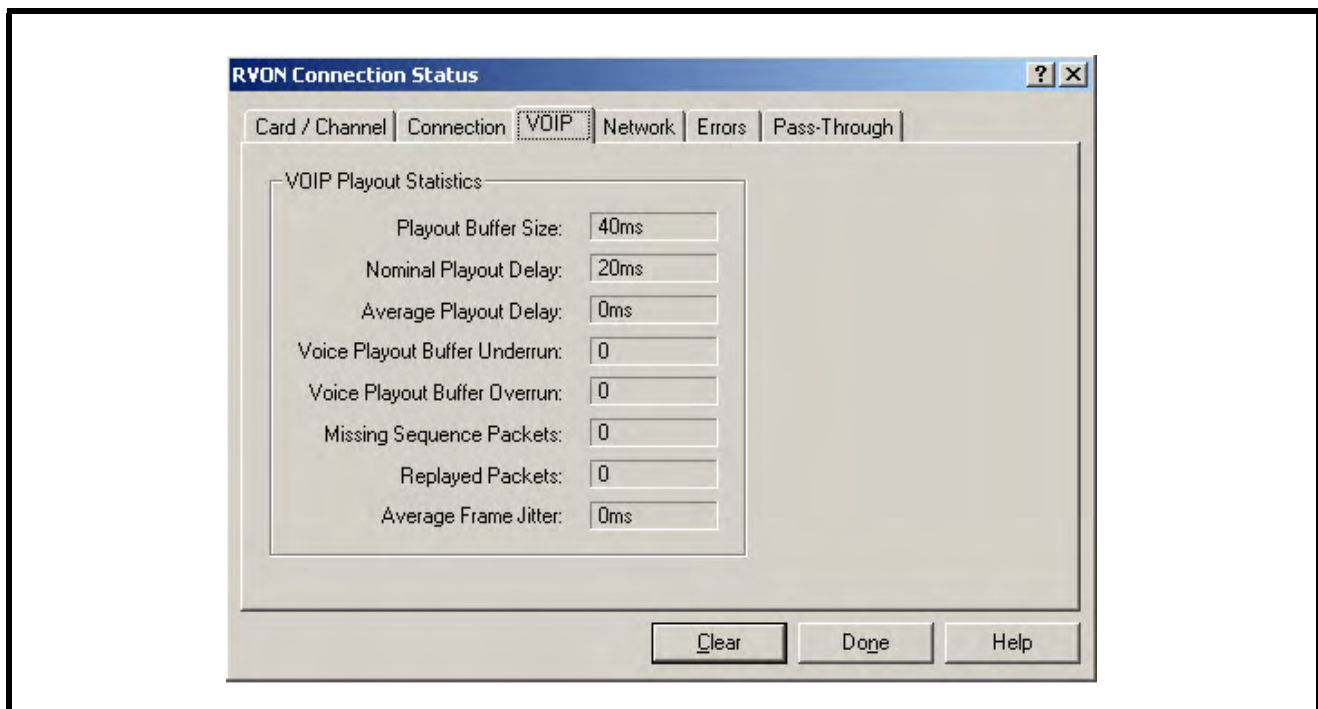

**FIGURE 207.** RVON Connection Status - VOIP Page

---

## **VOIP Playout Statistics Group Box**

### ***Playout Buffer Size Field***

The **Playout Buffer Size** field displays how much audio, in ms, can be received from the network before packets are lost. This is four times bigger than configured packet size.

---

### *Nominal Playout Delay Field*

The **Nominal Playout Delay** field displays how much audio, in ms, is collected before playout begins. Playout begins at half the playout buffer size, which is two times the configured packet size.

### *Average Playout Delay Field*

The **Average Playout Delay** field displays the actual average audio, in ms, collected before the packets are played out. This is measured over the length of the connection.

### *Voice Playout Buffer Underrun Field*

The **Voice Playout Buffer Underrun** field displays the number of times packets were not played because the playout buffer was empty.

**NOTE:** If VAD is enabled, there are playout buffer runs because there are no packets being received during silence.

### *Voice Playout Buffer Overrun Field*

The **Voice Playout Buffer Overrun** field displays the number of packets that were discarded because the playout buffer was full.

### *Missing Sequence Packet Field*

The **Missing Sequence Packet** field displays how many audio packets were missed in the sequence.

### *Replaced Packets Field*

The **Replaced Packets** field displays how many audio packets were replayed.

### *Average Frame Jitter Field*

The **Average Frame Jitter** field displays the measure of consistency, in ms, of packet arrival times. Lower jitter is better.

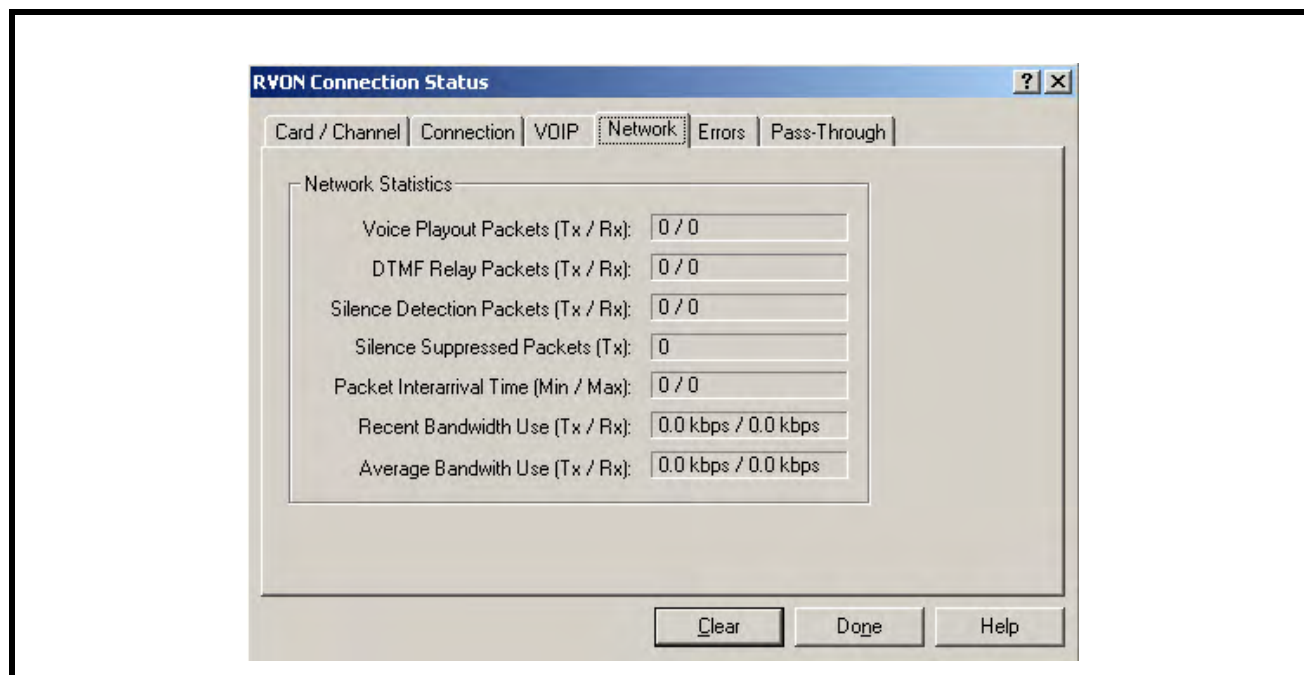


FIGURE 208. RVON Connection Status - Network Page

### Network Statistics Group Box

#### *Voice Playout Packets (Tx/Rx) Field*

The **Voice Playout Packets (Tx/Rx)** field displays the number of voice packets transmitted and received from the other side of the connection.

#### *DTMF Relay Packets (Tx/Rx) Field*

The **DTMF Relay Packets (Tx/Rx)** field displays the number of **DTMF** (Dual Tone Multiple Frequency) relay packets transmitted and received. DTMF relay packets are a bandwidth and quality saving feature within the RVON devices.

#### *Silence Detection Packets (Tx/Rx) Field*

The **Silence Detection Packets (Tx/Rx)** field displays the number of times a silence detection packet has been sent or received. VAD must be enabled.

#### *Silence Suppressed Packets (Tx) Field*

The **Silence Suppressed Packets (Tx)** field displays the number of packets never sent because the packets contained silence.

#### *Packet Interarrival Time (Min/Max) Field*

The **Packet Interarrival Time (Min/Max)** field displays the minimum and maximum time elapsed between packets being sent.

#### *Recent Bandwidth Use (Tx/Rx) Field*

The **Recent Bandwidth Use (Tx/RX)** field displays the amount of bandwidth used, in Kbytes per second, over the length of the call. This is calculated by the number of voice packets transmitted and received over the last 10 seconds.




---

### *Average Bandwidth Use (Tx/Rx) Field*

The **Average Bandwidth Use (Tx/Rx)** field displays the amount of bandwidth used, in Kbytes per second, over the length of the call. This is calculated by the number of voice packets transmitted and received and the length of the connection.

## **Errors Page**

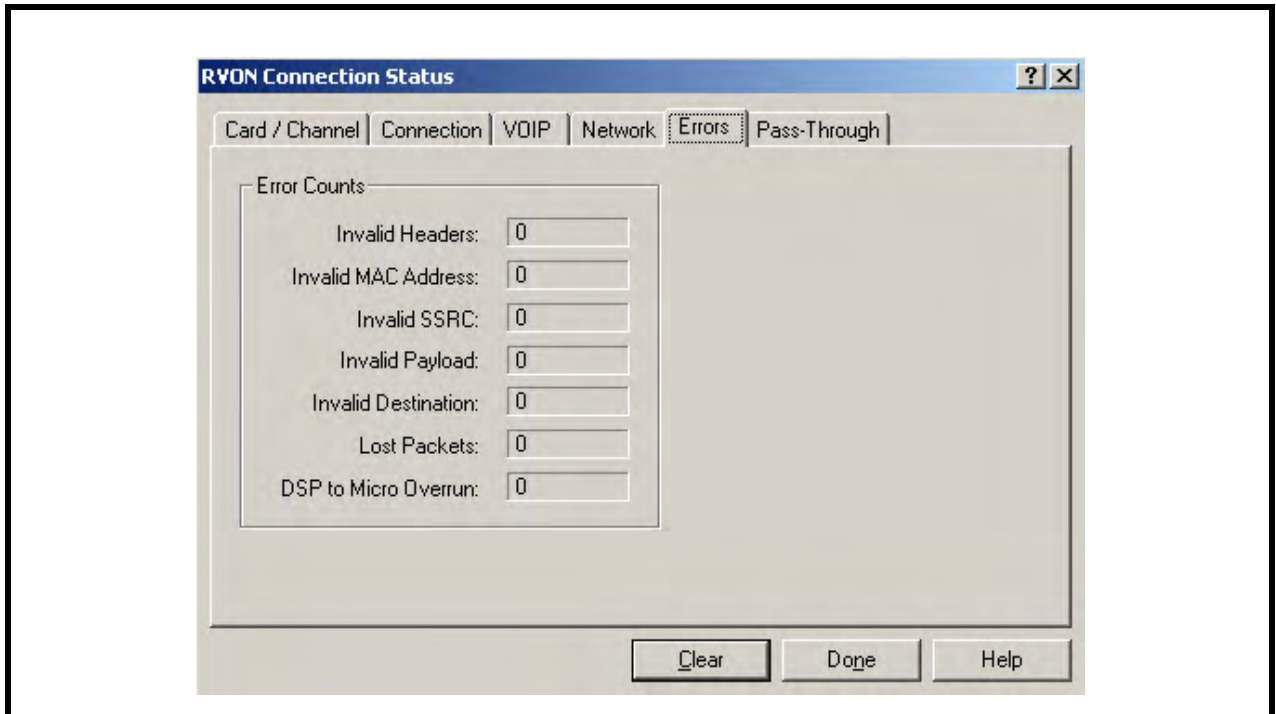

**FIGURE 209.** RVON Connection Status - Errors Page

---

### **Error Counts Group Box**

#### *Invalid Headers Field*

The **Invalid Headers** field displays the number of IP packets that could not be parsed.

#### *Invalid MAC Address Field*

The **Invalid MAC Address** field displays the number of invalid MAC Addresses that tried to connect to the RVON device.

#### *Invalid SSRC Field*

The **Invalid SSRC** field displays the number of packets with an invalid SSRC. The SSRC is an ID used to verify the validity of data packets being received.

#### *Invalid Payload Field*

The **Invalid Payload** field displays how many incorrectly formatted packets were received.

#### *DSP to Micro Overrun Field*

The **DSP to Micro Overrun** field displays the number of packets lost because the micro was too busy to receive.

---

### ***Invalid Destination Field***

The **Invalid Destination** field displays the number of invalid destinations received.

### ***Lost Packets field***

The **Lost Packets** field displays the number packets that were lost.

## **Pass-Through Page**

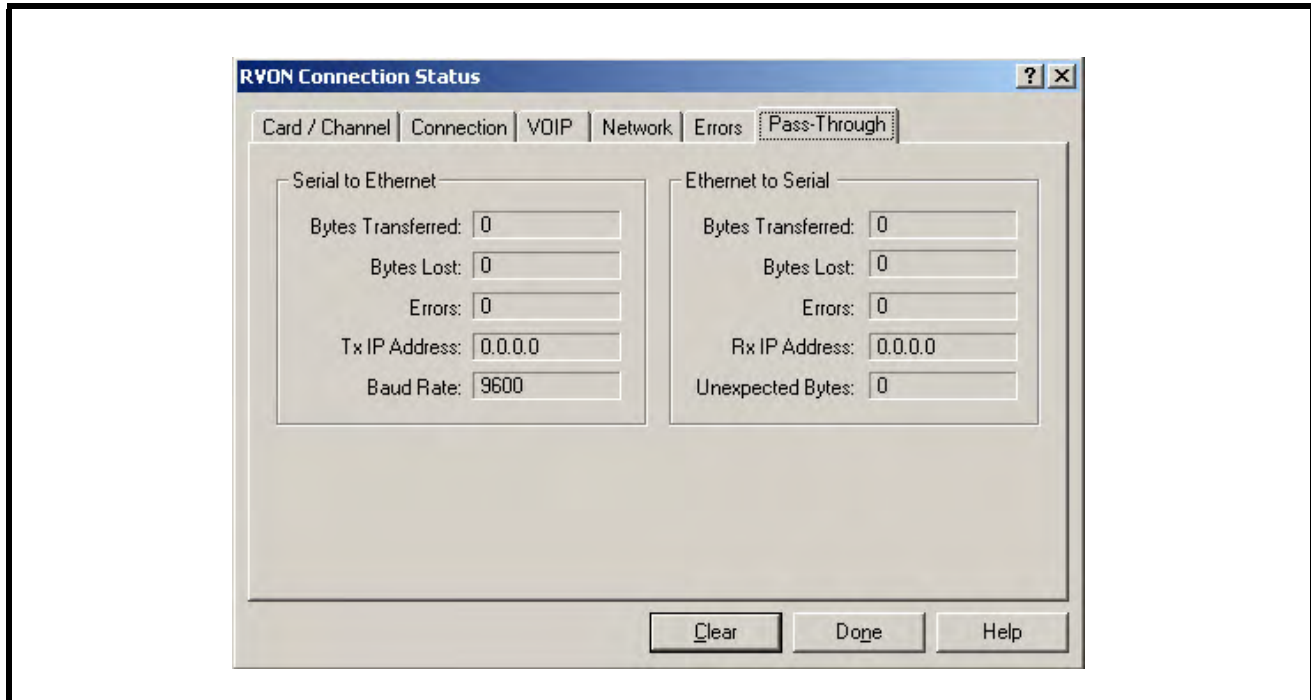


FIGURE 210. RVON Connection Status - Pass-Through Page

---

### **Serial to Ethernet Group Box**

The **Serial to Ethernet** information displays the serial data received on the serial connection and transferred to the Ethernet address of the card to which the serial data is sent.

#### ***Bytes Transferred Field***

The **Bytes Transferred** field displays the number of bytes transferred from the serial connection to Ethernet.

#### ***Bytes Lost Field***

The **Bytes Lost** field displays the number of bytes that could not be transferred.

#### ***Errors Field***

The **Errors** field displays the number of errors that occurred during transfer.

#### ***Tx IP Address Field***

The **Tx IP Address** field displays the IP Address of the card the serial data is sent to.

---

### ***Baud Rate Field***

The **Baud Rate** field displays the baud rate of the serial connection.

### **Ethernet to Serial Group Box**

The **Ethernet to Serial** information displays the serial data received on the Ethernet connection and transferred to the serial connection.

### ***Bytes Transferred Field***

The **Bytes Transferred** field displays the number of bytes transferred to the serial port.

### ***Bytes Lost Field***

The **Bytes Lost** field displays the number of bytes that could not be transferred.

### ***Errors Field***

The **Errors** field displays the number of errors that occurred during transfer.

### ***Rx IP Address Field***

The **Rx IP Address** field displays the IP Address from which data was last received via Ethernet (this address should match the Tx IP Address).

### ***Unexpected Bytes Field***

The **Unexpected Bytes** field displays the number of unexpected bytes of data. Unexpected bytes is data from an IP Address that is not the Tx IP Address. The bytes of data are considered unexpected bytes and are not transferred.

---

## Software Versions Windows

---

The **Software Versions** windows are used to view the versions of software currently running on your intercom system. There are four software versions windows in AZedit: Master Controller Version, I/O Card Version, Keypanel Version, and GPIO-16 Version.


**NOTE:** You can download software updates for a specific device from these windows.

---

### Master Controller Version Information Window

The **Master Controller Version Information** window, shown in Figure 211, is used to view the firmware version of the active master controller. You can also update the master controller firmware from this screen.

**NAVIGATION:** From the menu bar, select *Status/Software Versions/Master Controllers*.

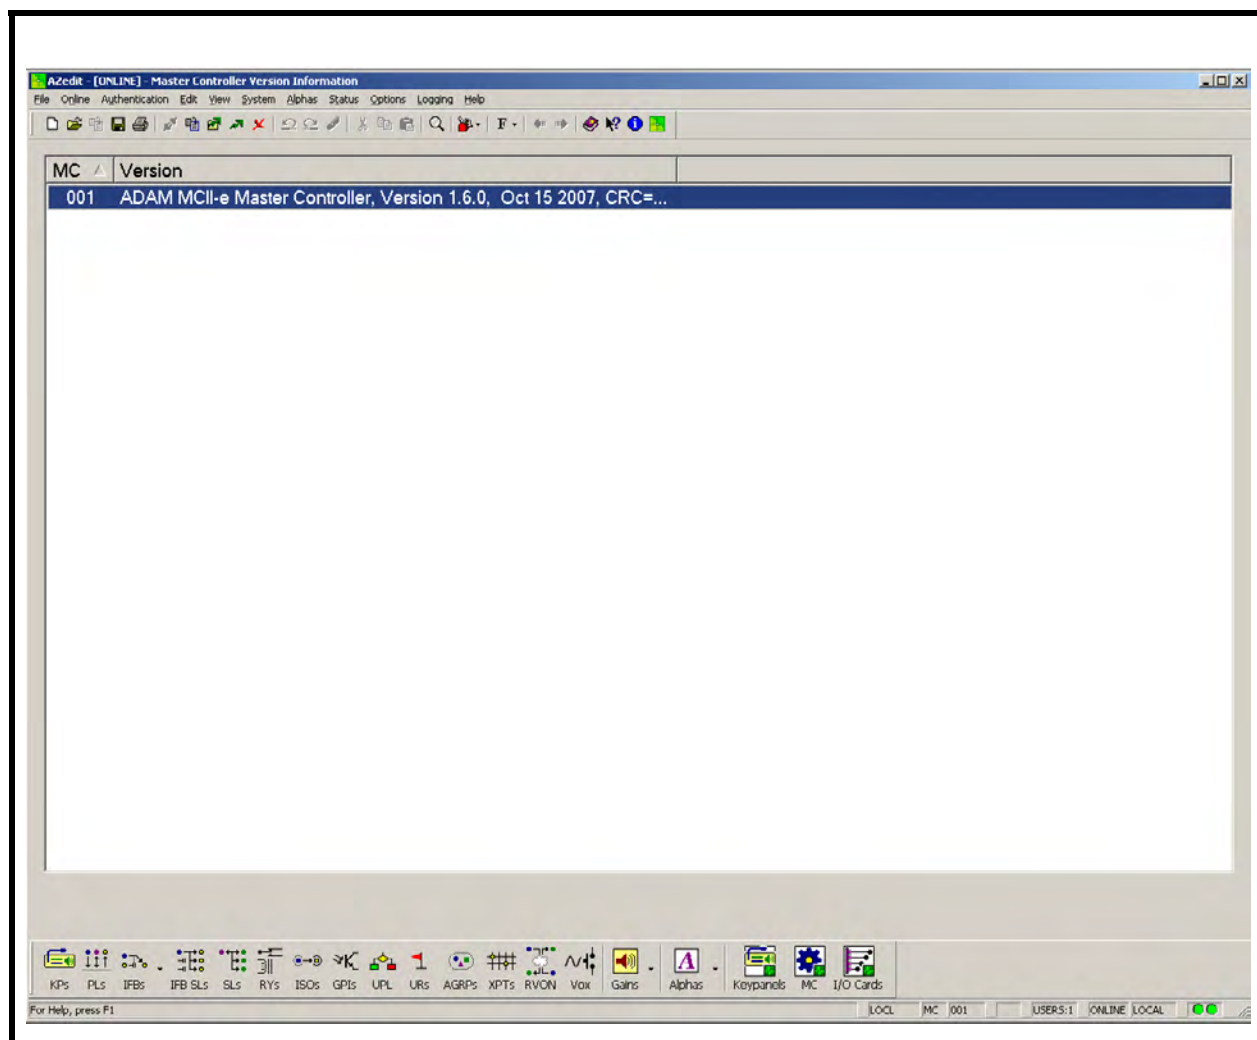

**FIGURE 211.** Master Controller Version Information Window

---

### MC Column

The MC column displays the master controller number.

---

## Version Column

The **Version** column displays the type of master controller, firmware version and build date.


**NOTE:** In the Zeus intercom systems there is only one master controller, and it is always the active master controller. In the ADAM and ADAM CS intercom systems there are two master controllers: the active master controller and the standby master controller. This screen displays the version information for only the active master controller. To find out the version information for the standby master, you can reset the active master controller card.

---

## I/O Card Version Information Window

The **I/O Card Version Information** window, shown in Figure 212, is used to view version information for the I/O cards in your intercom system. You can also download firmware updates to the cards from this window.

**NAVIGATION:** From the menu bar, select *Status/Software Versions/I/O Cards*.

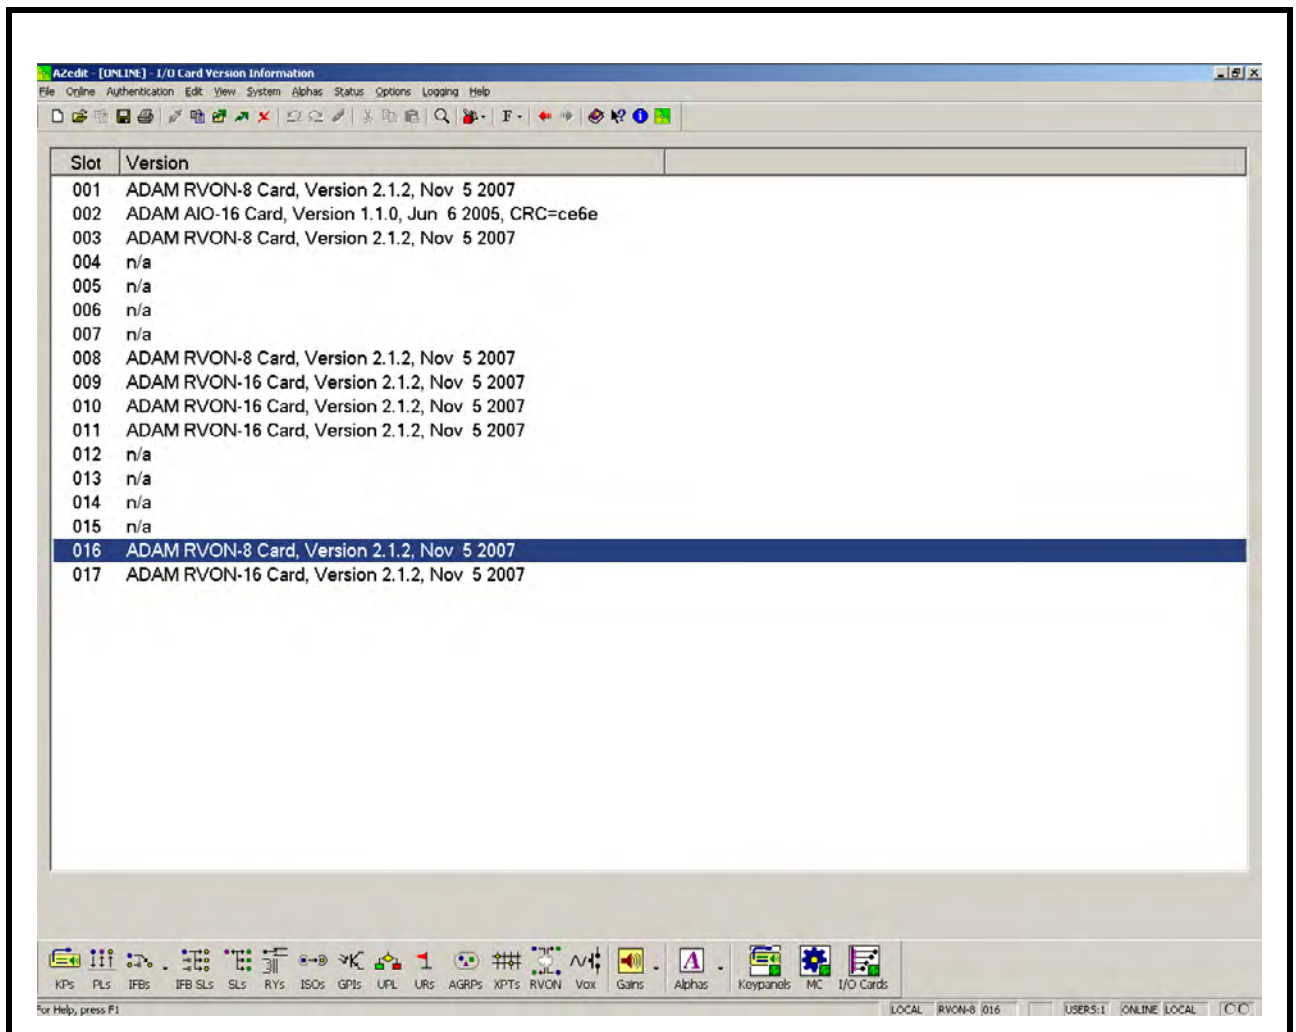

**FIGURE 212.** I/O Card Version Information Window

## Slot Column

The **Slot** column displays the slot an I/O card is occupying (for example, the AIO-16 card is in slot 2).

### Version Column

The **Version** column displays the firmware version and build date of the I/O card.

### Keypanel Version Information Window

The **Keypanel Version Information** window, shown in Figure 213, is used to view the port and version information for all the keypanels on the intercom system. You can also download firmware updates from this window.

**NAVIGATION:** From the menu bar, select *Status/Software Versions/Keypanels*.

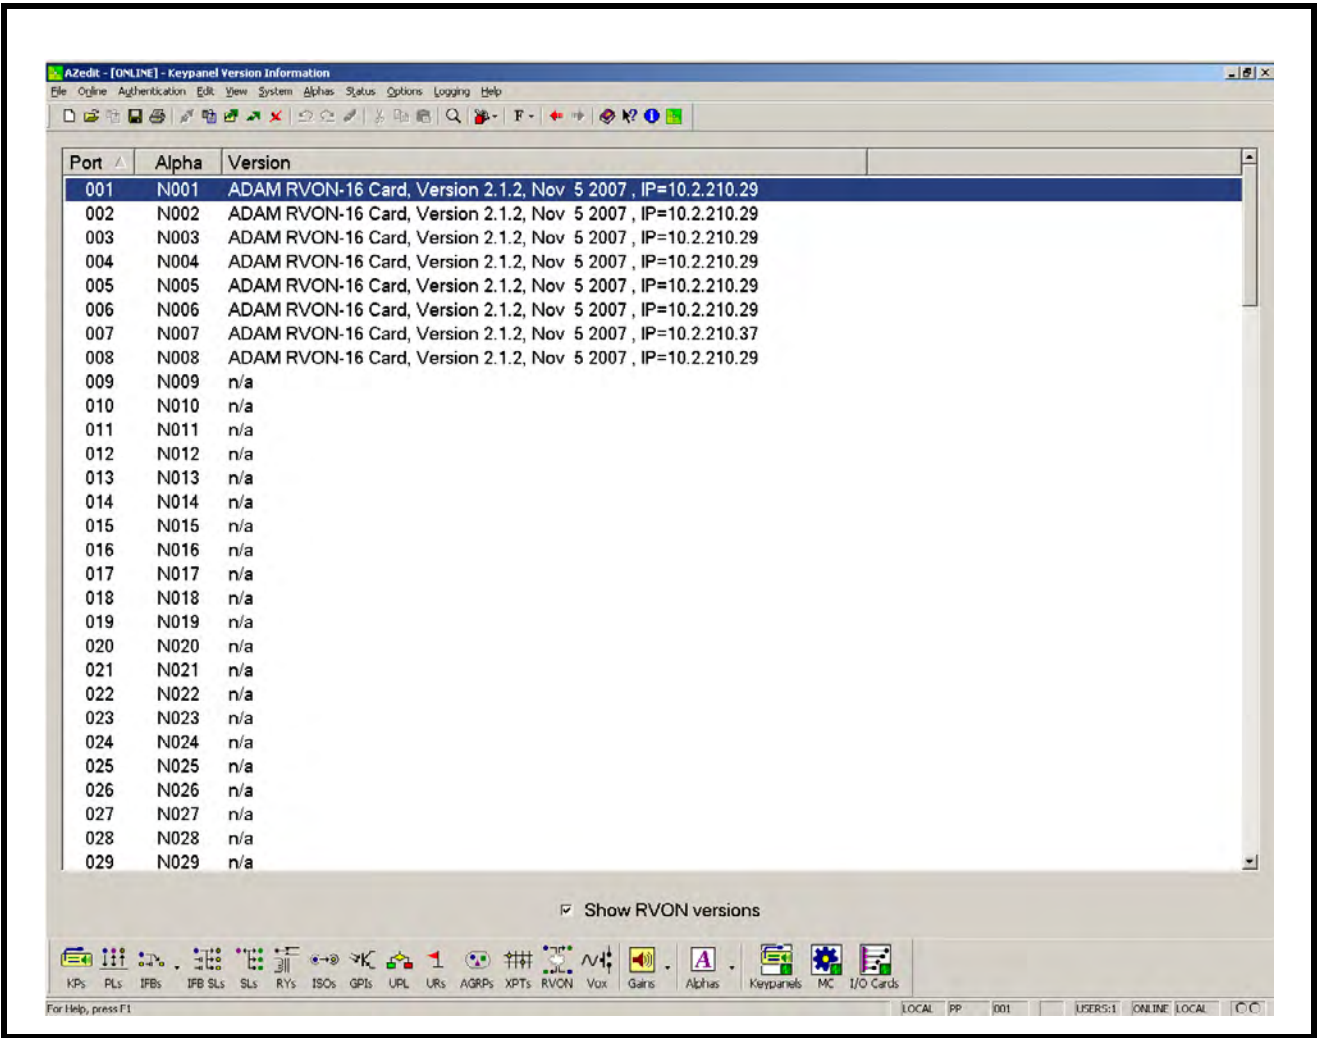


FIGURE 213. Keypanel Version Information Window

### Port Column

The **Port** column displays a list of all the ports in the intercom system.

### Alpha Column

The **Alpha** column displays a list of alphas assigned to the ports in the intercom system.

---

## Version Column

The **Version** column displays the selected keypanel's firmware version and build date

## Show RVON Versions Check Box


The **Show RVON Versions** check box is used to display the type of RVON card, the version, the firmware release date, and the IP Address of the card.

---

## GPIO-16 Version Information Window

The **GPIO-16 Version Information** window, shown in Figure 214, is used to view GPIO-16 device version information. You can also download firmware updates to the GPIO-16 device.

**NAVIGATION:** From the menu bar, select *Status/Software Versions/GPIO-16*.

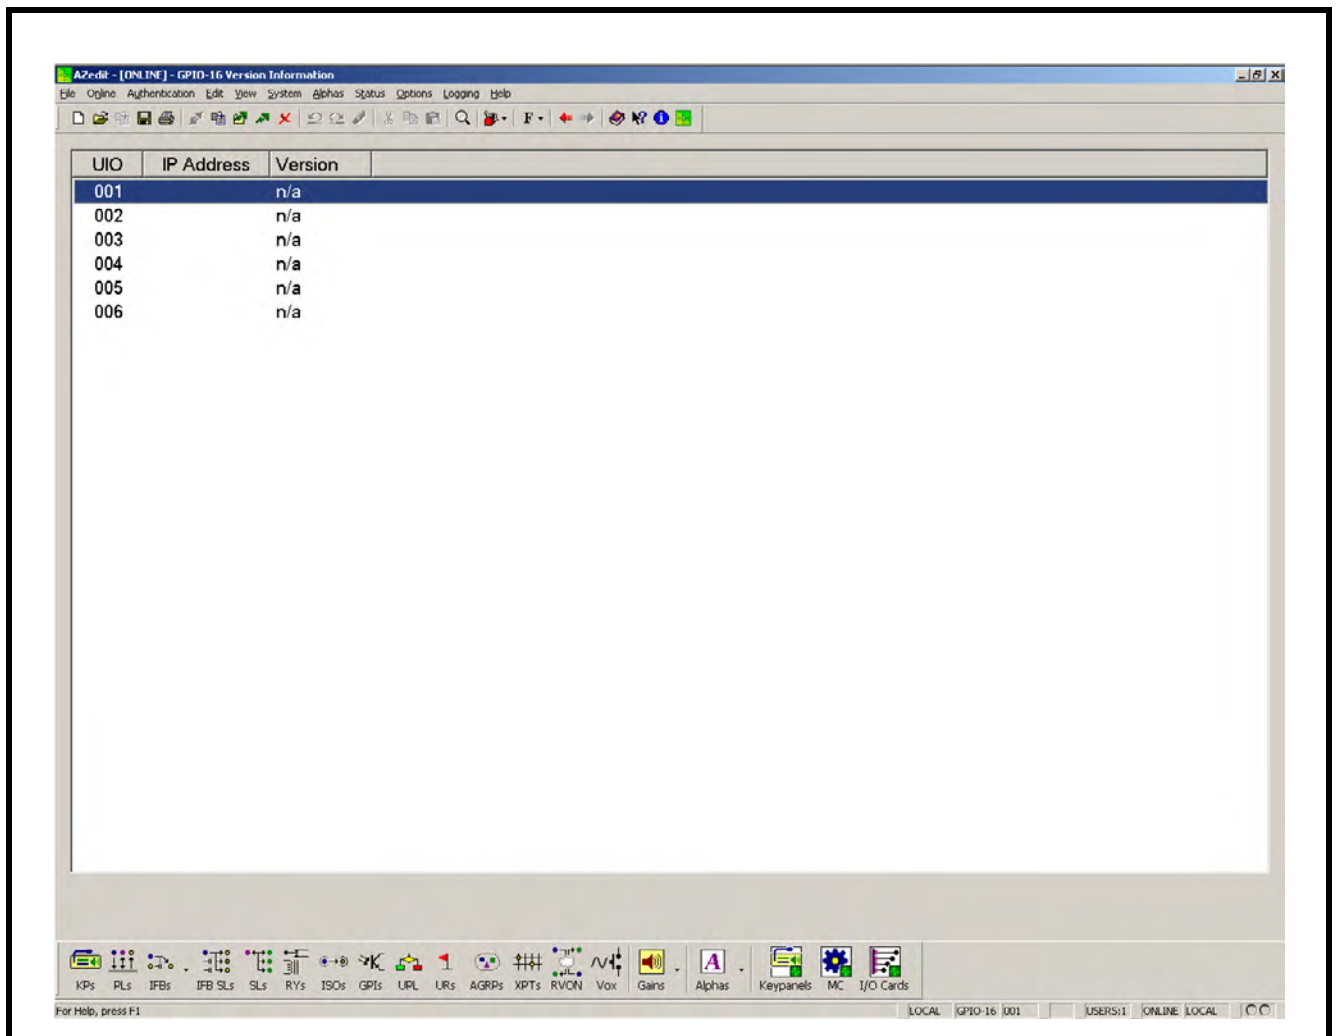

**FIGURE 214.** GPIO-16 Version Information Window

---

## UIO Column

The **UIO** column displays a list of GPIO-16s in the ADAM system.

---

## IP Address Column

The **IP Address** column displays the IP Address assigned to the GPIO-16 device.

## Version Column

The **Version** column displays the version of the selected GPIO-16 device.

---

## Log Viewer Window

The **Log Viewer** window, shown in Figure 215, is used to record intercom key activations and deactivations. Each time a key is pressed or released, a new record is created. Log Viewer is the name of the program used to record logging. It is included with AZedit.

**NOTE:** In version 3.0 and higher, the setup folders are not version specific; therefore, they appear under C:\TELEX\AZedit, in previous versions, they would be housed under each version. As upgrades of AZedit are installed, existing log files do not have to be moved to a new location. Use the Logging page (*Options/Preferences*) to change the log file location, if desired.

The Logging menu (in the menu bar at the top of the application window) contains the following items:

- |                          |                                                                                                                                                                                                                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>View Log -</i>        | This runs Log Viewer. Here you can open and view log files. You can monitor intercom activity by watching the new records appear in the log.                                                                                                                                                                          |
| <i>Disable Logging -</i> | This stops Log Viewer from recording any intercom key activity.                                                                                                                                                                                                                                                       |
| <i>Log to File -</i>     | This starts the Log Viewer recorder. Log Viewer automatically creates a log file as soon as key activity begins. It then appends each new record to the log file. Log Viewer names the file according to the format year/month/day .log, for example: 991201.log would be the log file created for December 01, 1999. |

By default, Log files are stored in the folder C:\TELEX\AZedit\LOG.

**NAVIGATION:** From the menu bar, select *Logging/View Log*.

To **specify a folder in a different location**, do the following:

1. From the Options menu, select **Preferences**.  
*The Preferences notebook opens.*
2. Click **Logging**.  
*The logging page appears.*
3. In the Log Files (.LOG): field, specify the **path** where you want to save log files. Example change: c:\Telex\AZedit\
4. Click **Apply**.
5. Click **OK**.

## Log to Serial Port

This is only available for ADAM CS and ADAM Intercom Systems. It outputs the log data on a dedicated RS232 port of the intercom system. If you have the appropriate communications software to communicate with this port, you can use it to capture the logging text to a file or to monitor intercom activity. For the ADAM Intercom System, the dedicated logging port is located on J9 of the XCP-ADAM-MC Master Controller Breakout Panel: pin 3 is Rx and pin 8 is Tx. For the ADAM CS Intercom Frame, the dedicated logging port is located on J902: pin 3 is Rx and pin 8 is Tx. In either situation, the port parameters are 9600-baud, no parity, 8 data bits, 1 stop bit.



---

### ***Log Record Format***

The format for each log record is as follows:

[yyymmdd] [hhmmssff] [nnn-aaaa] [mm-ff-nnn-aaaa] [xx]

Brackets delimit the data fields in each record, and the data in the fields are as follows:

Yy/mm/dd > Date

Hh:mm:ss.ff > Time (ff = frames)

nnn-aaaa > requester's port number and corresponding 4-character alpha

mm-ff-nnn-aaaa > target matrix number, function type, function number, function alpha. (Target matrix number 00 means the local matrix.)

xx > one of the 4 pairs TY, TN, LY, or LN, where T=talk, L=Listen, Y=yes (key on), and N=no (key off)

Example: if a keypanel at intercom port 4 with alpha "DIR" calls local party line 3 with alpha "CAM", the following might be logged:

[99/12/01] [17:22:04.13] [004-DIR] [00-PL-003-CAM] [TY]

[99/12/01] [17:22:24.08] [004-DIR] [00-PL-003-CAM] [TN]

There are some peculiarities when it comes to trunking.

#### **Example:**

Suppose Hap calls Biff (a point-to-point in a different matrix). A line such as the following might be logged:

[99/12/01] [17:23:09.00] [017-HAP] [07-PP-103-BIFF] [TY]

One or two lines that connect Hap to a trunk might then follow this. The following line might get added:

[99/12/01] [17:23:09.00] [041-TK19] [00-PP-017-HAP] [LY]

This reflects that port 41 (trunk 19) effectively turned on a listen key assigned to Hap so that the trunk could hear Hap, i.e. so that Hap's audio is fed to the trunk.

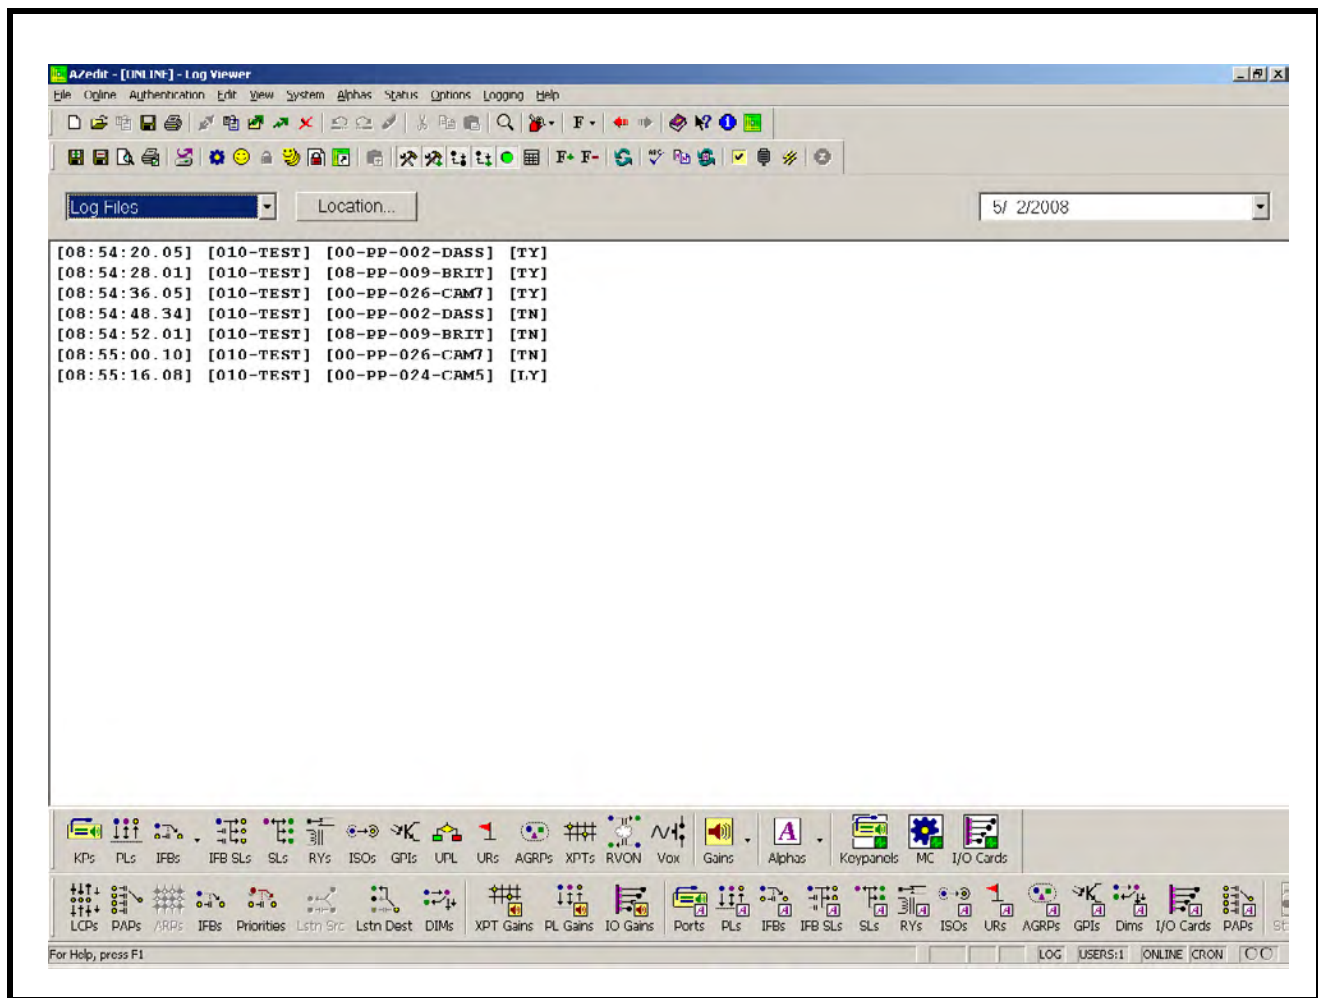


FIGURE 215. Log Viewer Window

## Log File Type Drop Down Menu

The **Log File Type** drop down menu indicates the choice between *Log Files* and *SERVER Mode Log Files*.

- Log Files are logs generated in ONLINE and FILE mode.
- SERVER Mode Logs are generated while in SERVER Mode.

## Location Browse Button

The **Location Browse** button allows users to navigate to where the log files are written (either in the Telex file on the PC's hard drive or a network share drive).

## Date Drop Down Calendar

The **Date** drop down calendar specifies a date in which to look for log files.

## Log View Field

The **Log View** field is used to see the different logs written. Double-click any log to view the contents.

---

## Miscellaneous Windows

---

---


### Keypanel Screen Saver Window

---

The **Keypanel Screen Saver** window, shown in Figure 216, is used to set the time and display for the screen saver, seen in the display window on the keypanel.

**NOTE:** Screen saver mode can only be used with the KP-32 family of keypanels and is activated at the keypanel. Keypanels must have firmware version 2.06 or higher to use this feature.

**NAVIGATION:** From the menu bar, select *System/Miscellaneous/Keypanel Screen Saver*.

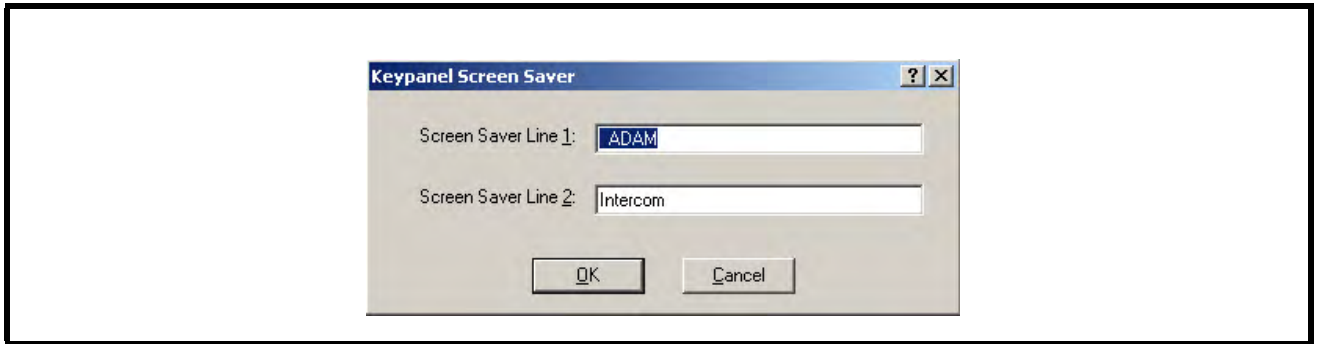

**FIGURE 216.** Keypanel Screen Saver Window

---

#### Screen Saver Line 1 Field

The **Screen Saver Line 1** field displays the first line of the screen saver message seen on the keypanel display. When the screen saver option is enabled, it automatically displays when the keypanel has not been in use. There are two lines for you to type your screen saver message.

This field accepts up to *40 characters*.

#### Screen Saver Line 2 Field

The **Screen Saver Line 2** field displays the second line of the screen saver message seen on the keypanel display. When the screen saver option is enabled, it automatically displays when the keypanel has not been in use.

This field accepts up to *40 characters*.

#### OK Button

The **OK** button is used to accept the screen saver message and close the window.

#### Cancel Button

The **Cancel** button is used to close the screen saver window without saving the screen saver message.

---

To **create/change the screen saver display**, do the following:

1. From the System menu in AZedit, select **Miscellaneous**.  
*A popup menu appears.*
2. From the Miscellaneous popup menu, select **Keypanel Screen Saver**.  
*The Keypanel Screen Saver window appears.*
3. In the Screen Saver Line 1 field, enter a **message** (up to 40 characters).
4. In the Screen Saver Line 2 field, enter a **message** (up to 40 characters), if desired.

**NOTE:** The KP-32 family of keypanels has a screen saver delay feature that can only be configured at the keypanel.

To **set the screen saver delay time**, do the following:

1. On the KP-32 keypanel (or KP-632/KP-832), press **Menu**.  
*Display appears in the keypanel display.*
2. Press ↓ ↓ to scroll to Service.
3. Press **PGM**.  
*Aux Inputs appears in the keypanel display.*
4. Press ↓ ↓ to scroll to Scr Saver.
5. Press **PGM**.  
*Delay appears in the keypanel display.*

**NOTE:** There are three (3) options to choose from this list: Delay, DSP Off, and Activate. When DSP Off is selected, the keypanel display turns OFF (press any key to reactivate the display). When Activate is selected, the screen saver is immediately enabled (press any key to reactivate the display).

6. Press **PGM**.  
*30 min appears in the keypanel display.*
7. Using ↓ ↓, scroll through the following time increments of inactivity on the keypanel before the screen saver is activated.

*30 min*

*1 hr*

*2 hr*

*4 hr*

*6 hr*

*8 hr*

*10 hr*


*12 hr*

---

## Keypanel Passwords Window

The **Keypanel Passwords** window, shown in Figure 217, is used to set a password for access to either the entire keypanel (Menu Access) or to just the service menu.

**NAVIGATION:** From the menu bar, select System|Miscellaneous|Keypanel Menu Passwords

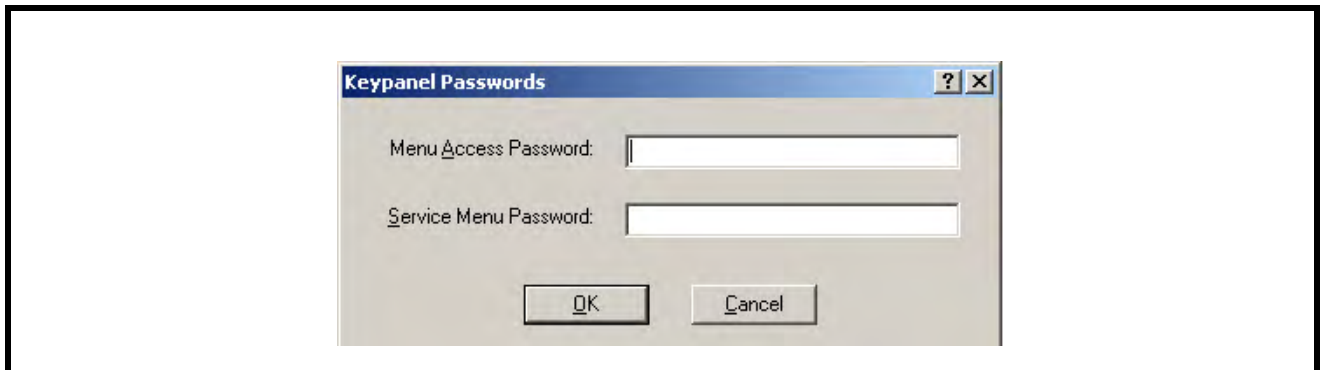

**FIGURE 217.** Keypanel Passwords Window

**NOTE:** The password is applied globally across the intercom system.

### Menu Access Password Field

The **Menu Access Password** field indicates the password needed to access the entire keypanel menu. Asterisks (\*) are used for security purposes when entering the password.

This field can be up to *32 characters* long.

### Service Menu Password Field

The **Service Menu Password** field indicates the password needed to access the service menu on the keypanel. All other menus are accessible. Asterisks (\*) are used for security purposes when entering the password.

This field can be up to *32 characters* long.

### OK Button


The **OK** button is used to accept the password entries and close the window. You must Send (Edit|Send Changes) your changes to the intercom, when completed.

### Cancel Button

The **Cancel** button is used to close the window without accepting the password entries.

---

To **configure password protect on the keypanel menu or keypanel service menu**, do the following:


1. From the System menu in AZedit, select **Miscellaneous**.  
*A popup menu appears.*
2. From the Miscellaneous popup menu, select **Keypanel Menu Password**.  
*The Keypanel Passwords window appears.*
3. In either the Menu Access or Service Menu Password field, enter a **password** (up to 32 characters).
4. Click **OK**.  
*The password is in temporary memory.*
5. Click the **Activate** icon  to send the changes to the intercom.

---

## Select Intercom Window

The **Select Intercom** window, shown in Figure 218, is used to select the intercom system you want to run.

**NAVIGATION:** From the menu bar, select *Authentication/Change Intercom...*

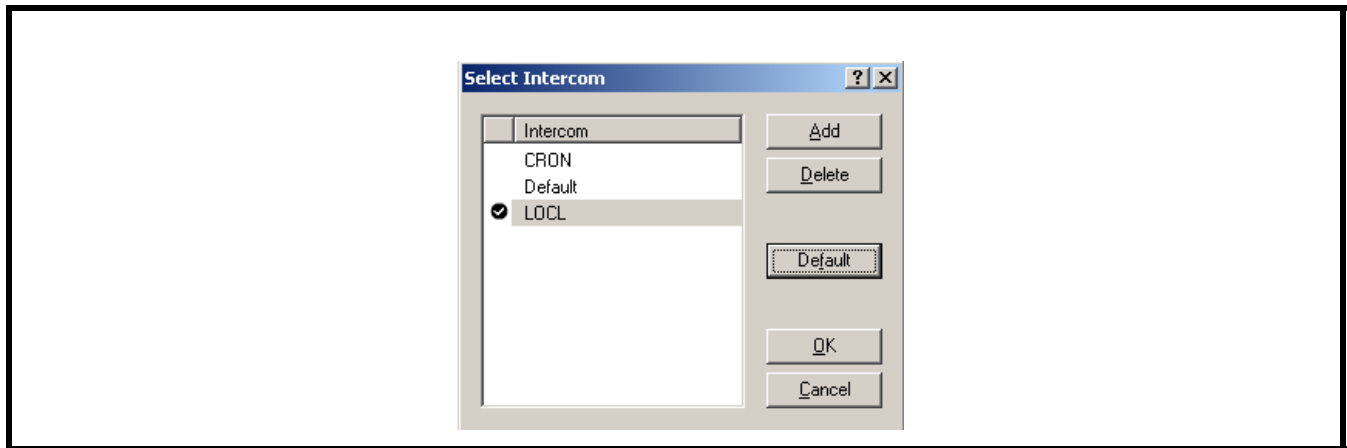

**FIGURE 218.** Select Intercom Window

---

### Intercom Column

The **Intercom** column displays a selectable list of intercom systems to which a user may log on.

### Add Button

The **Add** button opens the Add Intercom window. For more information, see “Add Intercom Window” on page 243.

### Delete Button

The **Delete** button deletes the highlighted intercom from the Intercom column.

### Default Button

The **Default** button indicates the default intercom system. The default intercom is designated by a check mark icon.

### OK Button

The **OK** button applies the selections made and closes the window.

---

## Cancel Button

The **Cancel** button discards the selections made and closes the window.

---

## Add Intercom Window

The **Add Intercom** window, shown in Figure 219, is used to configure an intercom system to be selectable from the Select Intercom window.

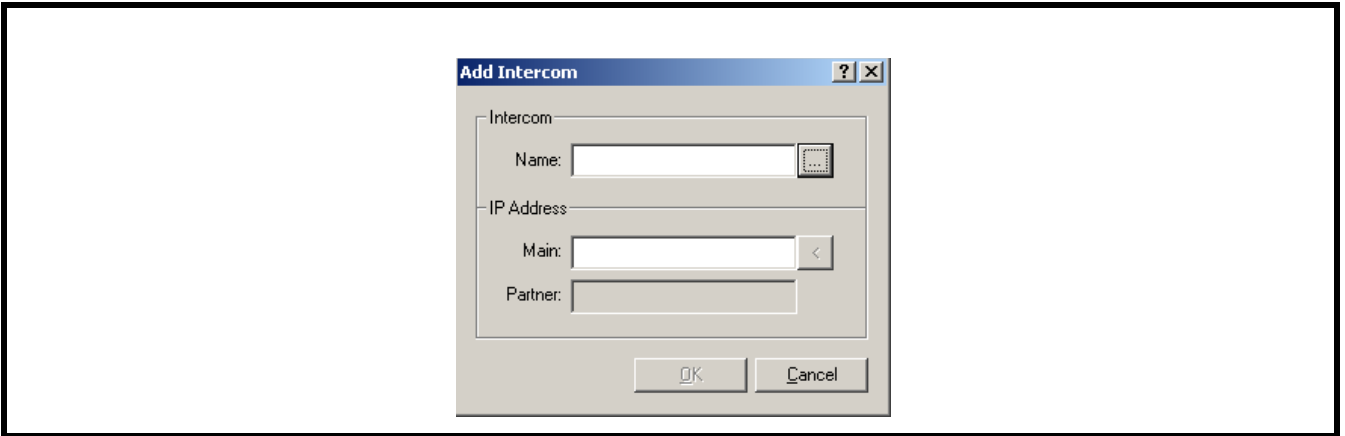


FIGURE 219. Add Intercom Window

---


## Intercom Group Box

### Name Field

The Name field identifies the name of an intercom. Use this field to enter the name you want to call the intercom. You can also use the browse button to pick the intercom from a list.

### Browse Button

The **Browse** button opens the Available Intercoms window from which the user may select an intercom to add to the available list.

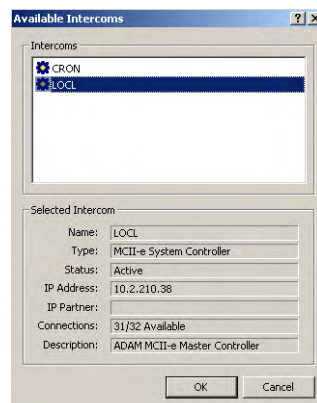

**NOTE:** You must be connected to the Matrix to be able to use the browse button.

---

## **IP Address Group Box**

### **Main Field**

The **Main** field identifies the main IP Address for the intercom. The Main IP Address is the IP Address given to the Active Master Controller. If you do not know the IP Address, you can browse to find the machine you want to configure.

When connected to the network with Ethernet, an intercom system has two Master Controllers (the Active and Standby). The Standby Master Controller acts as the Active Master Controller's backup in failover protection.

**NOTE:** There are two IP Addresses AZedit can use to contact the intercom system – Main and Partner. If AZedit gets no response from one of the IP Addresses, then it switches to the other IP Address.

### **Browse Button**

The **Browse** button is used to search for the Intercom listed in the Name field, and then fill in the IP Address in the Main field. This is an alternate way to search for the IP Address, rather than using the Name field browse button to search on the Available Intercom screen.

### **Partner Field**

The **Partner** field identifies the partner IP Address. The Partner IP Address is the IP Address given to the Standby Master Controller.

When connected to the network with Ethernet, an intercom system has two Master Controllers (the Active and Standby). The Standby acts as the Active Master Controller's backup.

**NOTE:** There are two IP Addresses that AZedit can use to contact the intercom system – Main and Partner. If AZedit gets no response from one of the IP Addresses, then it switches to the other IP Address.

### **OK Button**

The **OK** button saves the information entered and closes the window.

### **Cancel Button**

The **Cancel** button discards the information entered and closes the window.




---

## Select User Window

The **Select User** window, shown in Figure 220, is used to select the user profile you want to log on to the intercom system with.

**NAVIGATION:** From the menu bar, select *Authentication/Change User...*

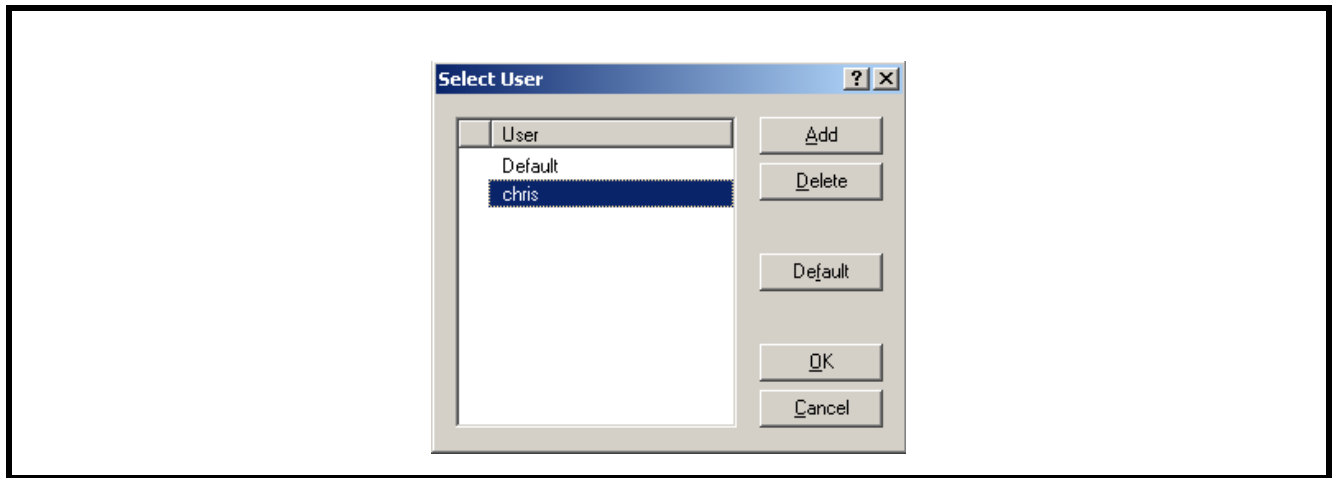

**FIGURE 220.** Select User Window

---

### User Column

The **User** column displays a list of current users. You can select a user by highlighting the name and clicking **OK**.

### Add Button

The **Add** button opens the Add Users window, see “Add User Window” on page 246, where user profiles may be added to the user column.

### Delete Button

The **Delete** button deletes the highlighted user profile from the User column.

### Default Button

The **Default** button indicates the default user profile for the intercom system. The default user profile is designated by a check mark icon.

### OK Button

The **OK** button applies the selection and closes the window.


### Cancel Button

The **Cancel** button discards the selection and closes the window.

---

## Add User Window

The **Add User** window, shown in Figure 221, is used to add users to the selectable list on the Select User window.

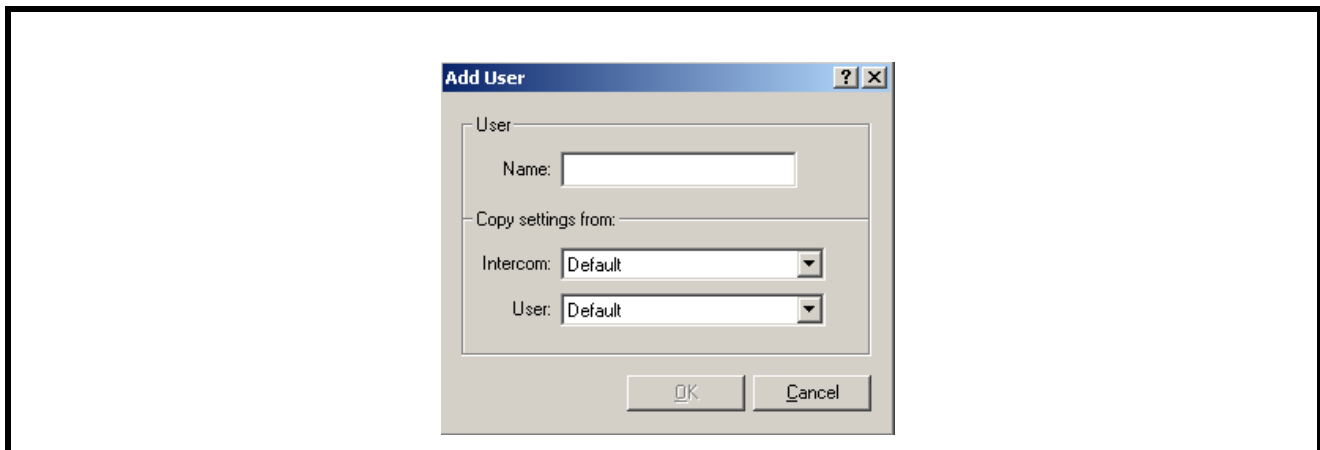

**FIGURE 221.** Add User Window

---

### User Group Box

#### **Name Field**

The **Name** field is used to enter the name of the user you want to add to the intercom system. This field allows up to *24 characters*.

### Copy Settings From Group Box

#### **Intercom Drop Down Menu**

The **Intercom** drop down menu is used to select an existing intercom setting you want copy and apply to the new user profile.

#### **User Drop Down Menu**

The **User** drop down menu is used to select an existing user profile you want to copy and apply to the new user profile.

#### **OK Button**

The **OK** button applies the entered information and closes the window.

#### **Cancel Button**

The **Cancel** button discards the entered information and closes the window.

---

## Connected Users Window

The **Connected Users** window, shown in Figure 222, is used to view all users currently logged on to the current intercom system.

**NOTE:** In the status bar at the bottom of the page, you can also see the number of users logged into the intercom system.

**NAVIGATION:** From the menu bar, select *Authentication/Show Connected Users...*

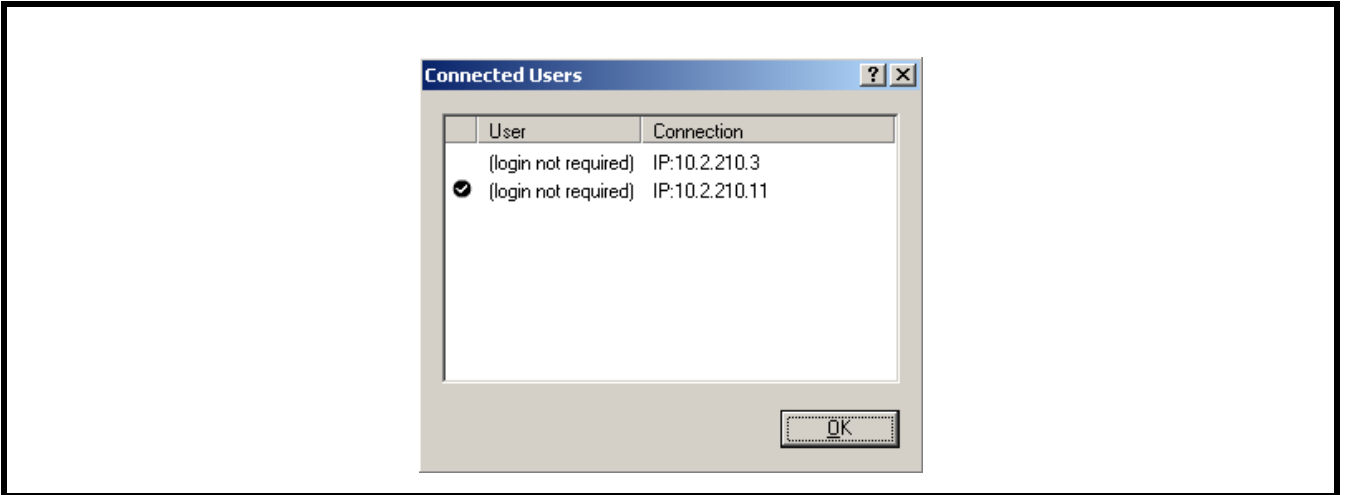


FIGURE 222. Connected Users Window

### User Column

The **User** column displays the name of the user names of current users logged onto AZedit.

### Connection Column

The **Connection** column displays the IP Address of the user listed.

### OK Button


The **OK** button closes the Connected Users window.

---

## Create Desktop Shortcut Window

The **Create Desktop Shortcut** window, shown in Figure 223, is used to create a shortcut icon on your computer desktop. Use the Create Shortcut screen to create a shortcut to the AZedit session. This is useful when you have multiple AZedit sessions configured on one terminal.

**NAVIGATION:** From the menu bar, select *Authentication/Create Shortcut...*

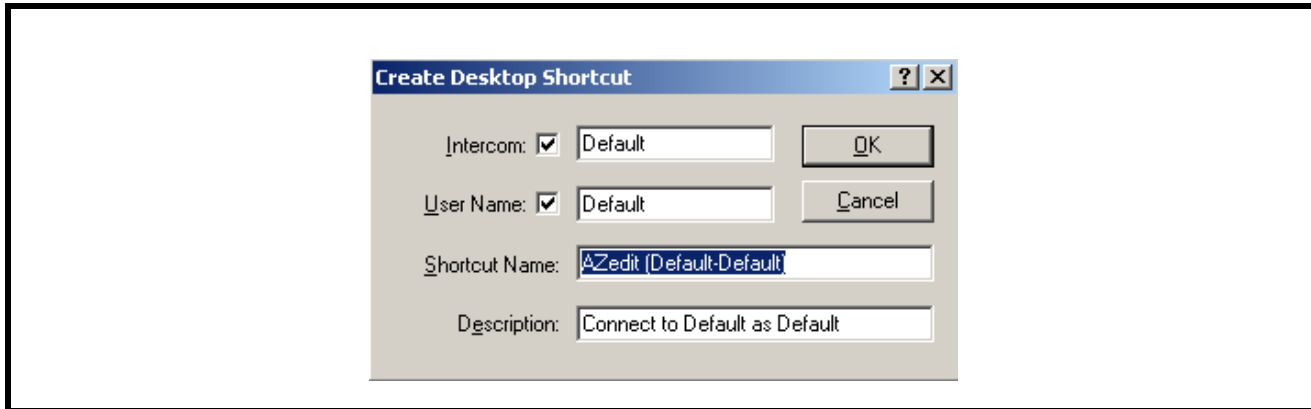

**FIGURE 223.** Create Desktop Shortcut Window

---

### Intercom Check Box

The **Intercom** check box indicates the Intercom name displays in the shortcut name on the desktop.

### Intercom Field

The **Intercom** field is used to enter the name of the intercom. By default, the name of the current intercom appears in the Intercom field. You can change this name to display any name you want to appear, however, if the name you enter is not a valid intercom name it does not connect without prompting you to select a configured intercom.

### User Name Check Box

The **User Name** check box indicates the user name should display in the shortcut name.

### User Name Field

The **User Name** field displays the user name you see in the shortcut, if applicable. By default, *Default* appears in the User Name field. You can change this name to display any name you want to appear.

### Shortcut Name Field

The **Shortcut Name** field displays what is seen when the shortcut is created. By default, the intercom name and user name are shown. You can change this to anything you want to display regardless of selections made for displaying the Intercom and User Name check boxes.

### Description Field

The **Description** field displays a description of the shortcut that is created. By default, the description displays the intercom and the user that are connected. You can change this to display a more meaningful description.

### OK Button

The **OK** button accepts the modifications, closes the window, and creates a shortcut on the desktop.

---

## Cancel Button


The **Cancel** button discards the modifications and closes the window without creating a shortcut on the desktop.

---

## *Cronus Passwords Window*

The **Cronus Passwords** window, shown in Figure 224, is used to set a password for access to the Cronus front panel menu.

**NAVIGATION:** From the menu bar, select *System/Miscellaneous/Cronus Password*.

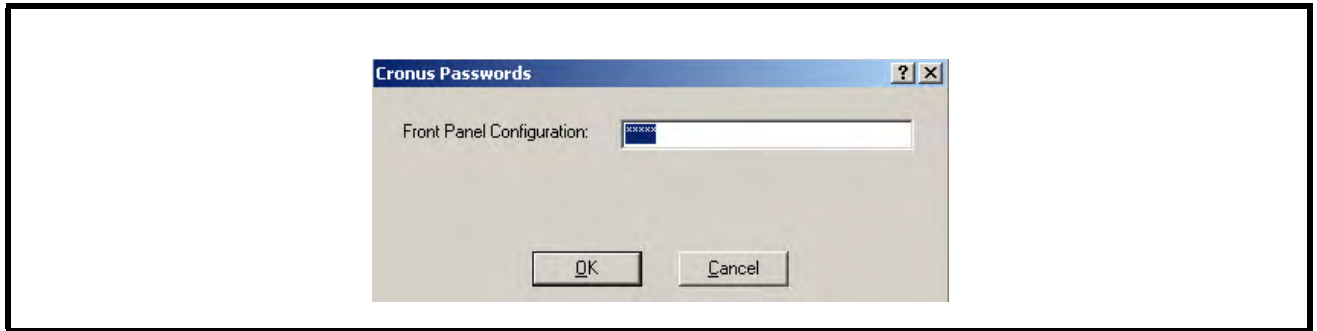

**FIGURE 224.** Cronus Passwords Window

---

## Front Panel Configuration Field

The **Front Panel Configuration** field identifies the Cronus front panel password. Passwords can be up to *20 characters* long and any alphanumeric combination. When entered they show up as asterisks (\*), for security purposes.

## OK Button

The **OK** button is used to accept the password and close the window. You must Send (Edit|Send Changes) your changes to the intercom, when completed.

## Cancel Button

The **Cancel** button is used to cancel the password and close the window.

---

## ***AZedit Utilities***

---

AZedit has many features to help save time in daily maintenance and upkeep of your intercom system. The following is a list of these utilities:

*Paste Special*

*Partial Save*

*Send Changes*

*Refresh Alphas*

*Duplicate Alphas*

*Search for Key Assignment*

*Key Assignment Grid*

*Keypanel Print Options*

---

## Paste Special Window

The **Paste Special** window, shown in Figure 225, gives you greater control over pasting than you get when using the Paste command. You can paste portions of the Windows Clipboard to a screen. On the other hand, you can paste to multiple screens.

**NAVIGATION:** From the menu bar, select *Edit/Paste Special*.

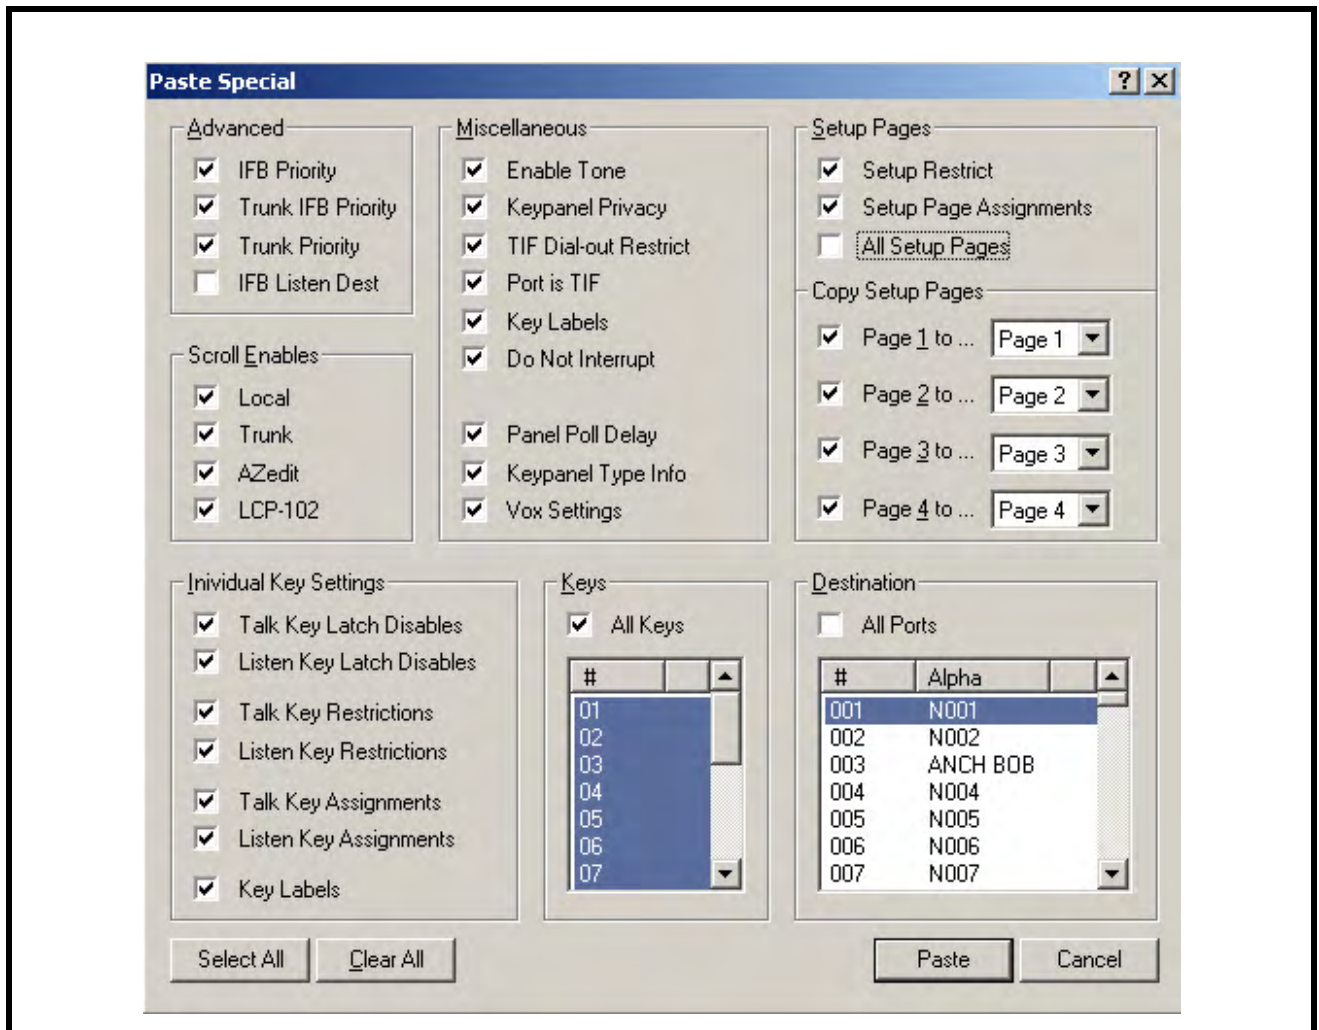


FIGURE 225. Paste Special Window

### Advanced Group Box

#### IFB Priority Check Box

The **IFB Priority** check box is used to instruct AZedit to paste the configured IFB priorities to a new or existing setup. When selected, IFB priorities are included in the Paste operation.

#### Trunk IFB Priority Check Box

The **Trunk IFB Priority** check box is used to instruct AZedit to paste the configured trunk IFB priorities to a new or existing setup. When selected, trunk IFB priorities are included in the Paste operation.

---

## **Trunk Priority Check Box**

The **Trunk Priority** check box is used to instruct AZedit to paste the configured trunk priorities to a new or existing setup. When selected, trunk priorities are included in the Paste operation.

## **IFB Listen Dest Check Box**

The **IFB Listen Dest** check box is used to instruct AZedit to paste the configured IFB listen destinations to a new or existing setup. When selected, IFB listen destinations are included in the Paste operation.

## **Scroll Enables Group Box**

### **Local Check Box**

The **Local** check box is used to instruct AZedit to paste the configured Local scroll enable settings to a new or existing setup. When selected, Local scroll enable settings are included in the Paste operation.

### **Trunk Check Box**

The **Trunk** check box is used to instruct AZedit to paste the configured Trunk scroll enable settings to a new or existing setup. When selected, Trunk scroll enable settings are included in the Paste operation.

### **AZedit Check Box**

The **AZedit** check box is used to instruct AZedit to paste the configured AZedit scroll enable settings to a new or existing setup. When selected, AZedit scroll enable settings are included in the Paste operation.

### **LCP-102 Check Box**

The **LCP-102** check box is used to instruct AZedit to paste the configured LCP-102 scroll enable settings to a new or existing setup. When selected, LCP-102 scroll enable settings are included in the Paste operation.

## **Individual Key Settings Group Box**

The **Individual Key Settings** group box identifies many of the individual key settings you can configure on keypanels. These settings can be included in a Paste operation.

### **Talk Key Latch Disables Check Box**

The **Talk Key Latch Disables** check box is used to instruct AZedit to paste the configured talk key latch disables to a new or existing setup. When selected, talk key latch disables are included in the Paste operation.

### **Listen Key Latch Disables Check Box**

The **Listen Key Latch Disables** check box is used to instruct AZedit to paste the configured listen key latch disables to a new or existing setup. When selected, listen key latch disables are included in the Paste operation.

### **Talk Key Restrictions Check Box**

The **Talk Key Restrictions** check box is used to instruct AZedit to paste the configured talk key restrictions to a new or existing setup. When selected, talk key restrictions are included in the Paste operation.

### **Listen Key Restrictions Check Box**

The **Listen Key Restrictions** check box is used to instruct AZedit to paste the configured listen key restrictions to a new or existing setup. When selected, listen key restrictions are included in the Paste operation.



---

### **Talk Key Assignments Check Box**

The **Talk Key Assignments** check box is used to instruct AZedit to paste the talk key assignments to a new or existing setup. When selected, the talk key assignments are included in the Paste operation.

### **Listen Key Assignments Check Box**

The **Listen Key Assignments** check box is used to instruct AZedit to paste the listen key assignments to a new or existing setup. When selected, the listen key assignments are include in the Paste operation.

### **Key Labels Check Box**

The **Key Labels** check box is used to instruct AZedit to paste individual keypanel key labels to a new or existing setup. When selected, key labels are included in the Paste operation.

---

### **Miscellaneous Group Box**

#### **Enable Tone Check Box**

The **Enable Tone** check box is used to instruct AZedit to paste the enable tone settings for the port to a new or existing setup. When selected, enable tone settings are included in the Paste operation.

#### **Keypanel Privacy Check Box**

The **Keypanel Privacy** check box is used to instruct AZedit to paste keypanel privacy settings for the port to a new or existing setup. When selected, keypanel privacy settings are included in the Paste operation.

#### **TIF Dial-out Restrict Check Box**

The **TIF Dial-out Restrict** check box is used to instruct AZedit to paste TIF dial-out restrict settings for the port to a new or existing setup. When selected, TIF dial-out restrict settings are included in the Paste operation.

#### **Port is TIF Check Box**

The **Port is TIF** check box is used to instruct AZedit to paste the Port is TIF settings to a new or existing setup. When selected, the Port is TIF settings are included in the Paste operation.

#### **Key Labels Check Box**

The **Key Labels** check box is used to instruct AZedit to paste the key label settings for the port to a new or existing setup. When selected, the port key label setting is included in the Paste operation.

#### **Do Not Interrupt Check Box**

The **Do Not Interrupt** check box is used to instruct AZedit to paste the do not interrupt settings for the port to a new or existing setup. When selected, the do not interrupt settings are included in the Paste operation.

#### **Panel Poll Delay Check Box**

The **Panel Poll Delay** check box is used to instruct AZedit to paste the panel poll delay settings for the port to a new or existing setup. When selected, the panel poll delay settings are included in the Paste operation.

#### **Keypanel Type Info Check Box**

The **Keypanel Type Info** check box is used to instruct AZedit to paste the keypanel type information to a new or existing setup. When selected, the keypanel typeinformation is included in the Paste operation.

---

## Vox Settings Check Box

The **Vox Settings** check box is used to instruct AZedit to paste the vox settings for the port to a new or existing setup. When selected, the vox settings are included in the Paste operation.

## Setup Pages Group Box

### Setup Restrict Check Box

The **Setup Restrict** check box is used to instruct AZedit to copy the setup restricts information from the setup page information to the new or existing setup. When selected, the setup restricts information is included in the Paste operation.

### Setup Page Assignments Check Box

The **Setup Page Assignments** check box is used to instruct AZedit to copy the setup page assignments information from the setup page information to a new or existing setup. When selected, the setup page assignments are included in the Paste operation.

### All Setup Pages Check Box

The **All Setup Pages** check box is used to instruct AZedit to copy all setup pages to the new or existing setup. When selected, all setup pages are included in the Paste operation. Otherwise, you can select which setup pages to copy and paste. You can also direct where to paste setup pages (for example, you can paste setup page 1 into setup page 2 on the new or existing setup).

## Copy Setup Pages Group Box

**NOTE:** The All Setup Pages check box must not be selected for the Copy Setup Pages group box to be active.

### Page 1 to... Check Box

The **Page 1 to...** check box is used to select Page 1 to be included in the Paste operation. If selected, you can select where to paste page 1, using the Page drop down menu.

### Page Drop Down Menu

The **Page** drop down menu is used to select where you want to paste the Page 1 setup information.

Available selections are:

*none*

*Page 1*

*Page 2*

*Page 3*

*Page 4*

### Page 2 to... Check Box

The **Page 2 to...** check box is used to select Page 2 to be included in the Paste operation. If selected, you can select where to paste page 2, using the Page drop down menu.

---

## Page Drop Down Menu

The **Page** drop down menu is used to select where you want to paste the Page 2 setup information.

Available selections are:

*none*  
*Page 1*  
*Page 2*  
*Page 3*  
*Page 4*

## Page 3 to... Check Box

The **Page 3 to...** check box is used to select Page 3 to be included in the Paste operation. If selected, you can select where to paste page 3, using the Page drop down menu.

## Page Drop Down Menu

The **Page** drop down menu is used to select where you want to paste the Page 3 setup information.

Available selections are:

*none*  
*Page 1*  
*Page 2*  
*Page 3*  
*Page 4*

## Page 4 to... Check Box

The **Page 4 to...** check box is used to select Page 4 to be included in the Paste operation. If selected, you can select where to paste page 4, using the Page drop down menu.

## Page Drop Down Menu

The **Page** drop down menu is used to select where you want to paste the Page 4 setup information.

Available selections are:

*none*  
*Page 1*  
*Page 2*  
*Page 3*  
*Page 4*

---

## Keys Group Box

The **Keys** group box is used to select all keys or specific keys to include in the Paste operation.

---

## All Keys Check Box

The **All Keys** check box indicates all keys are included in the Paste operation. When selected, the keys in the # column are highlighted.

## Key # Column

The **Key #** column displays a selectable list of keys to be copied from the port. The All Keys check box must not be selected for this feature to be enabled.

**NOTE:** You can select more than one key by performing one of the following:

- To select random keys, press and hold the **Ctrl** key and click the **keys** you want to select.
- To select a block of keys, click the **top-most key in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most key you desire in the list**. All the keys in between the top and bottom are selected.

---

## Destination Group Box

The **Destination** group box is used to select the port or ports to paste the specified information.

## All Ports Check Box

The **All Ports** check box indicates that all ports are included in the Paste operation. When selected, the ports in the ports columns are highlighted.

## Ports Columns

The **Ports** columns display the available ports information to which information can be pasted. The All Ports check box must not be selected for this feature to be enabled.

**NOTE:** You can select more than one port by performing one of the following:

- To select random party lines, press and hold the **Ctrl** key and click the **ports** you want to select.
- To select a block of ports, click the **top-most port in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most port you desire in the list**. All the ports in between the top and bottom are selected.


---

## Partial Save Window

The **Partial Save** window, shown in Figure 226, is used in either ONLINE or FILE mode to select items in the current setup file and then save only those items to a file. You can also use this dialog to see which items you have changed during the current edit session.

**NOTE:** When you first open the Partial Save window, all items that you have changed (but have not yet been saved or sent to the intercom system) are already highlighted and can be immediately saved to a file if desired. Press **OK** and immediately save only those items.

**NAVIGATION:** From the menu bar, select *File/Partial Save*.

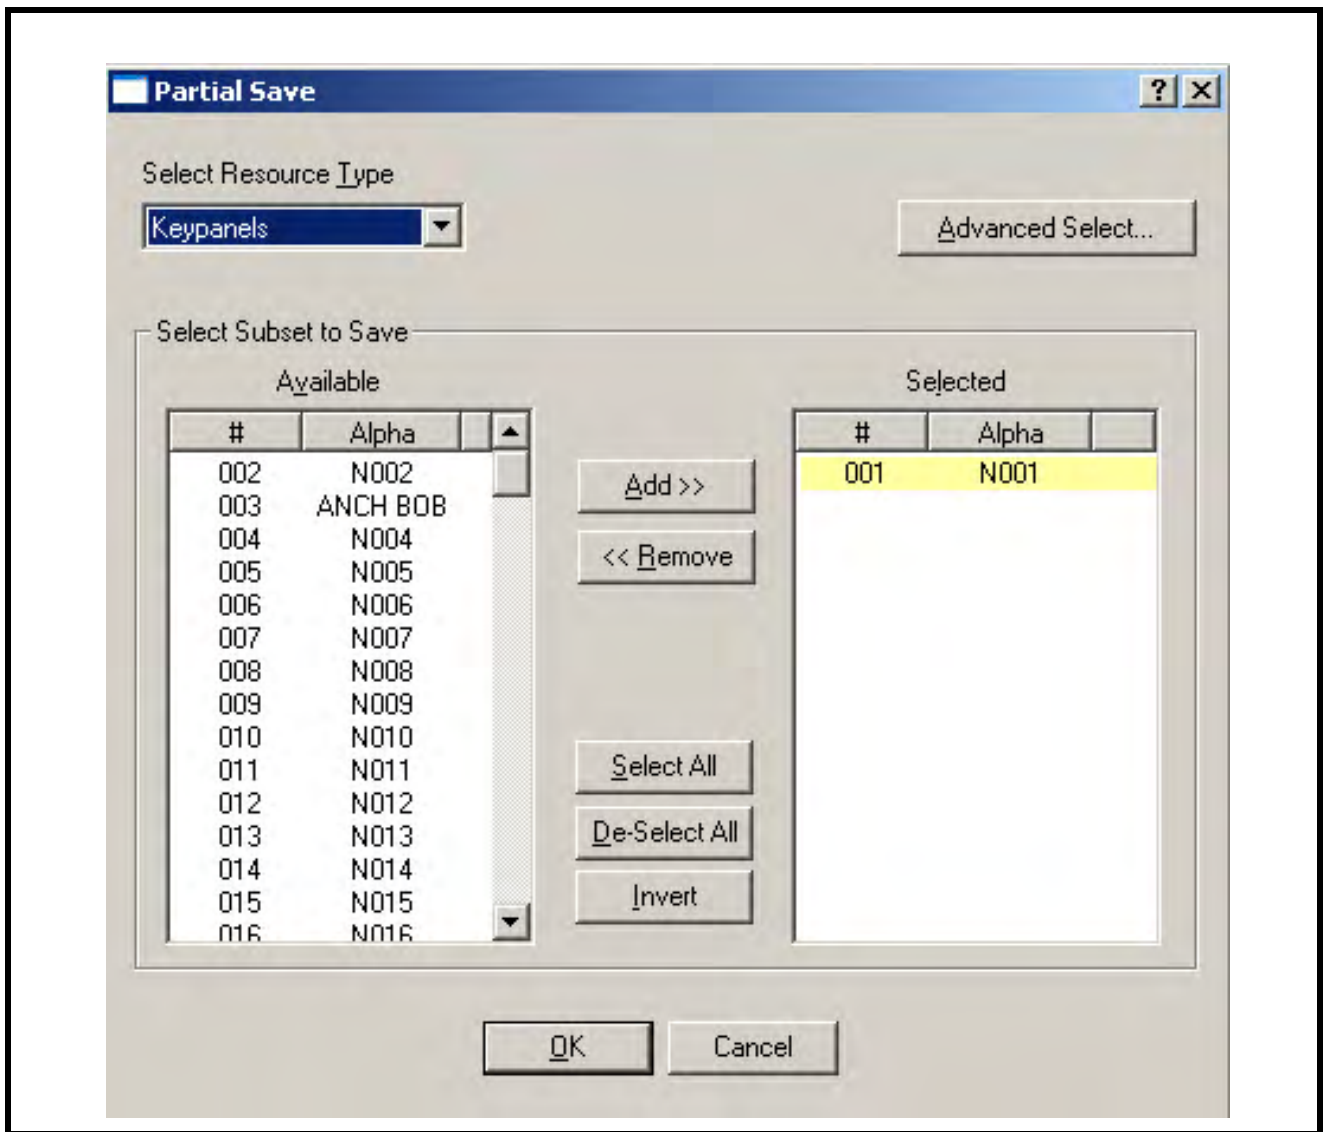

**FIGURE 226.** Partial Save Window

---

---

## Select Resource Type Drop Down Menu

The **Select Resource Type** drop down menu is used to select the type of resource you want to include in the Partial Save operation. Available selections include:

<i>Keypanels</i>	<i>Forces/Inhibits</i>
<i>Ports</i>	<i>Input/Output Gains</i>
<i>Keypanel Types</i>	<i>Vox Settings</i>
<i>PGM Listen Sources</i>	<i>Crosspoint Gains</i>
<i>Party Lines</i>	<i>Party Line Gains</i>
<i>IFBs</i>	<i>LCP-102s</i>
<i>IFB Special Lists</i>	<i>PAP-32s</i>
<i>Special Lists</i>	<i>ARP-32s</i>
<i>Special List Functions</i>	<i>GPIO-16s</i>
<i>GPI Outputs</i>	<i>UPL Statements</i>
<i>ISOs</i>	<i>UPL Resources</i>
<i>Assignment Groups</i>	<i>Alphas</i>
<i>GPI Inputs</i>	<i>Descriptions</i>
<i>Inter-panel Dims</i>	<i>Keypanel Screen Savers</i>
	<i>Keypanel Passwords</i>

---

## Select Subset to Save Group Box

---

### Available Columns

The **Available** columns display the available resources to include in the Partial Save operation. The resource number and alpha are shown. This list is dependent upon what is selected in the Select Resource Type drop down menu.

### Selected Columns

The **Selected** columns display the items that are marked for the Partial Save operation. The resource number and alpha are shown.

**NOTE:** If a resource is highlighted in yellow, this signifies a modification made, but not sent to the intercom, before the Partial Save window was opened.

### Advanced Select Button

The **Advanced Select** button opens the Advanced Partial Save window. For more information, see “Advanced Partial Save Selection Window” on page 261.

### Add >> Button

The **Add >>** button is used to add selected resources from the Available list to the Selected list.

**NOTE:** You can select more than one resource by performing one of the following:

- To select random keys, press and hold the **Ctrl** key and click the **keys** you want to select.
- To select a block of keys, click the **top-most key in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most key you desire in the list**. All the keys in between the top and bottom are selected.

---

## << Remove Button

The << **Remove** button is used to remove selected resource from the Selected list and move them back to the Available list.

**NOTE:** You can select more than one resource by performing one of the following:

- To select random keys, press and hold the **Ctrl** key and click the **keys** you want to select.
- To select a block of keys, click the **top-most key in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most key you desire in the list**. All the keys in between the top and bottom are selected.

## Select All Button

The **Select All** button highlights all of the items from the Available or Selected list.

## De-Select All Button

The **De-select All** button de-selects any selected items from the Available or Selected list.

## Invert Selections Button

The **Invert Selections** button reverses the selections in the current view. For example, if ports 1 through 5 are highlighted, while ports 6 through 10 are not, when the Invert Selection button is clicked, ports 1 through 5 are deselected and ports 6 through 10 become highlighted.

**NOTE:** You must click in either the Available list or the Selected list to use the Select All, De-Select All or Invert Selections buttons.

---

To **add resources to the save list**, do the following

1. In the Select Resource Type list box, select the **resource type** that you want to add.  
*The list of selected resources for that type appears in the Available window. In addition, any resources of that type that you have changed are listed in the Selected window.*
2. From the Available column, select the **resources** you want to add.
3. Click **Add**.  
*The highlighted resources are moved to the Selected column.*

To **remove resources from the Save list**, do the following

1. In the Select Resource Type list box, select the **resource type** that you want to remove.  
*The list of available resources for that type appears in the Selected window.*
2. From the Selected column, select the **resources** you want to remove.
3. Click **Remove**.  
*The highlighted resources are moved to the Available column.*
4. Repeat **steps 1-3** for each resource type that you want to save.

**IMPORTANT:** The settings for intercom ports are split into two (2) groups: Port settings and Keypanel settings.

**Port** settings consist of the port name (Alpha), the Scroll Enable settings, the IFB priority setting, and (if trunking is enabled) the Trunk Priority and Trunk IFB Priority settings.

**Keypanel** settings consist of key assignments, the Setup Restrict setting (for setup pages), the Setup Page assignments, and the Enable Tone, Keypanel Privacy, and TIF Dial-Out Restrict settings (accessible via the Edit button).

When you are using Partial Save to save Keypanel/Port settings, make sure you look at both ports and keypanels in the Select Resource Type drop down menu.

5. Click **OK** when you are ready to save.  
*A Partial Save window appears. This can be an Online Save<sup>2</sup>.*

**NOTE:** Use only Windows 3.1 file name conventions (no more than 8 characters).

---


2. An Online save applies the modifications, as well as creates and saves a setup file for later use.



---

## Advanced Partial Save Selection Window

The **Advanced Partial Save Selection** window, shown in Figure 227, is used to refine your Save parameters. You can limit the types of resources saved by establishing parameters that must be met before selecting the resource.

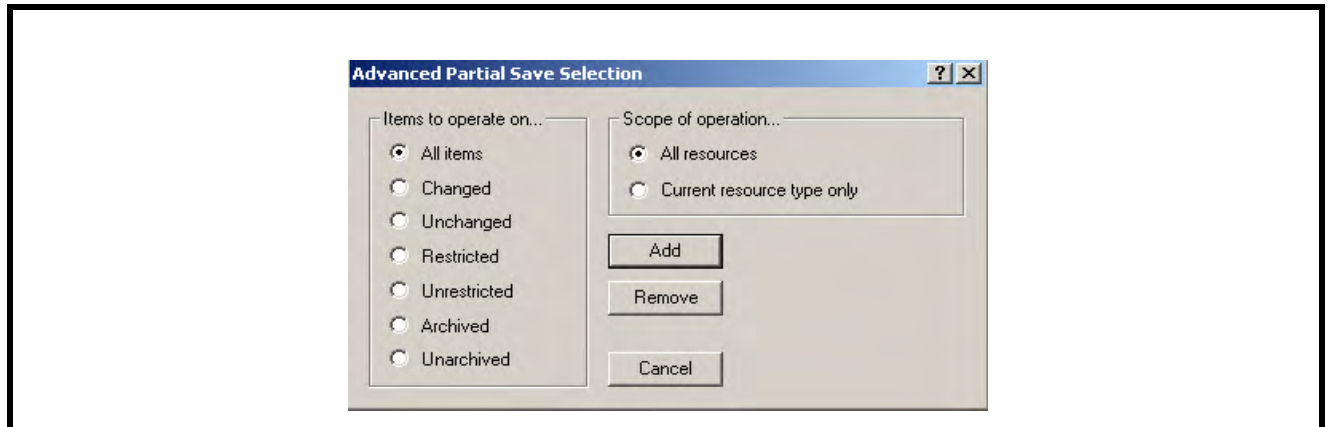

**FIGURE 227.** Advanced Partial Save Selection

---

### Items to Operate On... Group Box

The **Items to Operate On...** group box is used to select advanced parameters to place on potential save items. Use the following radio buttons to select the parameters for Save resources.

The available selections are:

*All items* - select all items

*Changed* - select only items that have been changed

*Unchanged* - select only items that have not been changed

*Restricted* - select only items that have been restricted

*Unrestricted* - select only items that have not been restricted

*Archived* - select only items that have been archived

*Unarchived* - select only items that have not been archived

---

### **Scope of Operation Group Box**

The **Scope of Operation** group box is used to define where to find resources. Use the following radio buttons to designate where to focus the search for Save resources.

*All Resources* - select all resources, regardless of resource type selected

*Current Resource Type Only* - select only resources with the specified resource type

### **Add Button**

The **Add** button performs the search for resources and adds them to the Selected list in the initial Partial Save window.

### **Remove**

The **Remove** button performs the search for resources and removes them From the Selected list in the initial Partial Save window.

### **Cancel Button**


The **Cancel** button closes the Advance Partial Save Selection window without performing the advanced search.

---

## Send All Window

The **Send All** window, shown in Figure 228, lists all of the resources you have modified since the last time changes were sent to the intercom system. From this window, items cannot be selected to send. If you select the Details check box, the item number and alpha name associated with each item is displayed.

**NAVIGATION:** From the menu bar, select *Online/Send Changes...*

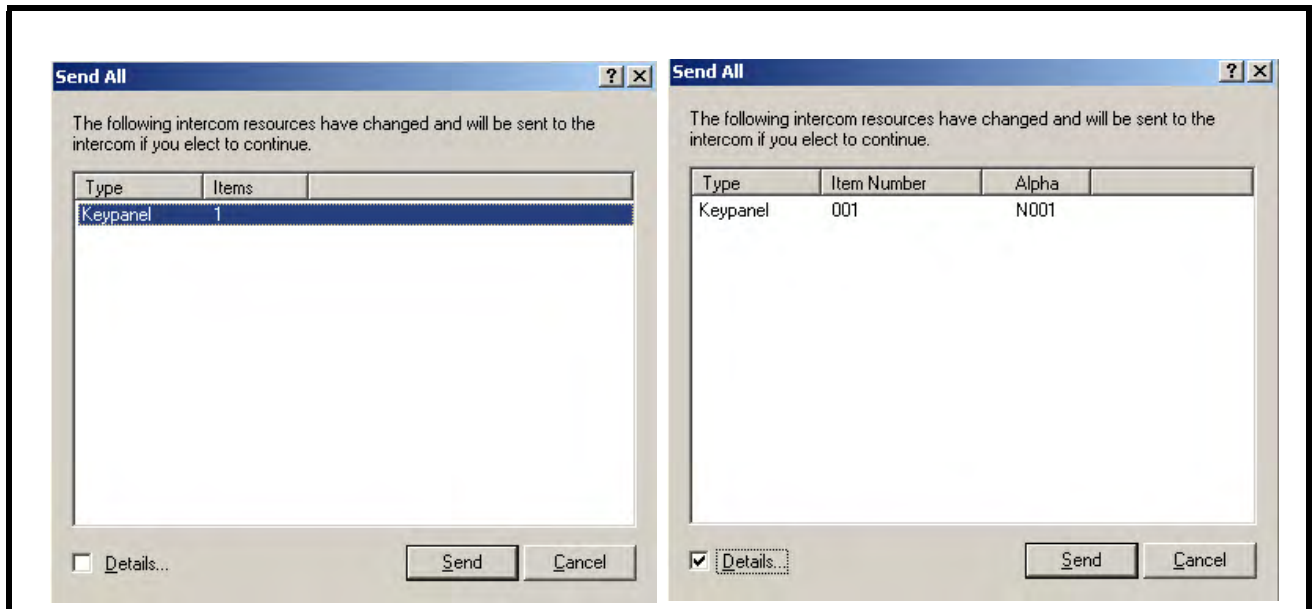

**FIGURE 228.** Send All Window and Send All Window with Details Selected

### Type Column

The **Type** column displays the type of modification being sent to the intercom system. The type settings for intercom ports are split into two (2) groups: Port settings and Keypanel settings.

**Port** settings consist of the *Port Alphas*, *Scroll Enable settings*, *IFB Priority settings*, (and, if trunking is enabled) *Trunk Priority* and *Trunk IFB Priority* settings.

**Keypanel** settings consist of Key Assignments, Setup Restrict settings, Setup Page assignments, and all Advanced settings.

**NOTE:** Since Port Alphas are associated with the Port settings, you do not see an Alpha name displayed next to a Keypanel setting when you check Details.

### Items Column

The **Items** column displays the number of items being sent to the intercom system.


### Details Check Box

The **Details** check box displays the Items Number column and an Alpha column. These columns give more details about the changes being sent to the Intercom.

---


## Send Button

The **Send** button is used to send the changes to the intercom. When clicked, the Send All window closes and a progression bar displays the send status.

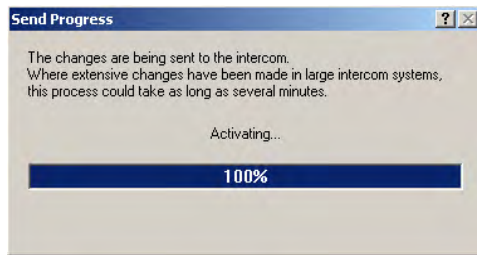

## Cancel Button

The **Cancel** button closes the Send All window without sending the changes.

**NOTE:** The modifications made to AZedit are still active. To clear the changes, click the Abort icon.  Or, close the AZedit application.

---


## Check For Duplicate Alphas Window

The **Check for Duplicate Alphas** window, shown in Figure 229, is used to watch the progression of the system check and verify there are no duplicate alphas in your intercom system. In a large-scale intercom system, the possibility exists that you may accidentally assign the same name (alpha) to two different resources. This should never be allowed for two resources of the same type. For example, no two intercom ports should have the same name; no two IFBs should have the same name, etc.

On the other hand, you may decide that you do want to use the same name for two resources of different types. You may decide to use the same name for both an intercom port and an IFB. Although you can do it this way, we strongly recommend that you do not.


**NOTE:** In the case where you give an intercom port and an IFB the same name, you may want to turn off Scroll Enable for the intercom port so that only keypanel operators can assign the IFB to keypanel keys.

**NAVIGATION:** From the menu bar, select *Alphas/Check for duplicate alphas...*

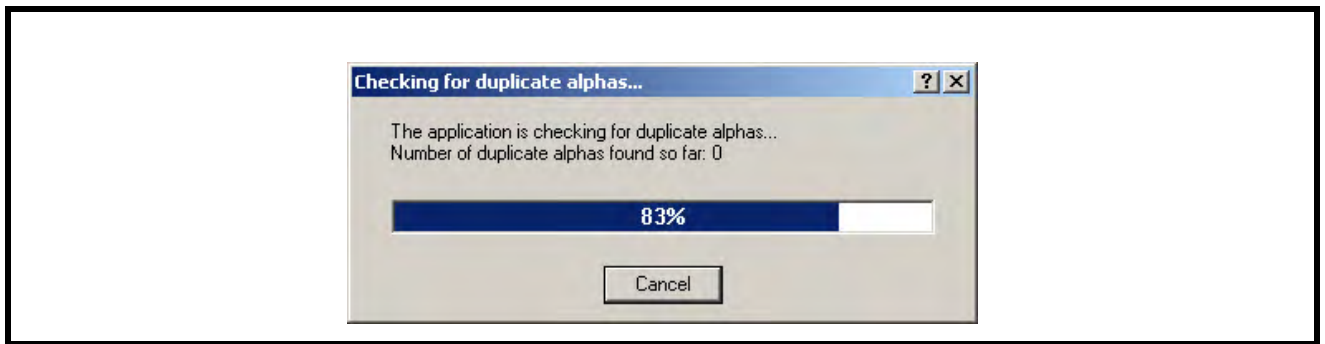

**FIGURE 229.** Checking for Duplicate Alphas... progression window

**NOTE:** By default, AZedit prompts you and offer to check for duplicate alphas whenever you open a file from disk. You can activate or deactivate both the prompt and the check: *Options/Preferences/Alphas Page*. You find three check boxes titled *Automatically check for duplicate alphas after opening a file*, *Prompt before auto-checking when file is open* and *Prompt before checking for duplicate alphas*. For more information, see "Alphas Page" on page 75.

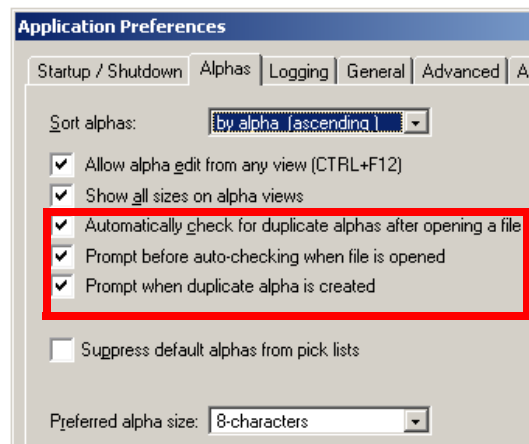

**NOTE:** You can also select *Check for duplicate alphas...* from the Alphas menu at any time to identify and correct duplicate alphas in your setup file or in the online configuration.

If duplicate alphas are found, the **Duplicate Alphas** window, shown in Figure 230, appears. You may see this warning when you assign an alpha name that is already being used. You may also see this warning when you select *Check for duplicate alphas* in the alphas menu.

The abbreviations in the Type column indicate the following communication types:

*IFB* Indicates a conflict with an IFB name

*ISO* Indicates a conflict with an ISO name


*PP* Indicates a conflict with an intercom port name

*RY* Indicates a conflict with a GPI Output name

*SF* Indicates a conflict with a Special Function name

*SL* Indicates a conflict with a Special List name

*UR* Indicates a conflict with a UPL Resource

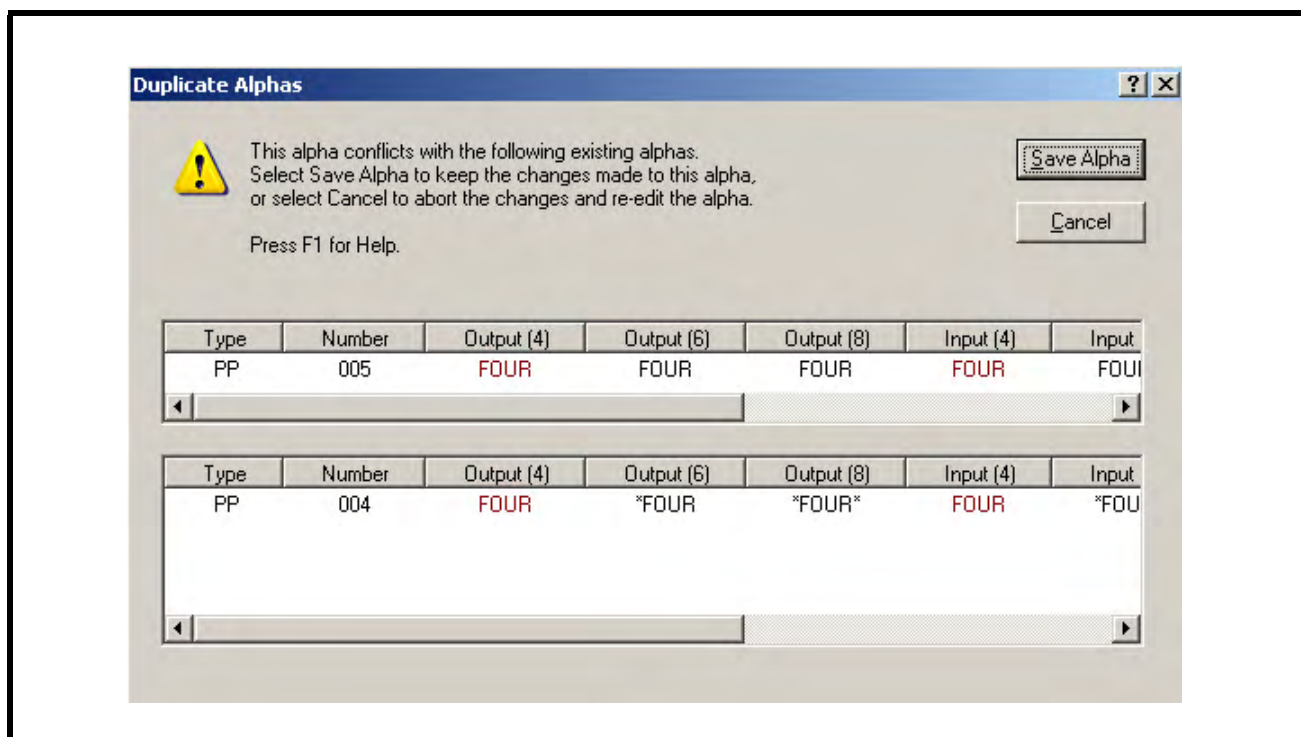

**FIGURE 230.** Duplicate Alphas Window


From this window, you can view the duplicate alpha information, such as the assignment type and the duplicate alphas ports.

If you decide to keep both Alphas the same, click the **Save Alpha** button. Otherwise, click **Cancel**.

**NOTE:** If you are checking for duplicate alphas, and you want to change a duplicate name, double-click on that **name** in the duplicate alpha list and then make the change

---

## Refresh Screens

The **Refresh** icon  is used to retrieve the most current configuration and status information from the intercom system. Refresh is available in the View menu and also by pressing **Ctrl+Space** on the computer keyboard.

In ONLINE or SERVER modes, selecting Refresh causes AZedit to retrieve the most current configuration and status information from the intercom system. You can use Refresh with any screen that provides status information. For example, if you are viewing a particular Keypanel/Port screen, you can see which keys are currently activated by selecting Refresh. For each key that is on, a red dot appears above that key on your viewing screen.


**NOTE:** The screens refresh automatically, usually every few seconds. However, the time between refreshes can vary, depending on intercom activity, and the size of the intercom system. To be sure you are viewing the most recent information for a particular screen, use Refresh.

---

## Search For Key Assignment Window

The **Search for Key Assignment** window, shown in Figure 231, is used to find key assignments in the intercom system and can be used to replace existing assignments with new assignments.

**NAVIGATION:** From the menu bar, select *Edit/Search for key assignment...*

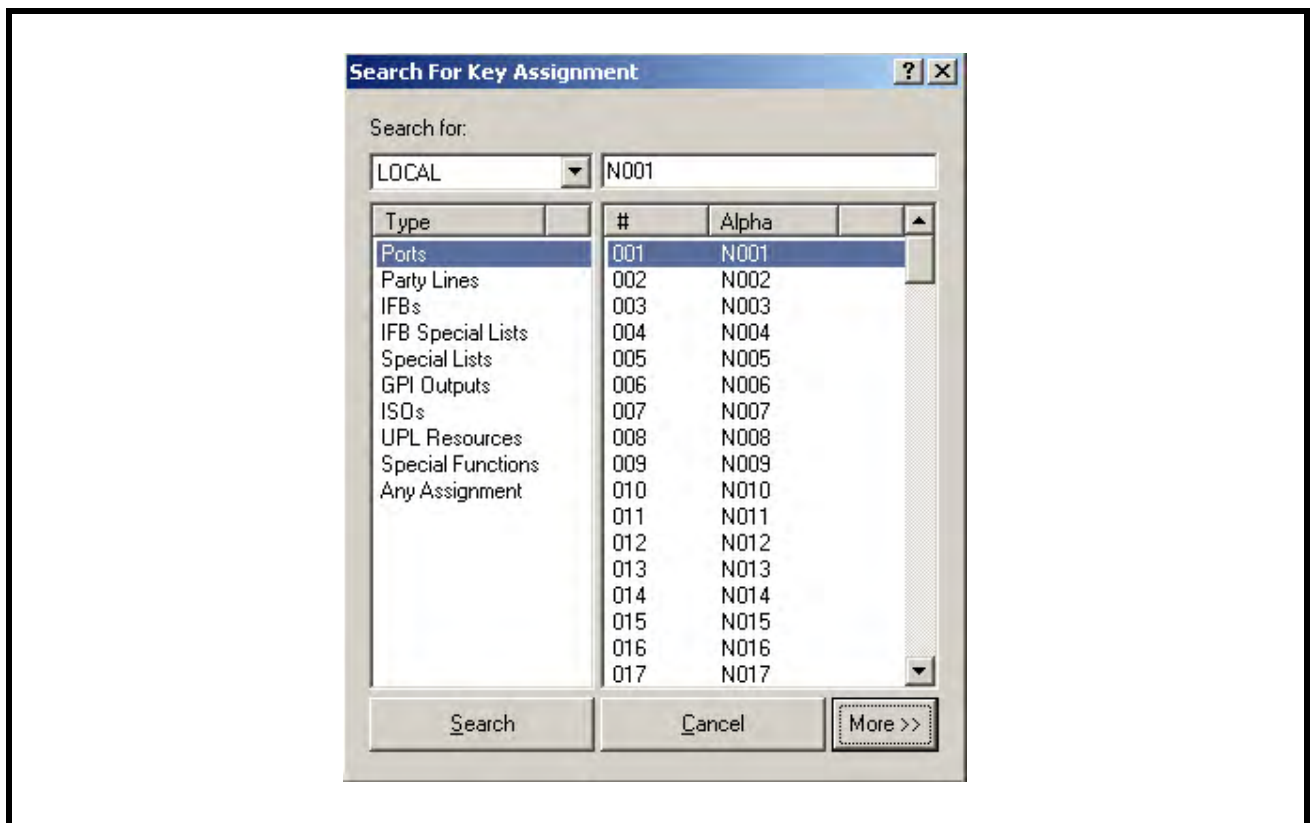

**FIGURE 231.** Search For Key Assignment Search For: Window

---

---

## **Search For: Group Box**

### **Intercom Drop Down Menu**

The **Intercom** drop down menu is used to select the intercom system you want to search for the key assignment.

### **Type Column**

The **Type** column displays a selectable list of assignment types.

Selections include: *Ports, Party Lines, IFBs, IFB Special Lists, Special Lists, GPI Outputs, ISOs, UPL Resources, Special Functions*, and *Any Assignments*.

### **# and Alpha Column**

The **#** and **Alpha** column displays a list of selectable ports and their alphas.

**NOTE:** Once a port is selected, the port number populates the Port field.

### **Alpha Field**

The **Alpha** field displays the alpha of the port selected from the **#** and **Alpha** columns.

### **Search Button**

The **Search** button performs the search operation and displays the results on the Search Status: Done window, see “Search Status: Window” on page 270.


### **Cancel Button**

The **Cancel** button cancels the search operation and closes the window.

### **More >> Button**

The **More >>** button opens the Replace With portion (see Figure 232) of the Search For Key Assignments window.



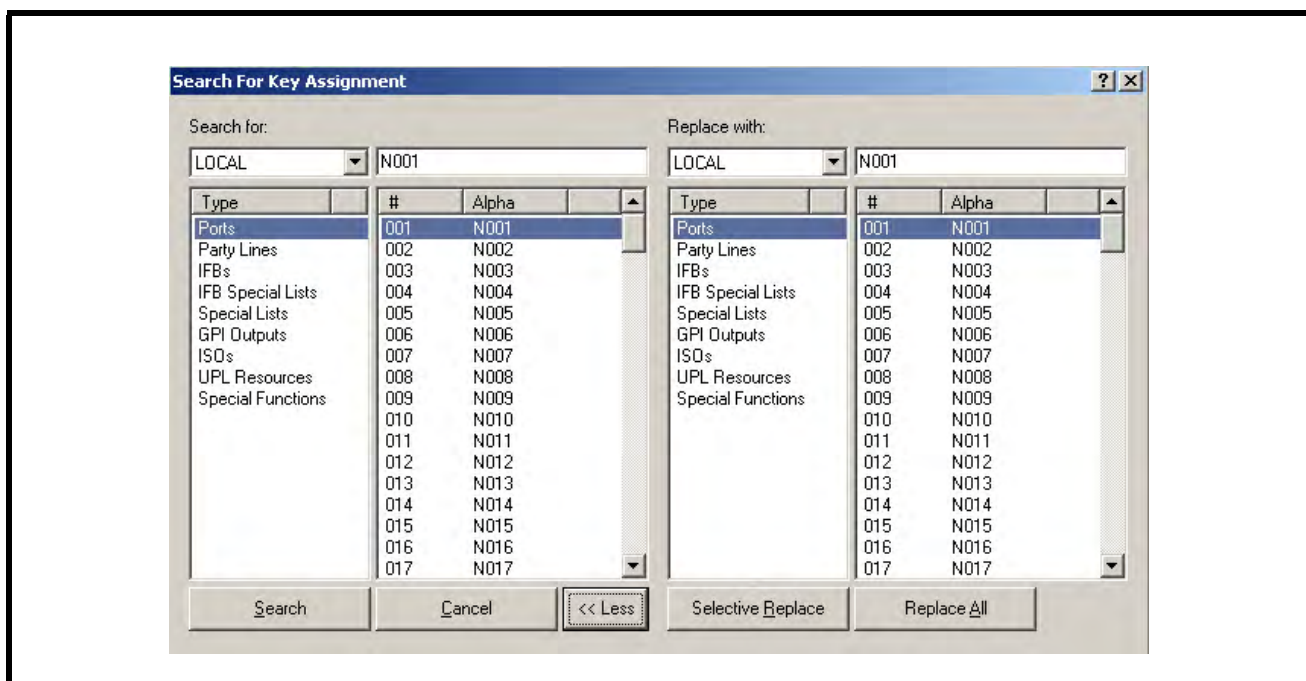

**FIGURE 232.** Search For Key Assignment - Replace with: Window

### << Less Button

The << **Less** button closes the Replace With portion of the Search For Key Assignments window.

## Replace With: Group Box

### Intercom Drop Down Menu

The **Intercom** drop down menu is used to select the intercom system to which you want to replace the assignment type.

### Type Column

The **Type** column displays a selectable list of assignment types on the Replace With intercom system.

Selections include: *Ports, Party Lines, IFBs, IFB Special Lists, Special Lists, GPI Outputs, ISOs, UPL Resources, Special Functions*, and *Any Assignments*.

### # and Alpha Column

The **#** and **Alpha** column displays a list of selectable ports and their alphas in the Replace With intercom system.

**NOTE:** Once a port is selected, the port number populates the Port field.

### Alpha Field

The **Alpha** field displays the alpha of the port selected from the **#** and **Alpha** columns.

### Selective Replace Button

The **Selective Replace** button replaces only specified key assignments (not all key assignments) within the intercom system. When selected the Search Status window, shown in Figure 233, appears.

---

## Search Status: Window

The **Search Status** window, shown in Figure 233, displays the results from the Search For Key Assignment window parameters. You can also jump to assignment type, repeat the search or begin a new search.

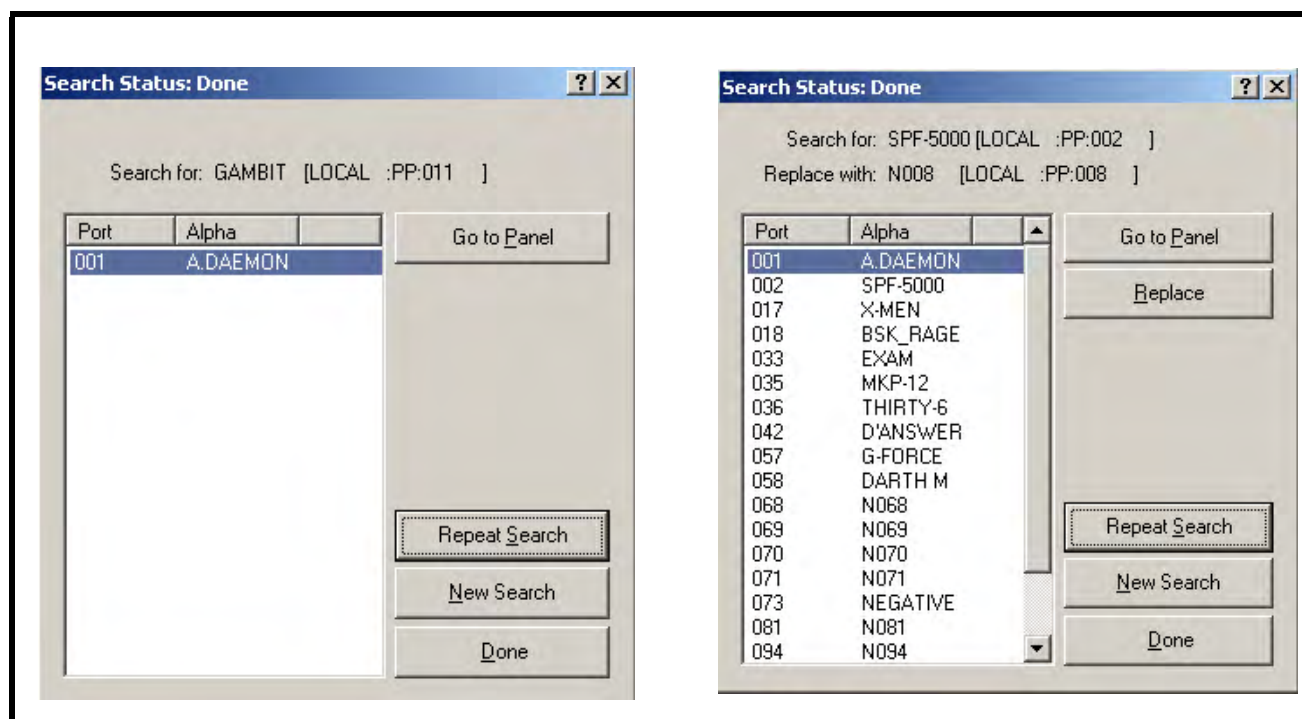


FIGURE 233. Search Status Window and the Search Status - Replace Window

### Port Alpha Columns

The **Port** and **Alpha** columns display the port number and alpha that fits the key assignment search parameters set on the Search for Key Assignment window.

**NOTE:** When a Replace operation is performed, you can select more than one key assignment to replace by performing one of the following:

- To select random keys, press and hold the **Ctrl** key and click the **keys** you want to select.
- To select a block of keys, click the **top-most key in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most key you desire in the list**. All the keys in between the top and bottom are selected.


### Go To Panel Button

The **Go To Panel** button is used to jump to the selected key assignment.

---

## Replace Button

The **Replace** button is used to replace the search for key assignment with the replace with key assignment. When selected, the following message appears to confirm the replace action.

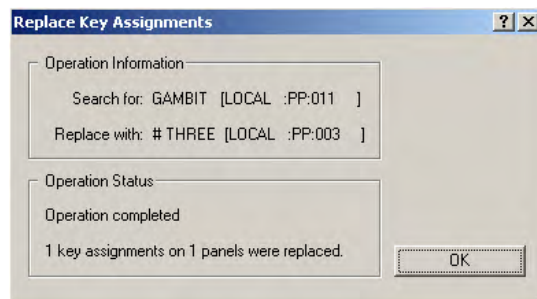

**NOTE:** Remember to send your changes to the intercom, using *Online/Send Changes* or the Activate icon. 

## Repeat Search Button

The **Repeat Search** button is used to repeat the search with the existing search parameters.

## New Search Button

The **New Search** button is used to start a new search. When selected, the Search For Key Assignment window appears. You can enter new search parameters.

## Done Button

The **Done** button is used to close the Search Status window.

**NOTE:** Remember to Send your changes to the intercom, using *Online/Send Changes* or the Activate icon. 

# Key Assignment Grid Window

The Key Assignment Grid window, shown in Figure 234, provides easy access to key assignments for programming keypanels.

**NAVIGATION:** From the menu bar, select *View/Key Assignment Grid*.

To use the grid, do the following:

- 1. Click on the **assignment type** combo box.
- 2. Select the **assignment type** from the list that appears.  
*Based on the assignment selected, the alphas appear in the grid below.*

**NOTE:** Clicking on the border of the grid’s outer frame and dragging the mouse resizes the grid.

- 3. Once the alpha appears you want to assign, place the mouse pointer over the **assignment**, hold down the **left mouse** button, and drag the **assignment** to the desired key (either talk or listen).

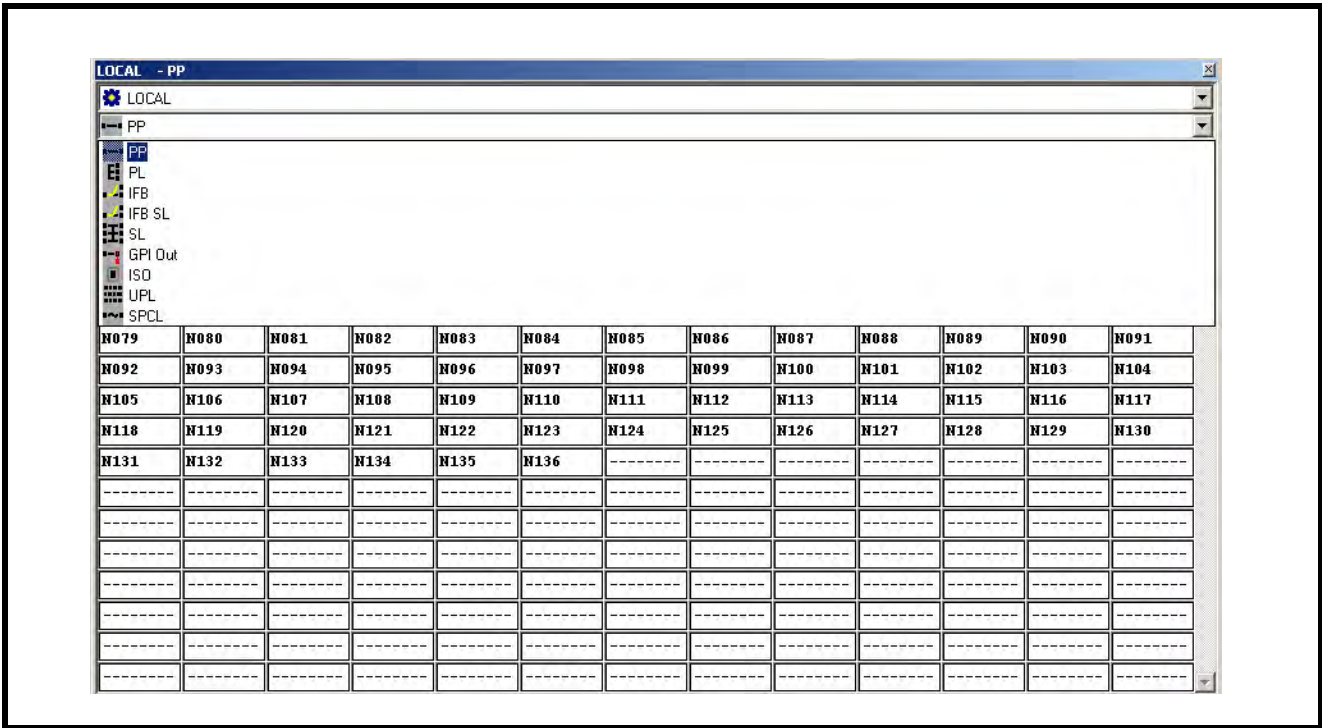


FIGURE 234. Key Assignment Grid

## Key Assignment Drop Down Menu


The **Key Assignment** drop down menu is used to select the key assignment you want to assign to the key.

## Grid Fields

The **Grid** fields display the available alphas for the selected assignment type in the intercom system.

To assign an alpha to a keypanel, drag and drop the assignment to the desired keypanel field.

To **open the key assignment grid**, do the following:

- > From the standard toolbar, click the **assignment grid** icon.   
*The Key Assignment grid opens.*

**NOTE:** You can also select **Key Assignment Grid** from the View menu or right click **anywhere** on an open screen (except a talk or listen field) in AZedit and select **Show Grid**.

The assignment types are abbreviated:

*PP* – Point-to-Point

*GPI Out* – GPI output

*PL* – Party Line

*ISO* – Isolate

*IFB* – Interrupt Fold-Back

*UPL* – Universal Programming Language (resource)

*IFB SL* – Interrupt Fold-Back Special List

*SPCL* – Special Function (e.g. AL, AF, AC, etc...)

*SL* – Special List

---

## Keypanel Print Options Window


The **Keypanel Print Options** window, shown in Figure 235, is used to print the setup page and key assignment information for selected keypanels. You can also print designation strips. Designation strips are commonly used with keypanels that do not have alphanumeric displays, but do have a designation strip holder to identify the key assignments.

*Select Keypanels:* Select one or more keypanels (or All Keypanels) at the left side of the screen.

*Setup Page Report:* Click on this if you want to print all of the talk and listen key assignments for all four (4) setup pages.

*Designation Strips:* Click this if you want to print designation strips to fit in keypanels designation strip holders.

**NOTE:** Keypanel Print Option can only be used with the Keypanel/Port window.

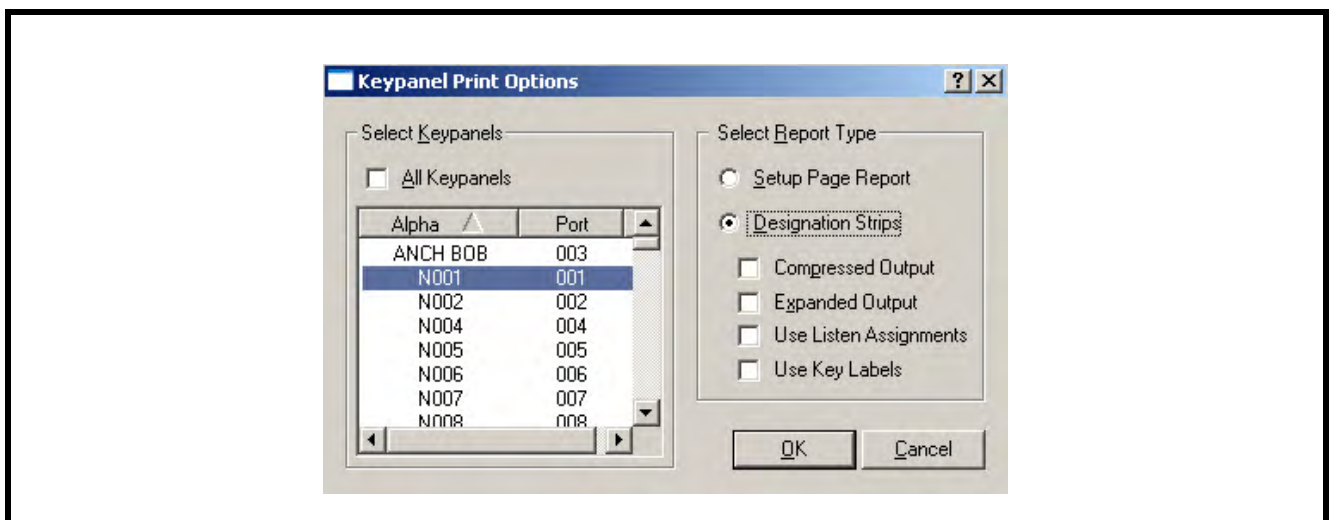

**FIGURE 235.** Keypanel Print Options Window

---

## Select Keypanels Group Box

### All Keypanels Check Box

The **All Keypanels** check box is used to select all keypanels in the keypanel list. When selected, all keypanels are highlighted.

---

## Keypanels List

The **Keypanels** list displays the alphas and ports of every keypanel in the intercom system.

**NOTE:** You can select more than one keypanel to print by performing one of the following:

- To select random keypanels, press and hold the **Ctrl** key and click the **keypanels** you want to select.
- To select a block of keypanels, click the **top-most keypanel in the list**; press and hold the **Ctrl + Shift**; press the **bottom-most keypanel you desire in the list**. All the keypanels in between the top and bottom are selected

## Select Report Type Group Box

### Setup Page Report Radio Button

The **Setup Page Report** radio button is used to print all talk and listen key assignments for all four (4) setup pages on a keypanel.

### Designation Strips Radio Button

The **Designation Strips** radio button is used to print designation strips to fit in keypanel designation strip holders. When this option is selected, you have the following print options for the designation strips:

*Compressed Output*

*Expanded Output*

*Use Listen Assignments*

*Use Key Labels*

### Compressed Output Check Box / Expanded Output Check Box

If neither of these boxes is checked, designation strips are printed for each setup page, with space between the setup pages.

If **Compressed Output** is selected, all designation strips are printed with no space between them. This saves extra work when cutting the strips apart.

If **Expanded Output** is selected, the designation strips print, not only with space between the setup pages, but also, with space between keys 1-8 and 9-16 of each setup page. These strips require the most work to cut apart

### Use Listen Assignments Check Box

The **Use Listen Assignments** check box indicates only listen key assignments are to be printed.

**NOTE:** Only the listen key assignments are printed.

### Use Key Labels Check Box

The **Use Key Labels** check box indicates only key labels are to be printed, instead of alphas.

### OK Button

The **OK** button is used to send the selected options to your default printer.


### Cancel Button

The **Cancel** button is used to cancel the print operation and close the Keypanel Print Options window.

---

## Other Print Windows

When printing from other windows in AZedit, use the Print Preview, as shown in Figure 236, to view what the print out displays. Depending on the window you want to print will determine the print you see.

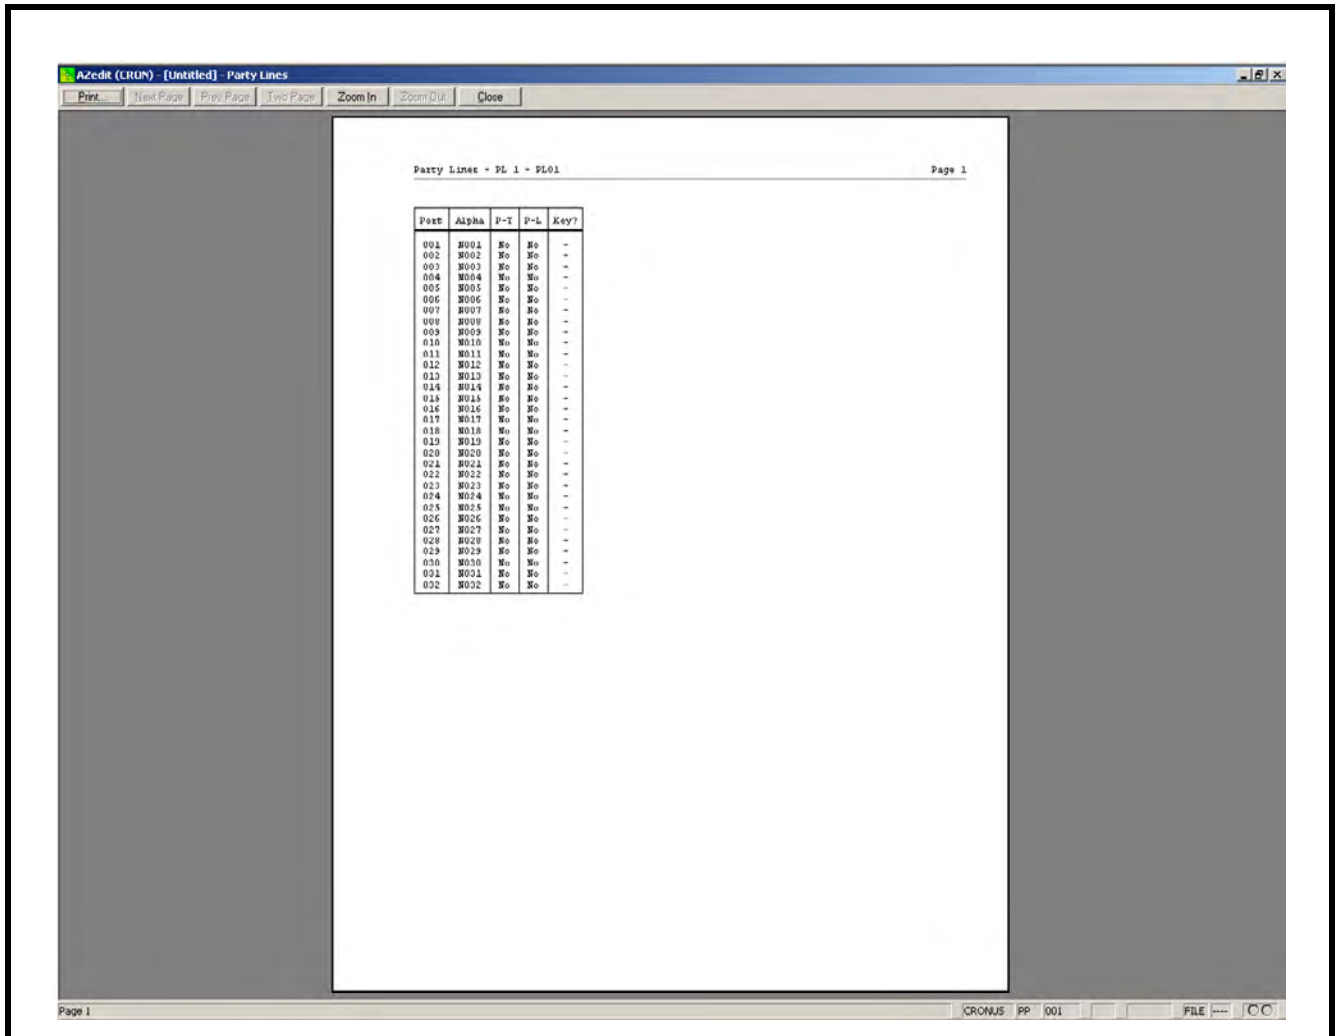

**FIGURE 236.** Print Preview Window

---

