



User manual

XS mini safe burglary safe



ver. 0004 - 2014/11

IMPORTANT!

Read this manual carefully before you start using the safe.

TO OPEN THE SAFE

To open the door of the safe for the first time turn the round knob to the left until it stops then: Press **1, 5, 9, and #**.

When you are pressing the numbers a beep sounds. After pressing # the lower green LED on the keypad lights up. Now turn the knob to the right within 5 seconds and open the safe door.

TO CLOSE THE SAFE

Close the safe door and turn the knob to the left. The safe door is now locked.

TO PROGRAM A NEW CODE

1. Press the red button (X) on the inside of the safe door near the hinges (see the illustration below); then release it and you will hear 2 beeps.

2. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing #. Be sure to remember to this code, to be able to open the safe.

3. **With open safe door** check if you have entered the correct combination a couple of times by doing the normal opening procedure as described above, so turning the knob, pressing the numbers you have chosen followed by #. If you have entered the correct combination, the green LED lights up. After this you can turn the knob to the right.

4. If the above operation proceeds without error you can close the safe door and turn the knob to the left, after 5 seconds the electronic closing-mechanism will lock.

5. To open the safe follow the procedure as described above.

6. After entering your correct personal combination, you have 5 seconds to turn the knob before the mechanism relocks. If it does, enter your combination again.

REPLACING BATTERIES

Remove the lid of the battery holder on the inside of the safe door. Place 4 pieces new 1,5V AA SIZE ALKALINE batteries in the holder (DURACELL recommended). Put the lid back in place.

BATTERY REPLACEMENT WARNING

If the batteries are low, a red light will warn you immediately. To check battery charge level, enter your opening code. If batteries are low the red light flashes. If no light comes on the batteries are OK. If the red light stays lit you should change the batteries immediately. Failure to do so could result in you not being able to open the safe without resorting to the use of the override key.

USE OF THE OVERRIDING KEY

For your convenience, a manual override system has been engineered into your Protector safe.

If you forget your combination or the batteries are totally flat, remove the round rubber lid on the face of the safe door beside the LEDs in the centre. Behind the lid you will find a keyhole. The emergency key delivered with your safe fits this keyhole. Insert the key and turn it to the left, anticlockwise. Turn the knob to the right, clockwise to open the safe door. This will manually open your safe any time.

Do not keep the key in the safe. In the event of battery failure you will not be able to open the safe.

WARNING

Keep the overriding key in a secure place (not in the safe; by doing so, in the event of battery failure you will not be able to open the safe), this will manually open your safe any time.

Do not install the safe in a humid environment (e.g. bathroom, wine cellar), because this can cause heavy damage to the electronics. The manufacturer or distributor do not take any responsibility for failures caused by misuse or negligence. In such cases warranty becomes invalid.

