



User Manual

Digital Satellite Receiver



English 1/2010 jp

Contents

Safety precautions	3
Environment protection	5
General Information	6
Unpacking	6
Front Panel	7
Remote Control	8
Installation	9
Connecting to TV using SCART support	9
Main page	10
Installation	11
Antenna Setting	11
DiSEqC 1.2	12
Satellite Search	12
Manual Search	13
Select Transponder	13
Blind Scan	13
Reset Default	14
Channel Manager	14
Modify Channel	14
Delete Channel	15
Move Channel	15
Lock Channel	15
Add Favorite	16
Sort Channel	16
System Setting	16
Video Output	17
Switch Mode	17
Parental Control	17
Clock Setup	18
Language Setting	18
Game	19
Quick Select	19
Multi Audio	19
Volume Control	19
System Update	20
Trouble Shooting	21
Product Specification	22
DECLARATION OF CONFORMITY	23

Safety precautions

CAUTION:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to "dangerous voltage" and to prevent from a risk of electric shock.



Warning:

To reduce the risk of electric shock, don't open the cabinet. Refer servicing to qualified personnel only.



The exclamation point within an equilateral triangle is intended to alert the user to important operating and maintenance (servicing).

WARNING: Do not use this STB where contact with or immersion in water is a possibility. Do not use near flower vase, washbowls, kitchen sinks, laundry tubs, swimming pools, etc.

WARNING: Do not put the candle or lamp stand on the cabinet; otherwise, there is the danger of fire.

WARNING: The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit. If you are not sure of the type of power supply (for example, 120 or 230 V) to your home, consult your local dealer or local power company.

WARNING: This product install diodes. Do not open the cabinet or touch any parts in the inner mechanism. Consult your local dealer for technical service if the opening is required.

Note: To ensure proper use of this product, please read this User manual carefully and retain for further reference.

Note: This product install diodes. Do not open the cabinet to avoid the unit direct exposure to radiation.

Unit Cleaning: After the unit power is turned off, you can clean the cabinet, panel and remote control with a soft cloth lightly moistened with a mild detergent solution.

Attachments: Never add any attachments and/or equipment without the manufacturer consent; as such additions may result in the risk of fire, electric shock, or other personal injury.

Locating: Slots and openings in the cabinet are provided for ventilation to protect it from overheating. Do not block these openings or allow them to be blocked by placing the STB on a bed, sofa, or other similar surface, nor should it be placed over a radiator or heat register.

Power-Cord Protection: Place the power-supply cord out of the way, where it will not be walked on. Please take special attentions to cords at plugs, convenience receptacles, and the point where they exit from the unit.

Object and Liquid Entry: Never put objects of any kind into this STB through openings, as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill any liquid on the STB.

Note: Moisture may be formed on the lens In the following conditions:

- when the unit is suddenly moved from a cold environment or an air-condition room to a warm place.
- immediately after a heater has been turned on.
- in a steamy or very humid room.

If the moisture forms inside the unit, it may not operate properly. To correct this problem, turn on the power and wait about two hours for the moisture to evaporate.

Parts Replacement: When the unit parts need to be replaced, user should make sure the service technician use the replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized replacement may put the unit In the risk of fire, electric shock or other hazards.

Safety Check: After all the maintenances and repairs are done, user is required to request the service technician to conduct the overall safety check to ensure the machine is In the proper condition.

Environment protection



Attention!

Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

Information on Disposal for Users (private households) in the European Union

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one. *) Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

Information on Disposal for Business Users

In the European Union

If the product is used for business purposes and you want to discard it:

Please contact your dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities,

In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

General Information

A Digital Satellite Receiver is a convenient product that allows you to view a variety of programs provided through satellite. This user's guide covers the installation of the DSR and the necessary steps to implement various features. This also explains special features available only in this DSR in detail, which will allow you to make full of these feature.

- Fully MPEG2, DVB compliant.
- SCPC/MCPC Receivable from C/Ku Band Satellite.
- Provide friendly and easy-use menu system.
- Various channel editing function (Favorite, moving, locking, deleting and sorting).
- User programmable various Satellite & Transponder information.
- Fast Booting & Auto Scan.
- Stores up to 4000 channels (2000 TV channels, 2000 RADIO channels).
- Easy and speedy software upgrade by RS-232 port.
- Automatically each channel volume saving function.
- Automatic reserved channel moving system.
- Video output – CVBS.
- Box To Box copy.
- Provide various switch types, LNB types.
- Multi LNB controlled by DiSEqC 1.0 DiSEqC 1.2, 22KHz switching.

 
Unpacking




1 x DSR, 1 x Remote Control Unit (RCU), 1 x User's Guide, 2 x Batteries

After purchasing the DSR (Digital Satellite Receiver), unpack it and check to make sure that all of the following items are included in the packaging.

Front Panel

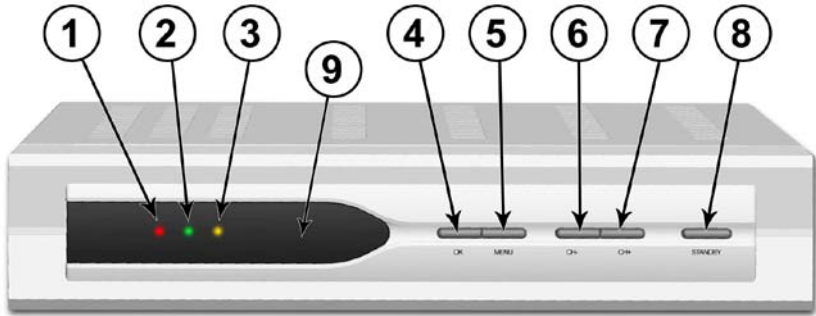

	Funktion
1. The red LED	Lights up when the receiver has been standby on.
2. The green LED	Lights up when the receiver has been working.
3. The yellow LED	Lights up when the channel has been locked.
4. OK	Confirm it or list channels.
5. MENU	Display menu OSD.
6. CH+	Change channel up or scroll up through menu options.
7. CH-	Change channel down or scroll down through menu options.
8. STANDBY	Turns the receiver On/Off.
9. IR-Sensor	Receive the remote control signals.

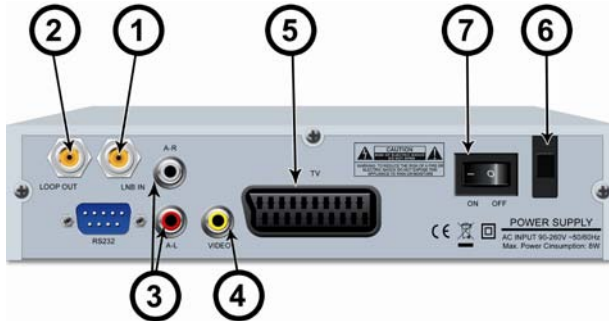 

	Funktion
1. LNB IN	CONNECT TO SATELLITE ANTENNA
2. LOOP OUT	CONNECT TO THE OTHER RECEIVER
3. A-L / A-R OUT	CONNECT AUDIO CHINCH R/L TO TV
4. VIDEO OUT	CONNECT VIDEO CHINCH TO TV
5. SCART OUT	CONNECT VIDEO TO TV USING TV SCART
6. POWER SUPPLY	AC PLUG
7. POWER SWITCH	POWER ON/OFF

Remote Control



Key	Function
Power	Turns power ON/OFF of the DSR.
MUTE	When watching a channel, mutes the sound.
0 - 9	Enter number of the required menu item or select a channel number to watch.
AUDIO	When watching a channel, switches the audio state Select audio language.
TV / R	Switches between TV and Radio mode.
▲ ▼	When watching, change channels, or moves to the next higher or lower item in the menu.
◀ ▶	Volume control or move to the left or right item in menu, or moves up/down a page in the channel list.
PAGE +/-	Move up or down a page in the channel.
MENU	Press this key one time to run menu on screen, and call command box.
EXIT	Returns to the previous menu on the menu screen.
OK	Executes the selected item in the menu screen, or enters the desired value in any input mode.
EPG	Select electric program guide.
INFO	Shows information of the current channel.
PAUSE	Image of the current channel is still or activate.
SAT	Satellite Select.
LANG	Select Multi Audio Language.
FAV	Display the favorite channel list.
RECALL	Switches back to previous channel.
SCAN ZOOM TEXT	Optional buttons. Those functions are available for other receiver – Opticum 1050

Warning!

 
Because of requirement of conformity with directives of energy saving, receiver supports function of automatic turning into standby mode after 3 hours from last use of remote controller or front panel buttons.

Installation



This section explains the installation of DSR-SERIES. Refer to the manuals supplied with the equipment for the installation of outdoor equipment such as the dish antenna. When adding new equipment, be sure to refer to the related parts of the manual for the installation.

Connecting to TV using SCART support

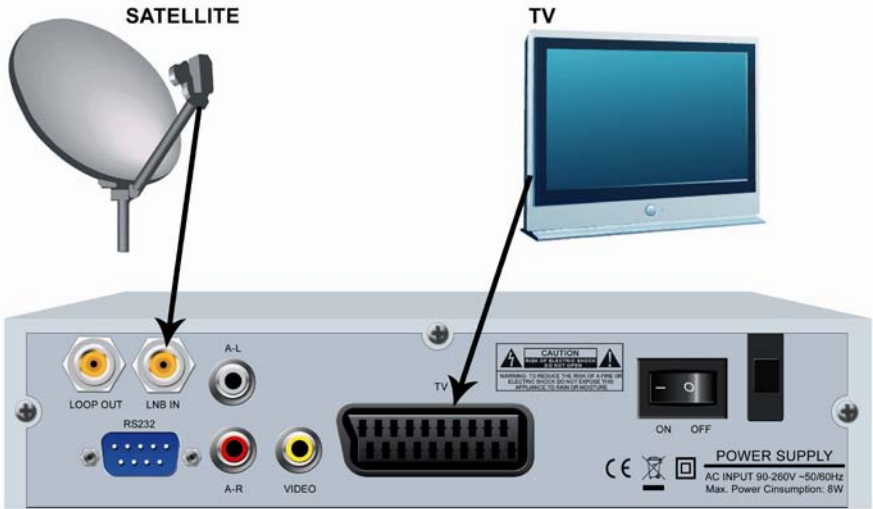

Main page



Figure 1

While viewing channels, press **MENU** key on the remote control, the Main Page box will be displayed on the Left side of the screen. If you do not want this Main Page, press **EXIT** key.

Main Page consist of 7 menus as below:

- TV Channel
- Radio Channel
- Installation
- Channel Manager
- Language Setting
- System Setting
- Game

If you want to see the sub-menus, place the cursor on the desired menu and press OK button to select. (Figure 1, Figure 2)

Then press “OK”, display follow :



Figure 2.

Installation

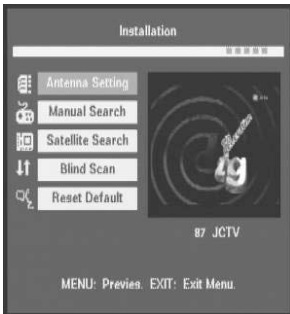 


Figure 3

DSR-SERIES has install Wizard system which allows users to set up the DSR-SERIES setting only minimum configuration for viewing channels.

This “installation” is for the advanced user or installer to set up in detail or Up-grade the DSR-SERIES as their favorite way for advanced function.

This menu contains of 5 major sub-menus as below (Figure3);

- Antenna Setting
- Manual Search
- Satellite Search
- Blind Scan
- Reset Default

During the installation the **OK** button always confirms a selection within these menus. Use the **CH▲▼** buttons to move upwards and downwards from one line to another line. You can always go back to the previous menu by selecting **EXIT**.

Antenna Setting

Press **MENU** button, use the **CH▲▼** to select “Installation” and press **OK** button, use the **CH▲▼** to select “Antenna Setting”. Press **OK** button then Sub-menu box will be appeared (Figure 4).

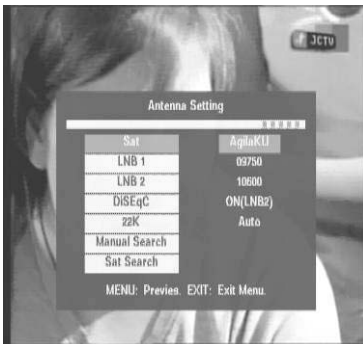 


Figure 1

In this menu ,you can select the satellite and LNB settings by using **◀ ▶** buttons

And use the **▲▼** buttons to select the item. Press the **OK** buttons to confirm and **EXIT** buttons to exit.

- SAT: Press the **◀ ▶** buttons to select the Satellite Name.
- LNB1: Select the LNB low local frequency.
- LNB2: Select the LNB high local frequency.
- 22kHz: When you use a Dual LNB or two antennas connected to a 22KHz switch box, make 22KHz switch ON or OFF to select LNB or antenna.
- DiSEqC Mode: Press the **◀ ▶** buttons to select the DiSEqC Type DiSEqc1.0, DiSEqc1.2.
- Manual Search: Press OK key searches channels from a specific transponder.
- Sat Search: Press OK key searches channels from a satellite.

DiSEqC 1.2

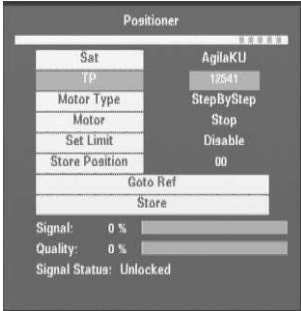 


Figure 5

User can enable and change the settings of the DiSEqC1.2 motor.

The motor settings include:

- Enable or Disable the DiSEqC1.2
- Enable or Disable the software limits of the motor movement.

Recalculate Limits activates the default positions and limits of the motor, thereby the user set previous values will be erased. Reset Position moves the motor to its default position (usually 0).

Satellite Search

In this menu ,you can select the satellite by use the ▲ ▼ buttons, Press the **OK** buttons to confirm. And use the ◀ ▶ buttons to select All or FTA. and **OK** buttons to scan satellite (Figure 6);

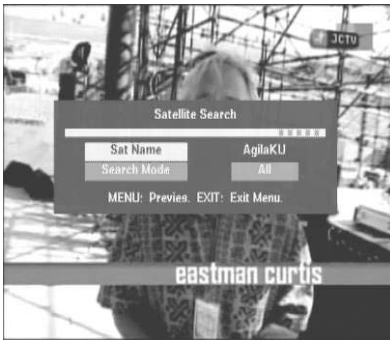 


Figure 6/1

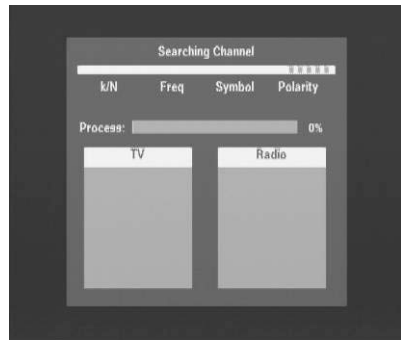 


Figure 6/2

Manual Search

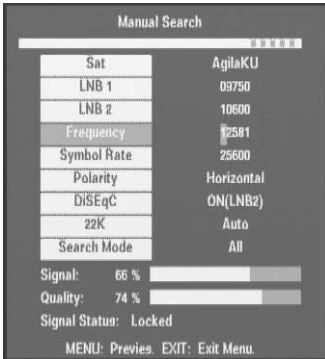 


Figure 7

In the menu ,set the Search Parameters (Frequency, Symbol Rate, Polarization, etc.) to manually find the services that you have select in the transport. The bars at the bottom of the menu show signal power and signal quality of the entered parameters.

You can select the value of some items by the ◀ ▶ buttons, or input the value of the other items by using the **NUMBER** buttons (0–9). After finishing one item settings, then press **OK** buttons to choose next item orderly.

Select Transponder

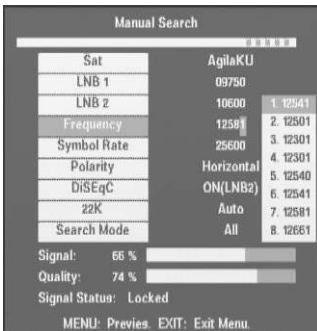 


Figure 8

In this menu, you can select a TP by use ▲▼ ◀▶ buttons, Press the **OK** buttons to confirm and start scan the TP as below (Figure 8) and **EXIT** buttons to exit.

Blind Scan

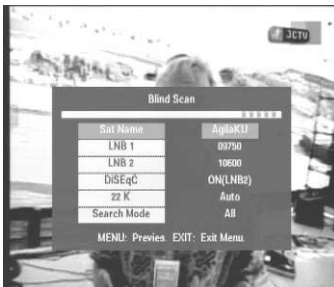 


Figure 9

In this menu, you can select search mode for Blind Scan and press the **OK** buttons to star scan.

Reset Default

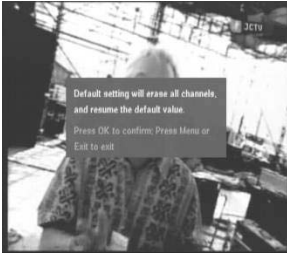 


Figure 10

When enter the menu, Press the **OK** button to confirm and all searched channels will be erased.

Channel Manager

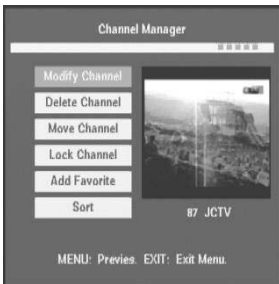 


Figure 11

This menu contains of 3 major sub-menus as below (Figure11);

- Modify Channel
- Delete Channel
- Move Channel
- Lock Channel
- Add Favorite
- Sort

During the installation the **OK** button always confirms a selection within these menus. Use the **CH▲▼** buttons to move upwards and downwards from one line to another line. You can always go back to the previous menu by selecting

EXIT.

Modify Channel

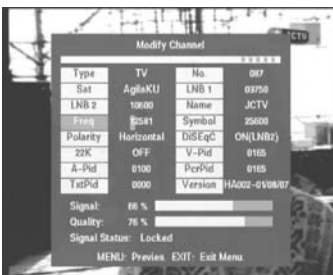 


Figure 12

In this menu, you can modify frequency, symbol, PID etc for the Channel by use the **▲▼◀▶** buttons, Press the **OK** ,**Menu** buttons to confirm as below (Figure12) and **EXIT** buttons to exit.

Delete Channel



Figure 13

In this menu, you can delete some services by use the ▲▼ ◀▶ buttons, Press the **OK** buttons to confirm as below (Figure13) and **EXIT** buttons to exit.

Move Channel



Figure 14

In this menu, you can move some channels by use the ▲▼ ◀▶ buttons, Press the **OK** ,**Menu** buttons to confirm as below (Figure14) and **EXIT** buttons to exit.

Lock Channel



Figure 15

In this menu, you can lock some channels by use the ▲▼ ◀▶ buttons, Press the **OK** ,**Menu** buttons to confirm as below (Figure15) and **EXIT** buttons to exit.

Add Favorite

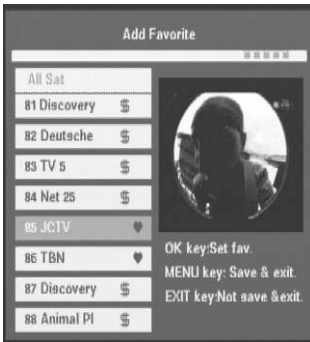 


Figure 16

In this menu, you can add some channels to favorite channels by use the **▲▼** **◀▶** buttons, Press the **OK**, **Menu** buttons to confirm as below (Figure16) and **EXIT** buttons to exit.

Sort Channel



Figure 17

In this menu, you can use the **▲▼** **◀▶** buttons to sort services by A~Z, Z~A etc., and move, Lock, Skip Channels, Press the **OK**, **Menu** buttons to confirm as below (Figure17) and **EXIT** buttons to exit.

System Setting

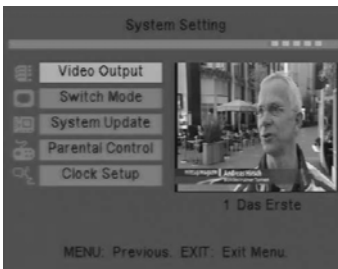 


Figure 18

This menu contains of 5 major sub-menus as below (Figure18);

- Video Output
- Switch Mode
- System Update
- Parental Control
- Clock Setup

Use the **CH▲▼** buttons to move upwards and downwards from one line to another line. You can always go back to the previous menu by selecting **EXIT**.

Video Output

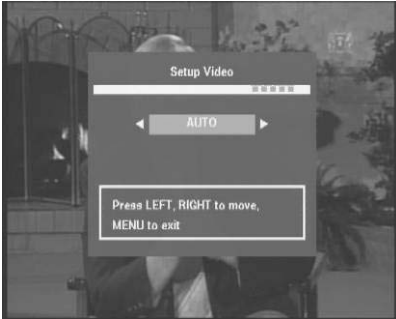 


Figure 19

In this menu, you can use the **▶** buttons to select TV system to Auto, NTSC, PAL, Press the **OK** buttons to confirm as below (Figure19) and **EXIT** buttons to exit.

Switch Mode



Figure 20

In this menu, you can use the **▶** buttons to select change channel mode for Direct, Fade, Curtain, Press the **OK** buttons to confirm as below (Figure20) and **EXIT** buttons to exit.

Parental Control


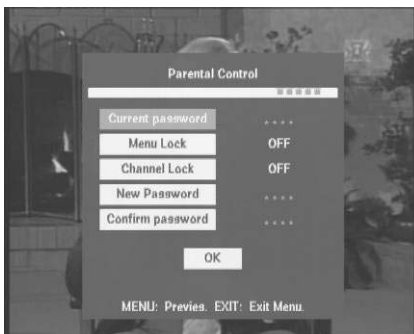 


Figure 21

In this menu, The menu and channel access password requirement status can be changed to On, Off. If On, access password is always required. If Off, the access is not restricted. And in this menu, you can change access password. (Figure 21)

Default password is 0000

 Clock Setup

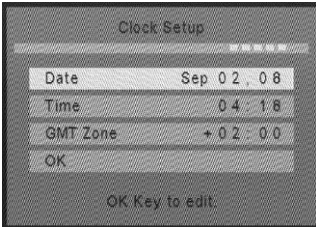

In this menu, you can setup clock and time zone, Press the **OK** buttons to confirm as below (Figure 23) and **EXIT** buttons to exit.

Figure 22

Language Setting



In this menu, you can use the ◀▶ buttons to select menu language, Press the **OK** buttons to confirm as below (Figure 24) and **EXIT** buttons to exit.

Figure 23

Game

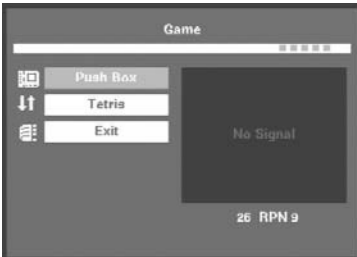 


Figure 24

In this menu, you can select two game, Press the **OK** buttons to confirm as below (Figure 25) and **EXIT** buttons to exit.

Quick Select

In this view, Press OK then SAT(Red) key buttons to select the item, and press OK button to select satellite you want, and press OK button to select the channels you want The contents of those items are following:



Figure 25/1

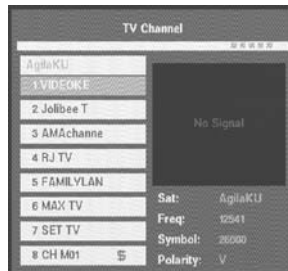 


Figure 25/2

Multi Audio

When press LANG in remote, the current watching service's multiple audios (if any) are displayed. User can change and set the various audios given in the list. User can also toggle to Left, Right or Stereo mode of output for the selected audio.

Volume Control



Figure 26

To increase or decrease volume, use **VOL** ◀▶ key on the remote control.

To mute the sound, press **MUTE** button on the remote control. To bring back the normal sound, press **MUTE** key once again.

System Update



Figure 27

In this menu, you can upgrade new software from main receiver, Press the **OK** buttons to confirm as below (Figure 28) and **EXIT** buttons to exit.

- a) Connect the RS232 twisted cable between Source and Destination targets.
- b) Standby and press the CH Up key in Front panel of the Source Target to invoke Loader upload menu.
- c) On Boot-up of the Destination target to start receiver to receiver.

Trouble Shooting

If you suspect there is a fault with your receiver, please check the following trouble shooting guide before calling authorized service agent.

Warning! Under no circumstances attempt to repair the receiver yourself. Tampering with the receiver may result in fatal electric shock and will invalidate your warranty.

Symptom	Possible cause
No picture on the screen	Receiver is in Standby mode.
	Incorrect channel or video output is selected on television.
	RCA Jack is not connected firmly to the video output port of television.
	Brightness level of your TV set is incorrectly defined.
No signal	The level of signal is weak.
	LNB is out of order.
	The cable from the LNB is incorrectly Connected (short circuit or open circuit).
	The position of dish is aligned incorrectly.
No sound	The Volume level is low.
	RCA cable is connected incorrectly.
	Muting function is active.
Receiver is on but no picture or sound except the following messages (NO TV program)	Channel is not available.
	Channel is scramble.
Receiver not responding to remote control unit	RCU batteries are dead or inserted incorrectly.
	The RCU is pointing toward wrong direction.

Product Specification

Demodulator

Waveform	QPSK demodulation and FEC decoding in accordance with DVB
Symbol rate	2<Rs<40 Msps

Video-Decoder

Data rate	up to 15 Mbits/s
-----------	------------------

Audio-Decoder

Decompression	MPEG-2 Layer I and II
Outputs	Stereo, Dual Mono, Joint Stereo, Mono

System

CPU	Haier 2301E
Clock frequency	108 MHz
Flash memory	1 Mbyte
Video RAM	4 Mbyte
Graphic display	720*576 (PAL) 720*480 (NTSC)

LNB & Tuner input

Input frequency	950 ... 2150 MHz
Digital signal Input level	-65 ... -25 dBm
LNB supply	13,0 ± 0,5V / 18,0 ± 0,7V / max. 400mA
Band switch control	22kHz (CPU control)

Connector Summary

TV Scart	Output 1 * 20 Pin
RCA	Output: CVBS, Audio L/R
LNB	1 * LNB input (F-Type) 1 * LNB output (F-Type, Loop Through)
RS-232	Bit Rate: 115200baud, Connector: 9-pin D-sub Male Type

Remote Control

Number of keys	33 (optional more)
Battery	2 * 1,5V AAA

Power Supply

Main Input Voltage	90~240V AC, 50/60Hz ± 5%
Power Consumption	Nominal 5W (standby < 1W)

Physical Specification

Size (W x H x D)	205mm x 40mm x 300mm
Weight (Net)	0,625kg

DECLARATION OF CONFORMITY

The manufacturer herewith declares the conformity of that product with the following directives and standards:

Low Voltage Directive 2006/95/EG

EN 60065:2002+A1:2006

EMC Directive 2004/108/EG

EN 55 013:2001+A1:2003+A2:2006

EN 55 020:2007

EN 61 000-3-2:2006

EN 61 000-3-3:1995+A1:2001+A2:2005

Model: Digital Satellite Receiver DVB-S

