


INSTRUCTIONS MANUAL MOD. R-182

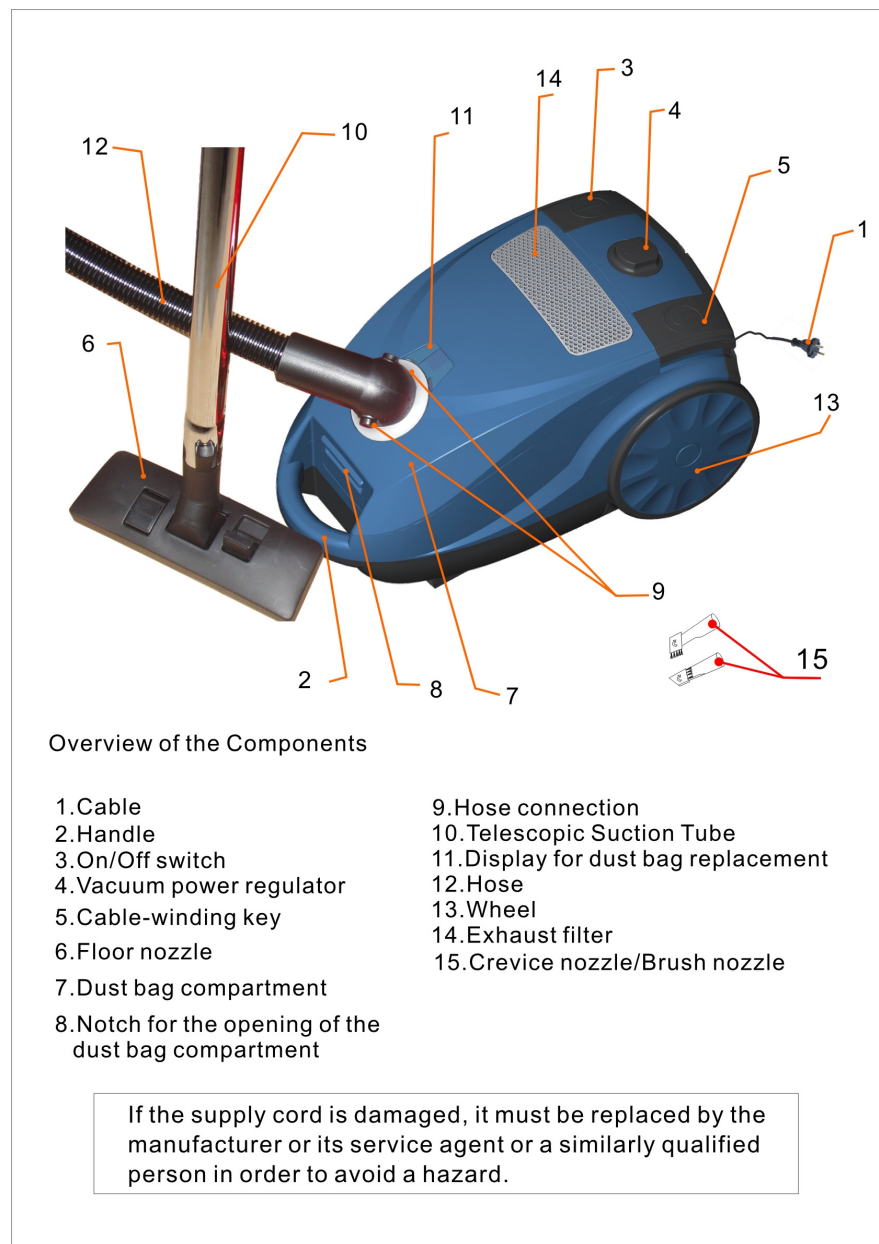

General Safety Instructions

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty the receipt and, if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. The appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is

humid or wet, unplug it immediately .Do not put it in water.

- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer ,by our customer service or by a qualified person and with a cable of the same type
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions”
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety;
- Children should be supervised to ensure that they do not play with the appliance;

Special Safety Instructions

- Do not suck up liquids!
- Do not suck up hot ashes or pointed or sharp objects!
- Do not use the appliance in humid rooms!
- Never use without the filter, Check that the filter is inserted correctly!
- Hair, clothing and body parts away from the vacuum nozzle during use!
- Keep the vacuum cleaner away from source of heat like radiators, ovens, etc!

Start-up

1. Insert the vacuum hose in the opening in the dust bag compartment until it locks in mechanically.
2. To release the hose, press the button on the vacuum hose.
3. Keep the button pressed and pull out the hose.
4. Insert the vacuum tube into the handle if required.

Using the Appliance

1. Fit on the accessory.
2. Unwind the necessary length of cable and insert the plug installed 220-240V/50Hz protective contact socket.
3. Set the vacuum power with the vacuum power regulator.
4. Vacuum at a steady speed. There is no need to exert pressure.
5. Pay attention to the range that can be covered with the cable length.

Vacuum power regulator

Low vacuum power: For curtains and delicate fabrics.
Medium vacuum power: For long-pile velour carpets and textile flooring
High vacuum power: For sturdy rugs and floors.

Cable winding device:

Pull out the cable up to the maximum length indicated with the yellow mark. Never pull the cable out to the mark as the cable winding can be damaged. Such damages are not covered by the warranty.

Winding

Press the cable winding button and guide the cable. Hold the cable to avoid wrapping.

Nozzle accessories

Crevice nozzle: To vacuum corners and slits
Upholstery nozzle: To clean upholstery, curtains, etc.
Floor nozzle: For cleaning carpets or smooth surfaces

Please note that the crevice or upholstery nozzles are “2 in 1” attachment. In order to use the relevant attachment, please press the brush in the direction of the arrow and push the upholstery nozzle forwards or backwards until it locks in place.

Smooth floors: Press down the lever with the brush symbol with your foot. The brush is now visible
Carpets: Press down the opposite lever.
Releasing the accessories: Pull them apart while turning slightly.

Dust bag filling display

Hold the hose up unto air. If the dust bag change display lights up, the bag is full .Please change it.

Changing the dust bag

1. Pull the plug out of the socket.
2. Pull up the cover on the recess.
3. Remove the dust bag.
4. Insert a new dust bag.
5. Close the cover so that it snaps into place.

Filters: Your appliance has two filters.

Motor protection filter (inlet filter):

- The inlet filter is located in the dust bag compartment.
- The filter is placed horizontally in the inner part of the dust bag compartment casing.
- Pull the filter out from the front. Clean the engine protection filter after 10 dust bag changes. If



necessary, the filter can also be washed with warm water without any additives.

- Place it back into place only once it is completely dry!

Outlet filter:

- The appliance is also equipped with an outlet filter.
- It is located under the ventilation grid.
- Pull the grid up and out. Remove the filter and clean as described above.
- Fit the filter back into place and close the ventilation grid by following the steps above in the opposite order.

Please note: When inserting new filters you may have to cut these beforehand to the appropriate size. Place the old filter on top of the new one, trace the outline and then cut along line.

Clean and storage

Cleaning

- Pull the plug out of the socket before cleaning!
- Clean the casing with a dry cloth.
- Clean the motor protection filter after 10 dust bag changes. It is located behind the dust bag. Clean the filter in hot water without additives. Put it back into place only once it is completely dry.

Storage

- Wind the cable completely.
- Place the machine vertically and insert the hook on the floor nozzle into the underside.

This device has been tested according to all relevant current CE guidelines, such as Electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.