

UNITED®

HALOGEN HEATER

UHH-812



OPERATING INSTRUCTIONS

Dear Customer,


We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.

CAUTION

- Remove the packing and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after-sales service. Do not leave packaging materials like bags and staples within reach of children.
- Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.
- The appliance has to be connected to a circuit according to the rules in force concerning the civil plant. The plant has to be related to the nominal power of the appliance and has to be provided with an earth –wire.
- Use the appliance only for the mentioned purpose, namely as a radiator for domestic use. Do not use it for any other application as it could get dangerous.
- The manufacture is not responsible for any eventual damages caused by improper or faulty use.
- The use of every electrical appliance calls for the awareness of some basic rules, such as:
- Never touch the appliance with wet or damp hands or feet.
- Never expose the appliance to atmospheric conditions (rain, sun, etc.)
- The appliance must be always placed on a flat and stable surface.
- Switch the appliance off and unplug it before cleaning.
- When the appliance is not in use switch it off and unplug it. Make harmless the parts of the appliance which could be handled hazardously by children for playing.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not put the cable on the appliance when it still warm.
- A correct operation of the appliance is obtained when the radiator is installed vertically. Do not switch on the fan heater near pieces of furniture, curtains, shelves, etc.
- Do not use the appliance near liquids or inflammable matters.
- The appliance must not be located immediately below a socket outlet.
- In order to avoid overheating, do not cover the heater
- In case the power cord is damaged, send it to the nearest after sale service recommended by the manufacturer for the replacement.
- This appliance is not intended use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not connect the appliance to extension cords or multiple outlets.
- Do not damage and do not kink the power cord.
- Before cleaning the appliance or carrying out any maintenance switch off the whole system.
- If the appliance is out of work switch it off without tampering it, if any repair is required please contact only the after-sale centers approved by the manufacturer and ask for original spare parts. Otherwise safety of the appliance can be compromised.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

COMPONENTS

- 1- Body frame
- 2- Base plate
- 3- Butterfly nut(2pcs)
- 4- Tip-over safety switch rod
- 5- Power cord guide
- 6- Power cord

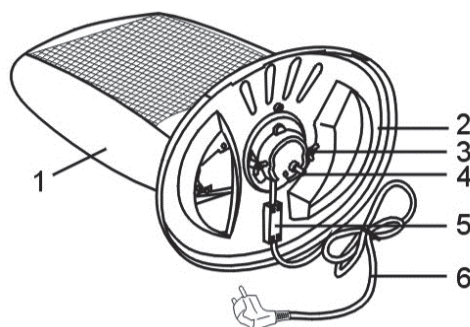

ASSEMBLY

Assemble the body frame and the base plate together as the following sequences

Remove the butterfly nuts from the lower part of the body frame.

Insert the power cord through the slot placed in the middle part of the basement and then assemble the body frame to the base plate.

Secure the body frame to the base plate by means of the two butterfly nuts previously removed. Insert the power cord through the suitable slots and then fix it by the clamp.

OPERATION

Plug in the appliance. Check that the outlet has at least a 10AMPERAGE current carrying capacity.

Models with switches

Select the speed by suitable switches. Press the oscillating switch to make the radiator oscillate. Press it again to switch off the oscillating movement of the appliance.

The radiator can be activated manually by pressing the handle situated in the rear part of the appliance

SAFETY DEVICE

This appliance is provided with safety devices disconnects the appliance when the radiator is tilted or when is tipped by means of a switch situated in the lower part of the radiator.

MAINTENANCE

The appliance needs only an external regular cleaning.

After use and before cleaning always unplug the appliance and wait till the item is cool.

Clean the grilles from dust.

Do not clean the painted parts with emery flour or solvents and use only a moistened cloth.

TECHNICAL DATA

Voltage: 220-240VAC 50Hz

Power consumption: 1200W (400+400+400)

Dimensions: 290 X 130 X 510 mm

Weight: 2.0 / 2.5 Kg

WARNING

1. Not suitable for use in bathroom.
2. The appliance is not intended for use by young children or infirm persons without supervision
3. Young children should be supervised to ensure that they do not play with the appliance.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

This product complies with the requirements of the directives

EMC-Directive: 89 / 336 / EEC

Low Voltage Directive: 2006 / 95 / EC

declare that the specific product

is in compliance with the following norms:

EN 55014-1:2000/A1:2001

EN 55014-2:1997

EN 61000-3-2:1995/A14:2000

EN 61000-3-3:1995/A1:2001

EN 60335-2-9/A1:2004

EN 60335-1/A12 :2006

EN 50366/A1:2006

EXCLUSIVE IMPORTER IN GREECE:

Amiridis – Savvidis S.A.

33, Vas. Olgas avenue

P.C. 54641, Thessaloniki, Greece

Tel: +30 2310 850107, +30 2310 850108, Fax: +30 2310 867835

45, Posidonos street

P.C. 18344, Moschato, Athens, Greece

Tel: +30 210 9402064, Fax: +30 210 9402137