

Mini Recorder-User Manual

Introduction

Thank you for purchasing our mini interview recorder. Ideal for both spy camera & hidden camera, small enough to conceal almost anywhere! Wherever you place your mini camera, you'll know for sure that you won't miss anything.



What your mini interview recorder includes:

- Mini Interview Recorder
- USB cable
- User manual

Features


- Dimension: 72mm*20mm*11mm
- Weight: 20g
- Tiny size makes it ideal for a variety of uses
- It's great for use as a hidden cam, spy cam etc.
- Real time recording in AVI video format.
- Color video with voice lets you clearly see who's there and hear what they say.

- Place it up high or conceal it down low. With built-in rechargeable battery so there's no long cord for you to hide.
- Use micro SD card from 128MB to 2GB
- Playback video on cell phone or PC

Camera Technical Parameter

- Video Compression: AVI video format, 352*288
- Voice Recording: Yes
- Internal Memory: No
- Micro SD card/T-Flash card support: 128MB to 2GB
- Video File Size: 4.0MB per minute
- Recording Mode: Continuous recording until memory is full or manually off
- Adaptor Type: USB adaptor charging cable
- Battery Type: Lithium-ion
- Record Time: Up to 2 hours

A Quick Look at your Mini Interview Recorder

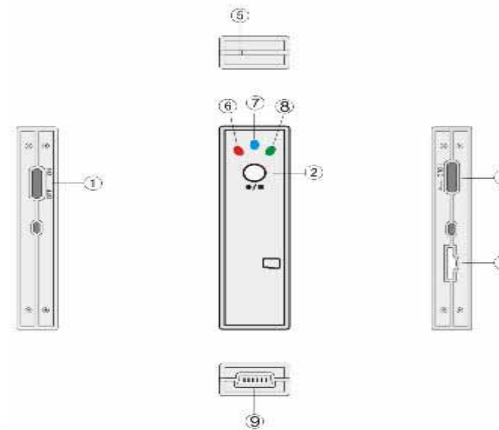

1. Power on/off
2. Record/Stop Button
3. Hold
4. Micro SD card slot
5. MIC
6. Recharge Light
7. Power Light
8. Record Light
9. USB Port

Installing a Memory Card

This camera has no internal memory, Please insert a Micro SD\ (T-Flash) card before recording.



- This product supports Micro SD cards up to 2GB.
- Please insert Micro SD card into the remarkable place of the recorder, the basement will be injured permanently with the inaccurate insertion and extraction.

How to Start Mini Interview Recorder

Step1:

Insert the Micro SD card (format as FAT)

Step 2:

Turn the power button to ON, the BLUE LED will be ON. And at the same time, the YELLOW LED will be on and last about 12 seconds. After the YELLOW LED is off, the recorder enters the ready mode.

Step3:

Press the Record/Stop button, the recorder will work to record the video and the audio. Press the Record/Stop button again to stop the recording.

Reminder:

Do not switch " Power on/off" button when the machine is recording, otherwise the data won't be saved.

Do not pull out the micro SD card when the yellow light is on, otherwise it maybe damage the card.

The micro SD card must format as FAT file system.

Connect to PC with USB cable

The recorder is charged with an USB cable. Connect the USB to the PC, the RED LED will be on to indicate the CHARGING mode. After turn on the power switch, the BLUE LED will be ON to indicate the READING mode; the PC will read the data in the flash card.



FAQ

- Q: Why did the recorded files disappear after turning off the camera?
- A: Please check that whether stopped recording before turning off the camera.
- Q: Why does the "pale yellow" LED keep on when the recorder is in the working stage?
- A: Please check whether insert the Micro SD card correctly.